Installation Manual

Important Installation Notes – Please Read First

Thank you for choosing our metal tool cabinet! A few minutes of preparation will guarantee a fast, trouble-free assembly. Please read the quick reminders below—we want your new cabinet to make every project easier.

*Safety First


Wear the gloves provided in the box to avoid any injuries or scratches.


*Check the Package

Open the carton box and lay out every part against the parts list on page 3 to make sure every part needed are present.


If anything is missing or damaged, pls contact us before proceeding.

Follow the step-by-step guide starting on page 4, and your cabinet will soon be ready for use. We hope this cabinet brings you a cleaner, faster, more organized workspace!

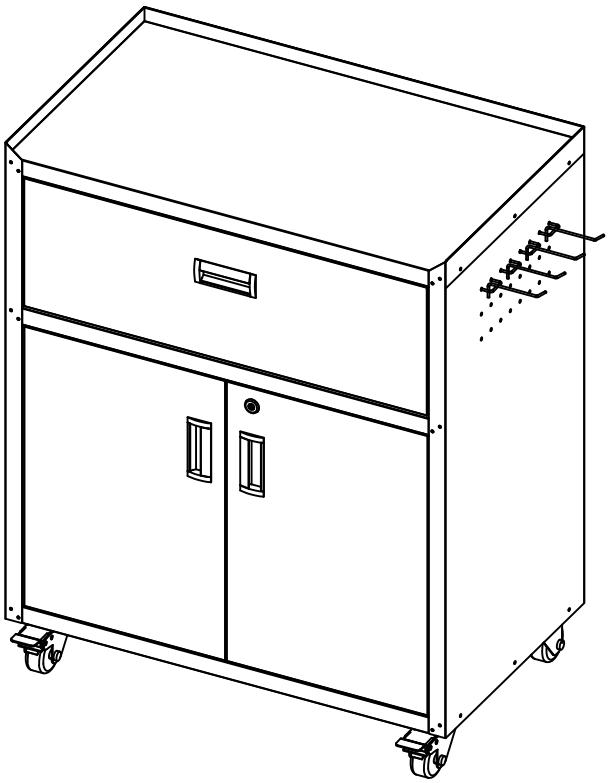


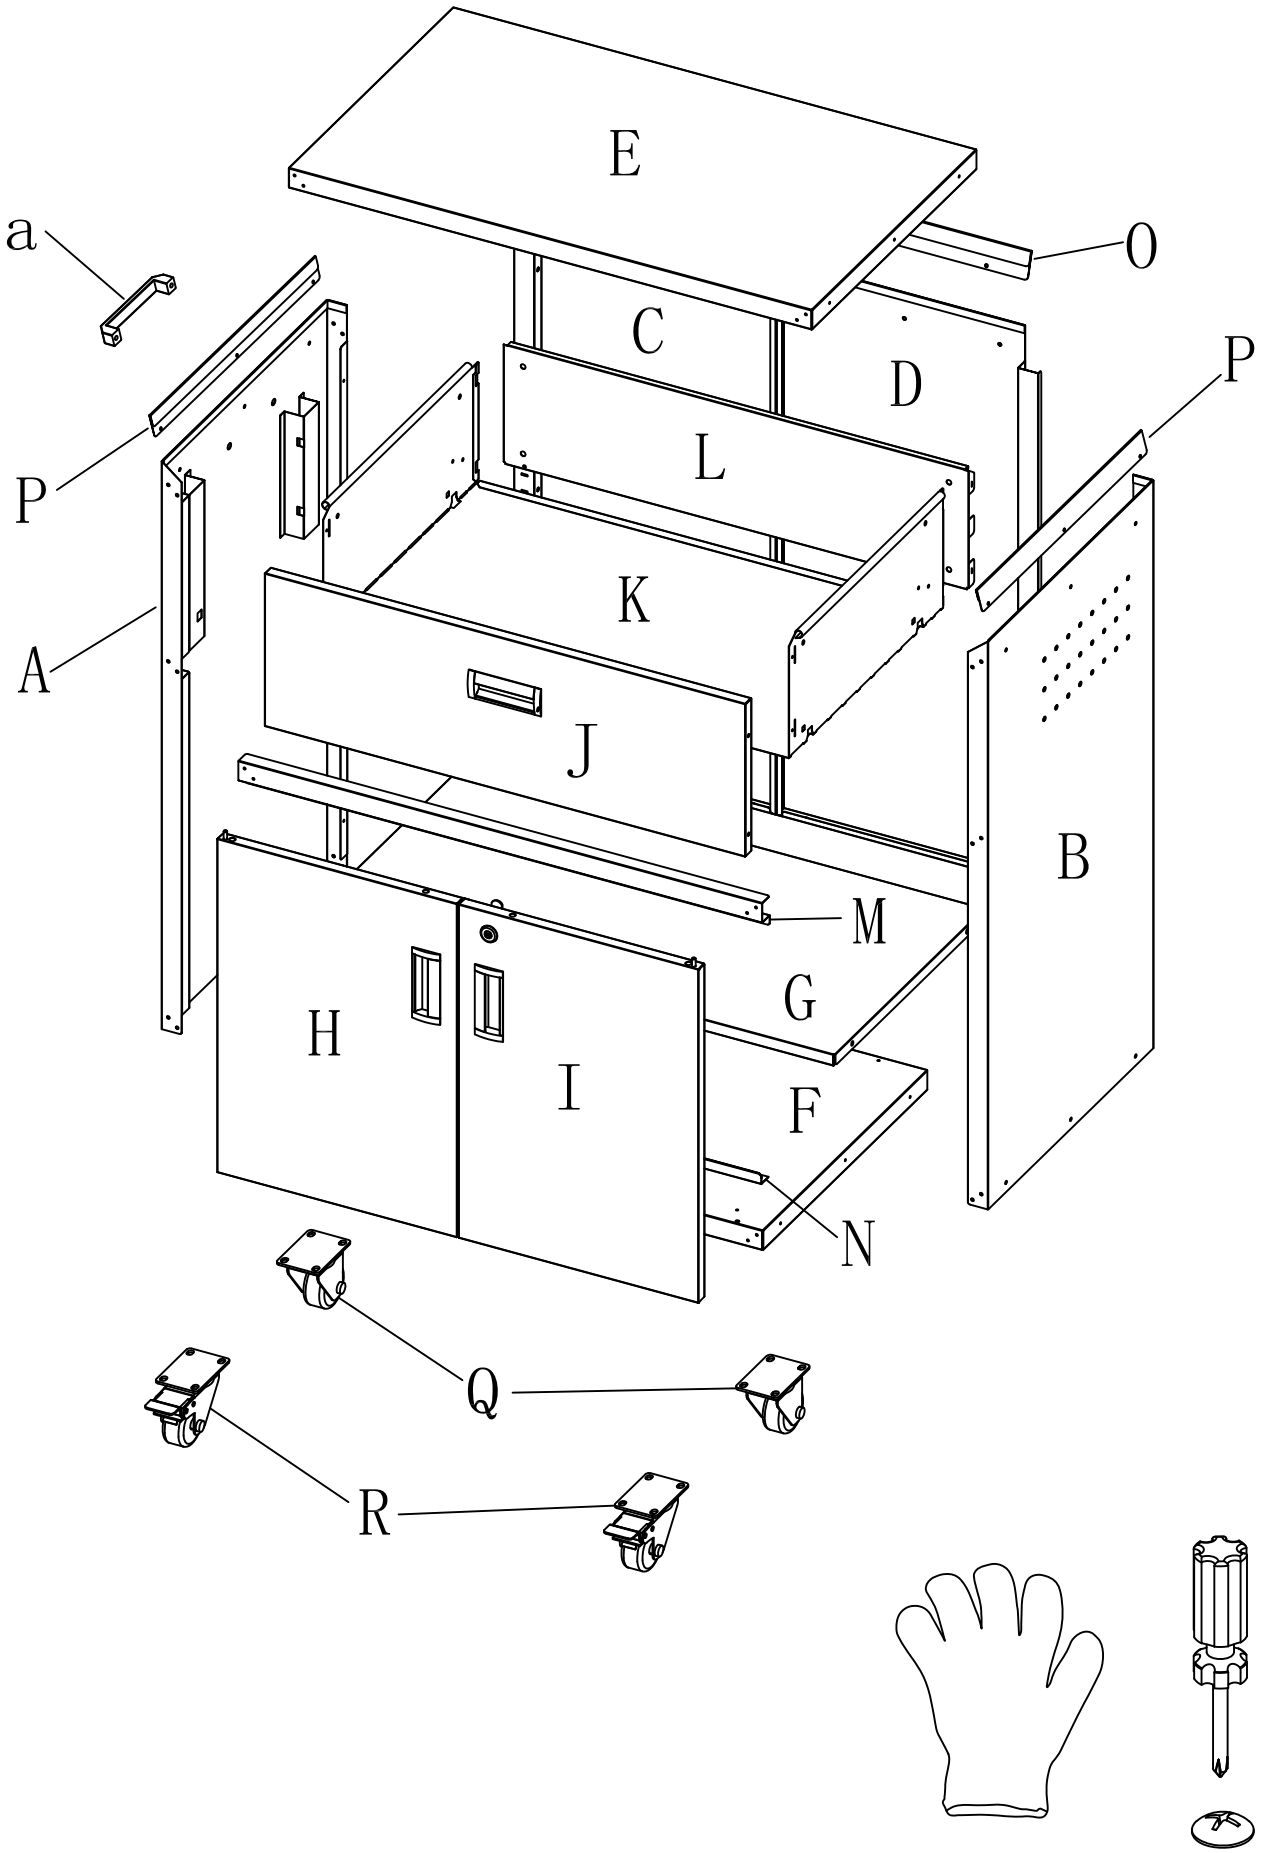
E
a
O
C
D
P
P
L
K
A
J
B
M
G
H
I
F
N
Q
R


A×1

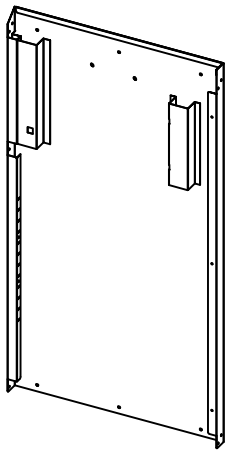


B×1

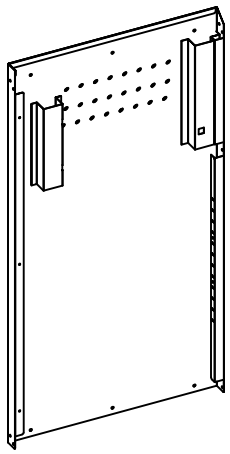


C×1

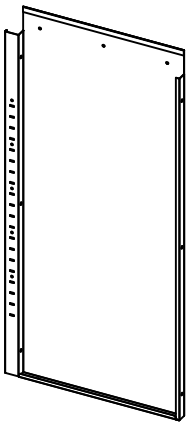


D×1

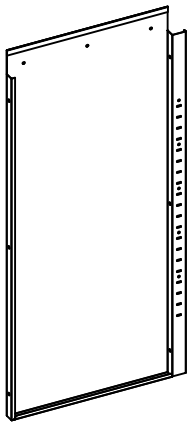


E×1

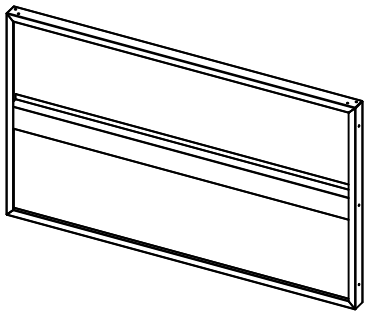


F×1

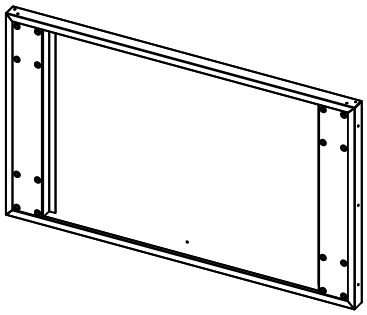


G×1

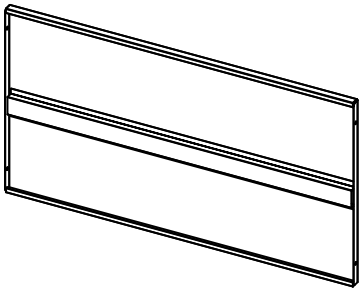


H×1

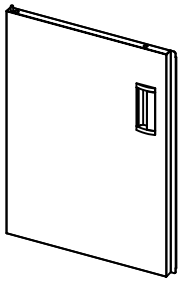


I×1

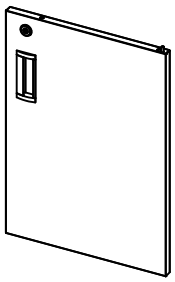


J×1

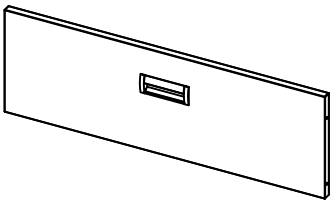


K×1

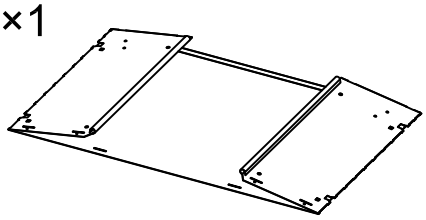


L×1

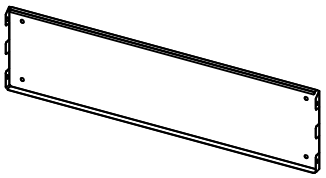


M×1

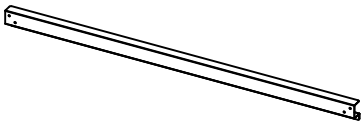

N×1



O×1

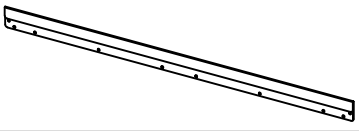


P×2




Q×2




R×2

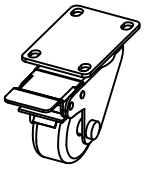


S×1

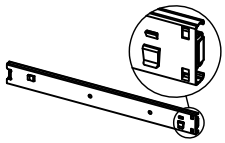

T×1

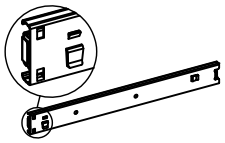

a×1

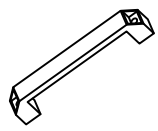

b×55




c×3




d×5



e×2




f×16




g×4




h×2



i×4




j×4




1

Insert the side panel A & B through bottom panel F. Fasten in place using screws b*7 on each side of the bottom.

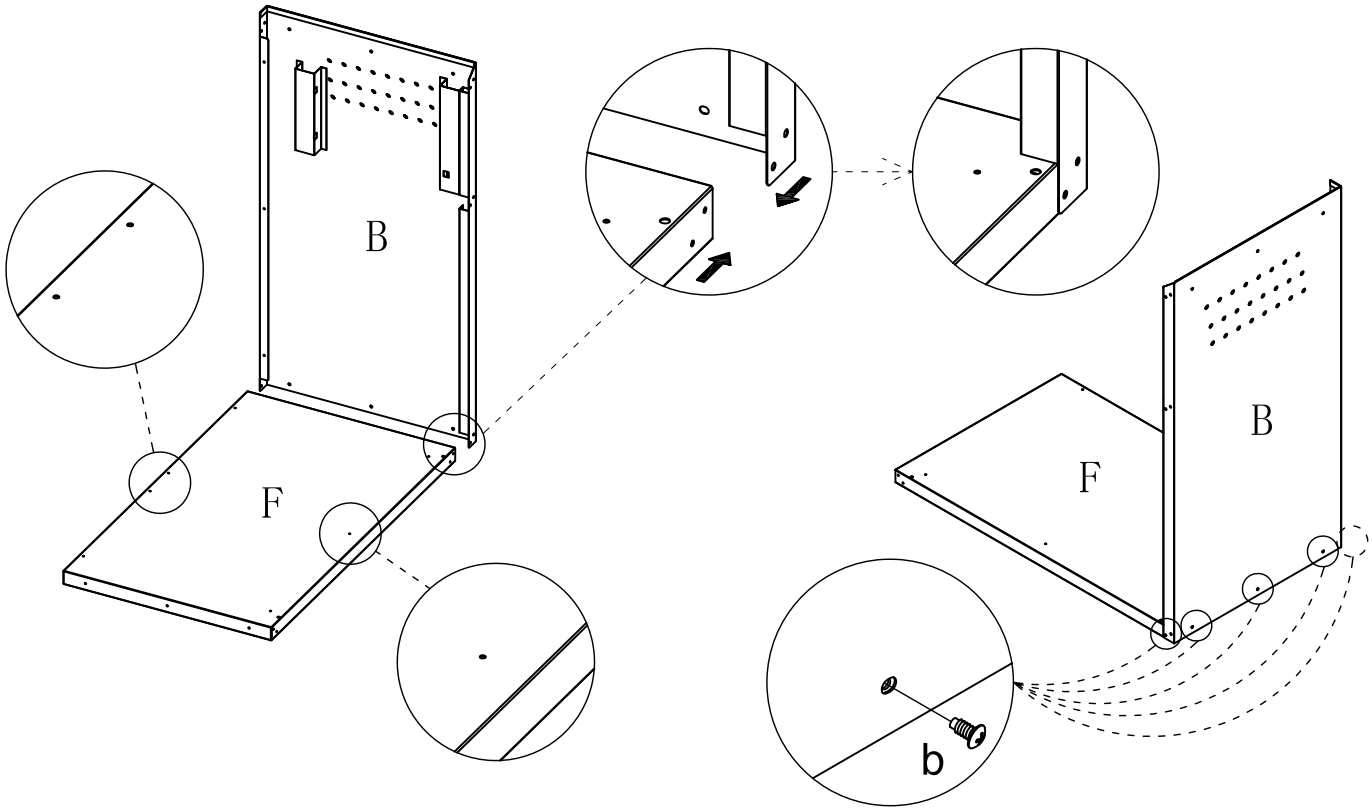

b×7


2

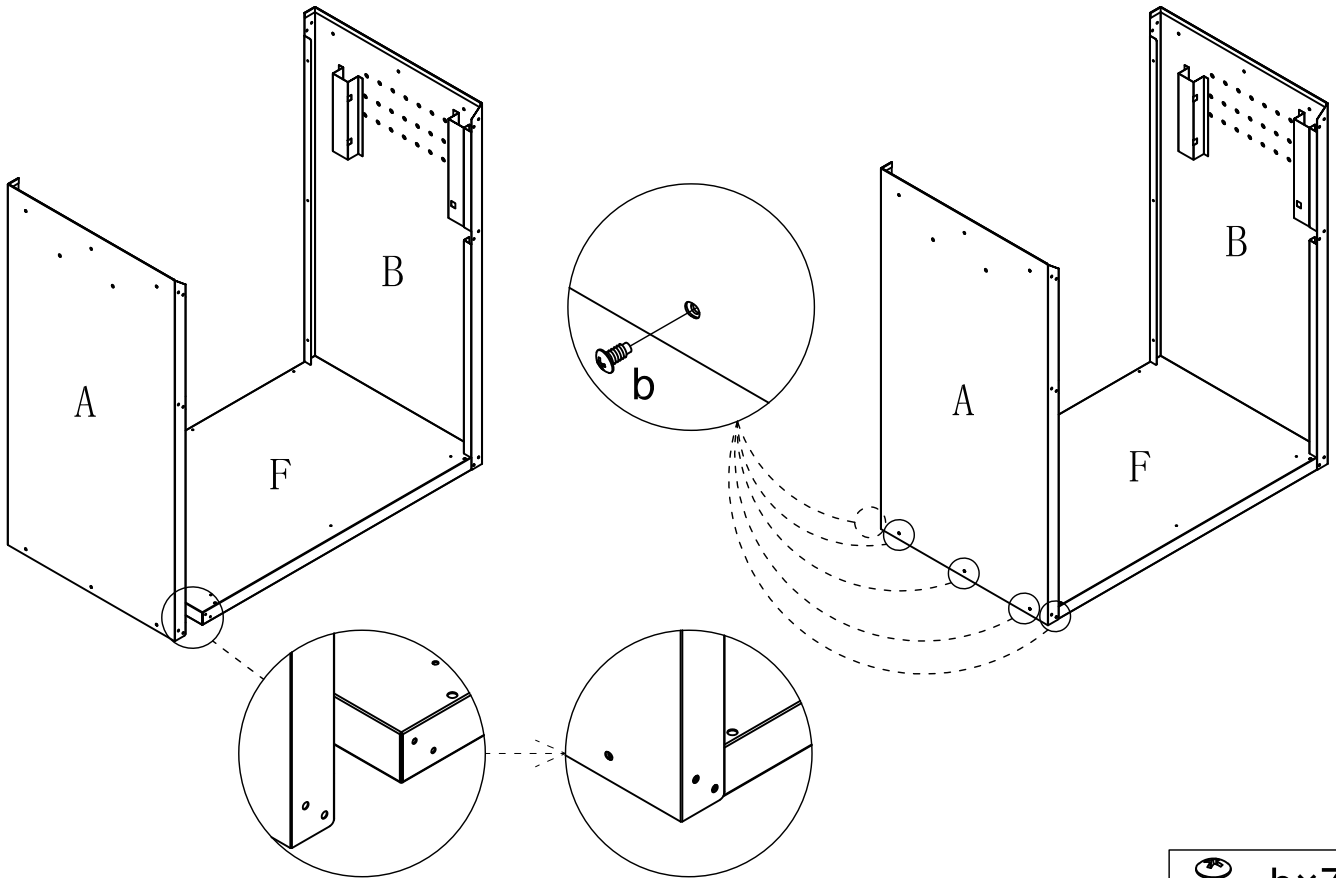

b×7

3


Fasten the back panels C and D in place using screws c*3 and d*3.

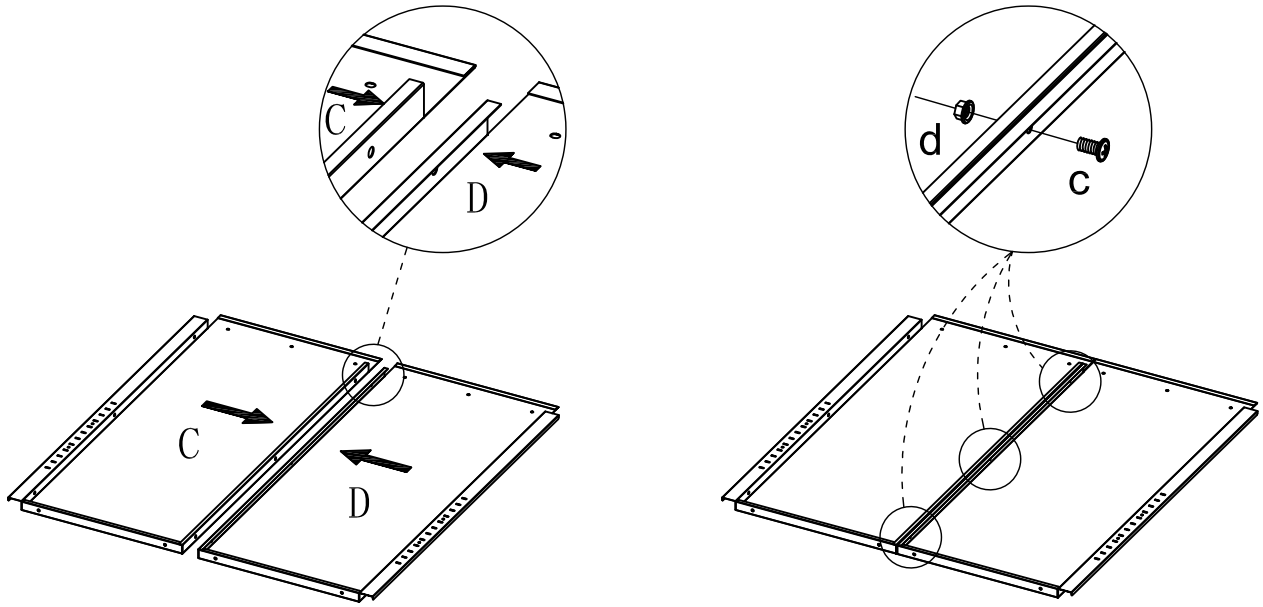

c×3 | d×3

4


Insert the back panels through side panels A and B, then fasten in place using screws b*10.

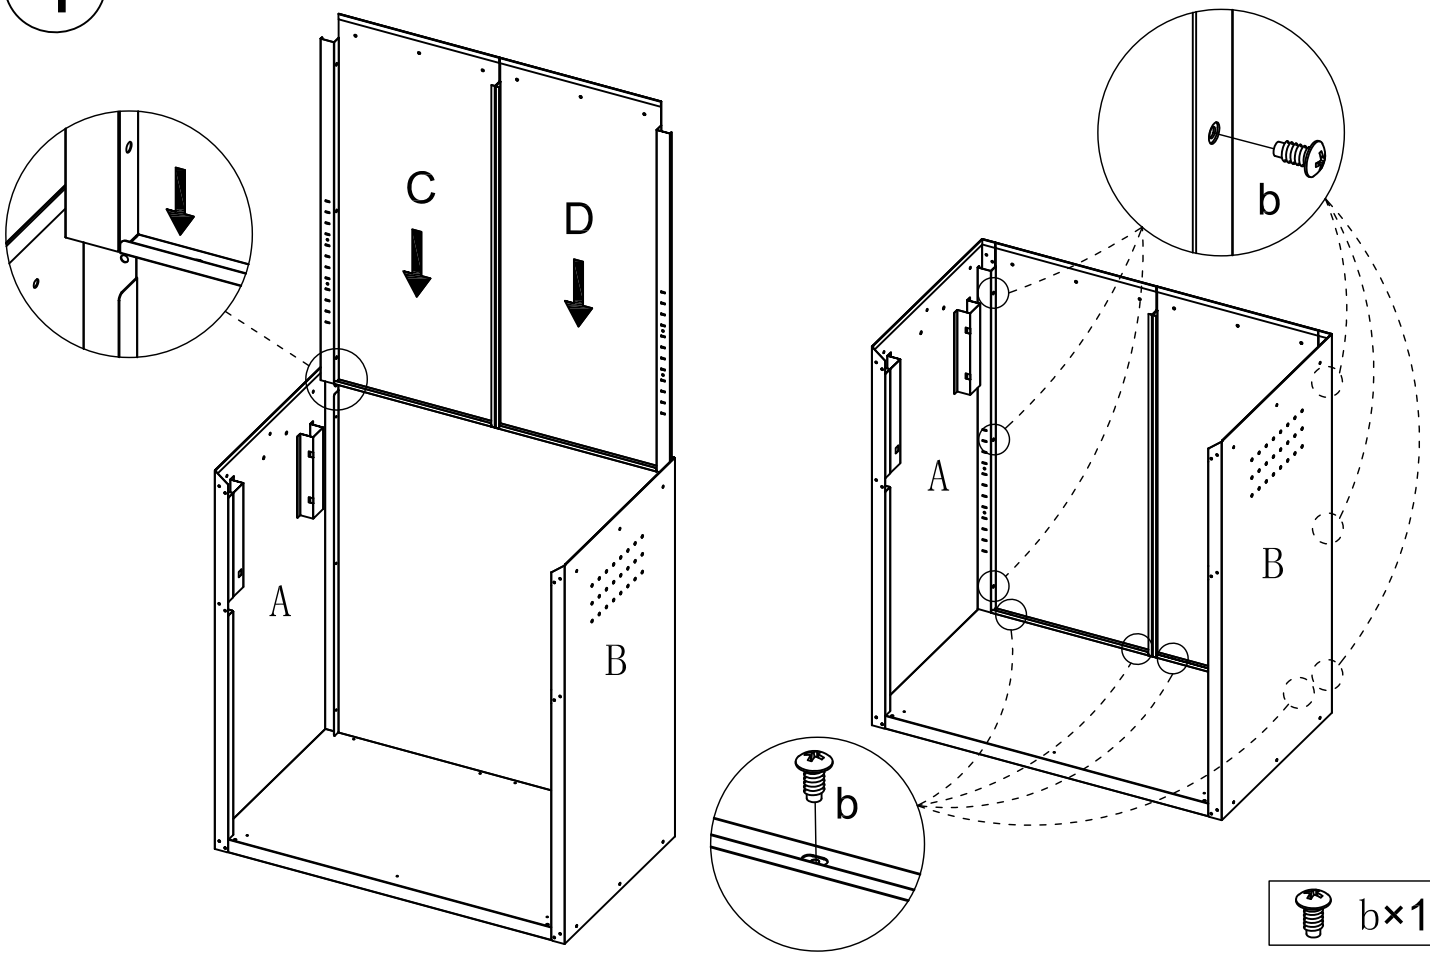

b×10

5


Fasten part N in place at the bottom using screws b*3.

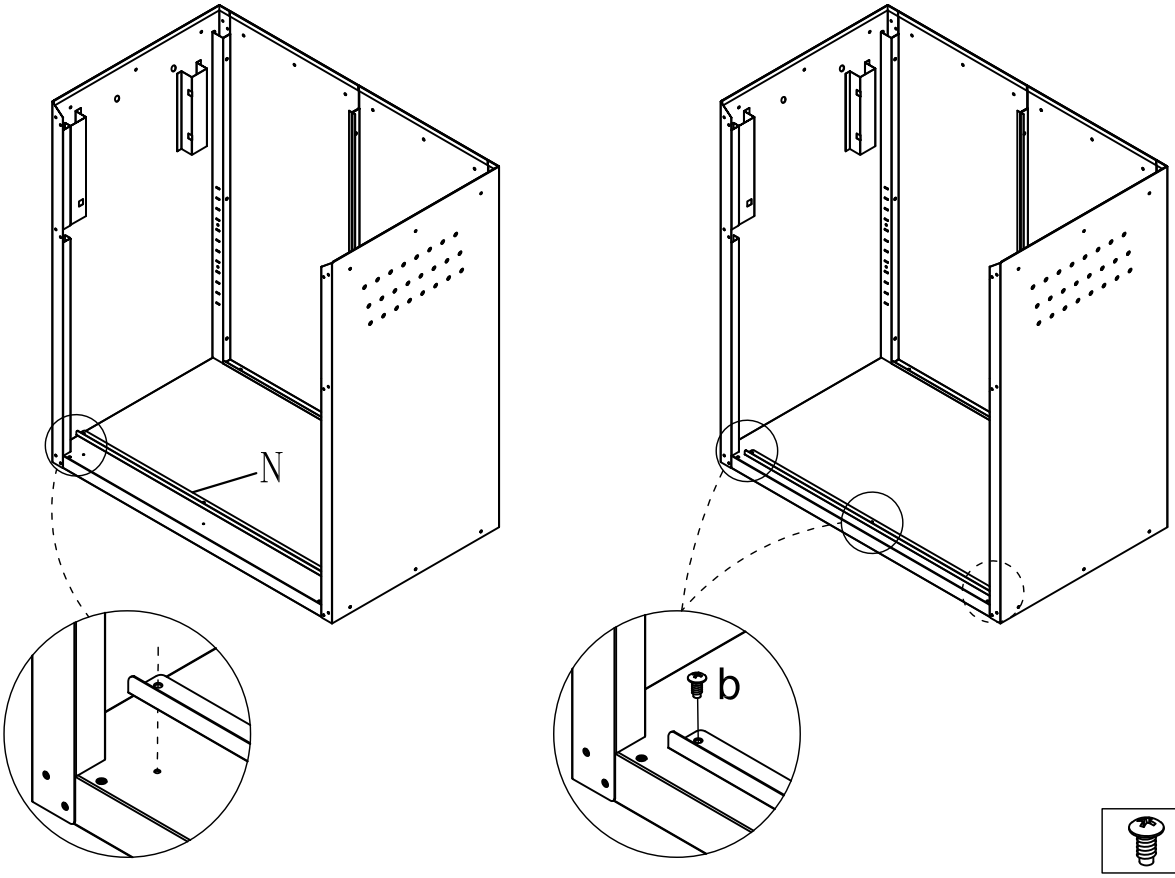

b×3

6


Insert part M in place at the middle using screws b*4.

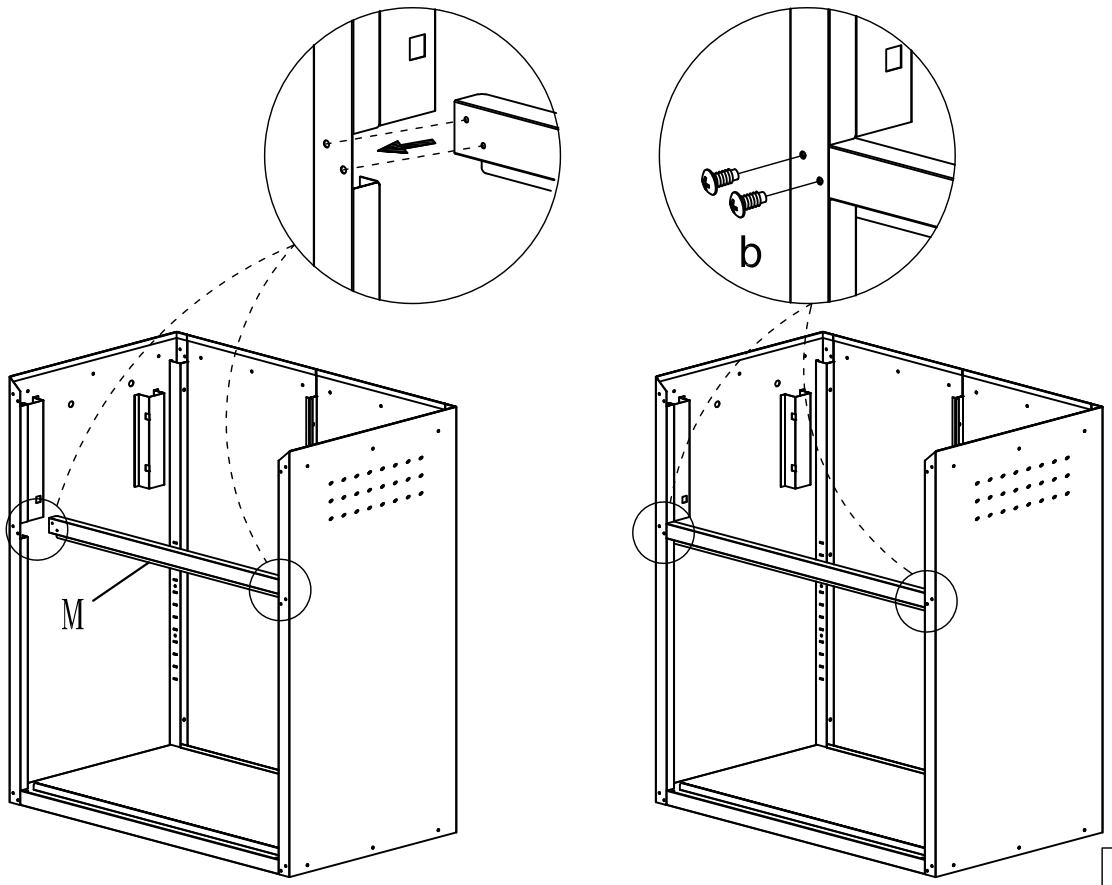


b×4

7

Assemble handle a using screws d*2 and e*2.

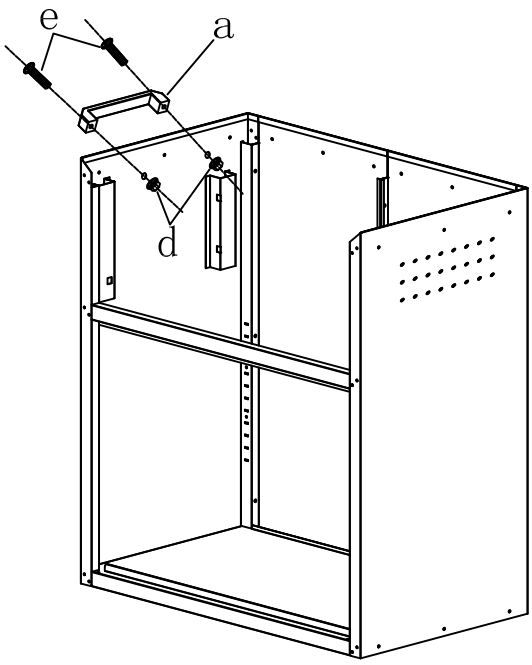


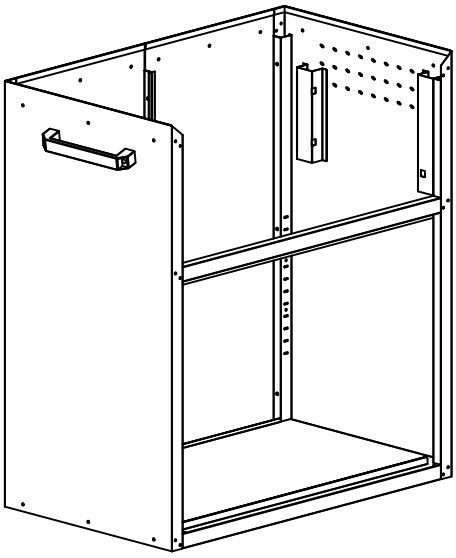


a×1	d×2	e×2

8

Install the top panel E, pls make sure that the side with holes faces back, then install part O at the back, parts P at sides and fasten all parts in place using screws b*20.

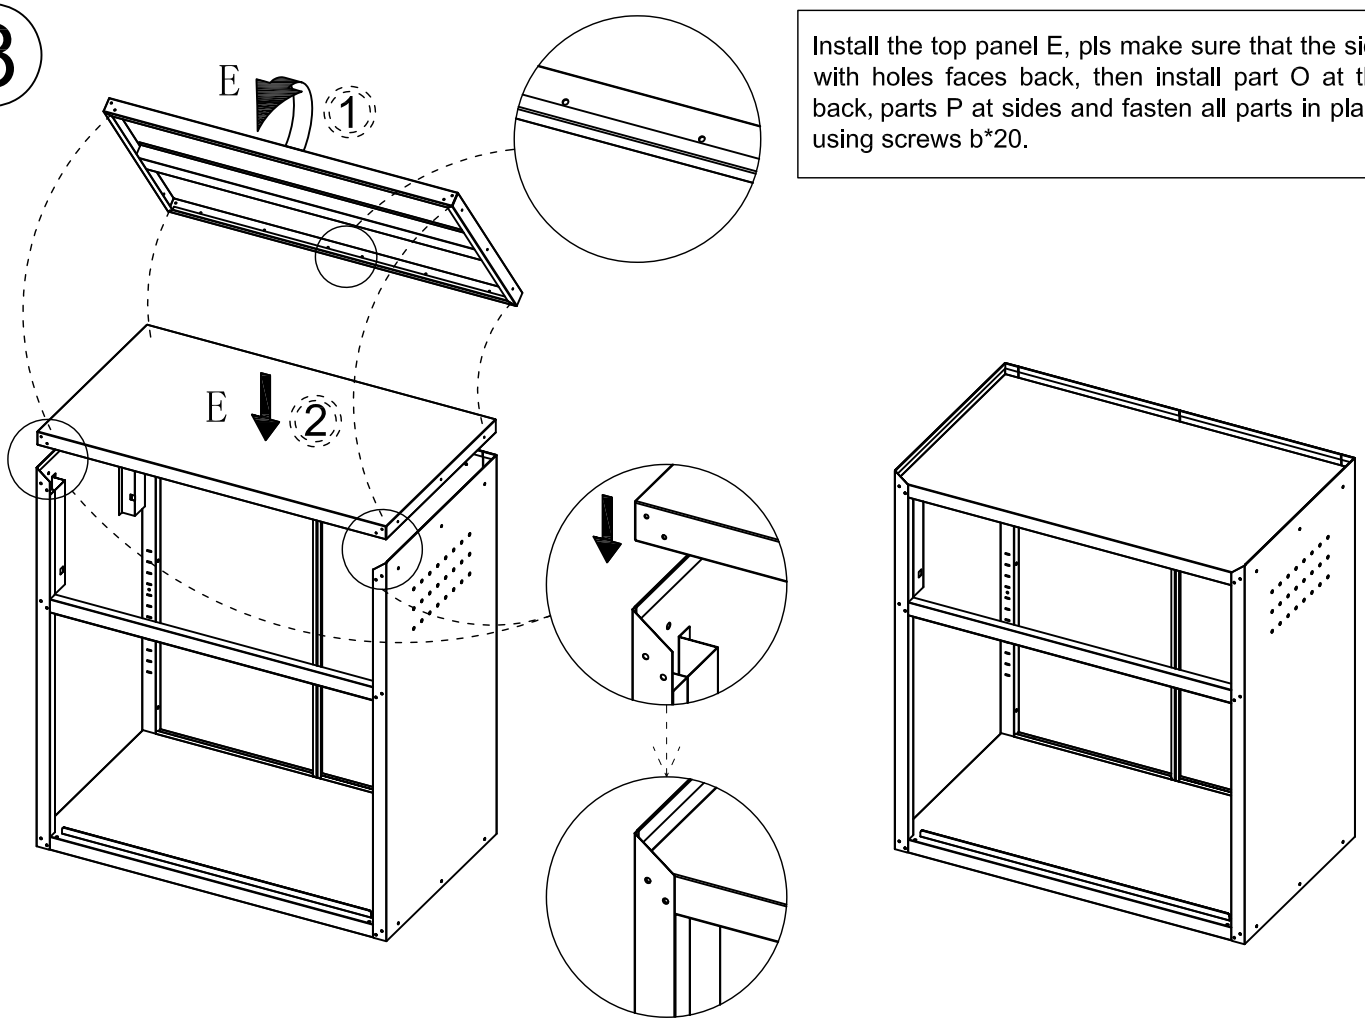


9

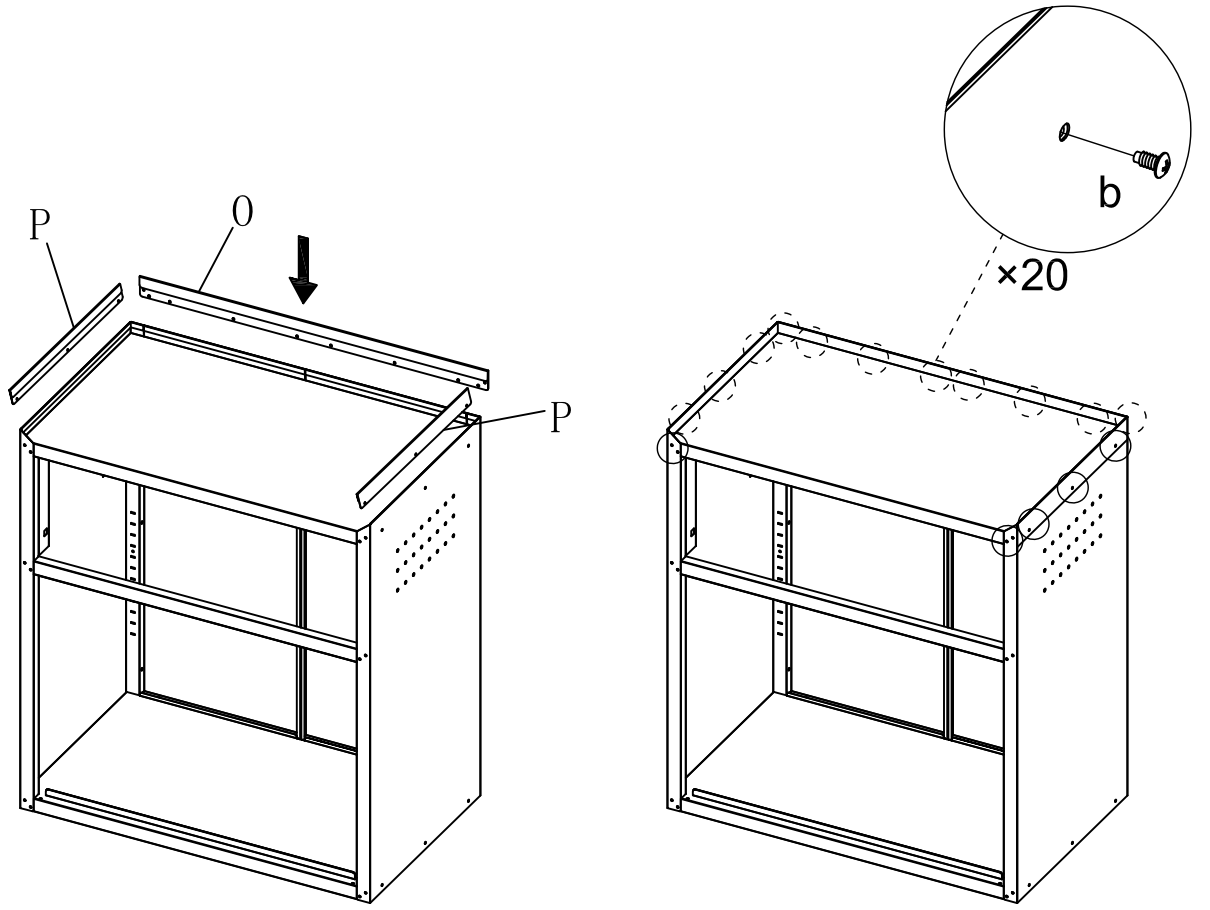

b×20

10


Install the 4 casters using screws f*16 (Attention: drop the cabinet on the floor during installation, and the 2 casters with brakes should be installed at the side of the panel with handle）.

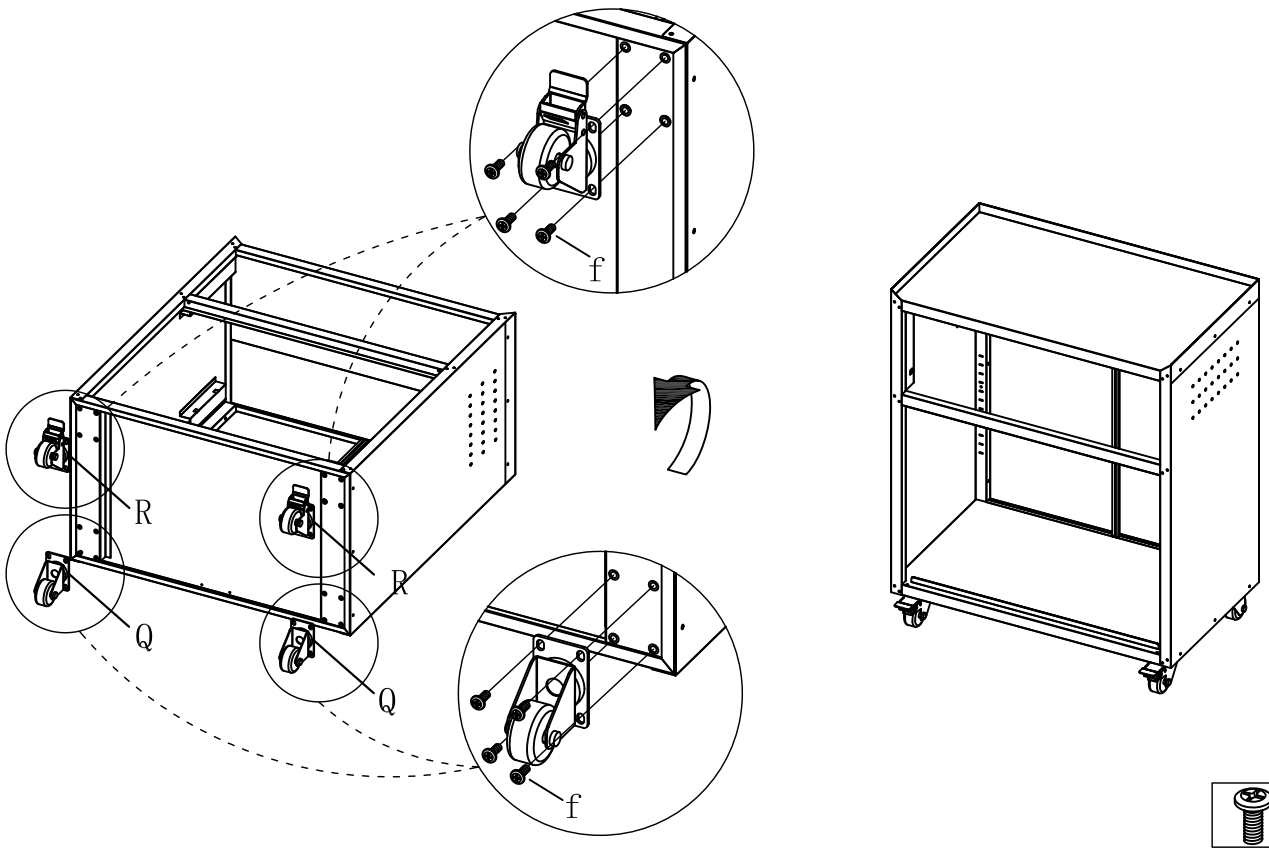


f×16

11

Note: The front hook of the Guide Rail is always facing down.
Part S is on the left and T is on the right.

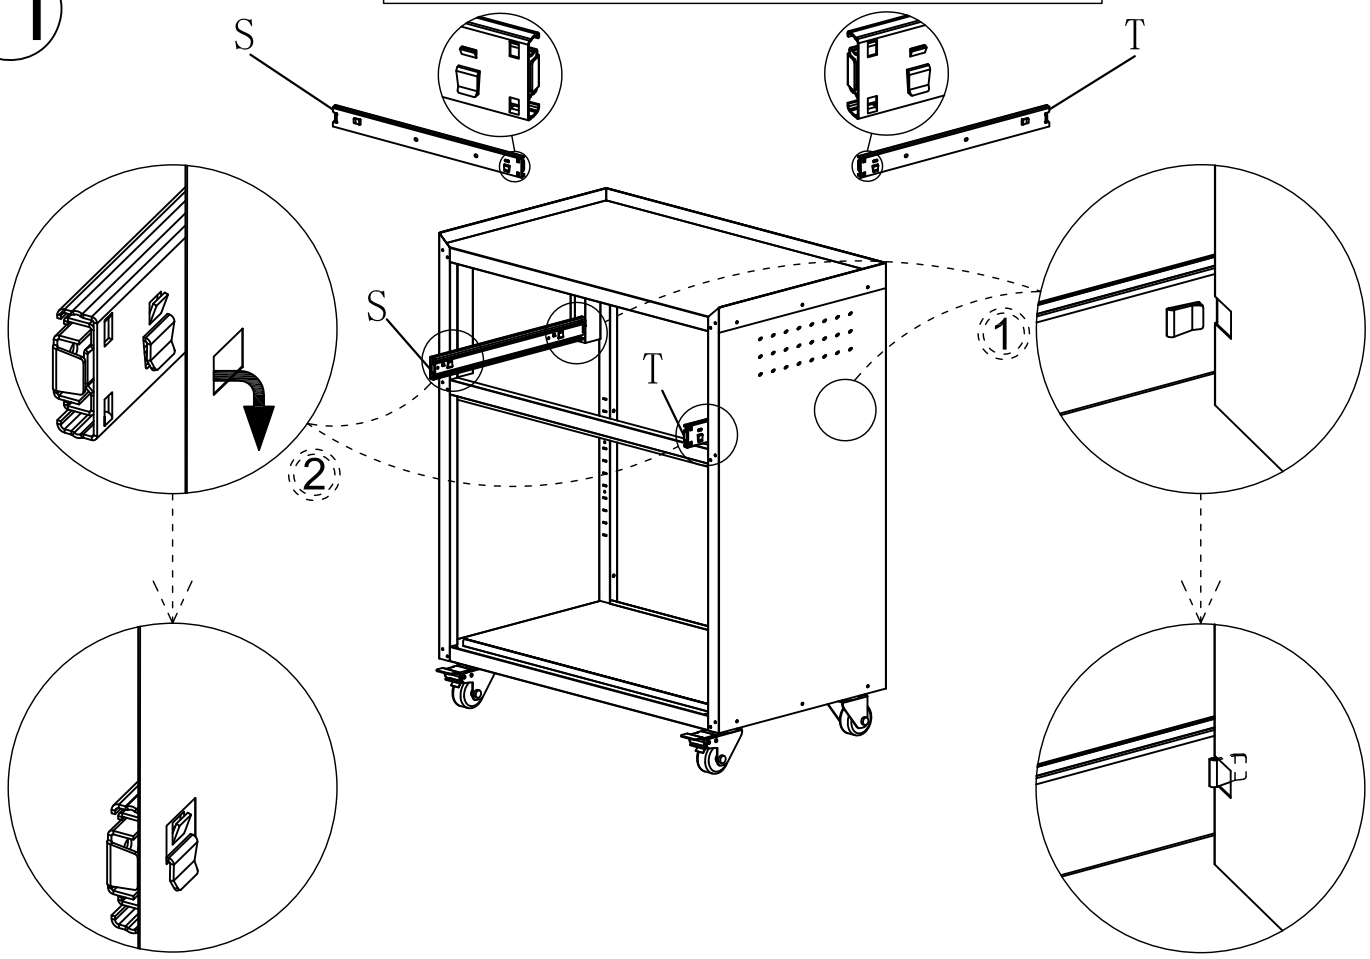



12

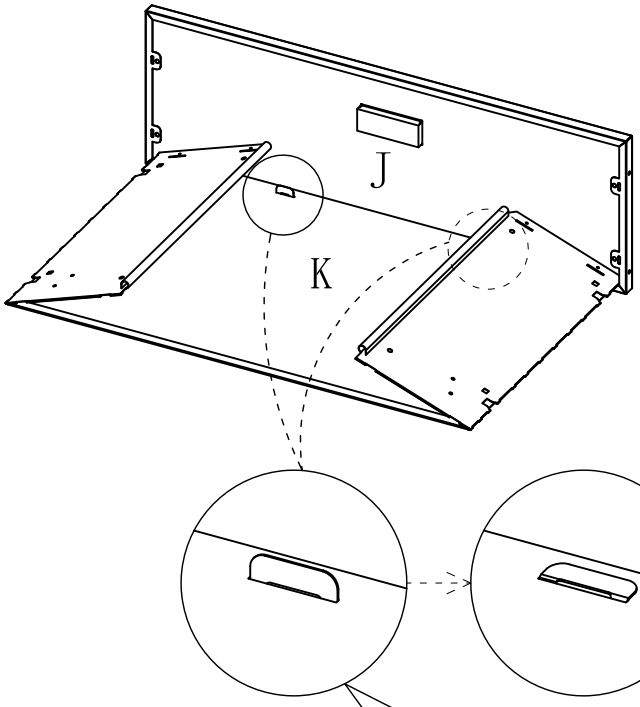


Insert drawer body panel K with drawer face panel J and bend the two buckles at the bottom.

13

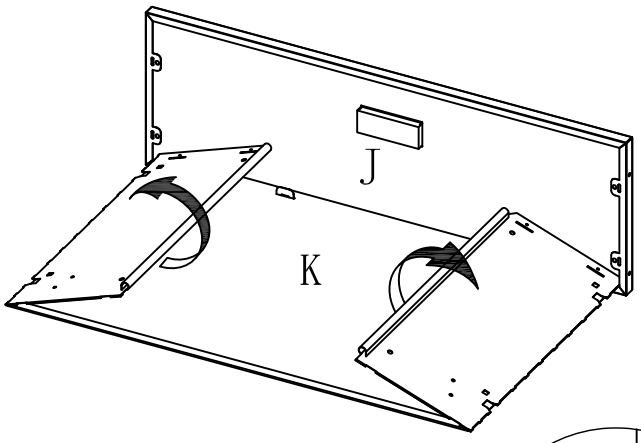


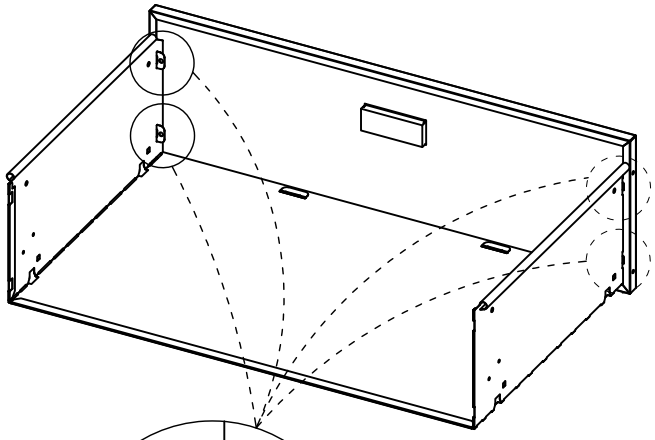


Bend the drawer body panel K 90 degrees to the left and right and insert the holes on sides into the buckles on panel J.

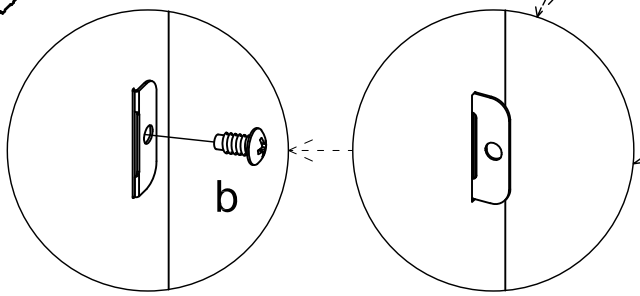

Bend the buckles to fix them together and fasten using screws b*4.

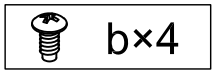


14

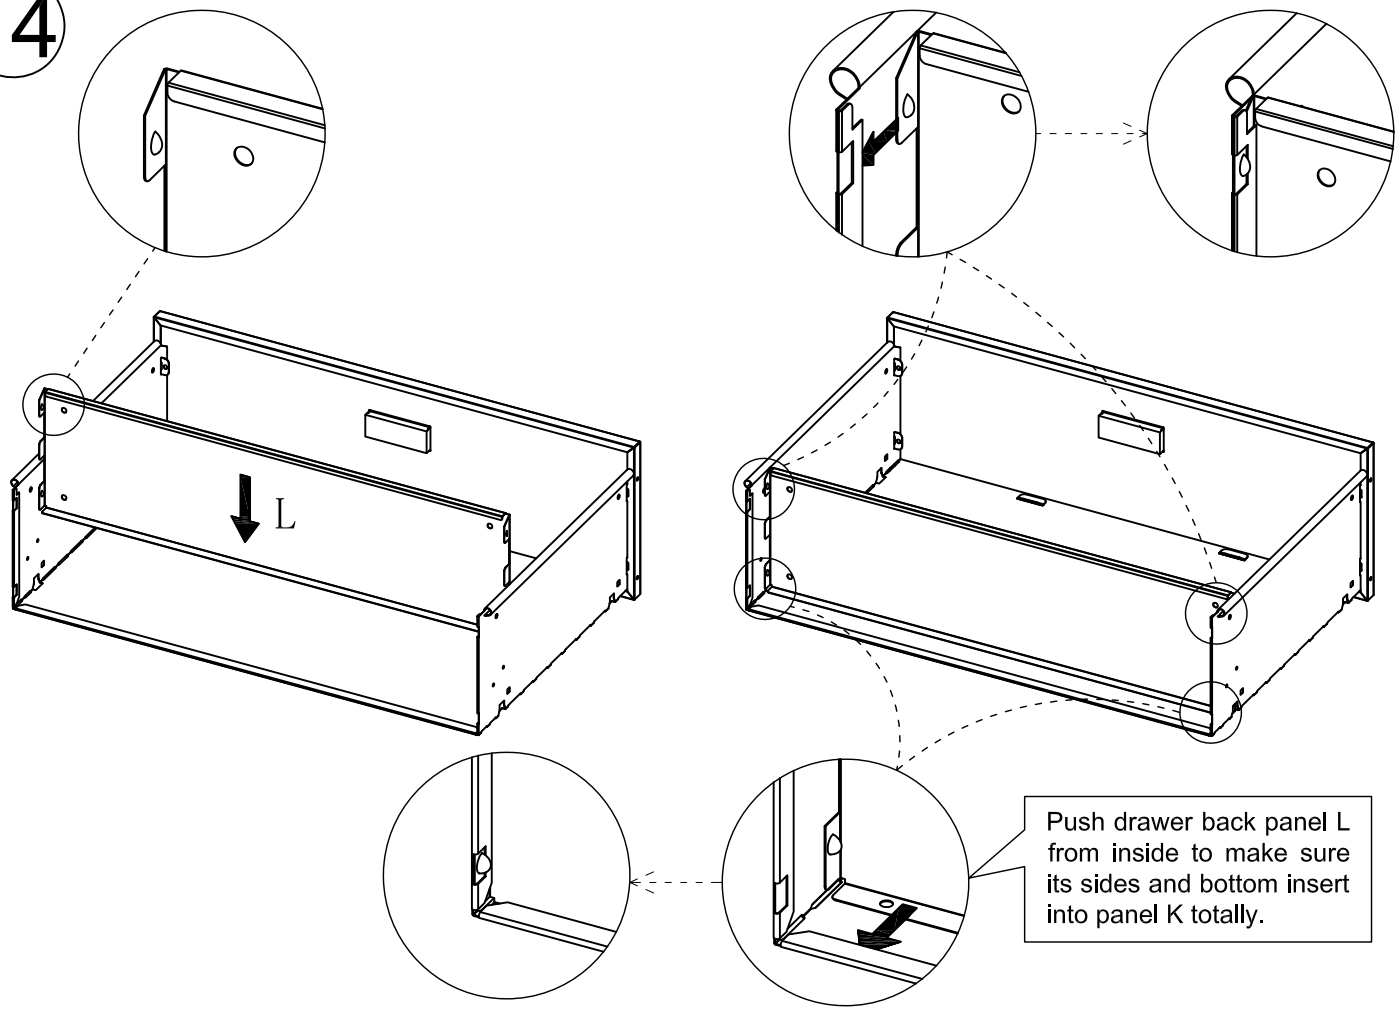

Push drawer back panel L from inside to make sure its sides and bottom insert into panel K totally.

15


Align the slots exactly with the holes on both sides of the drawer then sit the drawer into place. (Attention: Make sure the slots insert the holes completely, otherwise the drawer may sit slightly high and fail to close.)

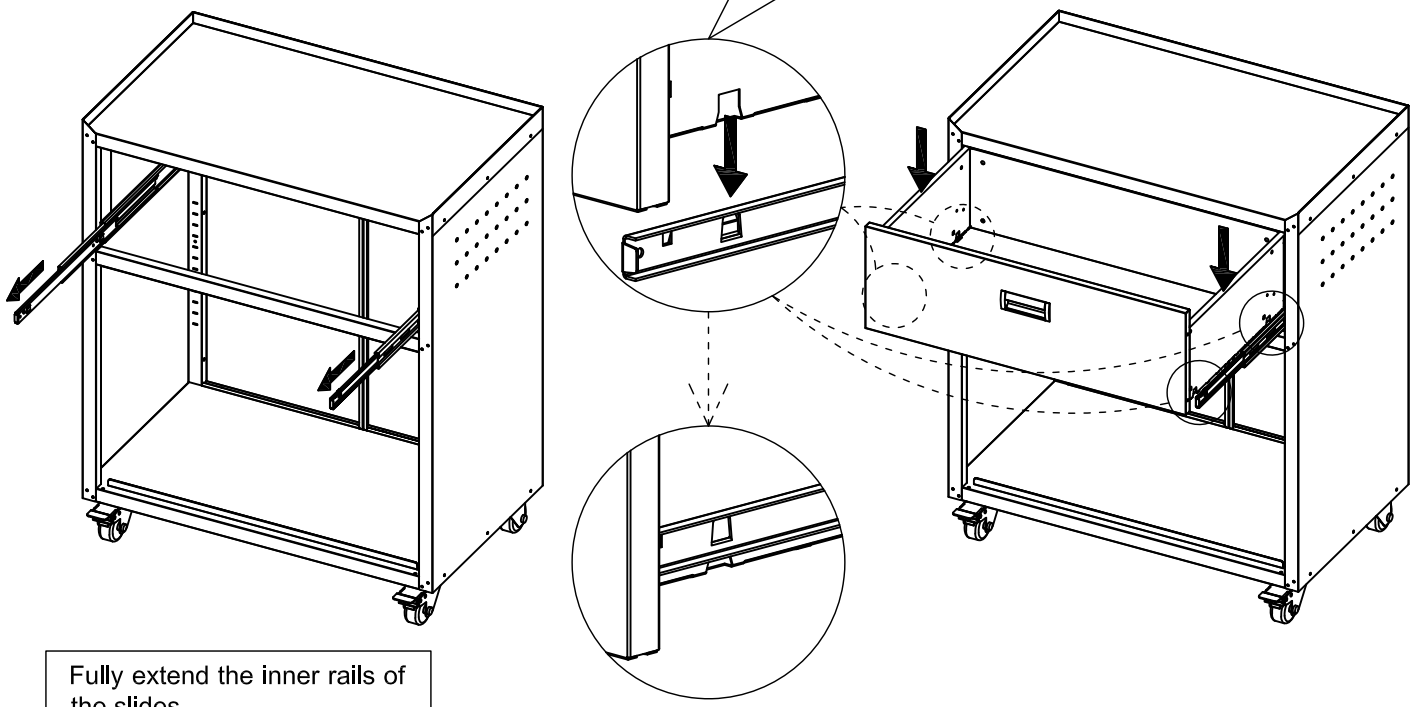

Fully extend the inner rails of the slides.


16

Use the adjustable Gravity Clips to adjust the shelf height as needed.

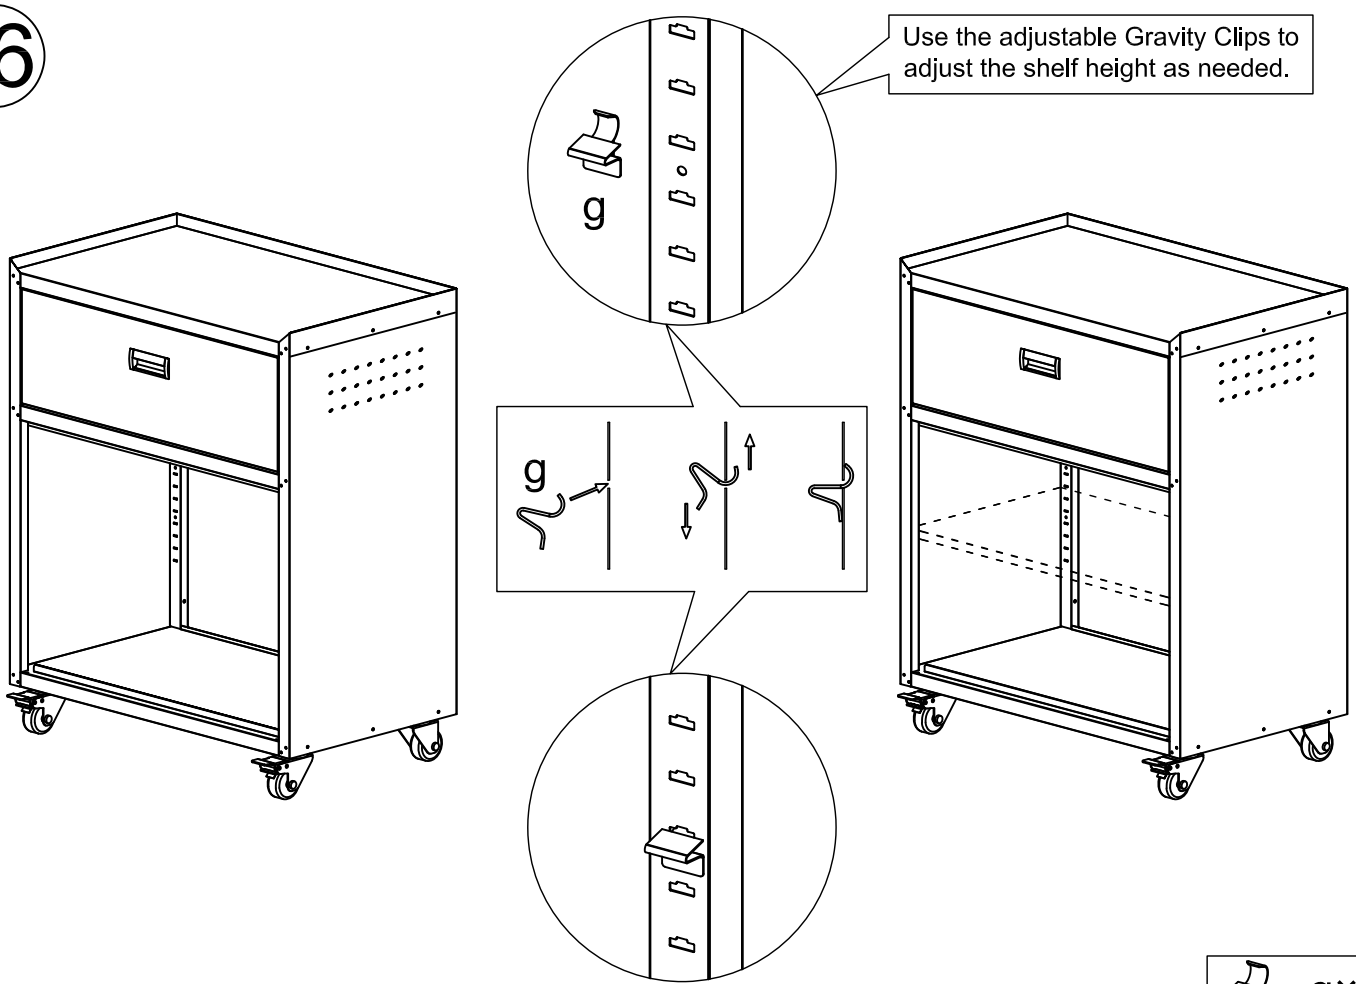


g×4

17

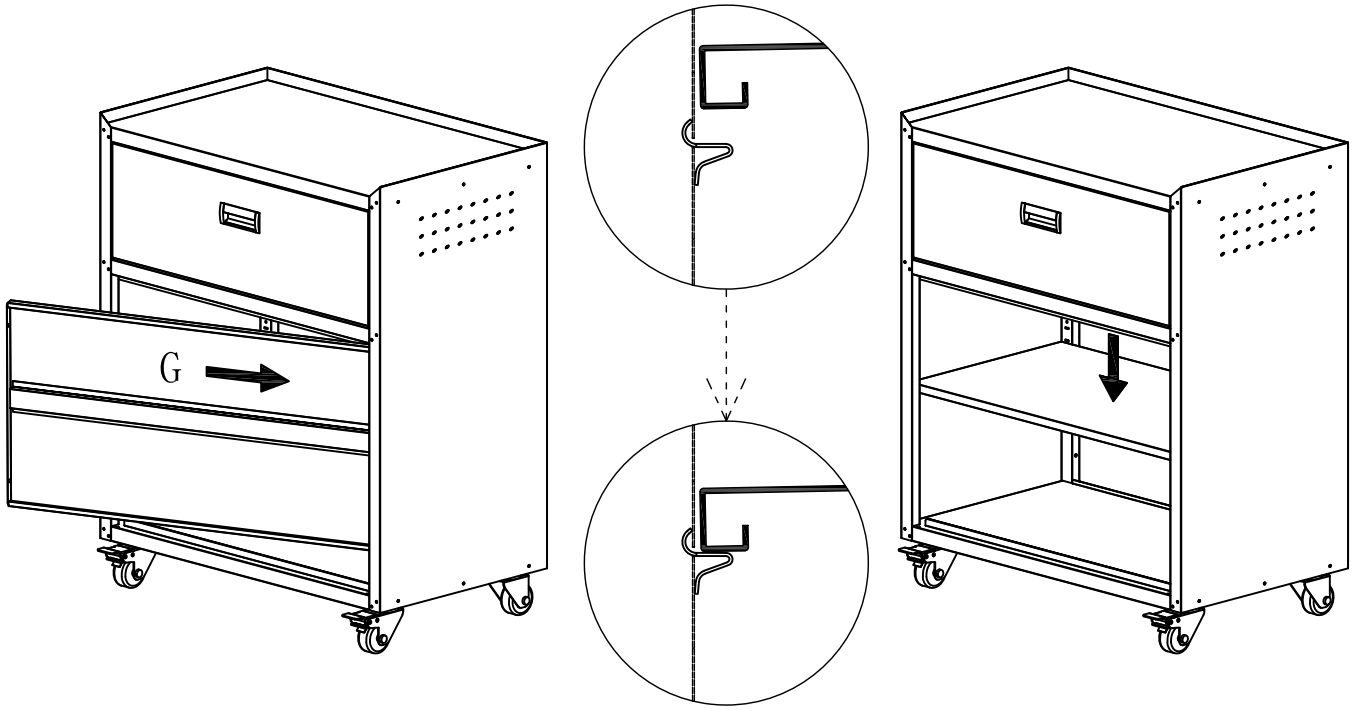

18


Install the door on one side by first installing the door shaft screw h, then by pressing the spring screw on the top of the door.

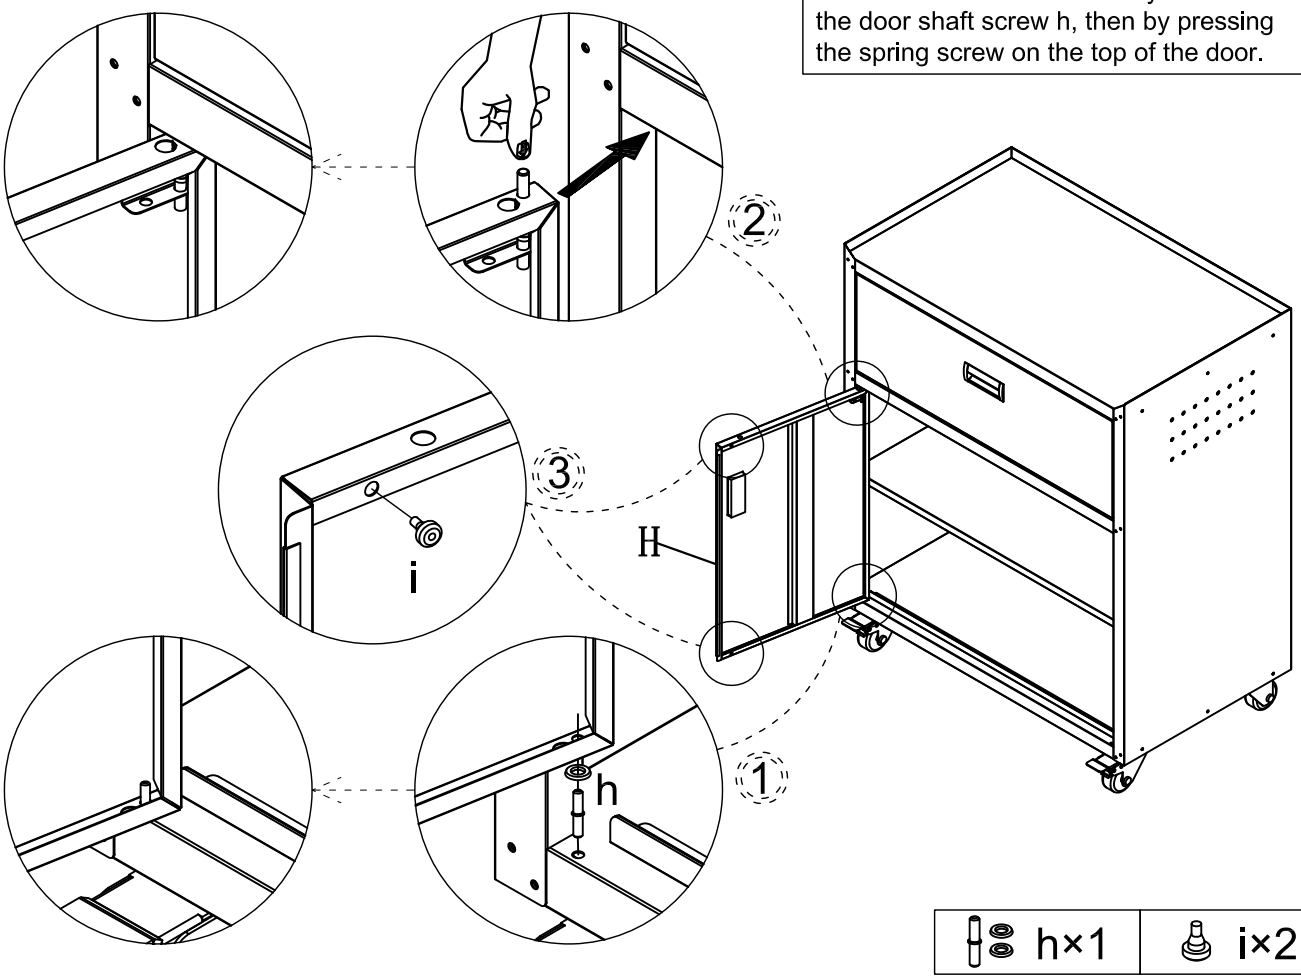

h×1	i×2


19

Remember the two transparent screw hole covers i installed on each of the doors.

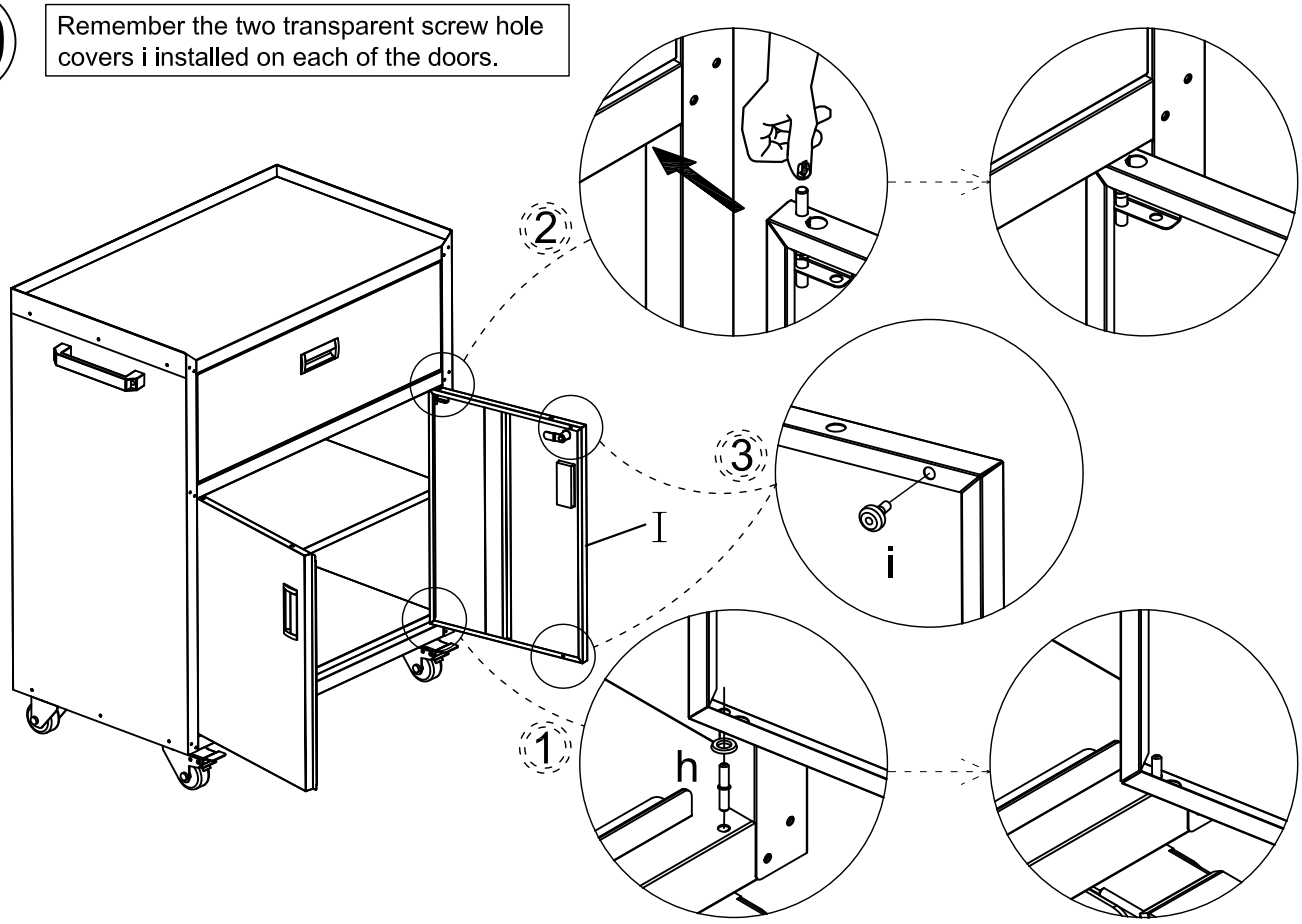

h×1 | i×2

20

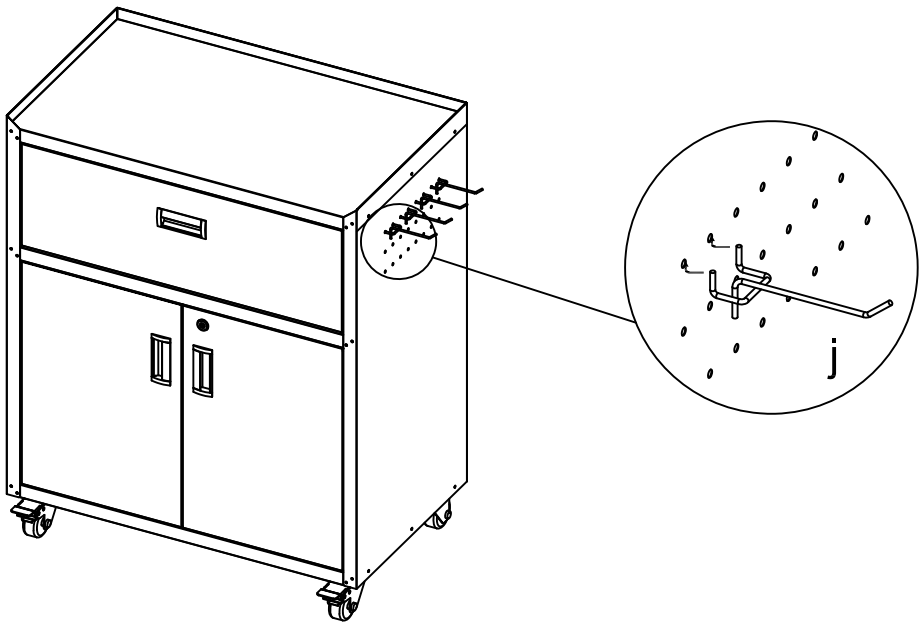

j×4

