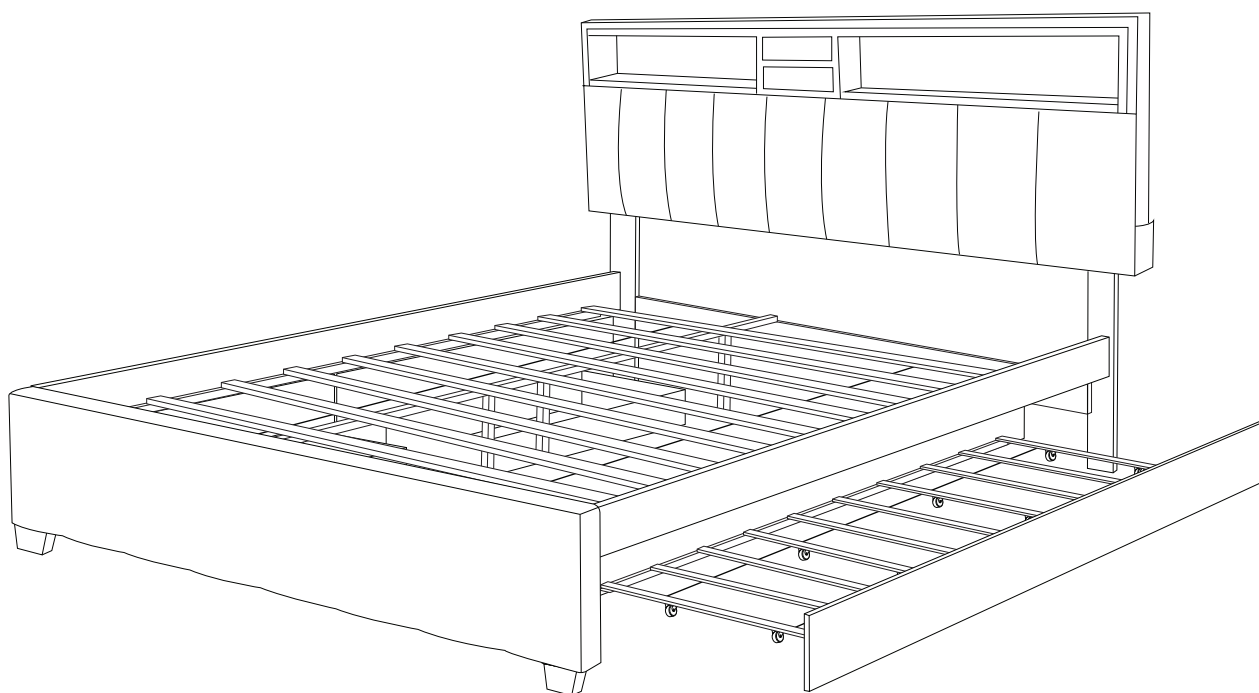
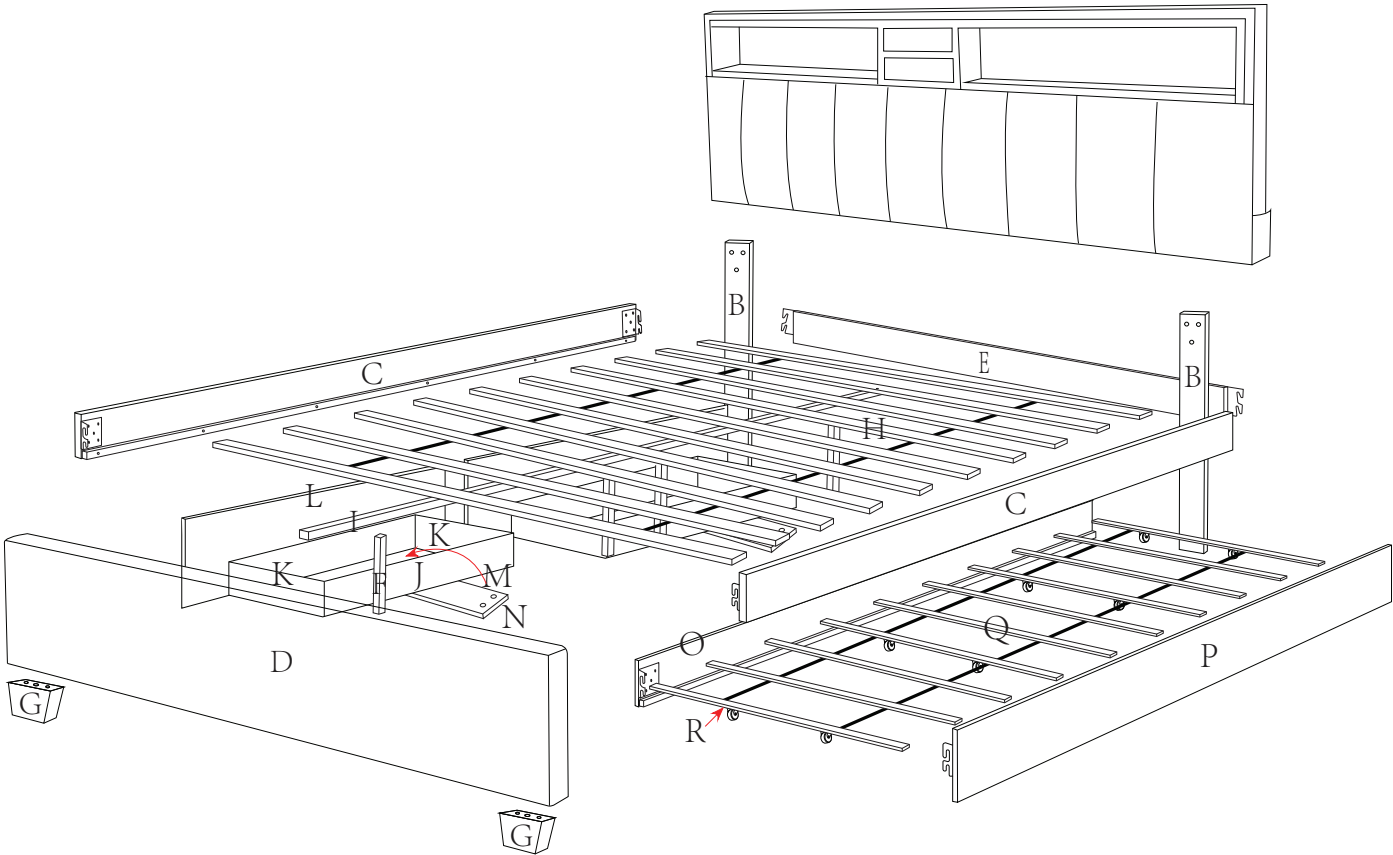


ASSEMBLY INSTRUCTION


WF316716 / WF316717 (Full)




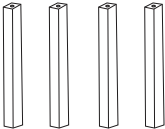


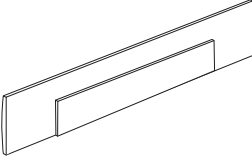
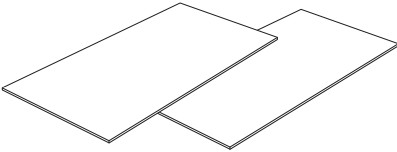


WF316718 / WF316719 (Queen)




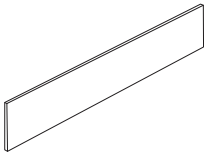


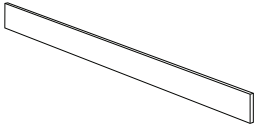
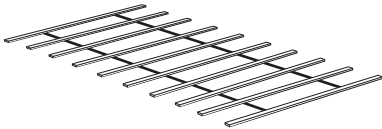




















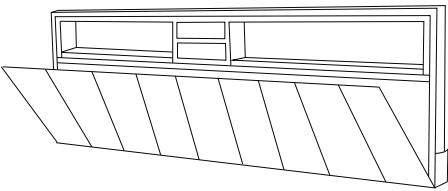



Bed Parts are shipped inside a compartment
in the front storage of the headboard.



NO	PART LIST (BOX 1 OF 2) WF316716 / WF316718	QTY
A	Headboard 	1 pc
B	Headboard Leg 	2 pcs
E	Headboard Support Bar 	1 pc
F	Center Support Leg 	4 pcs
G	Bed Leg 	2 pcs
H	Bed Slat Queen 	10 pcs
L	Drawer Front Panel 	2 pcs
M	Drawer Bottom Panel 	2 pcs
N	Drawer Support 	2 pcs
R	Trundle Slat Cube 	8 pcs

	PART LIST (BOX 2 OF 2) WF316717 / WF316719	
C	Side Rail 	2 pcs
D	Footboard 	1 pc
I	Center Support Rail 	1 pc
J	Drawer Back Panel 	2 pcs
K	Drawer Side Panel 	4 pcs
O	Trundle Long Panel (i) 	1 pc
P	Trundle Long Panel (ii) 	1 pc
Q	Trundle Bed Slat (Twin) 	10 pcs

NO	HARDWARE LIST (BOX 1 OF 2) WF316716 / WF316718	QTY
1	JCBB M8 x 20mm 	8 pcs
2	JCBC M6 x 70mm 	2 pcs
3	JCBC M6 x 60mm 	4 pcs
4	JCBC M6 x 40mm 	7 pcs
5	JCBB M8 x 25mm 	4 pcs
6	Flat Washer M6 	7 pcs
7	Dowel M8 	4 pcs
8	Adjuster M6 	4 pcs
9	CSK M4 x 20mm 	10 pcs
10	U-Bracket 	1 pc
11	CSK M3.5 x 16mm 	56 pcs
12	CSK M4 x 30mm 	40 pcs
13	Allen Key M4(100mm) 	1 pc




NO	HARDWARE LIST (BOX 1 OF 2)	WF316716 / WF316718	QTY
14	Allen Key M5(65mm) 		1 pc
15	CSK M4 x 38mm 		16 pcs
16	Wheel 		16 pcs
17	CSK M4 x 32mm 		16 pcs
18	Stopper 		6 pcs
19	Spring Washer M6 		6 pcs
20	CSK M4 X 25MM 		8 pcs

Remark : Extra hardware provided.


Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat surface, such as carpet or rug, to prevent from being scratched.

CAUTION :

1. Do not Full Tighten the nut or screw until all ready to assemble.
2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
3. Keep all hardware part out reach of children.

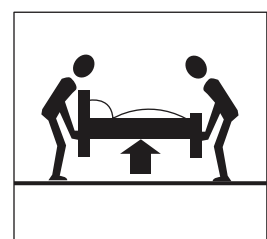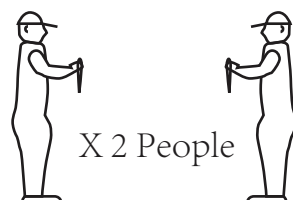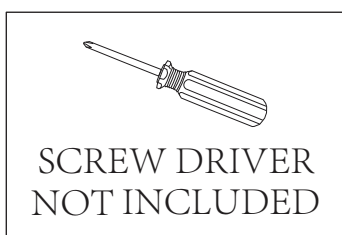


STEP 1 Trundle Bed x 1 pc

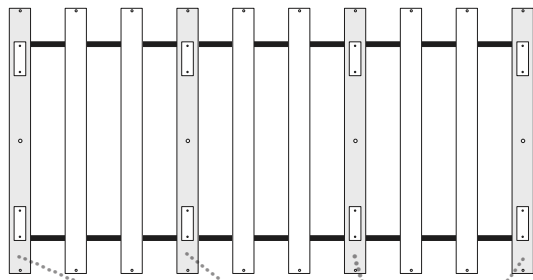


11	12	16	17
32 pcs	20 pcs	8 pcs	16 pcs

COMPLETED
ASSEMBLY

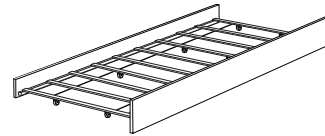


Step 1

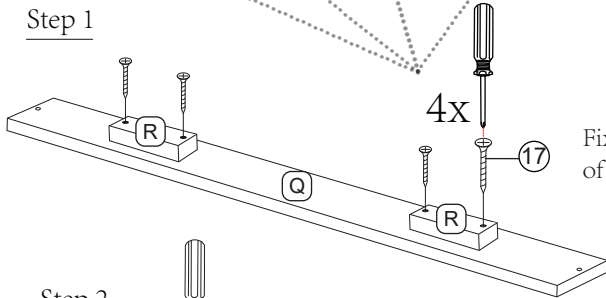


Fix the cube at the bottom
of 1st, 4th, 7th, and 10th slat.

Step 2

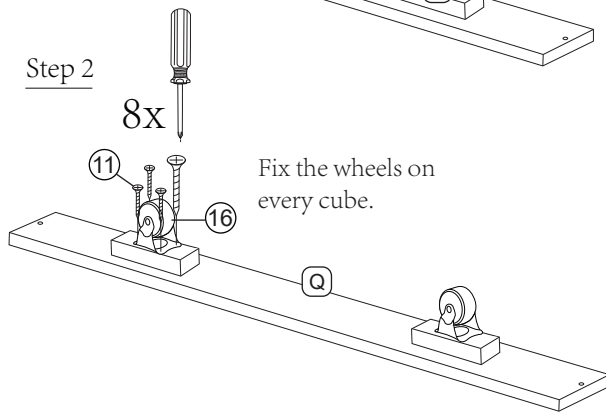


Fix the wheels on
every cube.

Step 3

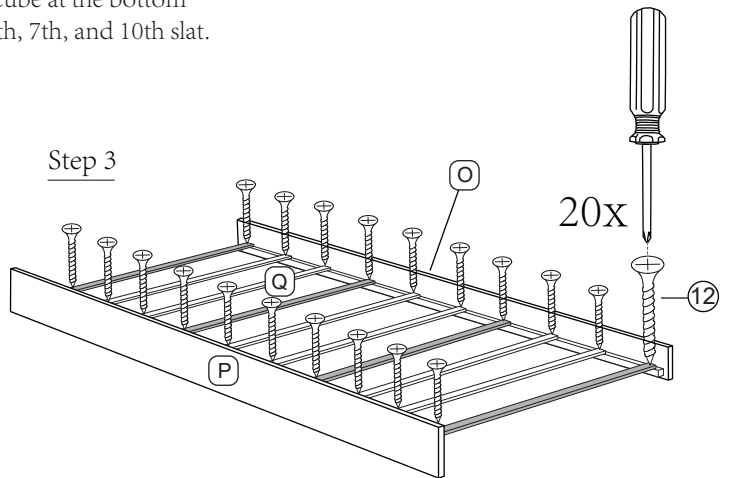


STEP 2 Drawer x 2 pcs

Step 1


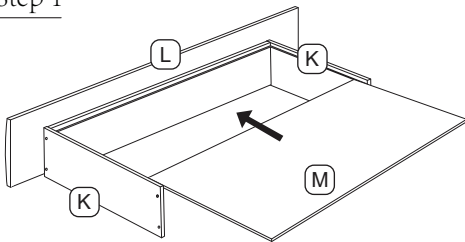


Step 2


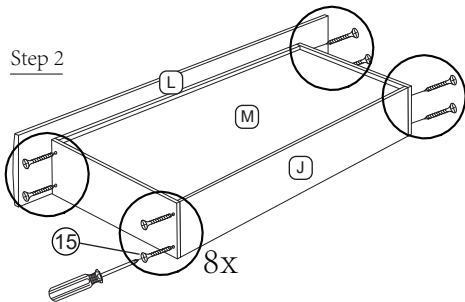


20	11	15	16
8 pcs	24 pcs	16 pcs	8 pcs


Step 3

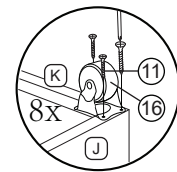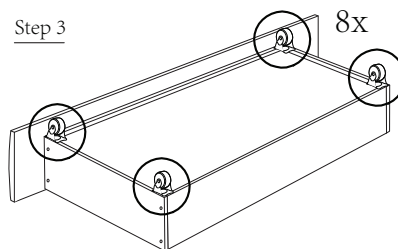

Step 4

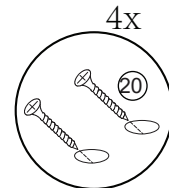
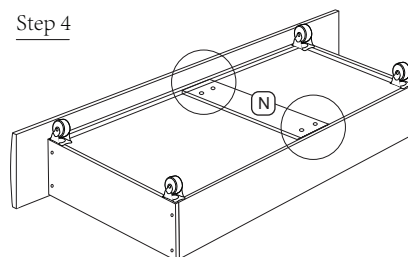


COMPLETED
ASSEMBLY

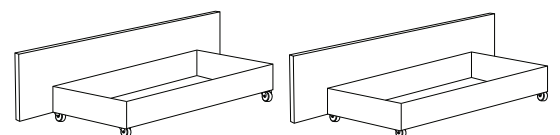



STEP 3

19	2	4	6	7
6 pcs	2 pcs	6 pcs	6 pcs	4 pcs

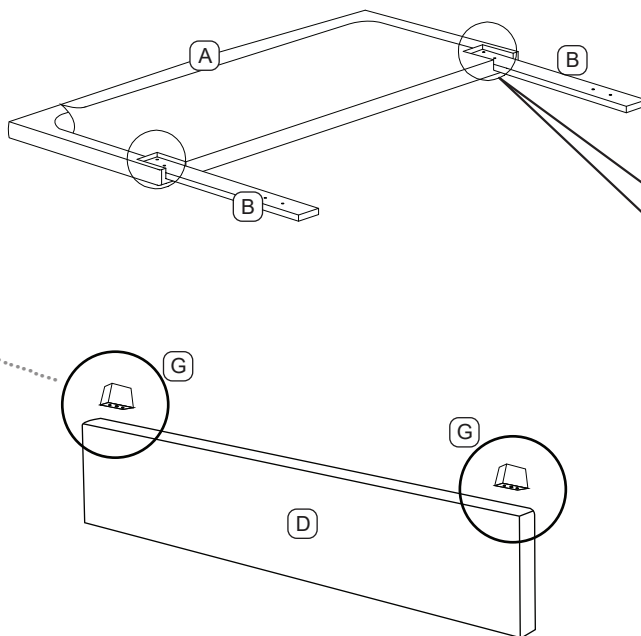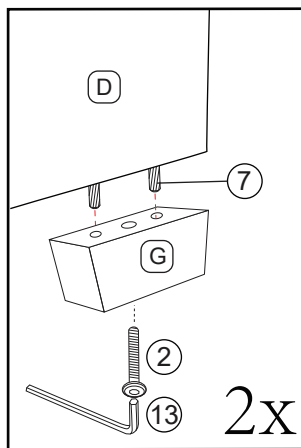


STEP 4

1
8 pcs

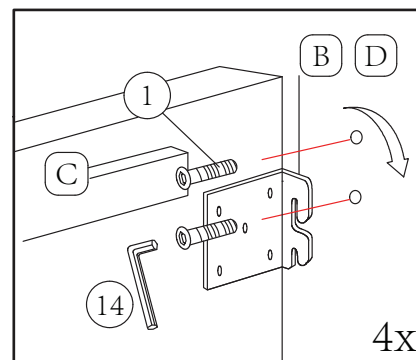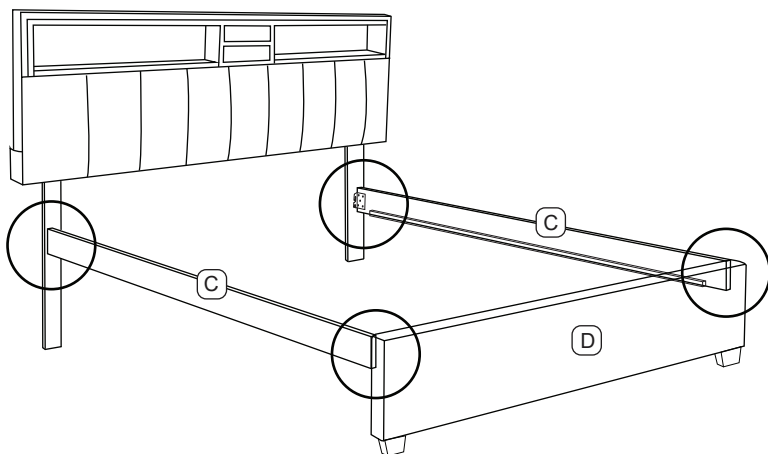


STEP 5

5



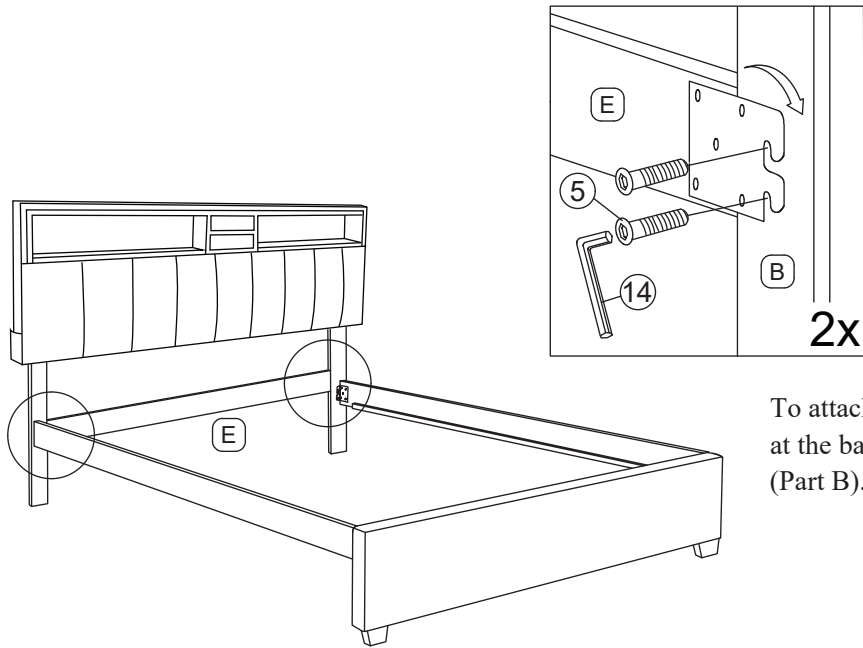




4 pcs



To attach the Headboard Support Bar at the backside to the Headboard Leg (Part B).




STEP 6

Decide the side for trundle bed & drawers


4	6	9	10	18
				
1 pc	1 pc	10 pcs	1 pc	6 pcs

Option 2

Option 1

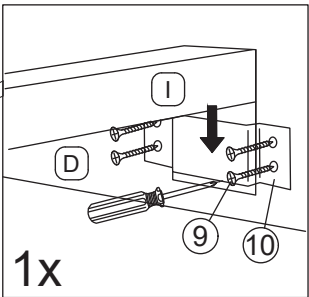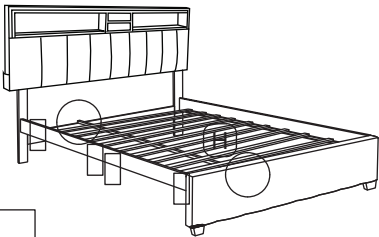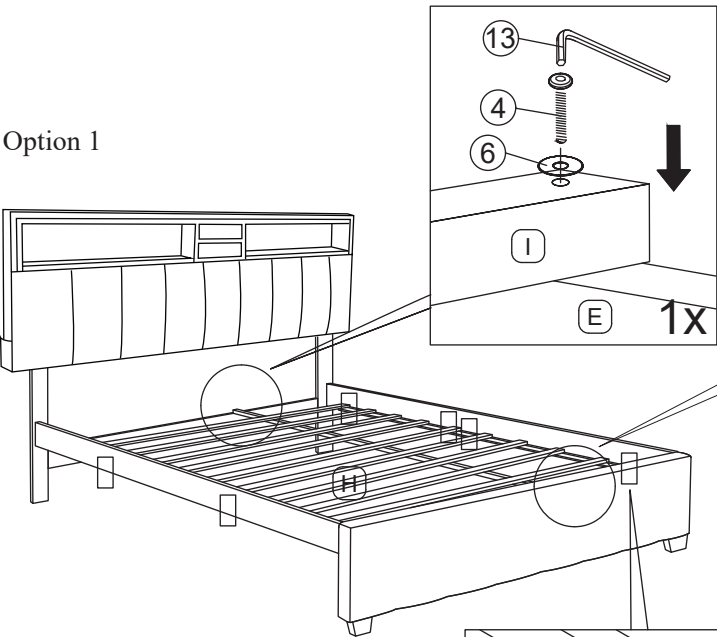





Follow the marking to attach the U-Bracket with Screw 20mm (4PCS) at Footboard.

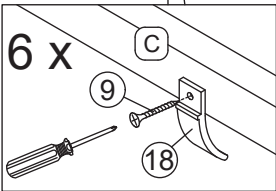



Optional:
Add drawer stopper

STEP 7

3	8	12
		
4 pcs	4 pcs	20 pcs

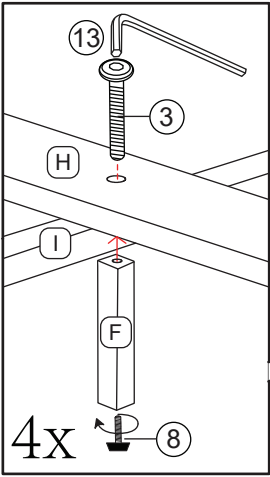

Adjust slat leveling feet to touch floor.

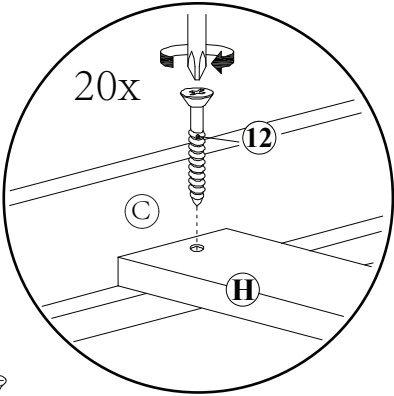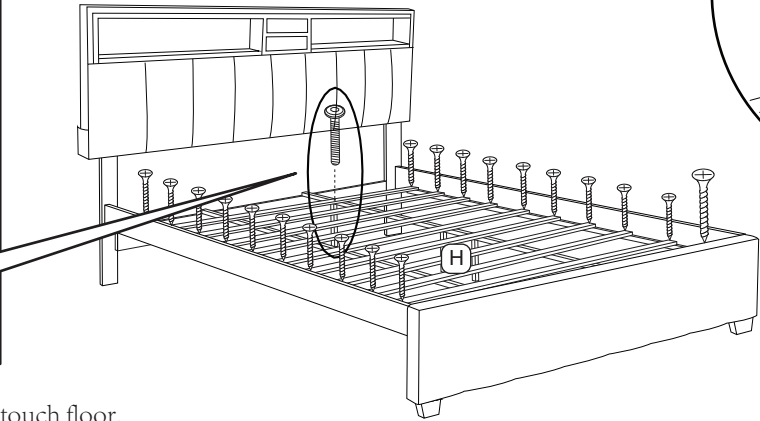

Lastly, place the trundle bed & drawers inside.

COMPLETED
ASSEMBLY

