

Installation diagram

A: Willow leaf glass: 47 PCS


B: Aluminum leaf + 4 * 16 full-threaded screws + nuts: 19 PCS

C: 4 mm nuts + 4 * 25 full-threaded screws + nuts: 28 PCS

D: 190 long rectangular supports + 5 * 20 screws + 3 * 10 screws: 3 sets

Note: aluminum leaf 19 PCS, 4 * 16 full-threaded screws 21 PCS, 4 * 25 full-threaded screws 30 PCS, 4 mm nuts 30 PCS, nuts 47 PCS

1. It must be installed by a professional electrician. Before installing the lamps, the power supply must be disconnected.
2. Rated voltage: 110V
3. Open the outer box, find all the components, and place them carefully on a clean platform to prevent damage. Be sure to avoid damaging the lamp body and the crystal.
4. Remove the hanging plate of the ceiling pan. Align the screws of the hanging plate with the holes of the ceiling pan and lock them in place on the ceiling. Drill holes in the cement ceiling according to the size of the expansion screws, then insert the expansion screws into the holes in the ceiling and lock the hanging plate.
5. Pass the suspension chain through the ceiling pan. The anti-detachment screws must be locked.
6. Adjust the length of the suspension chain as needed. The lamp's wires should be connected to the neutral wire and the live wire. If necessary, connect the ground wire yourself.
7. Align the screws of the ceiling pan with the holes of the ceiling pan, then use the flower-shaped screws to lock and fix the ceiling pan. Then adjust the steel wire to balance the lamp body.
8. Install the light source (When replacing the light source, turn off the lights for 30 minutes before replacing). Install the glass sheet from the inside to the outside and from the bottom to the top at the corresponding position.

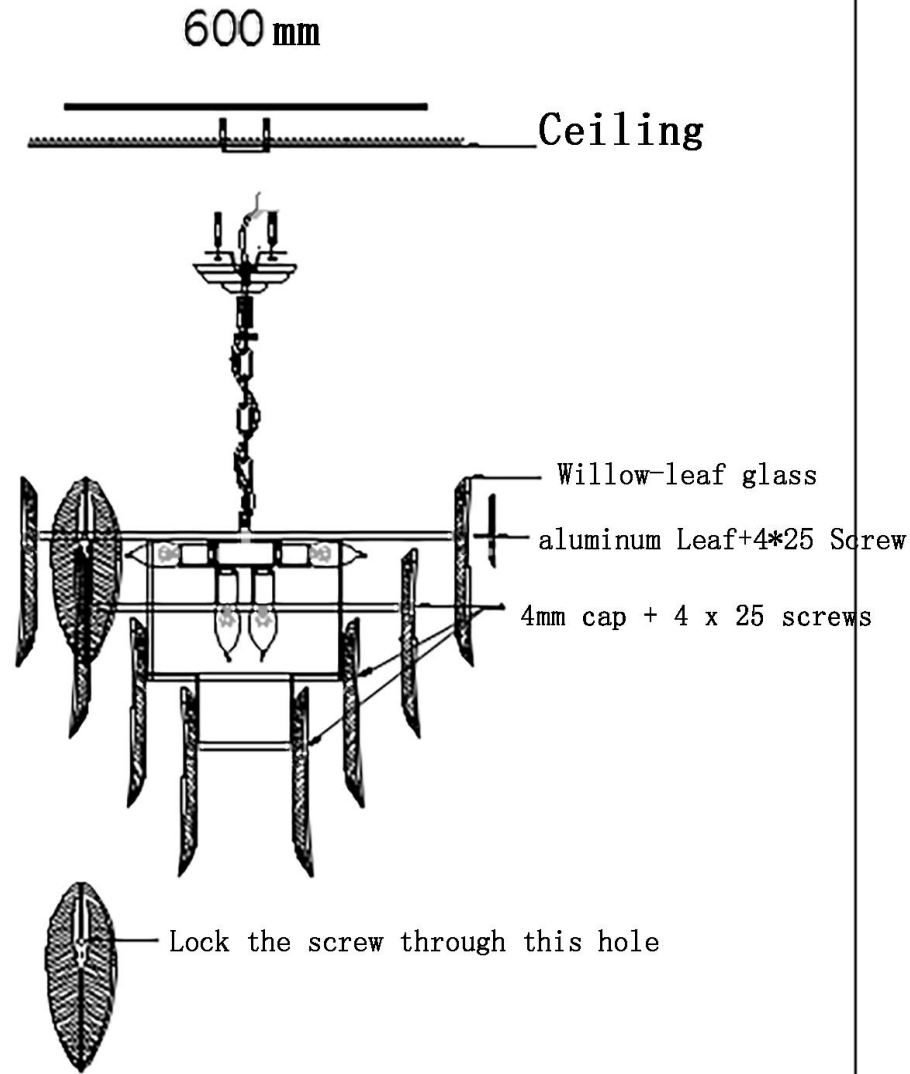

Note: When installing the glass, use a maximum of 4*16 full-thread screws with aluminum parts for the outer ring. For the rest, use 4mm nuts with 4*25 full-thread screws, starting from the bottom and going upwards.