

BED FRAMES

Twin & Full Size Bed Frames (does not include Center Support Rail)
Queen & King Size Bed Frames


STEP 1

Lay out bed rail parts as shown in STEP 1. Swing open right and left cross arms.


STEP 2

Turn the center support so that the flat angle (the top) rests on the floor and the legs are pointing up as shown in STEP 2. Also turn the center cross arms up side down so that the shoulder rivets are also pointing up. Insert the rivet A in the slot A as shown in STEP 2. Pivot the cross arm so that rivet B comes to rest into slot B. Repeat for the opposite end of the center support.


STEP 1

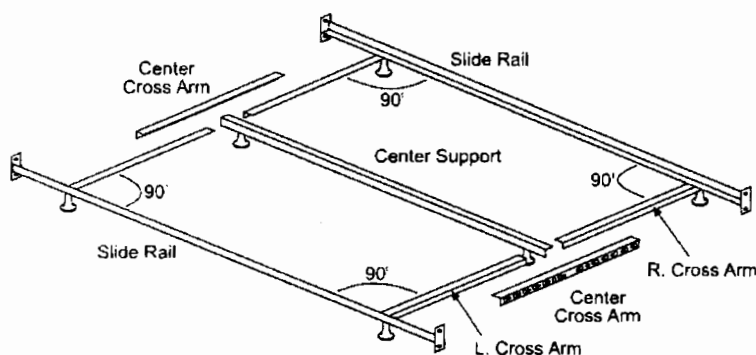

STEP 2

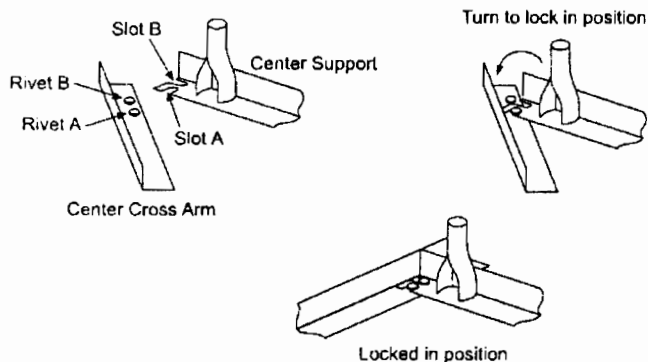

STEP 3

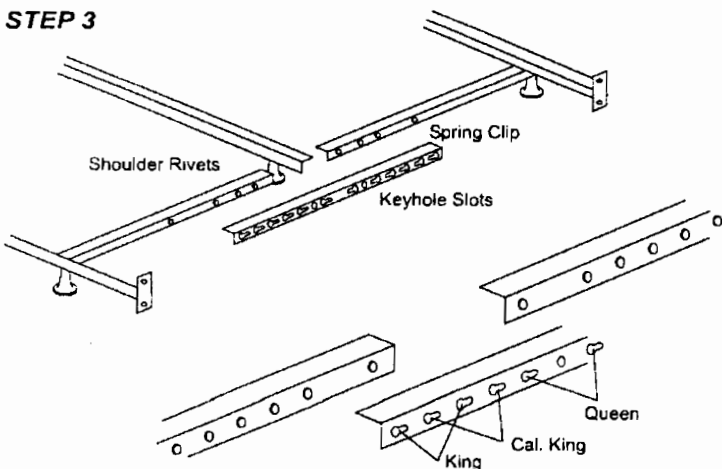

STEP 3


Determine desired bedding size (Queen, Cal. King, or King). Overlap the cross arms and insert the shoulder rivets into the proper keyhole slots. Step 3 shows the size adjustments. Note that the widest keyhole slots are for king and the narrowest keyhole slots are for queen with the cal. king slots in the middle.

STEP 4

Slide the brass sleeves over the top of the plastic glides and push the glides onto the metal legs. **IMPORTANT:** Do not fully insert glides onto metal leg of frame until the frame has been attached to the Headboard & the Footboard.

Note: Twin & Full Size Mattress Frames do not include the Center Support Rail as it is not needed for this size beds.

STEP 4

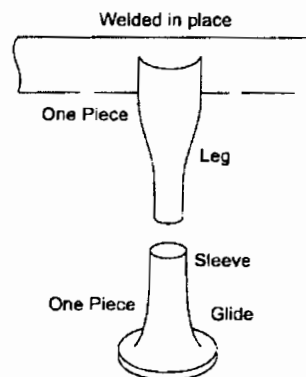


STEP 5

Bed Frame fits both flat & curved surface bed posts.

*** IMPORTANT ***


IT IS NOT NECESSARY TO USE a Rubber Washer that has been provided in the hardware pack; when assembling to a flat surface post.

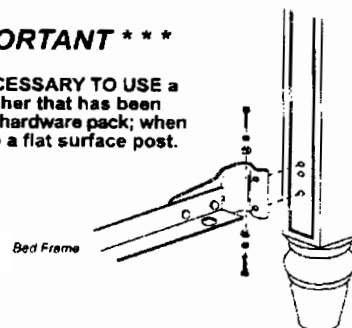


BED FRAMES

Our curved bed frames fit both round & square bed posts just the same as a flat bed frame. The assembly is identical and our curved bed frames give more stabilizing support than the original flat bed frame.


Bed Frame

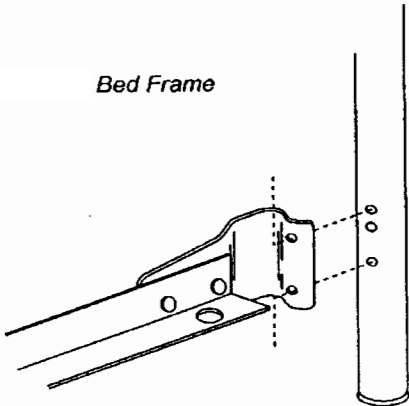


Original Bed Frame

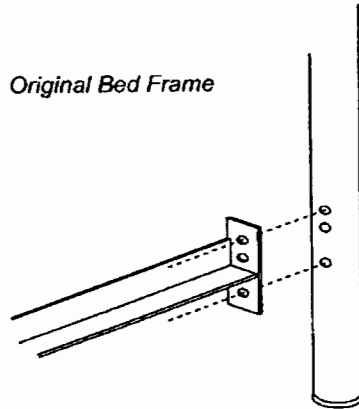

Bed Frame

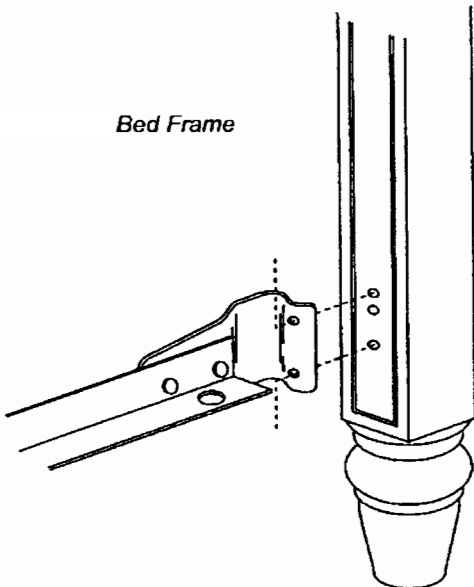


Original Bed Frame

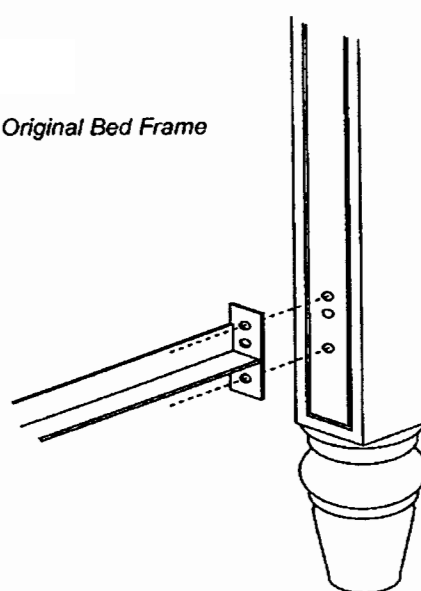

BED FRAMES

Our curved bed frames fit both round & square bed posts just the same as a flat bed frame. The assembly is identical and our curved bed frames give more stabilizing support than the original flat bed frame.

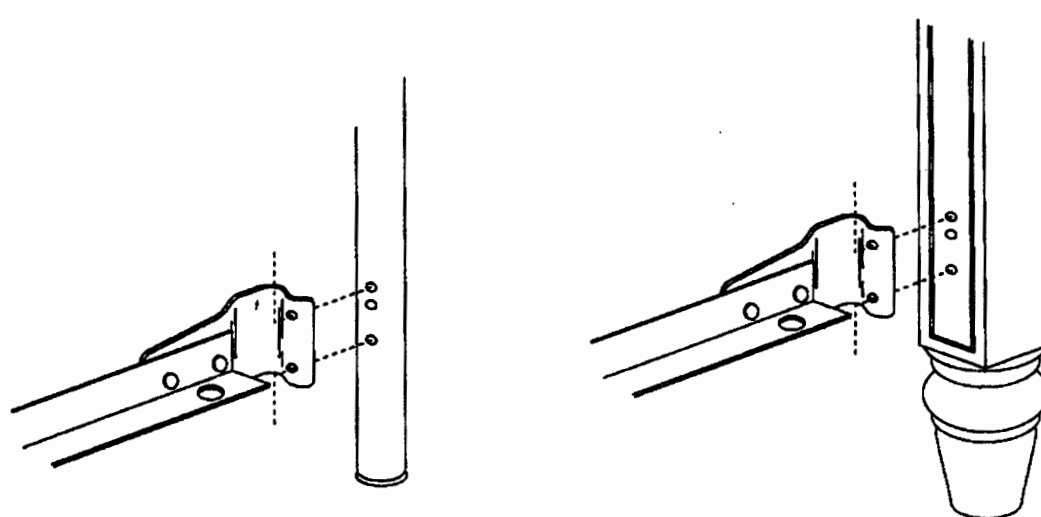


HARDWARE LIST

- A (4) 1/4" x 1/2" Allen Bolts
 B (4) 1/4" x 3/4" Allen Bolts
 C (4) 1/4" x 2" Countersunk Allen Bolts
 D (12) Flat Washers
 E (4) Nuts
 F (1) Allen Wrench
 G (1) Open Wrench

PARTS LIST

- H (1) Headboard Panel
 I (1) Footboard Panel
 J (2) Leg Extensions

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	4		B	4	
C	4		D	12	
E	4		F	1	
G	1				

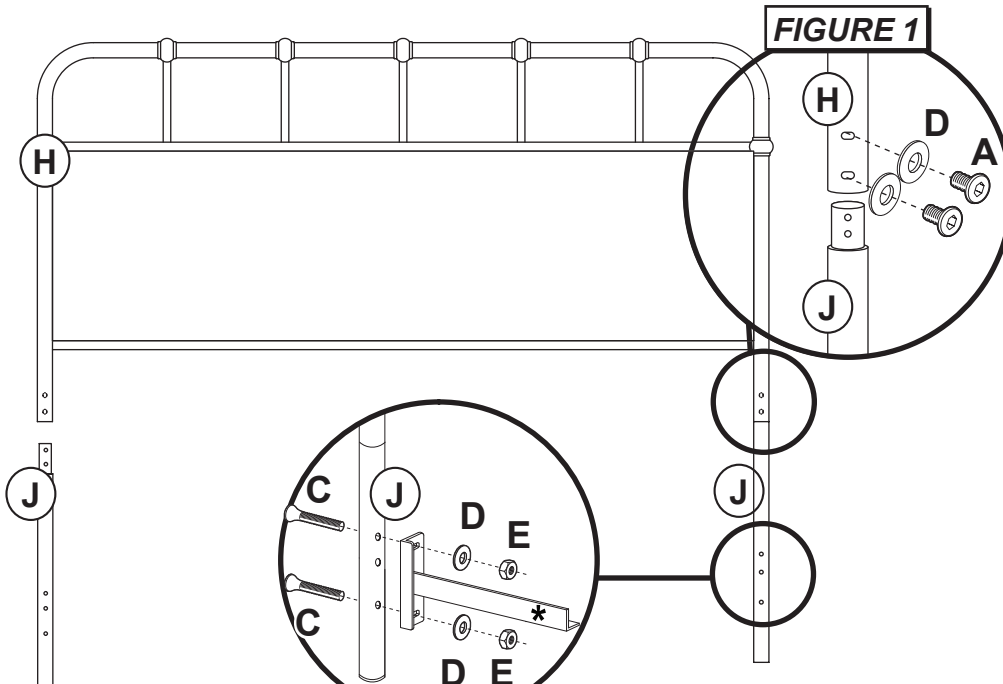FIGURE 1**FIGURE 2****STEP 2 - Figure 2**

Next, attach the bed frame (*not included) to each Leg Extension (J) using 2 Countersunk Allen Bolts (C) from the backside, 2 Flat Washers (D) & 2 Hex Nuts (E) per side. Tighten all bolts and nuts using the Allen & Hex Wrenches (F & G) that have been provided.


STEP 3 - Figure 3

Finally, attach the bed frame (*not included) to each post on the Footboard Panel (I) using 2 Allen Bolts (B) & 2 Flat Washers (D) per side. Tighten all bolts using the Allen Wrench (F) provided. The assembly is now complete.

STEP 1 - Figure 1

Begin assembly by attaching each Leg Extension (J) to the bottom of each post on Headboard Panel (H) by firmly sliding into place. Make sure the holes are properly aligned and insert 2 Allen Bolts (A) and 2 Flat Washers (D) to secure each in place. Tighten all bolts using the Allen Wrench (F) provided.

Bed Frame
*** Not Included**

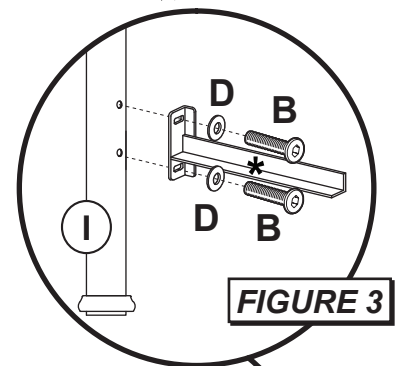**FIGURE 3**