

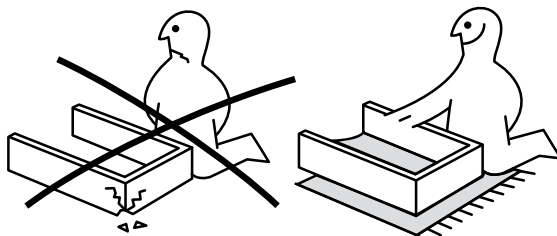
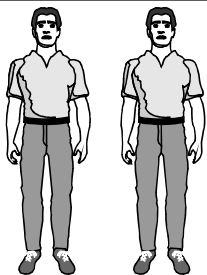


ASSEMBLY GUIDE

SMART 2-DOOR WARDROBE

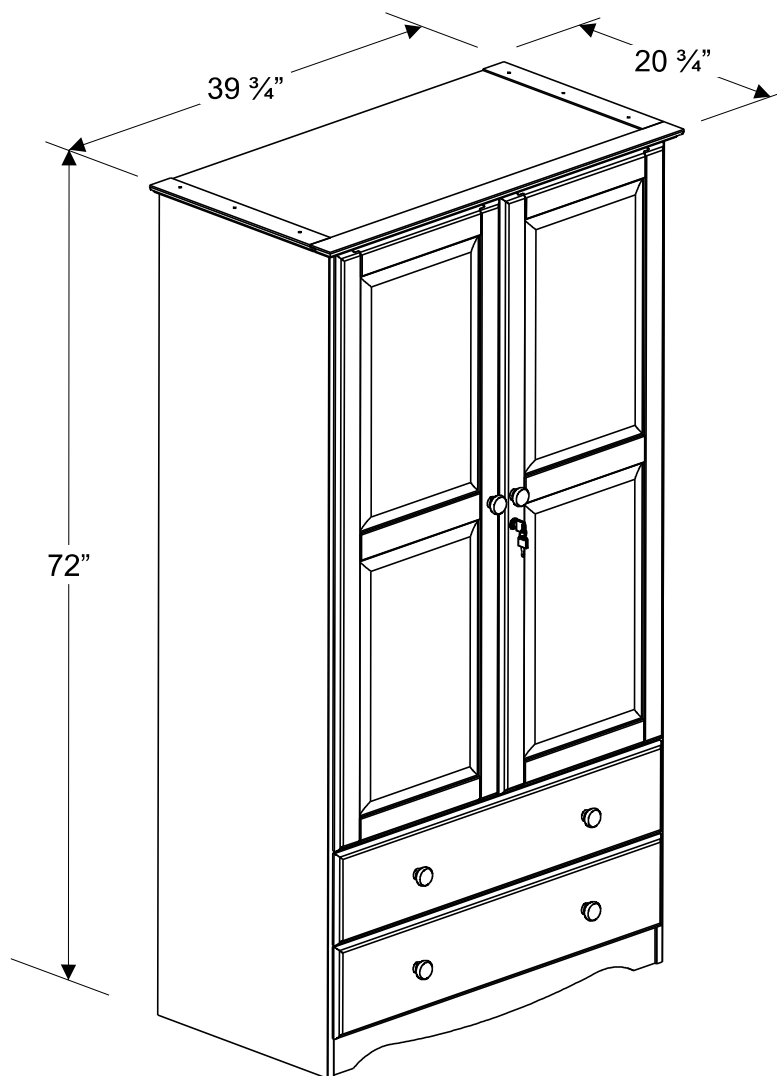


REV - 04/2023

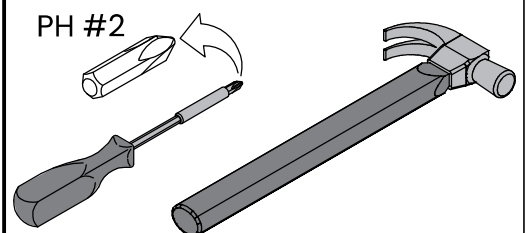








PRE-ASSEMBLY PREPARATION



- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.



PARTS DIAGRAM

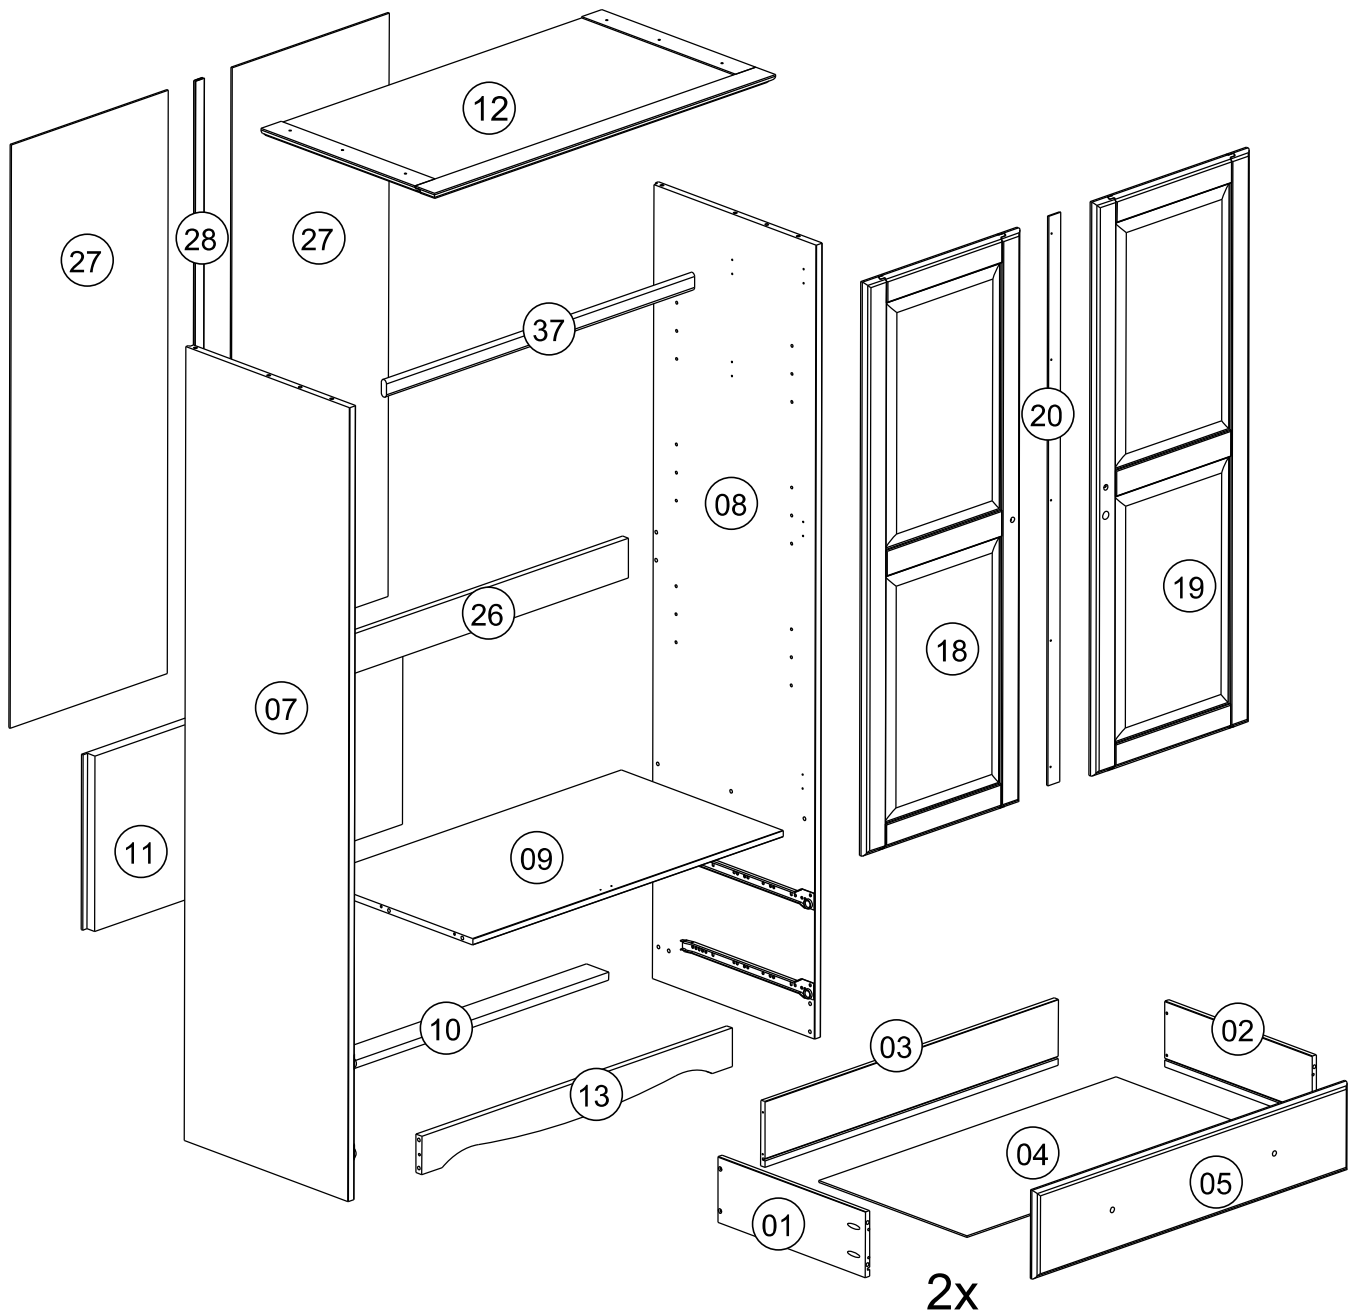

SCREWS ARE SHOWN IN ACTUAL SIZE

A1	 4,0x30	32+1
A8	 3,0x20	02+1
A16	 4,0x40	06+1
A41	 4,0x30	06+1
A42	 4,0x14	12+1
A44	 3,5x14	41+2
C2	 8,0x25	32+1
D3		02
D10		02
E17	 450mm - 17 3/4"	02
E18	 450mm - 17 3/4"	02
F1		01
F2		01
F3		02
F10		06

G1	 10x10	50
H1		06

FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01



WARNING:
CHOKING HAZARD

Small Parts.
Adult Supervision Required.
Not for children under 3 years old.












WARNING:


**FURNITURE TIPOVER CAN RESULT
IN SERIOUS INJURY OR DEATH**


This wardrobe includes tipover-
prevention hardware that
MUST BE ATTACHED TO THE WALL
per the assembly instructions.

01)

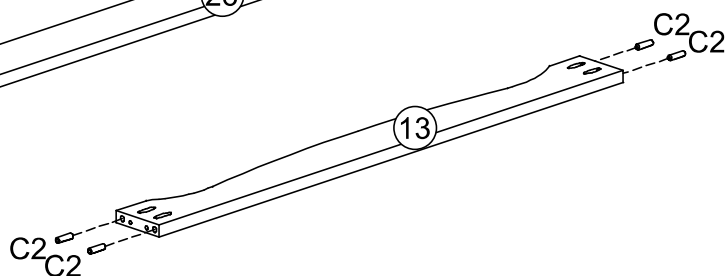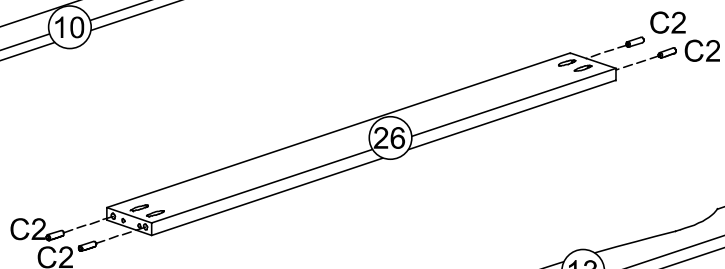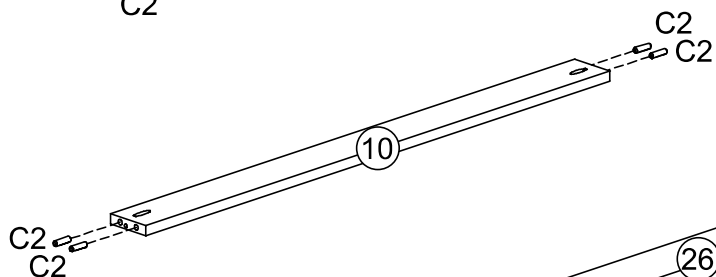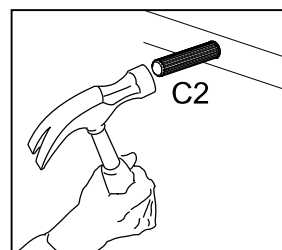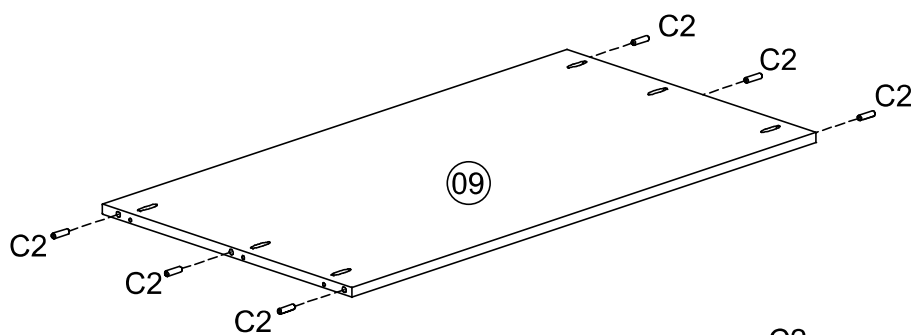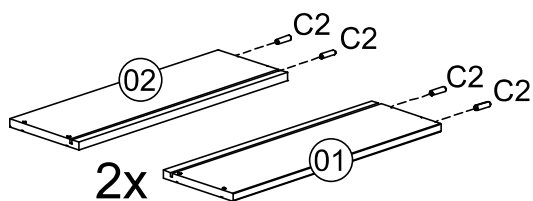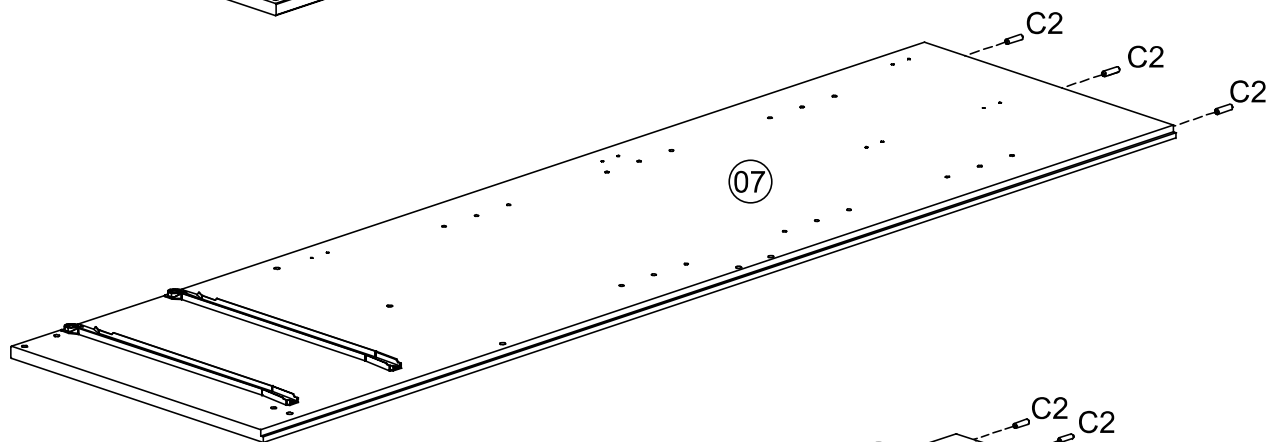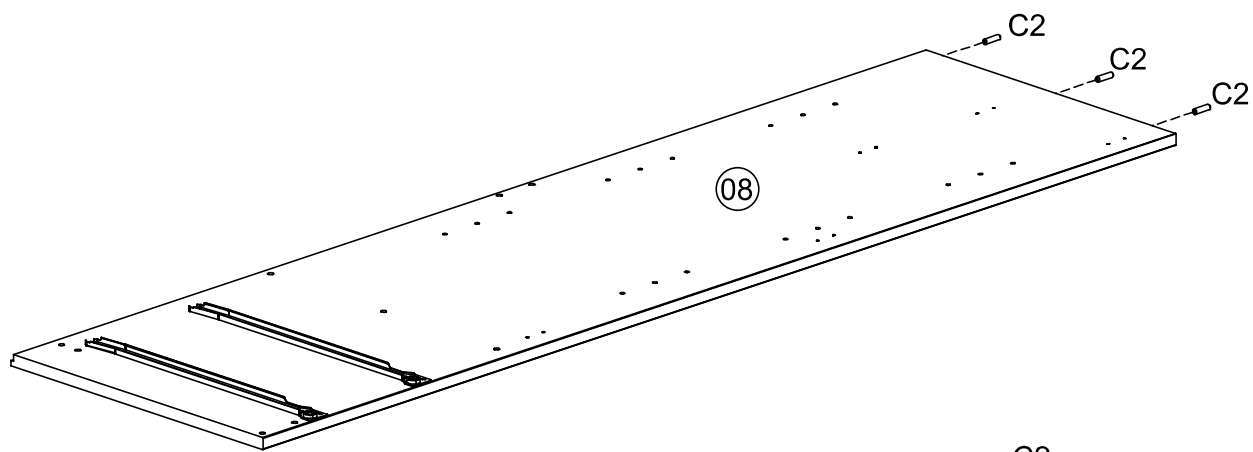


02)

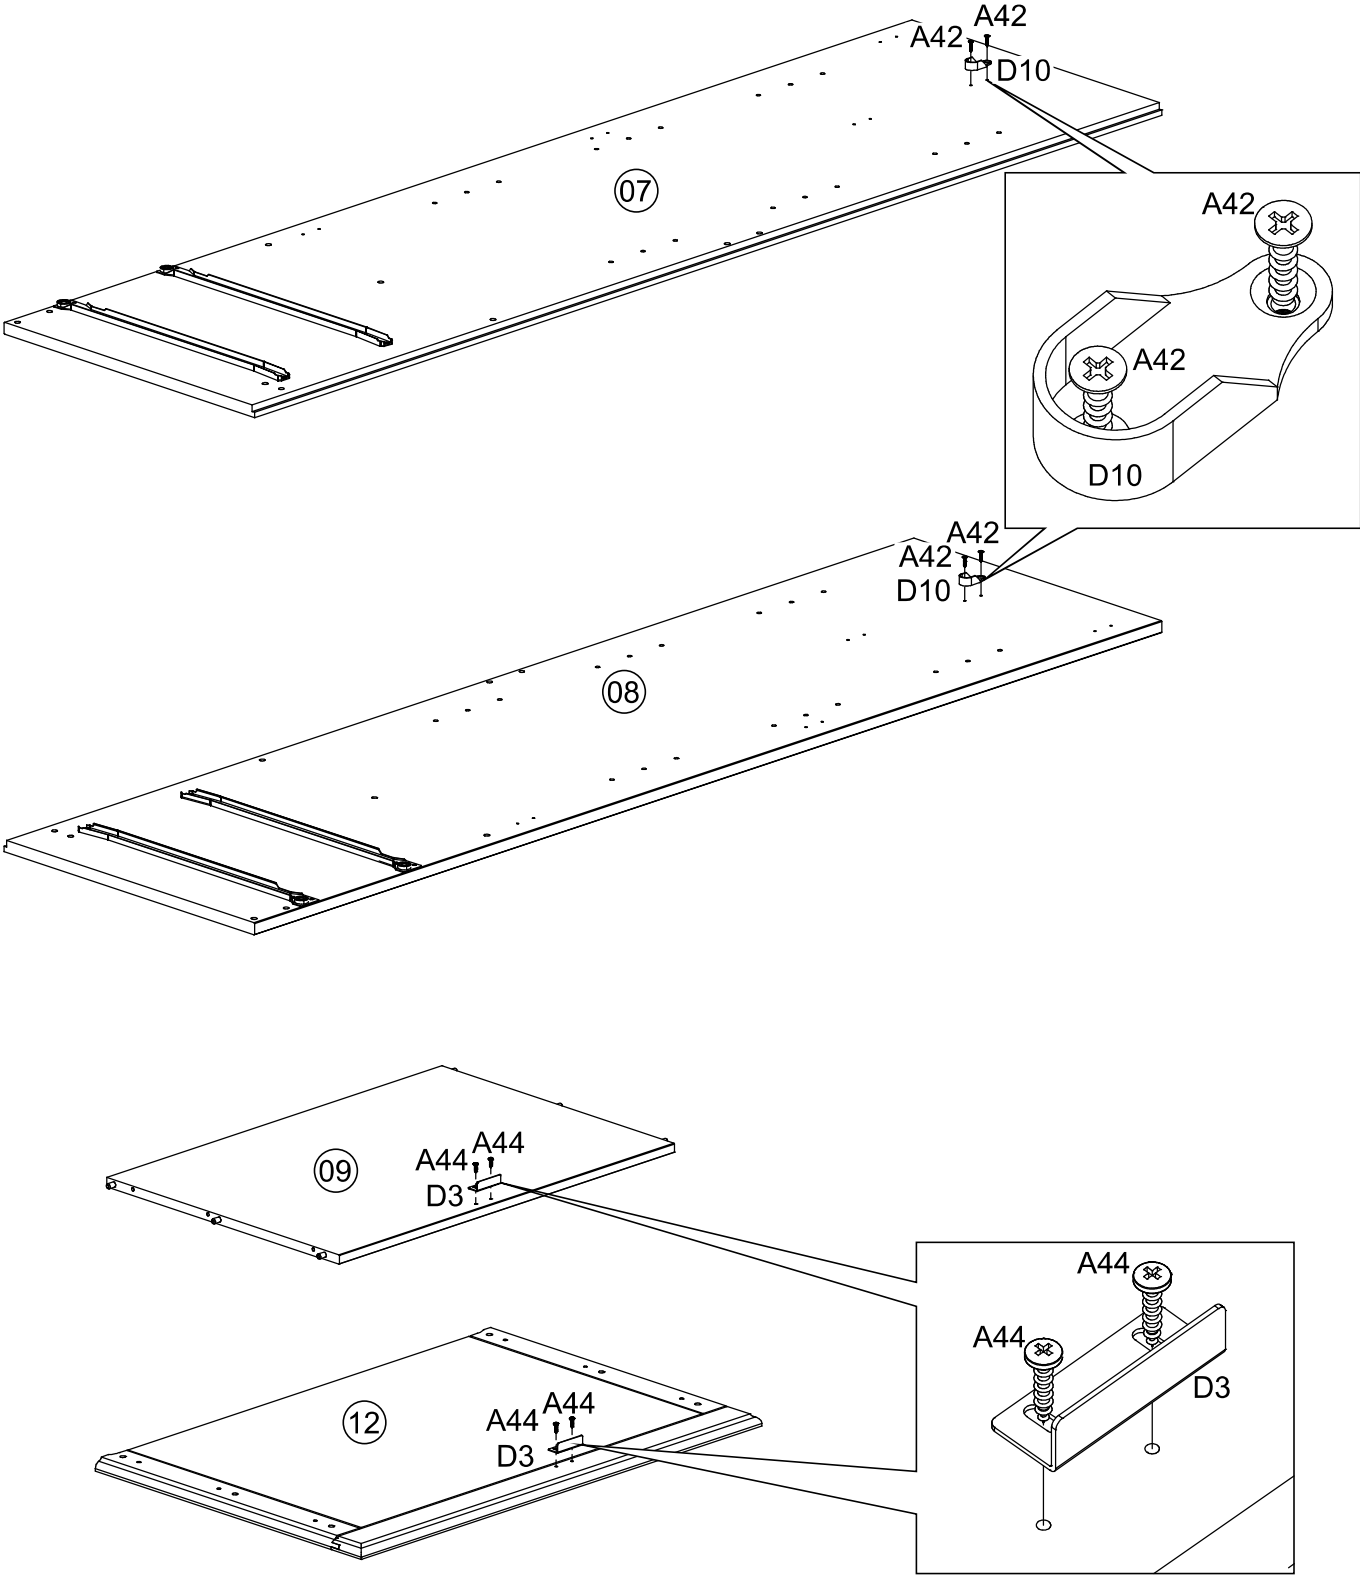


A42	 4,0x14	04	D3		02
A44	 3,5x14	04	D10		02



03)

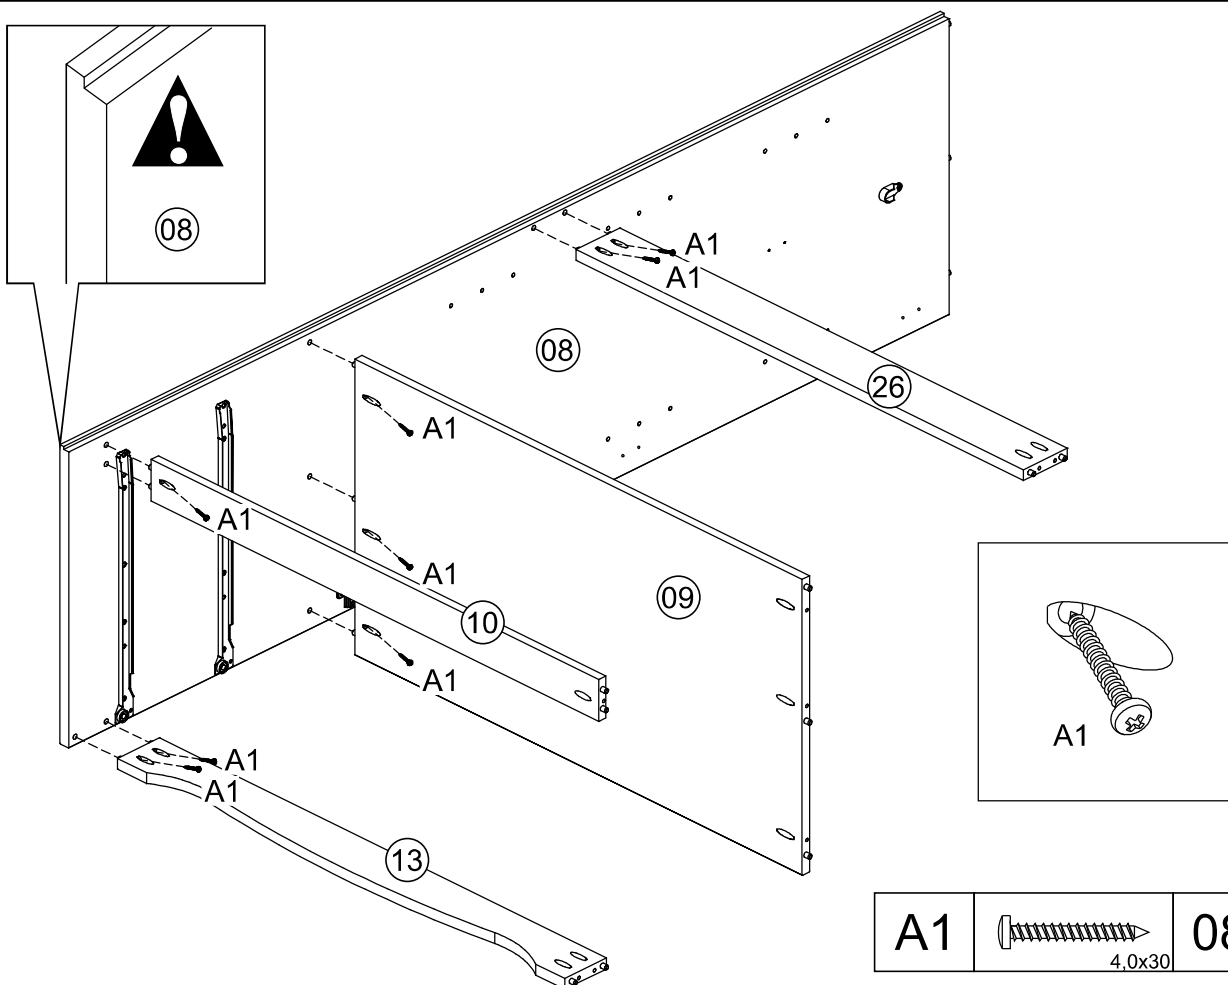




04)

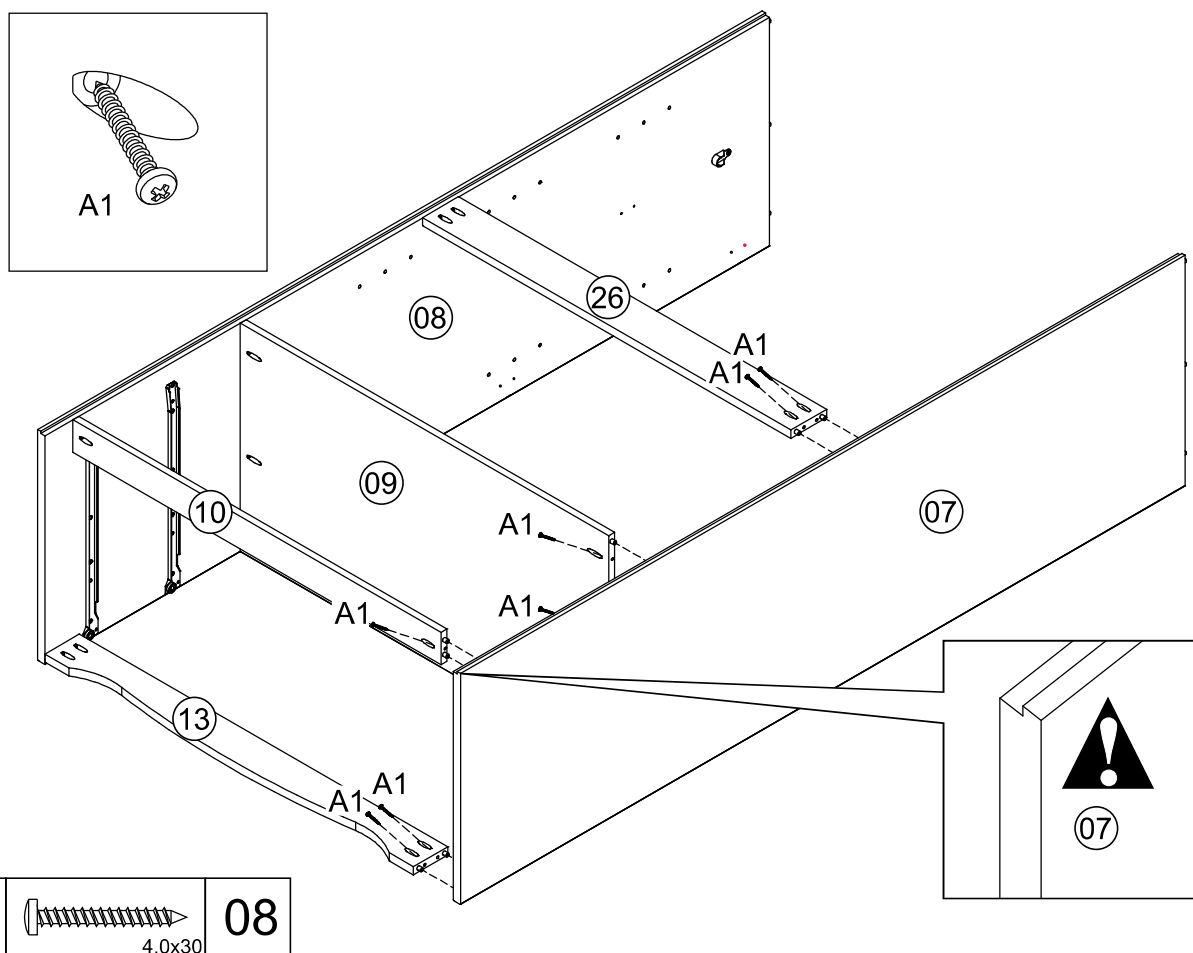

05)

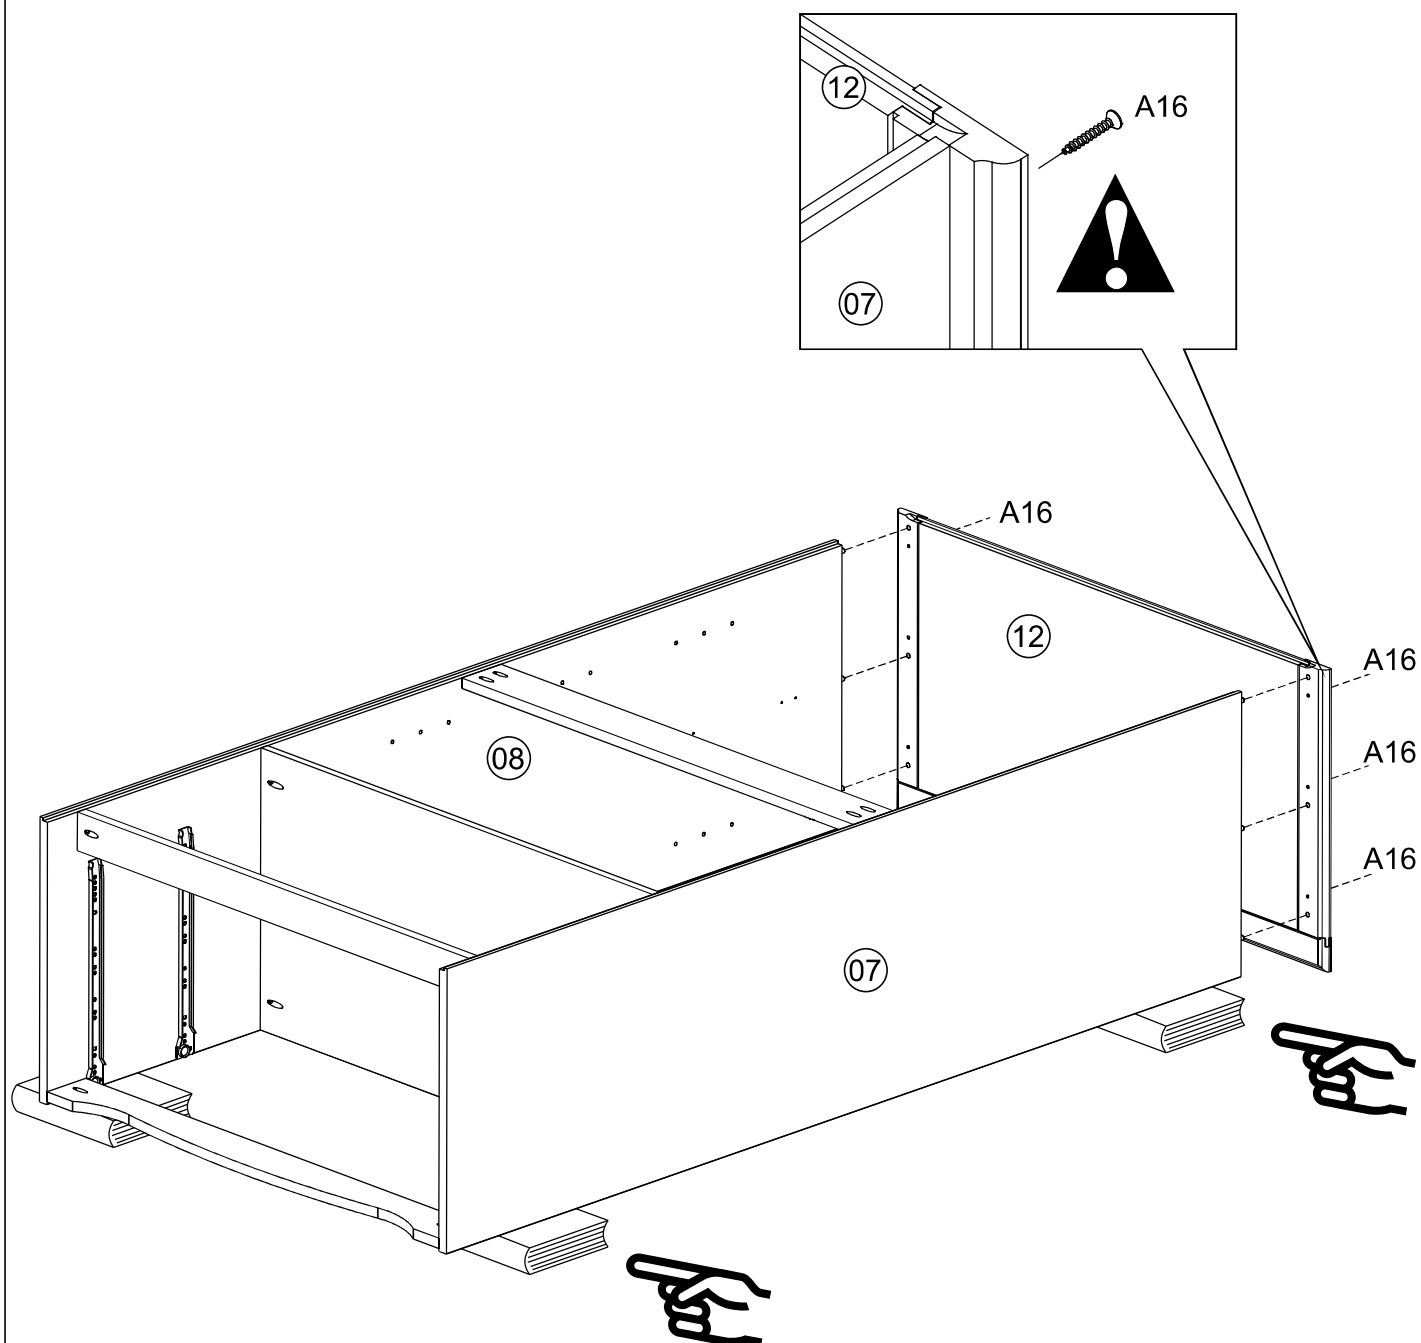


06)

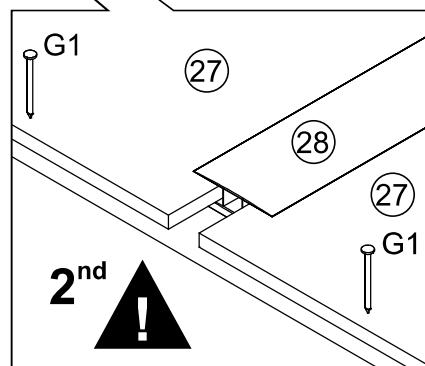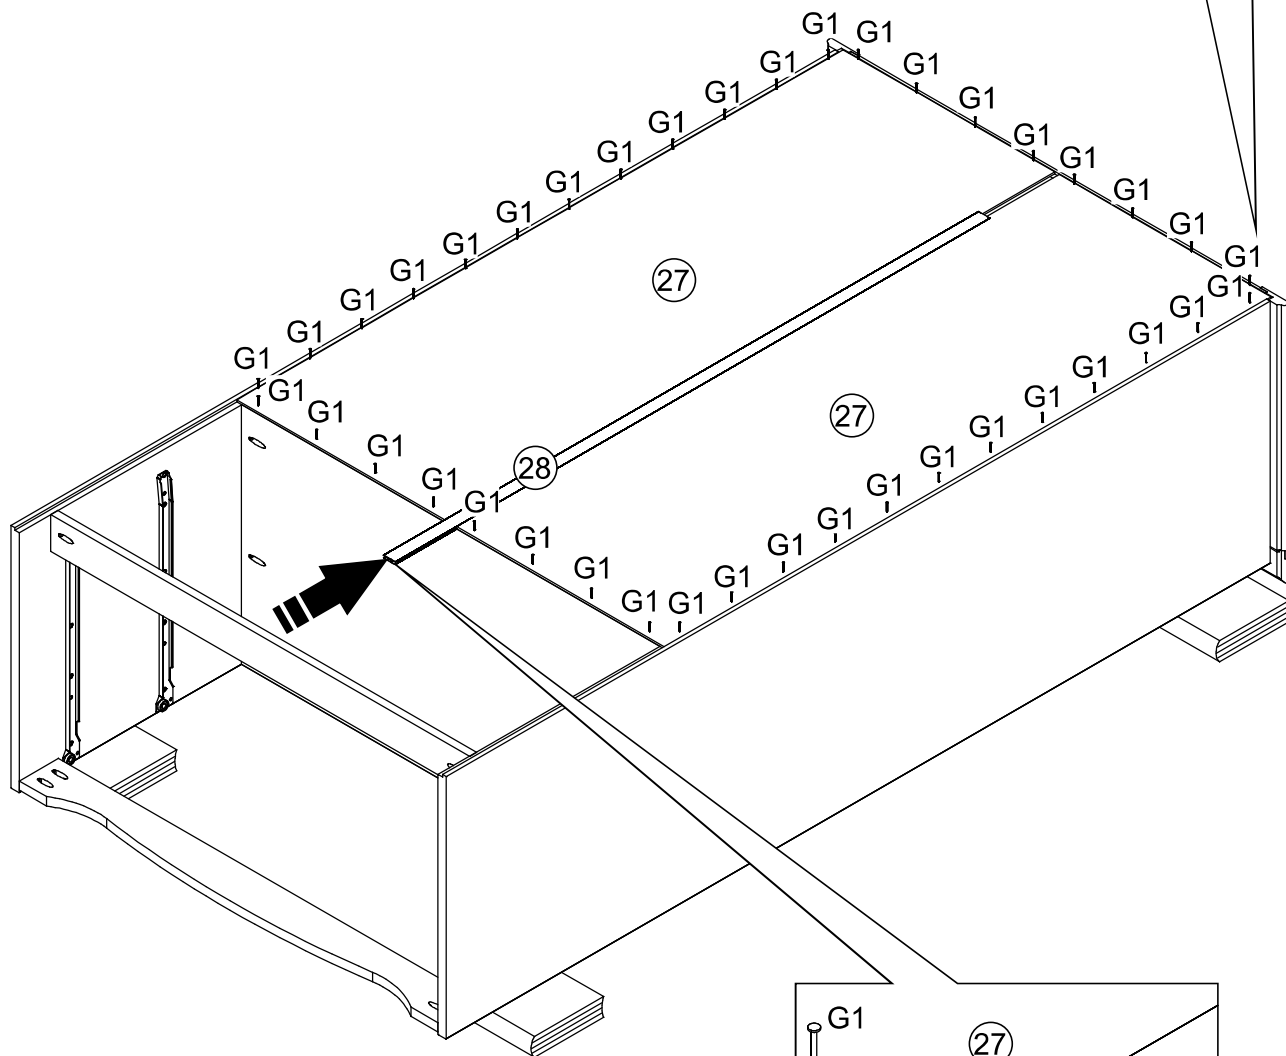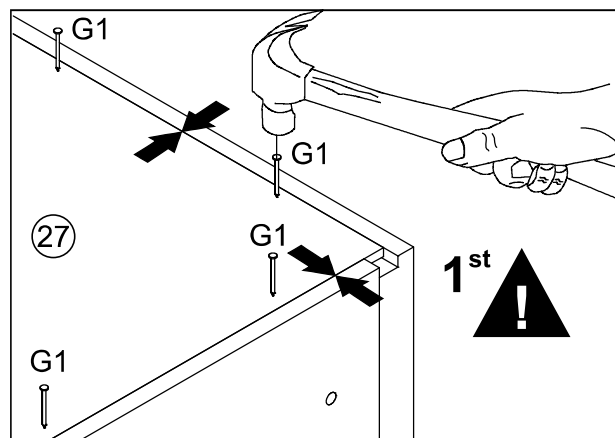


G1		40
	10x10	

07)

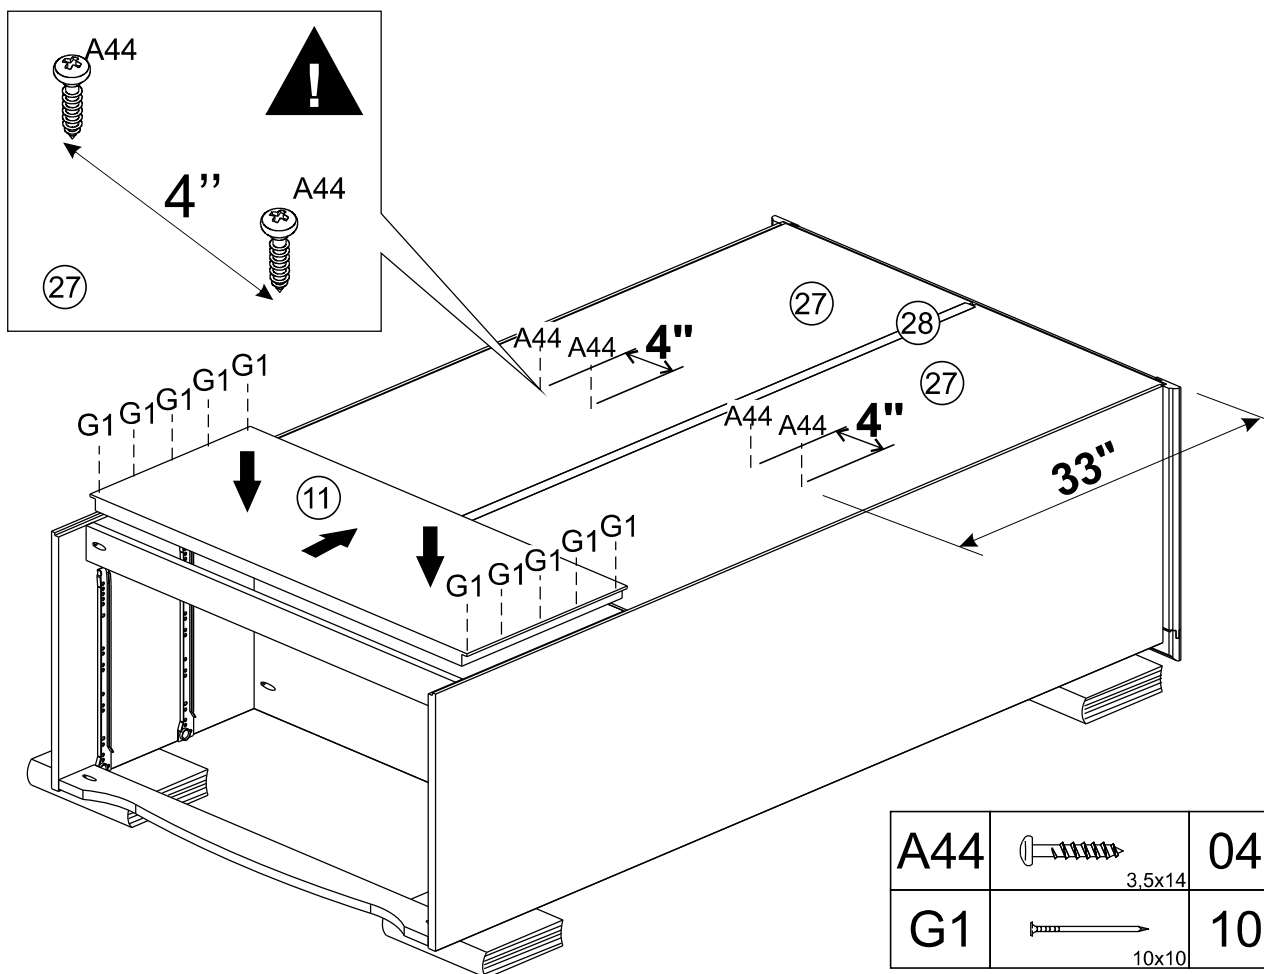


08)

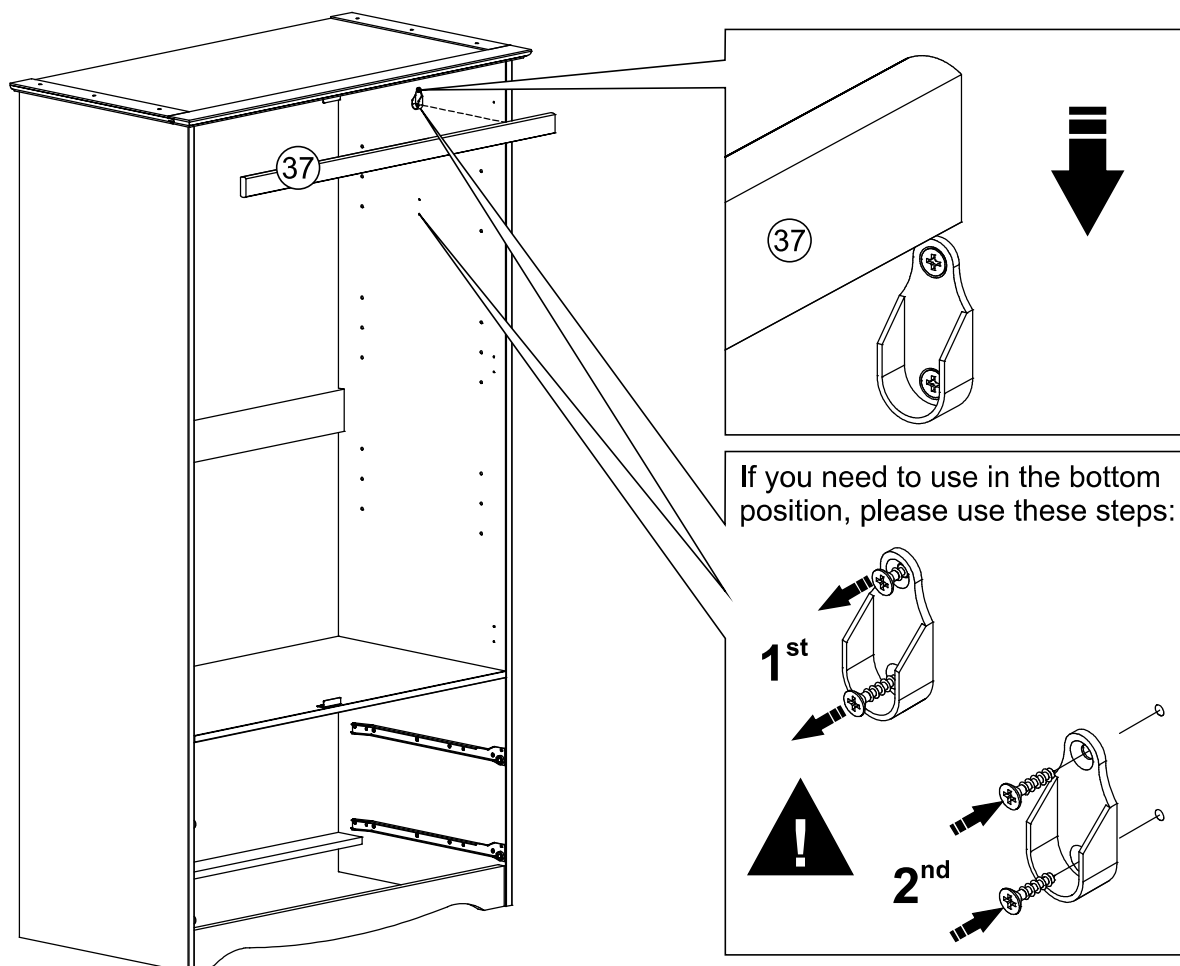



09)



Attach hinge (F10) to hinge plate if it comes separated.

Push hinge against plate until it clicks.

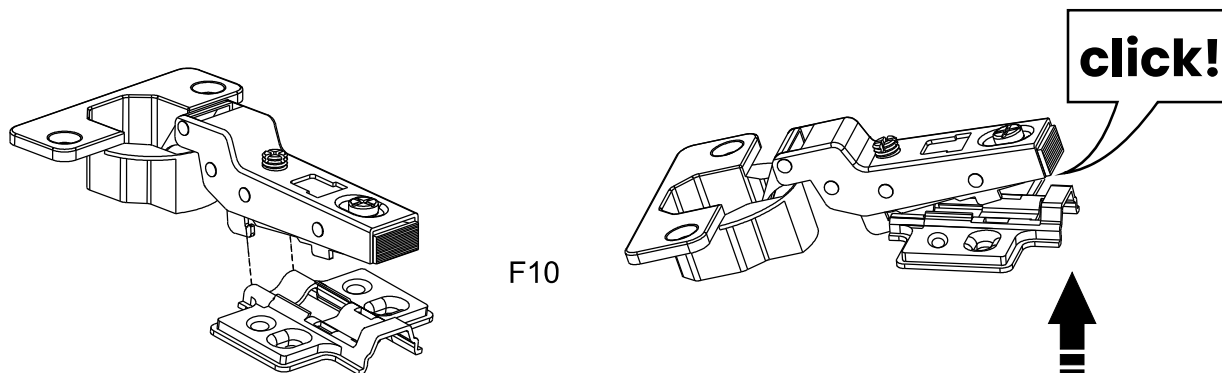


10)

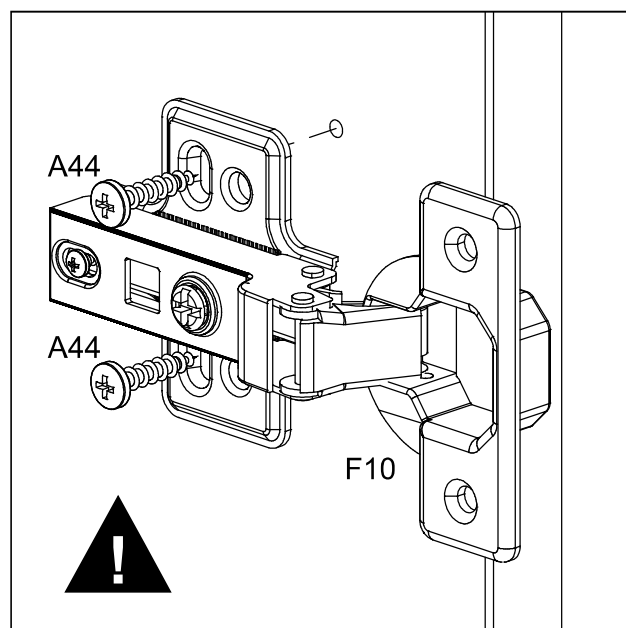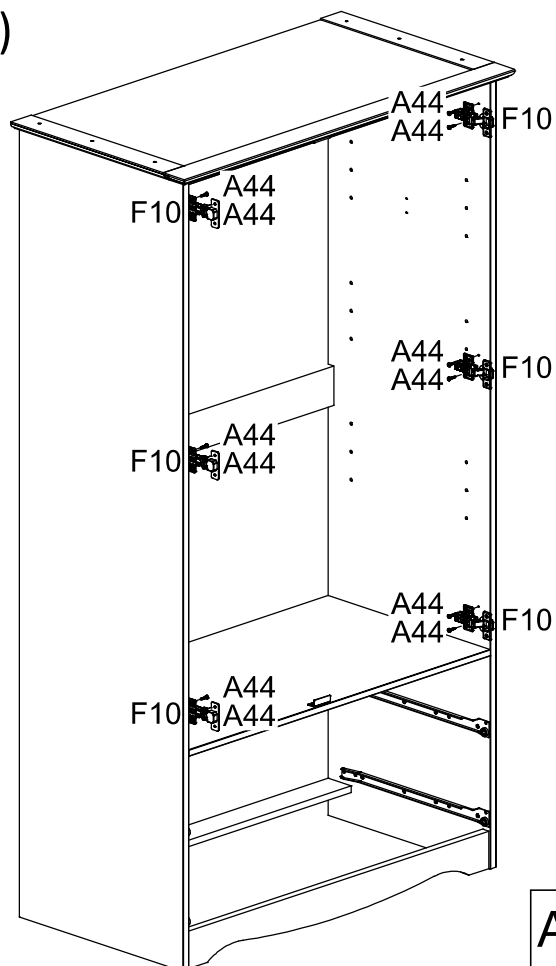


A44		12	F10		06
-----	---	----	-----	---	----


3,5x14


11)

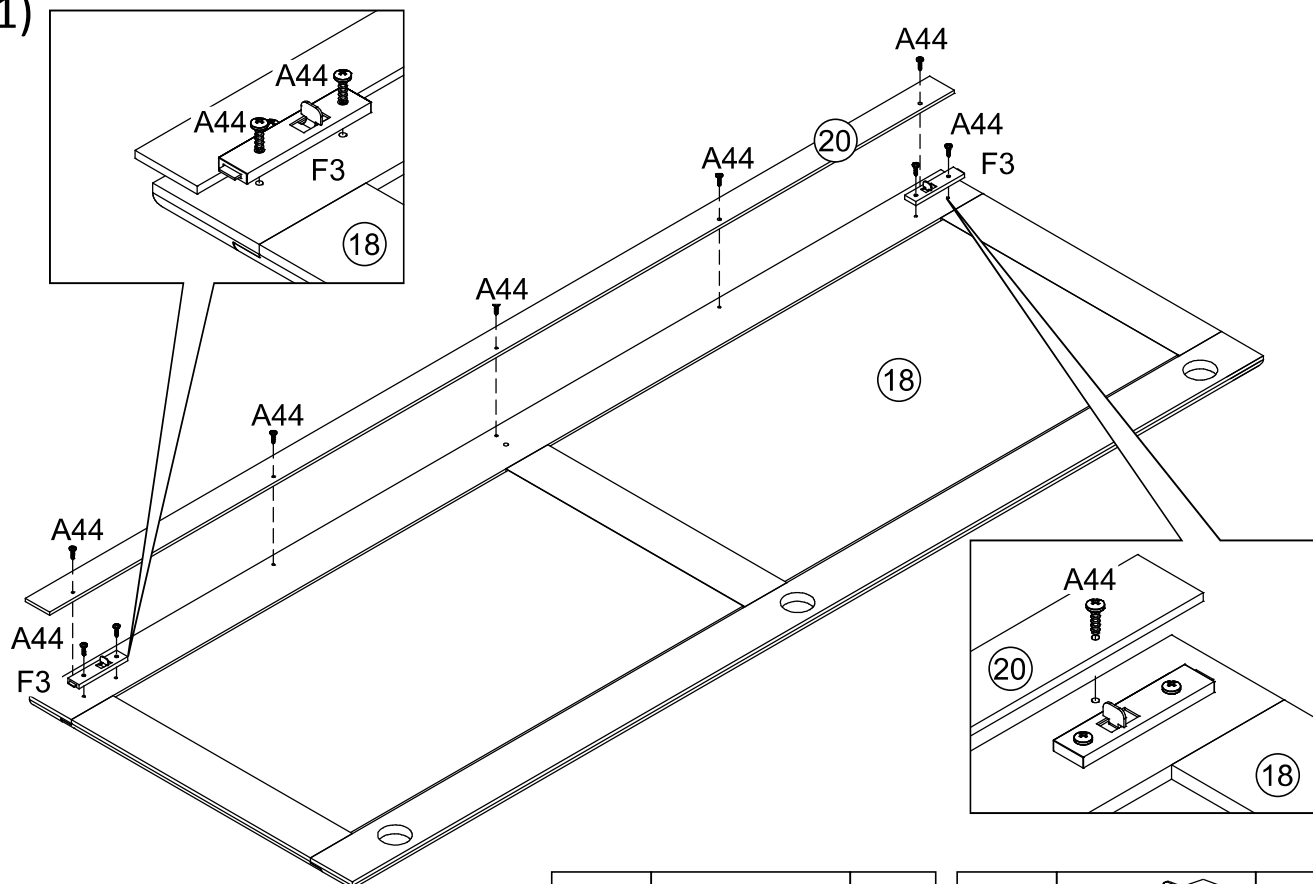




A44		09	F3		02
	3,5x14				

12)

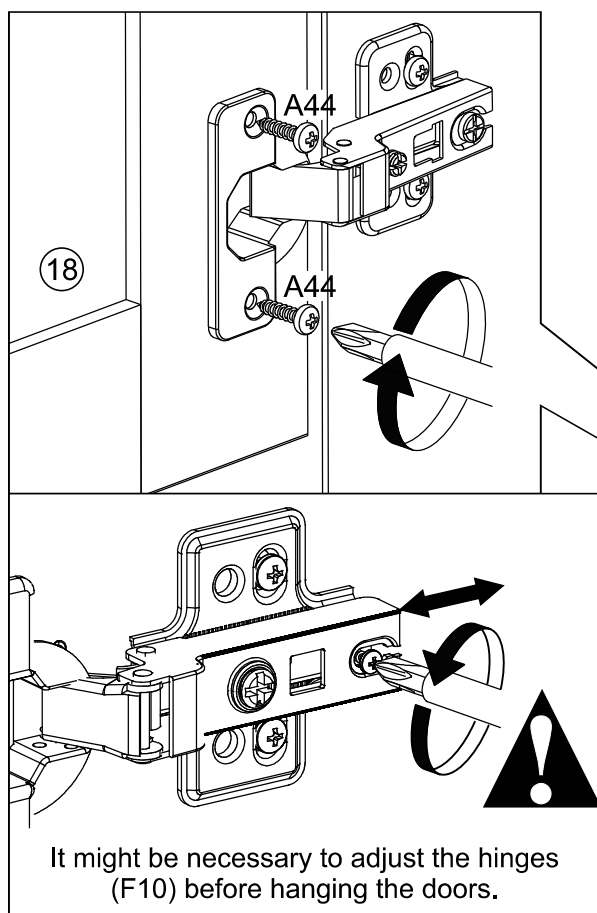


A44		06
	3,5x14	




13)

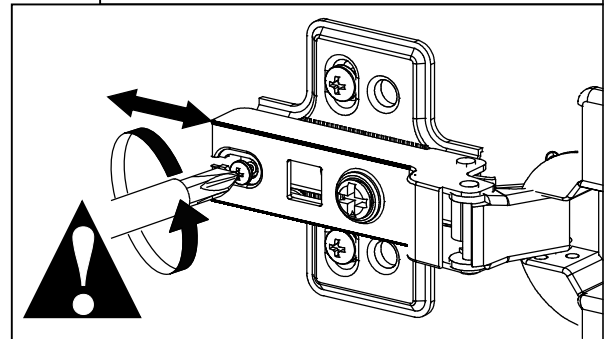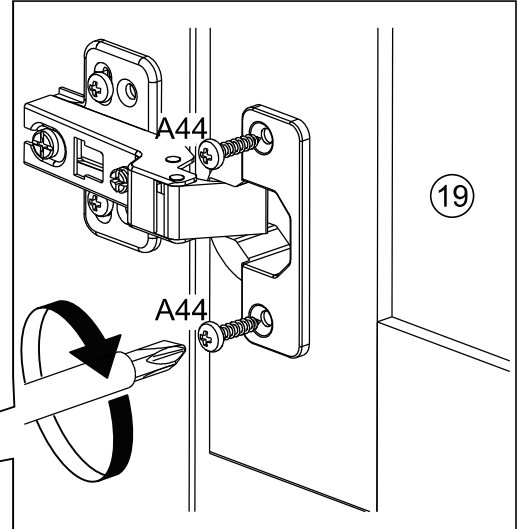
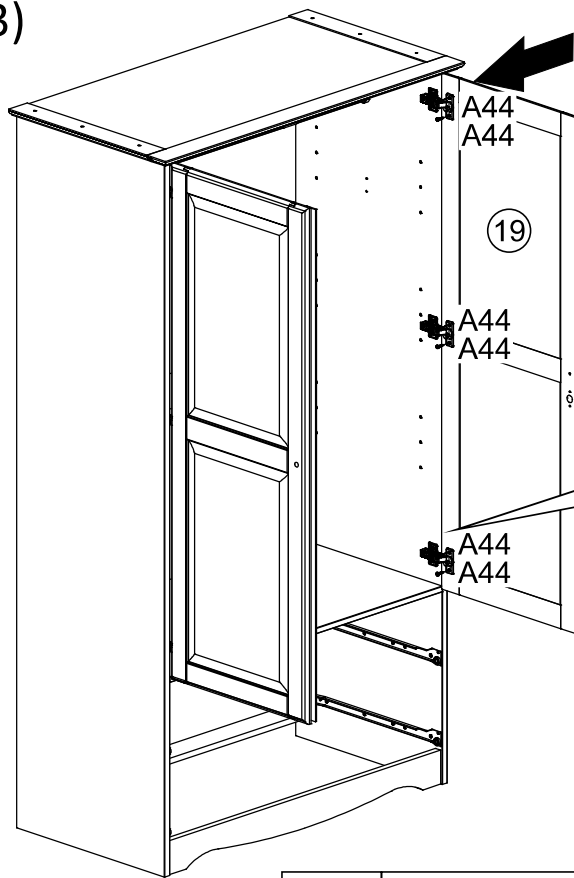


It might be necessary to adjust the hinges (F10) before hanging the doors.












A44		06
3.5x14		

14)

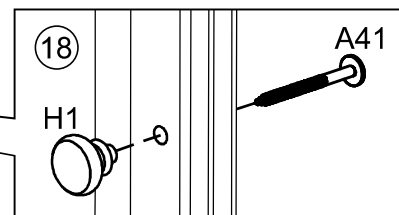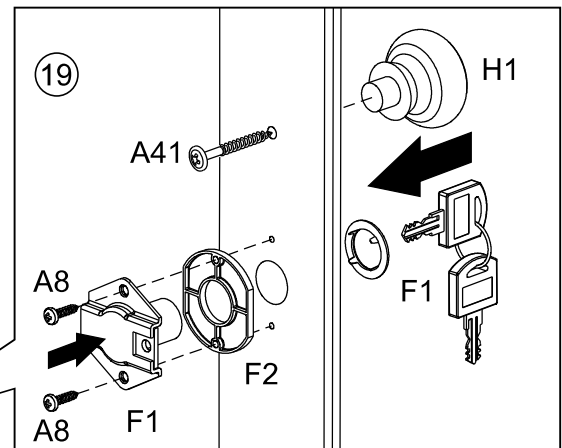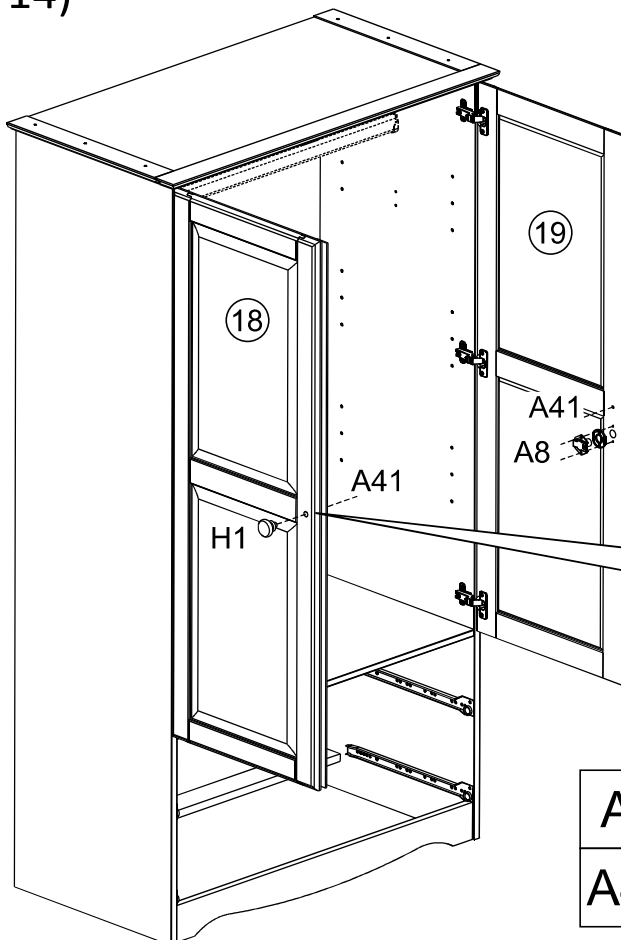






A8		02
3.0x20		
A41		02
4.0x30		



F1		01
F2		01
H1		02

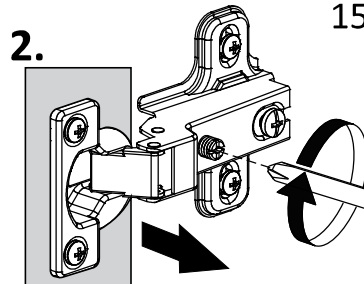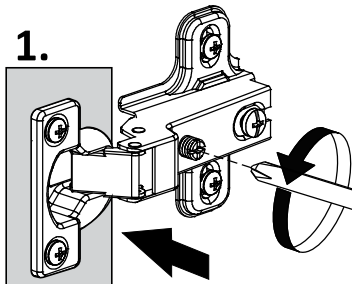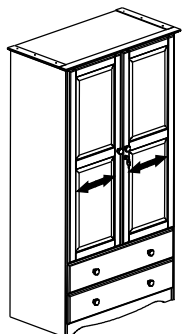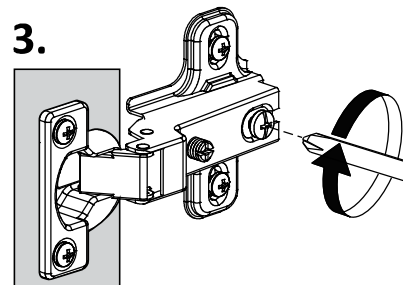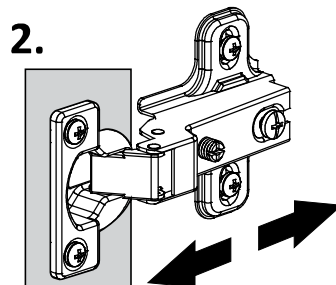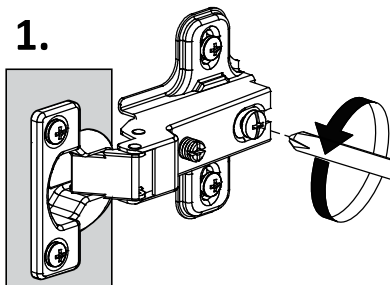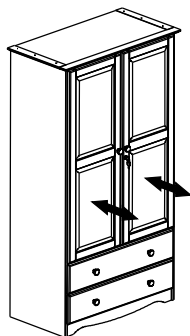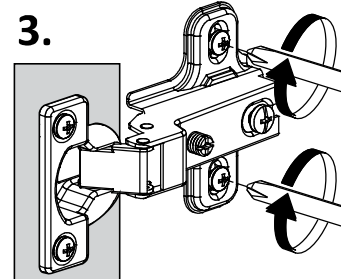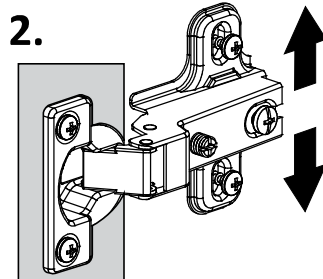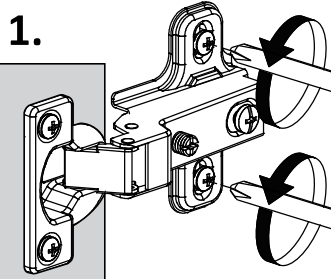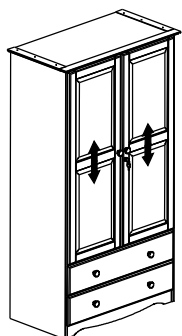




15) HINGE ADJUSTMENT GUIDE.



16) 2x

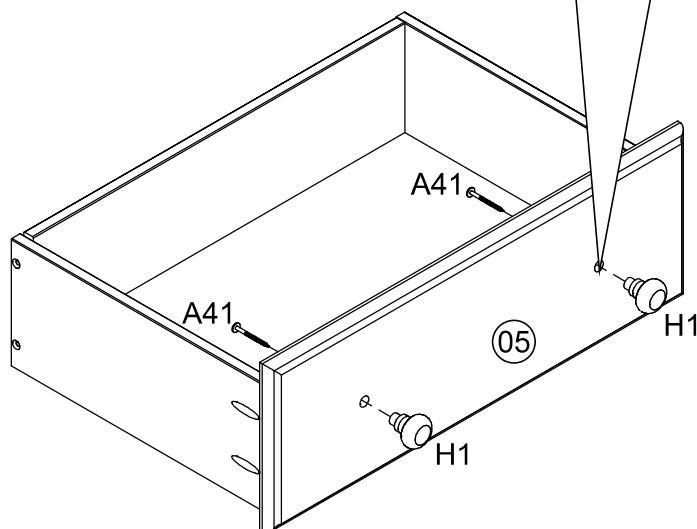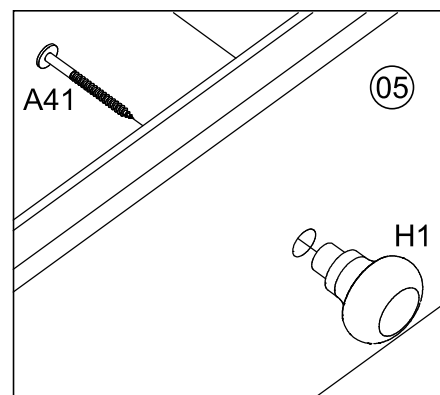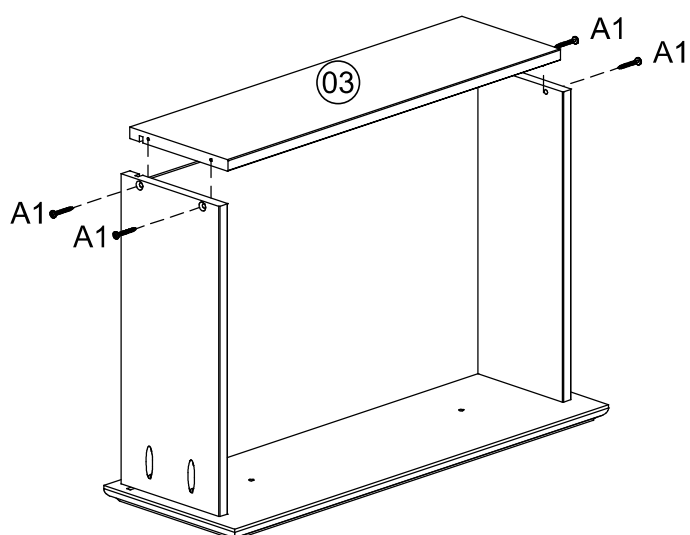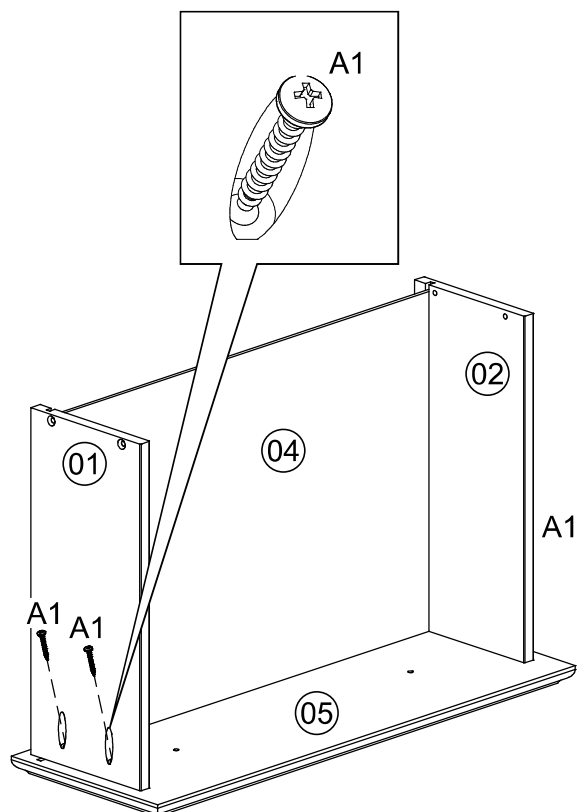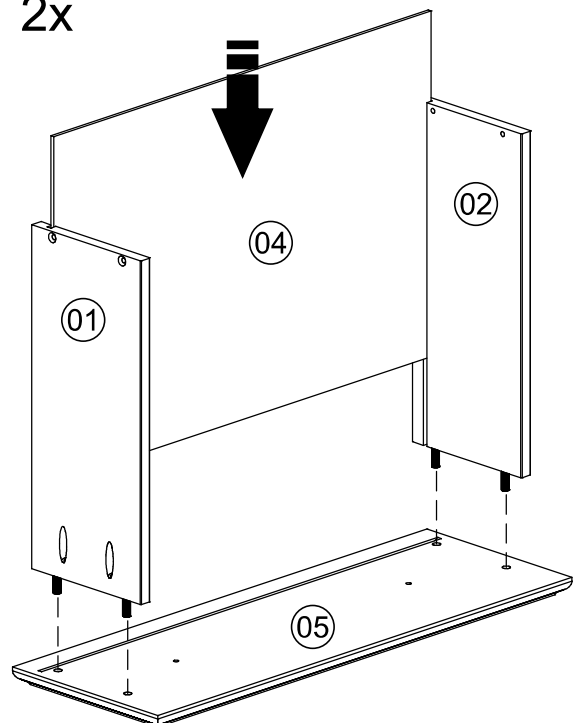


A1	 4.0x30	16
A41	 4.0x30	04
H1		04

17) 2x

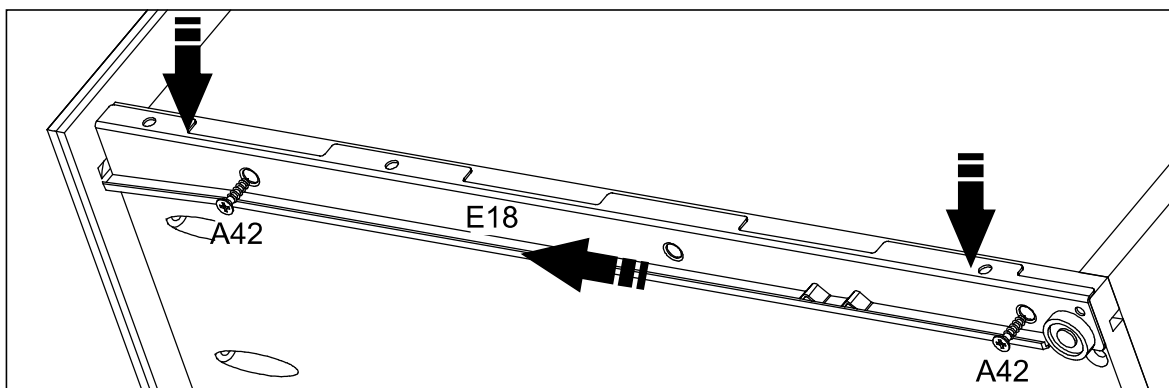
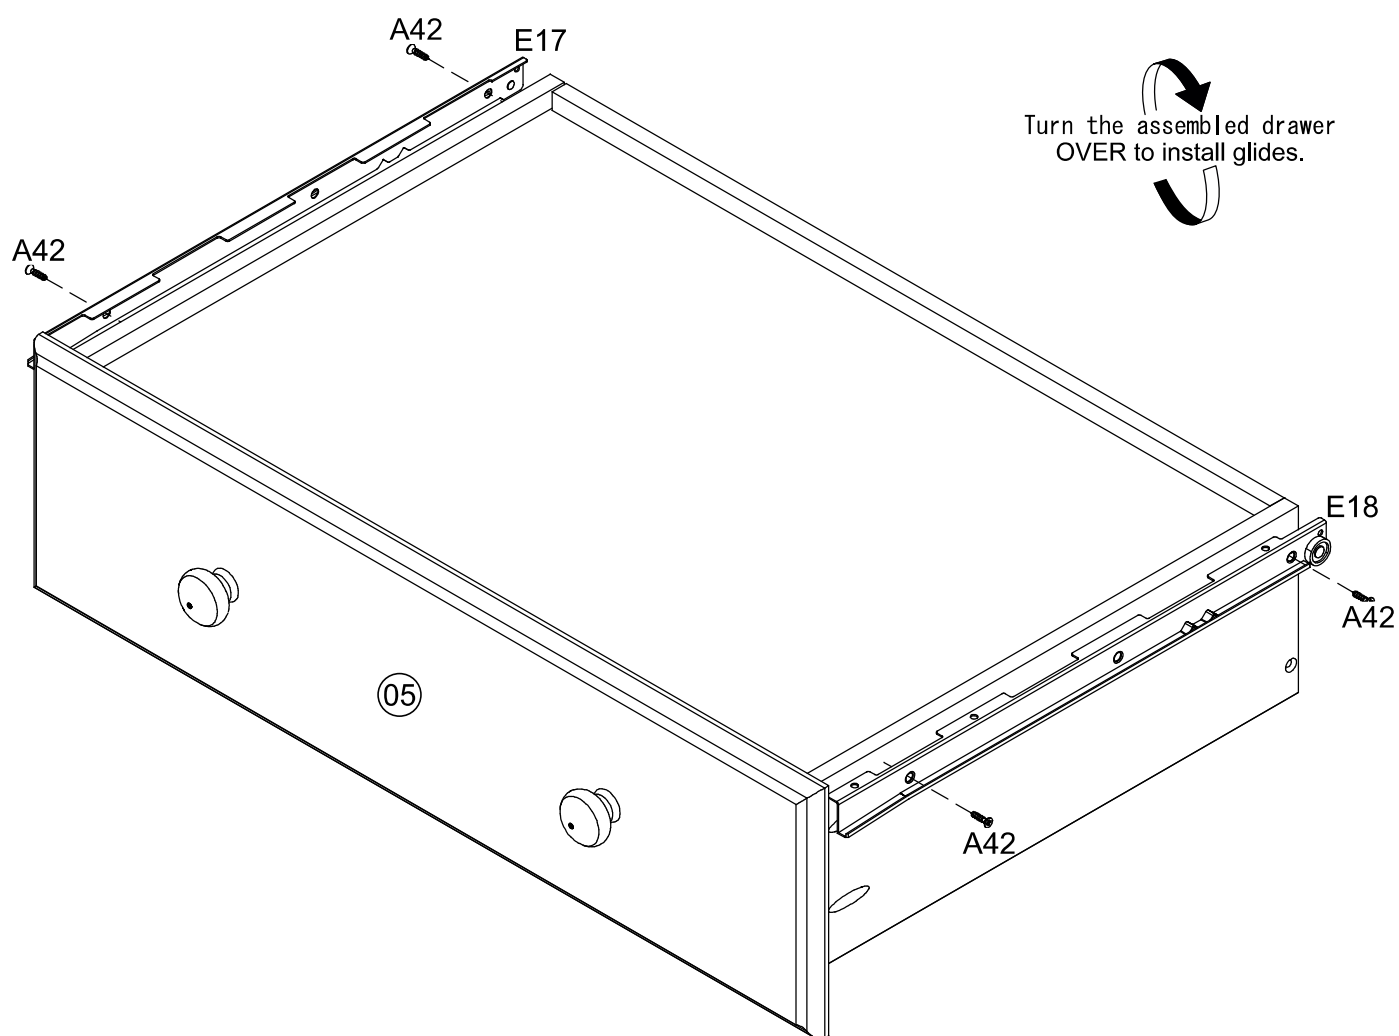
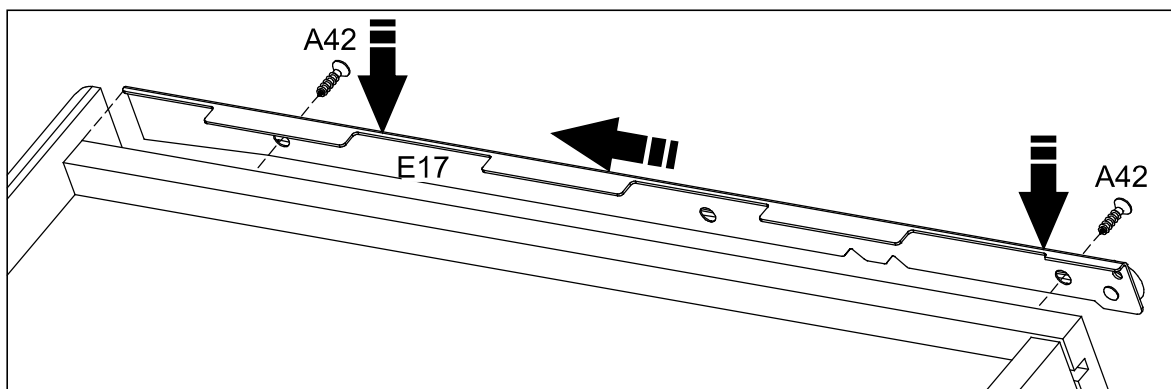


A42		08	E17		02	E18		02
	4.0x14			Drawer RIGHT 450mm - 17 3/4"			Drawer LEFT 450mm - 17 3/4"	

18)






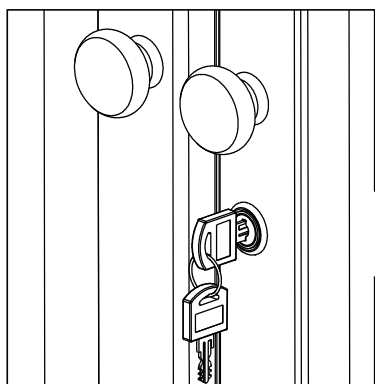


Place the labeled drawer at the top.

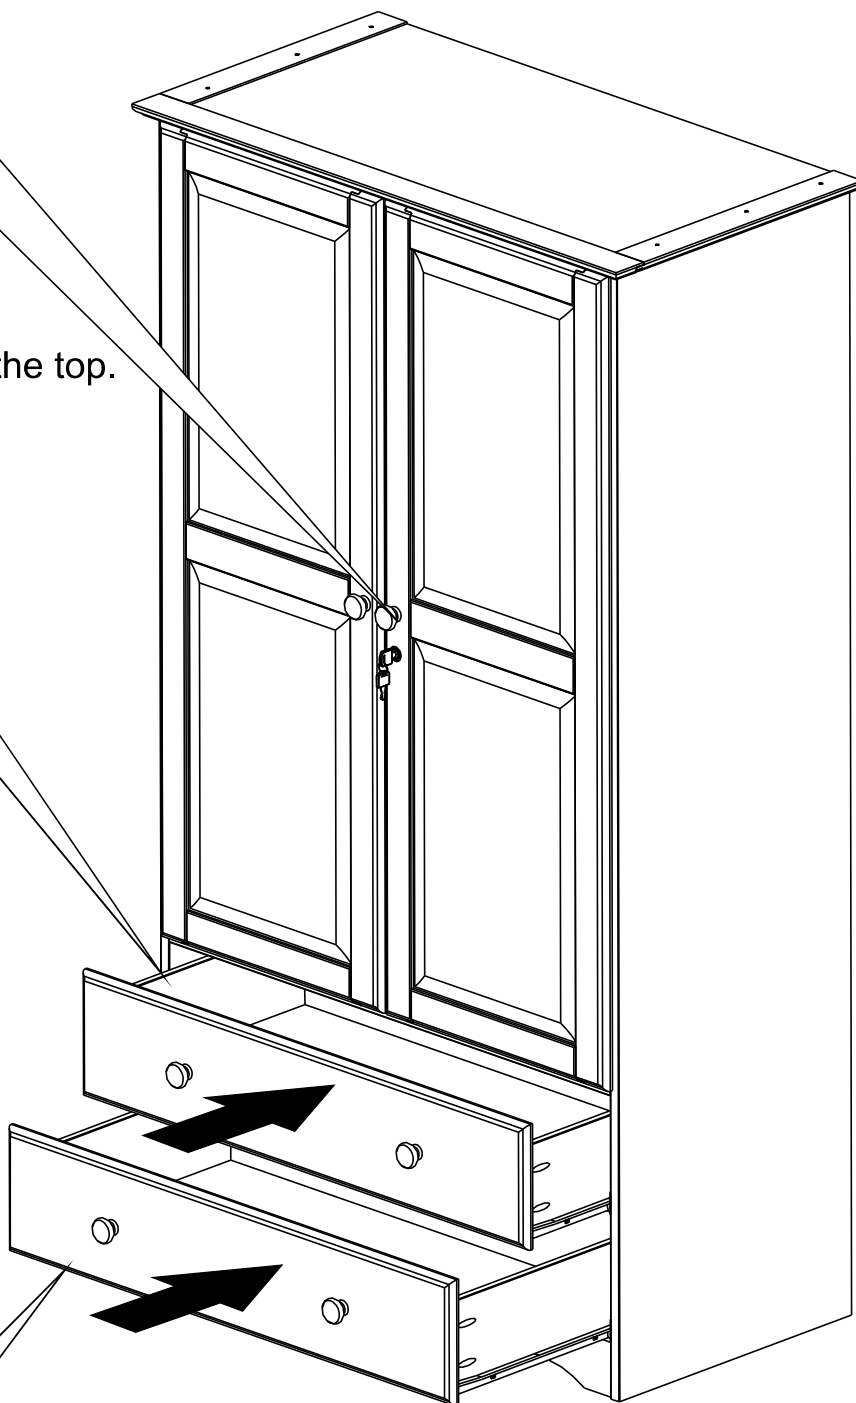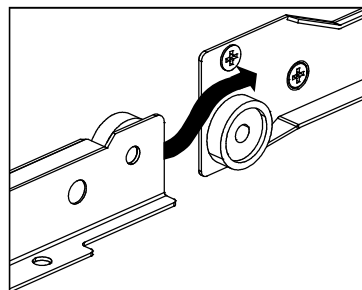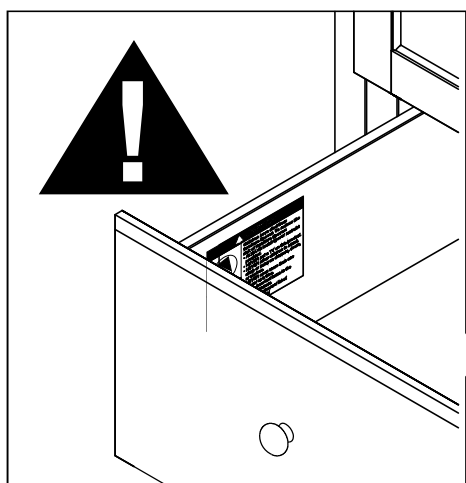

19)

FURNITURE TIPOVER PREVENTION KIT INSTALLATION

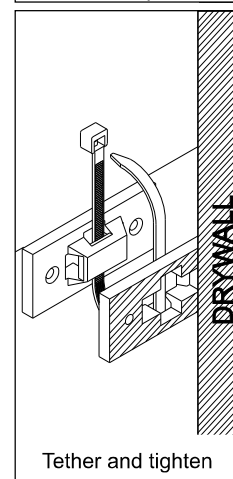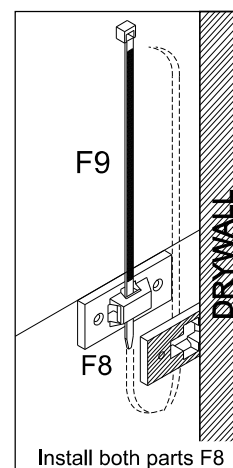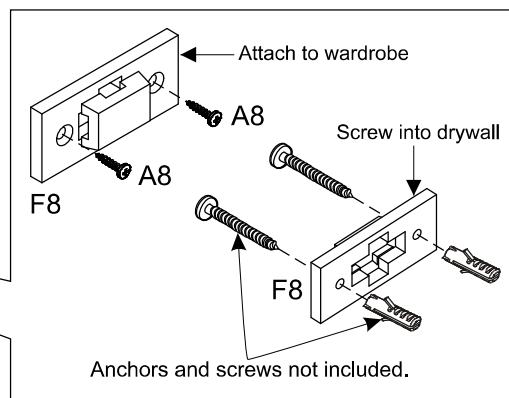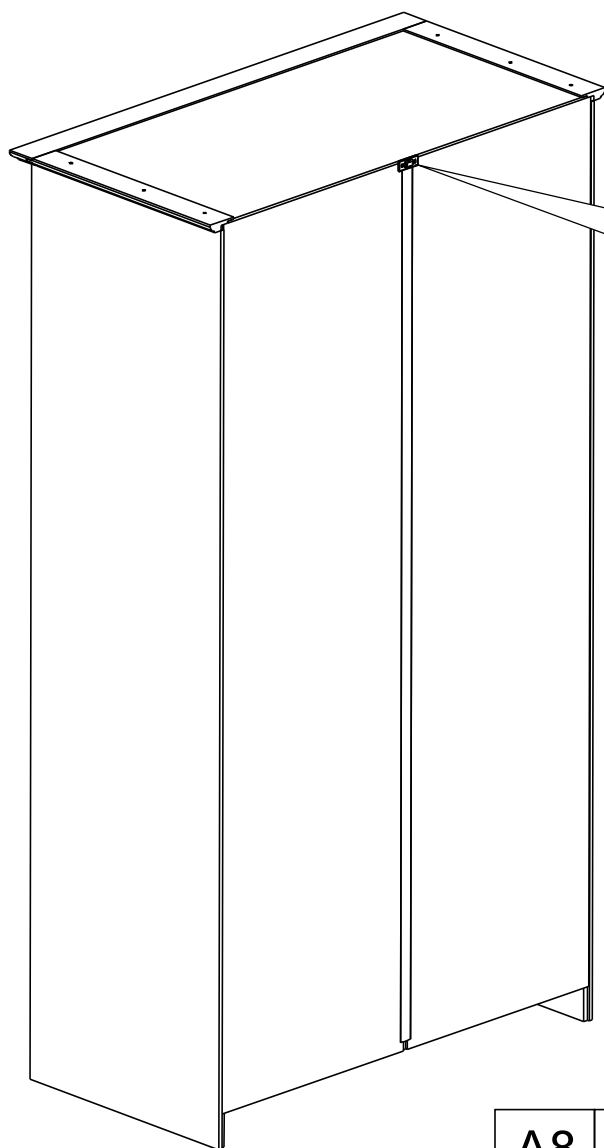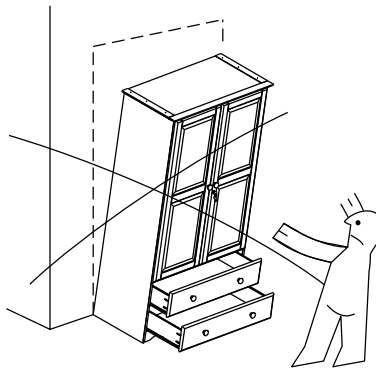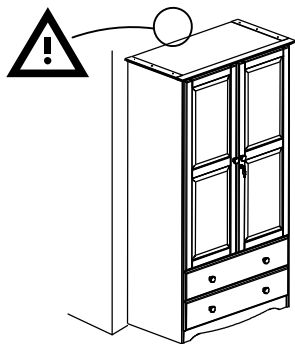

A8	 3.0x20	02
F8		02
F9		01