




FRG231

2018-01


SoBuy®

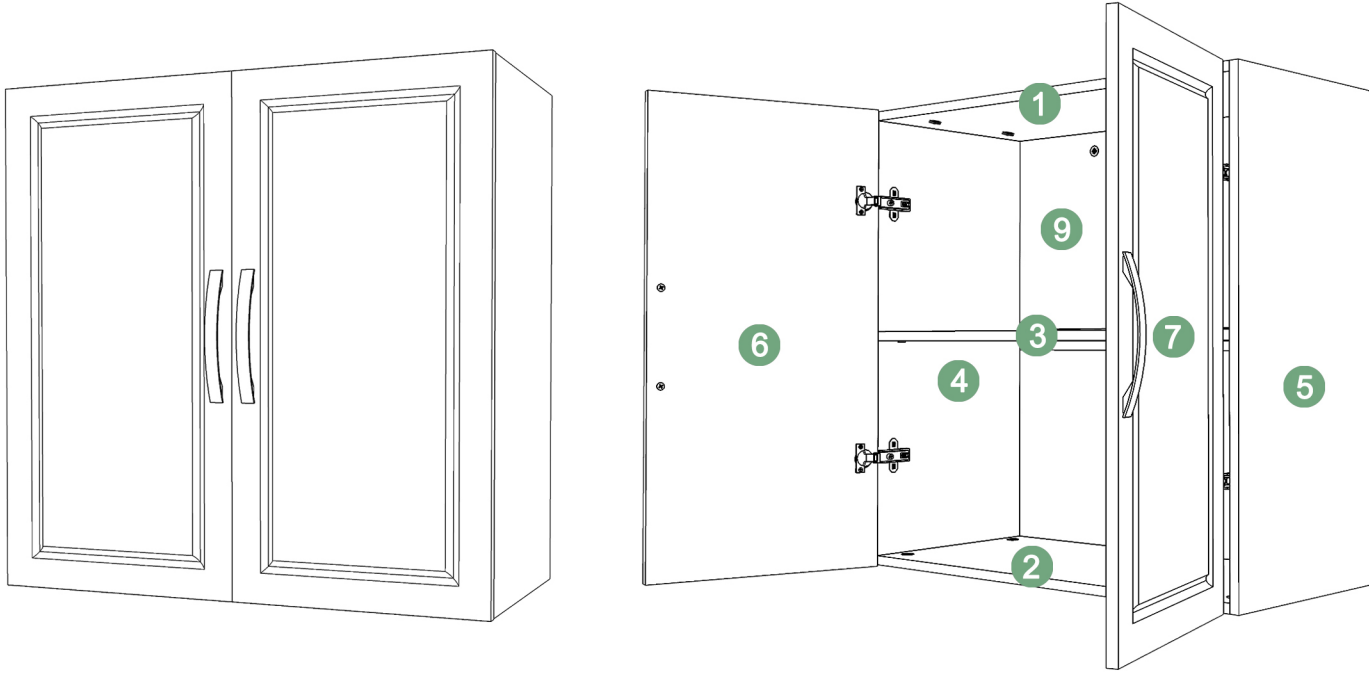

TOOLS:




UNIT:MM 1 2 3 4 5 6 7 8 9

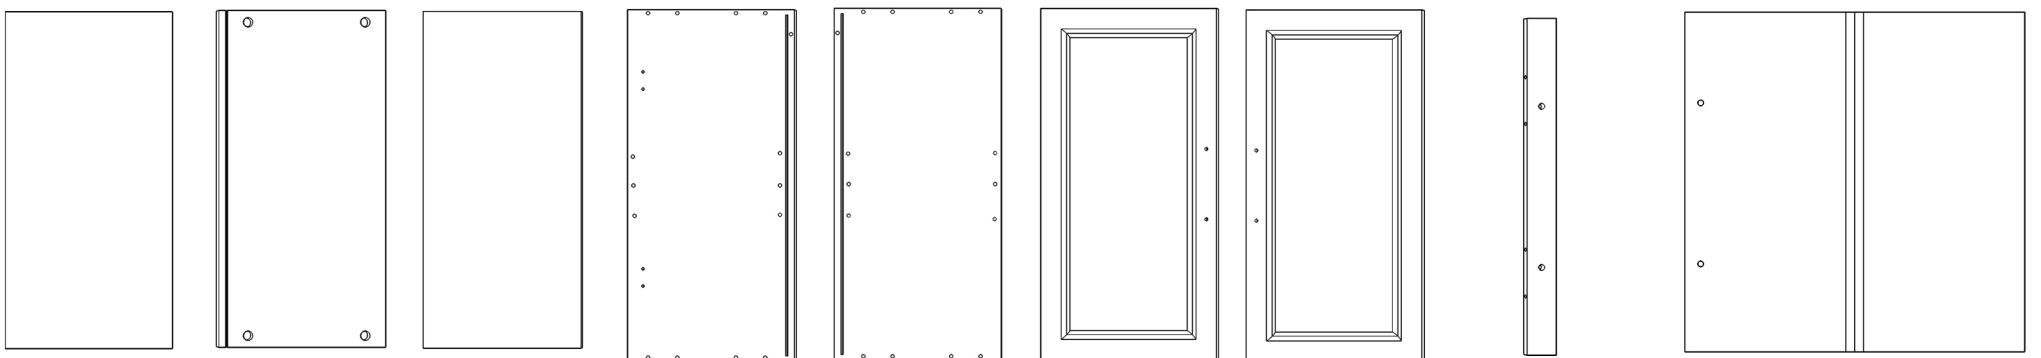

575×285×12 575×285×12 572×270×12 600×285×12 600×285×12 600×300×12 600×300×12 575×50×12 580×580×3



UNIT:MM A B C D E F G H J K L M N

×12 ×10 ×10 ×4 ×2 ×4 ×16 ×2 ×4 ×4 ×4 ×4 ×4 ×2

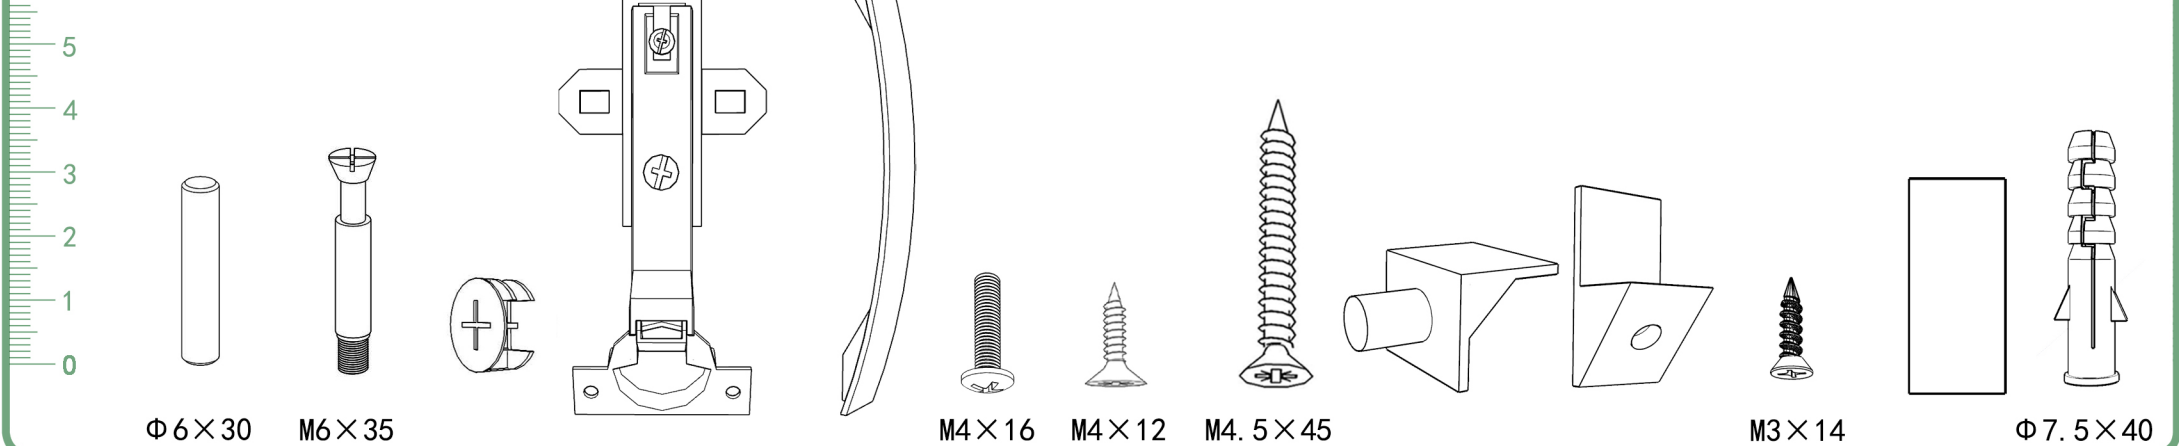


Φ6×30 M6×35 M4×16 M4×12 M4.5×45 M3×14 Φ7.5×40


BOLT INSTALLATION AS BELOW:

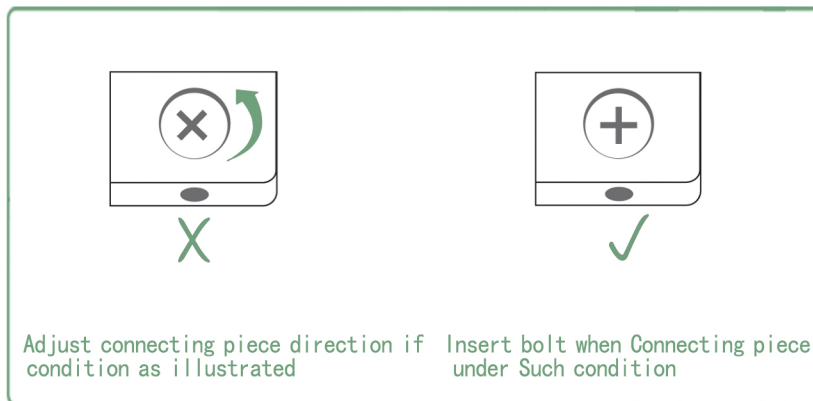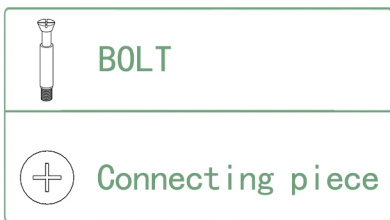

Adjust connecting piece direction if condition as illustrated Insert bolt when Connecting piece under Such condition







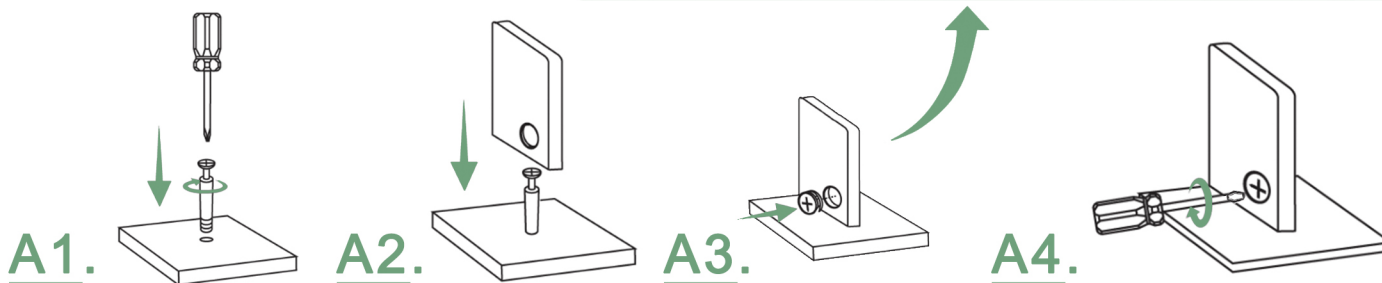


BACKPLATE BUCKLE INSTALLATION AS BELOW:

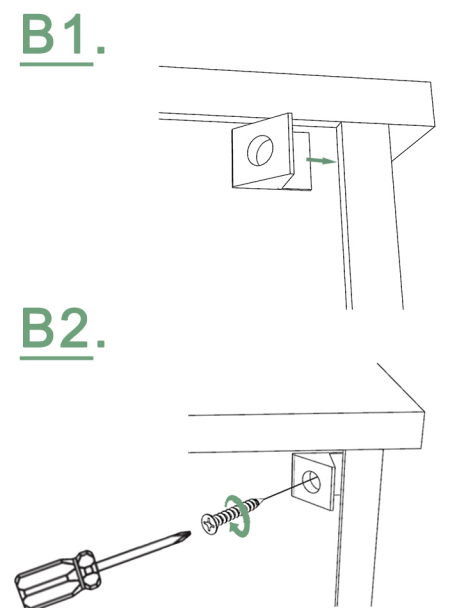


Pour en savoir plus: www.quefairedemesdechets.fr


Stand:08.2018

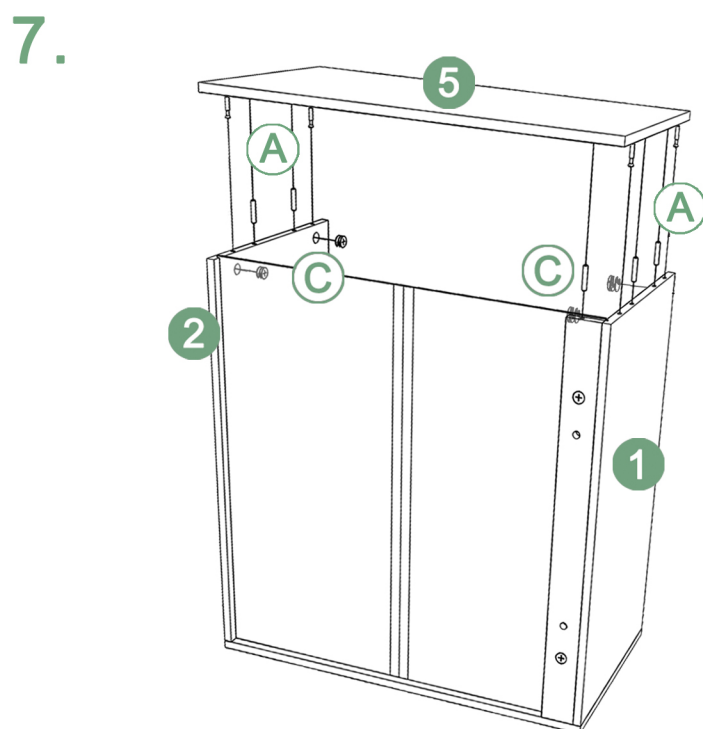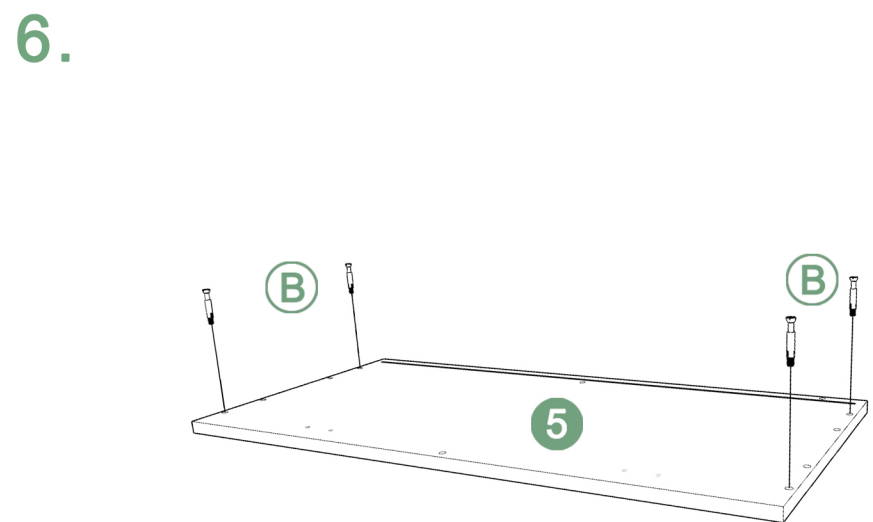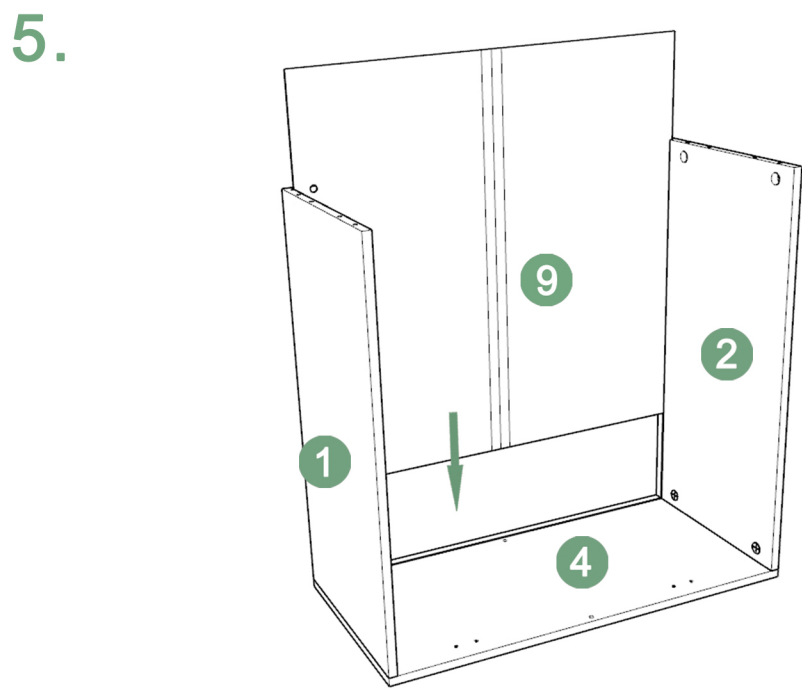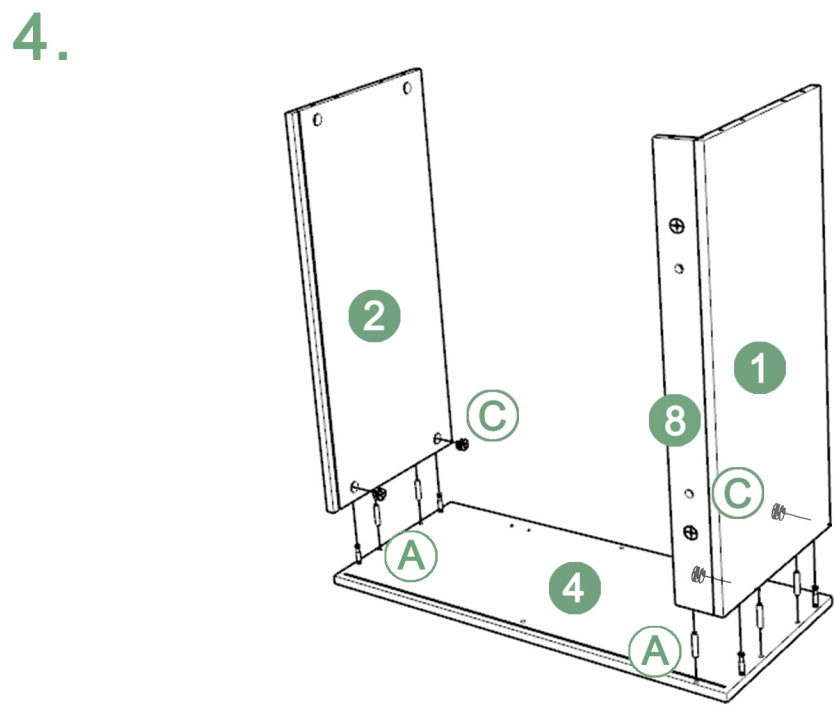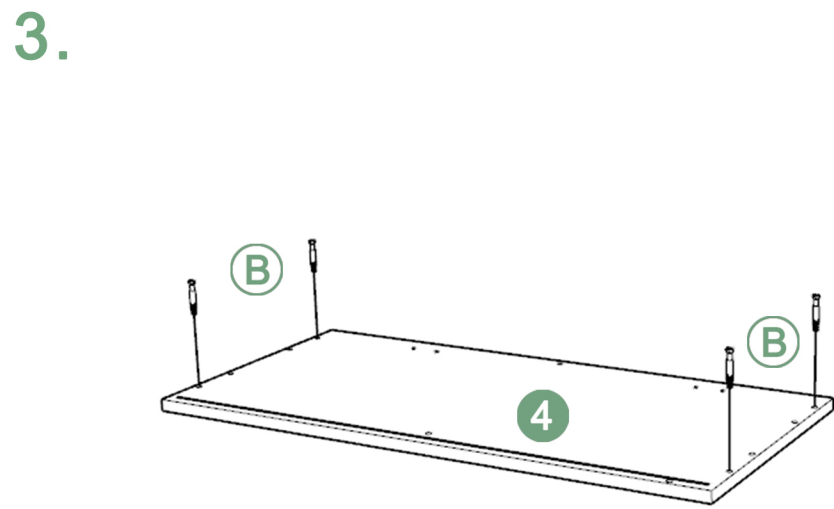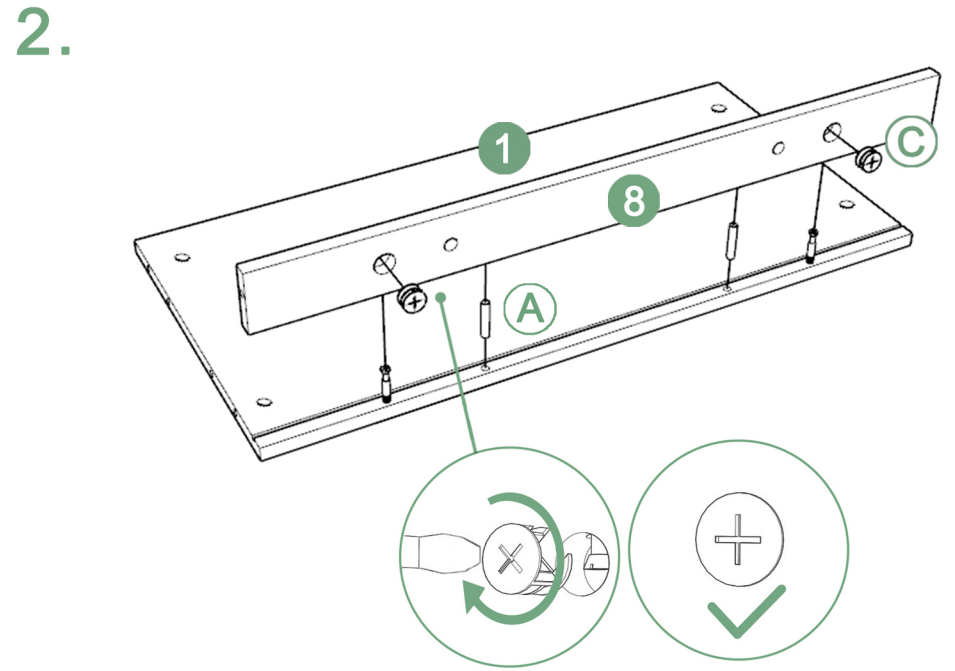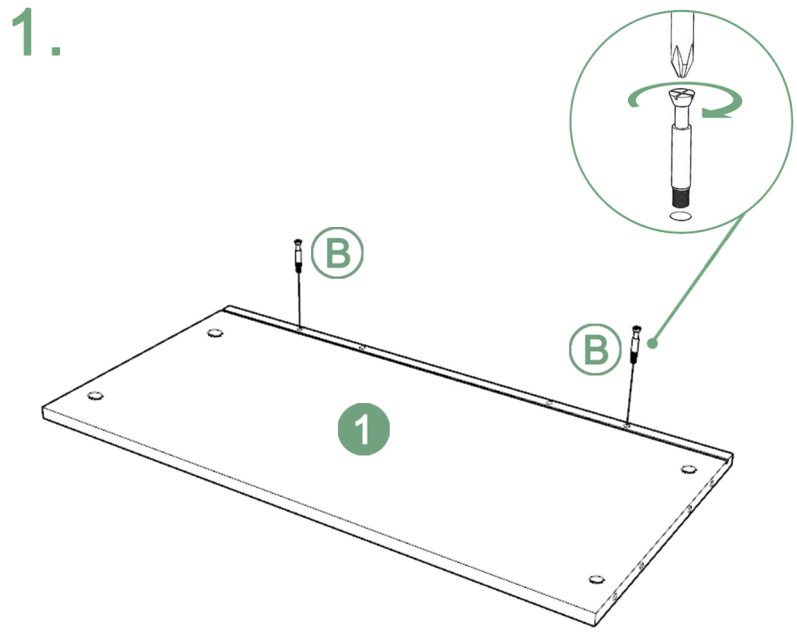


8.

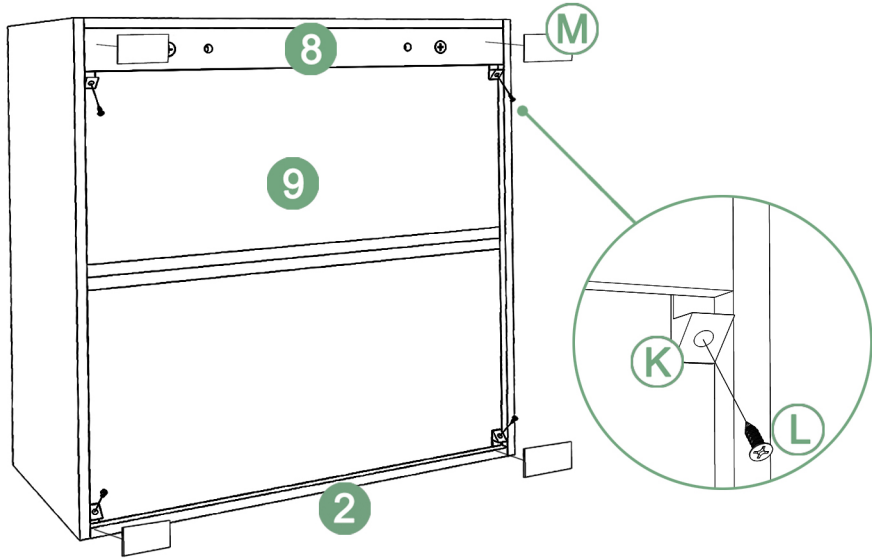


9.

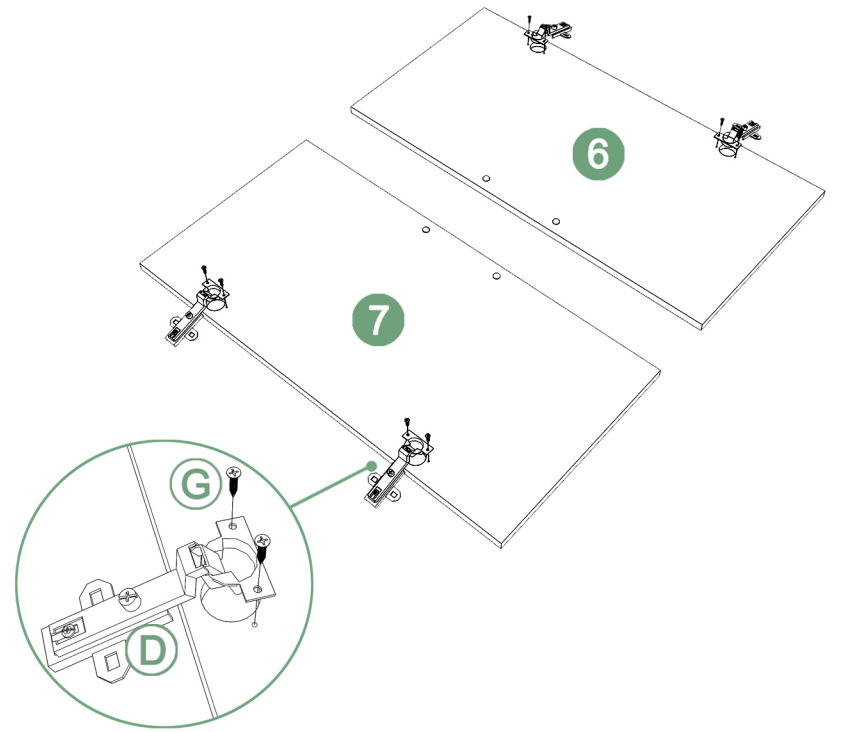


10.

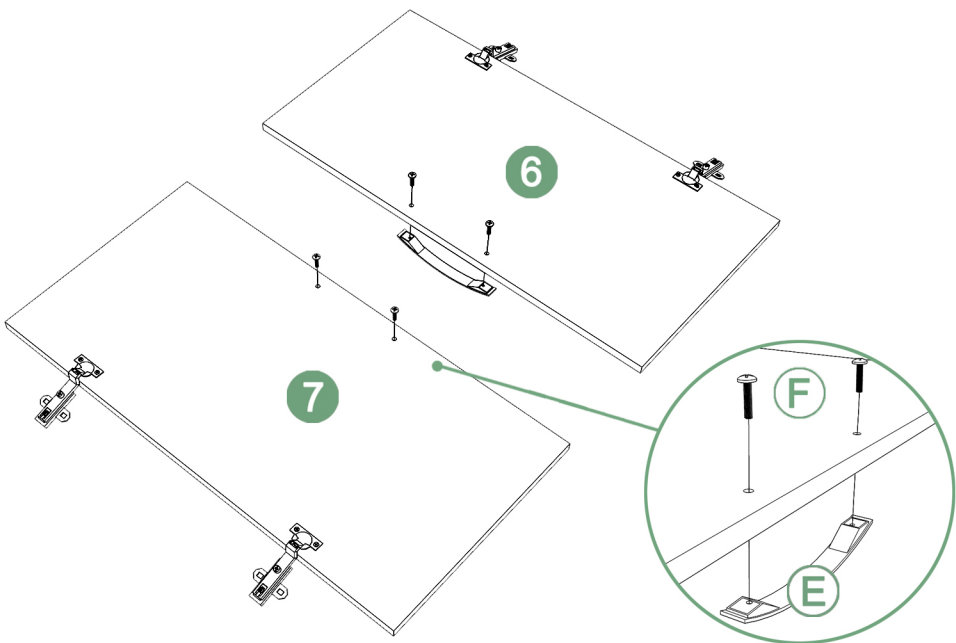

11.

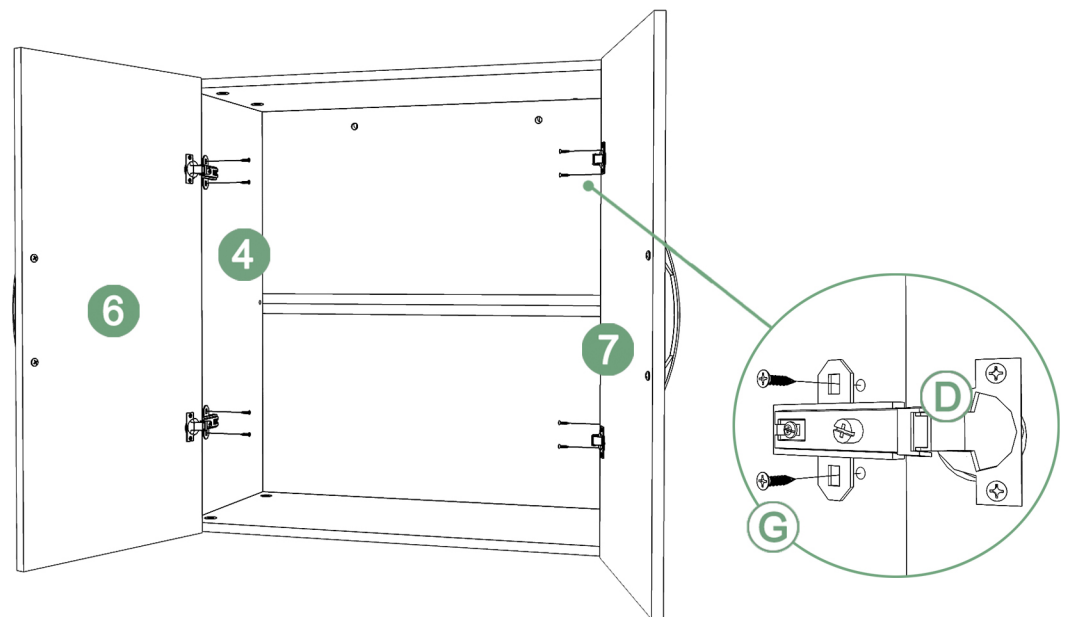

12.

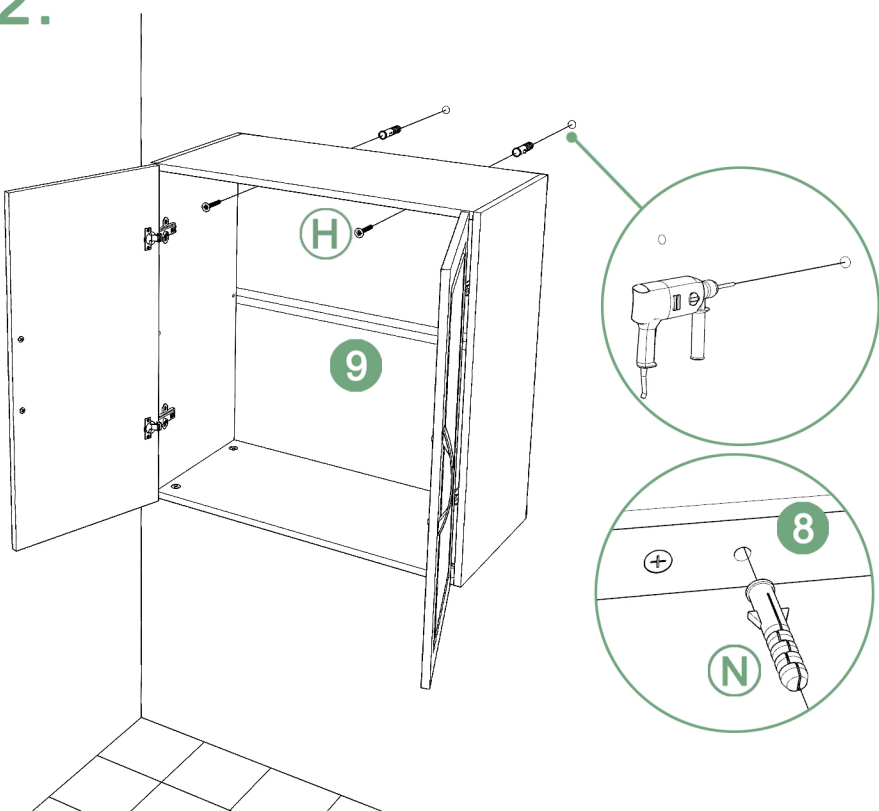

13.

