








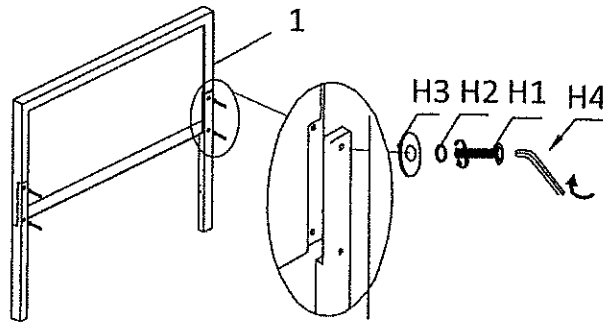
ASSEMBLY INSTRUCTION

EKING/CKING UPH BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LIST:			TOOLS REQUIRED (NOT INCLUDED)					
No.	Description	Q'ty	Description		Sketch			
1	HEADBOARD PANEL		1 Pc	Screw Driver				
HARDWARE LIST:								
No.	Sketch	Description	Size	Q'ty				
H1		Allen Bolt	5/16"x1-1/2"	4 Pcs				
H2		Lock Washer	5/16"	4 Pcs				
H3		Flat Washer	5/16"x19mm	4 Pcs				
H4		Allen Key	4mm	1 Pc				
H5		Wood Screw	8#x30MM	8 Pcs				

STEP 1



Step 1: Attached Headboard post (L/R) to the headboard using flat washer (H3), Lock washer (H2) and Allen bolt (H1).

STEP 2

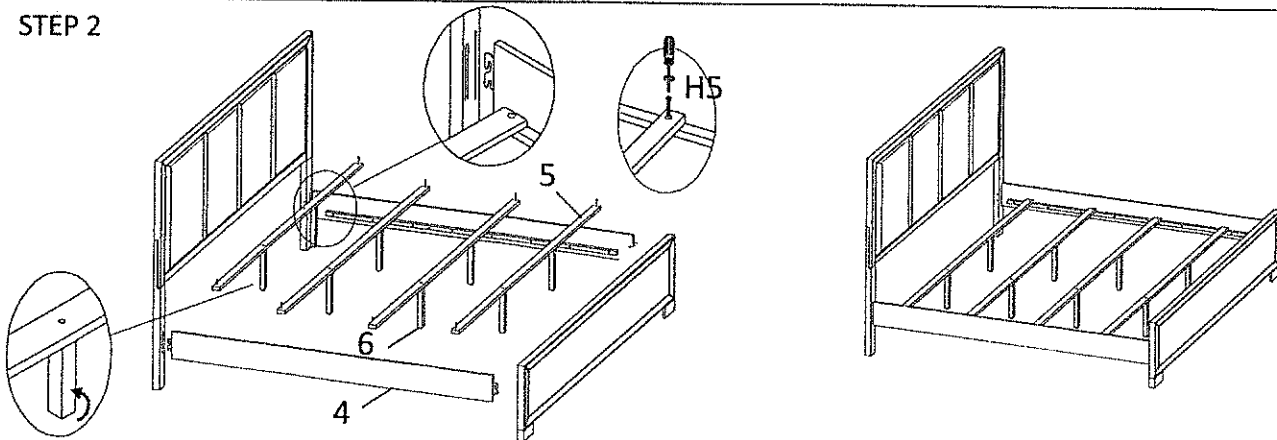

Step 2: Assemble the Bed side rails to headboard and footboard.
Attach slat support leg to the slats. Wood screw slat in place.