
Installation & Assembly

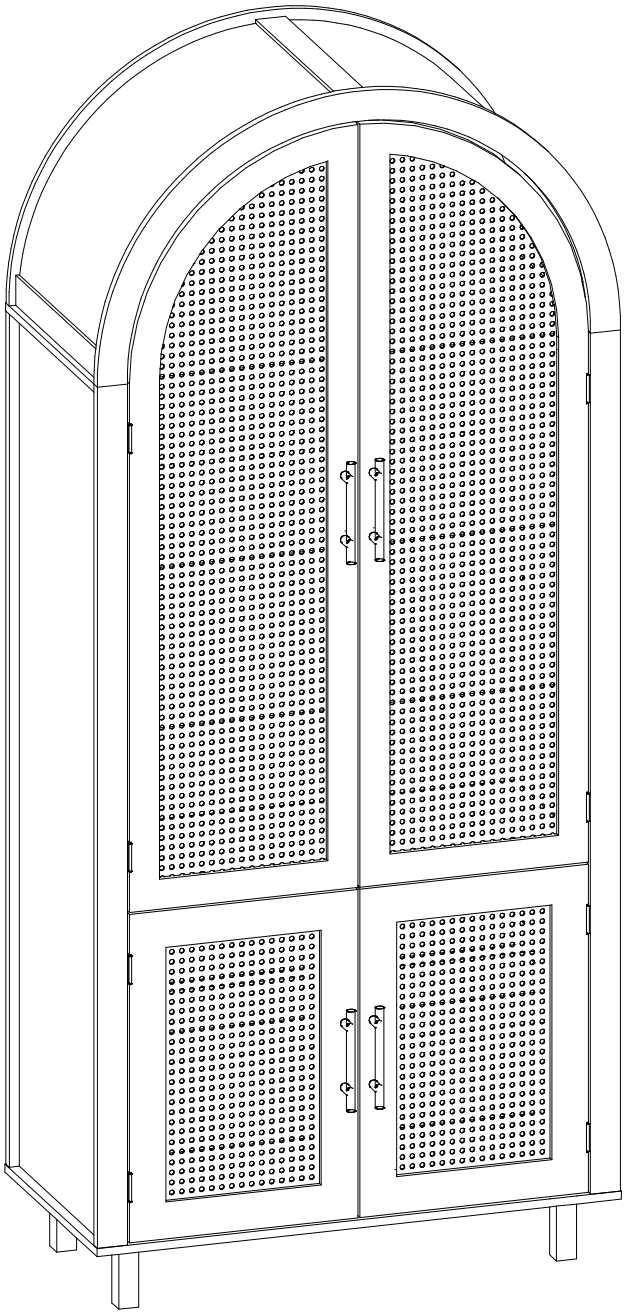


WARNING






















This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.










1.Note:This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
2.All cabinets come with TRO,stainless steel or our "L-Bracket"when shipped.


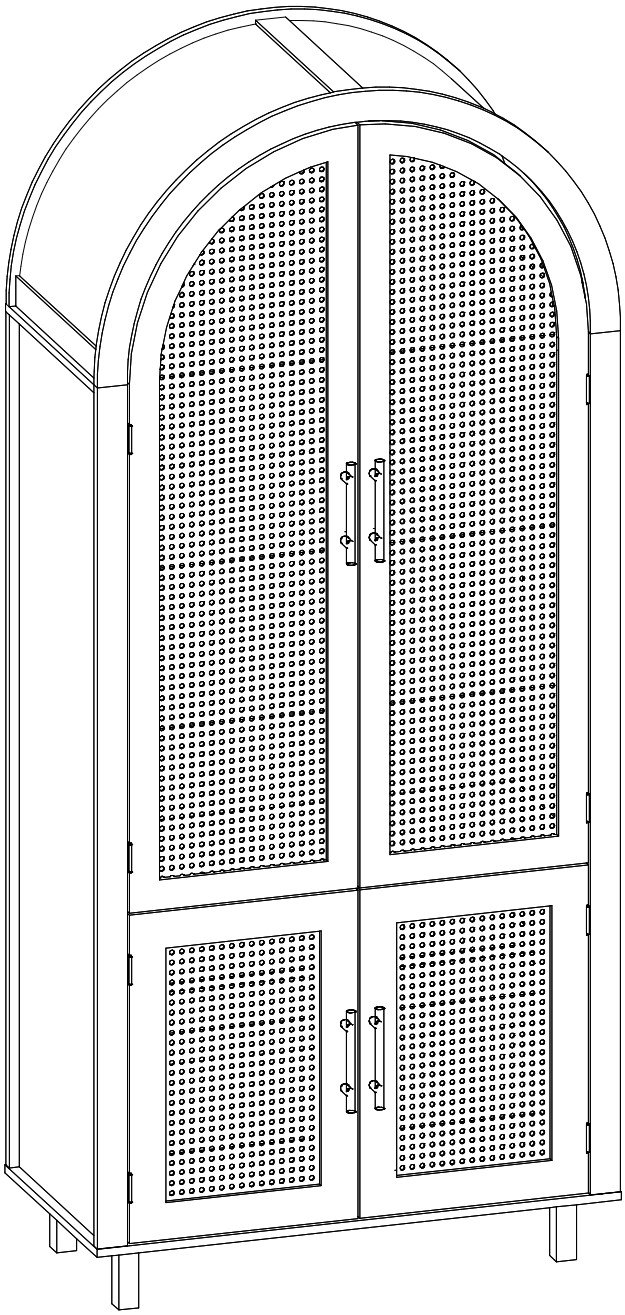





Part List


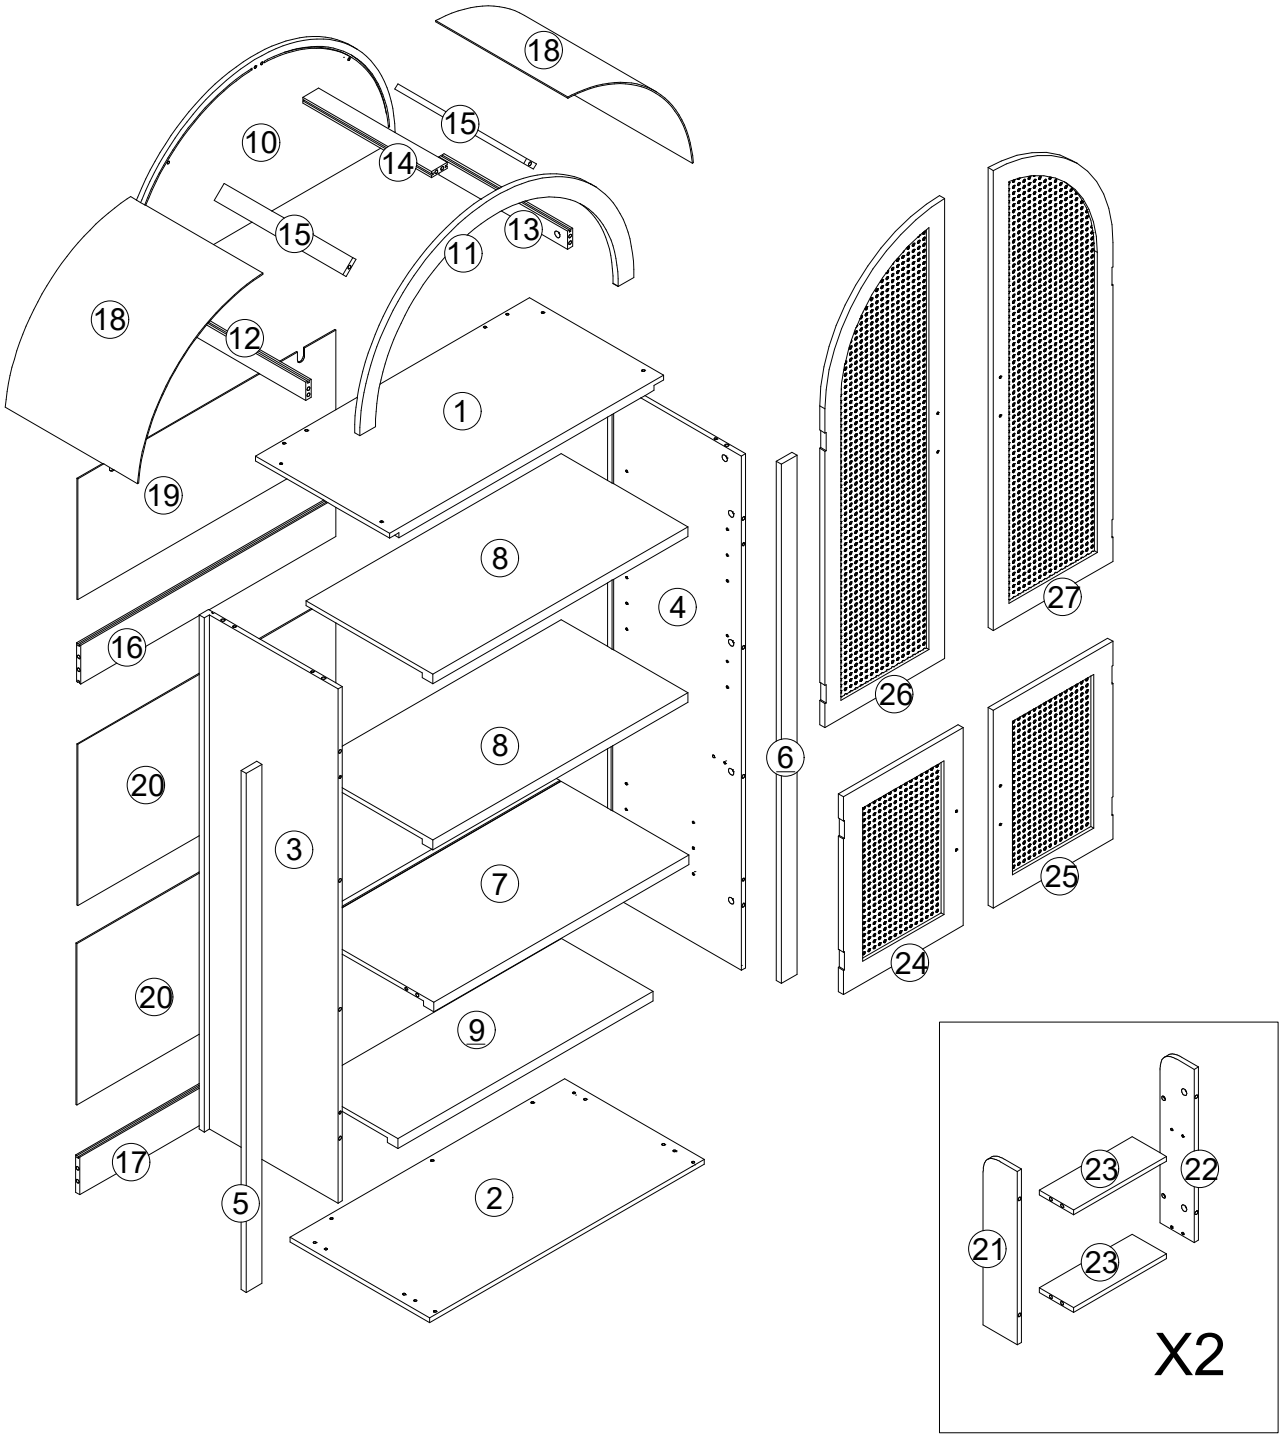

18
10
15
14
15
13
11
18
12
1
19
8
4
16
8
20
3
7
20
9
17
5
2
6
26
27
24
25
23
22
21
23
X2

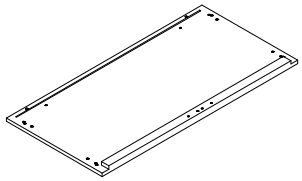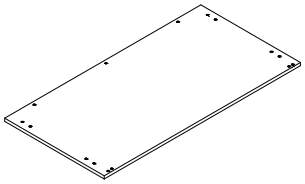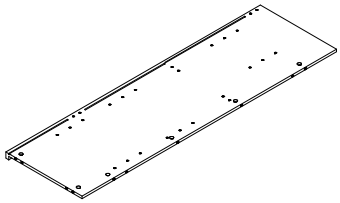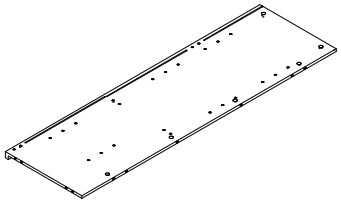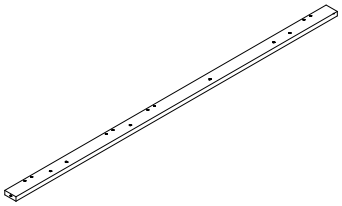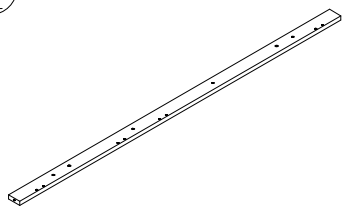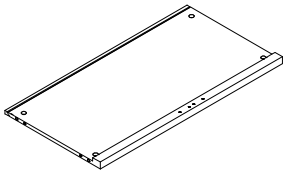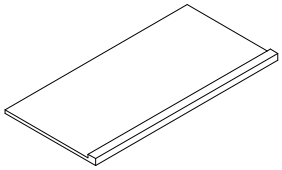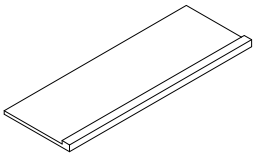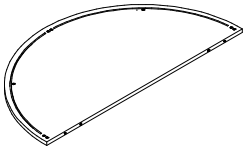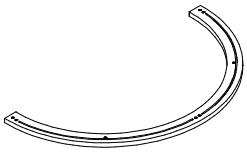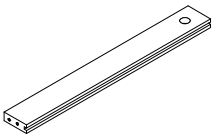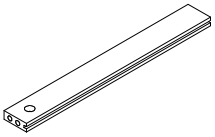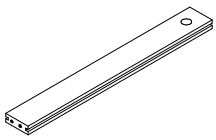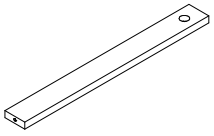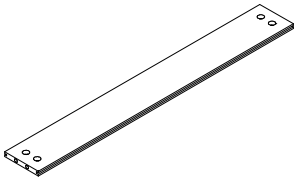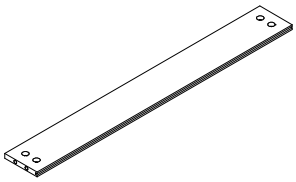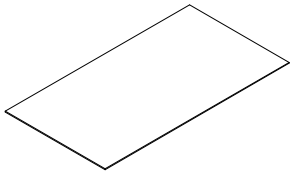1  X1PC	2  X1PC	3  X1PC
4  X1PC	5  X1PC	6  X1PC
7  X1PC	8  X2PCS	9  X1PC
10  X1PC	11  X1PC	12  X1PC
13  X1PC	14  X1PC	15  X2PCS
16  X1PC	17  X1PC	18  X2PCS

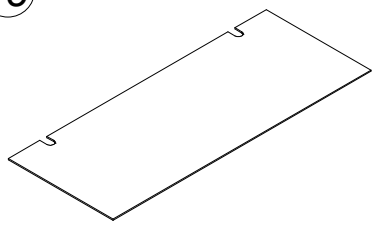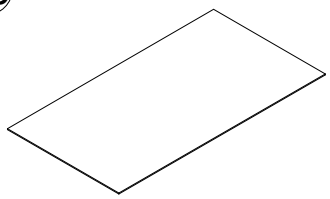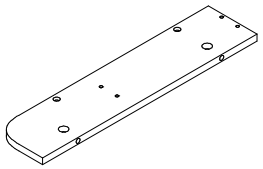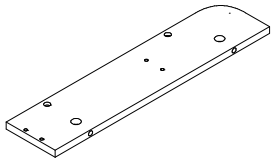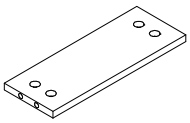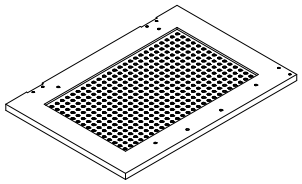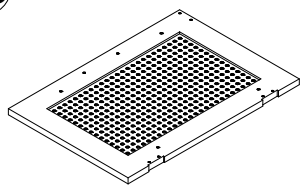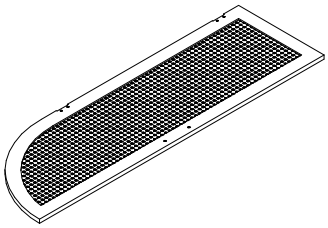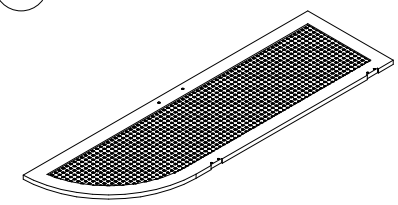
19  X1PC	20  X2PCS	21  X2PCS
22  X2PCS	23  X4PCS	24  X1PC
25  X1PC	26  X1PC	27  X1PC


Ⓐ X53	Ⓑ X53	Ⓒ X22	Ⓓ X20	Ⓔ X26	Ⓕ X40
			 Plug the hole		
Ø6*35mm	Ø15*9.5mm	Ø6*30mm	Ø20mm	Ø5*40mm	Ø3.5*12mm


Ⓖ X4	Ⓗ X4	Ⓘ X12	Ⓙ X4	Ⓚ X8	Ⓛ X12
					
	Ø3*16mm	Ø3*16mm			

Ⓜ X8	Ⓝ X4	Ⓞ X4	Ⓟ X2	Ⓠ X12	Ⓡ X1
					
M4*18mm			Ø4*12&Ø6*30&Ø4*35mm	4*12mm	S4


Step1

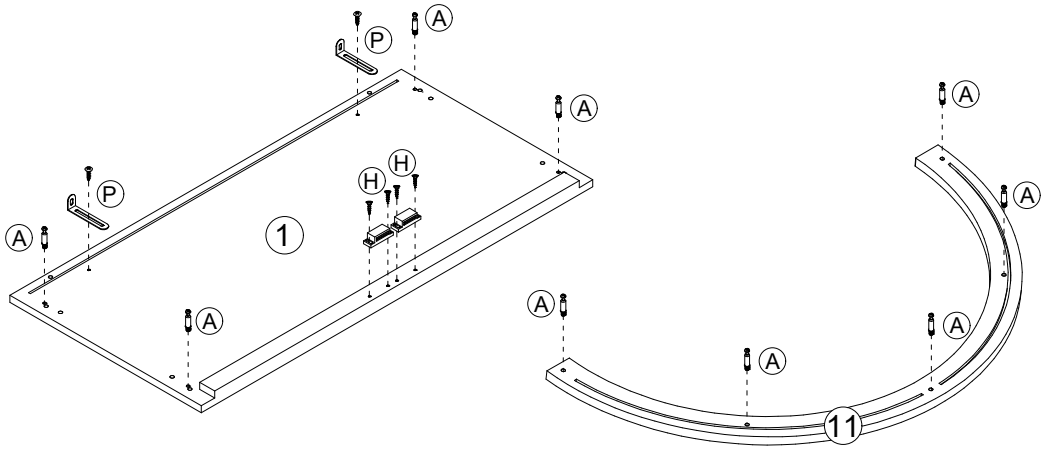


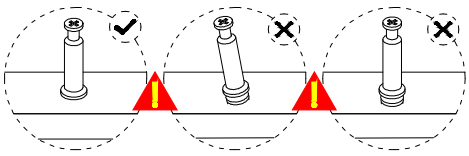

P	X2	H	X2	A	X9
					
Ø4*12mm		Ø3*16mm		Ø6*35mm	


Step2

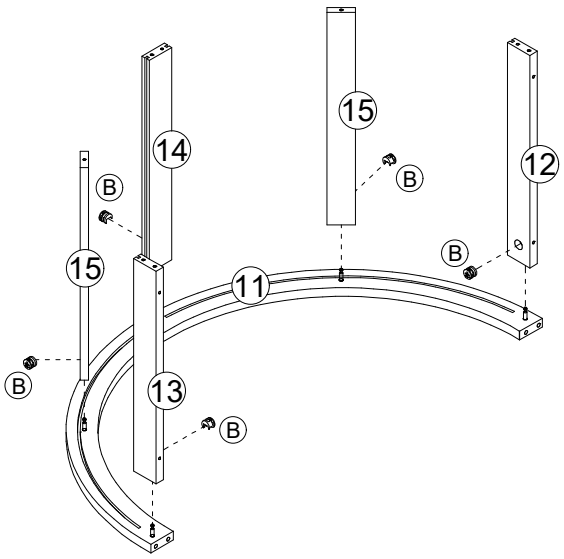

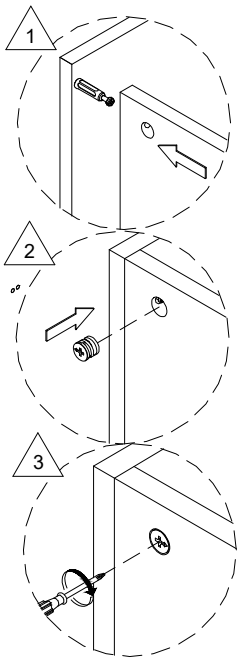


B	X5
	
Ø15*9.5mm	

Step3

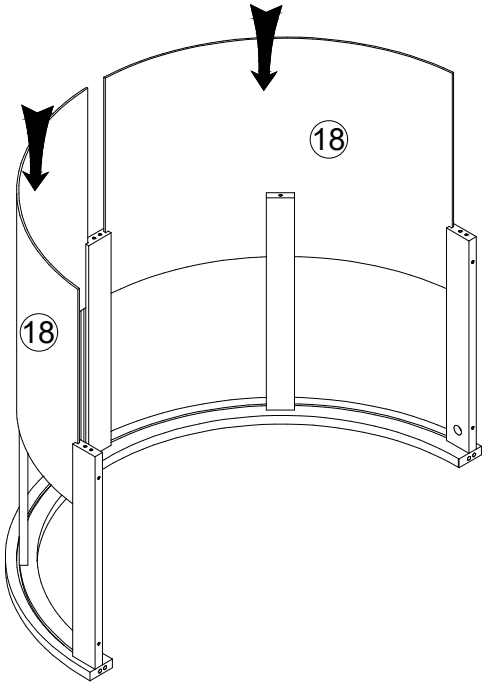


Step4

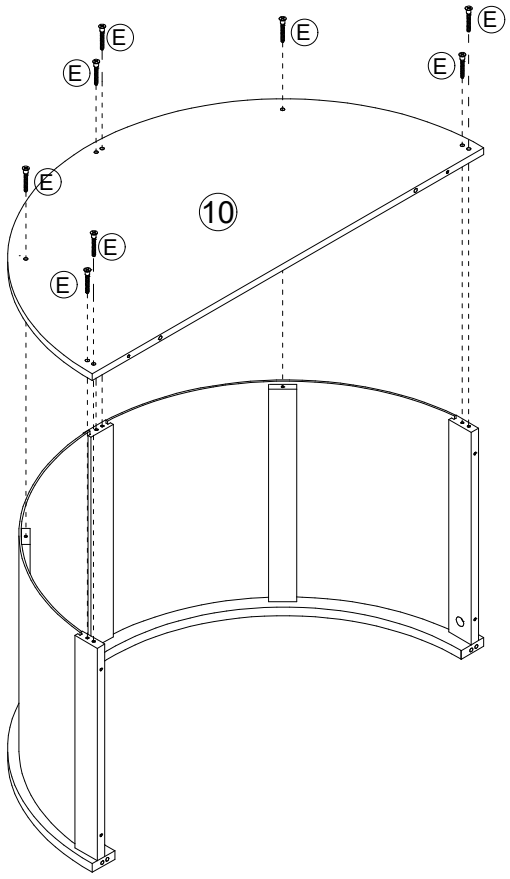


E	X8
Ø5*40mm	


Step5

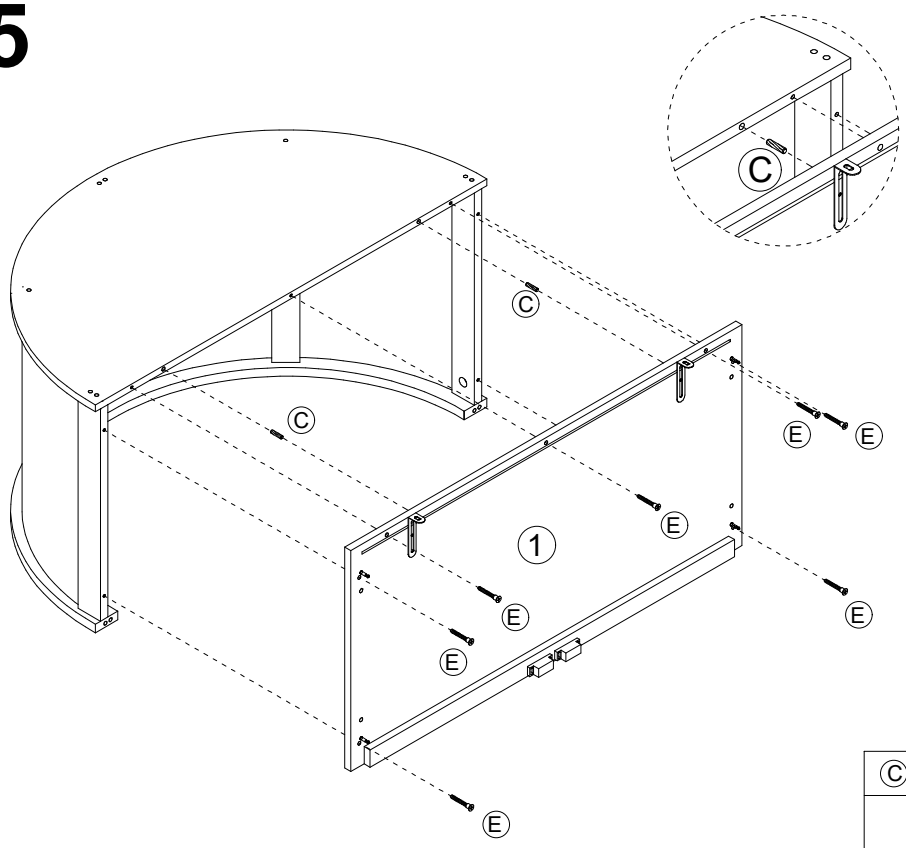

C	X2	E	X7
			
Ø6*30mm		Ø5*40mm	


Step6

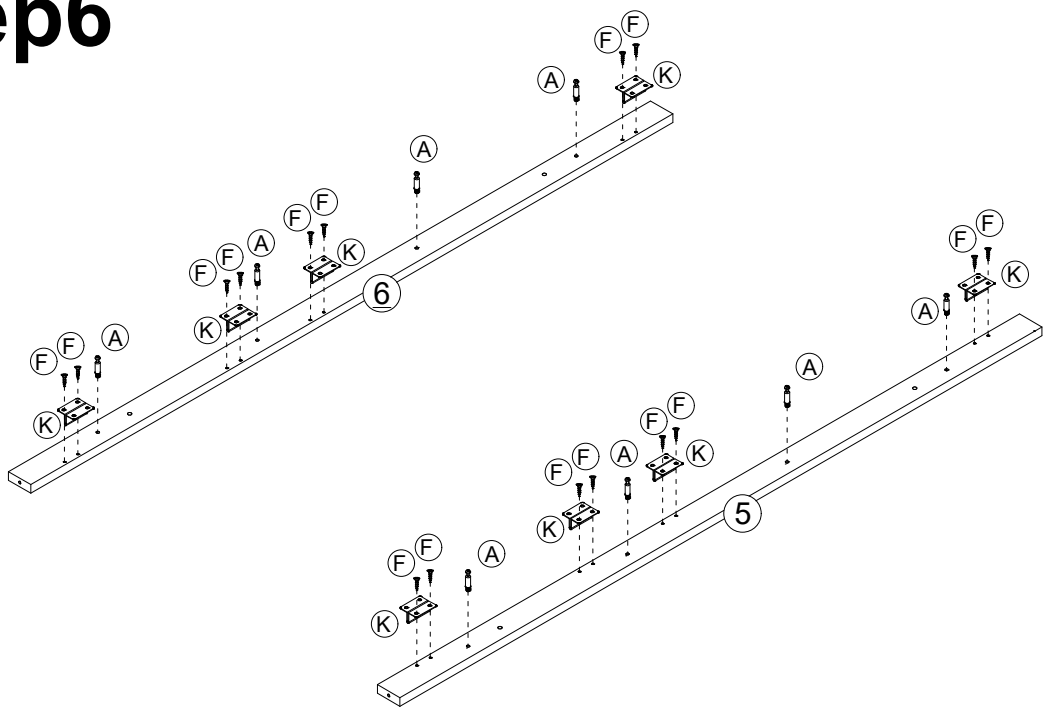


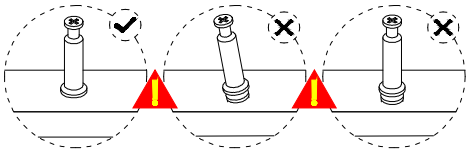

K	X8	F	X16	A	X8
					
		Ø3.5*12mm		Ø6*35mm	


Step7

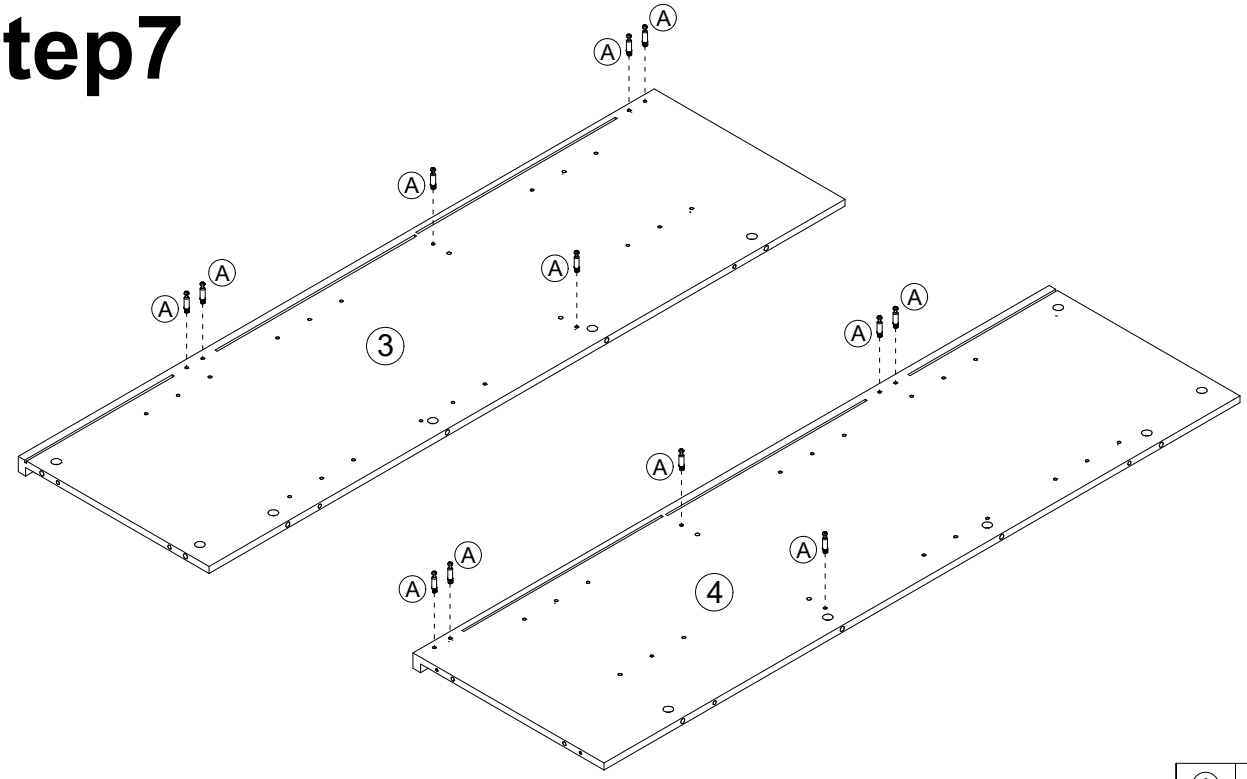


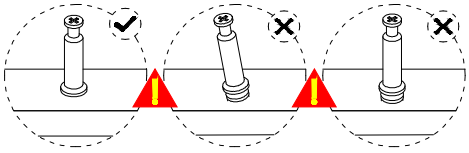


A	X12
	
Ø6*35mm	


Step8

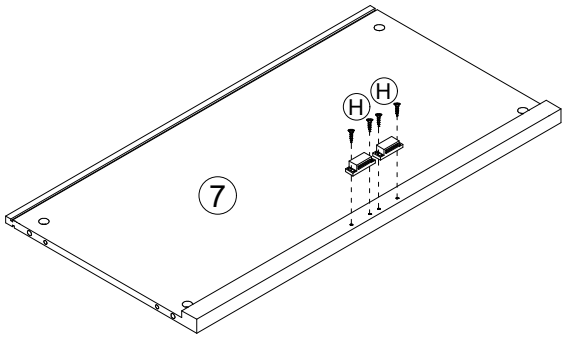

H	X2
	
Ø3*16mm	


Step9

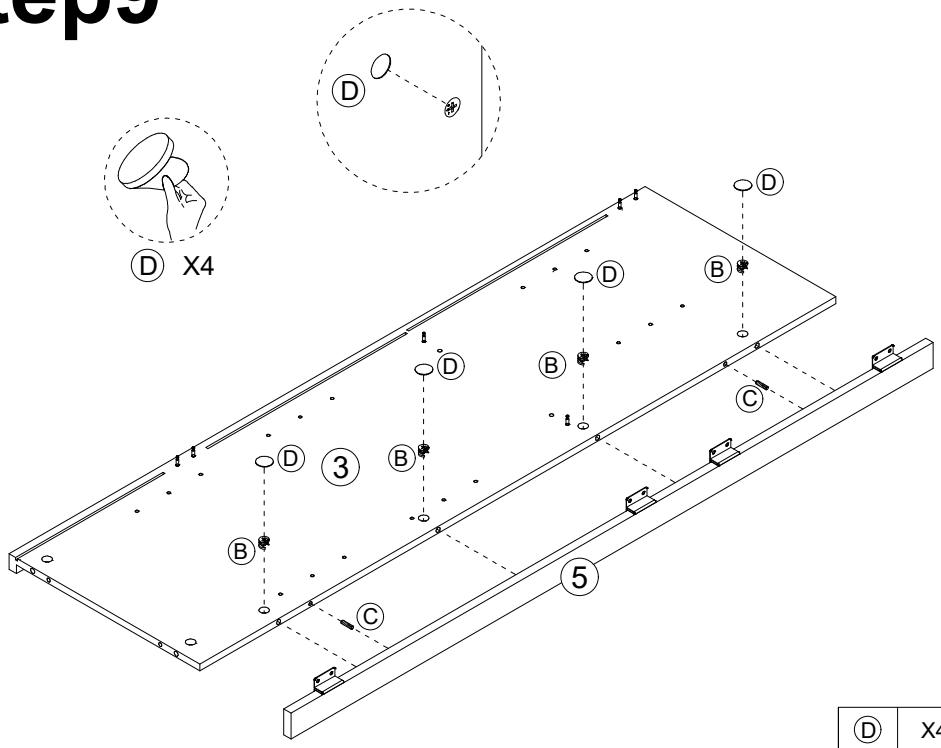


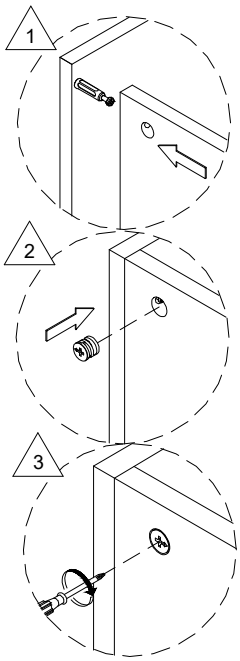

Ⓓ X4	Ⓒ X2	Ⓑ X4
 Plug the hole		
Ø20mm	Ø6*30mm	Ø15*9.5mm


Step10

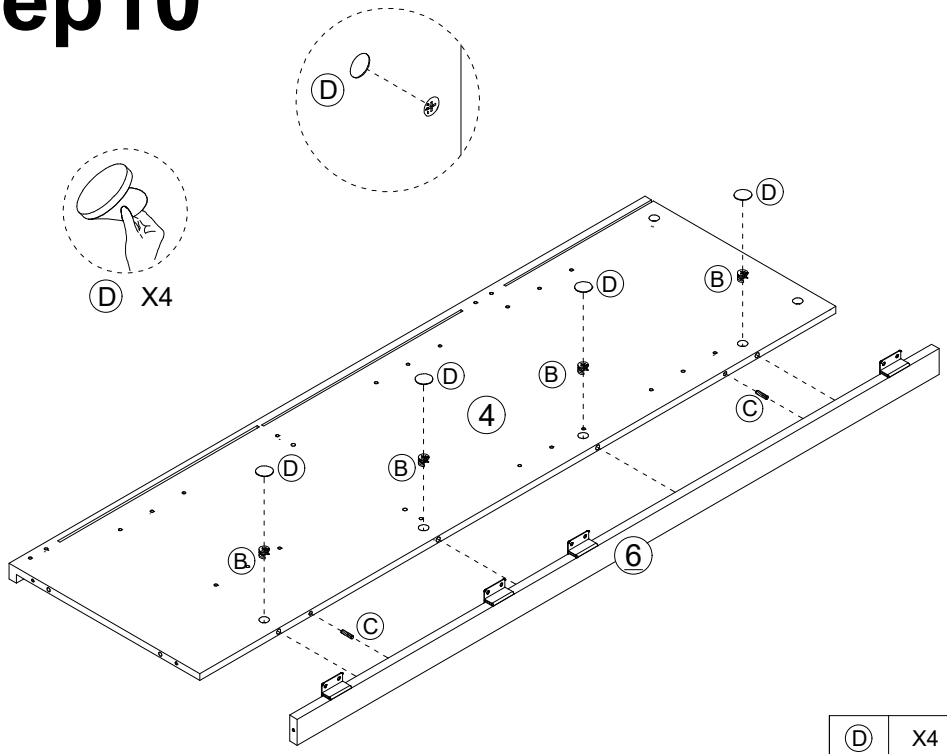


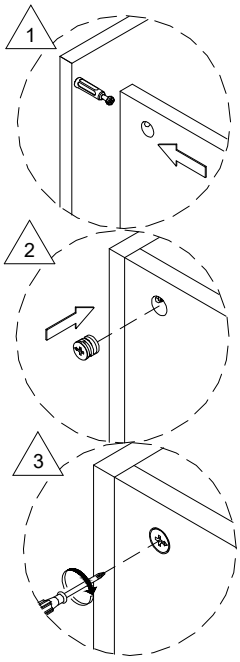

Ⓓ X4	Ⓒ X2	Ⓑ X4
 Plug the hole		
Ø20mm	Ø6*30mm	Ø15*9.5mm


Step11

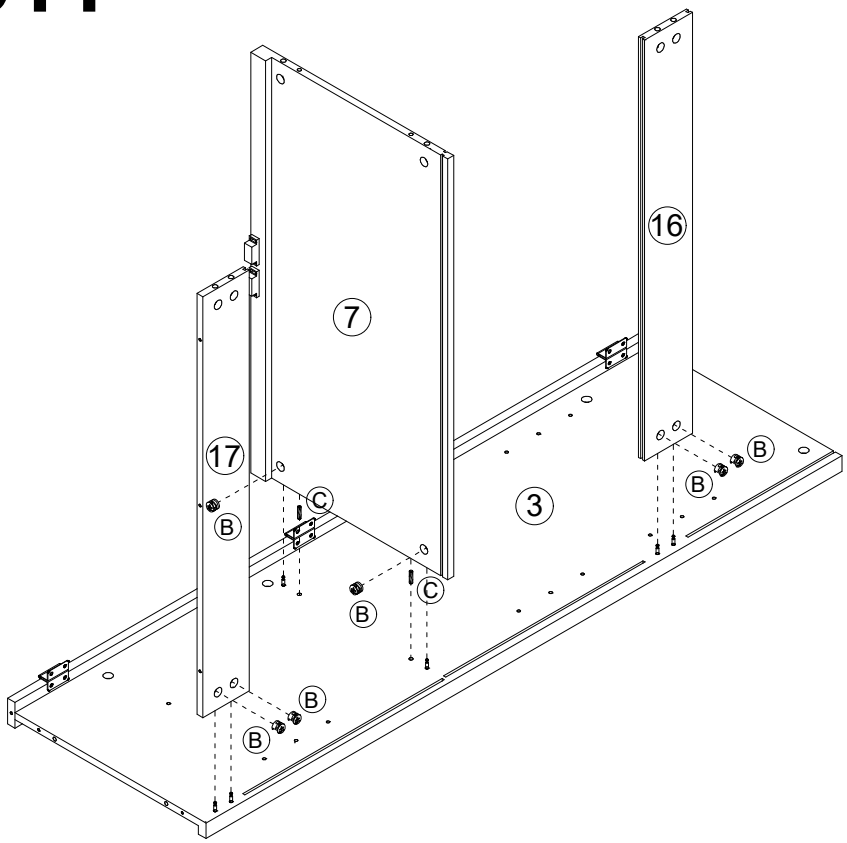

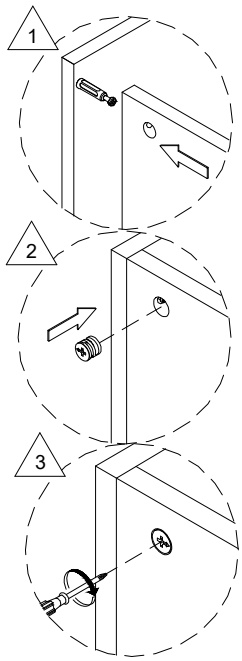



Ⓒ	X2	Ⓑ	X6
			
Ø6*30mm		Ø15*9.5mm	

Step12

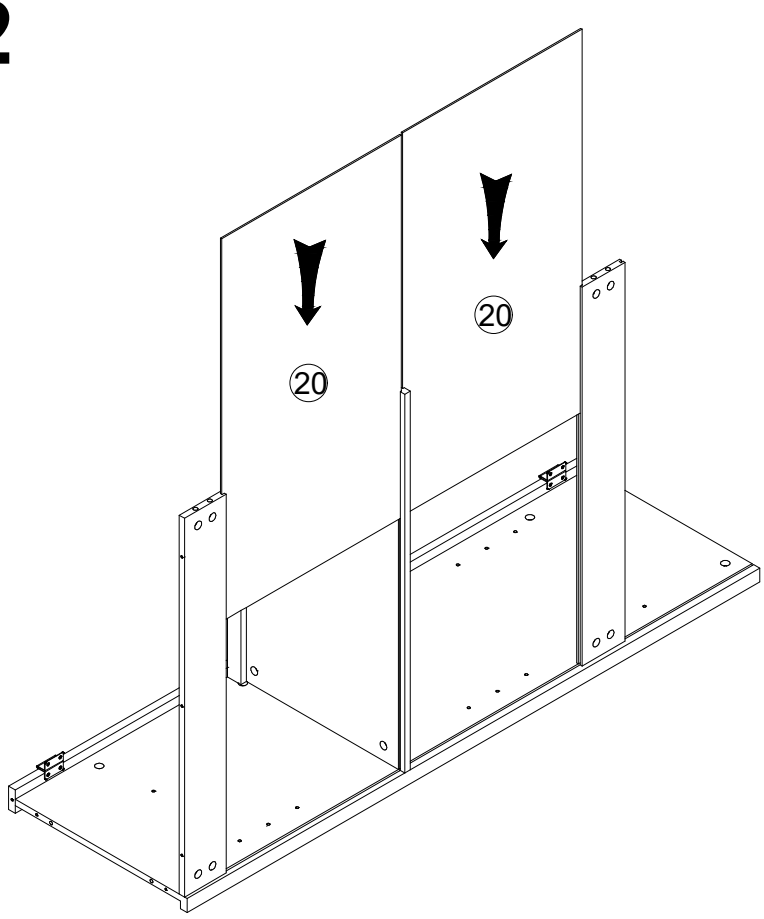


Step13

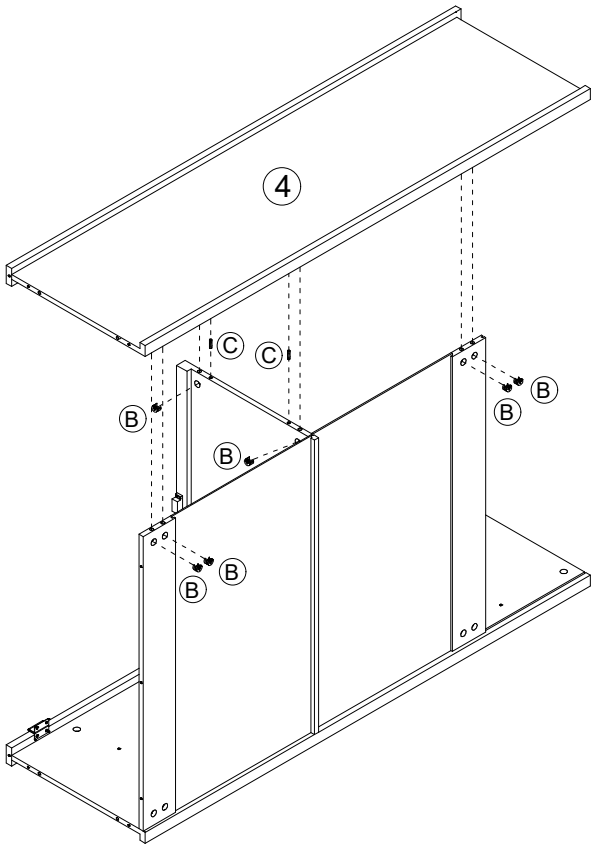

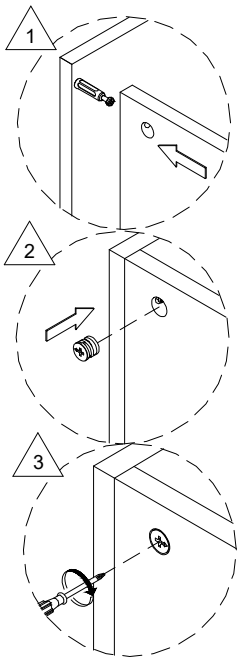


Ⓒ	X2	Ⓑ	X6
			
Ø6*30mm		Ø15*9.5mm	

Step14

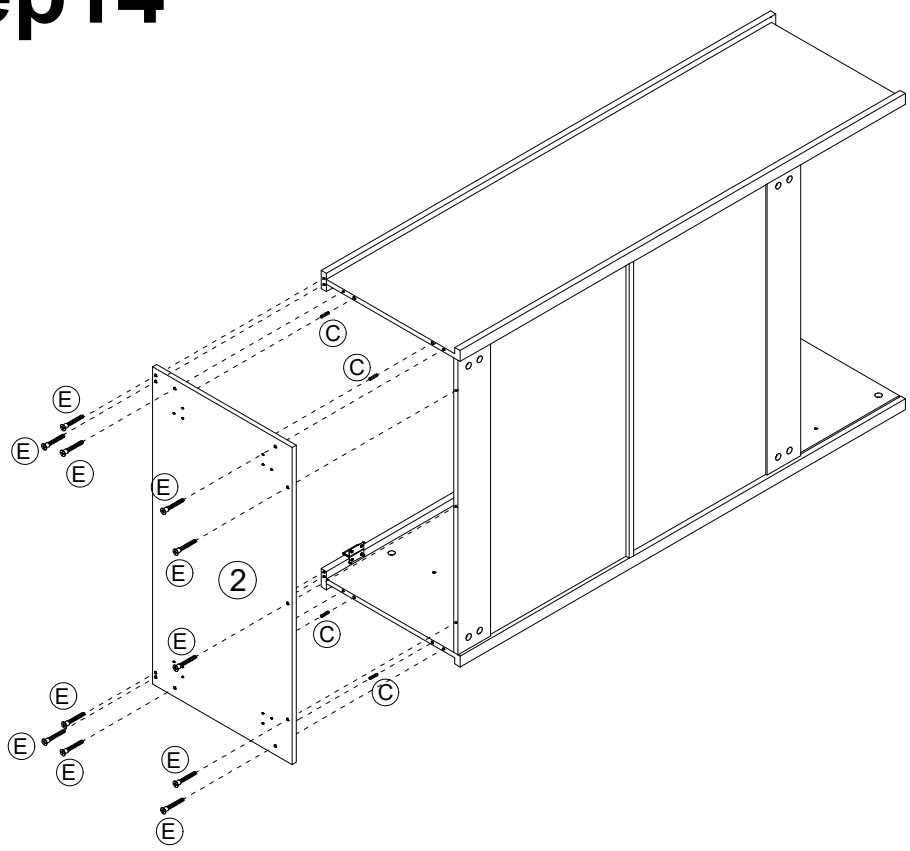


Ⓒ	X4	Ⓔ	X11
			
Ø6*30mm		Ø5*40mm	

Step15

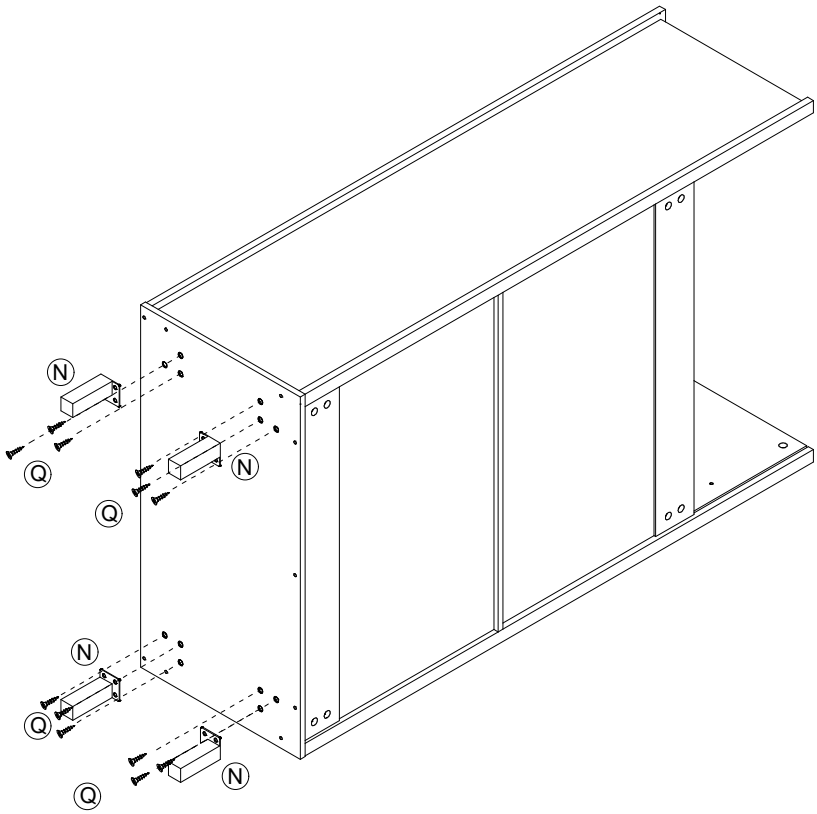


Q	X12	N	X4
			
4*12mm			


Step16

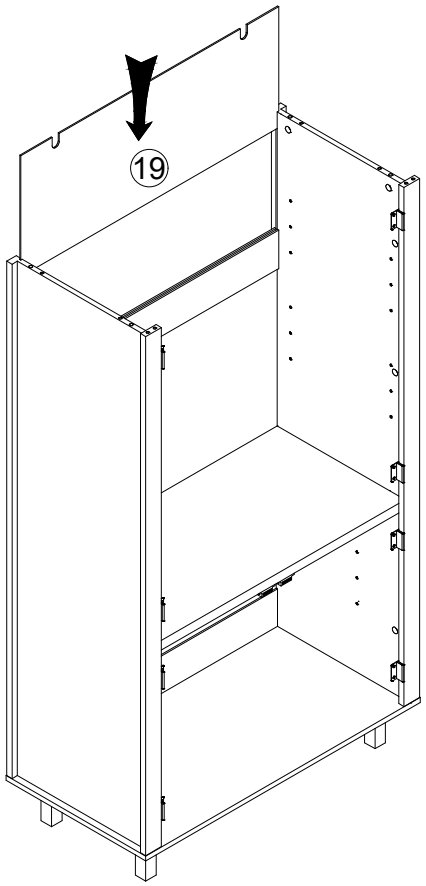

Step17


Two people are needed to install it

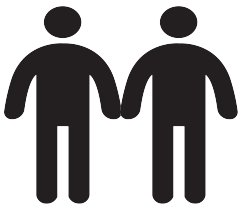


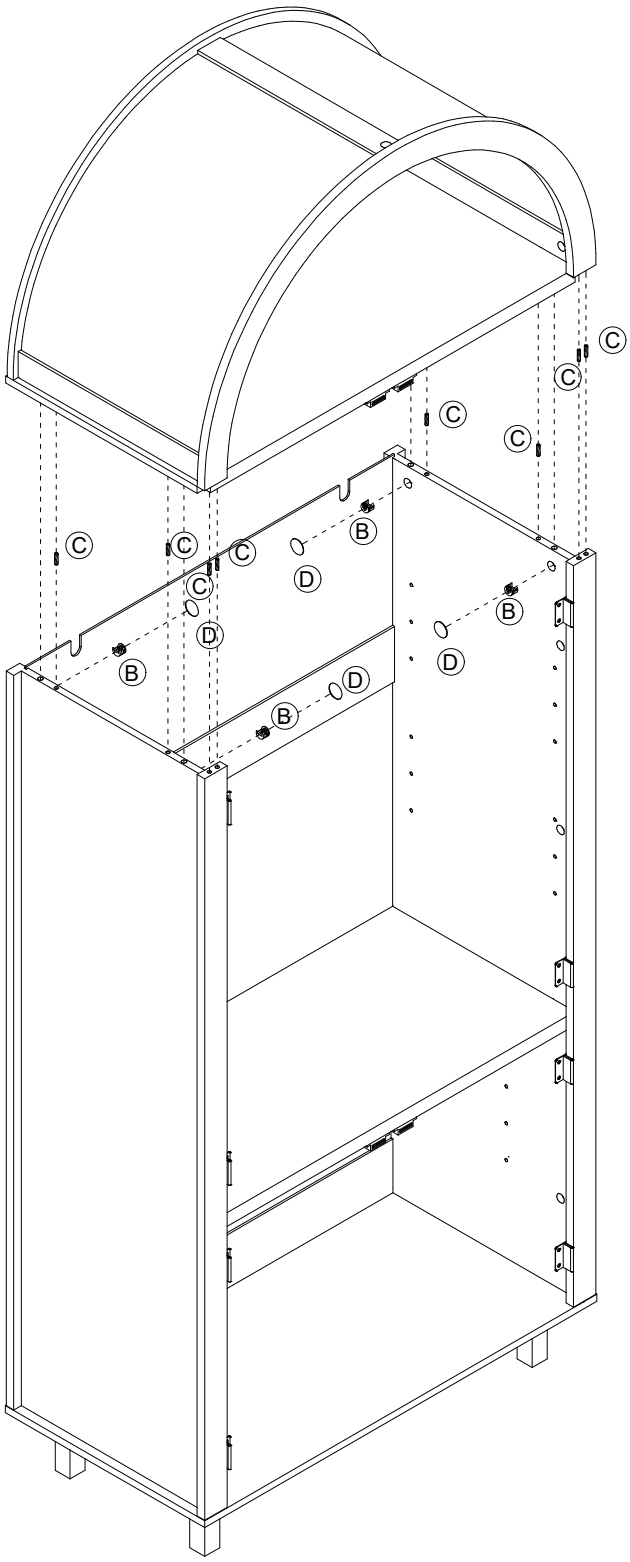




Ⓓ X4

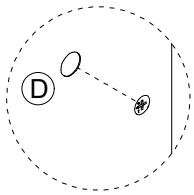


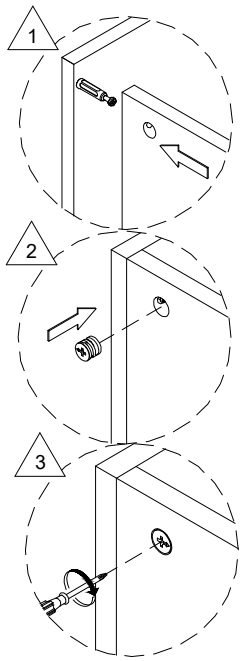


Ⓓ X4	Ⓒ X8	Ⓑ X4
 Plug the hole		
Ø20mm	Ø6*30mm	Ø15*9.5mm


Step18

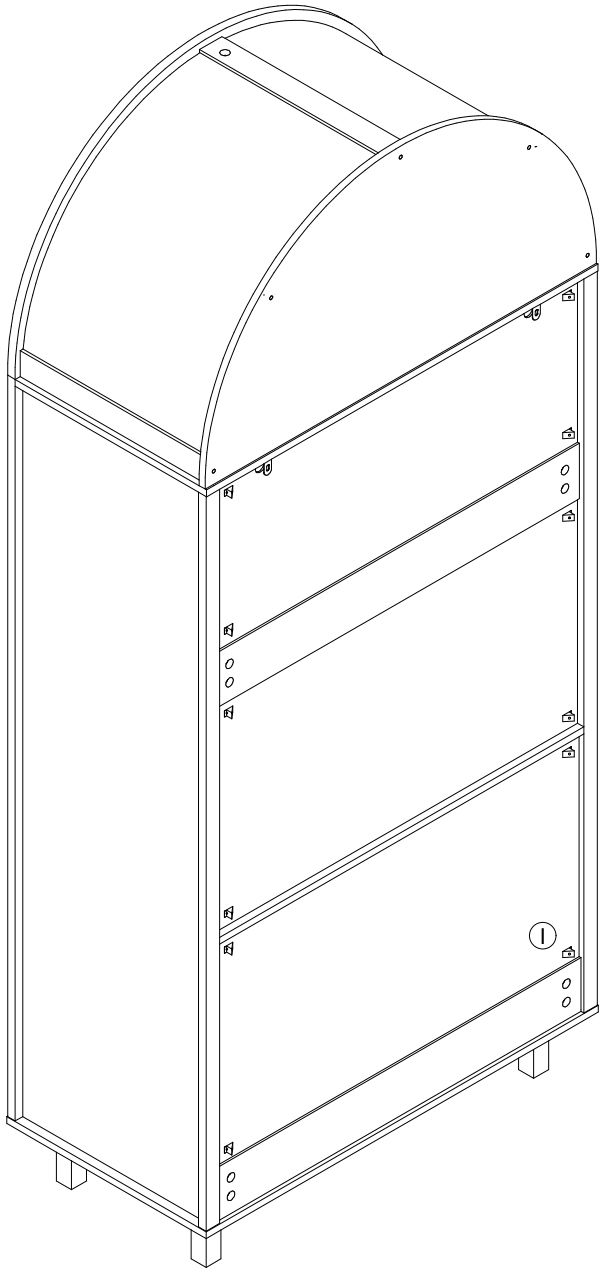


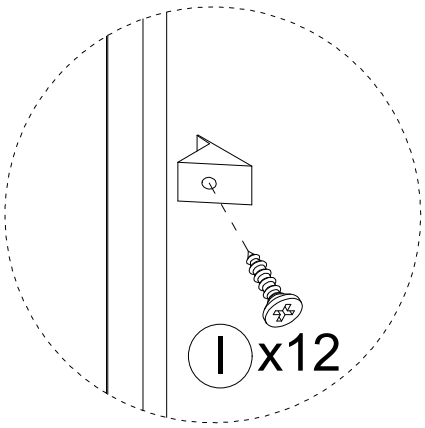

I	X12
	
Ø3*16mm	


Step19

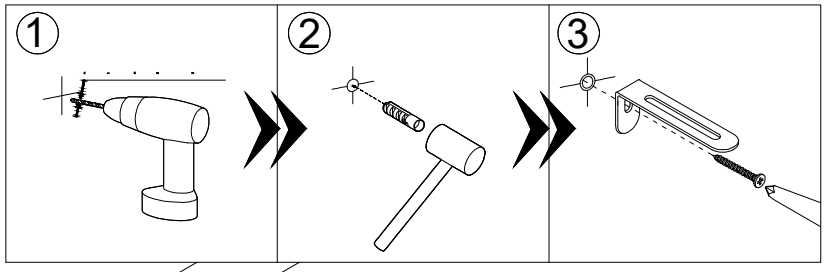

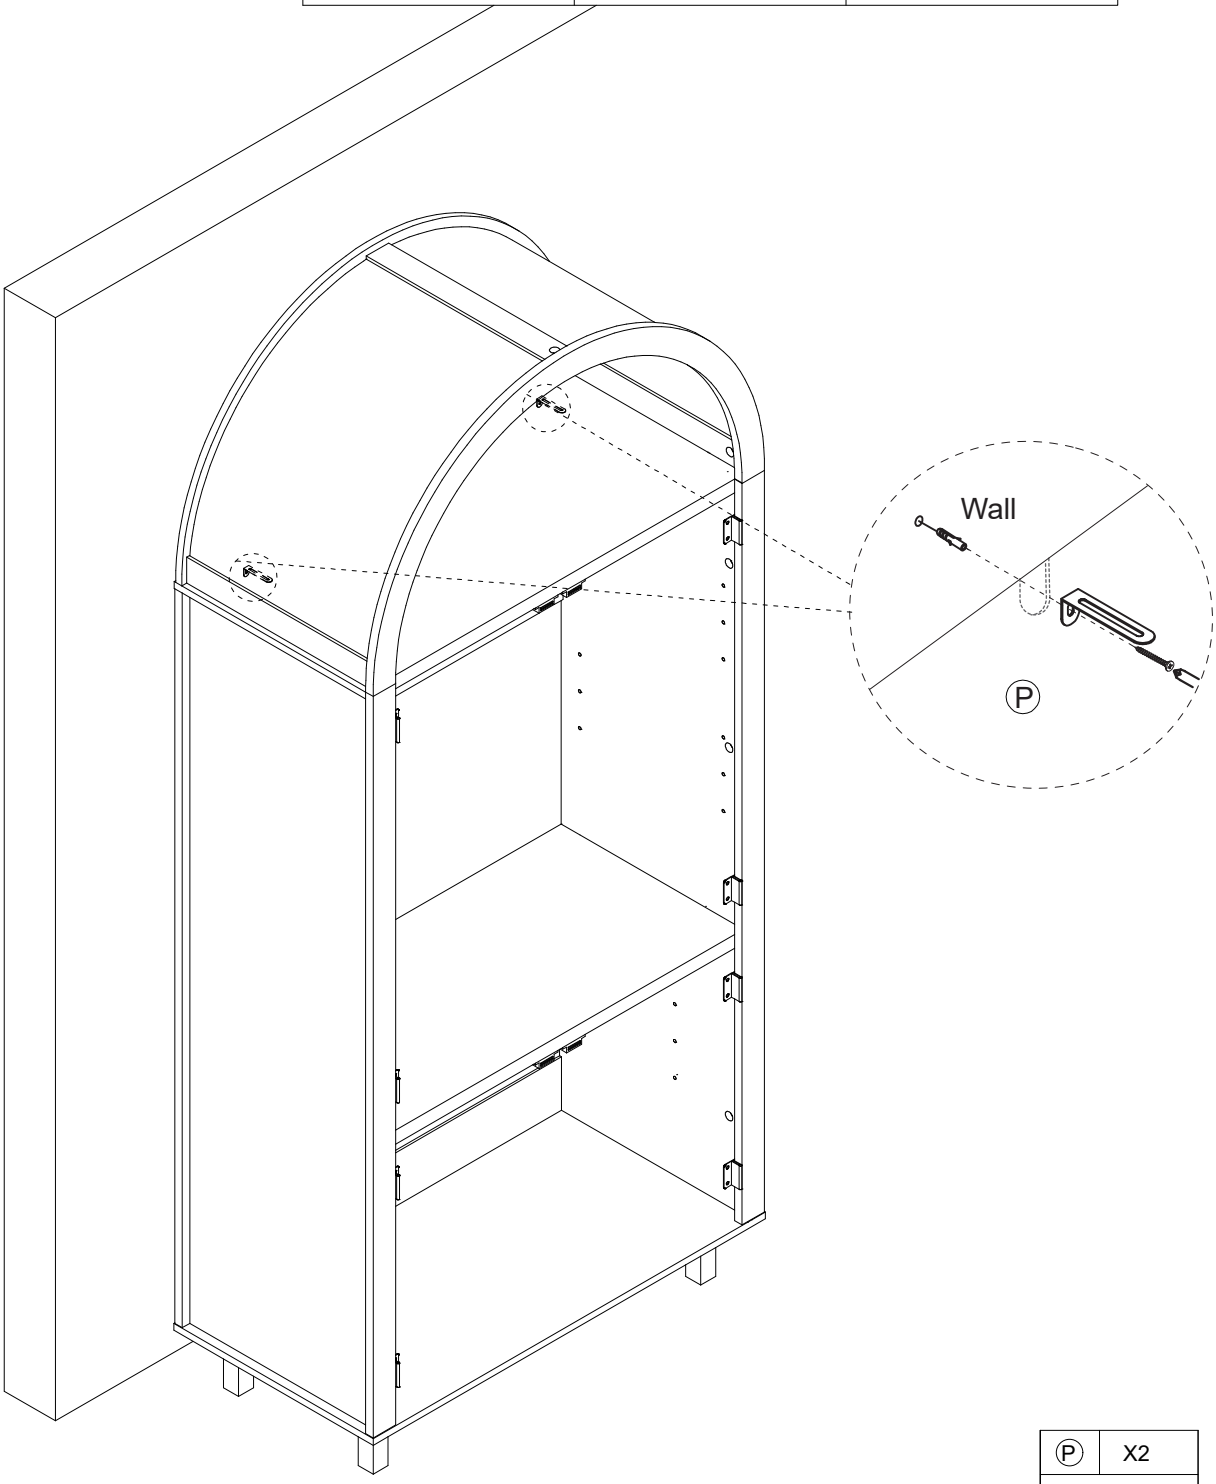


P	X2
	
Ø6*30&Ø4*35mm	


Step20

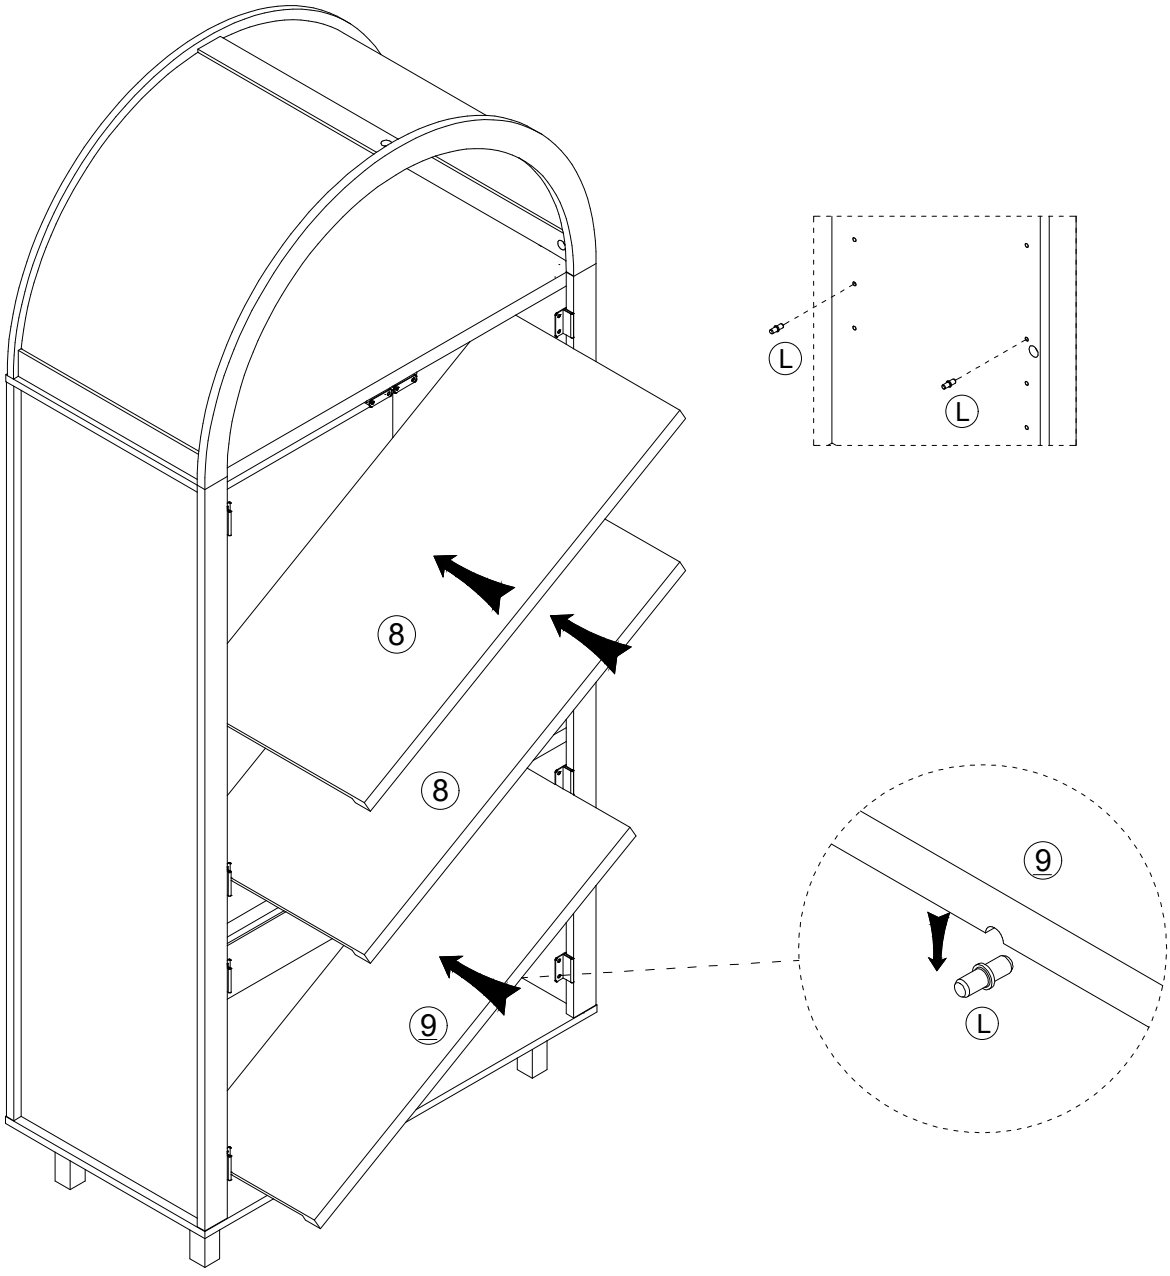

L	X12
	


Step21

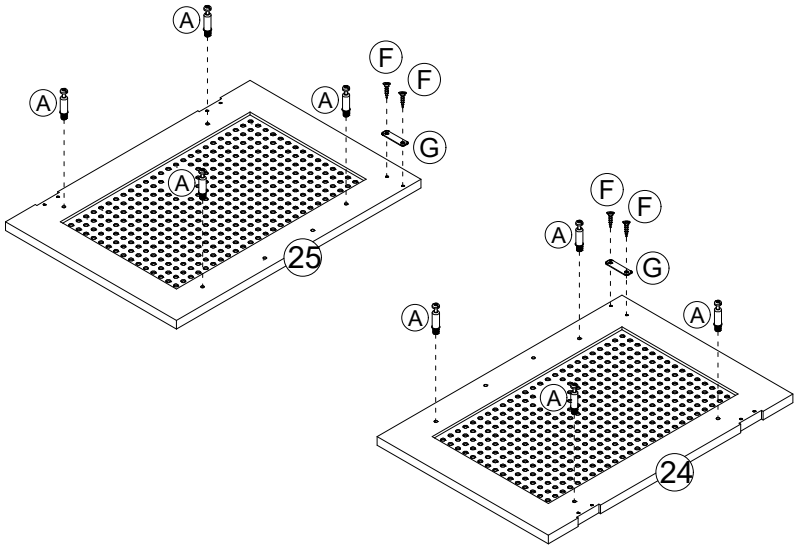

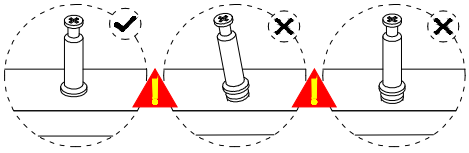


G	X2	F	X4	A	X8
			Ø3.5*12mm		Ø6*35mm

Step22

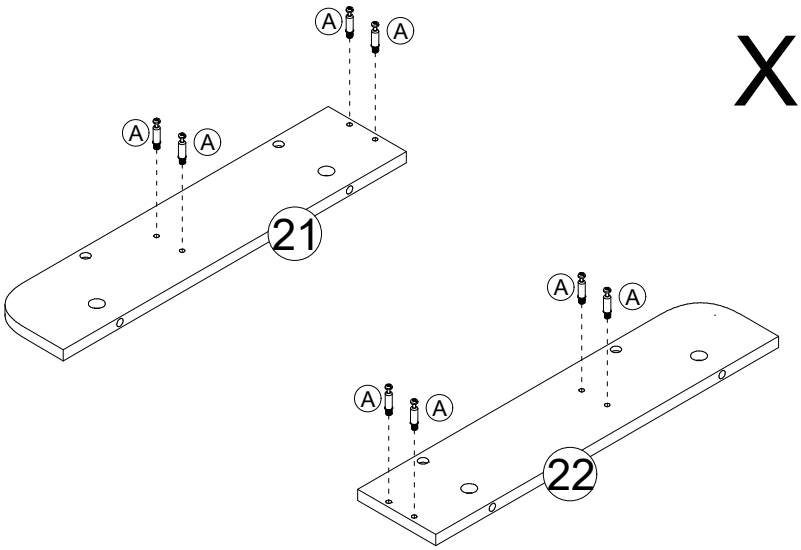


X2

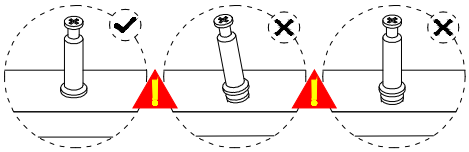


A	X16
	Ø6*35mm

Step23

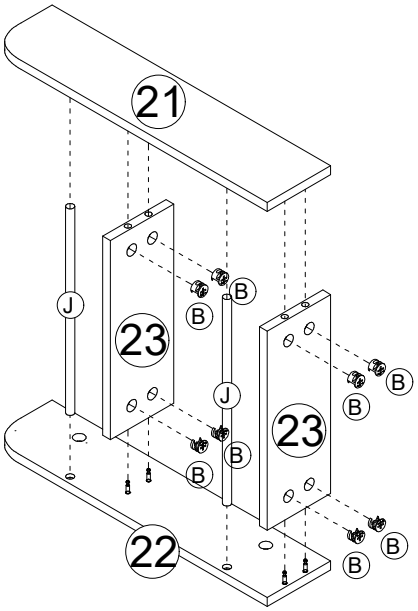



X2

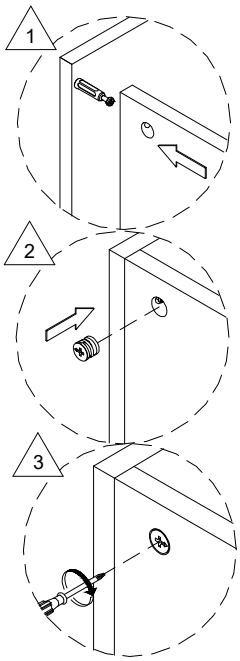

J	X4	B	X16
			
			Ø15*9.5mm


Step24

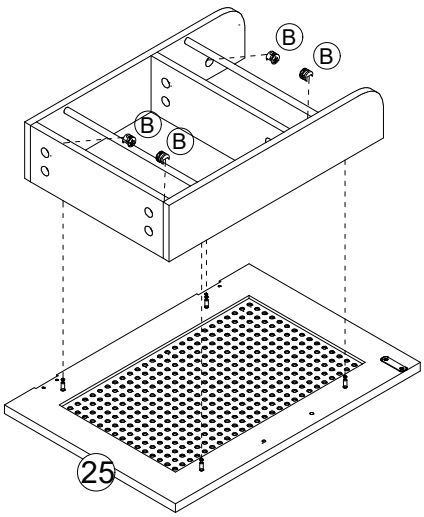


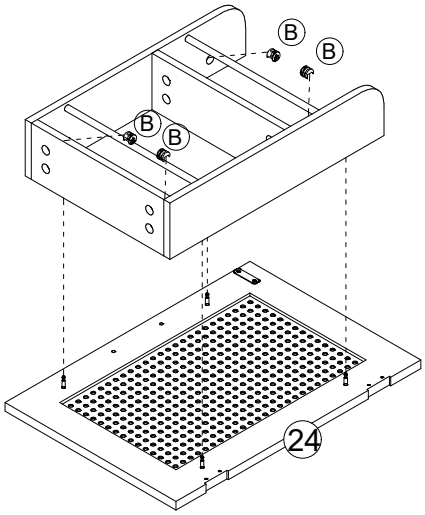




D X8

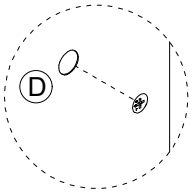


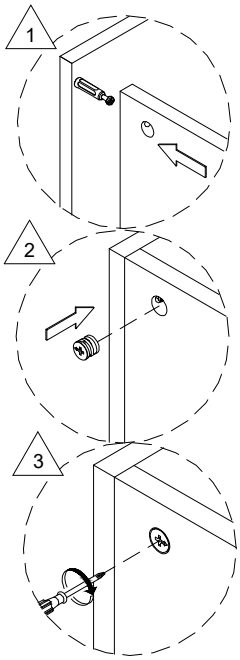

D	X8	B	X8
 Plug the hole			
Ø20mm			Ø15*9.5mm


Step25

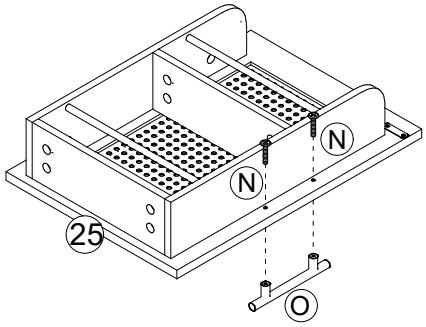


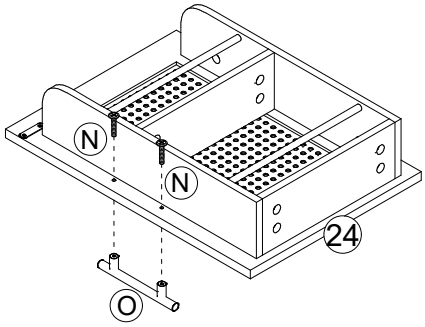

Ⓞ	X2	Ⓝ	X4
			
			M4*18mm


Step26

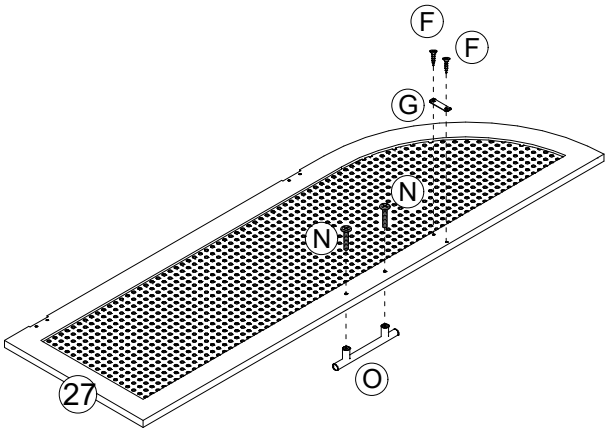

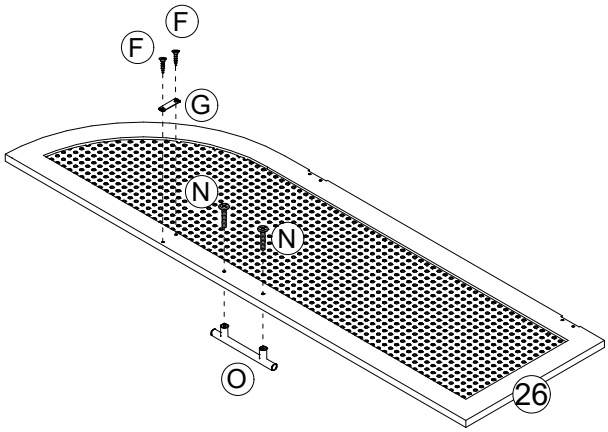

Ⓞ	X2	Ⓝ	X4	Ⓖ	X2	Ⓕ	X4
							
			M4*18mm				Ø3.5*12mm

Step27

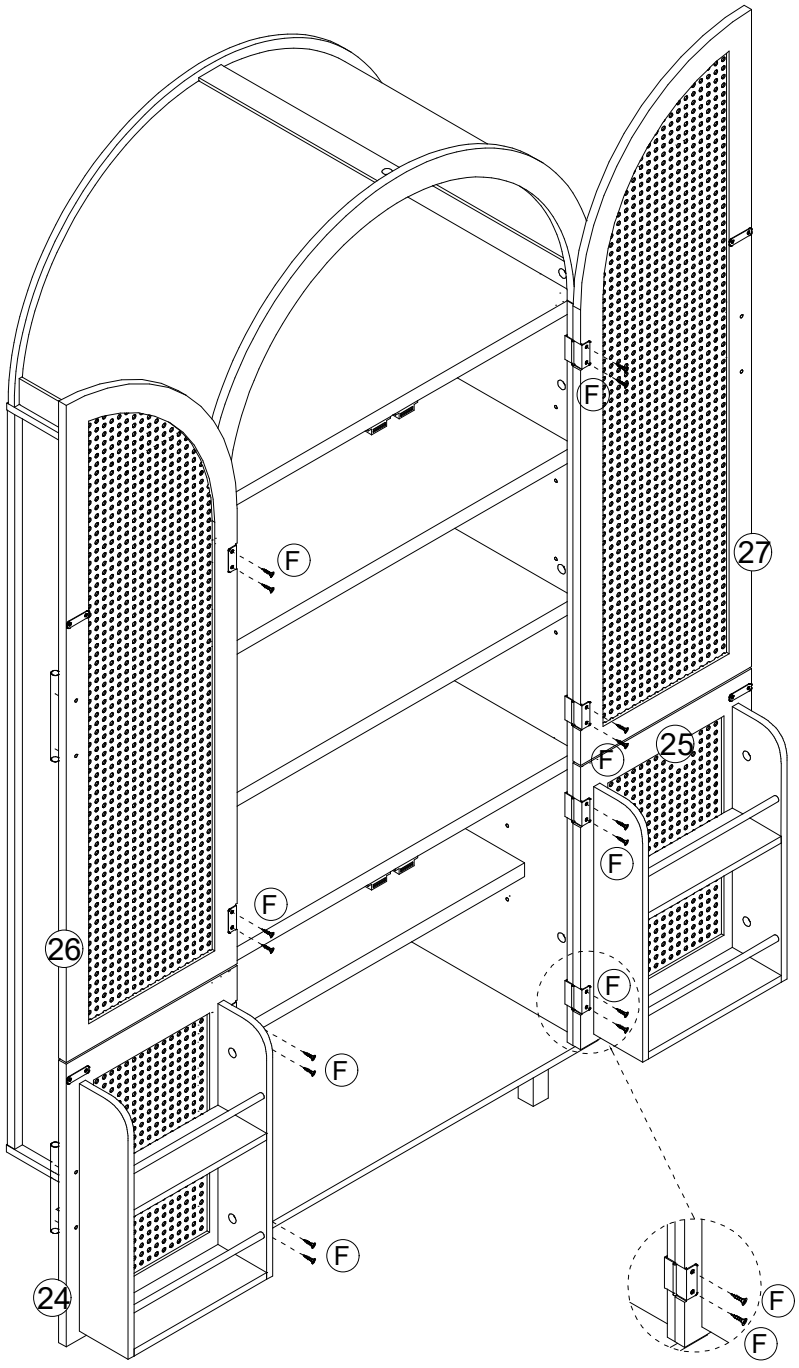

Ⓕ	X16
Ø3.5*12mm	

COMPLETE

