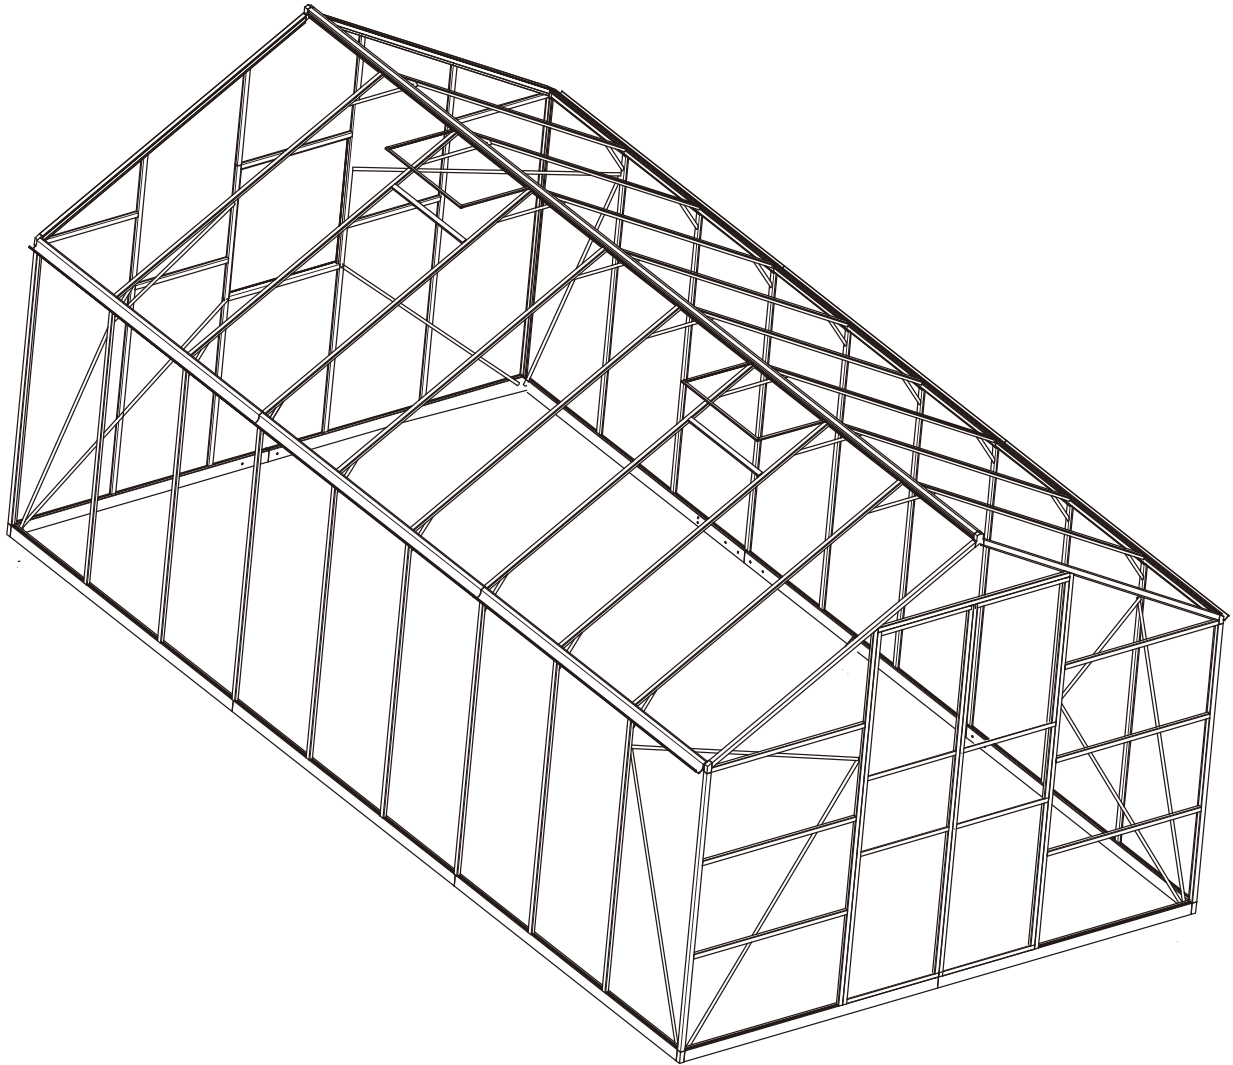



INSTALLATION INSTRUCTIONS

10X18 ft Greenhouse


























 **EASYHAWKservice@outlook.com**













Our team is available 24/7 to help with any product questions. Contact us anytime!


					
Toolbox	Hammer	Glove	Power drill	Tape Measure	Bitbits

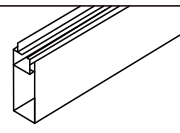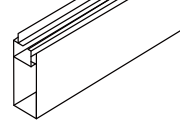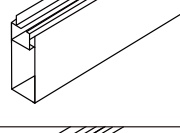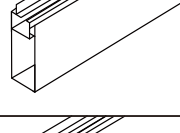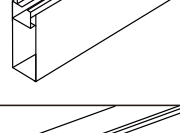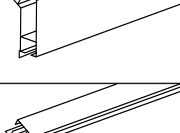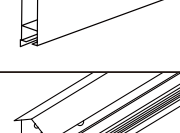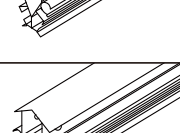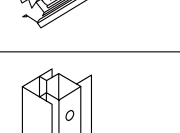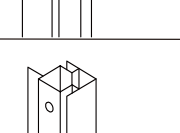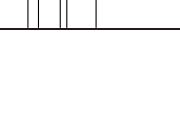Aluminum Parts:














No.	Picture	Qty.	USE
A1-1		x2	STEP 1
A1-2		x2	STEP 1
A2-1		x2	STEP 1
A2-2		x2	STEP 1
A2-3		x2	STEP 1
A3-1		x2	STEP 14
A3-2		x2	STEP 14
A3-3		x2	STEP 14
A4		x2	STEP 15
A4-1		x1	STEP 15
A5-1		x1	STEP 3
A5-3		x1	STEP 3

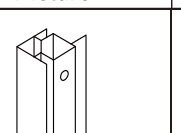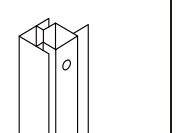
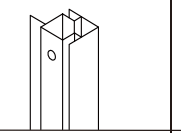
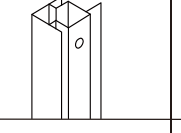
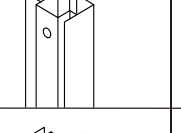
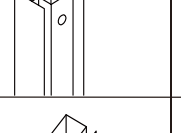
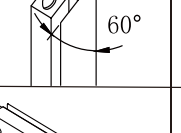
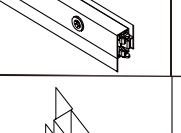
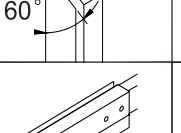
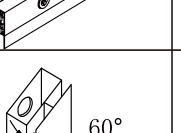
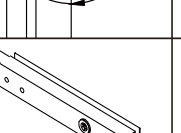
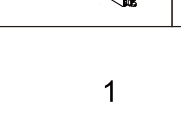
No.	Picture	Qty.	USE
A5-2		x1	STEP 3
A5-4		x1	STEP 3
A6-1		x1	STEP 7
A6-2		x1	STEP 7
A6-3		x1	STEP 11
A6-4		x1	STEP 11
A7-1		x1	STEP 4
A7-2		x1	STEP 4
A7-3		x1	STEP 4
A7-4		x1	STEP 4
A8-1		x1	STEP 8
A8-2		x1	STEP 8

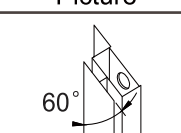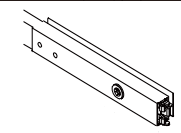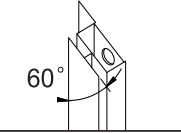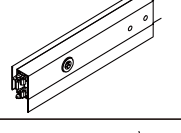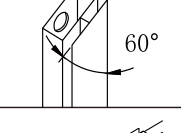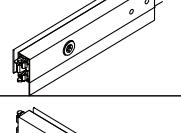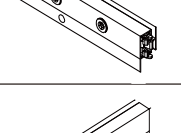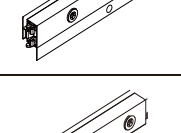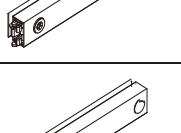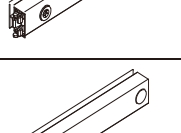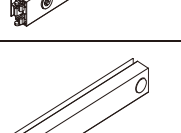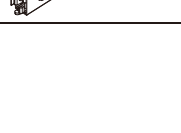No.	Picture	Qty.	USE
A8-3		x1	STEP 8
A8-4		x1	STEP 8
A9-1		x1	STEP 9
A9-2		x1	STEP 9
A9-3		x1	STEP 9
A9-4		x1	STEP 9
A10-1		x2	STEP 18
A10-2		x2	STEP 18
A11		x4	STEP 25
A12		x4	STEP 4 2pcs STEP 5 2pcs
A13		x2	STEP 5
A14		x2	STEP 10

					
Toolbox	Hammer	Glove	Power drill	Tape Measure	Bitbits

Aluminum Parts :

No.	Picture	Qty.	USE
A15		x16	STEP 16 8pcs STEP 17 8pcs
A16		x12	STEP 18 4pcs STEP 19 8pcs
A17		x2	STEP 18
A18-1		x1	STEP 10
A18-2		x1	STEP 10
A19		x2	STEP 10
A20		x4	STEP 25
A21		x6	STEP 21
A22-1		x1	STEP 13
A22-2		x1	STEP 12
A22-3		x1	STEP 12
A22-4		x1	STEP 12
A23-1		x1	STEP 25

No.	Picture	Qty.	USE
A23-2		x1	STEP 25
A23-3		x1	STEP 25
A23-4		x1	STEP 25
A24-1		x1	STEP 25
A24-2		x1	STEP 25
A24-3		x1	STEP 25
A24-4		x1	STEP 25
A25		x1	STEP 6
A26		x6	STEP 1
A27		x4	STEP 14
A28		x2	STEP 15
A30-2		x2	STEP 24



Plastic Parts:

No.	Picture	Qty.	USE
H1		x4	STEP 2
H2-1		x2	STEP 5 1pcs STEP 10 1pcs
H3-1		x2	STEP 7 1pcs STEP 11 1pcs





No.	Picture	Qty.	USE
H4		x6	STEP 12 1pcs STEP 13 1pcs STEP 25 4pcs
H5		x2	STEP 20
C5		x4	STEP 14






Hardware:

No.	Picture	Qty.	Size
H6		x36	M6x30
H7		x1	
H8		x117	M6x12
H9		x51	M6
H11		x40	ST4x10
H12		x16	ST5x10
H13		x24	ST5x16
H14		x1	

No.	Picture	Qty.	Size
H15		x1	
H16		x2	
H17		x4	
H18		x26	M6x20
H19		x4	
H20		x2	M4x35
H22		x4	ST4x16
A30-1		x2	

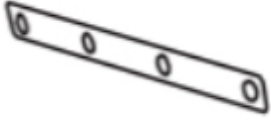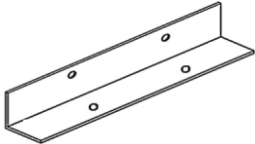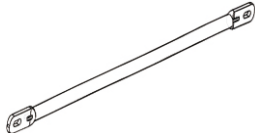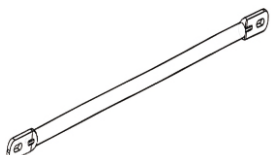
Hardware :

No.	Picture	Qty.	USE
C1		x4	STEP 15
C2.		x2	STEP 7 1pcs STEP 11 1pcs
C3-1		x2	STEP 14
C6		x16	STEP 30
C7		x4	STEP 2
C9		x4	STEP 29
C10		x2	STEP 29
C11		x2	STEP 29
F8		x8	STEP 2

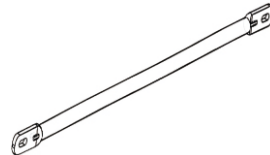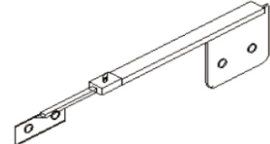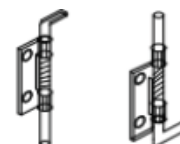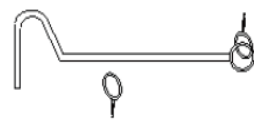No.	Picture	Qty.	USE
C12		x2	STEP 29
C13		x2	STEP 29
C14		x16	STEP 28
C15		x8	STEP 28
C16		x1	STEP 26
C17		x1	STEP 13
C18		x1	STEP 27
C19		x2	STEP 27
F9		x8	STEP 2


TWin PC Board:

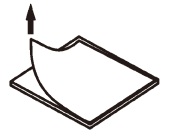The white film faces
outwards if applicable.




No.	Picture	Qty.		USE
B		B1	6PCS	STEP 4: 4pcs STEP 5: 2pcs
		B2	2PCS	STEP 8
		B3	18PCS	STEP 16: 9pcs STEP 17: 9pcs
		B4	16PCS	STEP 18: 7pcs STEP 19: 9pcs
		B5	2PCS	STEP 19
		B7	2PCS	STEP 9
		B8	1PCS	STEP 6
			1PCS	STEP 6
		B9	1PCS	STEP 7
		B10	1PCS	STEP 11
			1PCS	STEP 11
		B13	1PCS	STEP 11
		B6	2PCS	STEP 15
		B11	2PCS	STEP 11
		B12	1PCS	STEP 9
		B14	1PCS	STEP 13
		B15	2PCS	STEP 25
		B16	4PCS	STEP 25

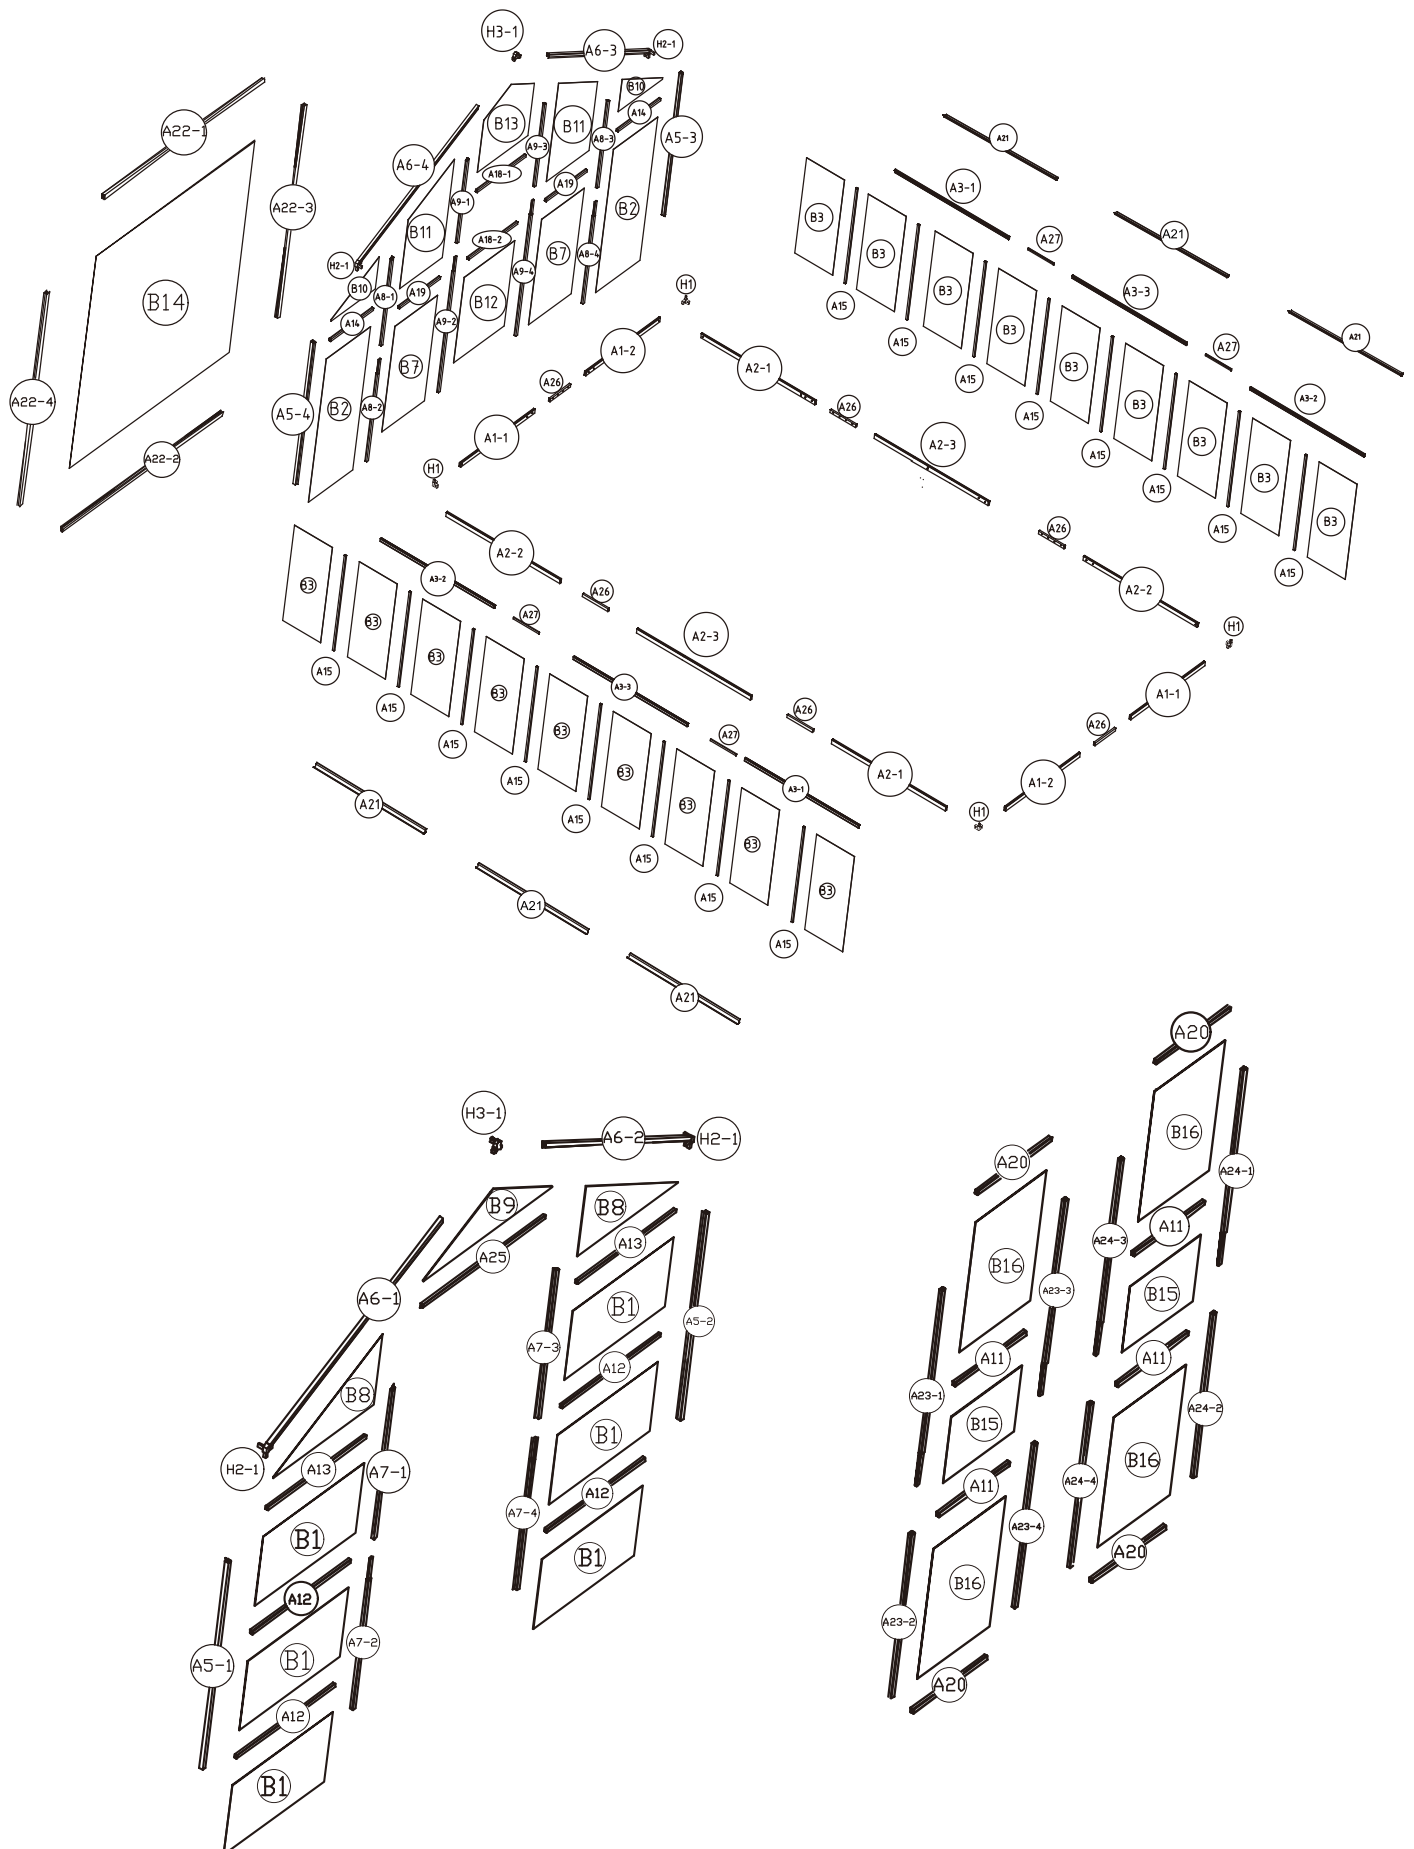WALL SECTION



ROOF SECTION

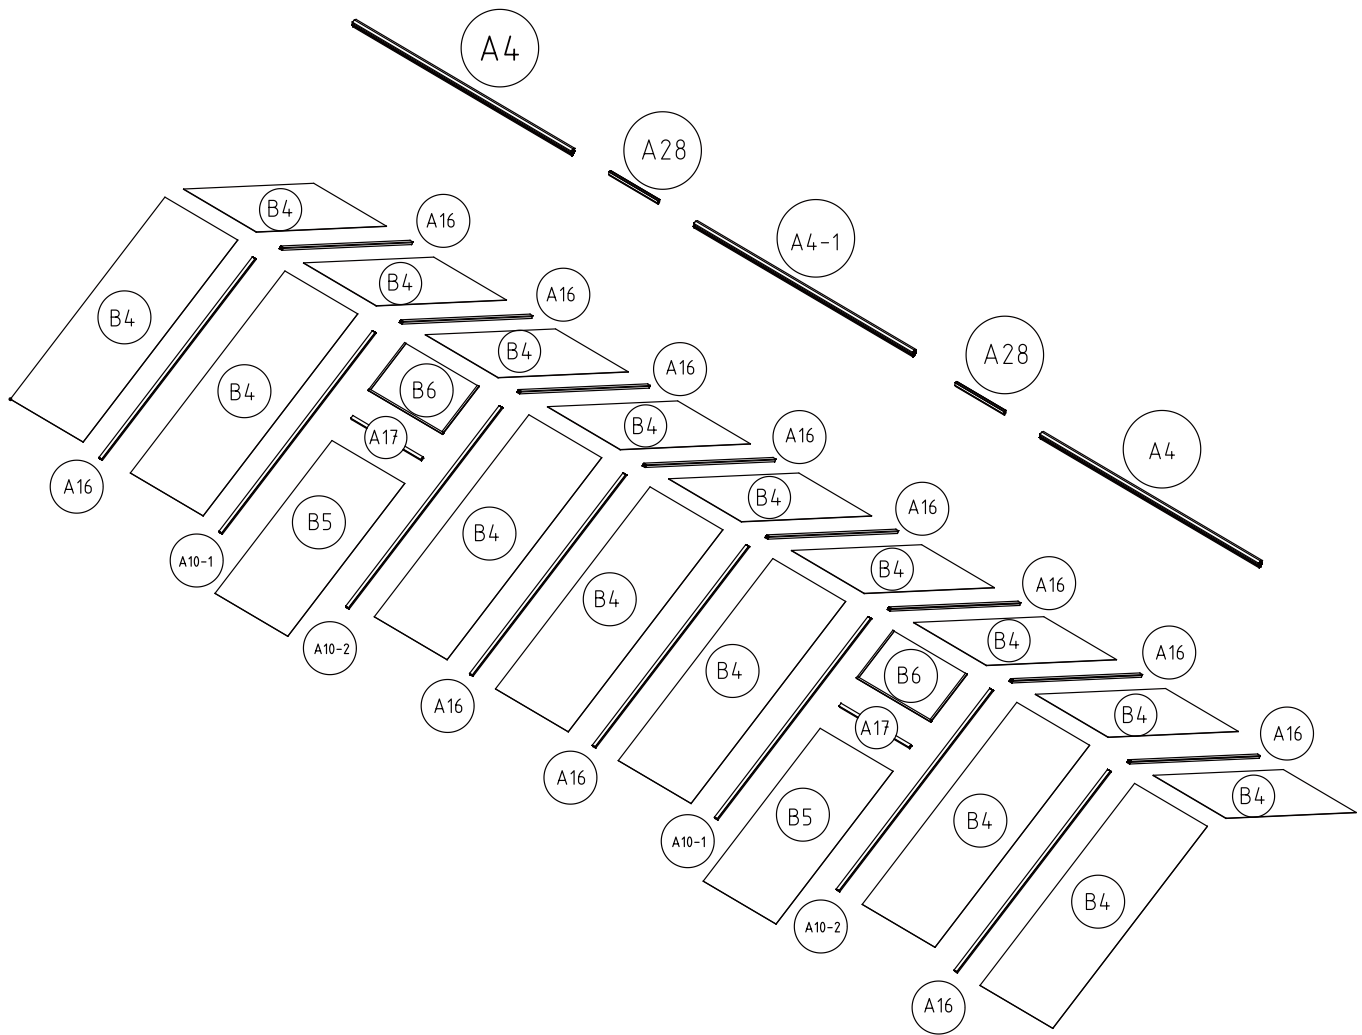

Please read the following carefully before assembling

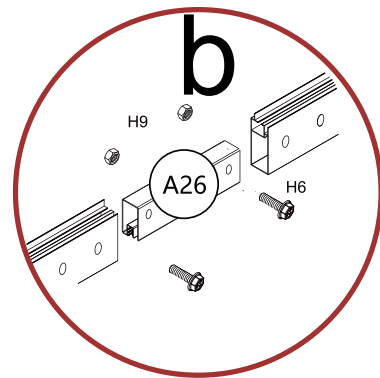
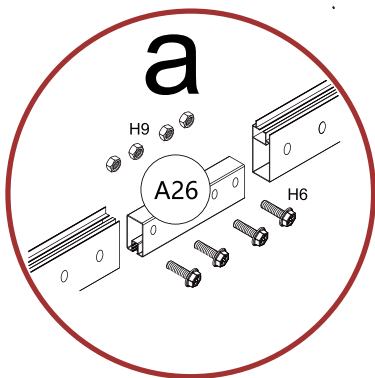
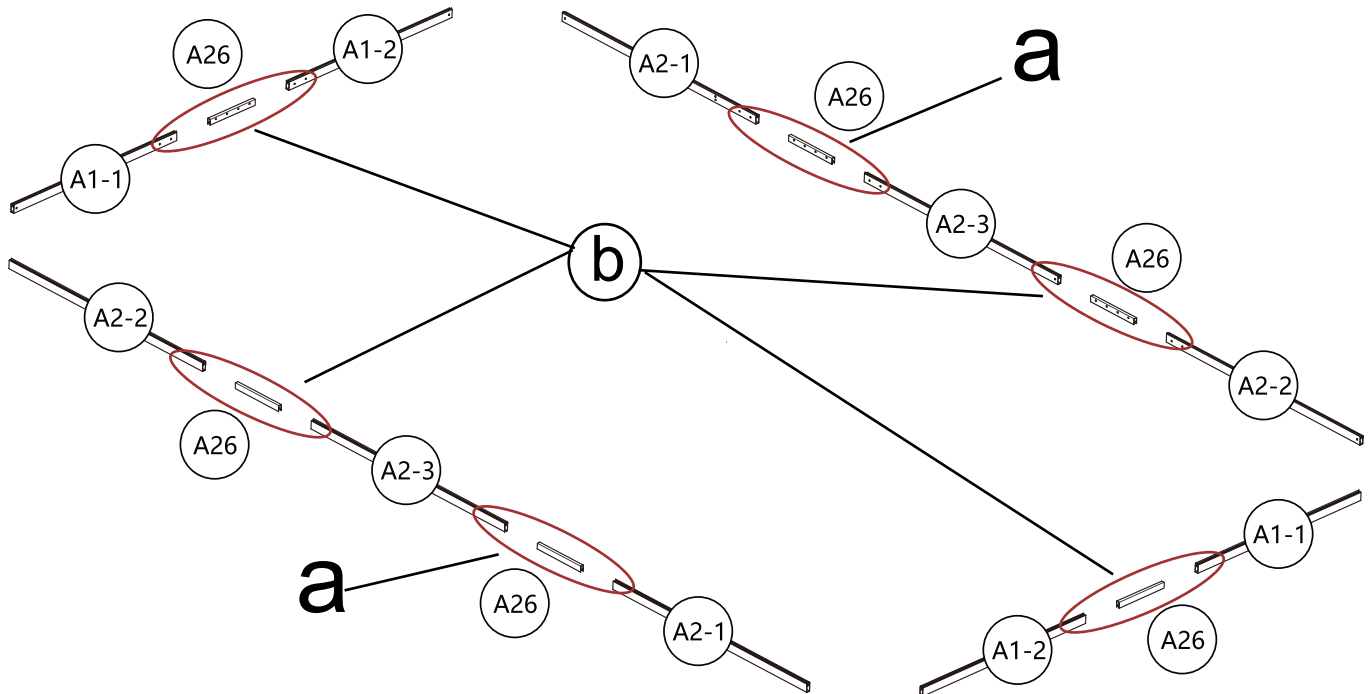
Precautions for assembling the PC board:

1. Before assembly, it is necessary to remove the film on both sides of the PC board;

2. It is recommended that glass glue can be applied to the edges of the PC board when installing it to enhance the overall firmness.

C7 must be installed in the way suggested in the manual, if it is a cement floor, fix it with expansion screw F8; The soil floor is fixed with a ground nail F9.



Warning: Do not install in windy weather!




 M6x30	H6	x16
 M6	H9	x16

STEP 2

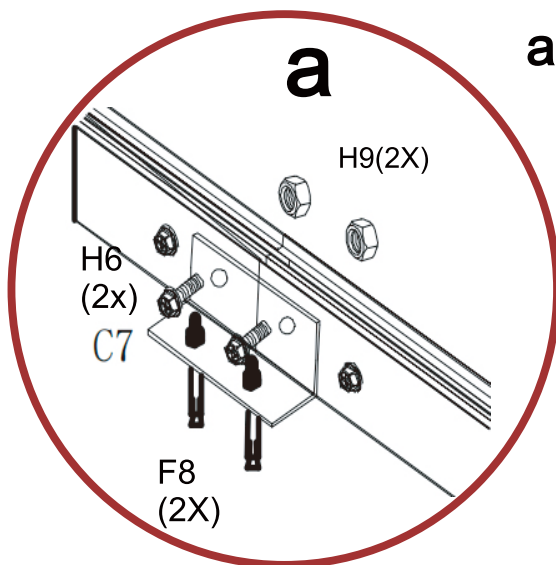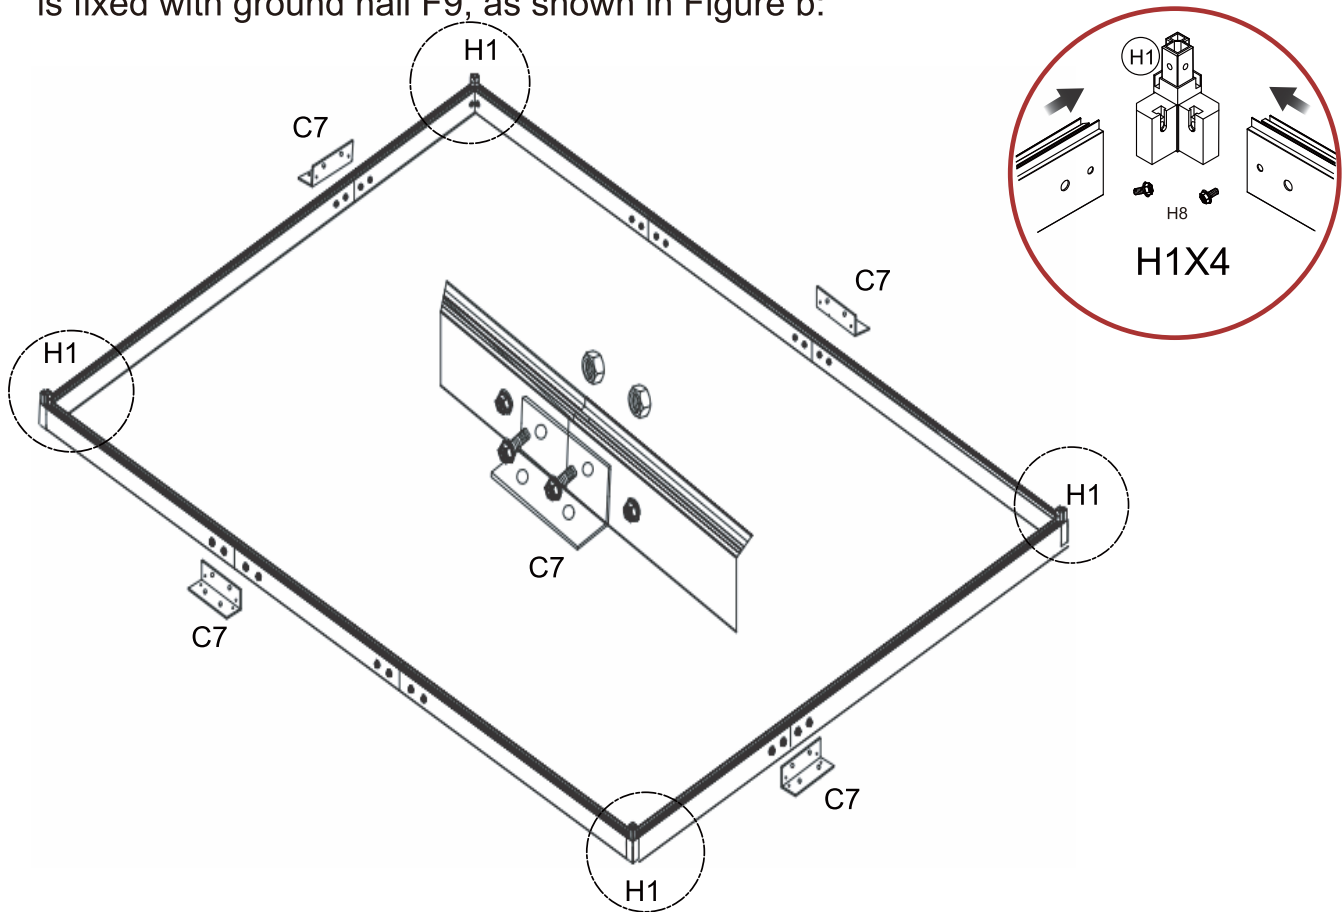C7 Please install the installation manual, if it is a cement floor, fix it with expansion screw F8, as shown in Figure a; The muddy ground is fixed with ground nail F9, as shown in Figure b:



a or b

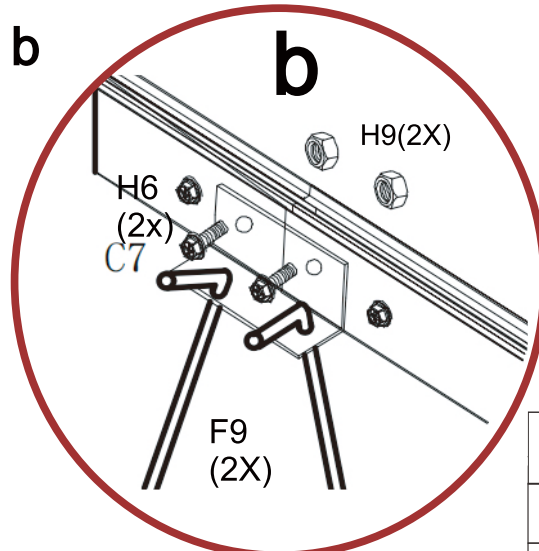


Ground nail F9 please insert at an angle.


	F8	x8
	H6	x8
	H9	x8
	H8	x8
	F9	x8

STEP 3

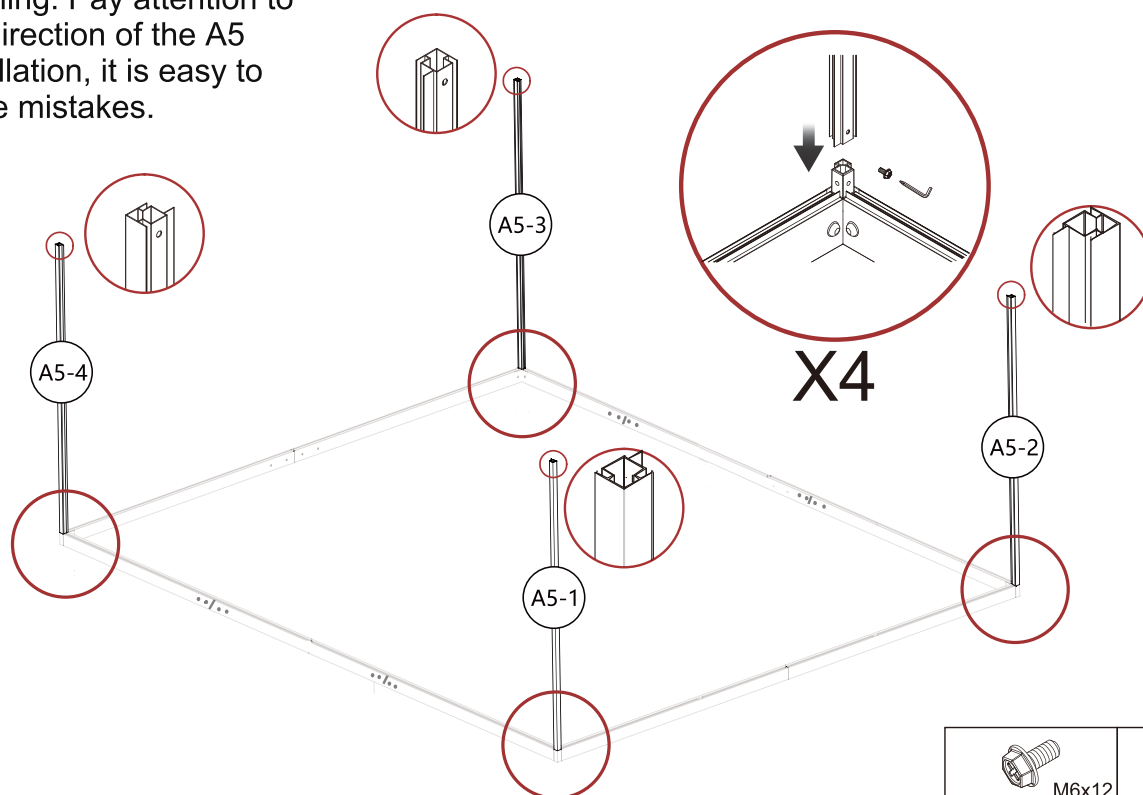Warning: Pay attention to the direction of the A5 installation, it is easy to make mistakes.




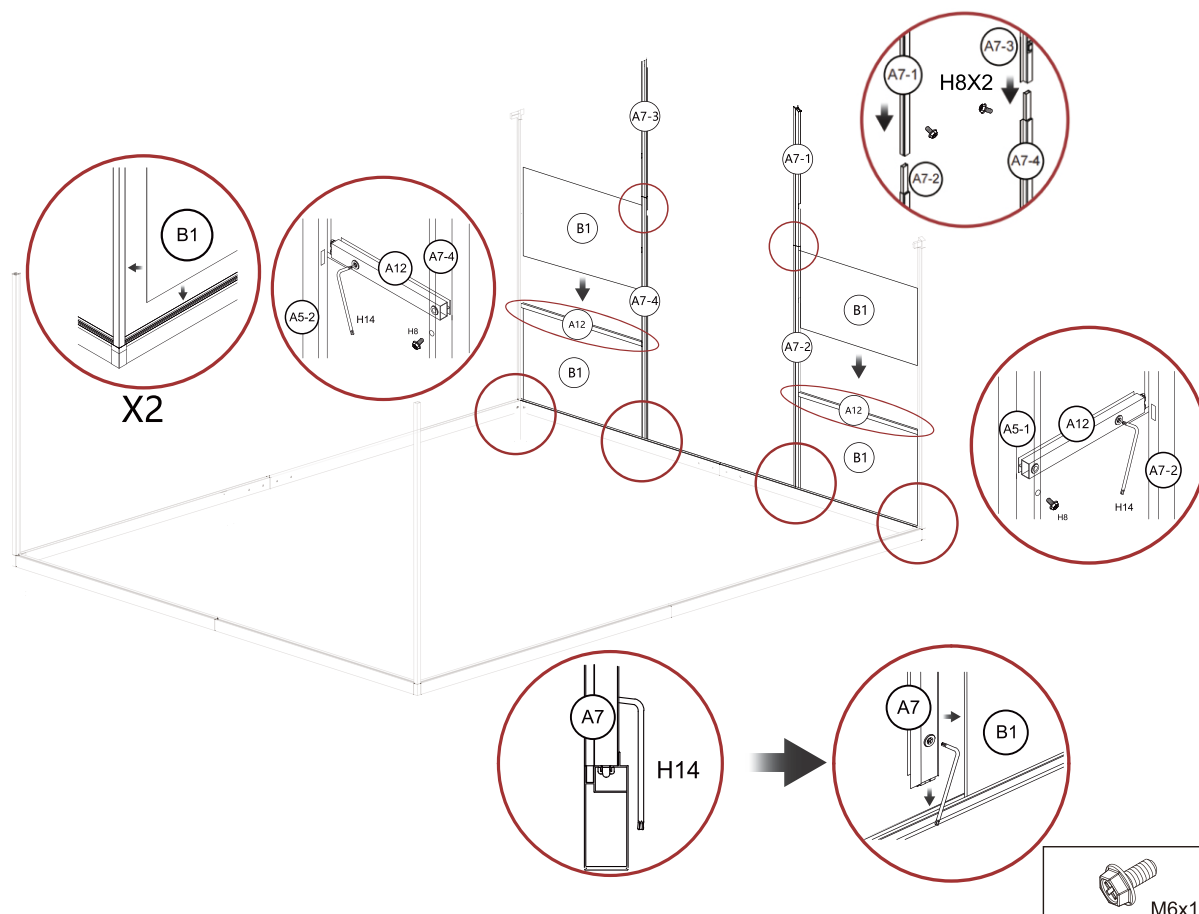STEP 4




STEP 5

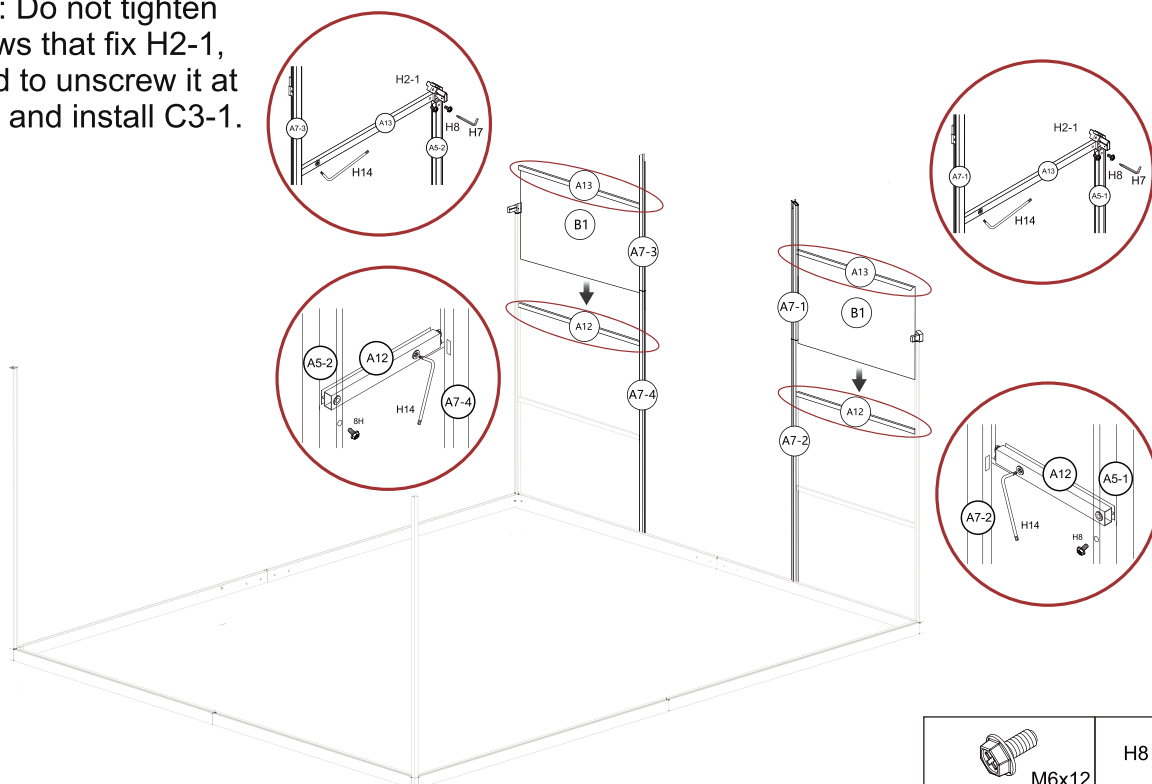Warning: Do not tighten the screws that fix H2-1, you need to unscrew it at the back and install C3-1.




STEP 6

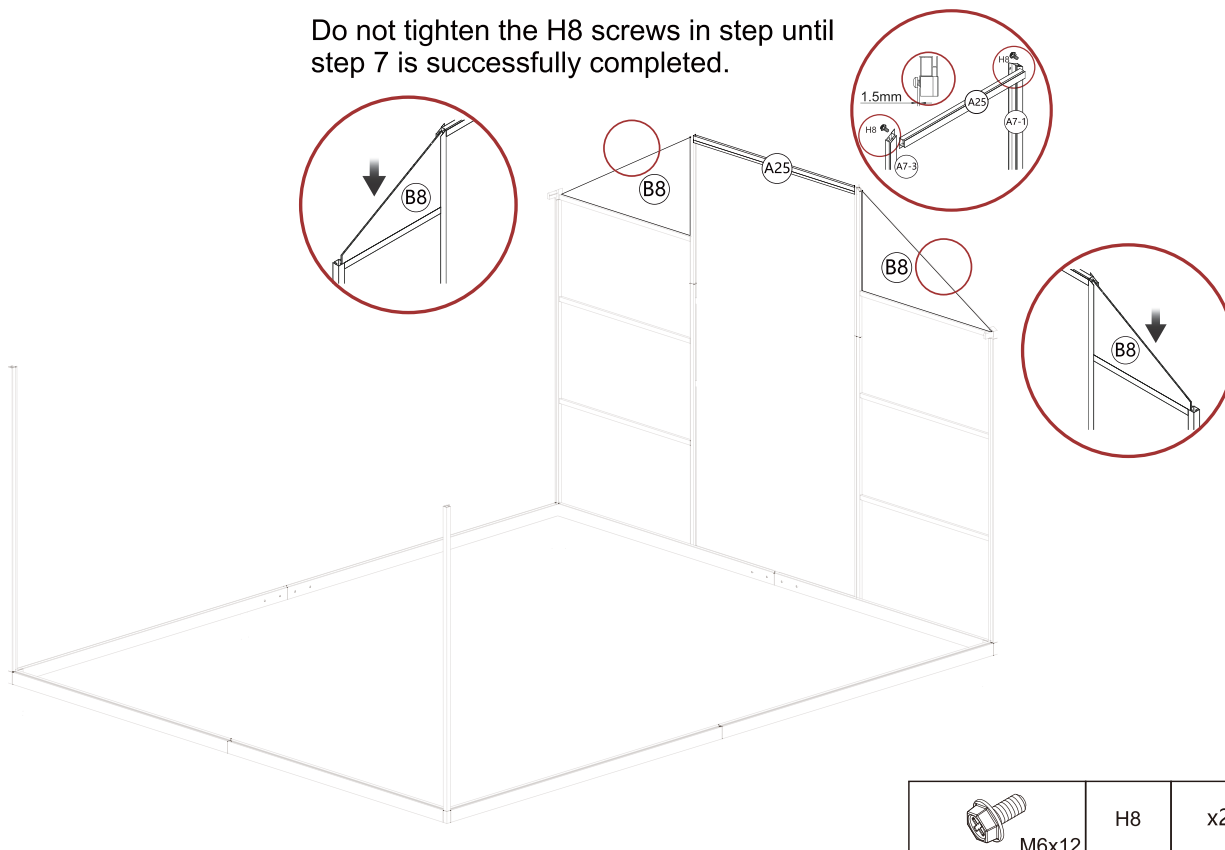Do not tighten the H8 screws in step until step 7 is successfully completed.




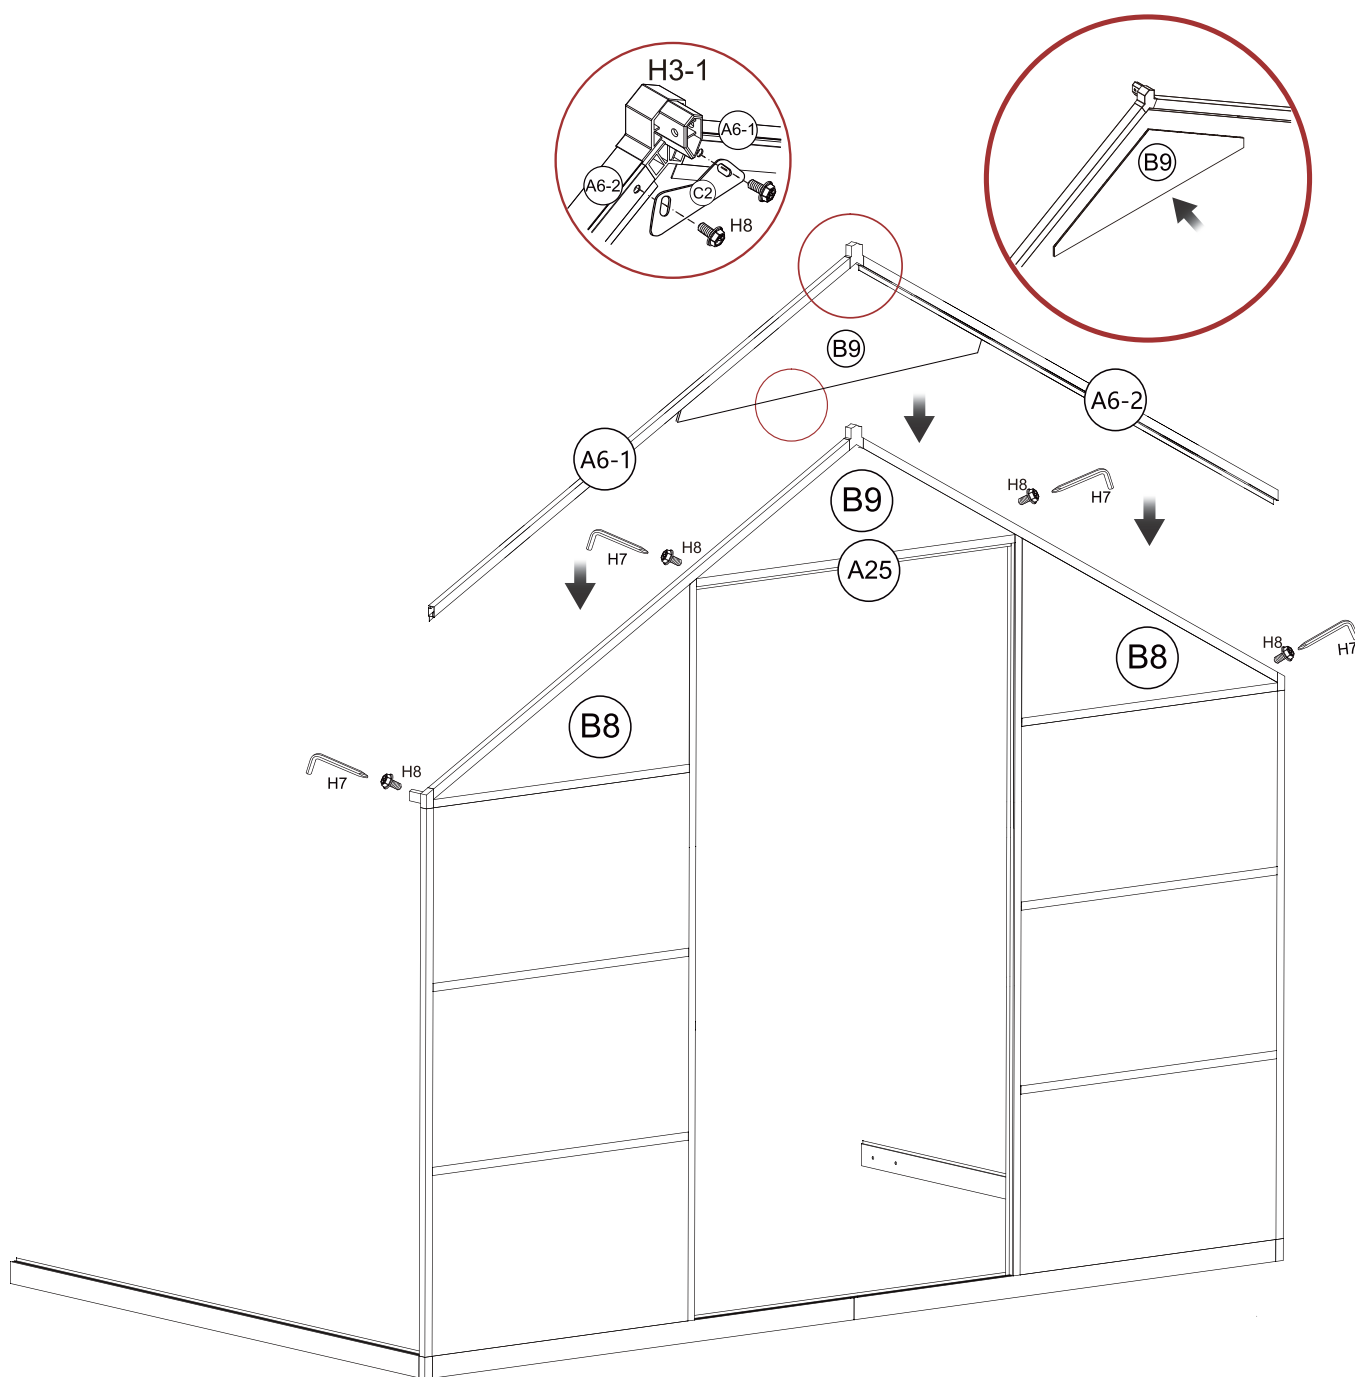STEP 7




	H8	x6
M6x12		

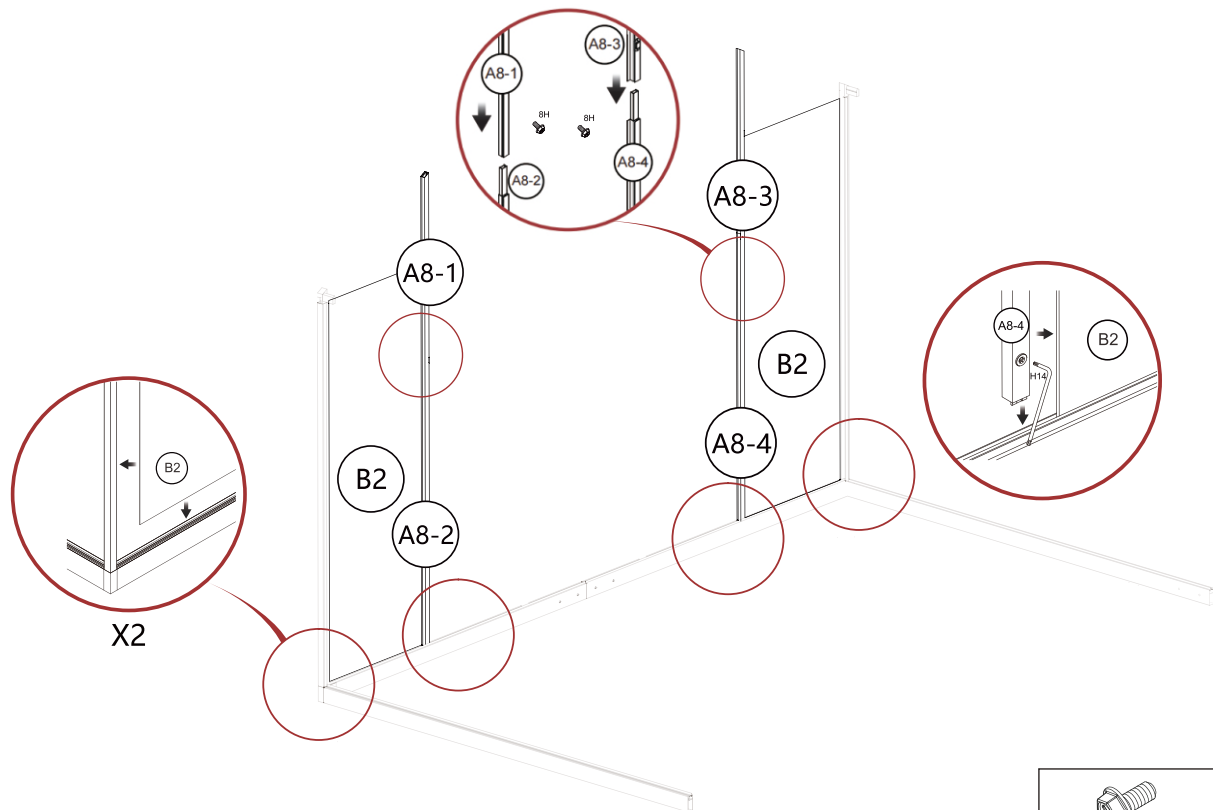
STEP 8



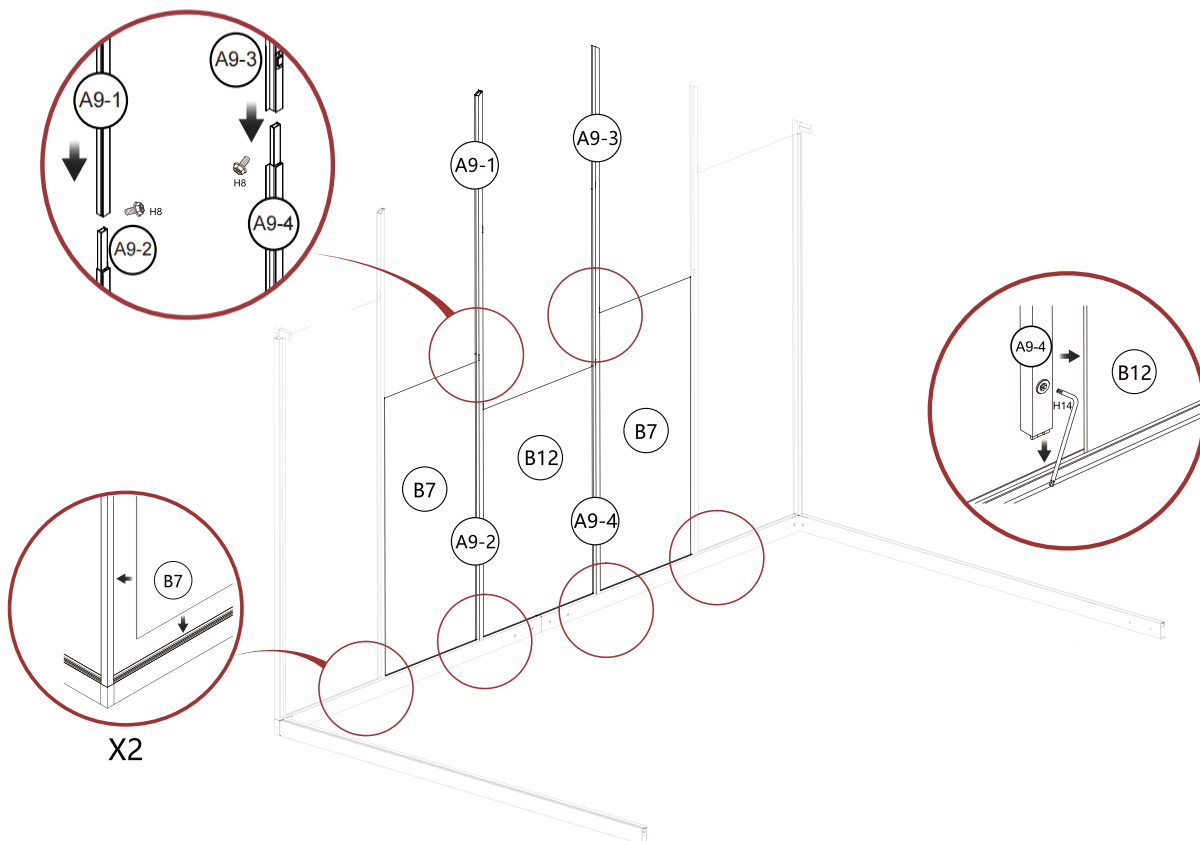
STEP 9



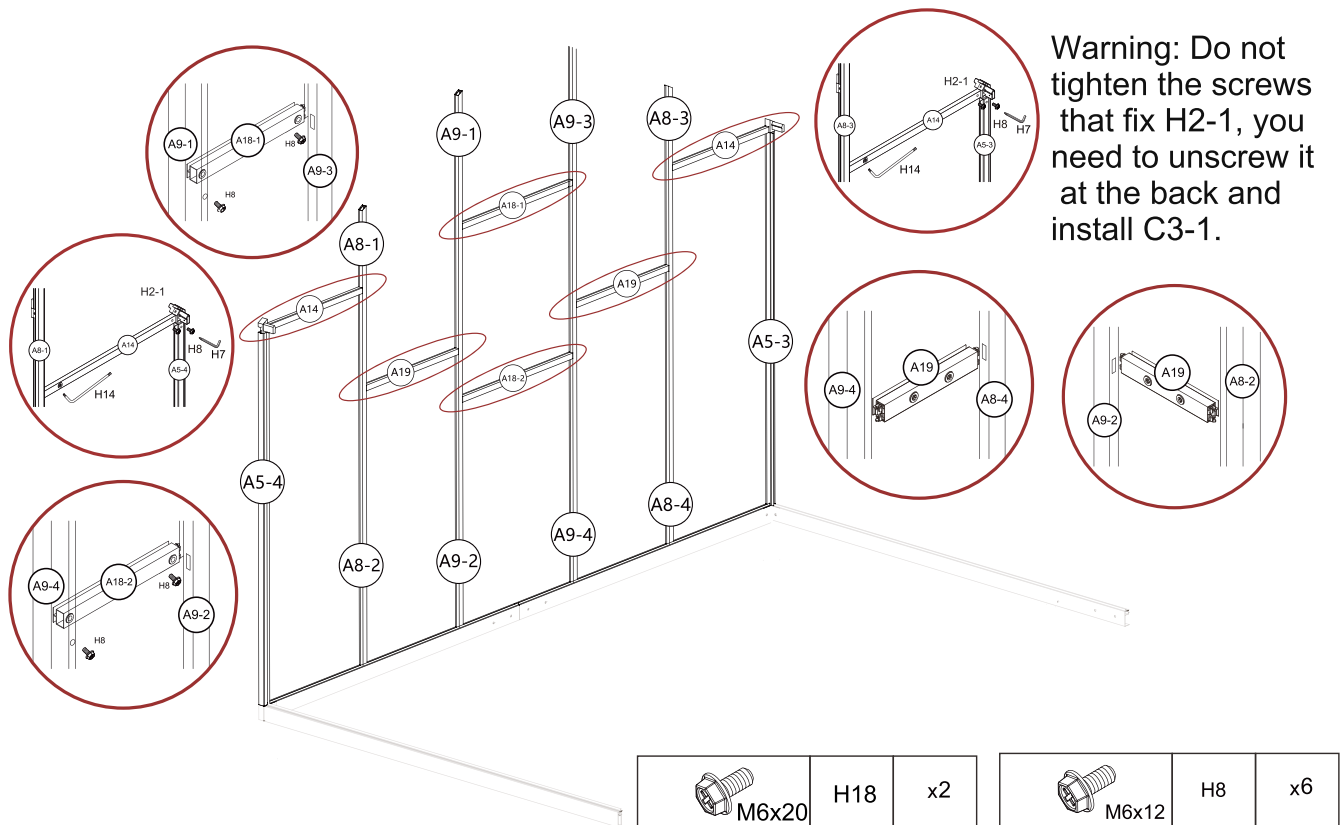STEP 10




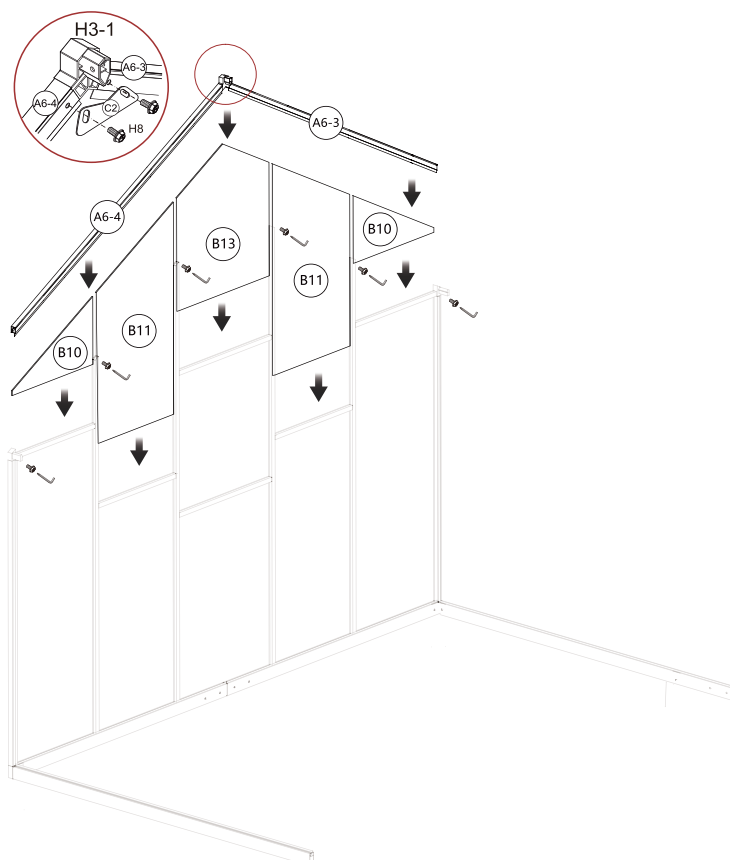STEP 11



	M6x12	H8	x8
---	-------	----	----

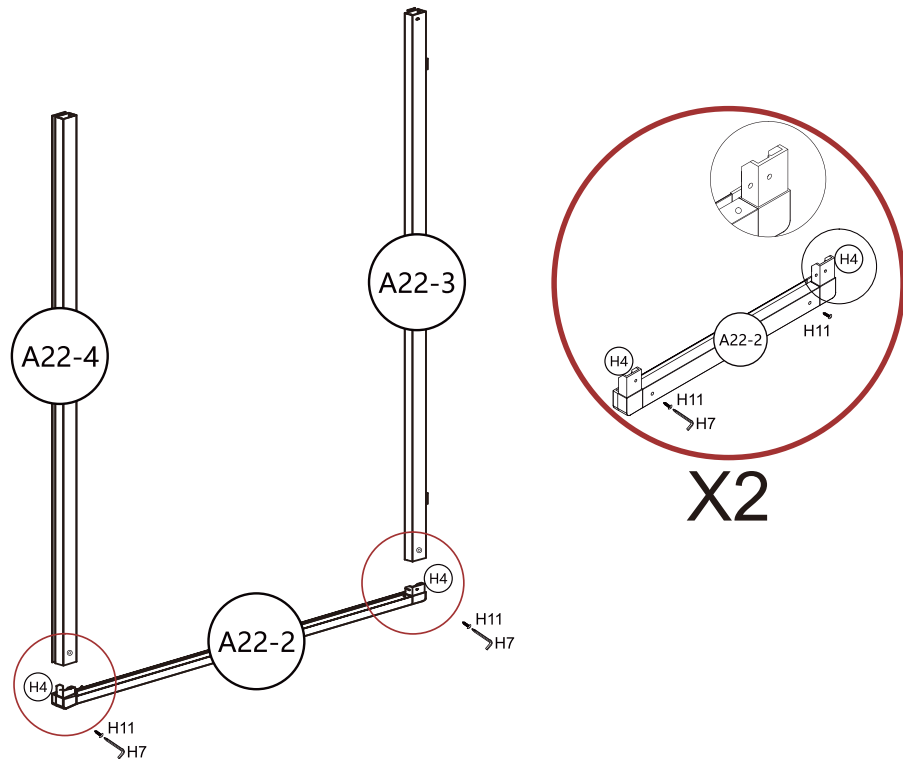STEP 12




X2

		H11	X2
---	---	-----	----


STEP 13

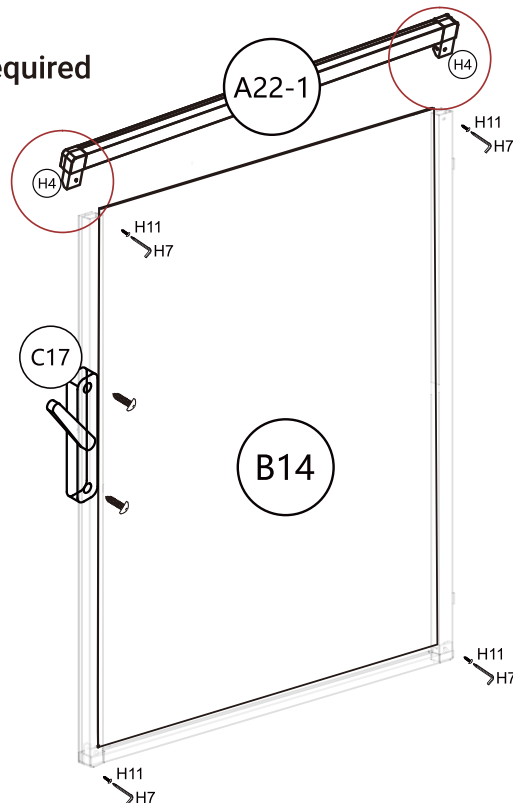The C17 comes with all required mounting hardware.





		H11	X4
---	---	-----	----

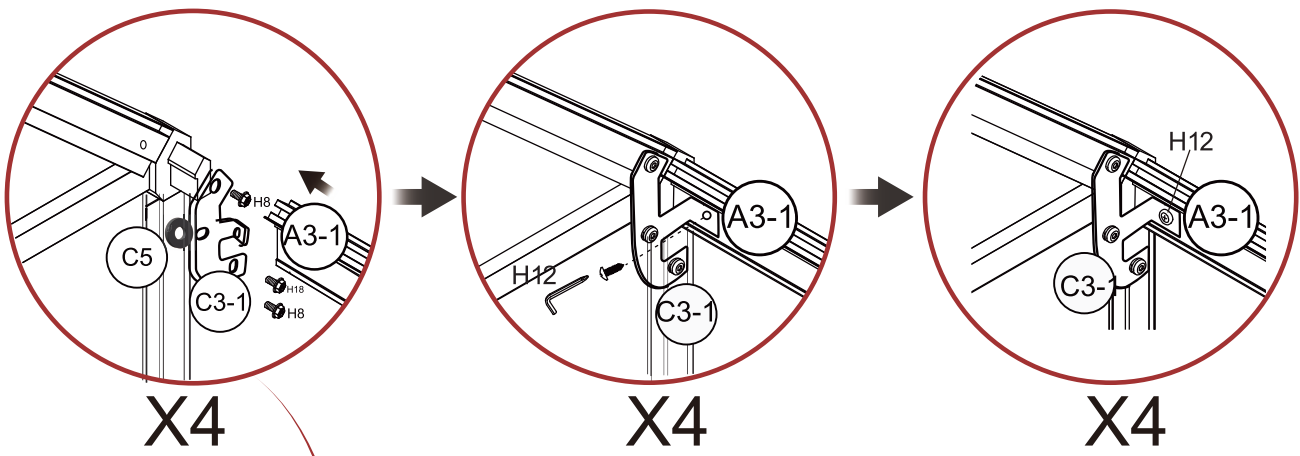STEP 14



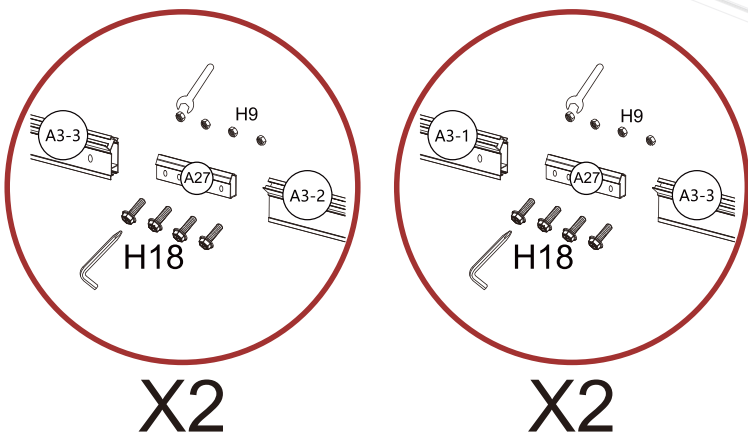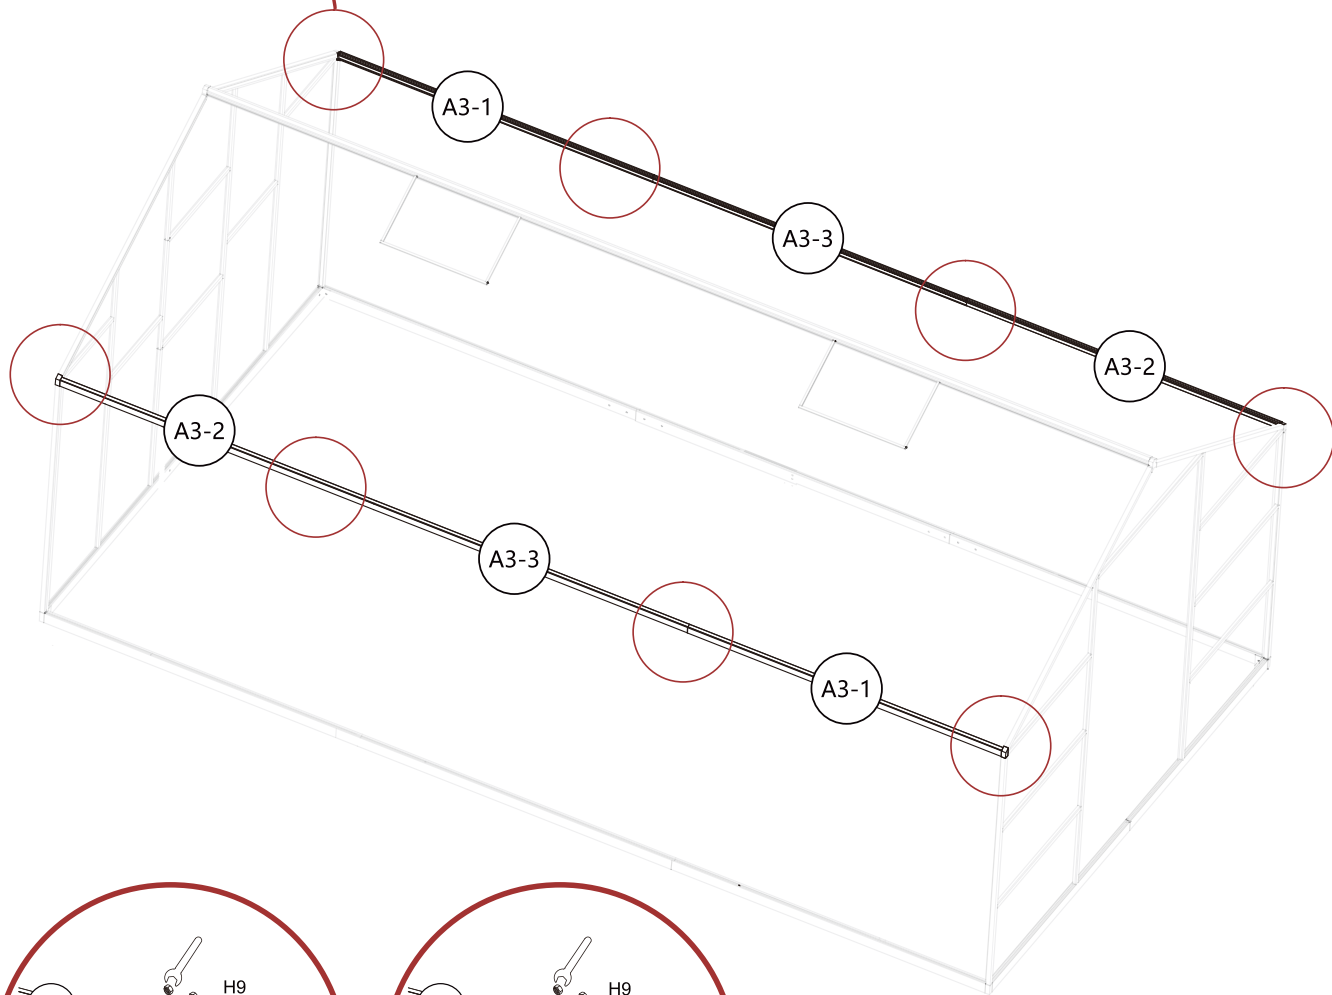To install the C3-1 reinforcement, you need to loosen the previously installed H8 screws first




 M6	H9	X16
 St5x10	H12	X4
 M6x20	H18	X16

STEP 15

Step 3 Connecting H3 and A4

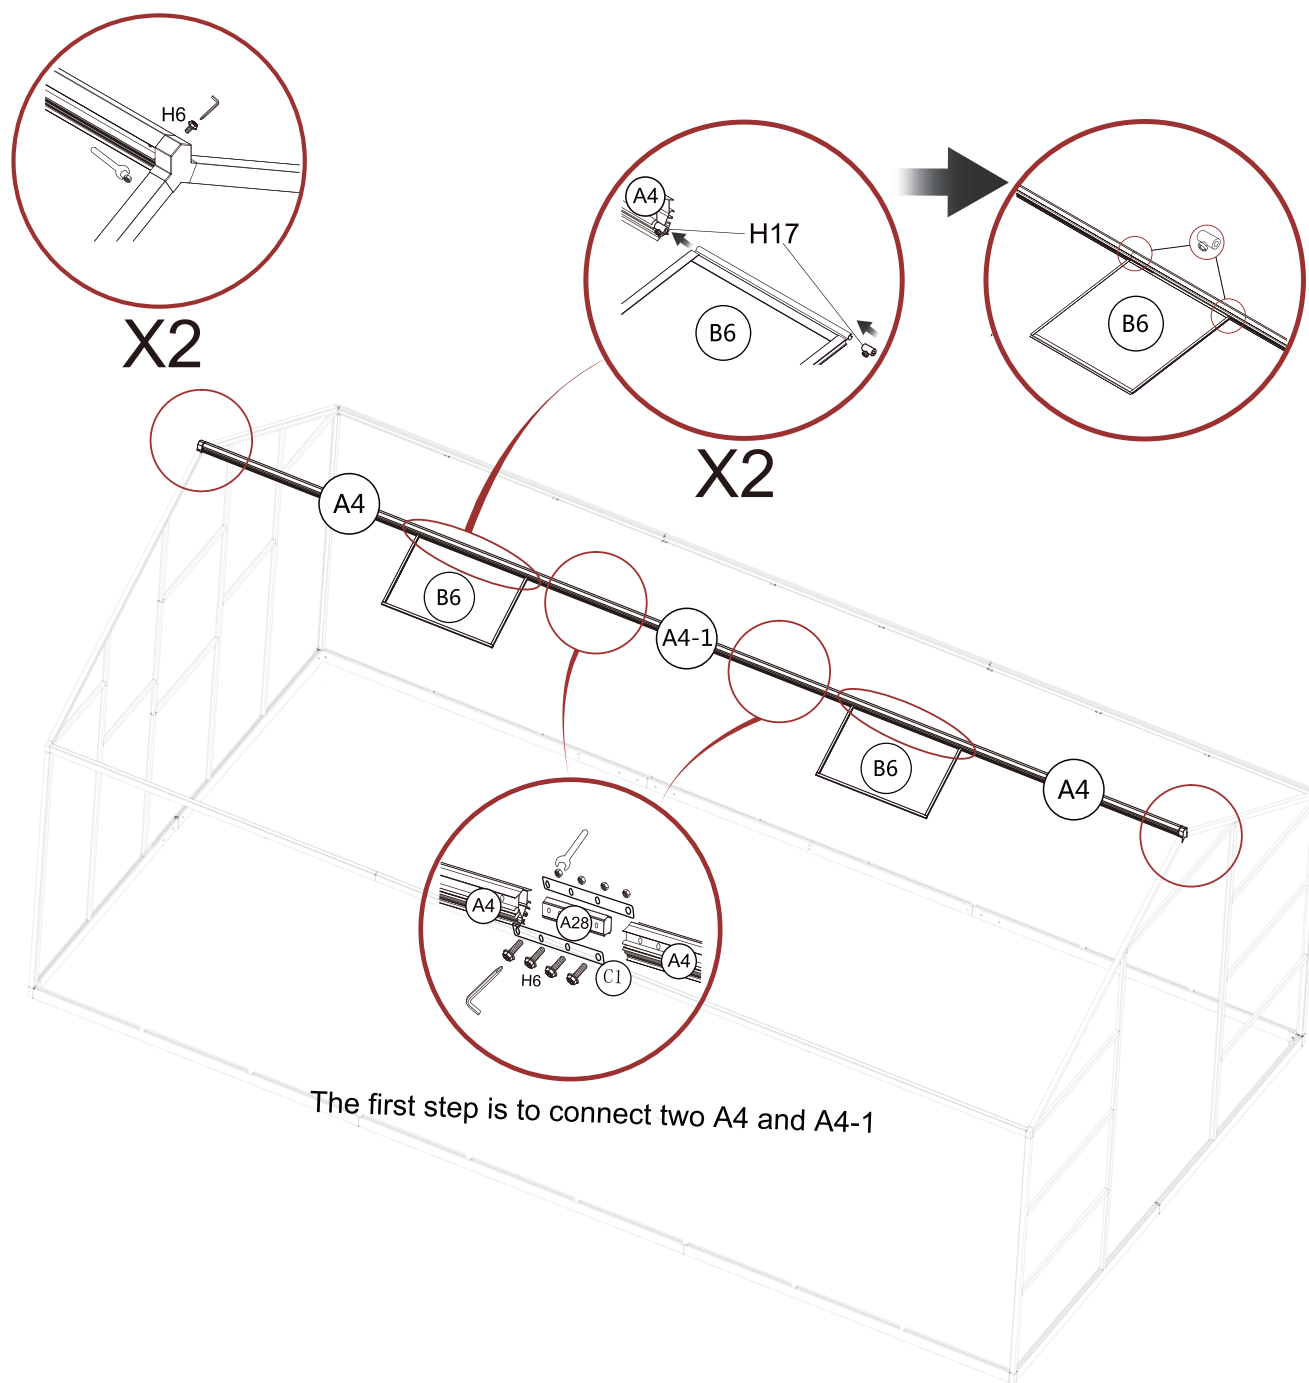Assemble the H17 fixing and the B6 window together to obtain the diagram on the right.





The first step is to connect two A4 and A4-1

 M6x30	H6	X10
 M6	H9	X10

STEP 16

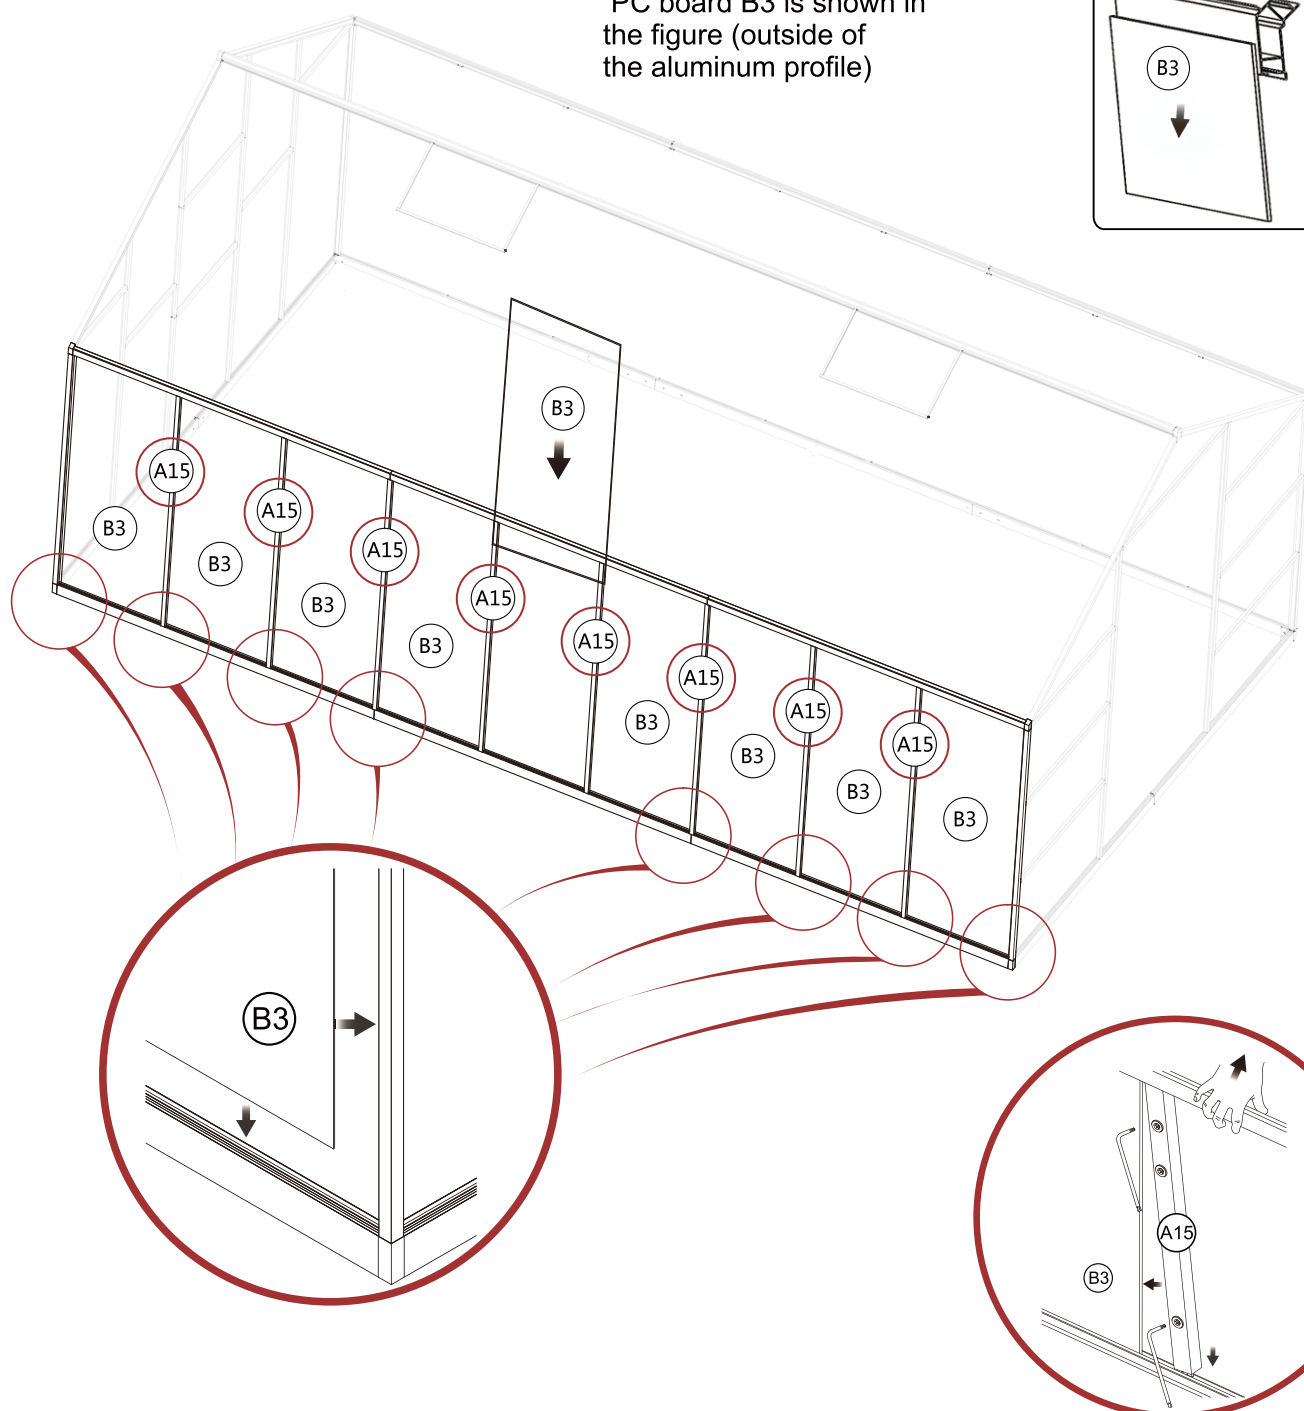
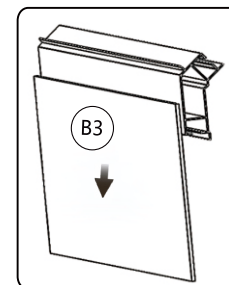
The installation position of PC board B3 is shown in the figure (outside of the aluminum profile)




X8

Please install both sides first and then the center.

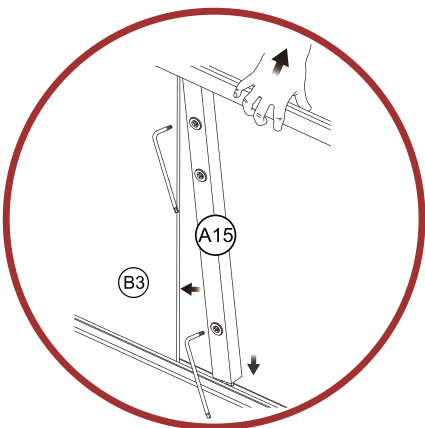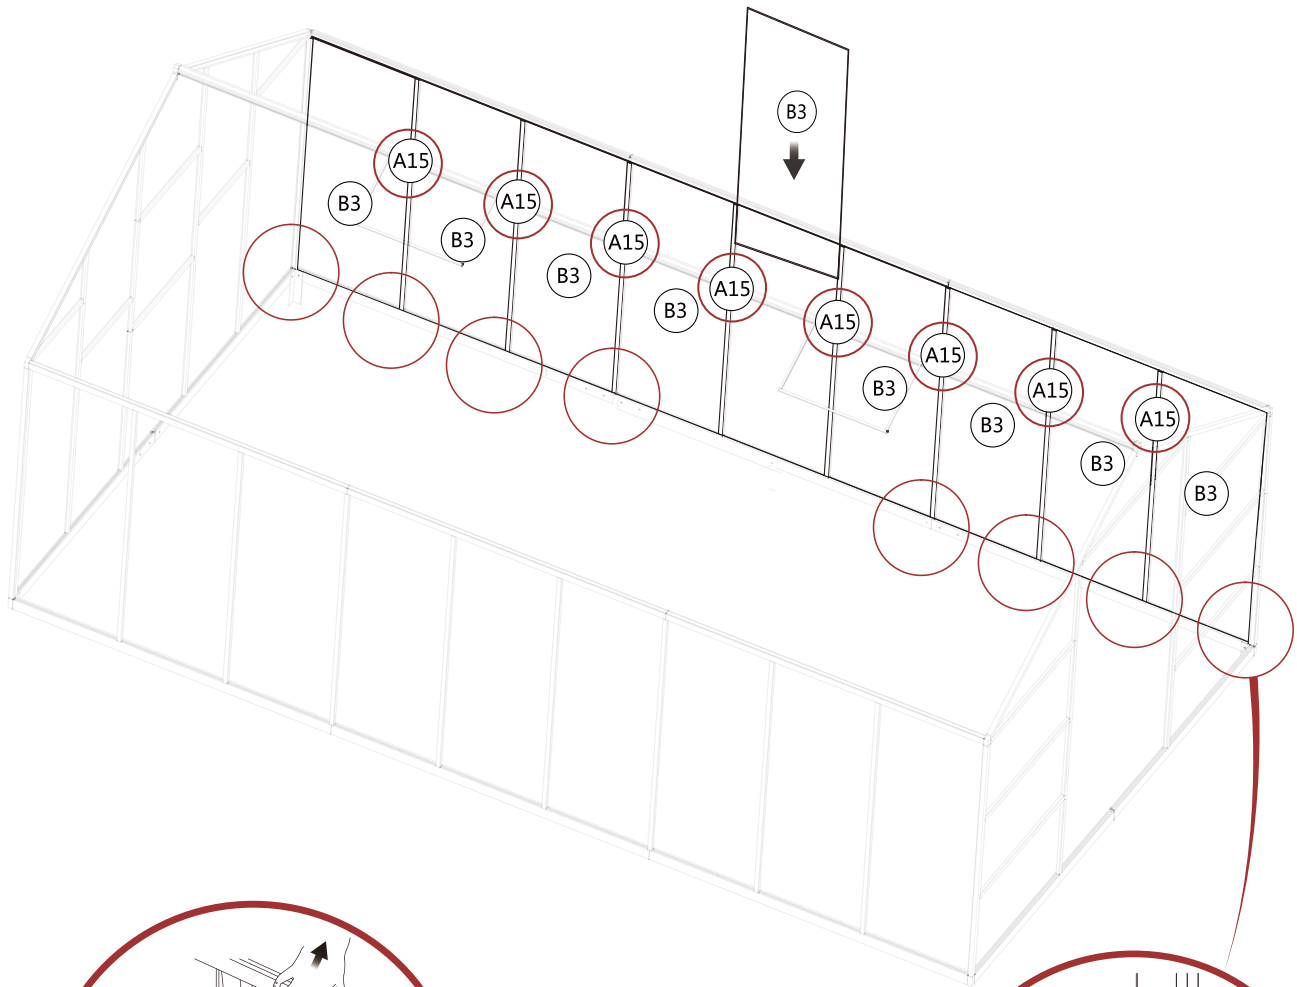STEP 17




X8

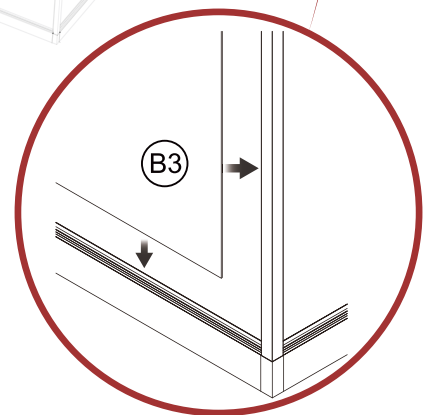


X8

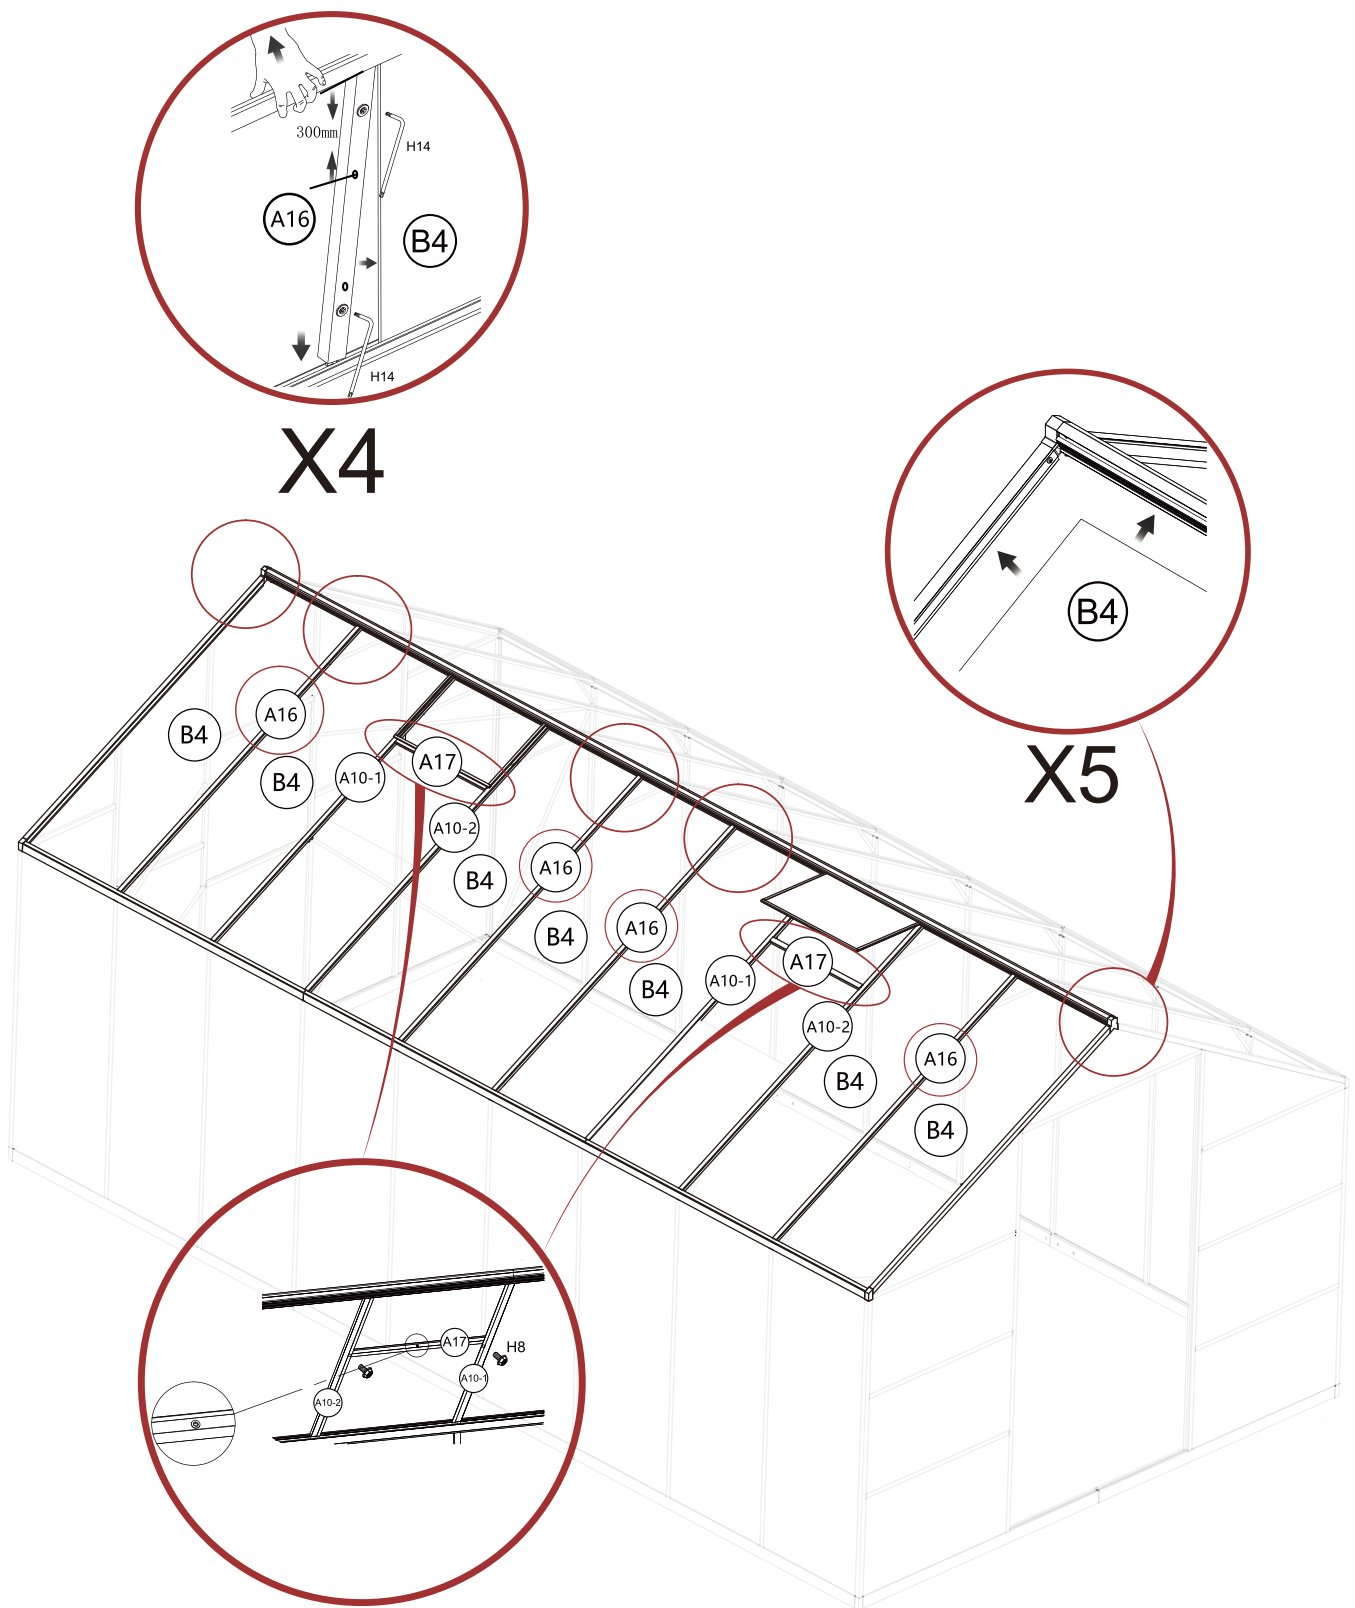
STEP 18



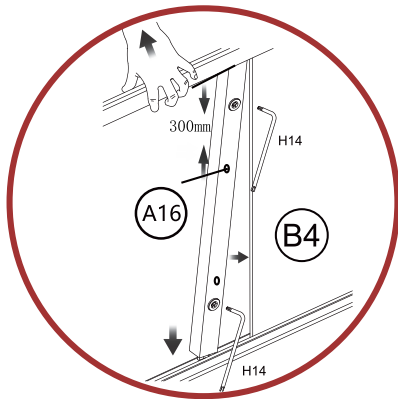
STEP 18





X3

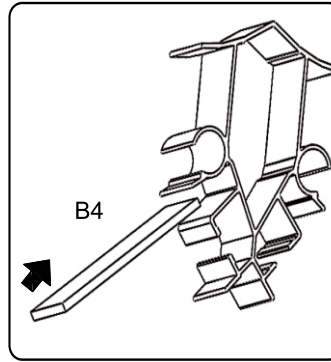

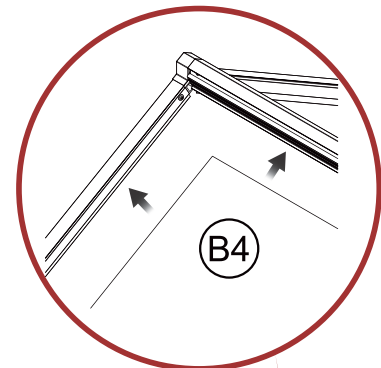The position of the top beam card slot of the PC board B4 is shown in the figure




X6

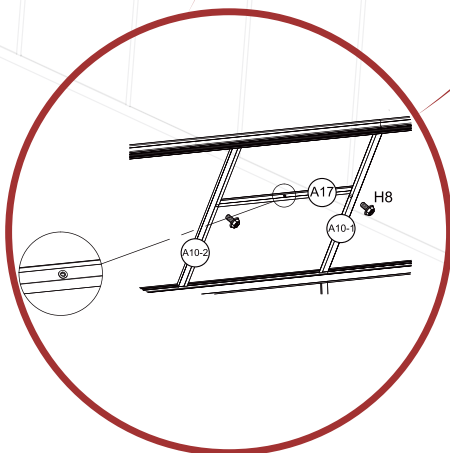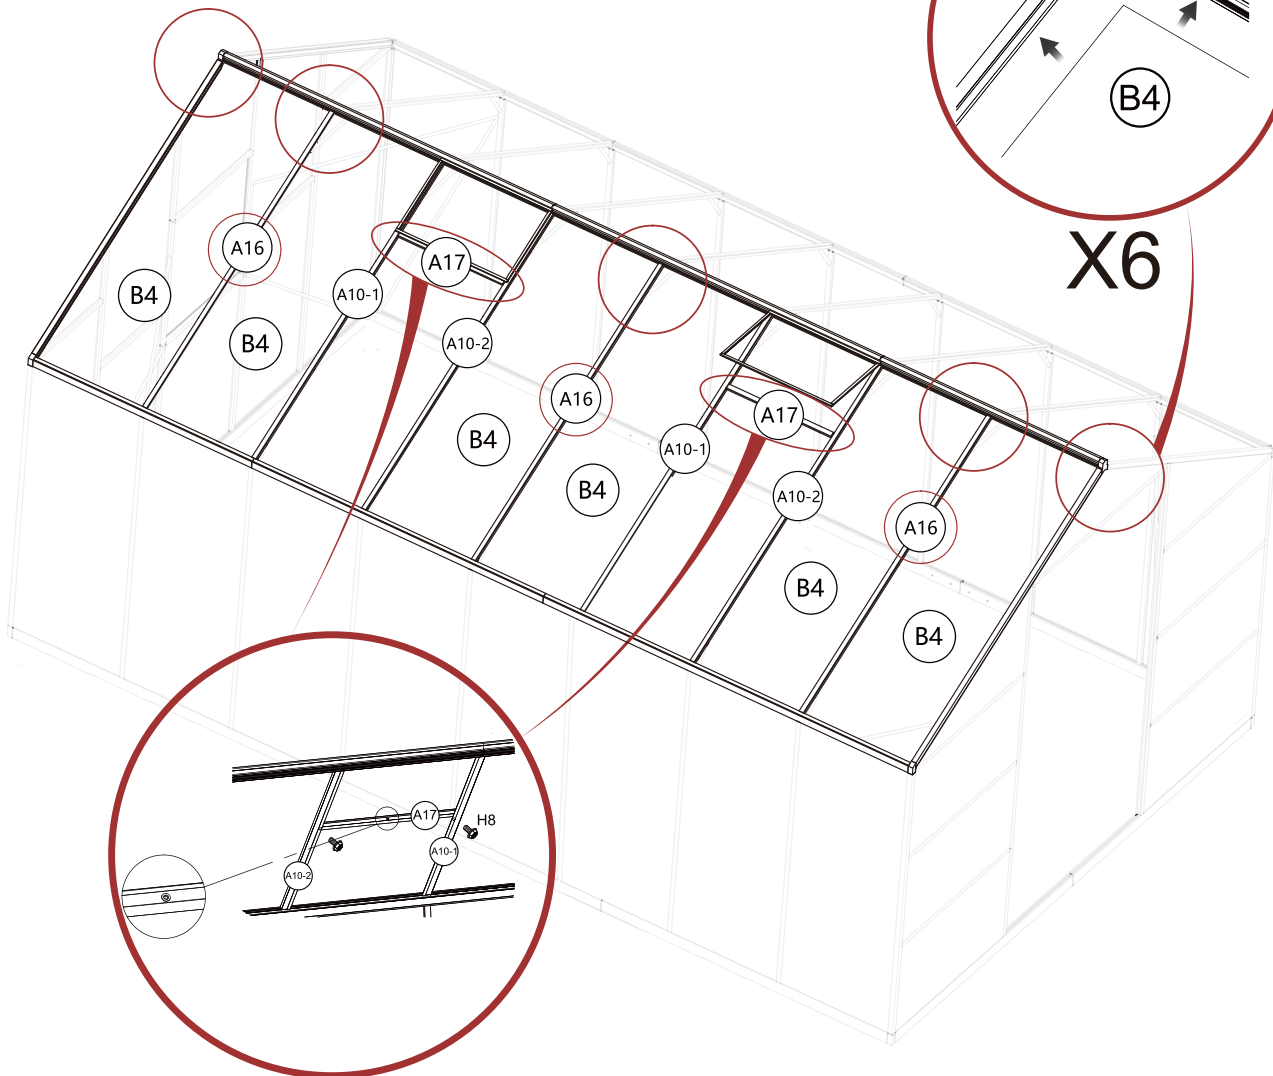


	H8	X4
---	----	----

M6x12

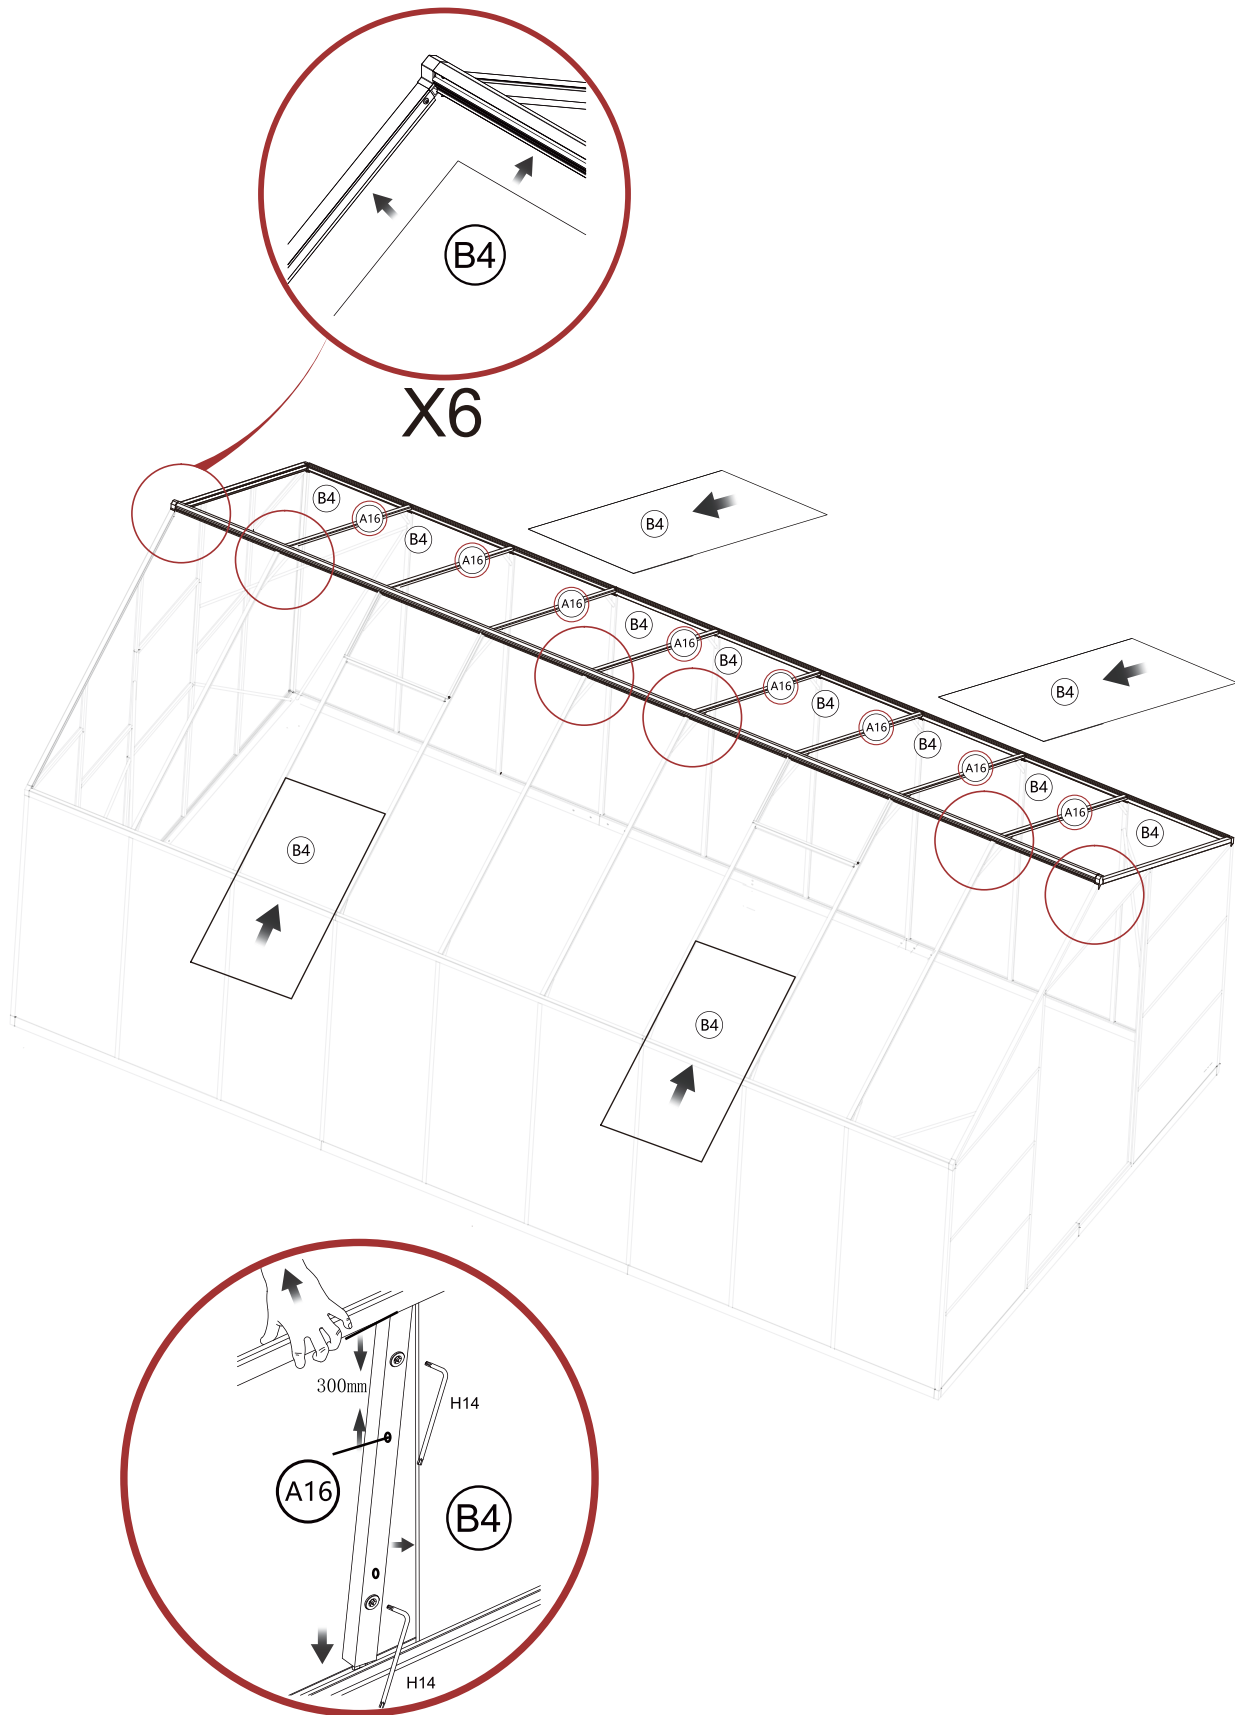STEP 19




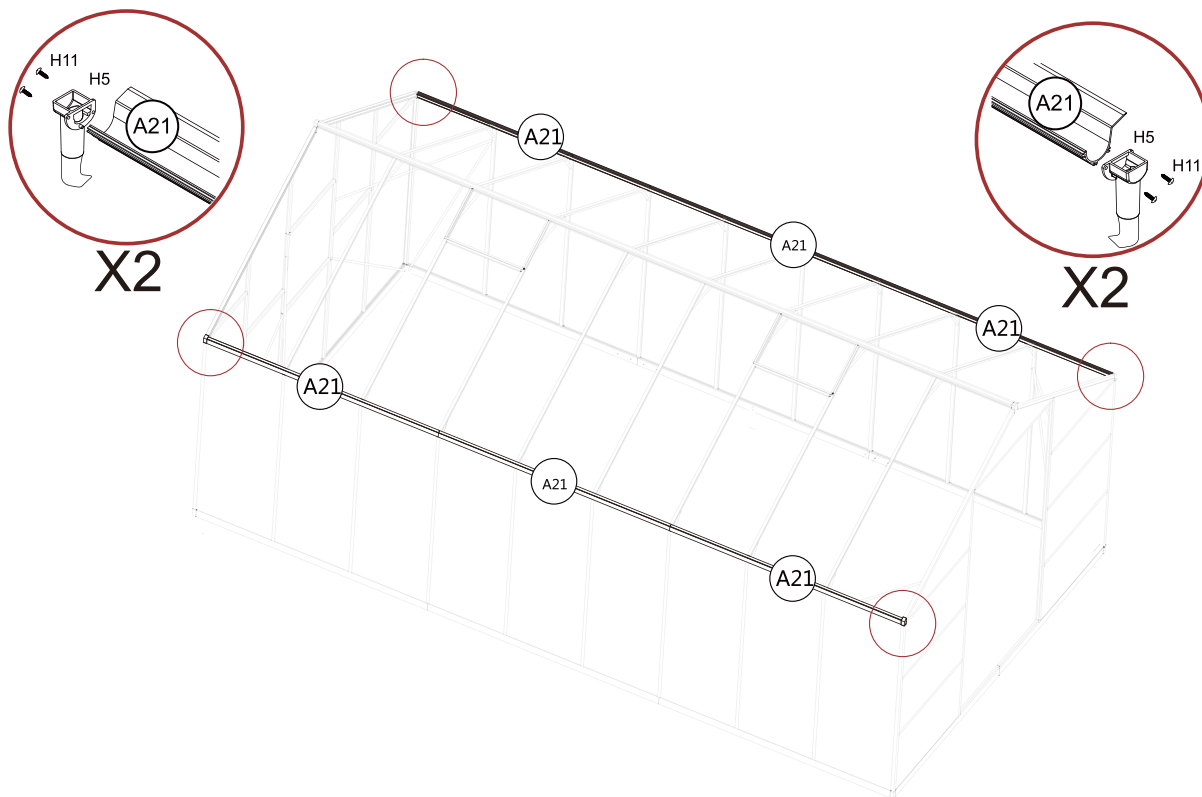STEP 20




	St4x8	H11	x8
---	-------	-----	----

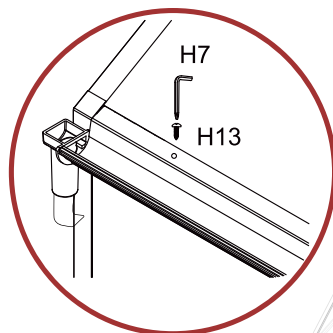STEP 21




Assembly of gutters
A21

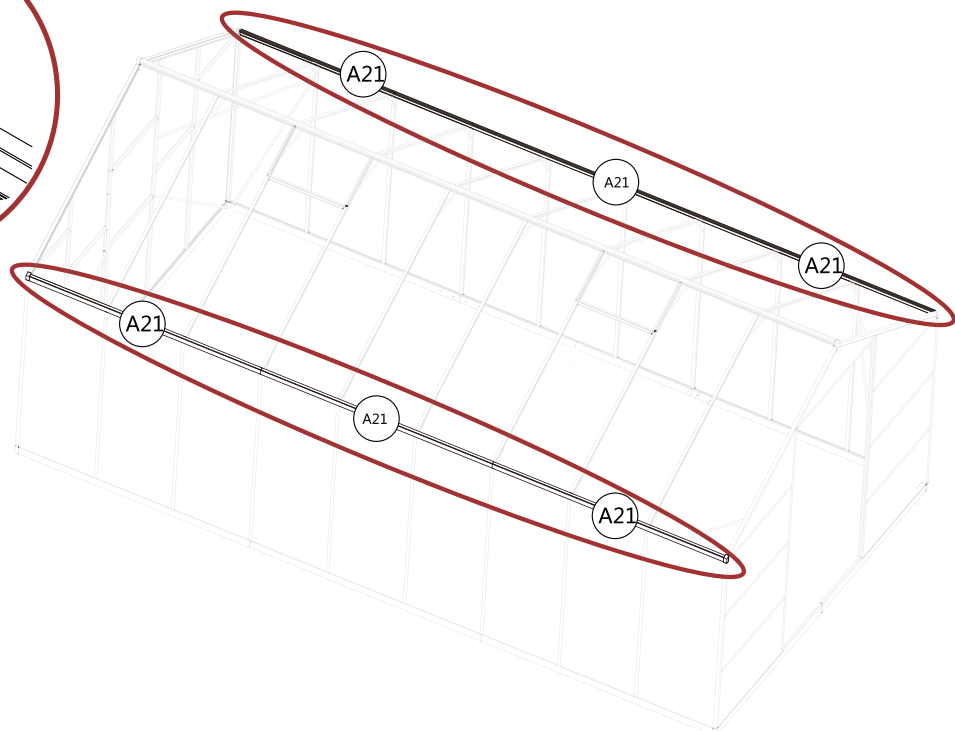


	St5x16	H13	
---	--------	-----	---

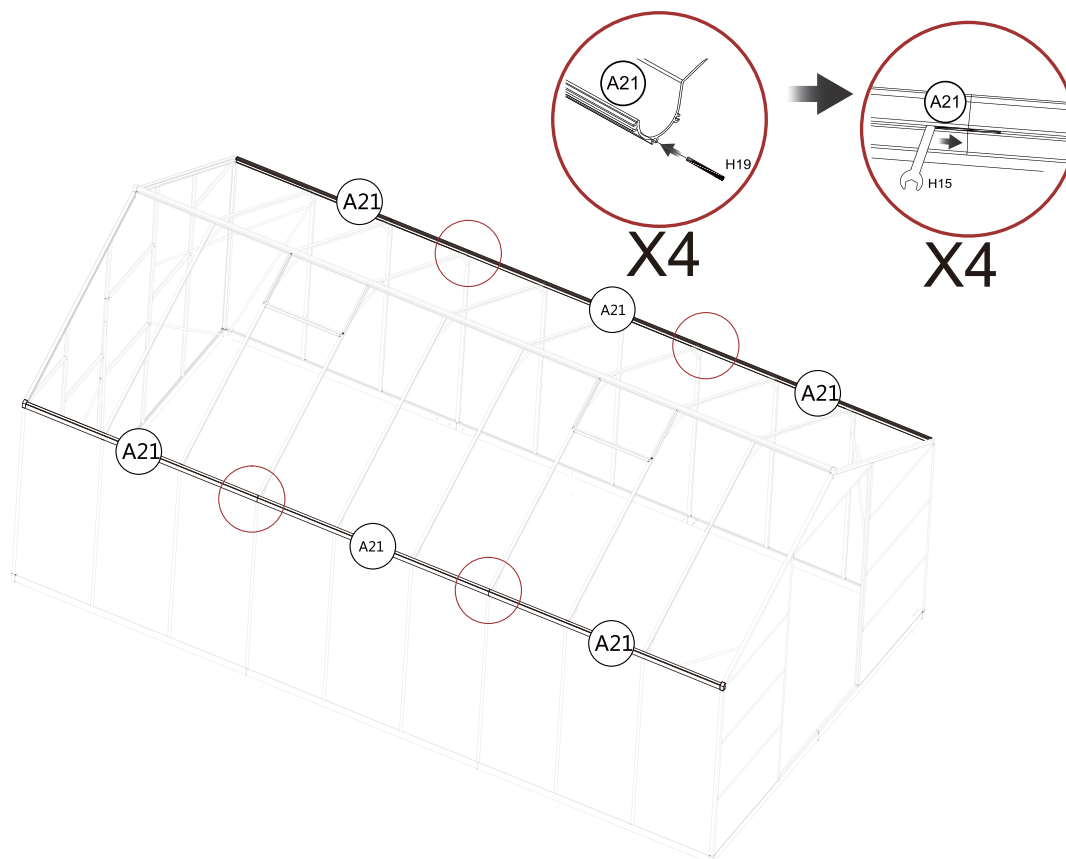STEP 22




	H19	x4
--	-----	----

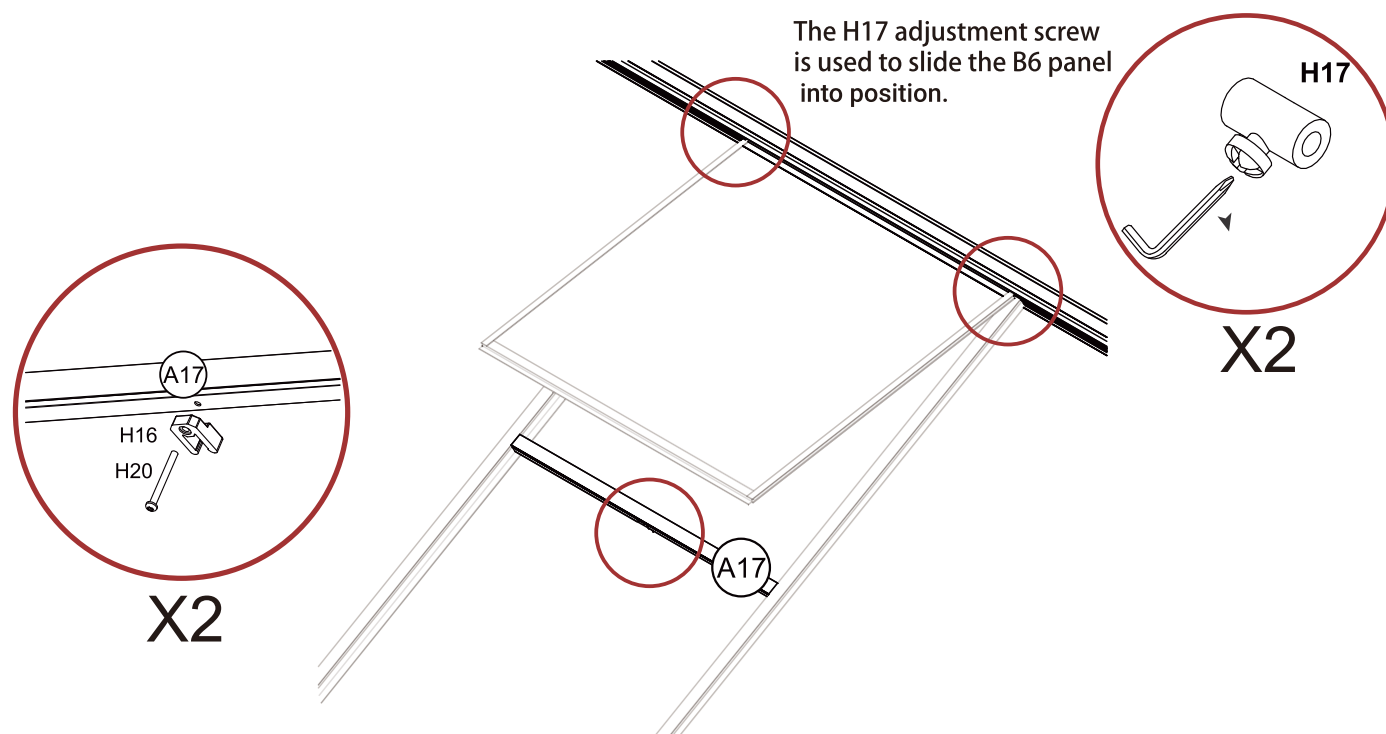STEP 23




	M4x35	H20	x2
---	-------	-----	----

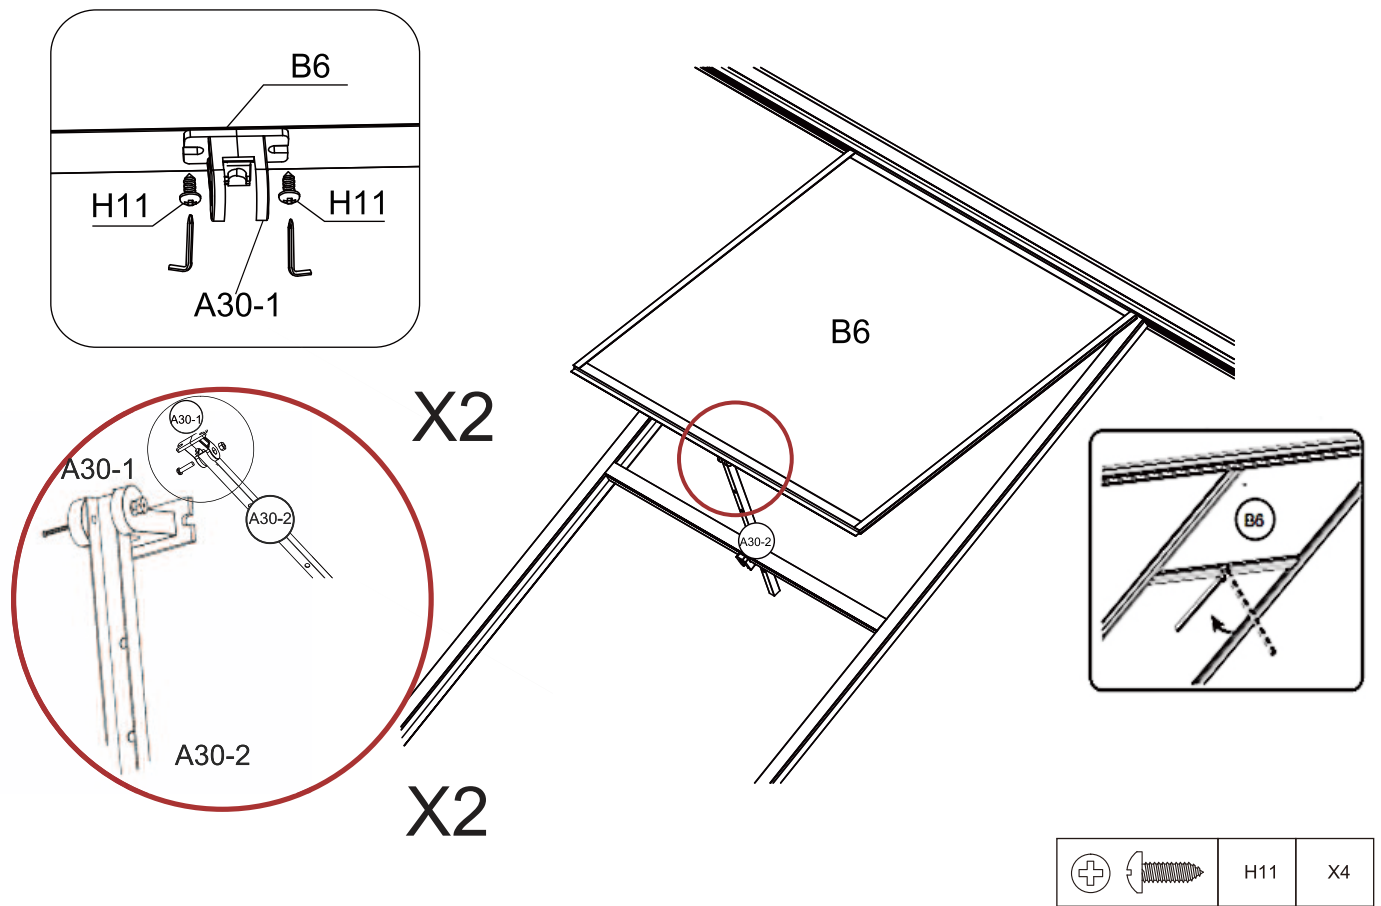STEP 24






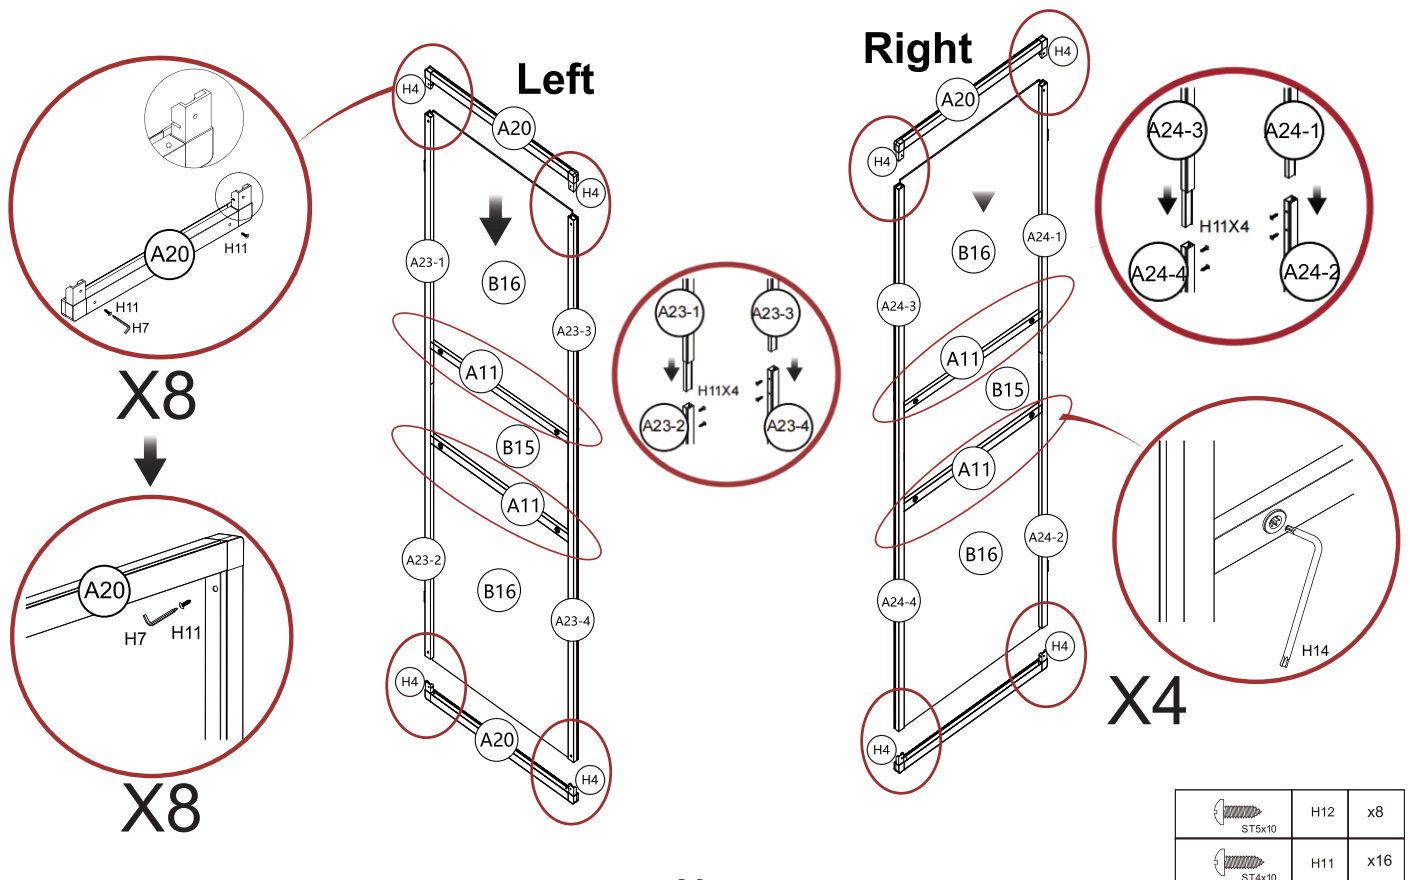STEP 25





STEP 26

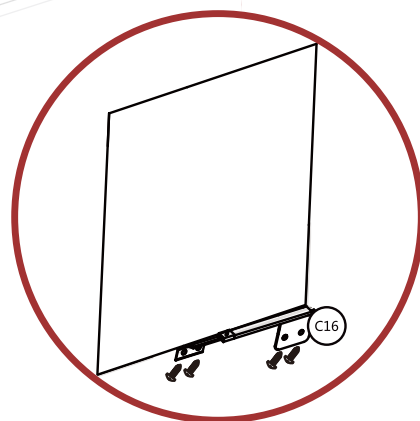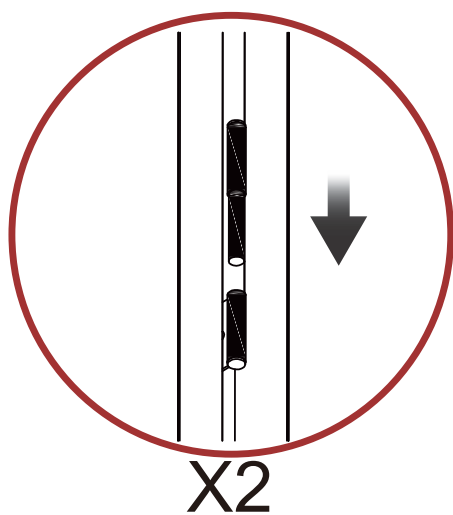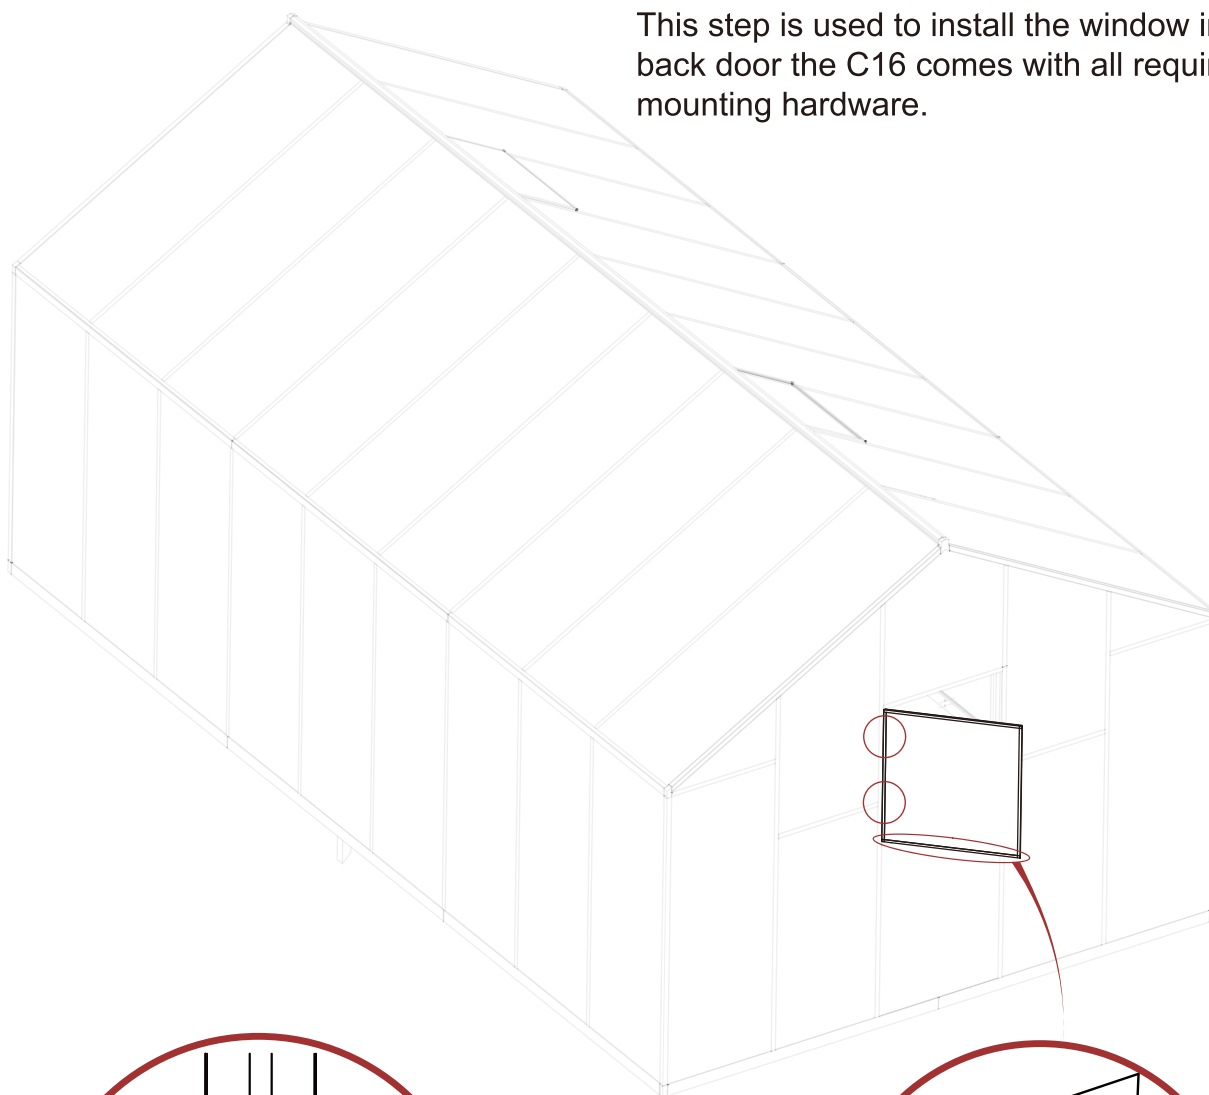This step is used to install the window in the back door the C16 comes with all required mounting hardware.



STEP 27

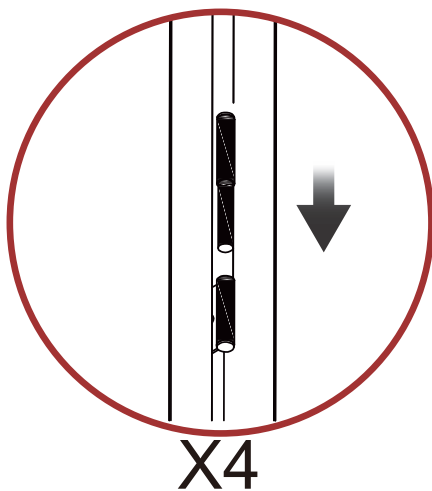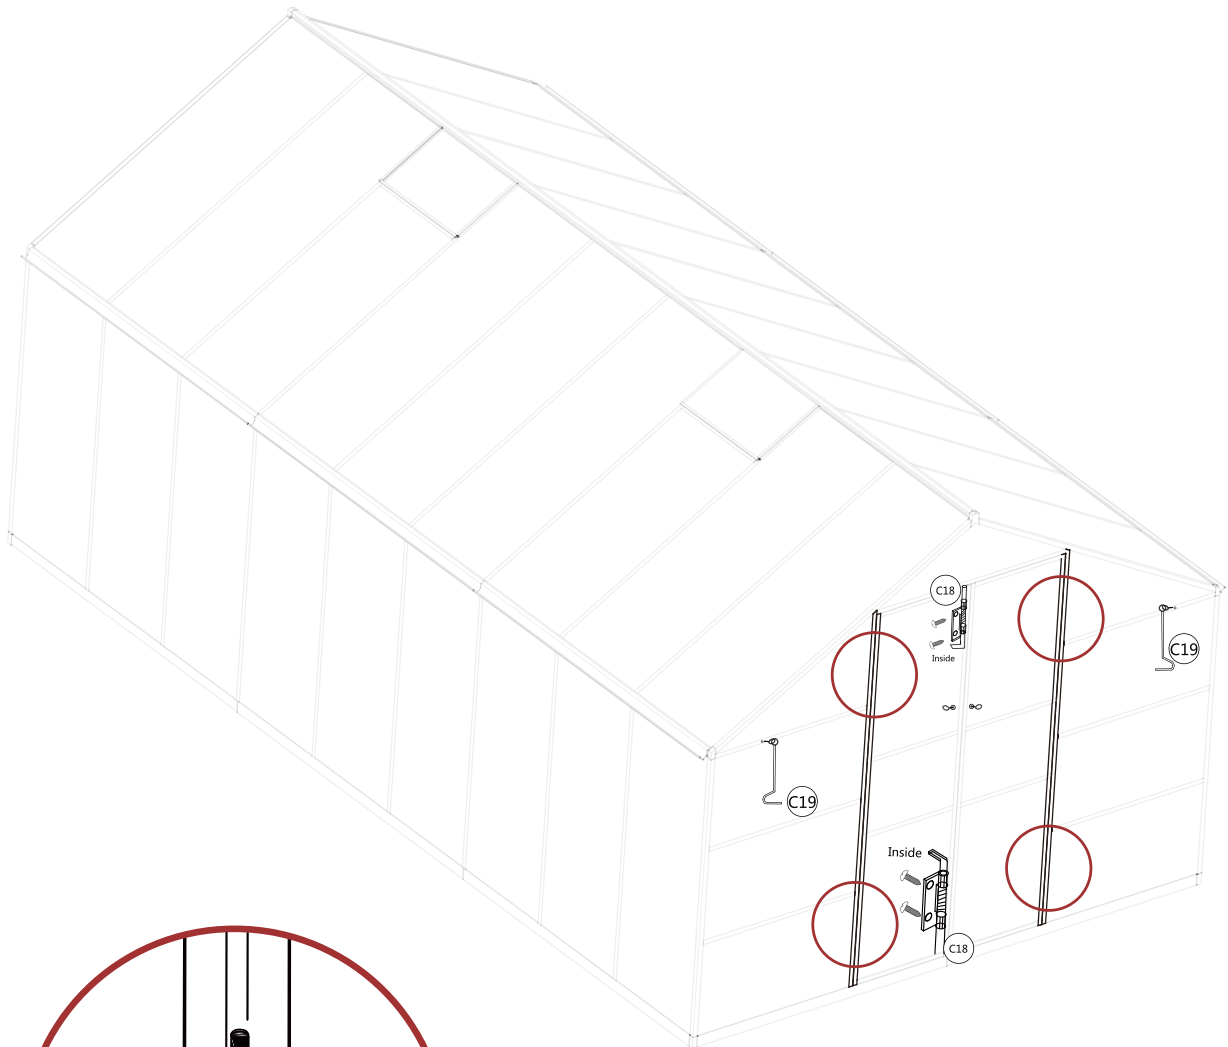When installing the door, keep it open




C18 is installed inside the door.

When C19 is installed, a spare drill bit is needed to drill a hole. The C19 comes with all required mounting hardware.


		H22	X4
---	---	-----	----

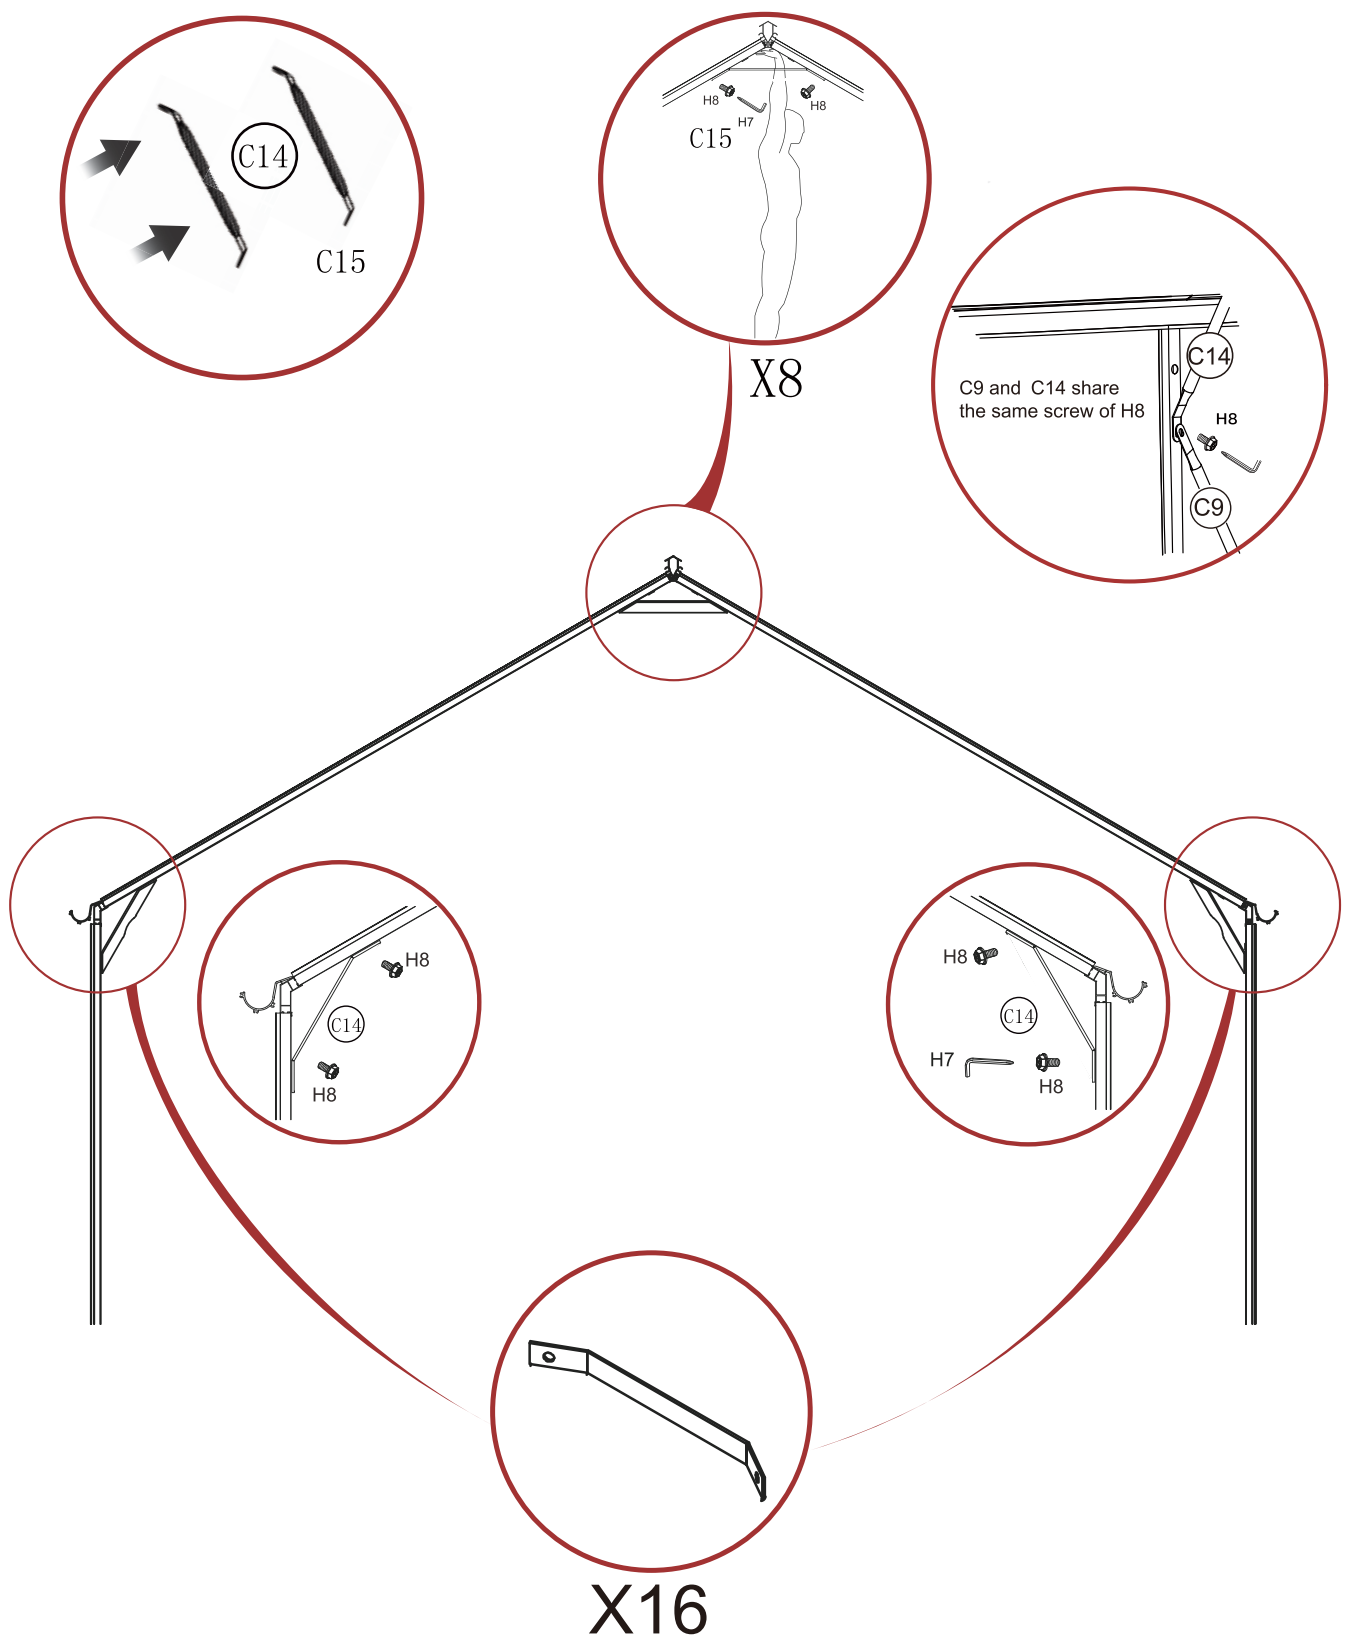STEP 28




STEP 29

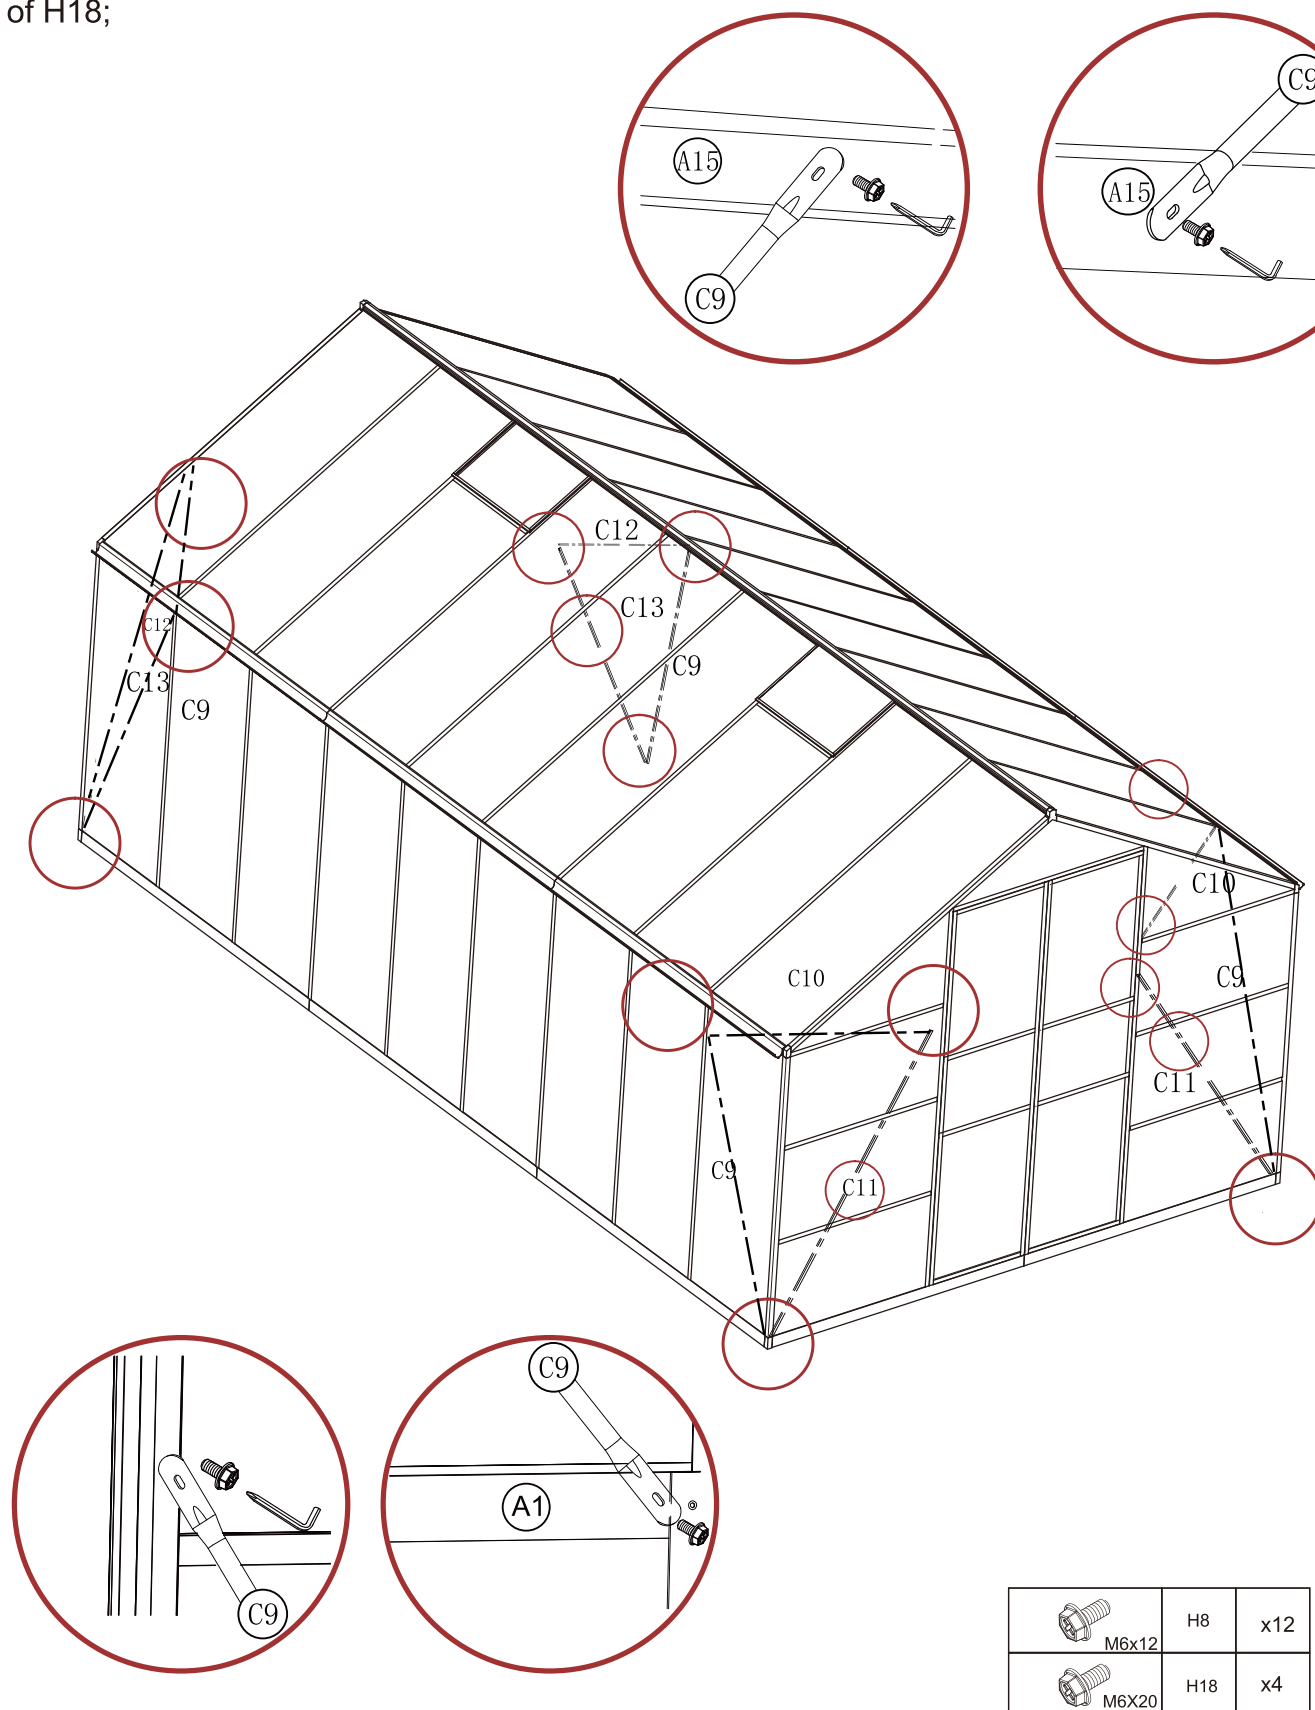NOTE: The three-point connection of the support rod C9, C10 and C14 is fixed with the screws of H18;
The three-point connection of the support rod C9, C12 and C14 is fixed with the screws of H18;



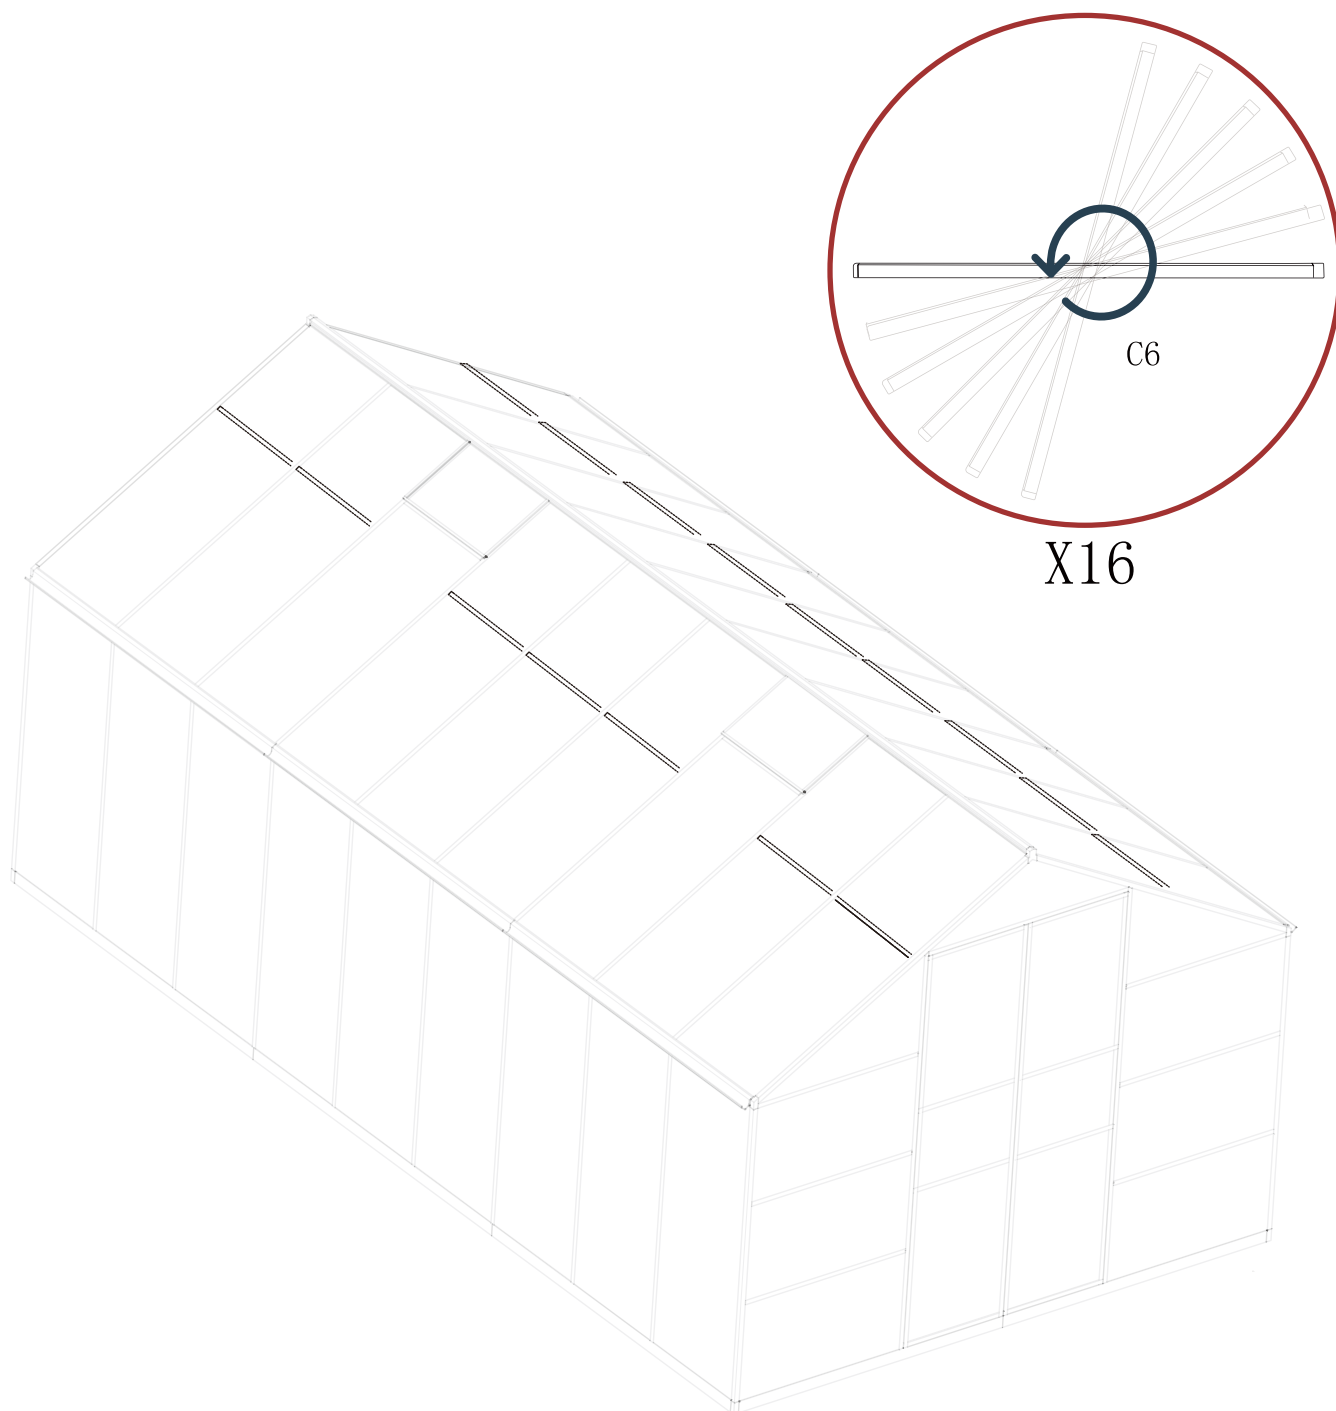STEP 30



**C6 Iron bars are fitted inside the conservatory to hold the frame in place the C6 installs by hand with tool-free assembly.
C6 are installed in the center of A16.**