

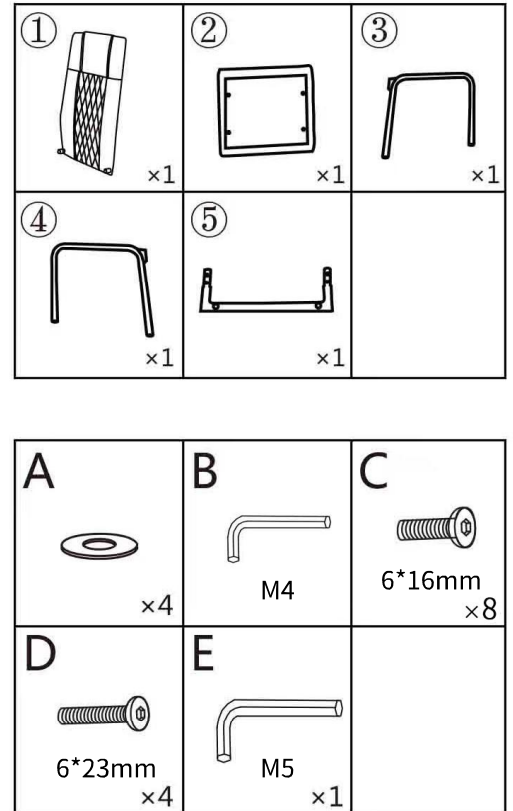
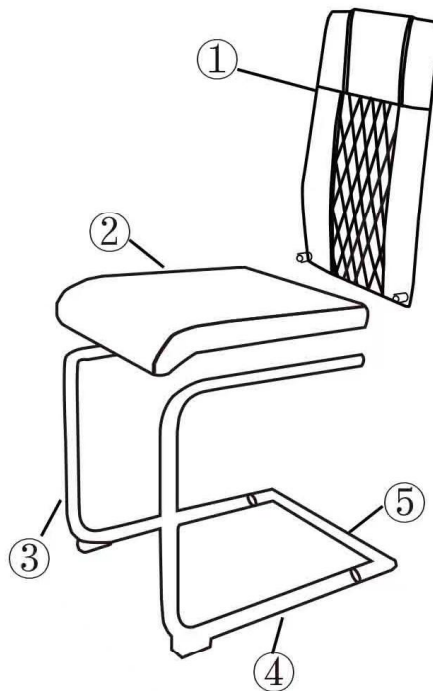


ASSEMBLY INSTRUCTIONS


C-001

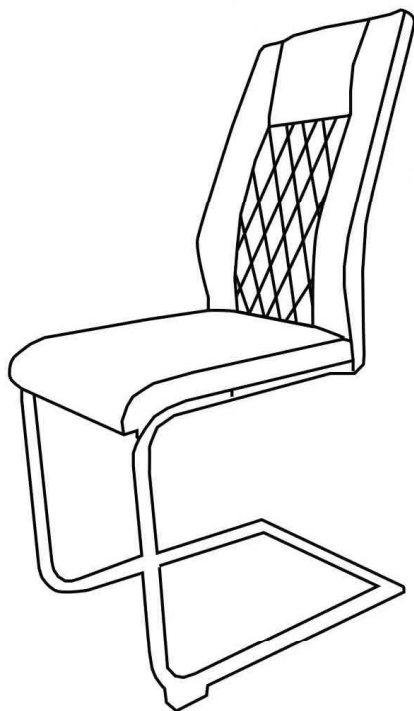


STEP 1 ③ and ④ are connected to ⑤ respectively, B is inserted into the corresponding hole and tightened with E.

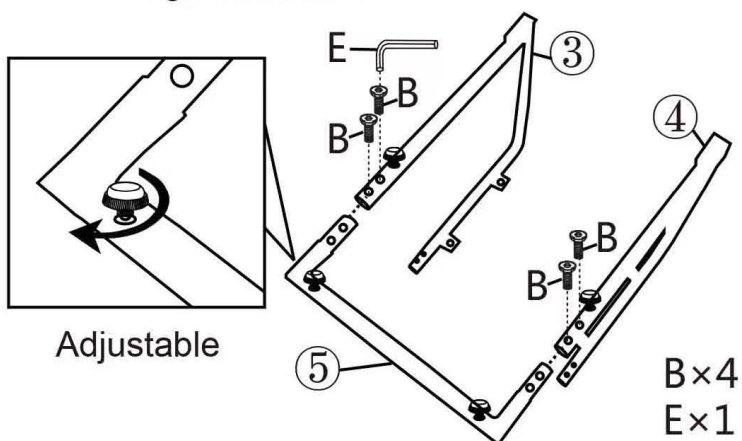


STEP 2 Connect ① to ③ and ④ respectively, insert C into the corresponding hole and tighten with E.

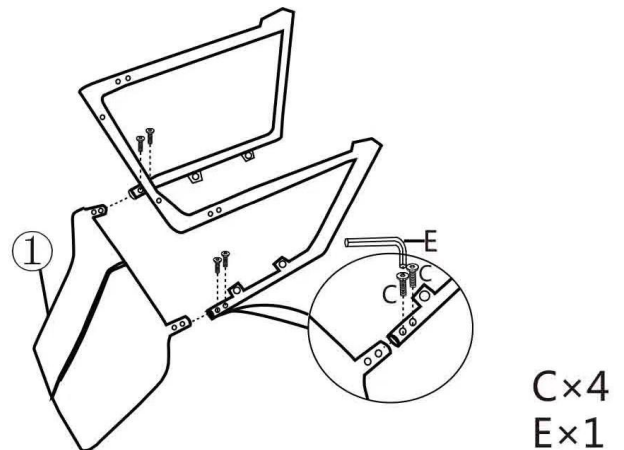








STEP 3 Connect ② to ③ and ④ respectively, insert D and A into the corresponding holes in turn and tighten with E.

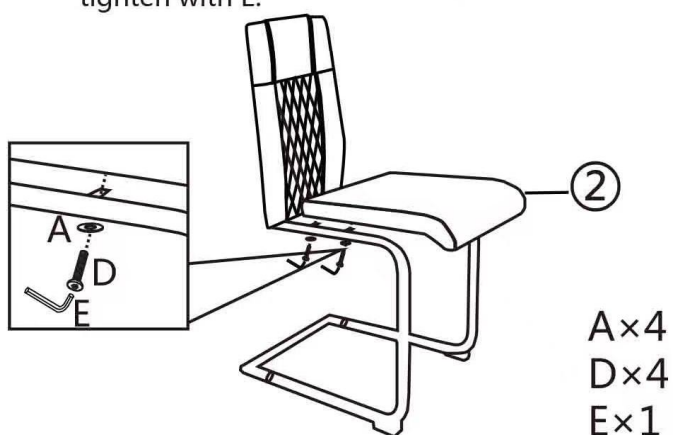

STEP 4 Installation complete

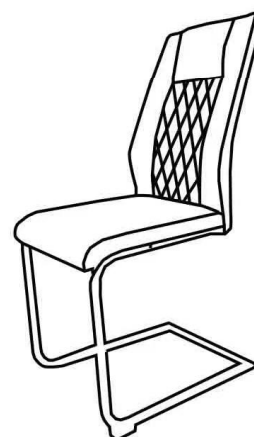

ASSEMBLY INSTRUCTION

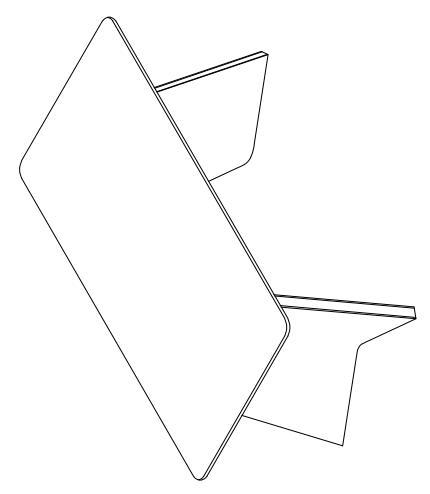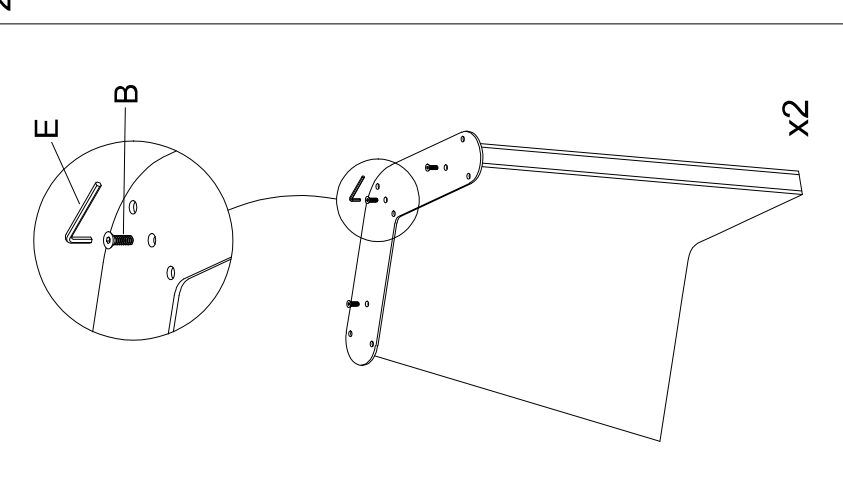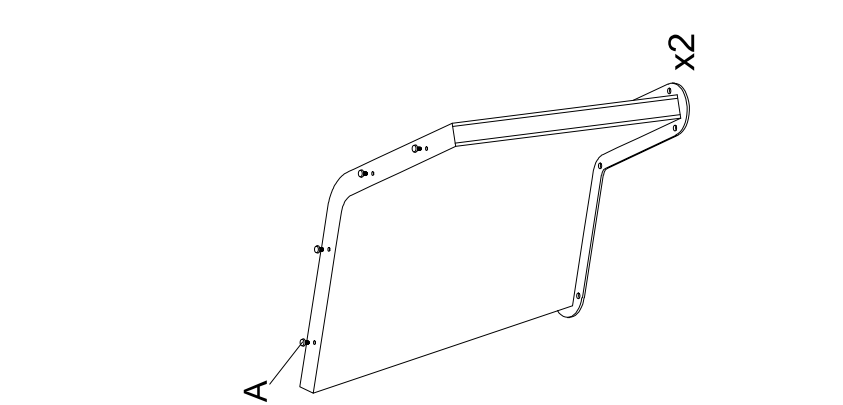	Ax8  M8x20	Bx6  M8x20	Cx12  M8x20	Dx12  8x16	Ex1  M5
1 	2 	3 