

## WARNING!!

Children have died from furniture tipover.

Tip restraints have been included with this product;  
you must install the tip restraints according to these instructions in order to  
minimize the risk of furniture tipping.

If you have any questions about this product or the tip restraint, please send us an  
email at [tip\\_restraint\\_help@Noblehousefurniture.com](mailto:tip_restraint_help@Noblehousefurniture.com)

In addition to installing the restrains , to help prevent  
tip-over


1. NEVER put a TV or other heavy objects on top of this product.
2. Do not stand on the product

 <b>WARNING</b>	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"><li>• ALWAYS install tipover restraint provided.</li><li>• NEVER put a TV on this product.</li><li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li><li>• NEVER open more than one drawer at a time.</li><li>• Place heaviest items in the lowest drawers.</li><li>• Do not defeat or remove the drawer interlock system.</li></ul>
	<p><i>This is a permanent label. Do not remove!</i></p>

# Assembly Instructions










Caution : You must read this before you proceed




## NIGHTSTAND

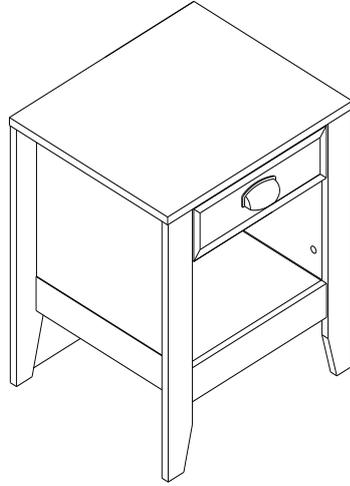






### Part List





Label	Picture	Description	QTY
①		Left Front Leg	1
②		Right Front Leg	1
③		Right Rear Leg	1
④		Left Rear Leg	1

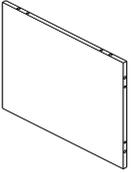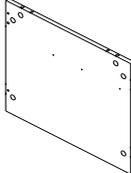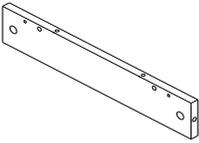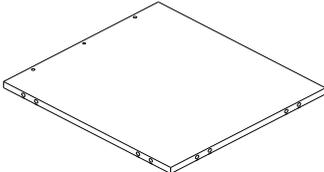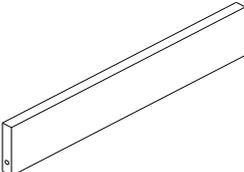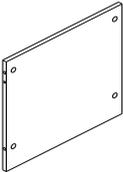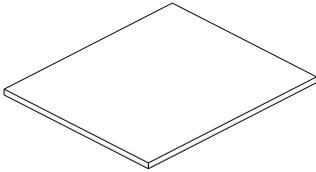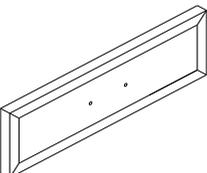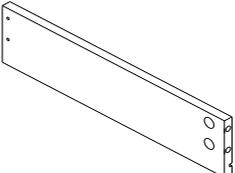5		Left Side Panel	1
6		Right Side Panel	1
7		Horizontal Panel	2
8		Bottom Panel	1
9		Support Panel	1
10		Back Panel	1
11		Top Panel	1
12		Drawer Front	1
13		Left Drawer Side Panel	1

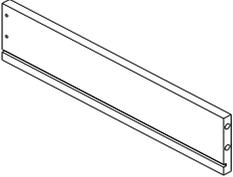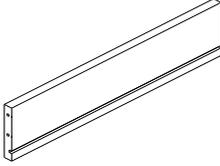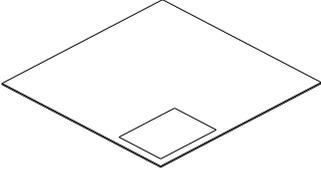14		Right Drawer Side Panel	1
15		Drawer Back Panel	1
16		Drawer Panel	1



## **Hardware**

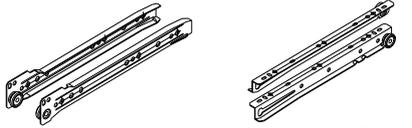Label	Picture	Description	QTY
A		Wood Dowel M6 x 25mm	27
B		Wood Dowel M8 x 25mm	7
C		Cam Bolt	31
D		Cam Lock (15/12.5mm)	7
E		Cam Lock (15/9.5mm)	25
F		Screw M4.5 x 38mm	6
G	 Carcass Slide      Drawer Slide	Slide	1
H		Screw M4 x 12mm	13

I		Truss Head Screw M4 x 12mm	3
J		Handle	1
K		Glue	2
L		Leg Stud	5
M		Screwdriver (not provided)	1
N		Hammer (not provided)	1
O		Power Drill (not provided)	1
<b>Restraint Device Hardware</b>			
P		Screw M3.5 x 12mm	2
		Screw M3.5 x 38mm	2
		Wall Plug	2
		Webbing	2

# Assembly Preparation

Before Beginning Assembly:

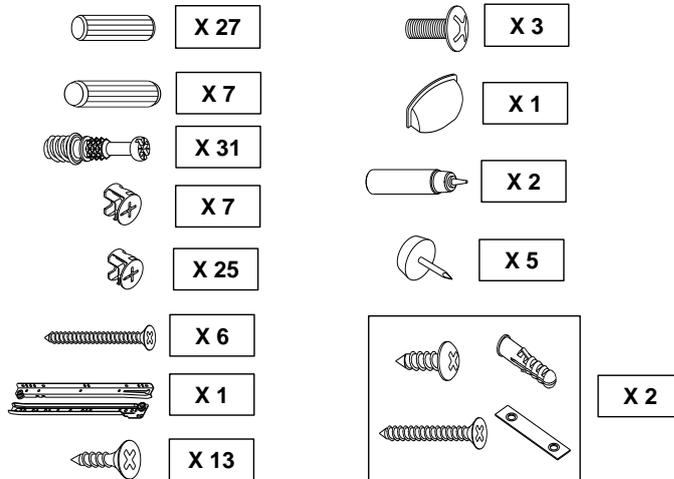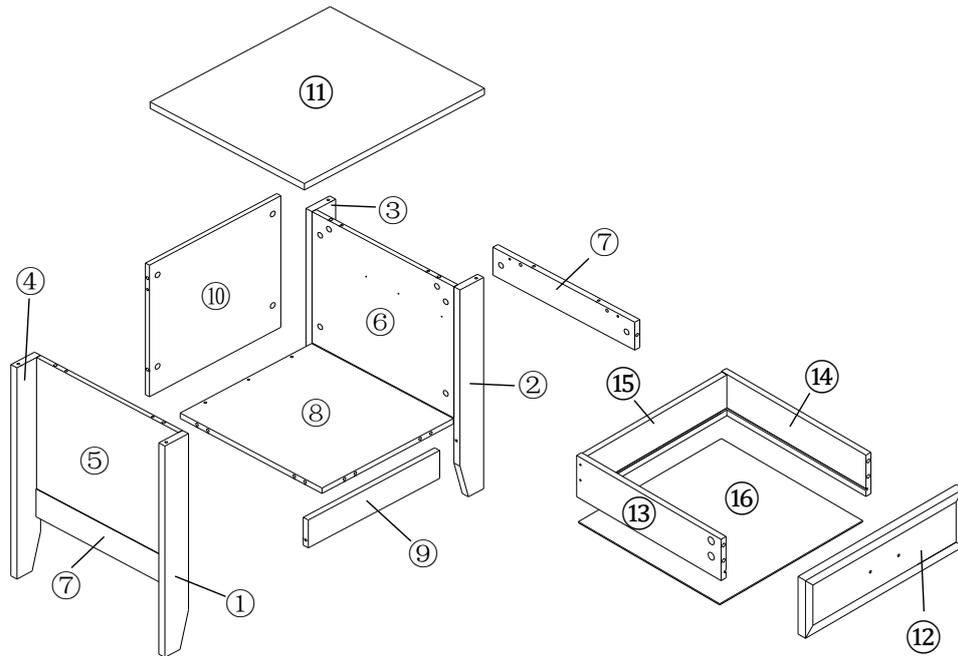

• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-


# Assembly Steps

## Overview

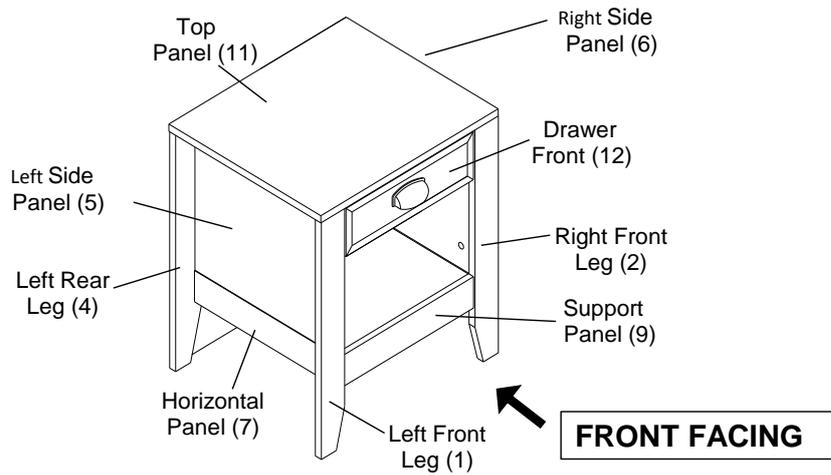

This Nightstand has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Nightstand parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

## Step 1

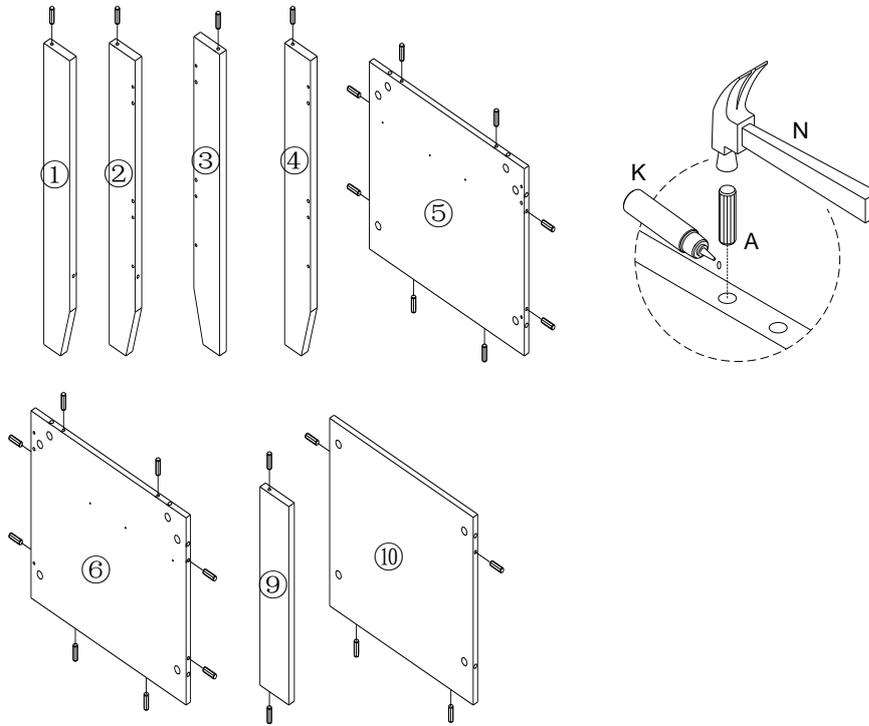


Unpack and place all parts on a clean, non-marring surface.

**1.1)** Apply Glue (K), and insert Wood Dowels M6x25mm (A) into the mounting positions of Left Front Leg ①, Right Front Leg ②, Right Rear Leg ③, Left Rear Leg ④, Left Side Panel ⑤, Right Side Panel ⑥, Support Panel ⑨ and Back Panel ⑩ using a hammer (N).

**Note:** There are pre-existing mounting positions on the Panels to insert the Wood Dowels (A).


## Step 2

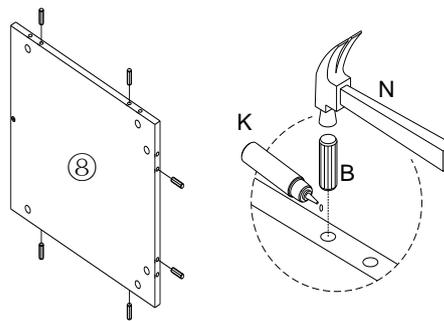

**2.1)** Apply Glue (K), and insert Wood Dowels M8x25mm (B) into the mounting positions on the Bottom Panel ⑧ using hammer (N).

**Note:** There are pre-existing mounting positions on the Panel to insert the Wood Dowels (B).



### Step 3

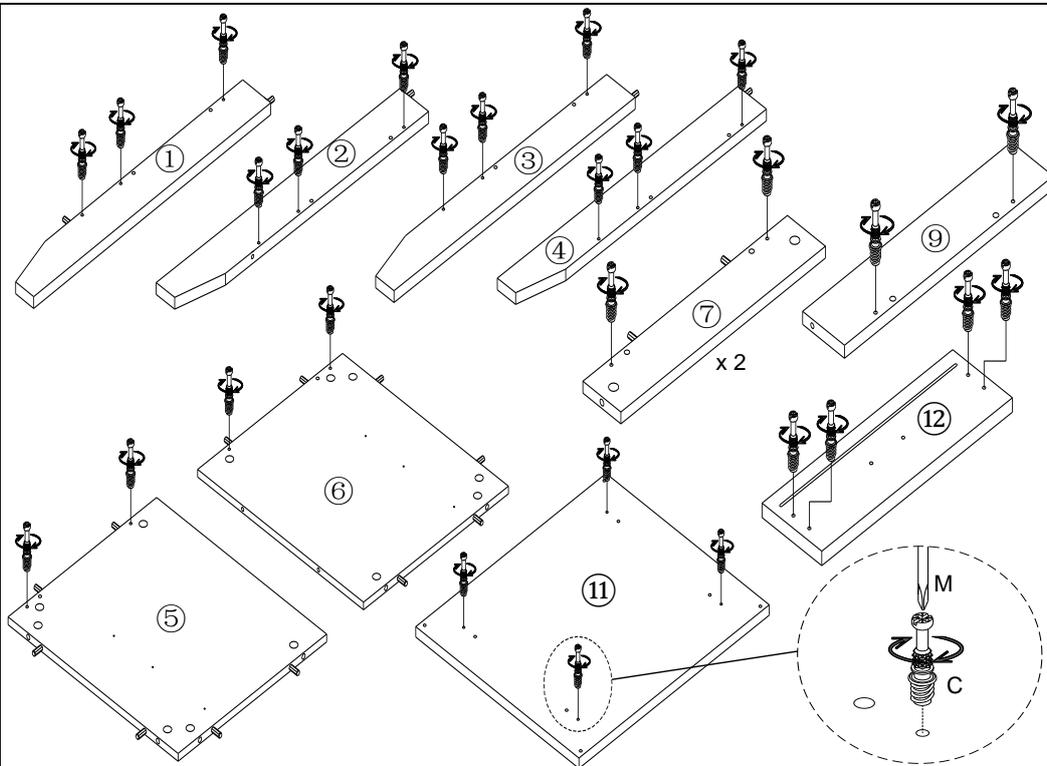

**3.1)** Insert Cam Bolts (C) into the the mounting positions on Left Front Leg ①, Right Front Leg ②, Right Rear Leg ③, Left Rear Leg ④, Left Side Panel ⑤, Right Side Panel ⑥, Horizontal Panel ⑦, Support Panel ⑨, Top Panel ⑪ and Drawer Front ⑫ with screwdriver (M).

**Note:** There are pre-existing mounting positions on the Panels to insert the Cam Bolts (C).

### Step 4

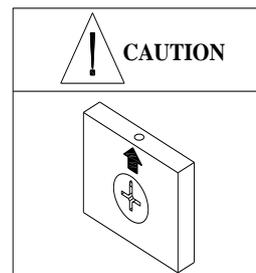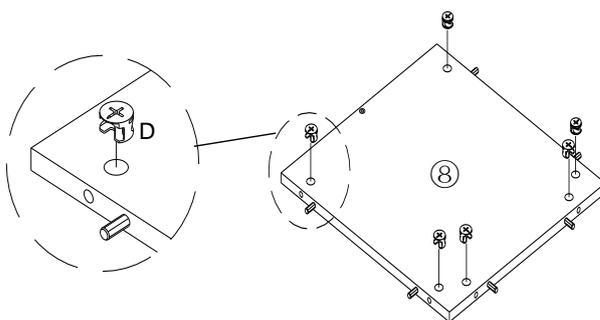


**4.1)** Insert Cam Locks (D) into the mounting positions on Bottom Panel ⑧.

**CAUTION:** Insert Cam Locks (D)

**Note:** There are pre-existing mounting positions on the Panels to insert the Cam Locks (D).

## Step 5

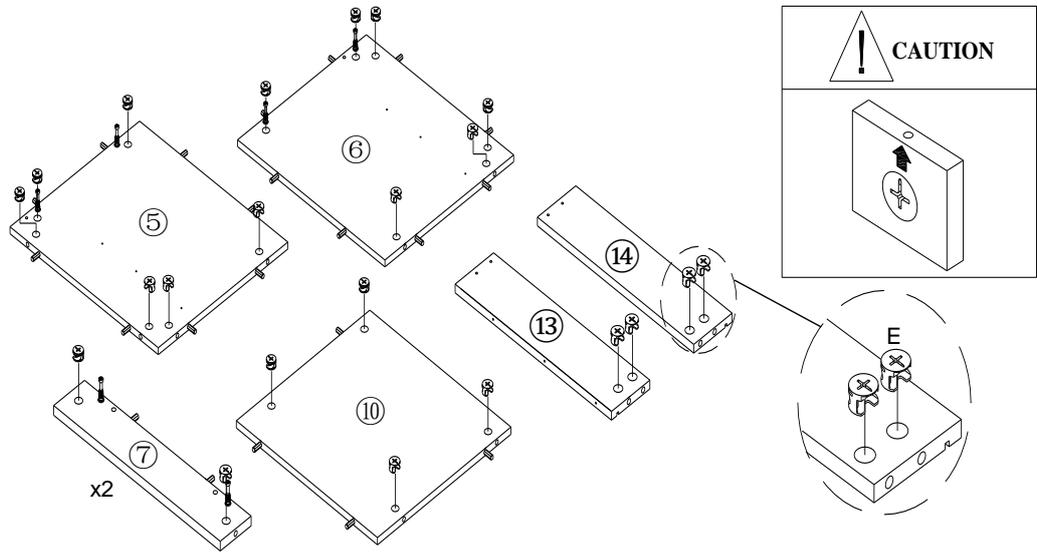


**5.1)** Insert Cam Locks (E) into the mounting positions on Left Side Panel ⑤, Right Side Panel ⑥, Horizontal Panel ⑦, Back Panel ⑩, Left Drawer Side Panel ⑬ and Right Drawer Side Panel ⑭.

**CAUTION:** Insert the Cam Locks (E) per the correct orientation as indicated in the above picture.


**Note:** There are pre-existing mounting positions on the Panels to insert the Cam Locks (E).

## Step 6

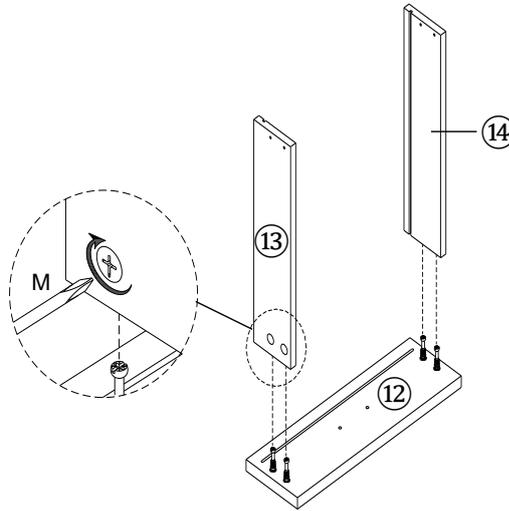


**6.1)** Attach Left Drawer Side Panel (13) and Right Drawer Side Panel (14) to Drawer Front (12).  
Turn the Cam Locks (E) clockwise with screwdriver (M) until they all lock into place.

## Step 7

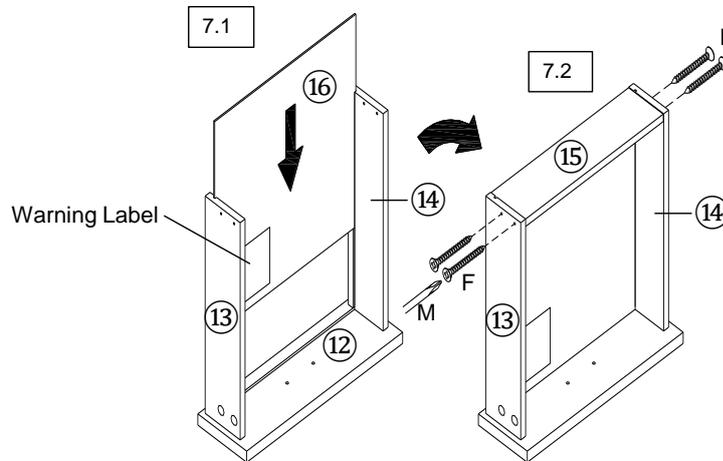

**7.1)** Insert Drawer Panel (16) along the grooves on Drawer Front (12), Left Drawer Side Panel (13) and Right Drawer Side Panel (14).  
**7.2)** Attach Drawer Back Panel (15) using Screws M4.5 x 38mm (F) and screwdriver (M).  
**Note:** There are pre-existing mounting positions on the Panels for the screws M4.5 x 38mm (F).  
**Tips:** To ensure Drawer Panel (16) is in the correct position: Insert the panel with the warning label facing down.

## Step 8

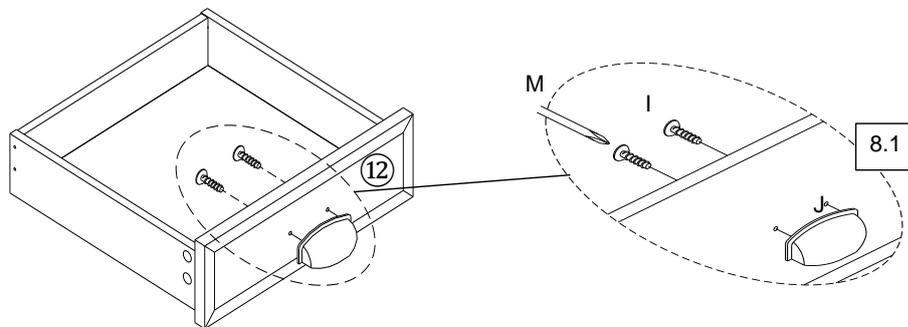


**8.1)** Attach Handle (J) to Drawer Front ⑫ using Truss Head Screws M4 x 12mm (I) and screwdriver (M).

**Tighten the Screws fully in a sequential manner.**

**Note: There are pre-existing mounting positions on the Panel to attach the Handle (J).**

## Step 9

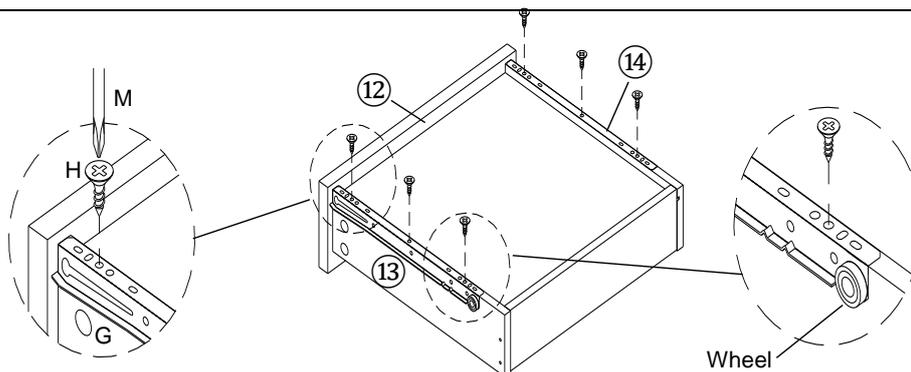


**9.1)** Attach the Left Slide (G) onto Left Drawer Side Panel ⑬ and Right Slide (G) to Right Drawer Side Panel ⑭ using Screws M4 x 12mm (H) and screwdriver (M).

**Caution: Make sure the drawer rail (G) touches Drawer Front ⑫.**


**Note: There are pre-existing mounting positions on the Panels to attach the Drawer Slides (G).**

## Step 10

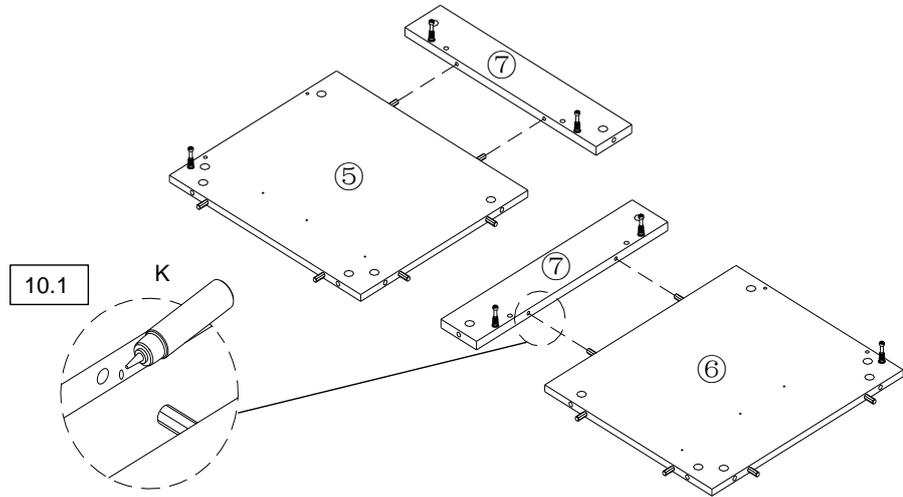


**10.1)** Apply Glue (K) into the dowel mounting positions on Horizontal Panel (7).  
Attach Left Side Panel (5) to Horizontal Panel (7).  
Repeat the same steps to Assemble Right Side Panel (6) to Horizontal Panel (7).

## Step 11

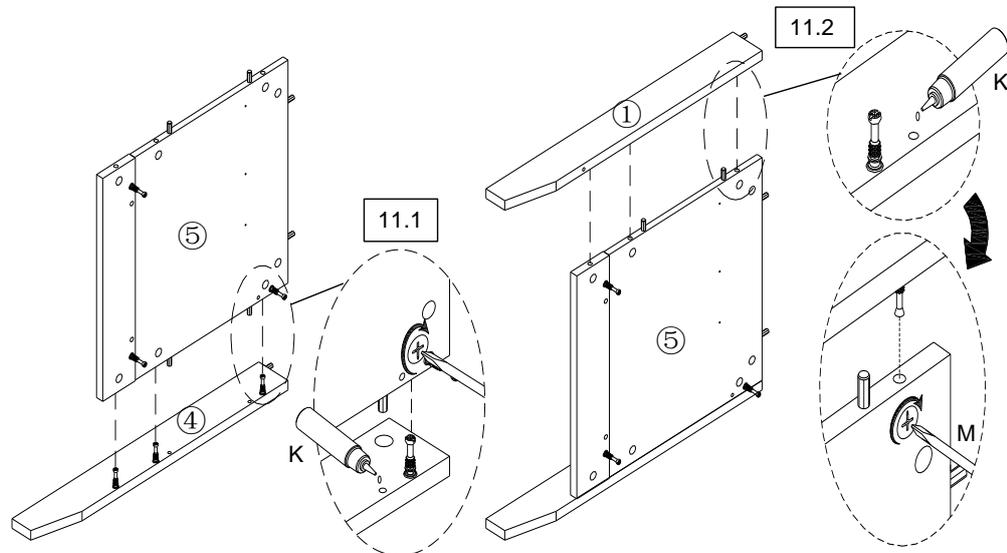


**11.1)** Apply Glue (K) into the dowel mounting positions on Left Rear Leg (4).  
Attach Left Side Panel (5) to Left Rear Leg (4).  
Turn the Cam Locks (E) clockwise with screwdriver (M) until they all lock into place.  
**11.2)** Apply Glue (K) into the dowel mounting positions on Left Front Leg (1).  
Attach Left Front Leg (1) to Left Side Panel (5).  
Turn the Cam Locks (E) clockwise with screwdriver (M) until they all lock into place.

## Step 12

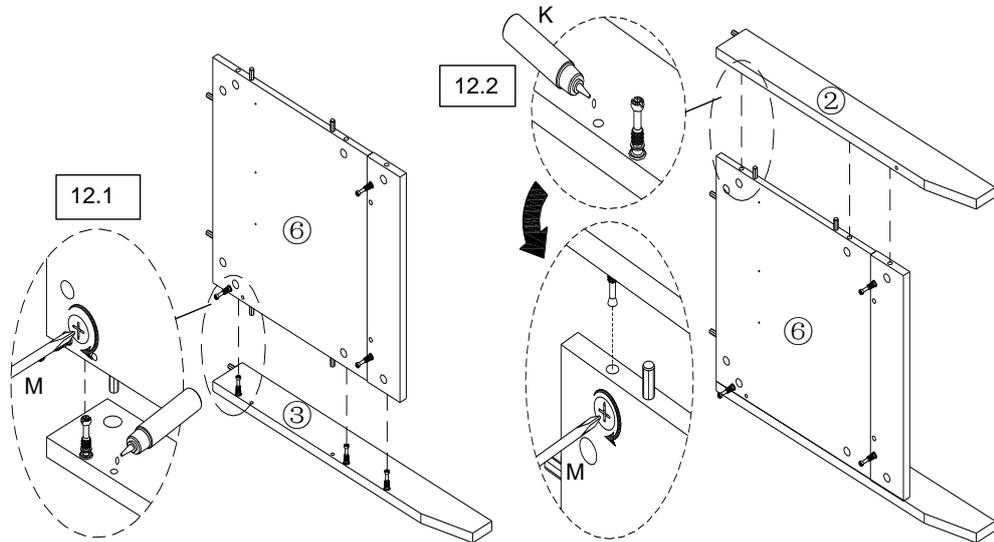


- 12.1)** Apply Glue (K) into the dowel mounting positions on Right Rear Leg (3).  
Attach Right Side Panel (6) to Right Rear Leg (3).  
Turn the Cam Locks (E) clockwise with screwdriver (M) until they all lock into place.
- 12.2)** Apply Glue (K) into the dowel mounting positions on Right Front Leg (2).  
Attach Right Front Leg (2) to Right Side Panel (6).  
Turn the Cam Locks (E) clockwise with screwdriver (M) until they all lock into place.

## Step 13

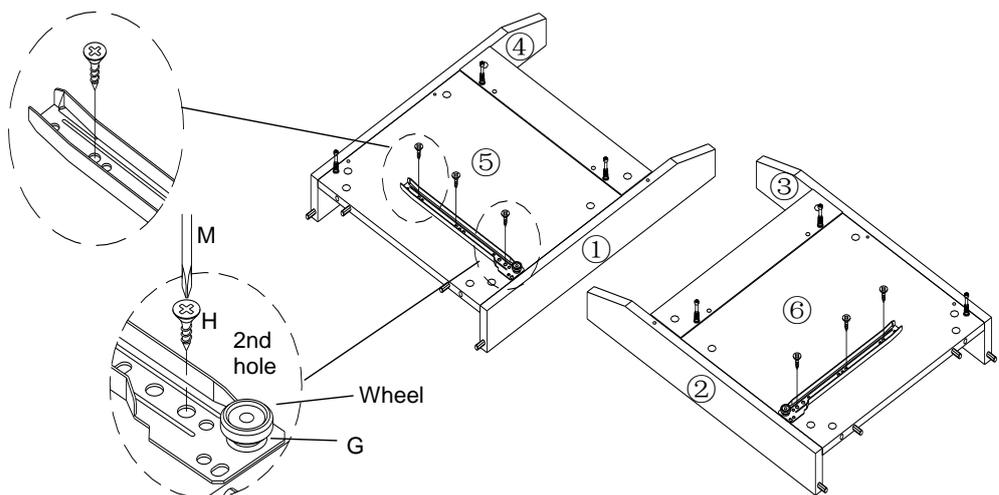

- 13.1)** Attach the Left Slide (G) to Left Side Panel (5) and the Right Slide (G) to Right Side Panel (6) using Screws M4 x 12 (H) and screwdriver (M).  
**Tighten the Screws fully in a sequential manner.**  
**Note: There are pre-existing mounting positions on the Panels to attach the Carcass Slide (G).**

## Step 14

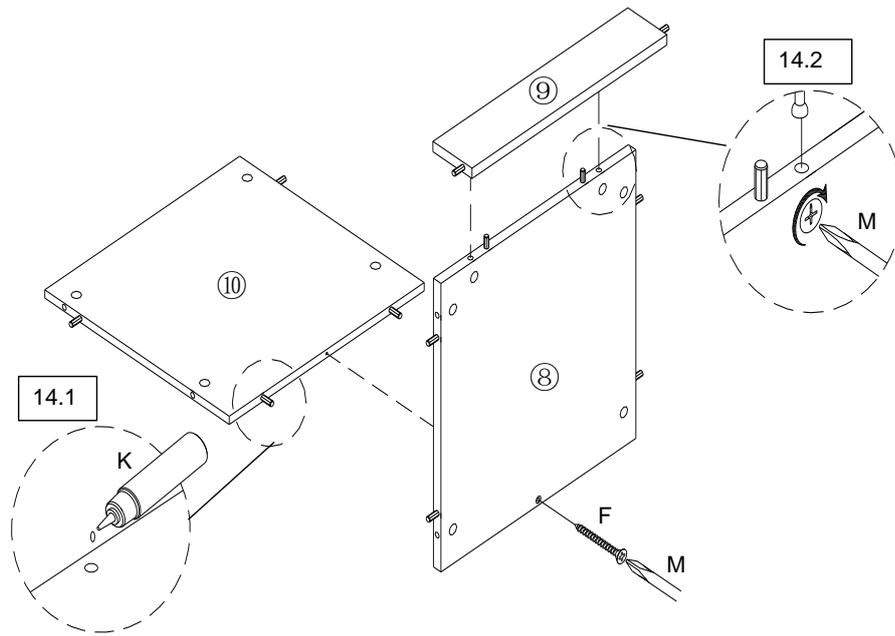


**14.1)** Apply Glue (K) into the mounting positions on Bottom Panel (8) and Support Panel (9).

**14.2)** Attach Support Panel (9) to Bottom Panel (8).

Turn the Cam Locks (D) clockwise with screwdriver (M) until they all lock into place. Then, attach Bottom Panel (8) to Back Panel (10) using a screw M4.5 x 38mm (F).

**Note:** There are pre-existing mounting positions on the Panel for the screw M4.5 x 38mm (F).

## Step 15

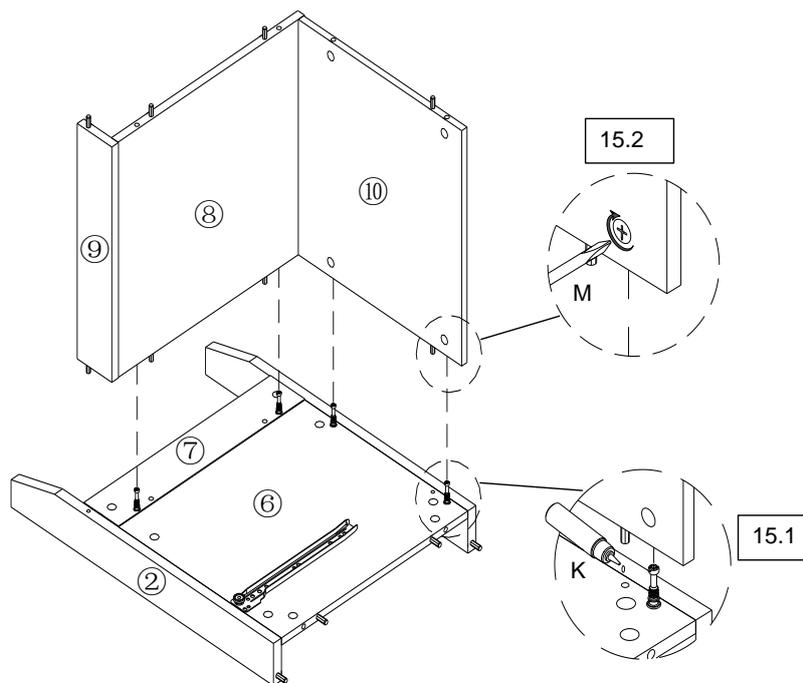


**15.1)** Apply Glue (K) into the dowel mounting positions on Right Front Leg (2), Horizontal Panel (7) and Right Side Panel (6).

**15.2)** Attach Bottom Panel (8), Support Panel (9) and Back Panel (10) to Side Panel Right (6).

Turn the Cam Locks (E) on Back Panel (10) clockwise with screwdriver (M) until they all lock into place.

## Step 16

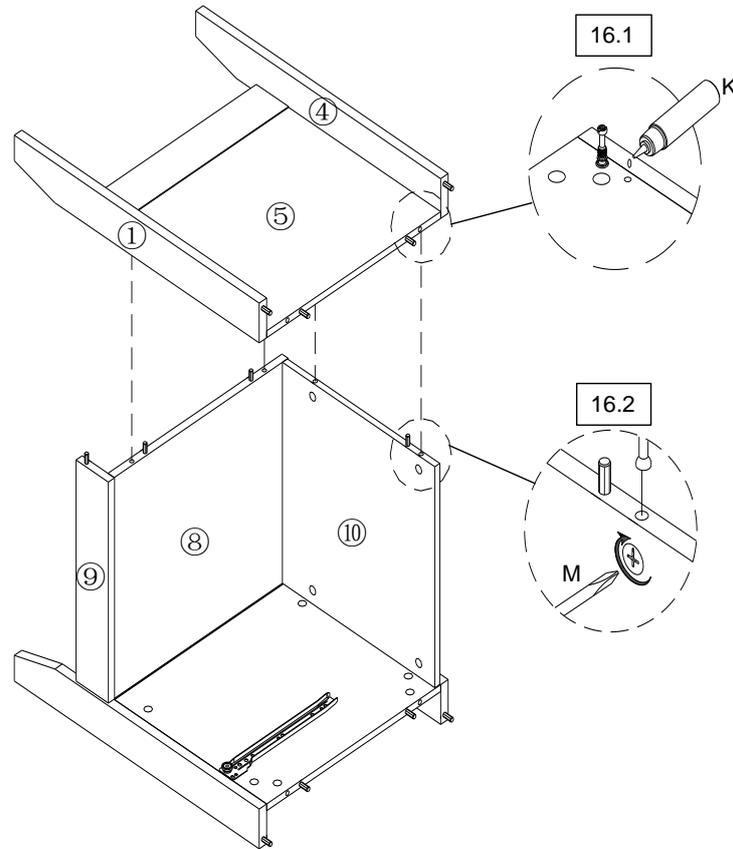


**16.1)** Apply Glue (K) into the dowel mounting positions on Left Front Leg ①, Horizontal Panel ⑦ and Left Side Panel ⑤.

**16.2)** Attach Left Side Panel ⑤ to Bottom Panel ⑧, Support Panel ⑨ and Back Panel ⑩ .


Turn the Cam Locks (E) on Back Panel ⑩ clockwise with screwdriver (M) until they all lock into place.

## Step 17

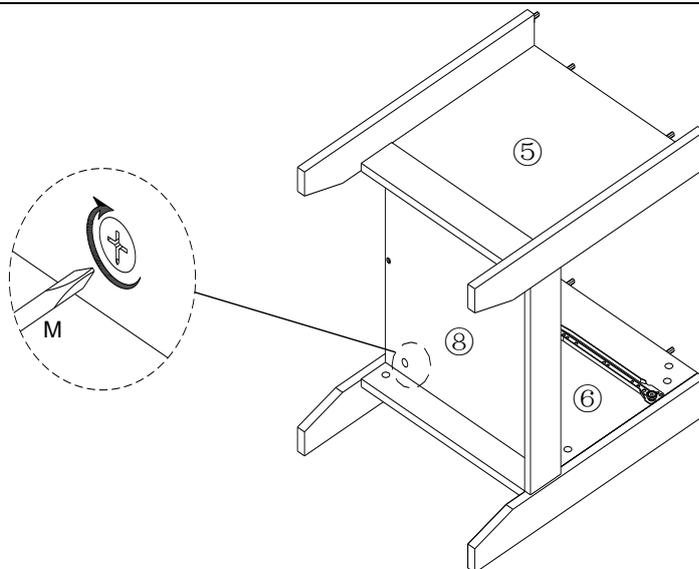


**17.1)** Turn the Cam Locks (D) on Bottom Panel ⑧ clockwise with screwdriver (M) until they lock into place.

## Step 18

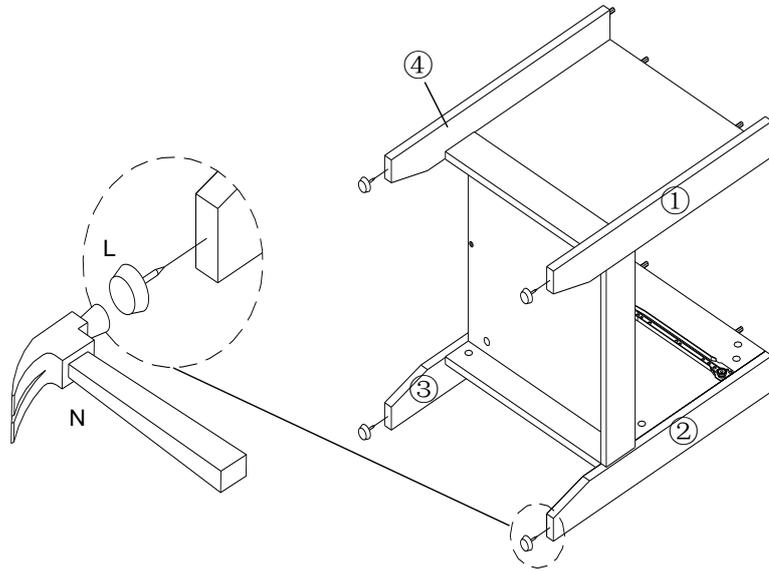

**18.1)** Attach the Leg Stud (L) to the Bottom of Left Front Leg (1), Right Front Leg (2), Right Rear Leg (3), and Left Rear Leg (4) using hammer (N).

## Step 19

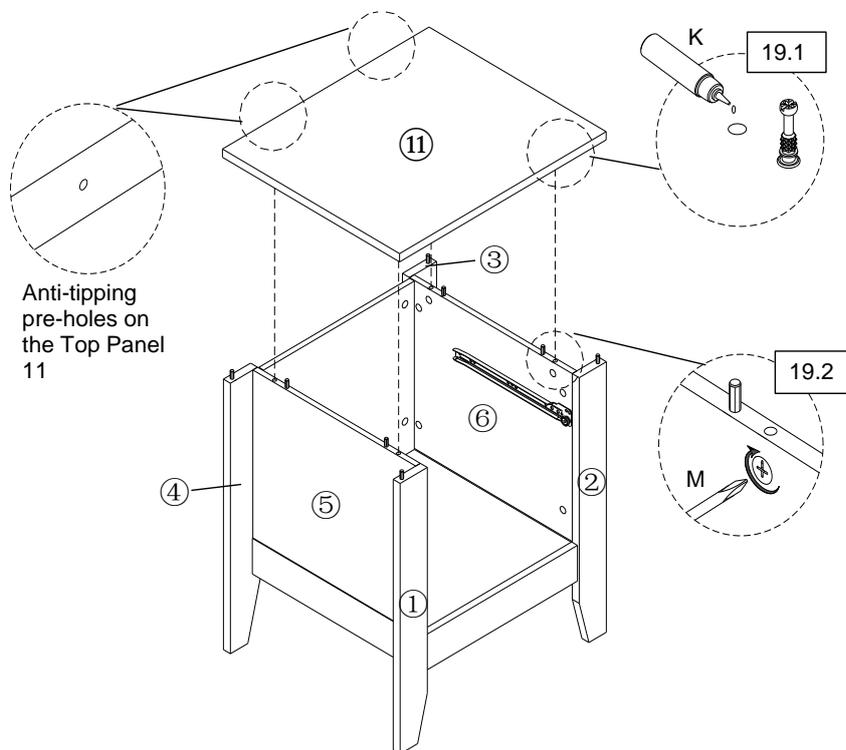


**19.1)** Apply Glue (K) into the dowel mounting positions on Top Panel (11).

**19.2)** Attach Top Panel (11) to Left Front Leg (1), Right Front Leg (2), Right Rear Leg (3), Left Rear Leg (4), Left Side Panel (5) and Right Side Panel (6). Turn the Cam Locks (E) clockwise with screwdriver (M) until they all lock into place.

**Note:** When putting on the Top Panel (11) please ensure the pre-existing holes are in the back position.

**Step 20**

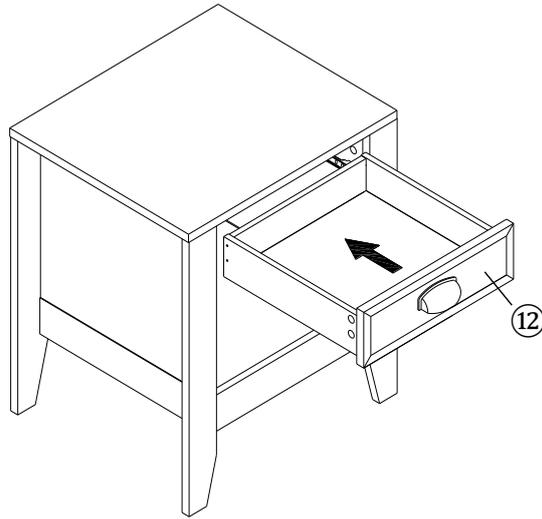


Insert the drawer into the Nightstand.

# Cabinet Restraint Device Installation Instructions



## WARNING

Serious or fatal crushing injuries can occur from tipping furniture.  
To help prevent tip-over: **ALWAYS** secure this furniture to the wall using Cabinet Restraint Device.  
See product instructions for more ways to help prevent furniture tip-over.

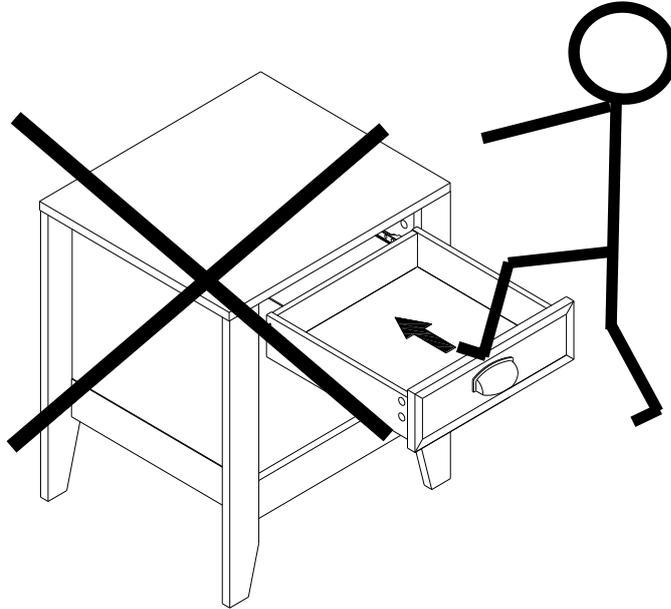


### Usage For Restraint Device:

To secure the Nightstand against the wall, attach the two Webbing from the Hardware Pack (P) on the wall and the product, using screws.

### Instructions:


#### Step 21

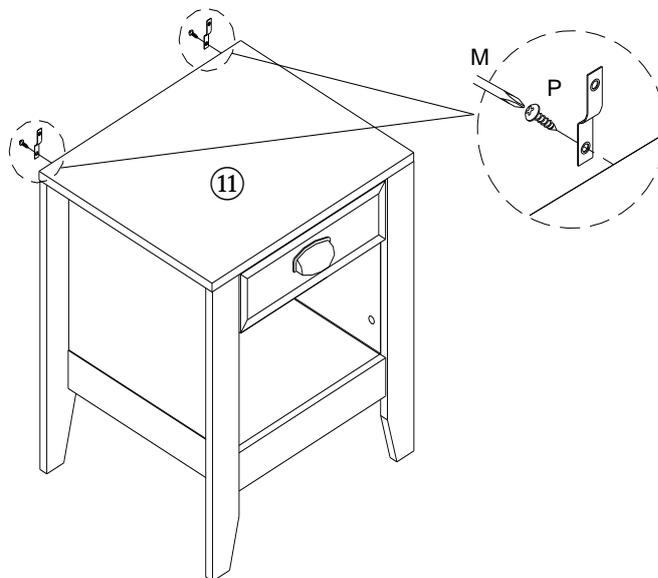

**21.1)** Attach the Webbing (P) to the pre-holes on the back side of Top Panel ⑪ using screws M3.5 x 12mm (P) with screwdriver (M).

**Note:** There are pre-existing mounting positions on the Panel for the screw (P).

## Step 22

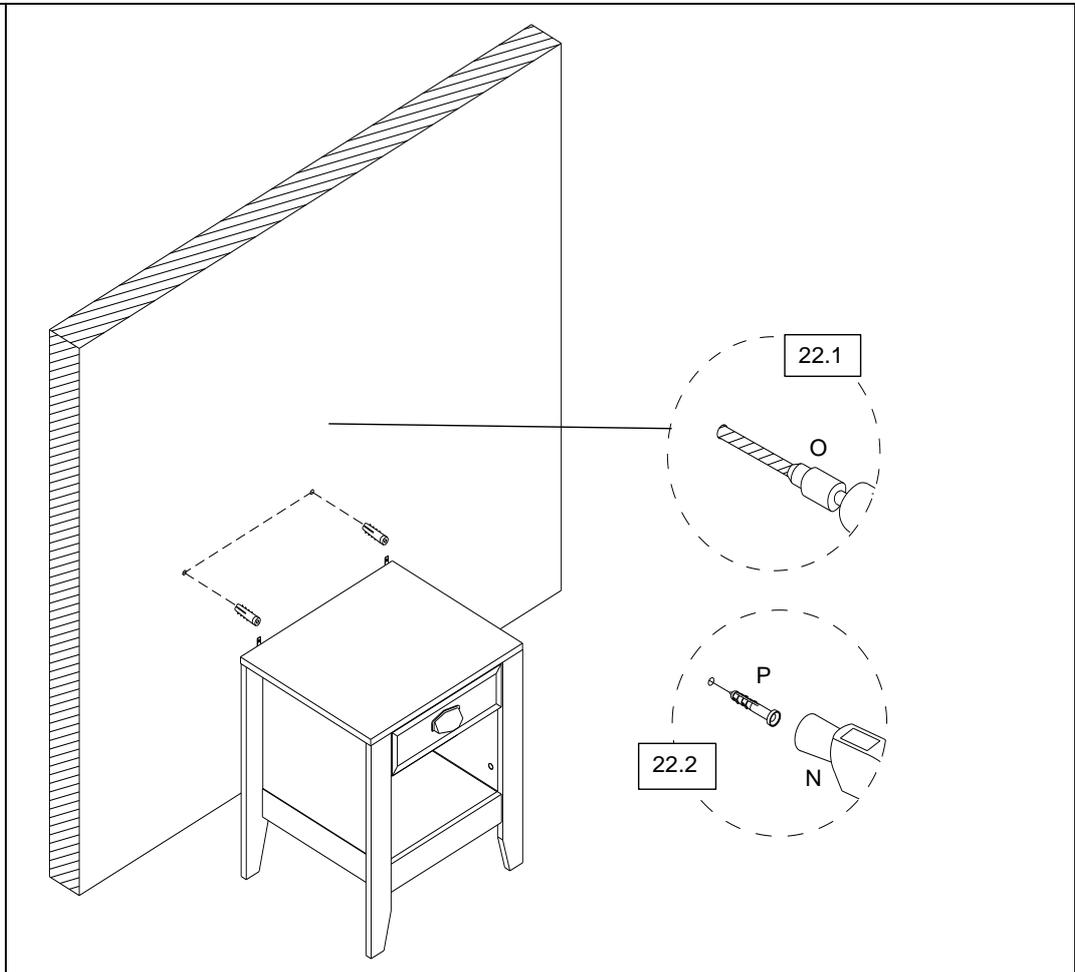


**22.1)** Drill two holes on the wall at the same height as the Webbing on the Nightstand using a Power Drill (O).

Mark the holes by measuring the height of the Webbing with a ruler/measuring tape and mark on the wall to keep them accurate and at the same height.


**22.2)** Insert Wall Plugs (P) into the drilled holes on the wall with hammer (N).

**Step 23**

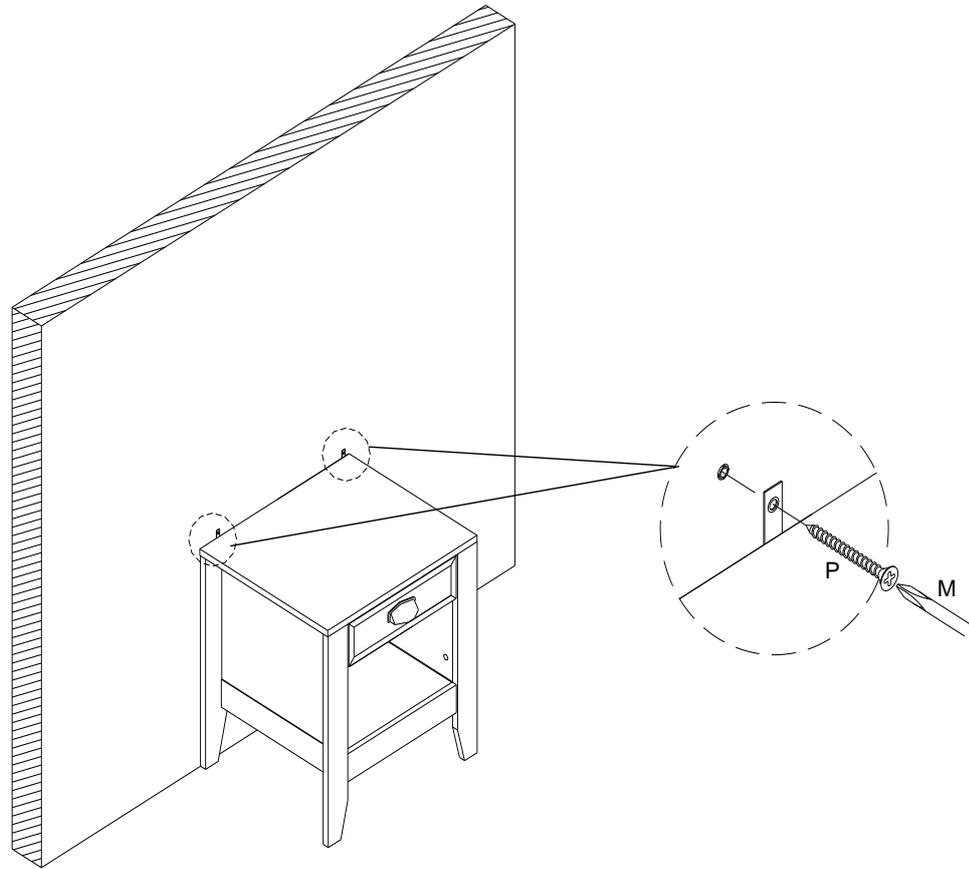

Move the Nightstand to the wall, and secure the Nightstand using Screws M4.5 x 38mm (P) and screwdriver (M).

**Step 24**

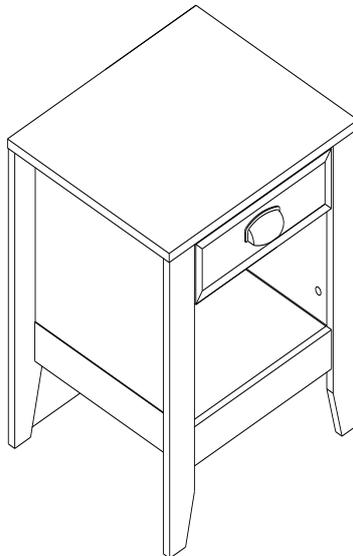

Your Nightstand is ready to be used.  
This Nightstand can only be used on a flat level surface.

## **Care & Maintenance**

- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
  - ⊘  • Do not put hot items directly on furniture surface.
  - ⊘  • Do not clean furniture with harsh cleansers or polish.
  - ⊘  • Do not place furniture under direct sunlight.
  - ⊘  • Do not place furniture near heating or cooling vents.
  - ⊘  • Do not write on furniture without a padded barrier to protect the surface.
  - ⊘  • Do not place furniture outside . For indoor use only.
  - ⊘  • Not for commercial use. For residential use only.
  - ⊘  • Stains may be removed with mild soap solution and damp cloth.
  - ⊘  • Children should not climb or jump on the furniture.
- 
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.