


Woven Rocking Chair

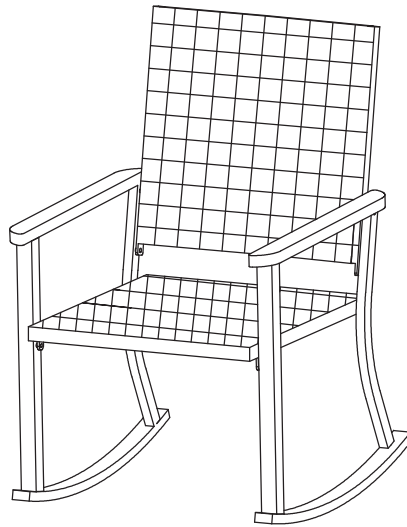

PLEASE READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

SAFETY WARNING

- This product contains small parts and sharp points, keep away from children and pets until assembly is complete.
- Do not stand on the product under any circumstances.
- When using this product basic common-sense safety precautions should be followed to reduce the risk of personal injury and/or damage to the product.

IMPORTANT INFORMATION

- Never use power tools to assemble this product.
- Clean with a soft damp cloth, do not use abrasive cleaning products.
- Maximum safe load 260lb (120kg).

BEFORE YOU START

- Check you have all the listed parts before you start assembling.
- Assemble on a flat surface using a drop sheet or rug to avoid scratching.
- Assembly will be made easier if two people work together.

WHAT'S IN THE BOX


Item	Part	Qty	Part Description
A		1	Right Arm
B		1	Left Arm
C		1	Chair Back
D		1	Chair Seat

E	 M6*15	4	Flat Head Hex Bolt - M6*15mm
F	 M6*35	6	Flat Head Hex Bolt - M6*35mm
G	 M6	10	Flat Washer - M6
H	 M6	10	Plastic Bolt Head Cover - M6
I	 M6	1	Hex Wrench - M6

ASSEMBLY INSTRUCTIONS


Step 1

Take the right and left arms (A & B) and align the holes under each arm in the rear leg with the upper holes in the chair back (C). Fix using the 35mm M6 bolts (F) and M6 flat washers (G). Finger tighten only at this stage.

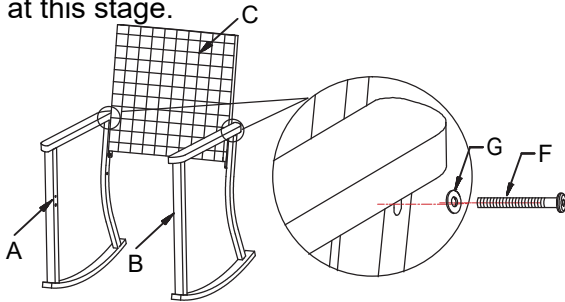


Step 2

Use the 15mm M6 bolts (E) and M6 flat washers (G) to attach the remaining lower chair back tabs to the matching holes in the right and left arms. Finger tighten only at this stage.

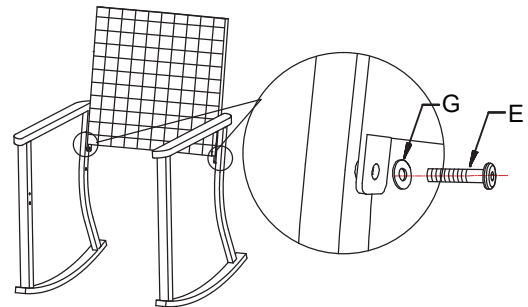


Step 3

Take the chair seat (D) and fix between the arms using the 35mm M6 bolts (F) and M6 flat washers (G). Finger tighten only at this stage.

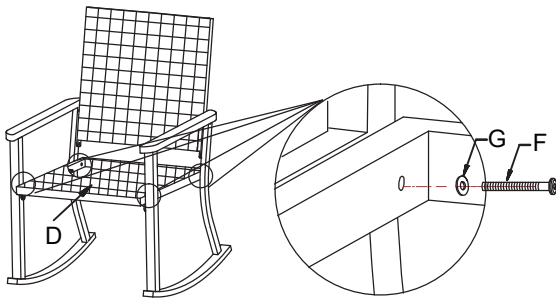

Step 4

Use the 15mm M6 bolts (E) and M6 flat washers (G) to attach the remaining lower seat tabs to the matching holes in the right and left arms. Finger tighten only at this stage.

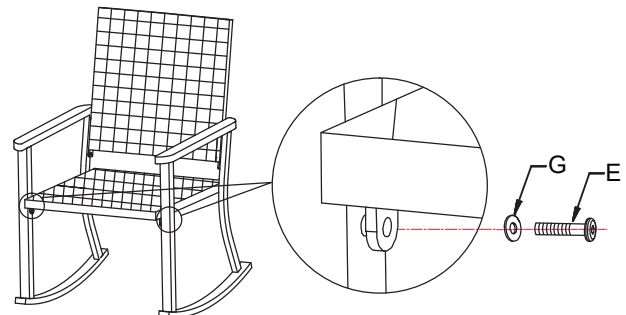

Step 5

Place the rocking chair right way up on a level surface and firmly hand tighten all the bolts using the hex wrench (I). Cover the bolt heads with the plastic bolt head covers (H) if desired.

