

Start assembly



1. Remove the left side bracket and install the door stopper with small screws.



2. Take out the metal strip and tap it into the hole (pay attention to the position of the hole).



3. Take out the right side bracket and tap the metal strip into the hole.



4. Take out the layer board and install it with large screws (pay attention to aligning the bracket with the groove of the layer board).



5. Erect the shelf.




6. Take out the backboard and insert it along the groove.




7. Remove the side bracket and install it with a large screw on the right side (do not tighten the front screw yet).



8. Remove the door panel and door mat and install them with small screws.

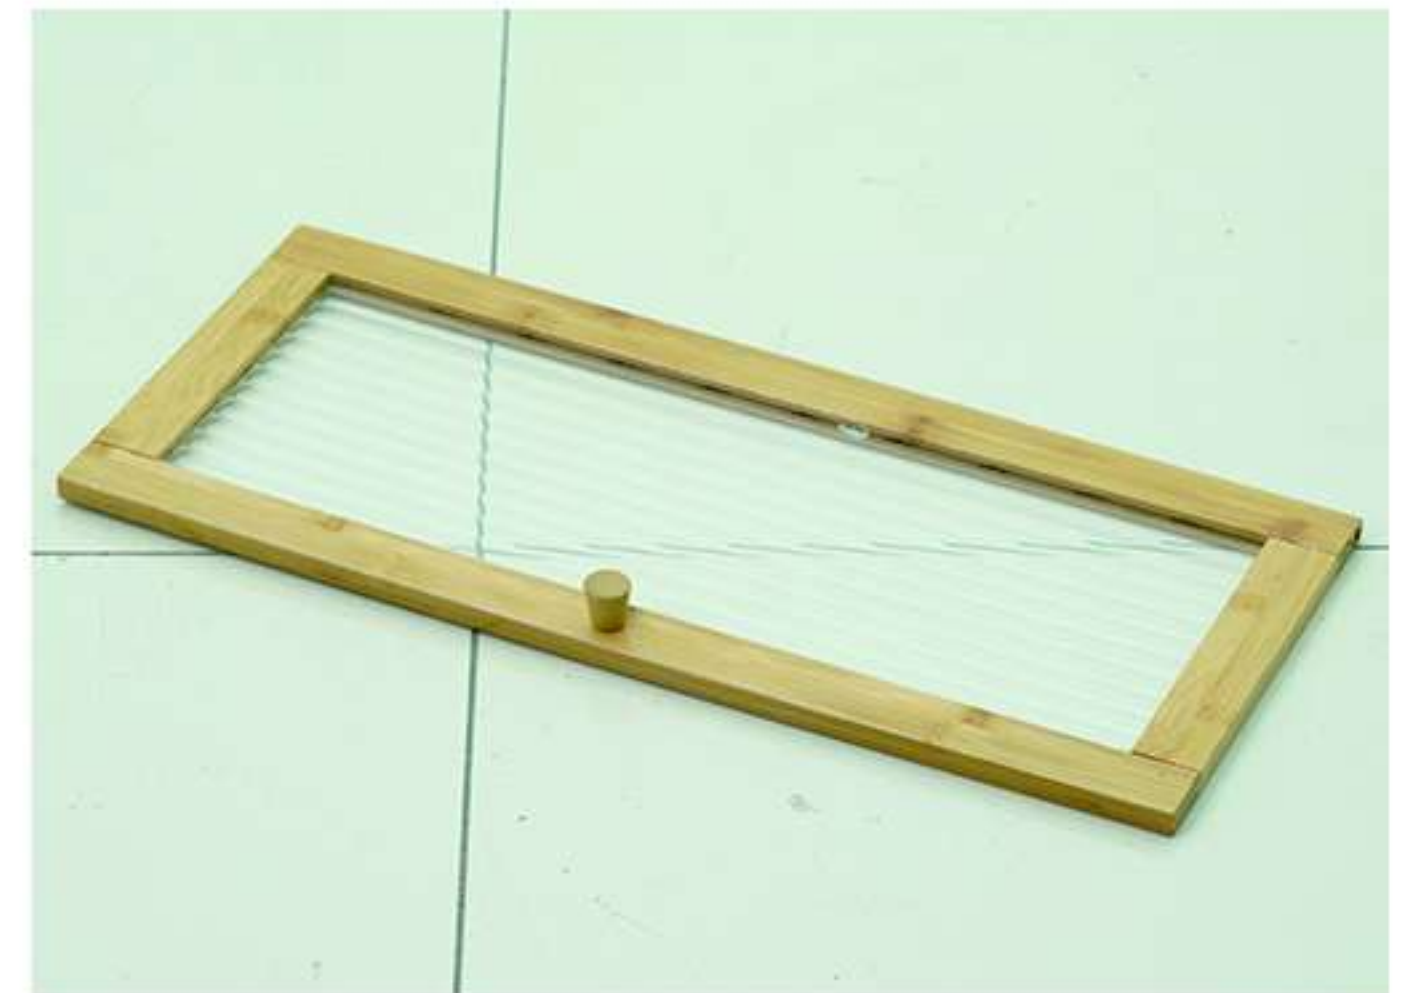

9. Remove the door handle and install it with a middle screw.

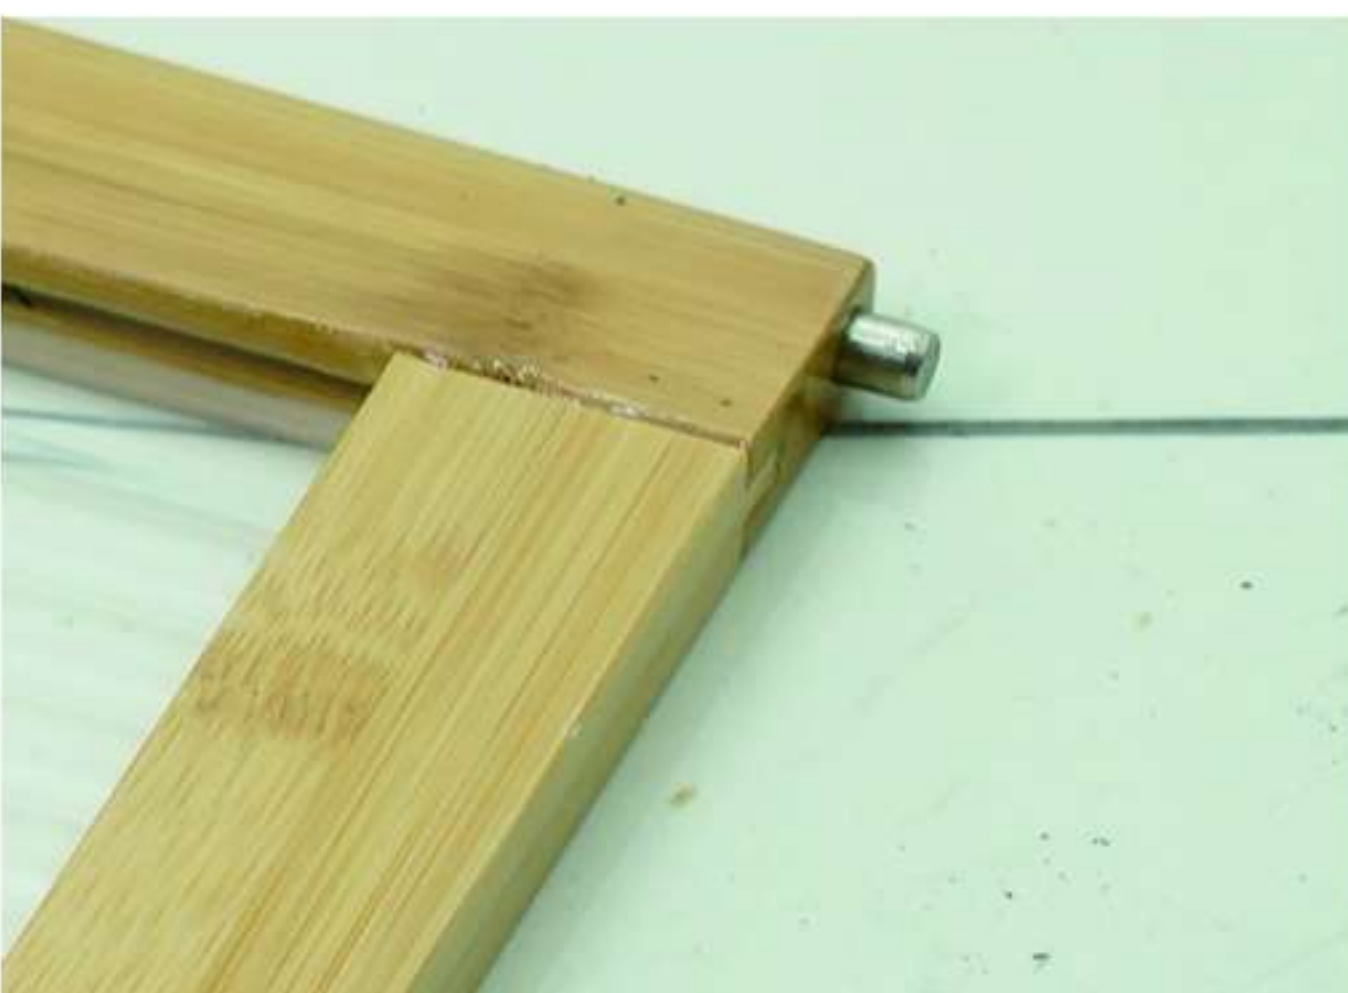

10. Then insert metal strips at both ends of the door panel.



11. Insert the metal strip on the door panel into the groove of the side bracket, and then tighten the right screw of the side bracket.



12. Finally, remove the top stopper and install it with long screws.

Installation Manual

Accessory List:



Door panel*2



Backplane*2



Laminate*2



Top bar*1



Side Left Bracket*1



Side Right Bracket*1



Handle*2



Small screw



Middle screw



Large screw



Door stopper



Door mat



Metal card strip



Installation tools