
Bathroom storage cabinet

Assembly Instructions - Please keep for future reference

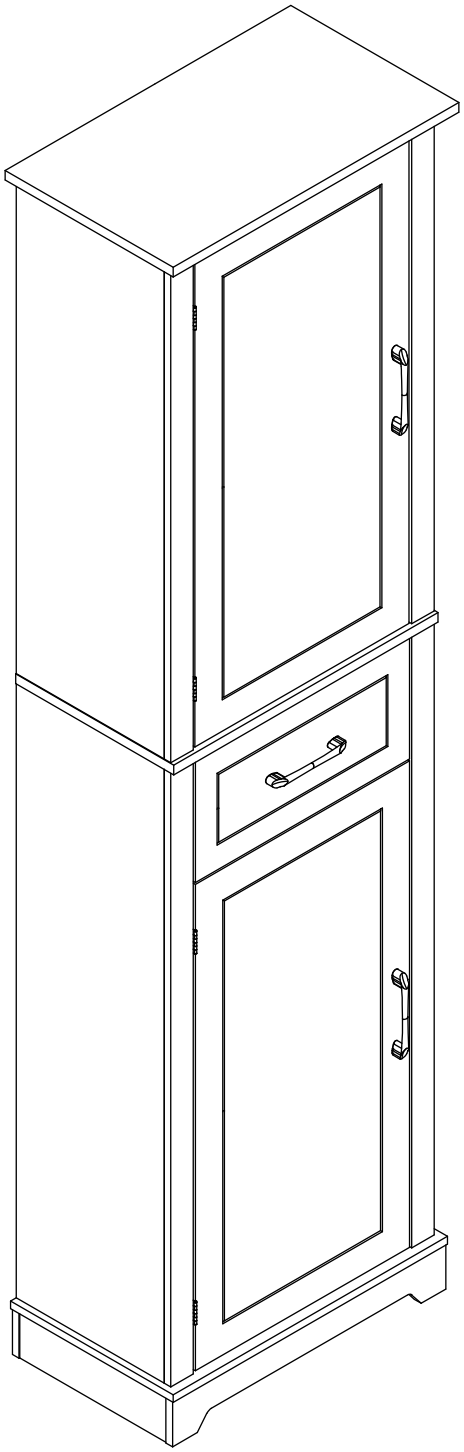

Improtant - Please read these instructions fully before starting assembly

Issue 1 - 10/01/24

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Both cases

PLAN A

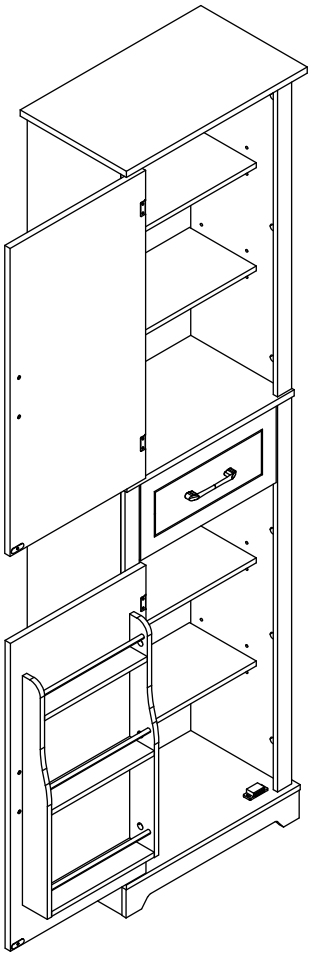















PLAN B

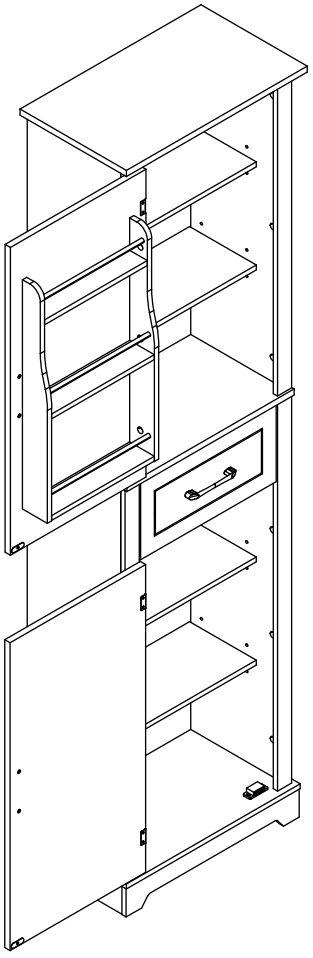


Components - Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

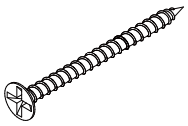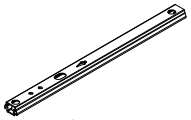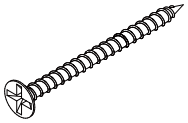Ⓐ  Cam Bolt x 54	Ⓑ  Cam Lock x 54	Ⓒ  8*30mm Dowel x 58	Ⓓ  4*35mm Screw x 8
Ⓔ  Screwdriver x 1	Ⓕ  Handle x 3	Ⓖ  Magnetism Mass x 2	Ⓗ  Metal Plate x 2
Ⓘ  3.5*12mm Screw x 20	Ⓙ  Hinge x 4	Ⓚ  Runner x 2	Ⓛ  M4*10mm Screw x 2
Ⓜ  2.5*12mm Screw x 33	Ⓝ  Shelf Bracket x 16	Ⓞ  Foot Pad x 4	Ⓟ  Wall Fixing x 1
Ⓠ  Wall Plug x 1	Ⓡ  4*30mm Screw x 8		

Ruler - Use this ruler to help correctly identify the screws

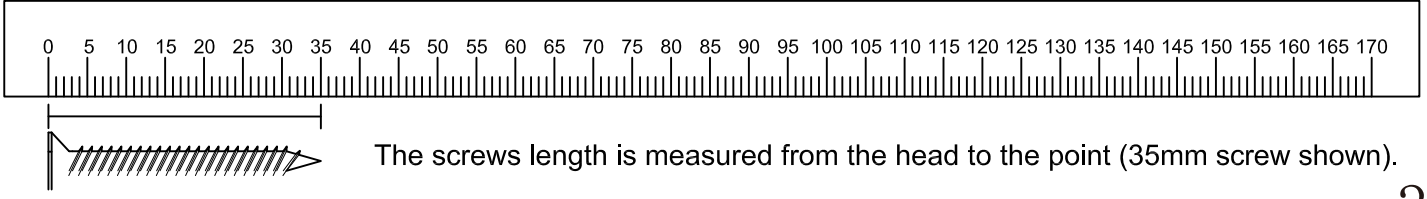


The screws length is measured from the head to the point (35mm screw shown).

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

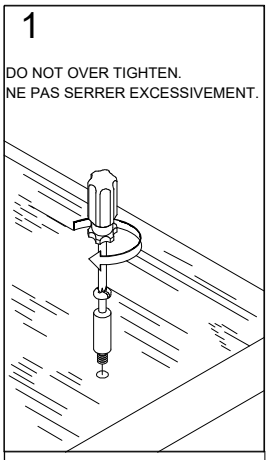

Step 2


Push the male camlock into the entry hole.

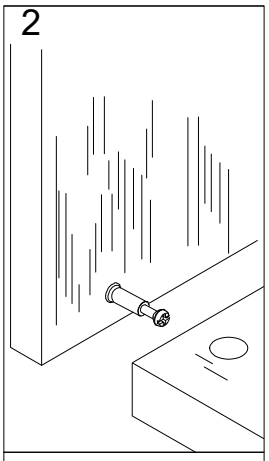

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

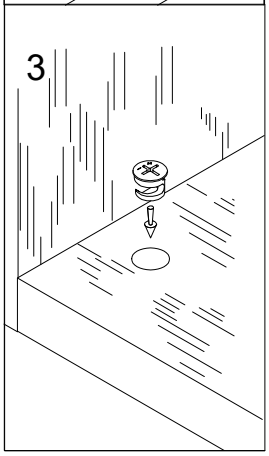


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

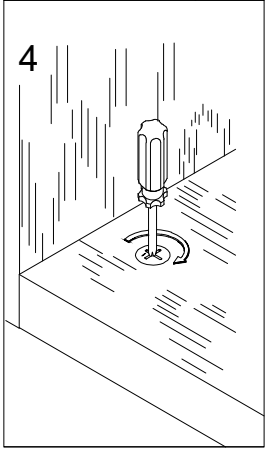


Tools required














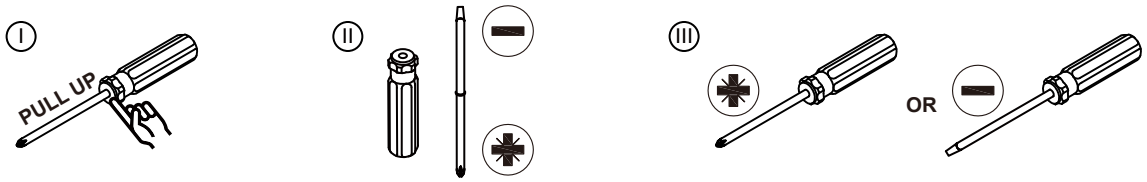


Screwdrivers can be converted to Phillips and Slotted.













Assembly Instructions

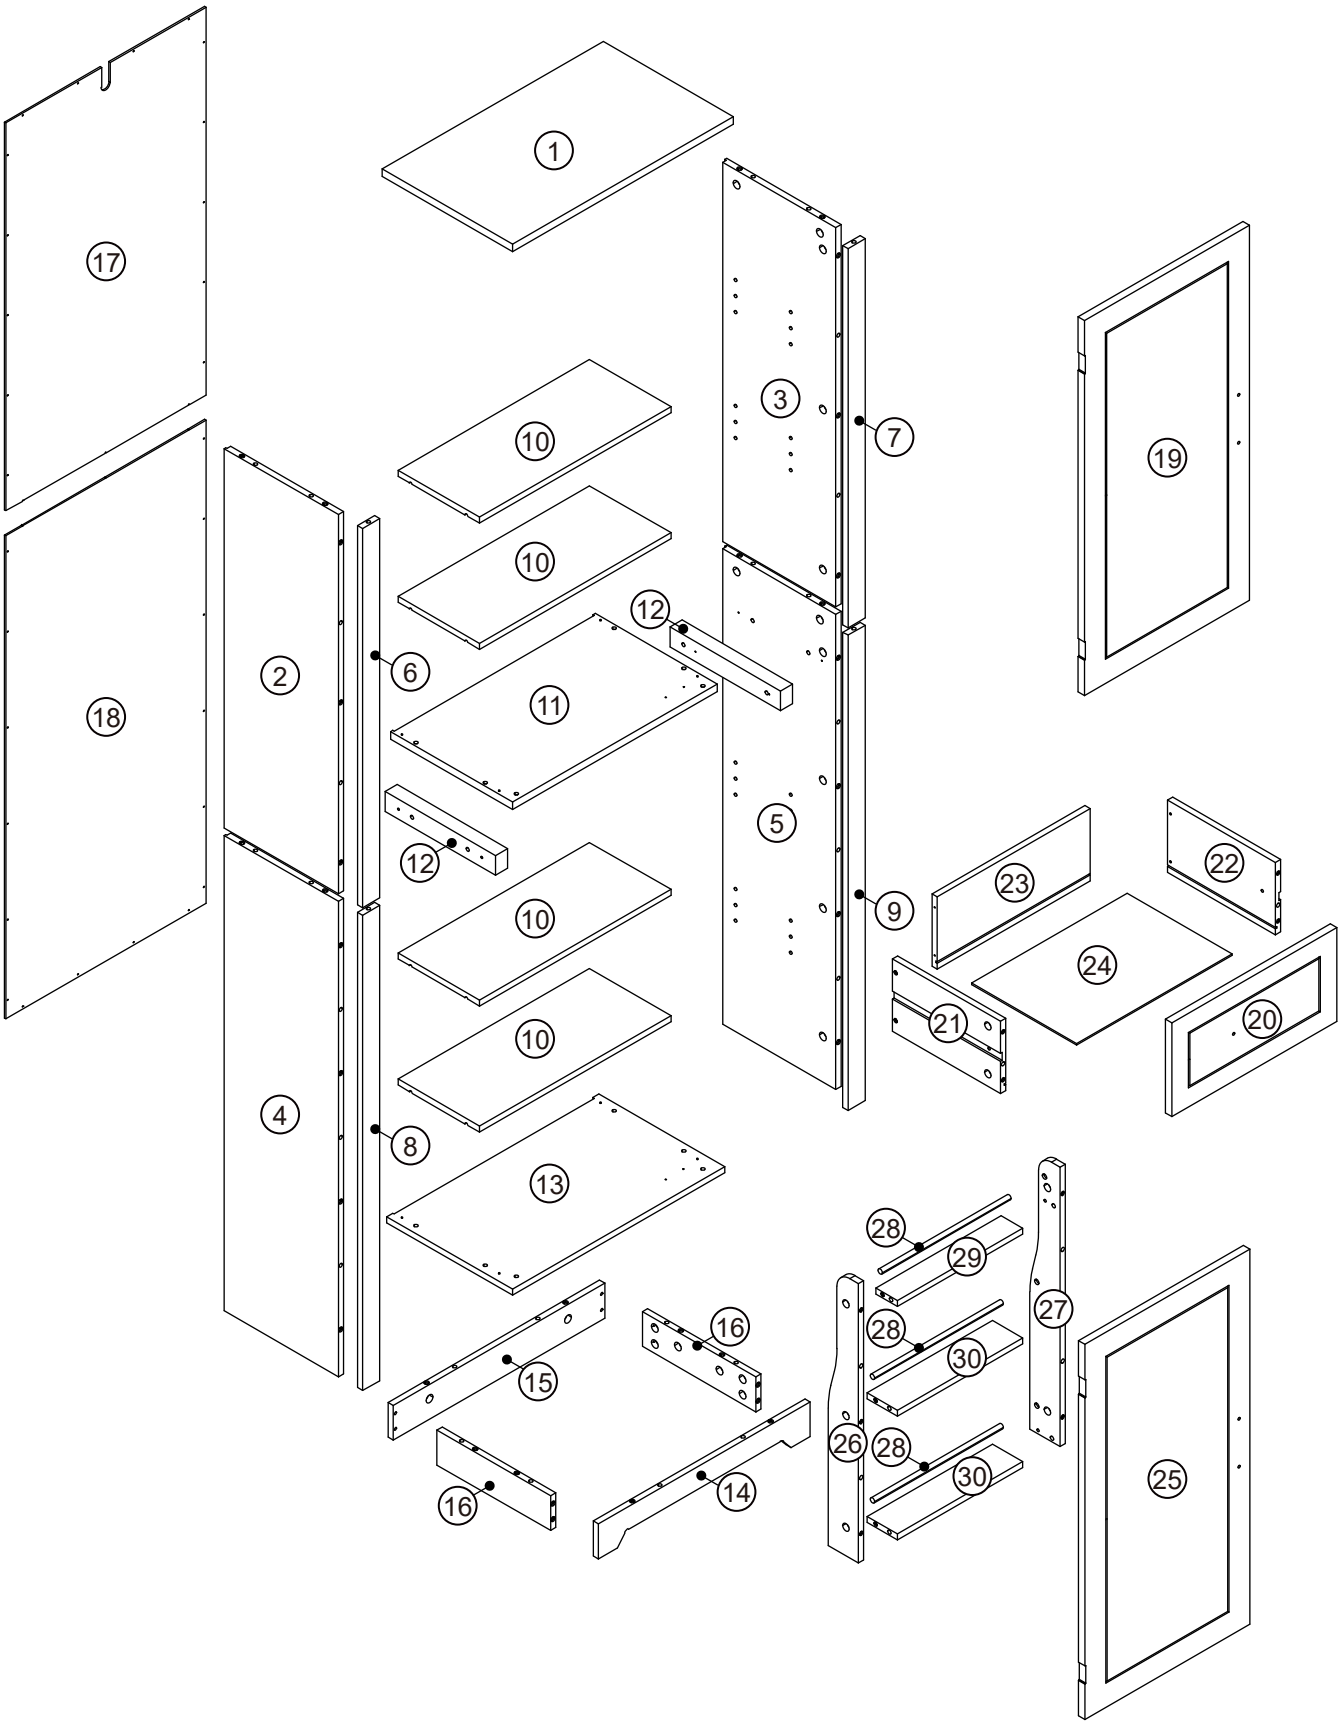



Assembly Instructions

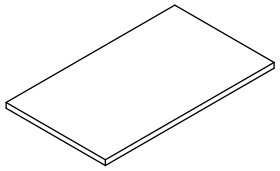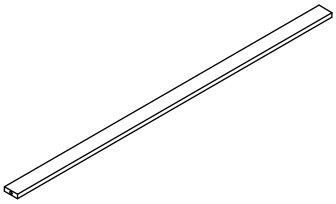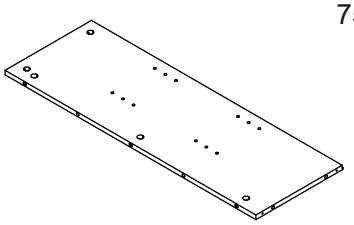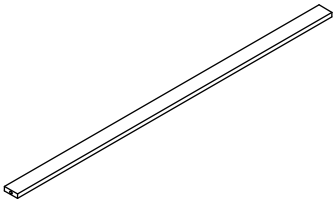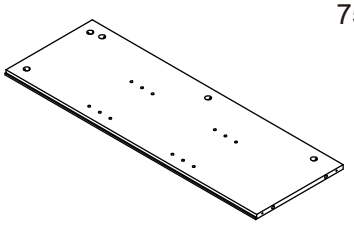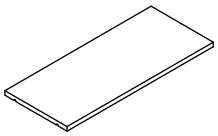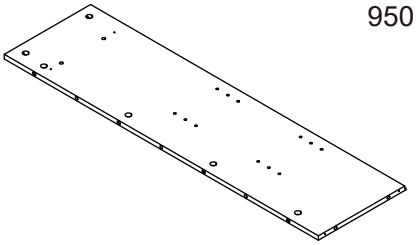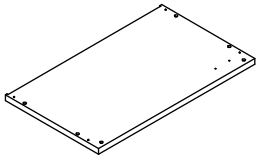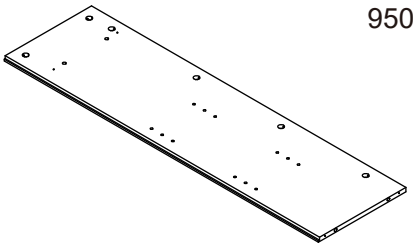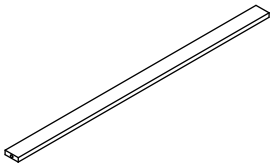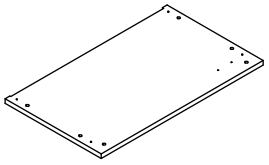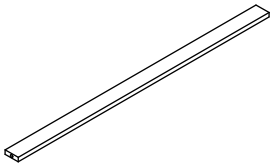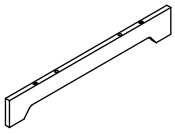1 510 x 300 x 30 mm  1	8 950 x 41 x 15 mm  1
2 759 x 265 x 12 mm  1	9 950 x 41 x 15 mm  1
3 759 x 265 x 12 mm  1	10 442 x 190 x 12 mm  4
4 950 x 265 x 12 mm  1	11 472 x 282 x 15 mm  1
5 950 x 265 x 12 mm  1	12 255 x 40 x 28 mm  2
6 758 x 41 x 15 mm  1	13 490 x 290 x 12 mm  1
7 758 x 41 x 15 mm  1	14 486 x 70 x 12 mm  1

Assembly Instructions

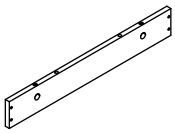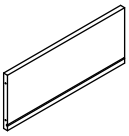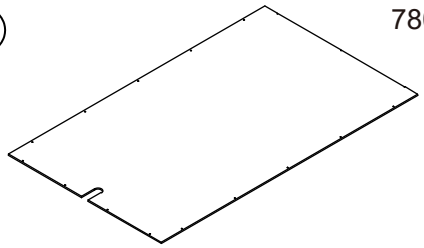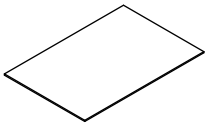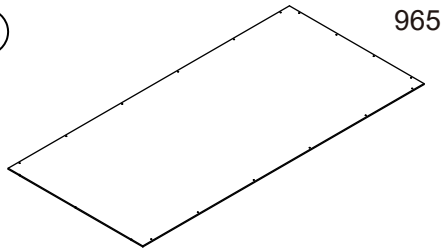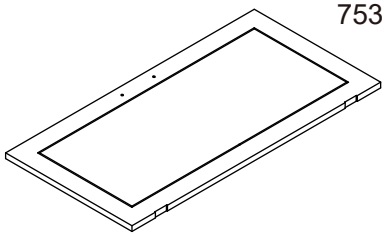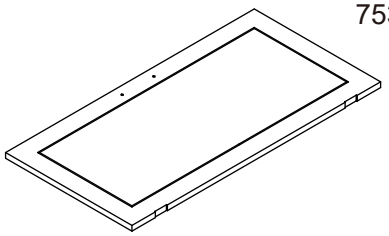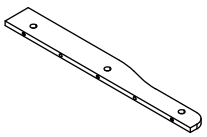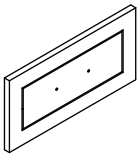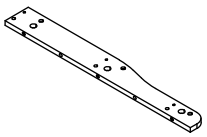
(15) 486 x 70 x 12 mm  **1**	(22) 250 x 145 x 12 mm  **1**
(16) 263 x 70 x 12 mm  **2**	(23) 354 x 145 x 12 mm  **1**
(17) 780 x 459 x 3 mm  **1**	(24) 363 x 246 x 3 mm  **1**
(18) 965 x 459 x 3 mm  **1**	(25) 753 x 384 x 15 mm  **1**
(19) 753 x 384 x 15 mm  **1**	(26) 562 x 71 x 12 mm  **1**
(20) 383 x 188 x 15 mm  **1**	(27) 562 x 71 x 12 mm  **1**
(21) 250 x 145 x 12 mm  **1**	(28) φ10 x 297 mm  **3**


Assembly Instructions

(29)	289 x 48 x 12 mm  **1**
(30)	289 x 69 x 12 mm  **2**


Assembly Instructions



Step 1

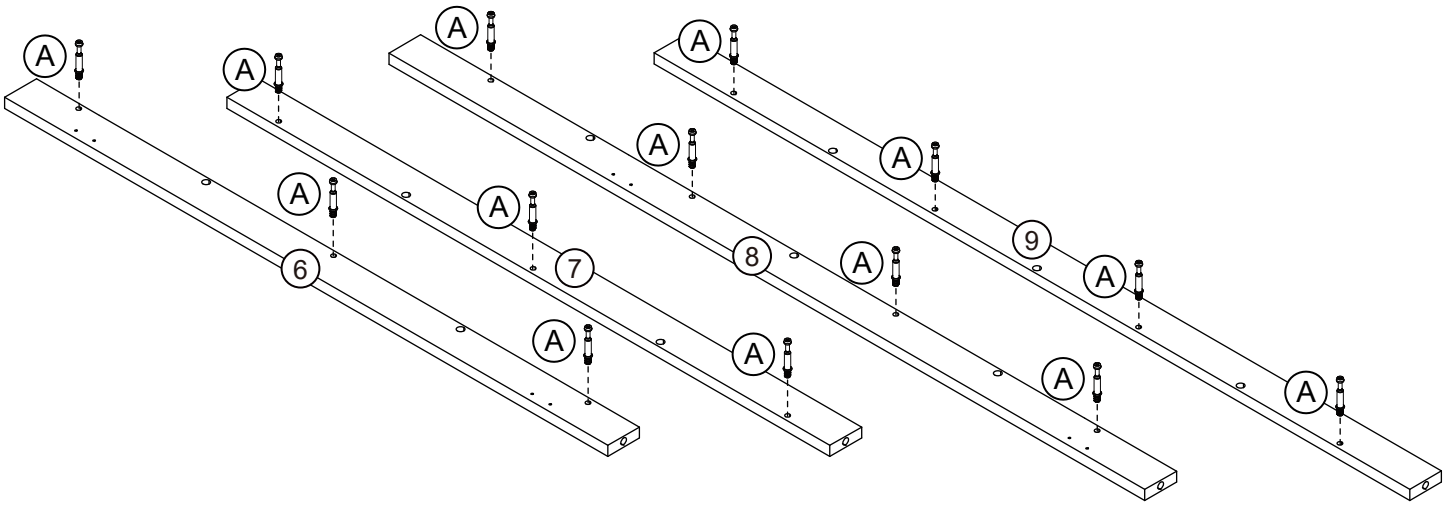

A

Cam Bolt x 14

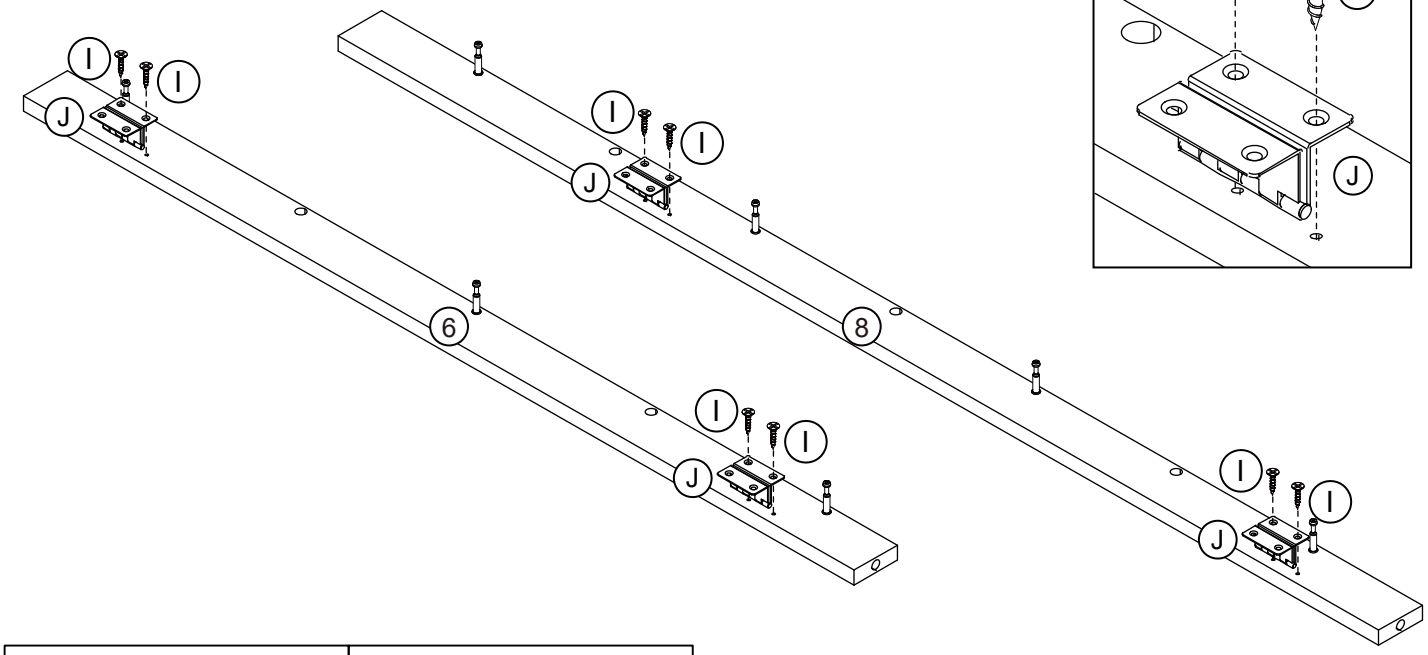
Step 2




I	J
	
3.5*12mm Screw x 8	Hinge x 4


Assembly Instructions


Step 3

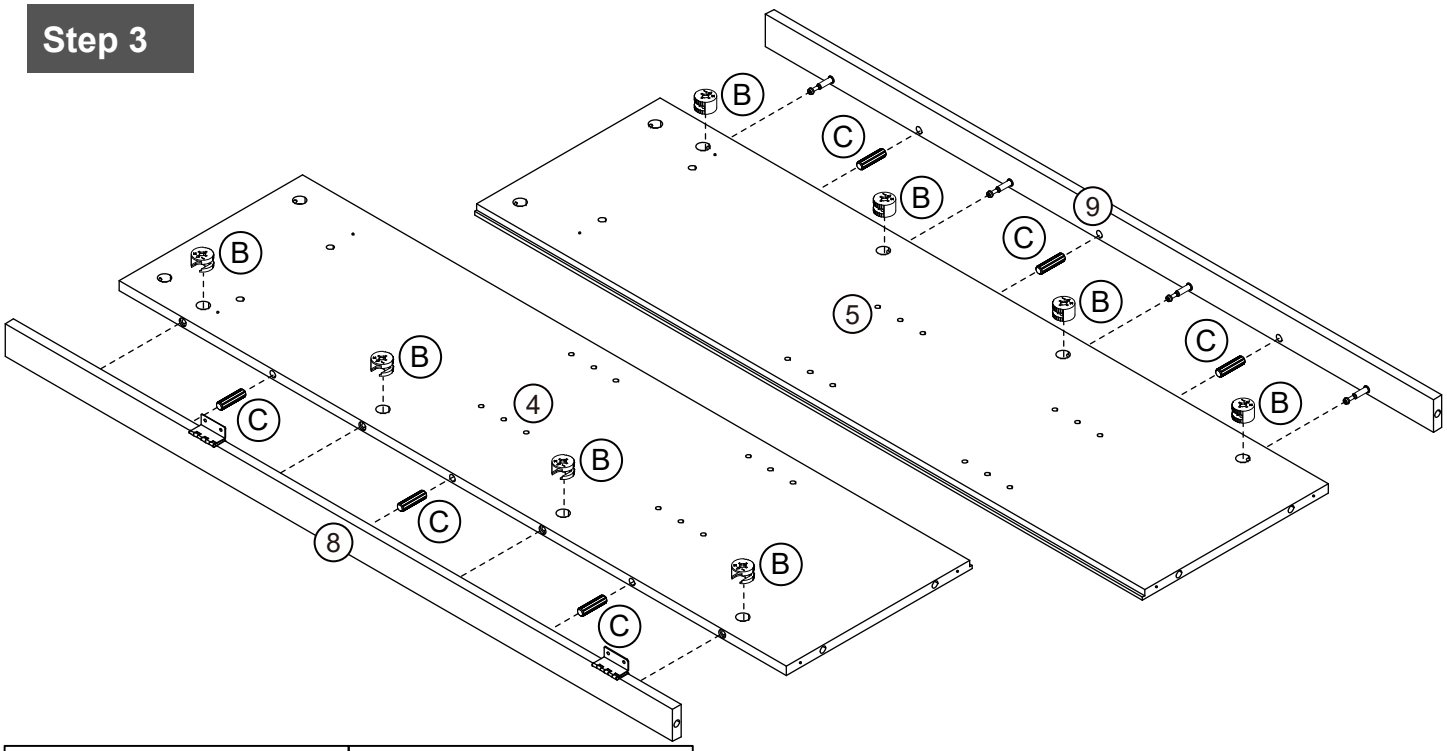

B	C
	
Cam Lock x 8	8*30mm Dowel x 6


Step 4


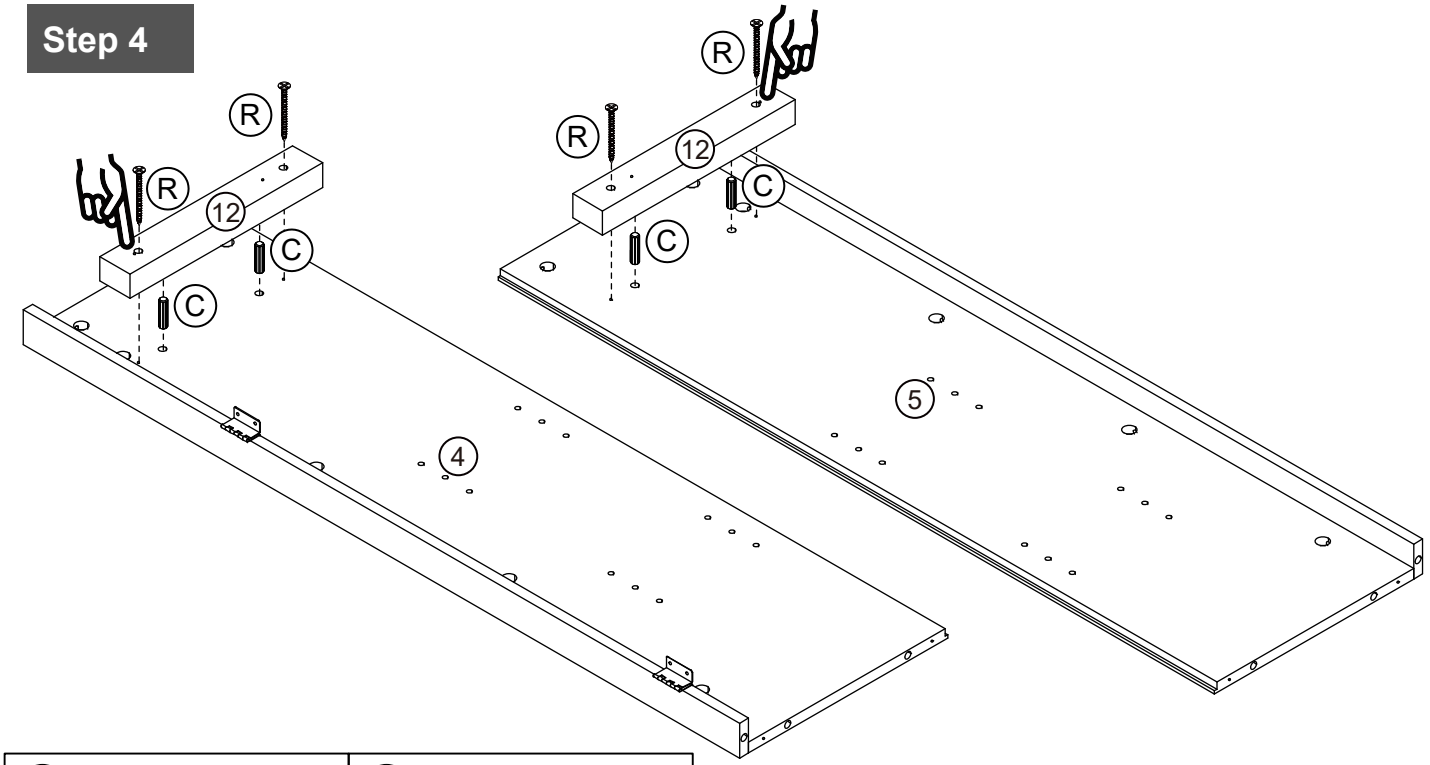


C	R
	
8*30mm Dowel x 4	4*30mm Screw x 4


Assembly Instructions


Step 5

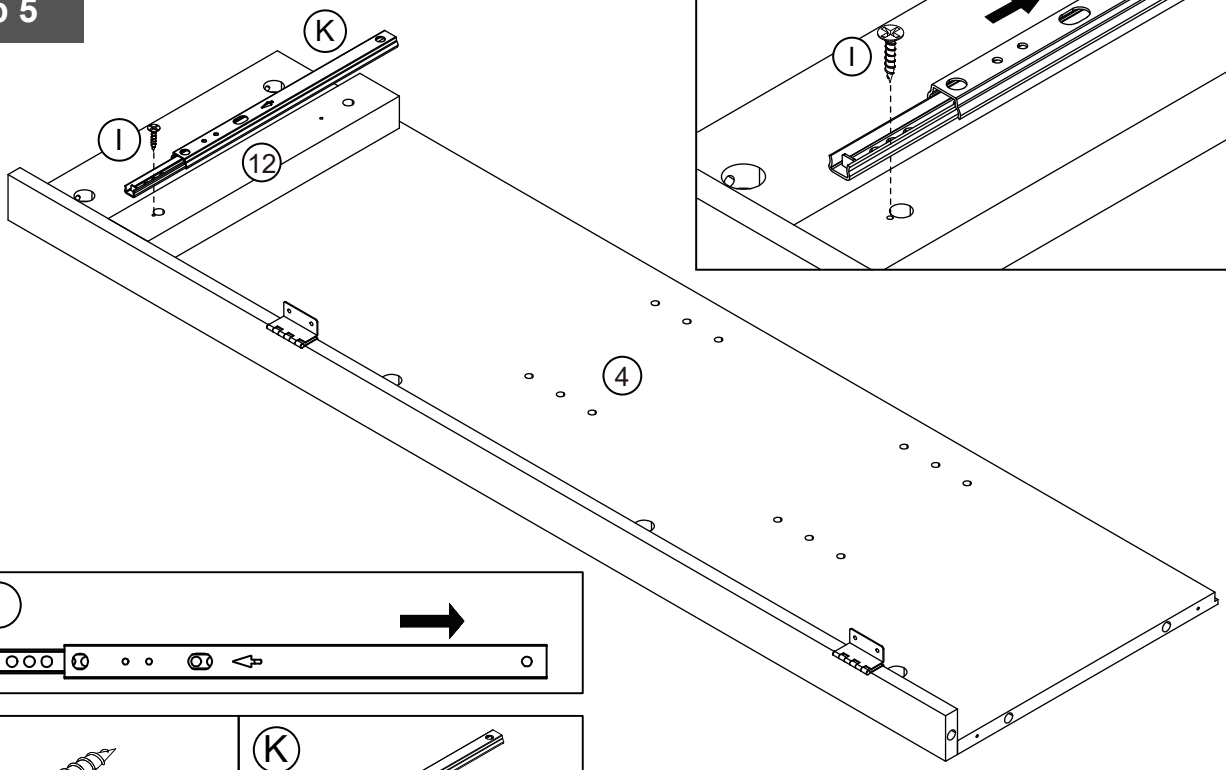

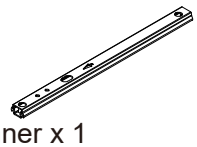I	K
	
3.5*12mm Screw x 1	Runner x 1


Step 6


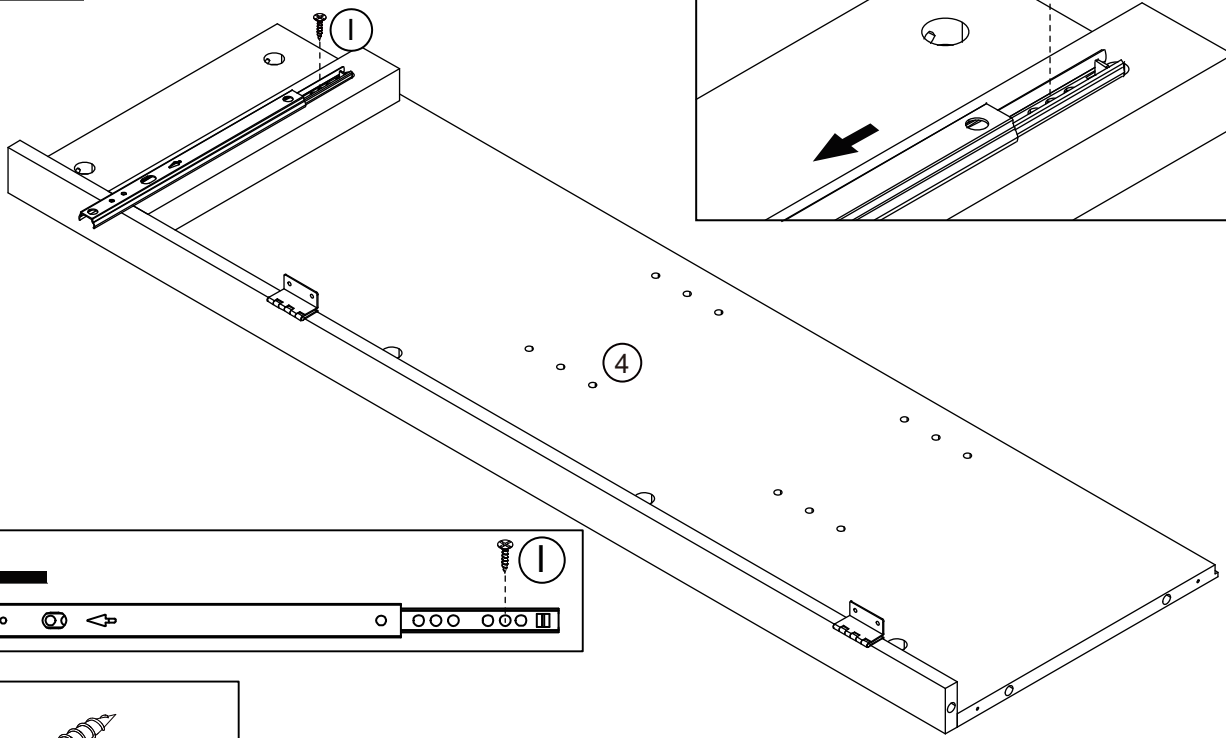


I

3.5*12mm Screw x 1


Assembly Instructions

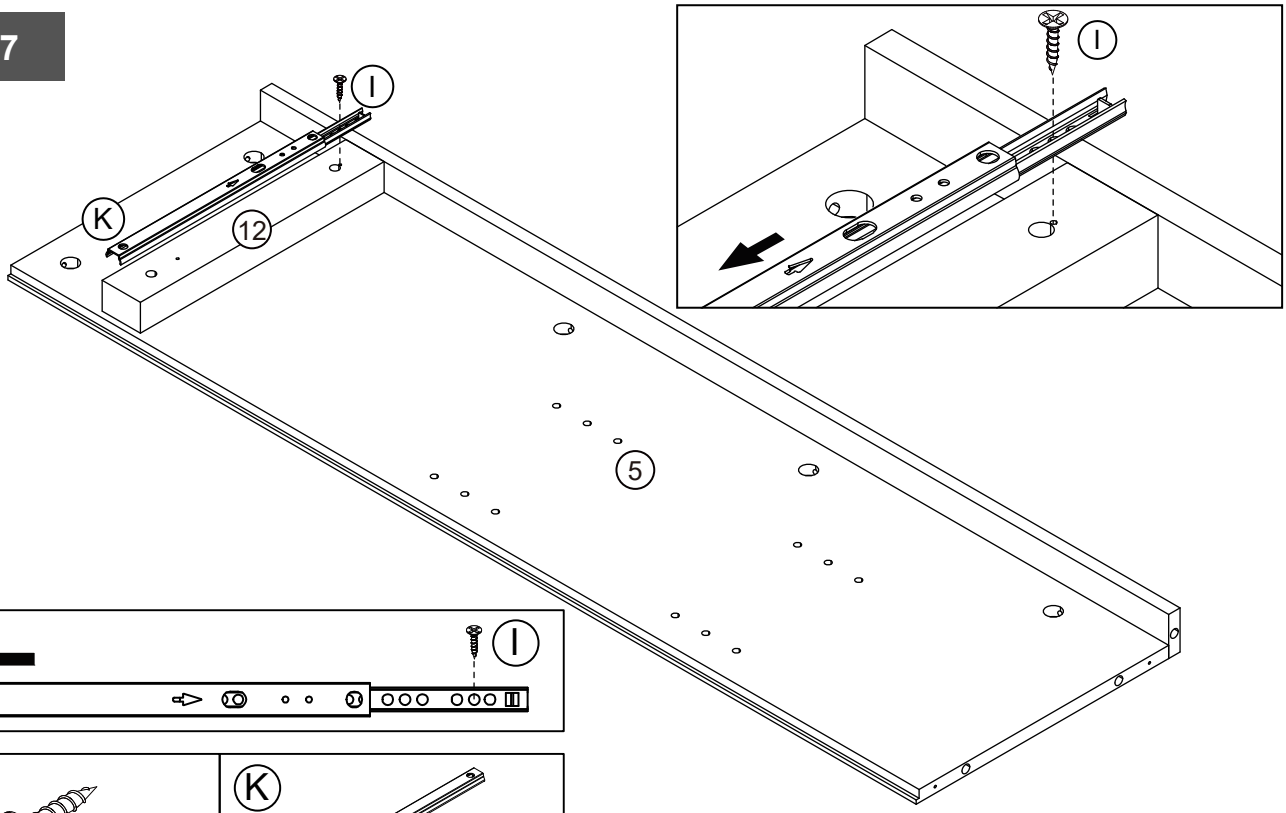
Step 7

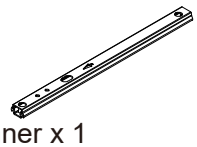

I	K
	
3.5*12mm Screw x 1	Runner x 1


Step 8

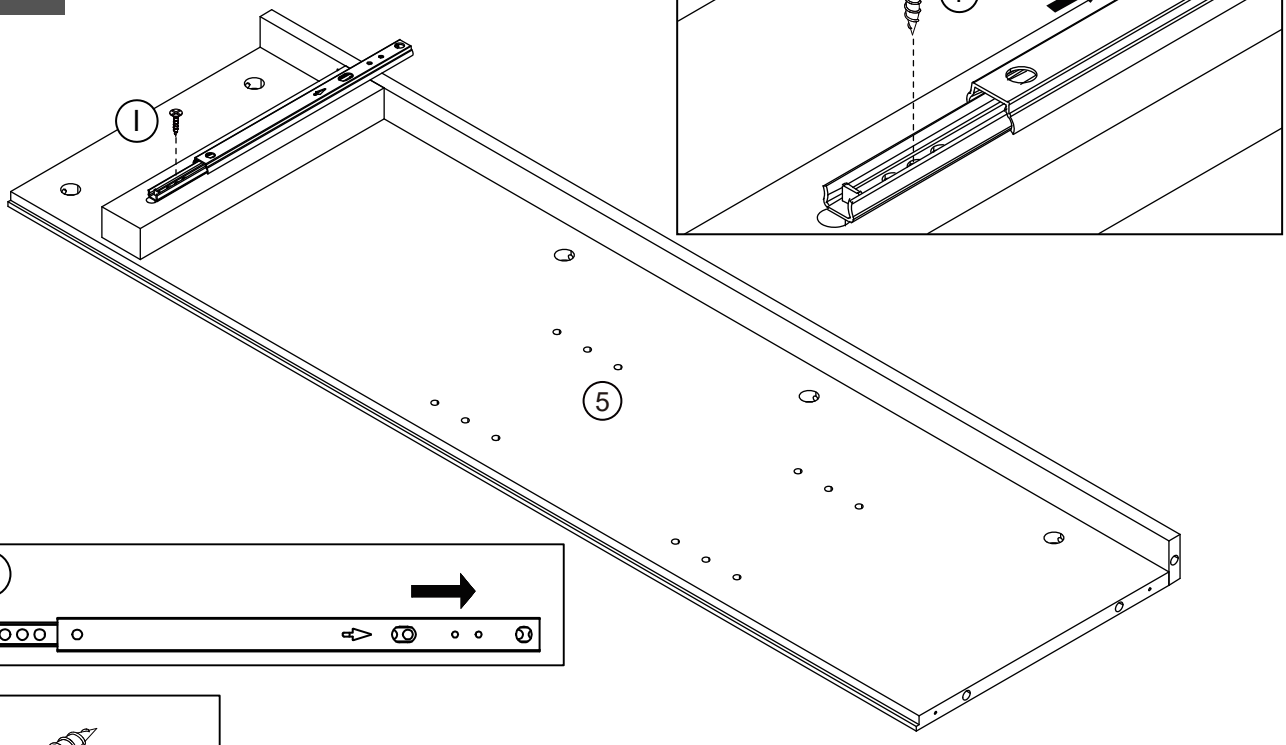


I

3.5*12mm Screw x 1


Assembly Instructions

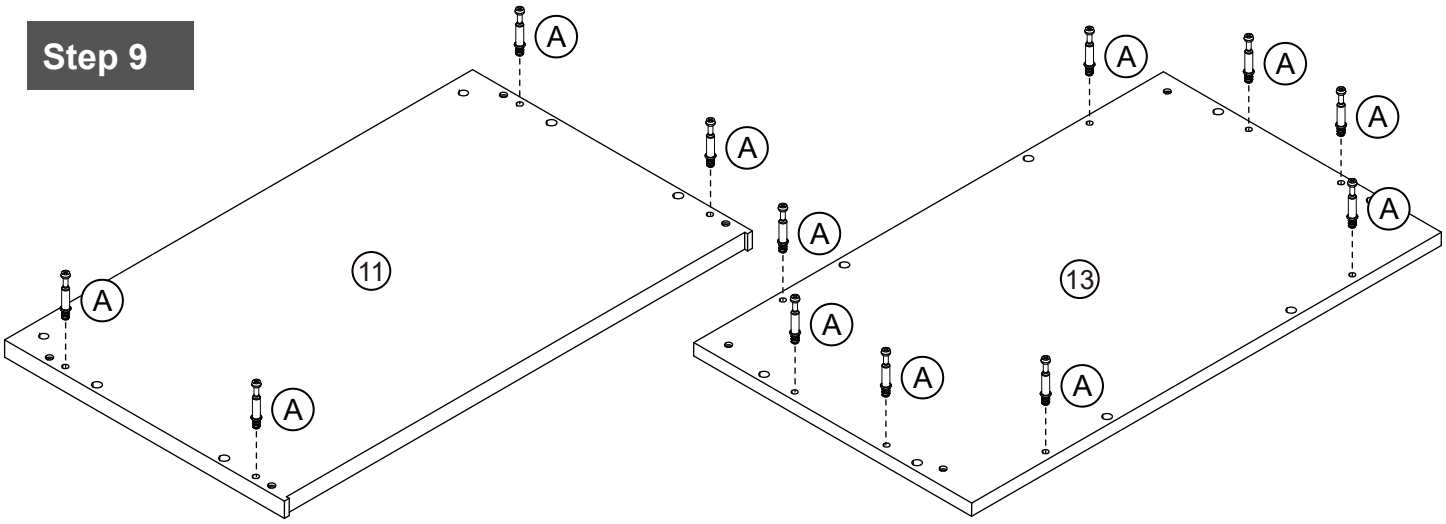
Step 9



A

Cam Bolt x 12

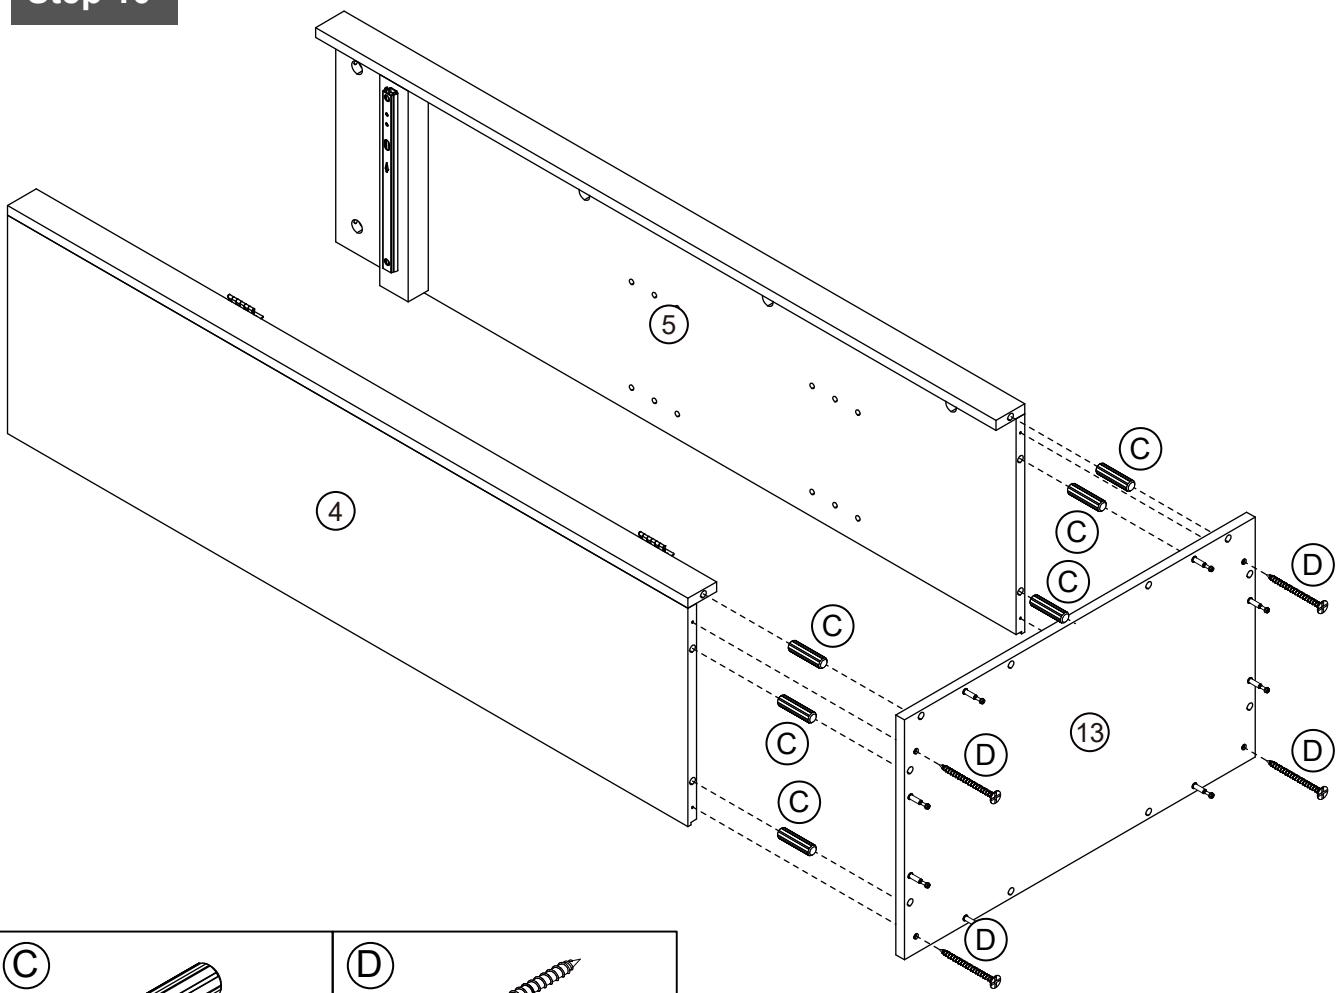
Step 10





C	D
	
8*30mm Dowel x 6	4*35mm Screw x 4


Assembly Instructions

Step 11

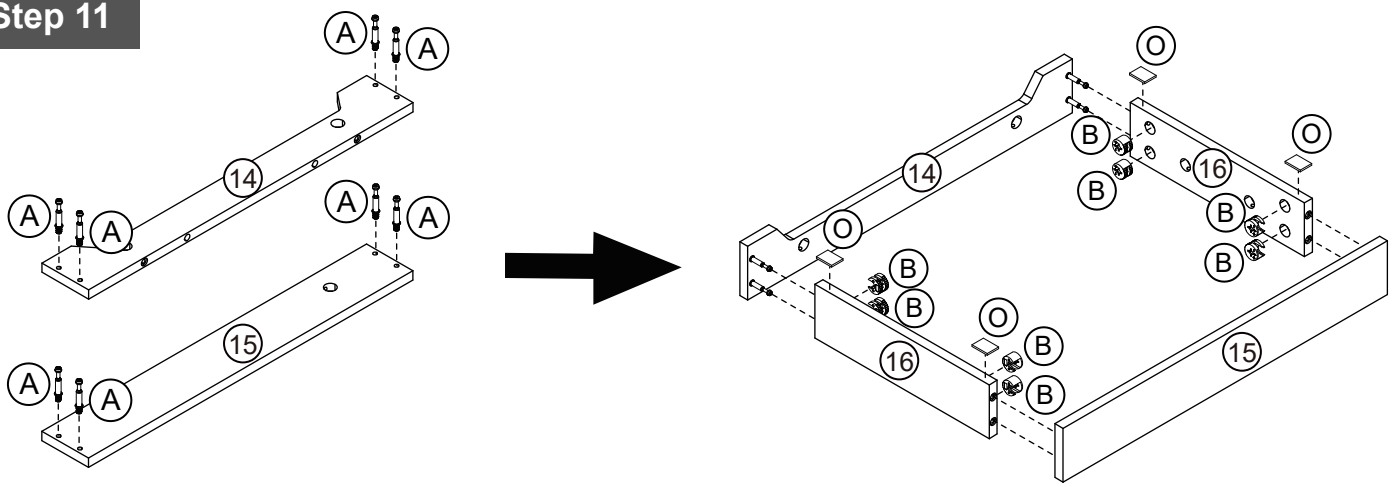

A	B	O
		
Cam Bolt x 8	Cam Lock x 8	Foot Pad x 4


Step 12

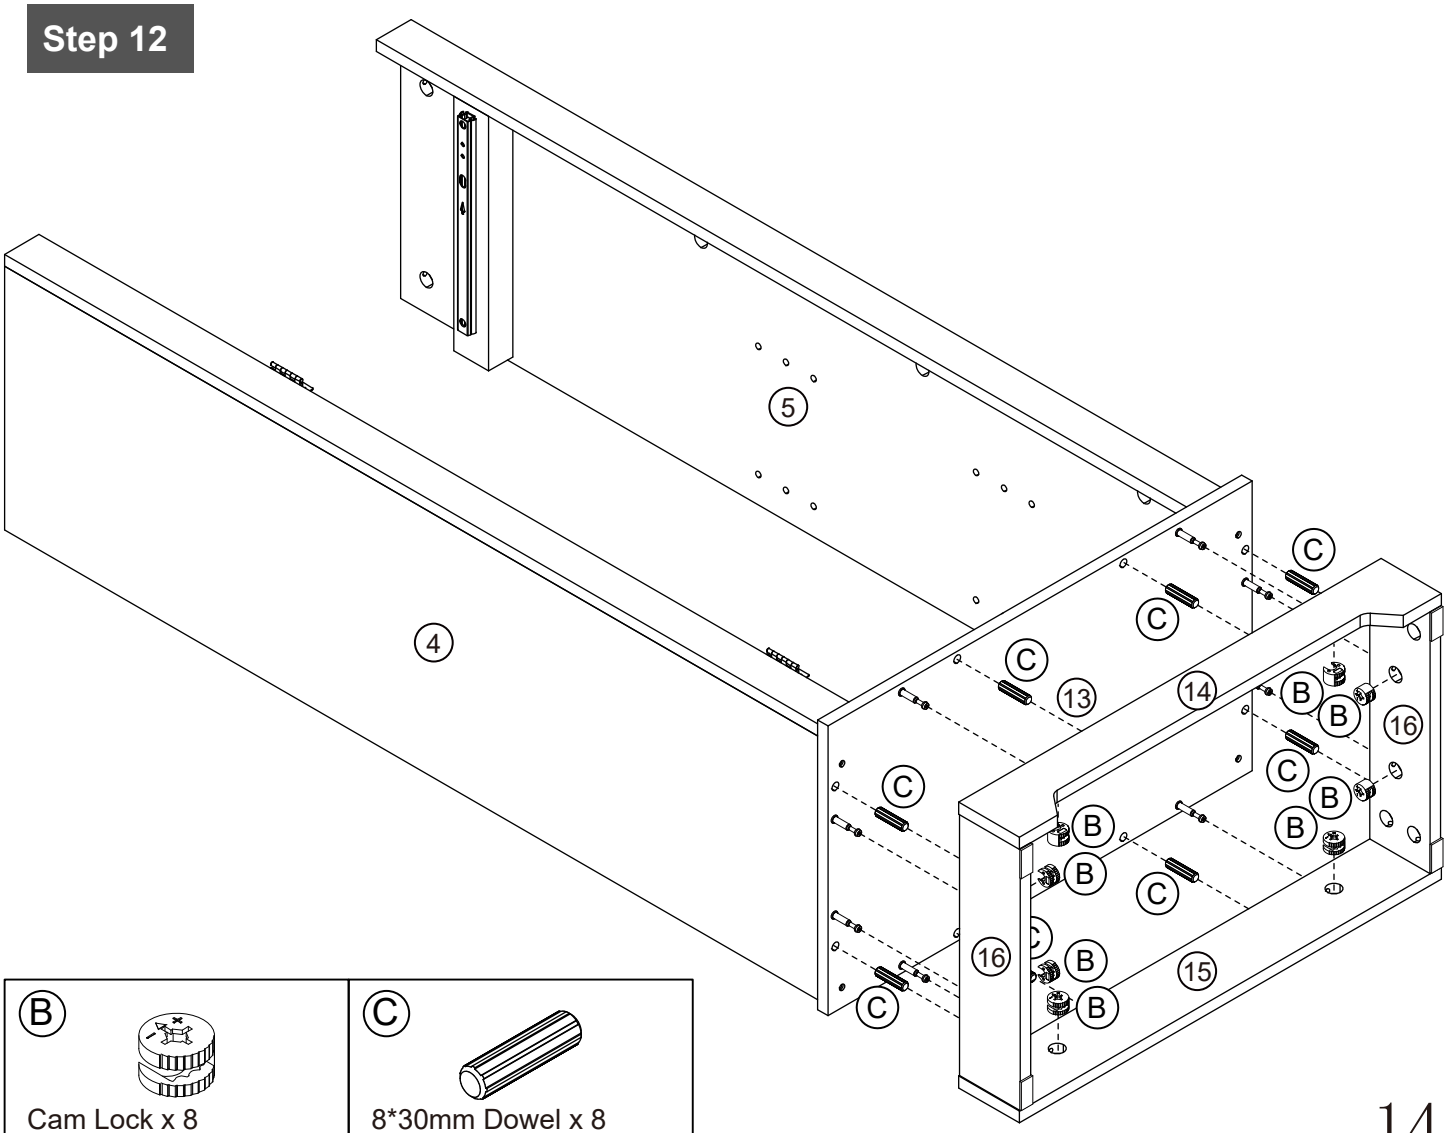


B	C
Cam Lock x 8	8*30mm Dowel x 8


Assembly Instructions


Step 13


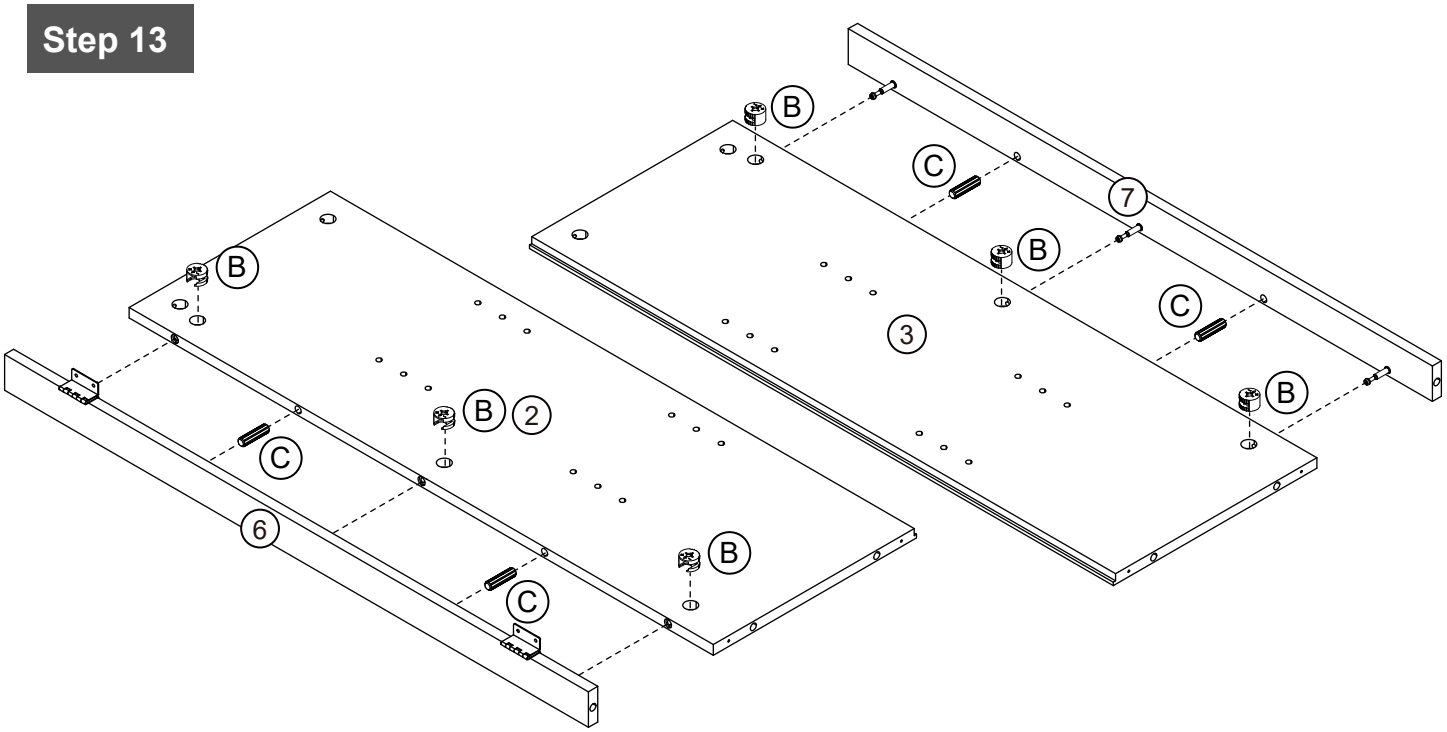


B	C
	
Cam Lock x 6	8*30mm Dowel x 4

Step 14

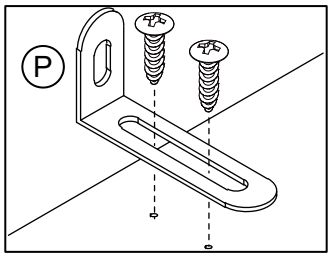


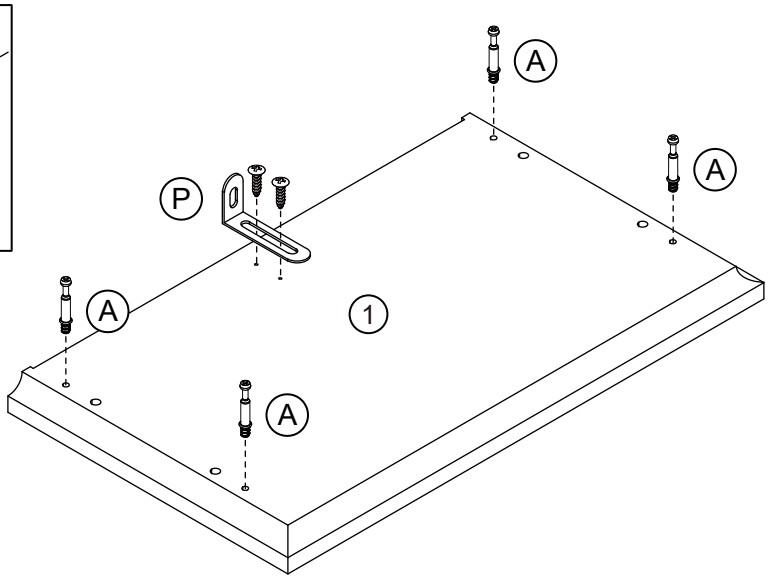

A	P
	
Cam Bolt x 4	Wall Fixing x 1


Assembly Instructions

Step 15

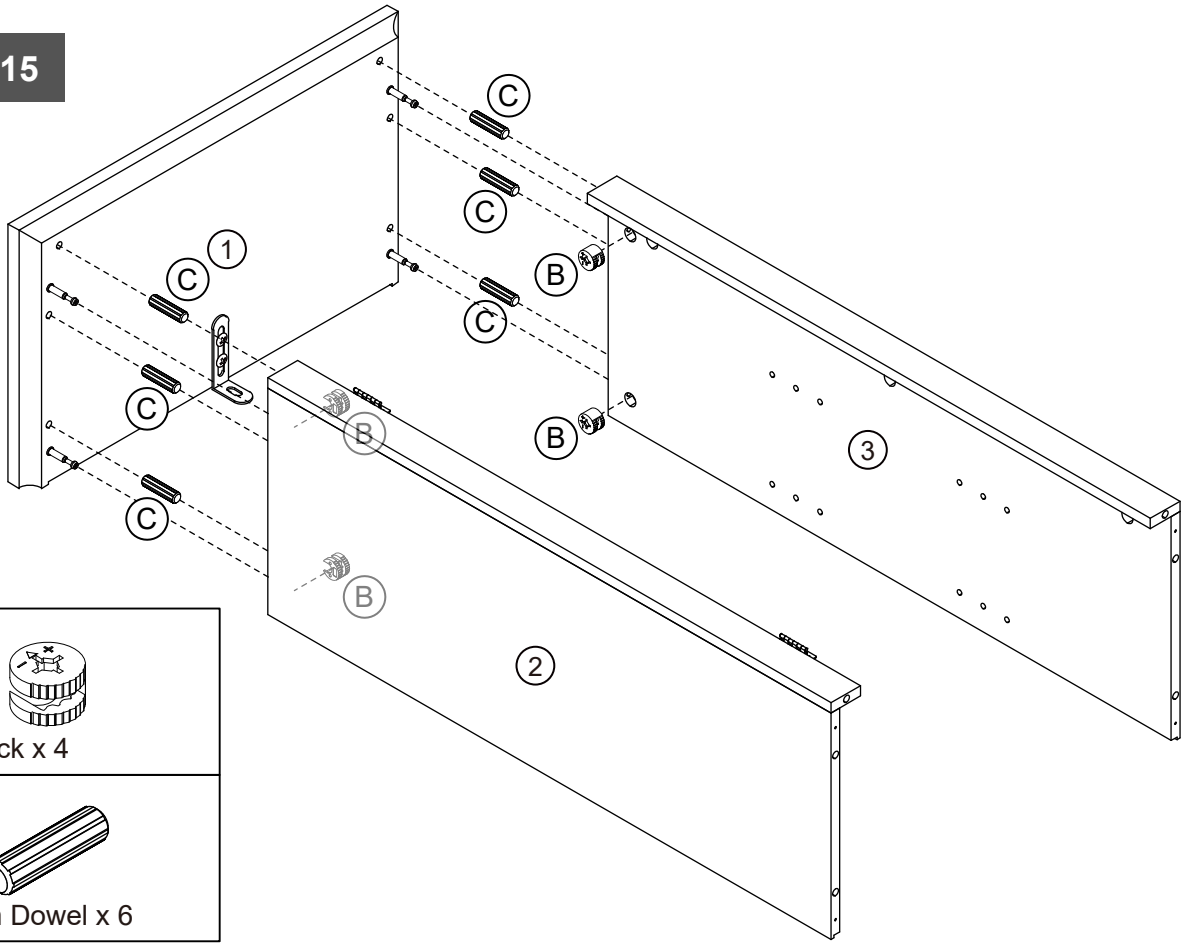

B	Cam Lock x 4
C	8*30mm Dowel x 6


Step 16

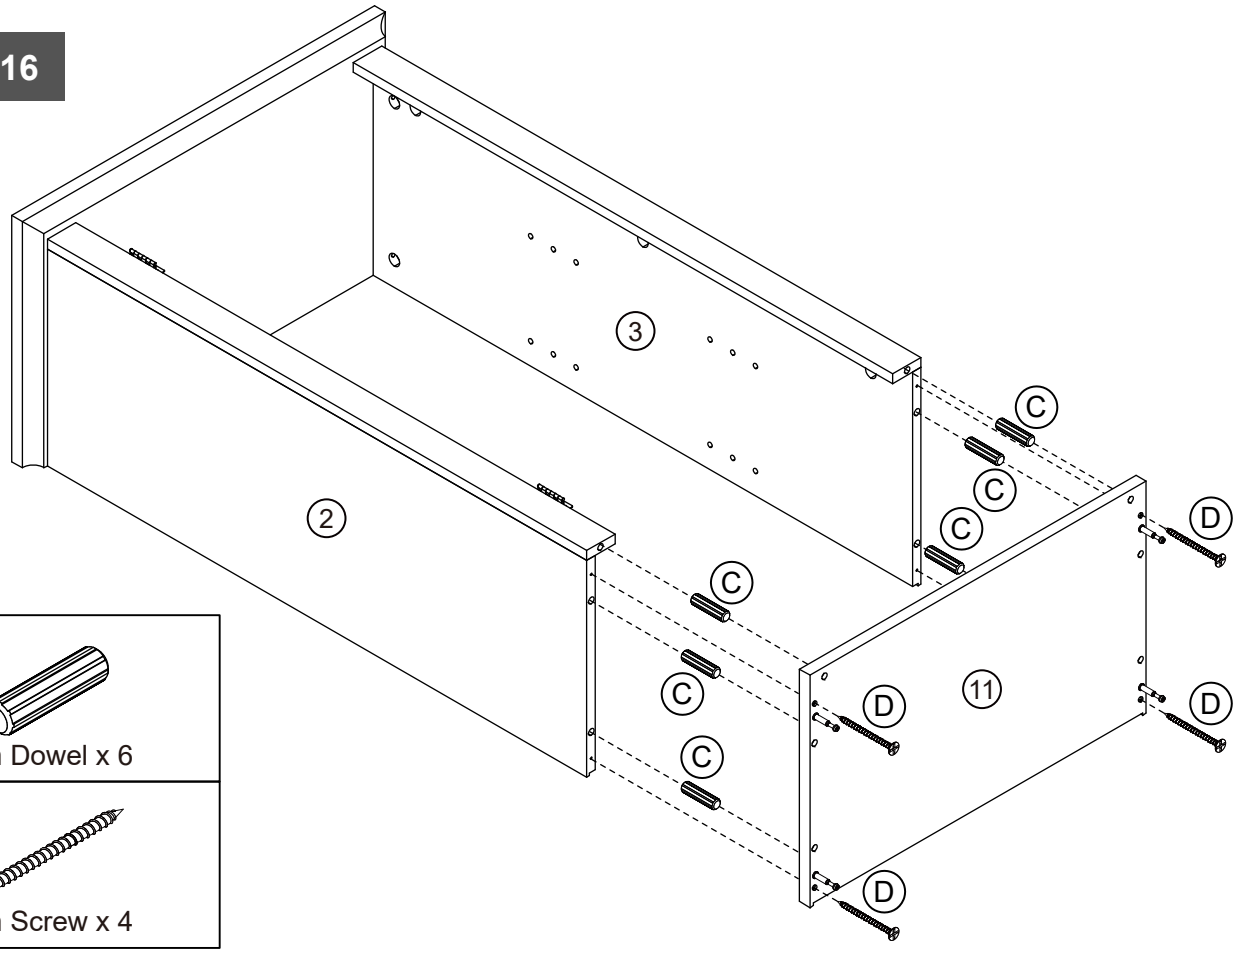




C	8*30mm Dowel x 6
D	4*35mm Screw x 4

Assembly Instructions

Step 17

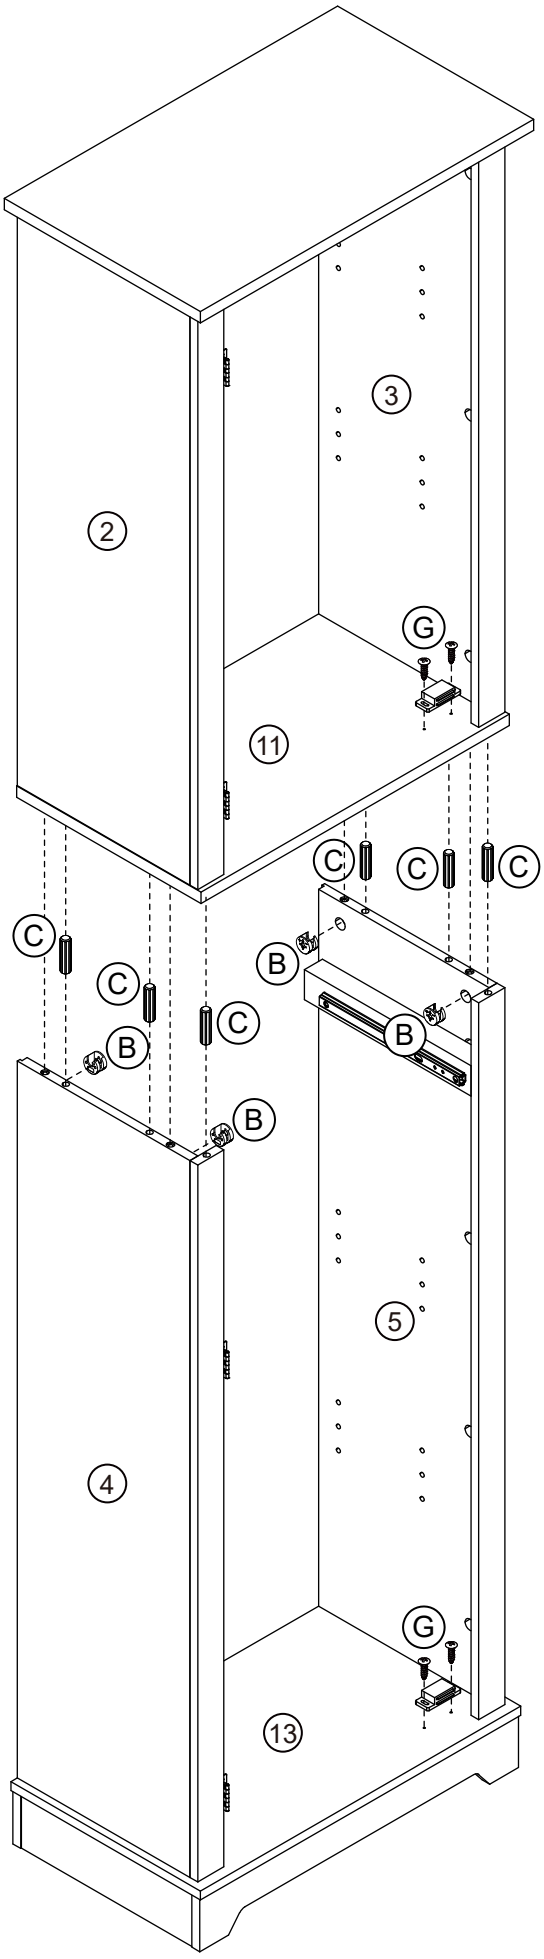


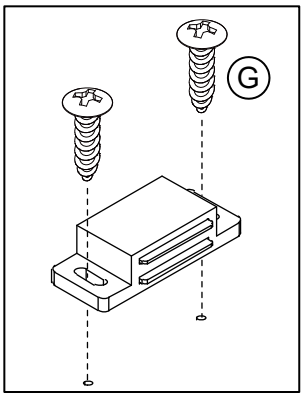

B 	Cam Lock x 4
C 	8*30mm Dowel x 6
G 	Magnetism Mass x 2

Assembly Instructions

Step 18

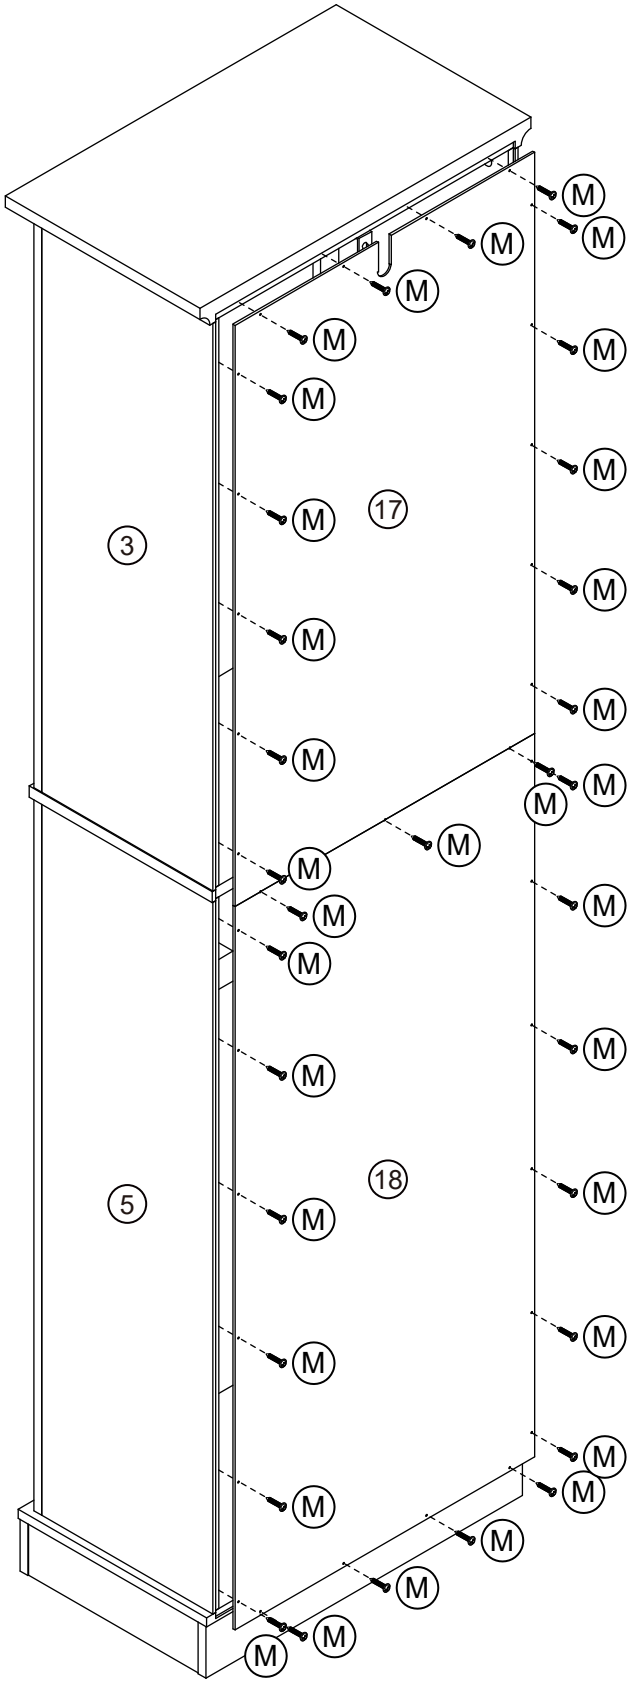


Ⓜ





2.5*12mm Screw x 33


Assembly Instructions

Step 19

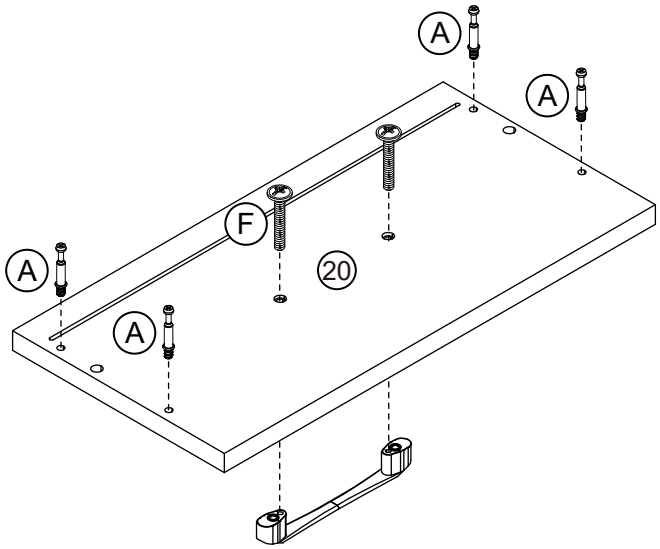

A  Cam Bolt x 4	F  Handle x 1


Step 20

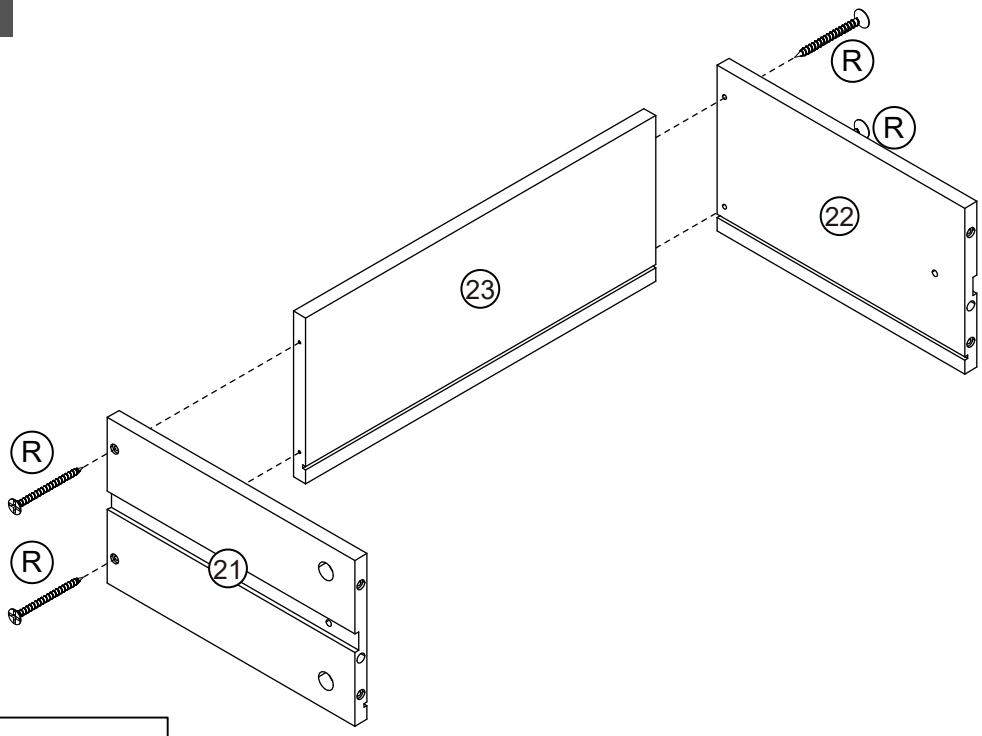


R  4*30mm Screw x 4


Assembly Instructions

Step 21

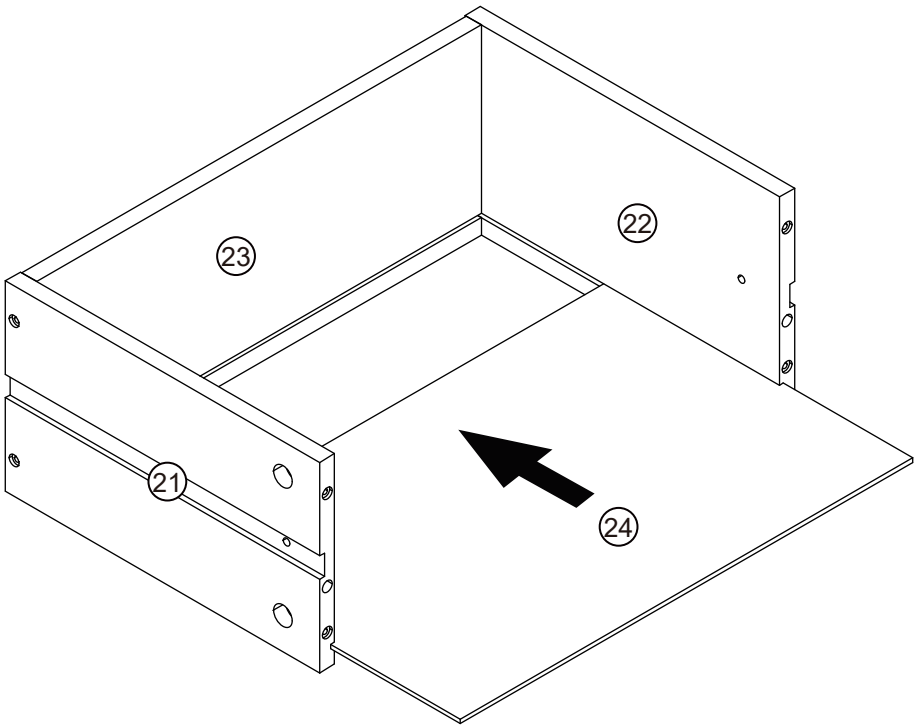


Step 22

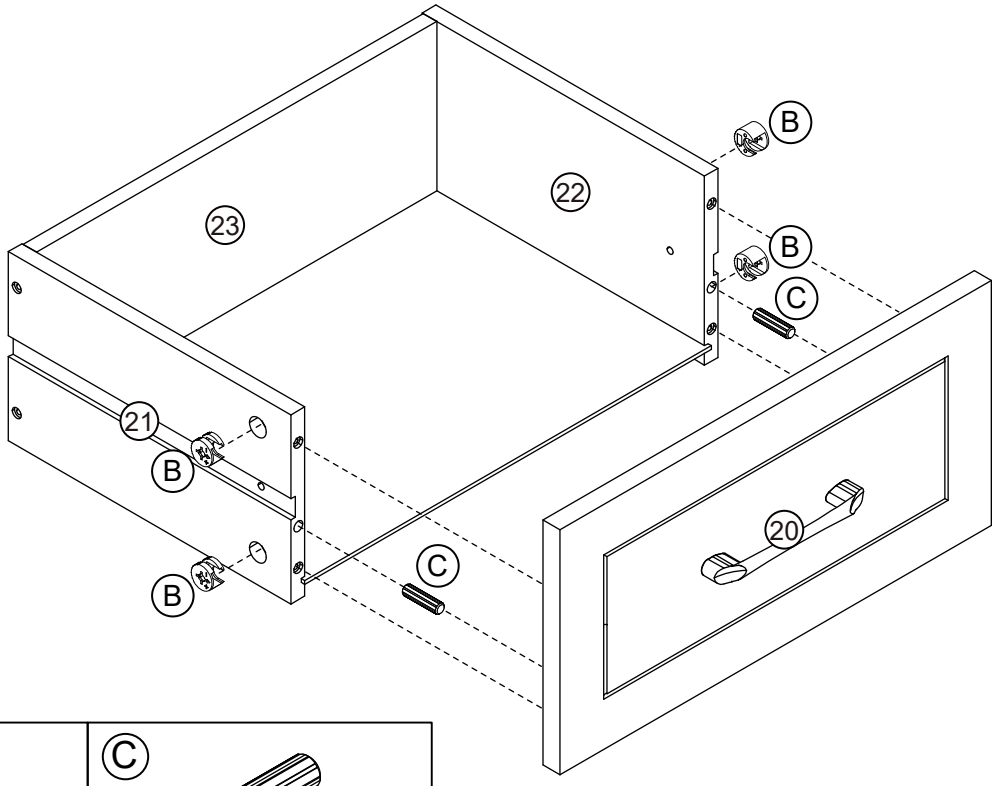


B	C
 Cam Lock x 4	 8*30mm Dowel x 2

Assembly Instructions

Step 23

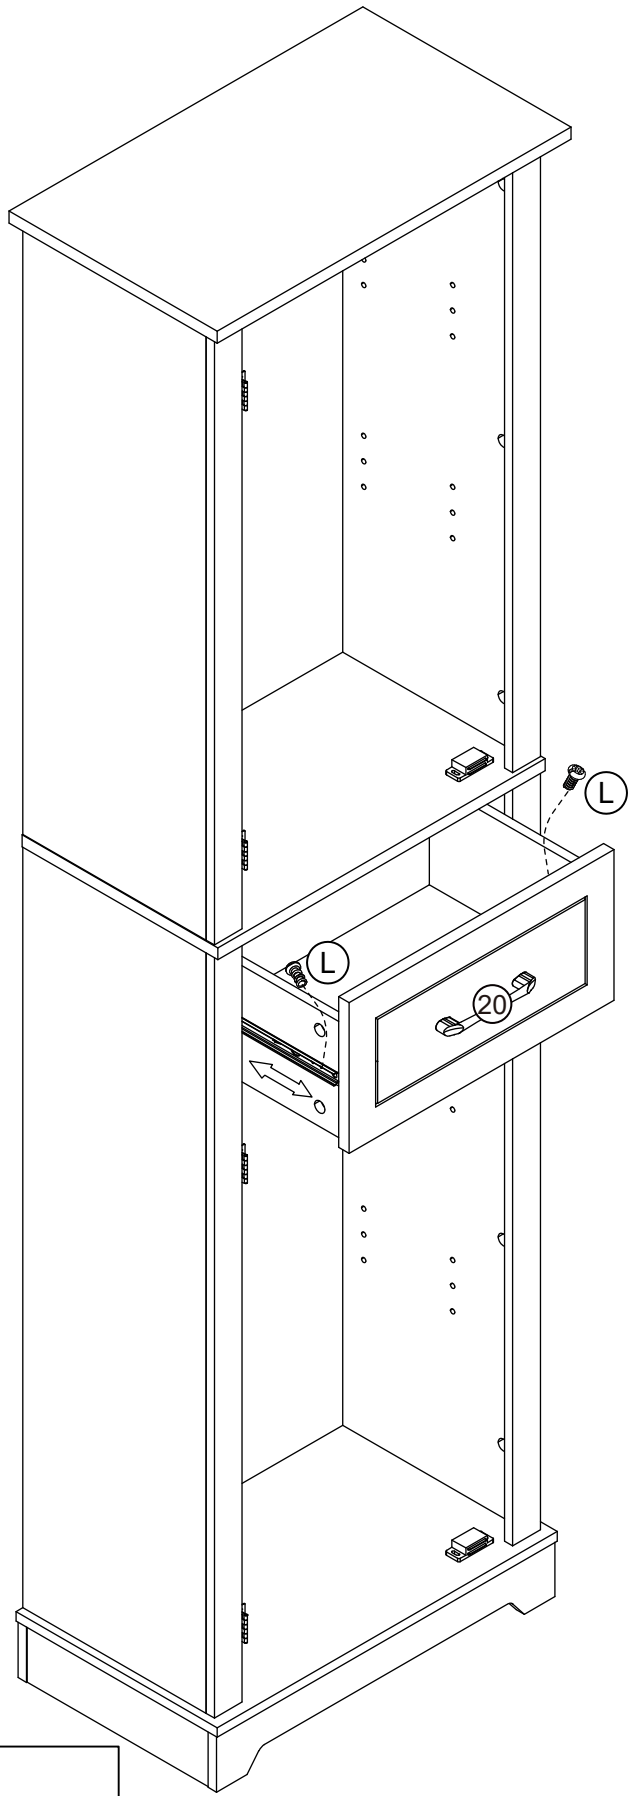

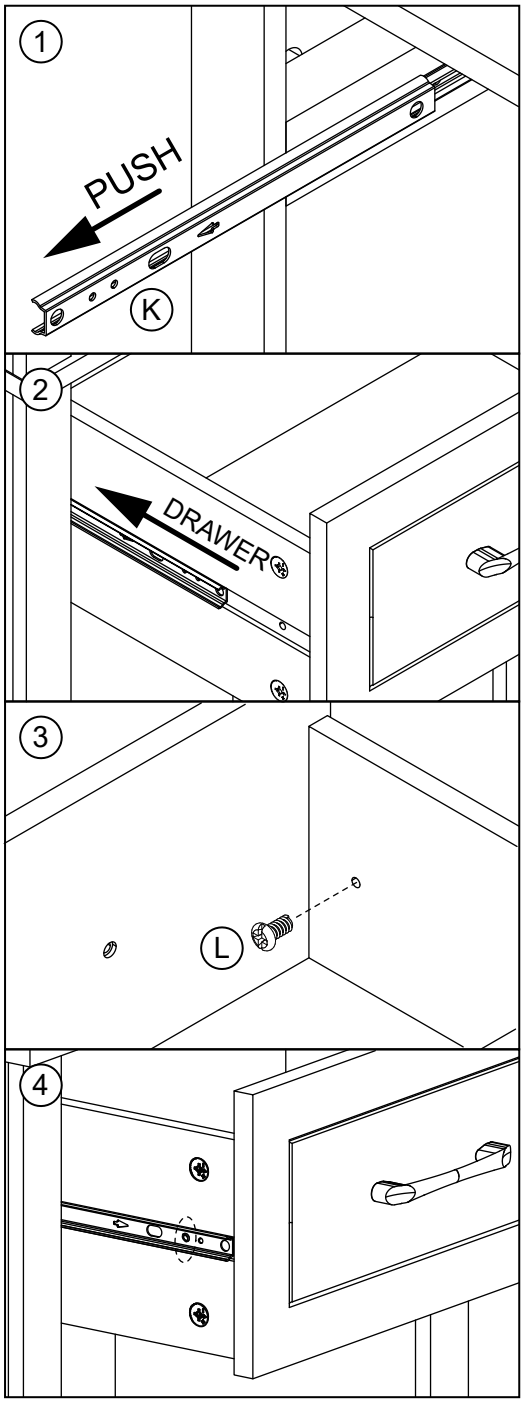


L




M4*10mm Screw x 2


Assembly Instructions


Step 24

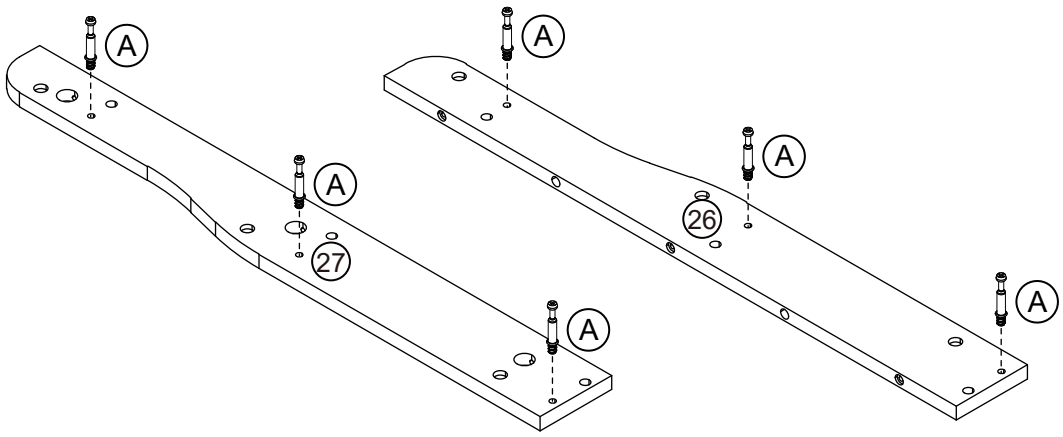

A

Cam Bolt x 6

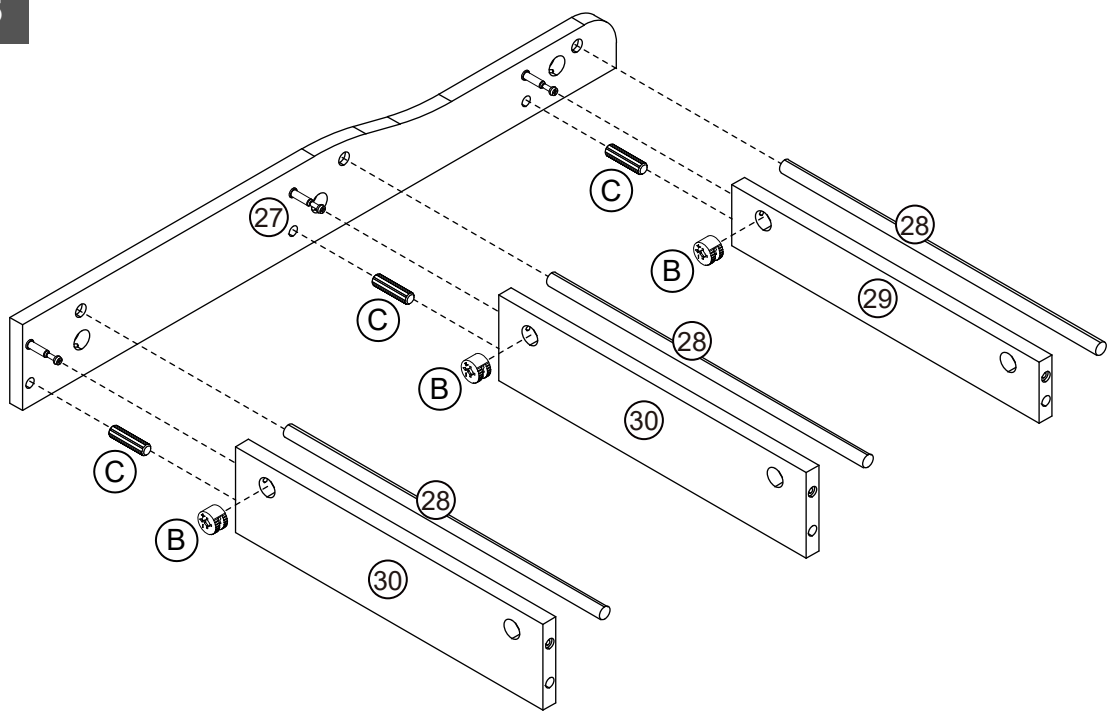
Step 25




B	C
	
Cam Lock x 3	8*30mm Dowel x 3


Assembly Instructions



Step 26

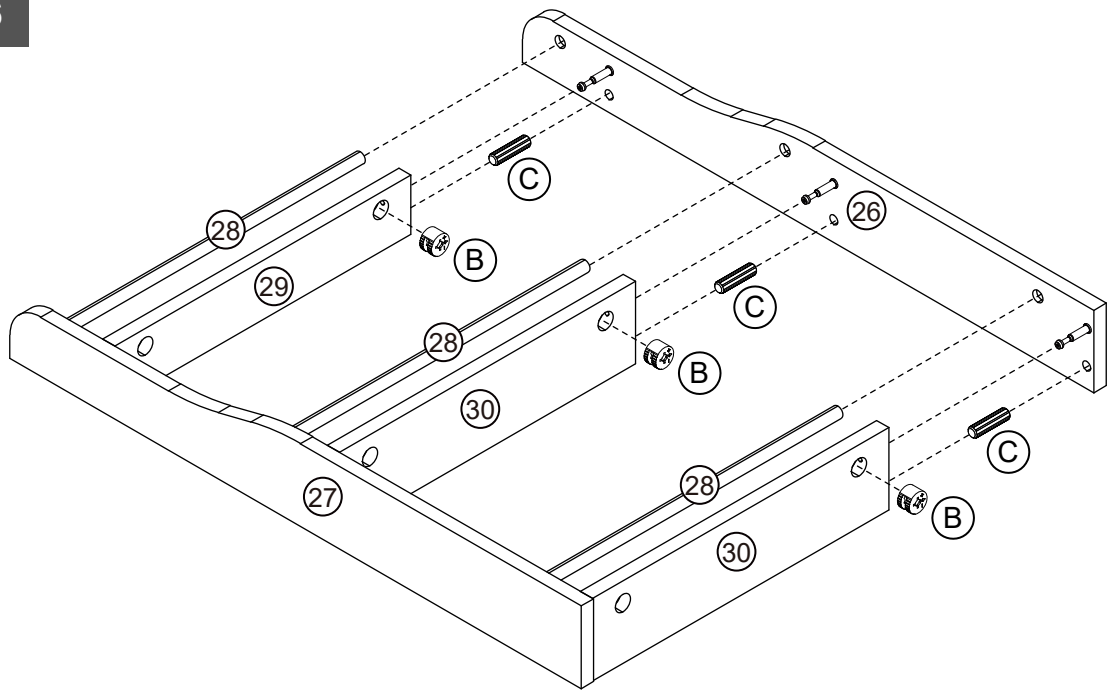

B	C
 Cam Lock x 3	 8*30mm Dowel x 3


Step 27

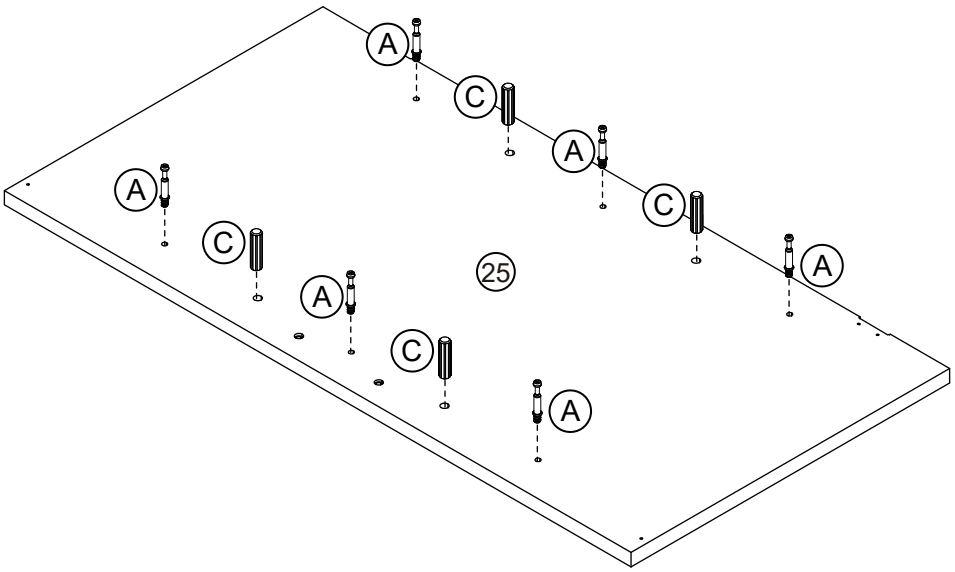

A	C
 Cam Bolt x 6	 8*30mm Dowel x 4

Assembly Instructions

Step 28

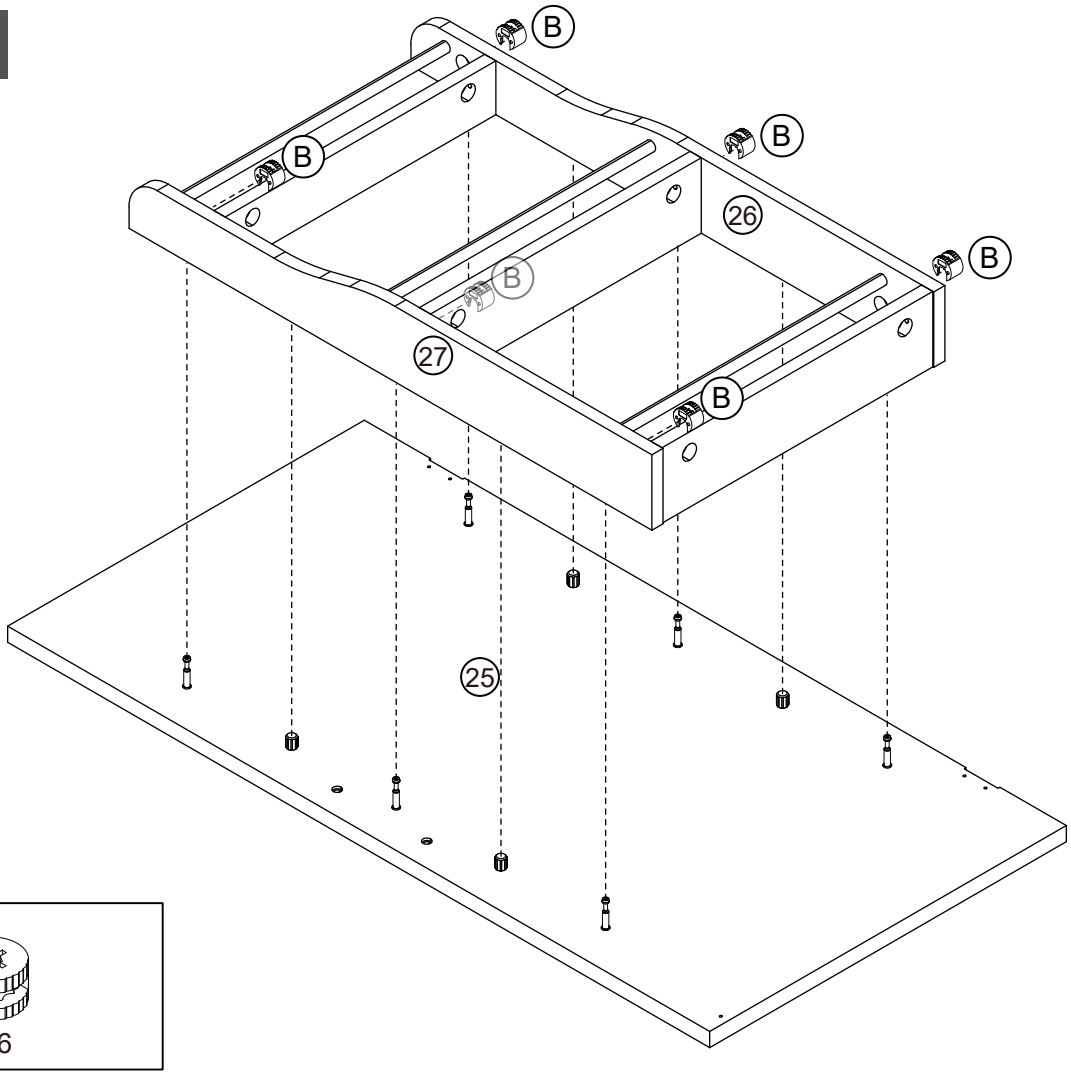

Ⓑ





Cam Lock x 6


Plan A or plan B is up to you.
If you choose plan A (shelf on the top), please follow step 29-A ~ step 31-A.
If you choose plan B (shelf on the bottom), please follow step 29-B ~ step 31-B.

Assembly Instructions


Step 29 - A

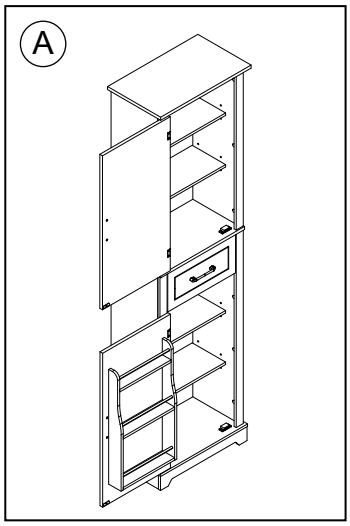

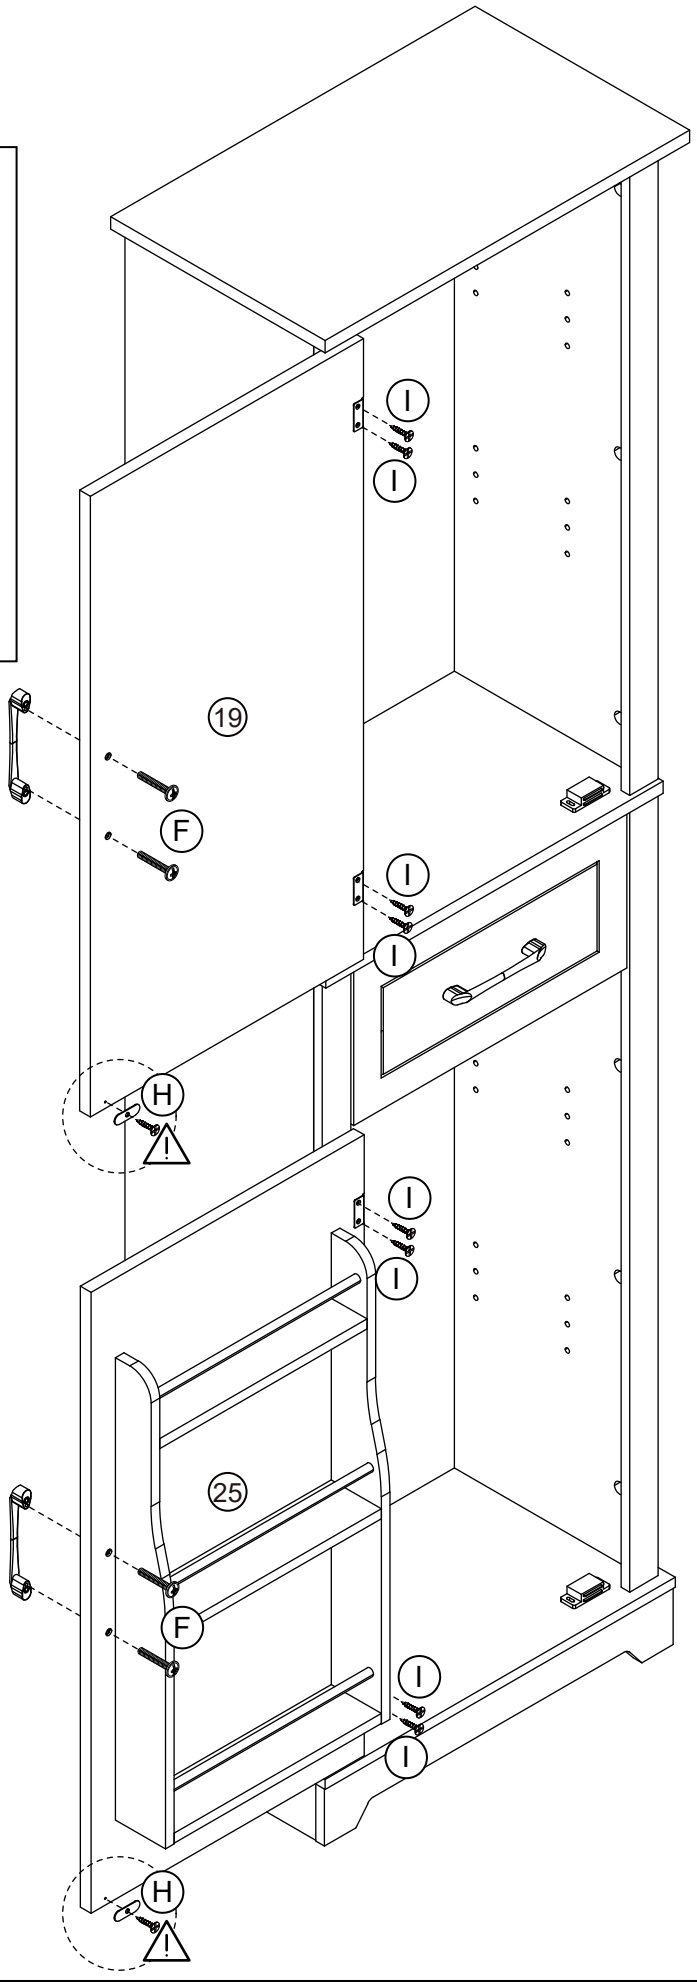

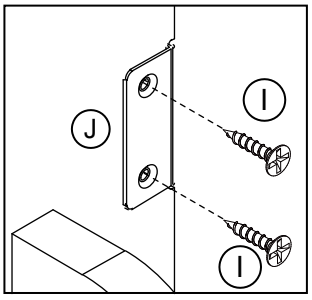


F




Handle x 2

H



Metal Plate x 2


I




3.5*12mm Screw x 8

Assembly Instructions

Step 30 - A

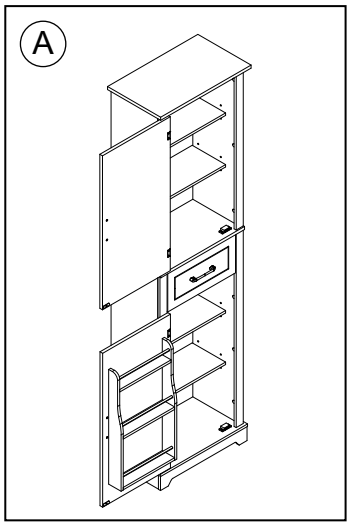

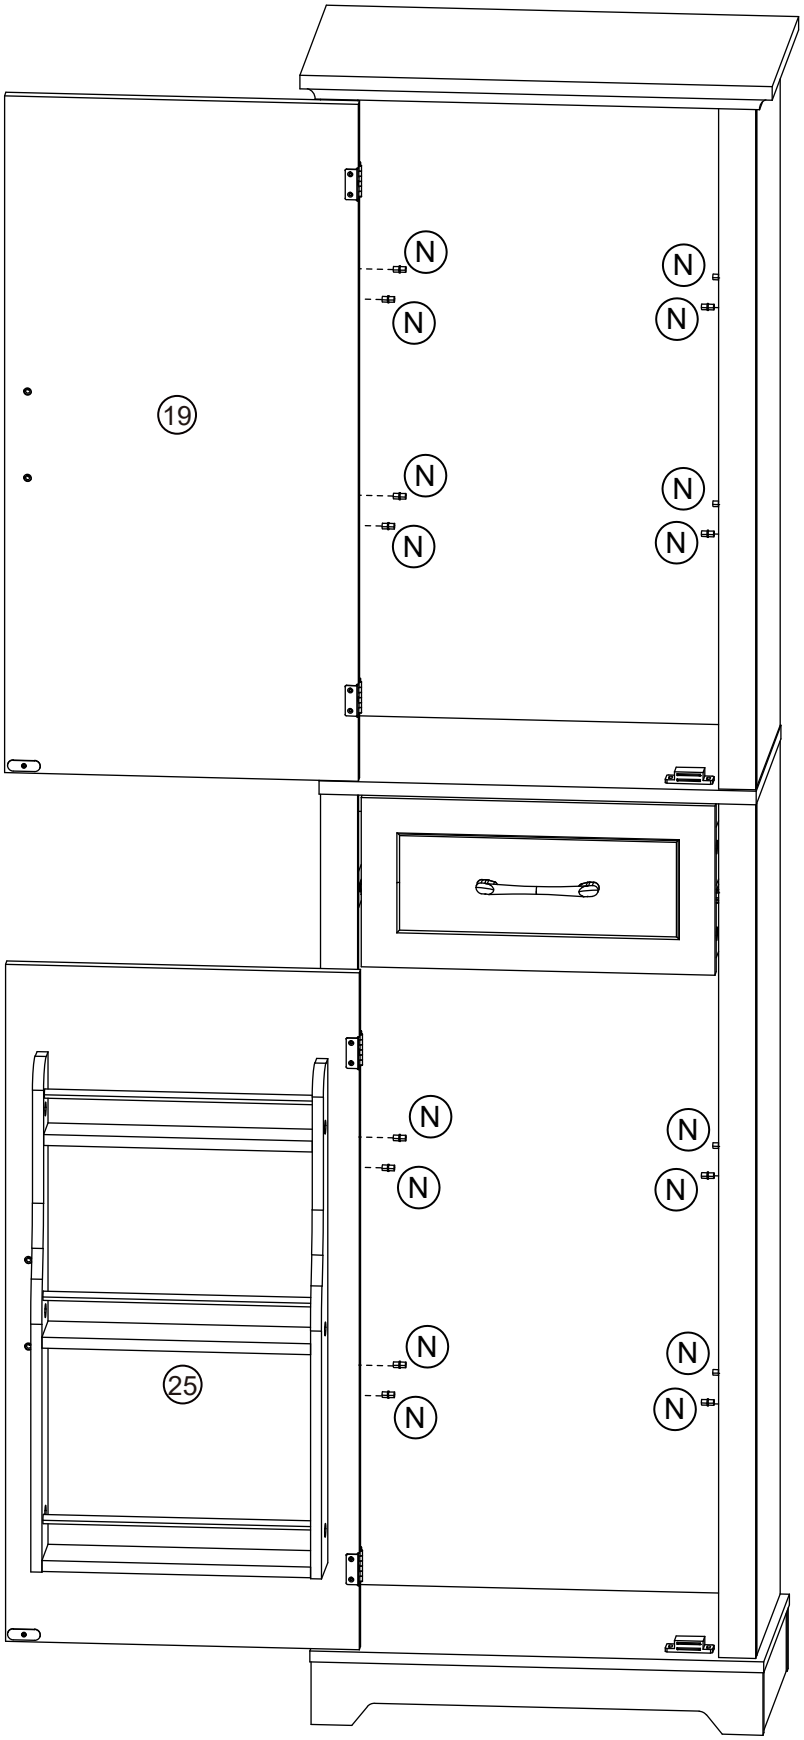


N




Shelf Bracket x 16

Assembly Instructions


Step 31 - A

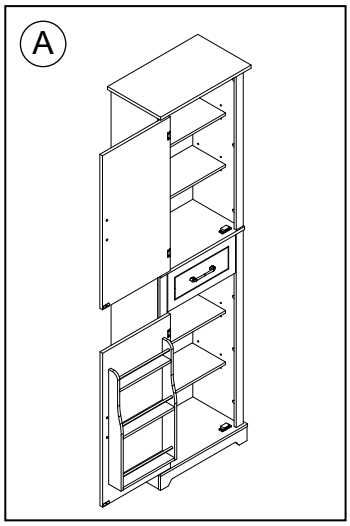


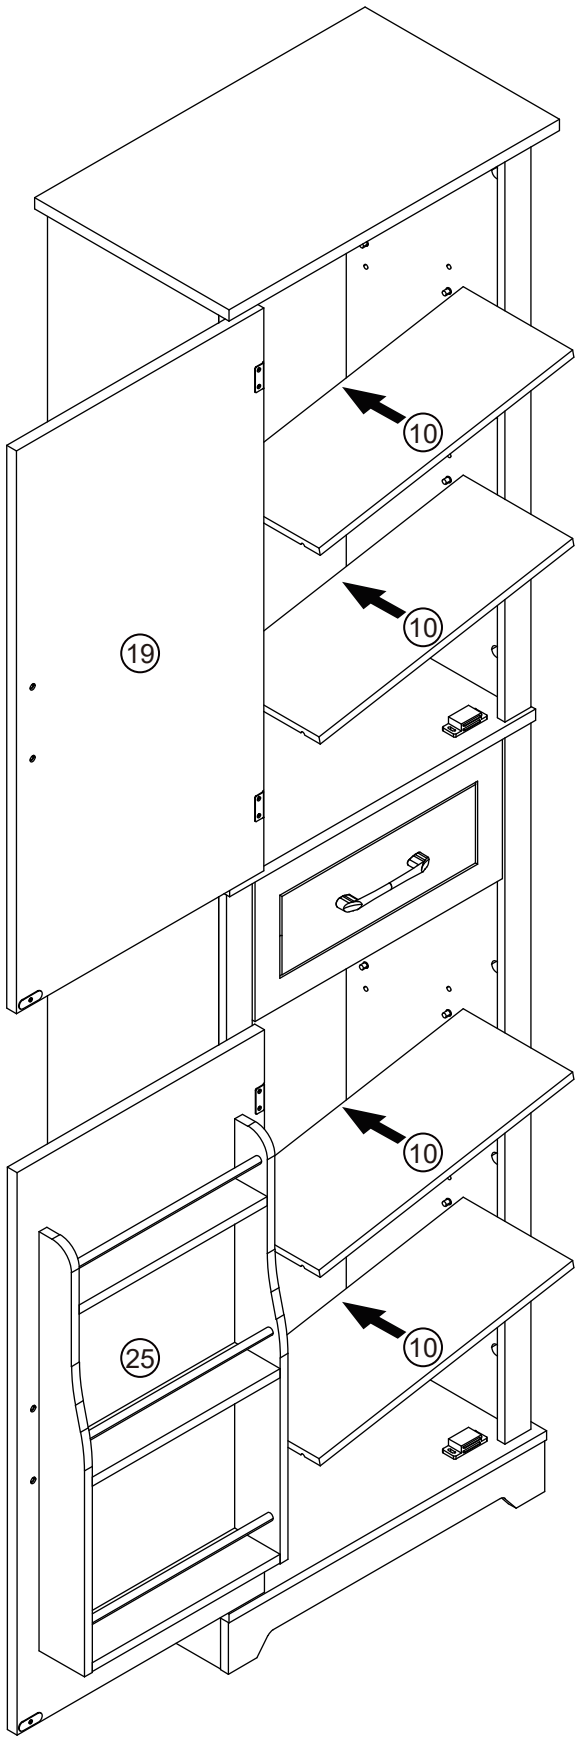


Assembly Instructions

Step 32 - A

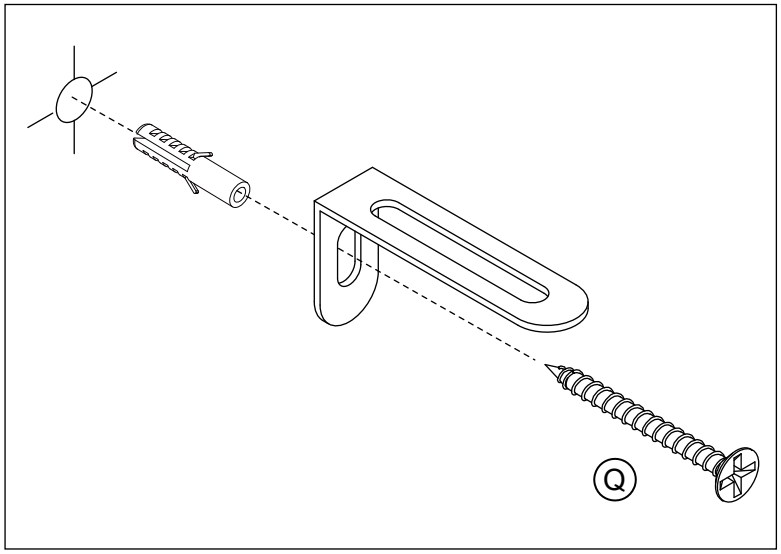

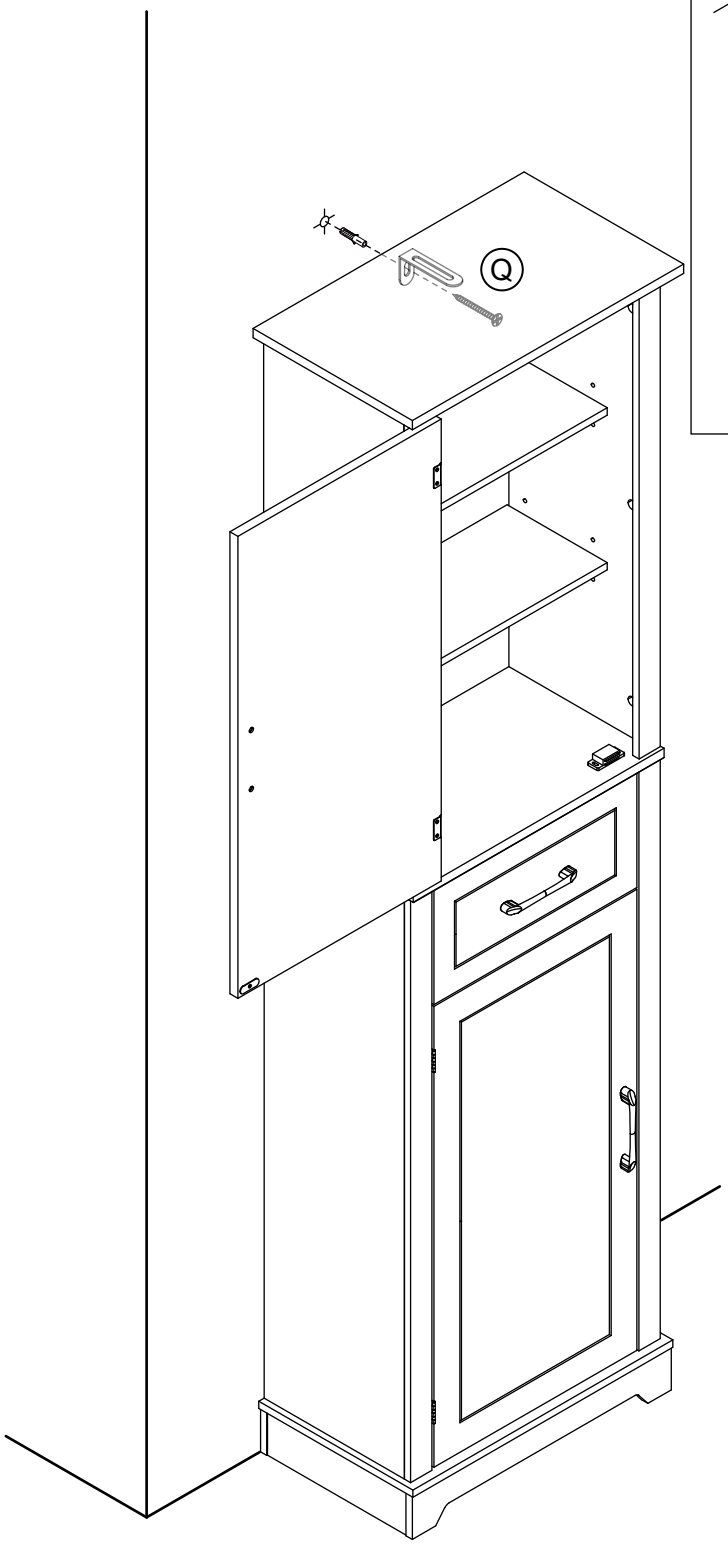


Q





Wall Plug x 1


Assembly Instructions

Step 29 - B

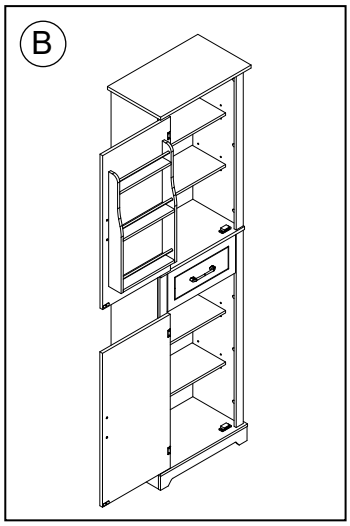


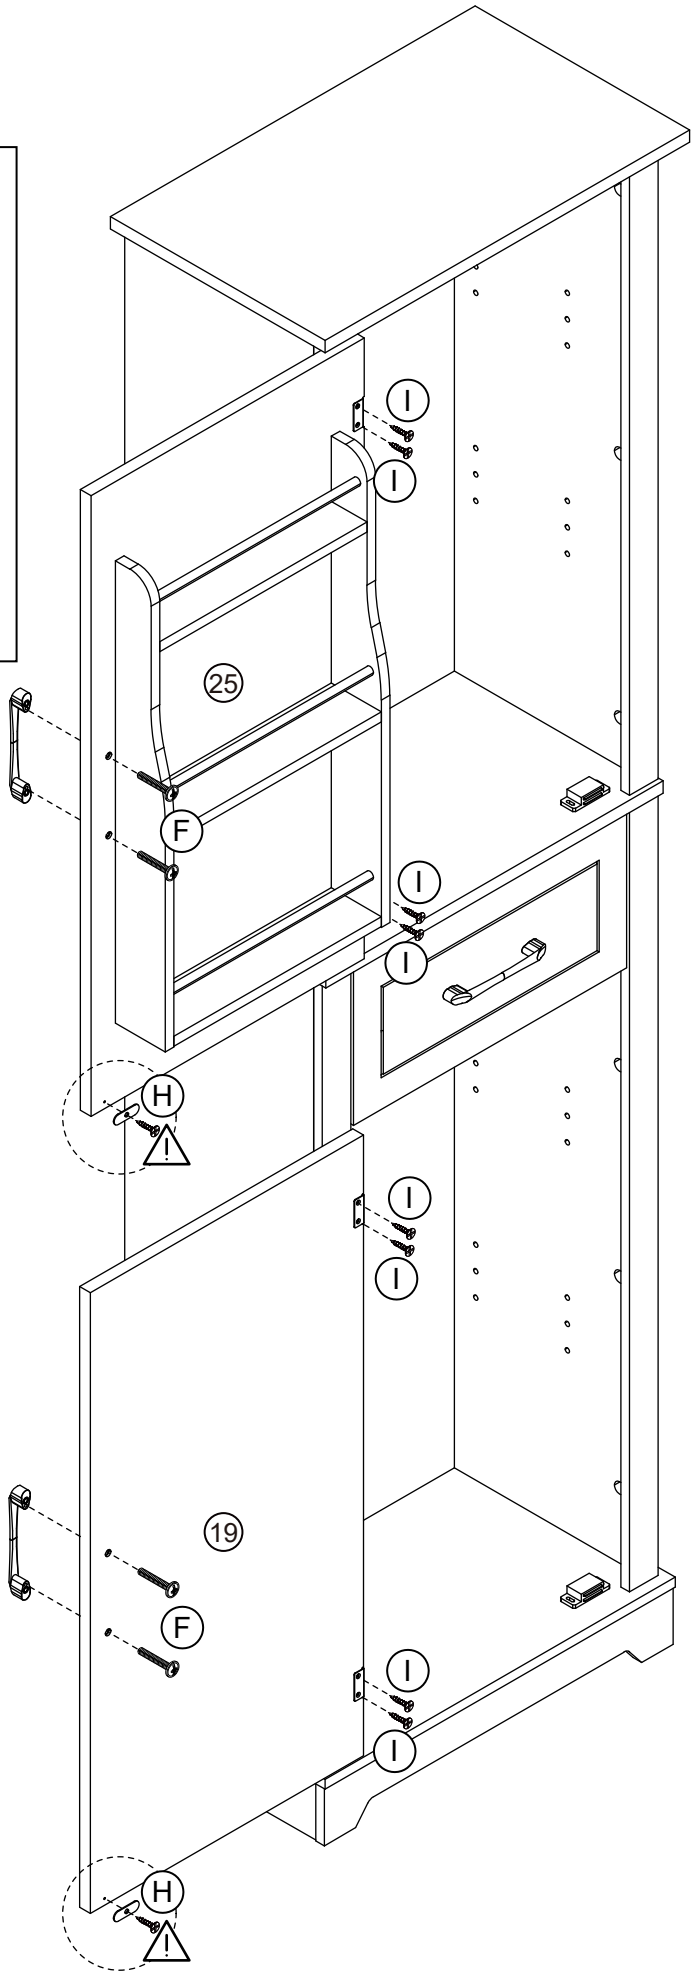

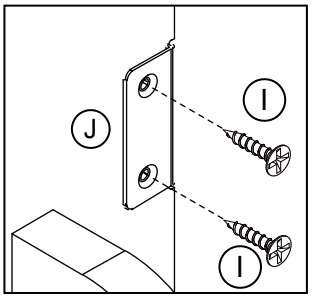


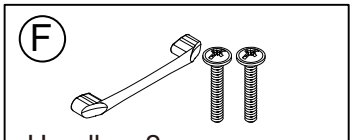

Handle x 2

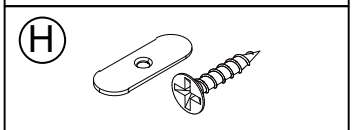


Metal Plate x 2

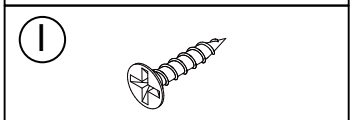



3.5*12mm Screw x 8

Assembly Instructions

Step 30 - B

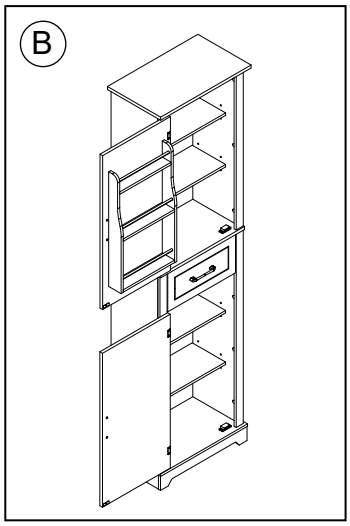


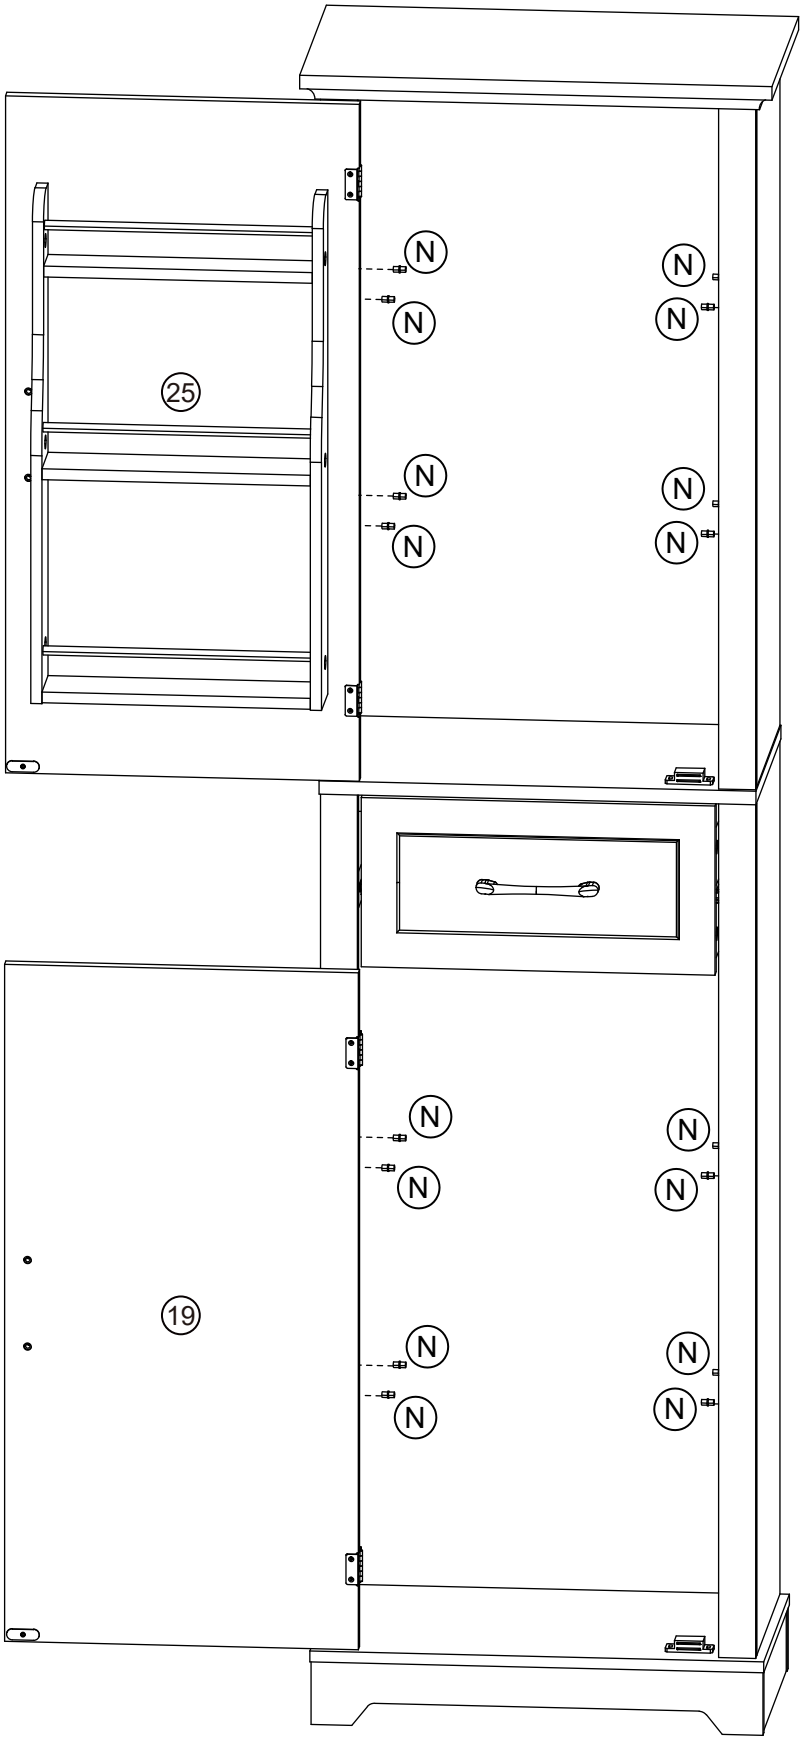


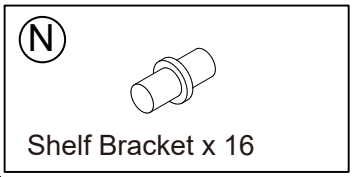

Assembly Instructions


Step 31 - B

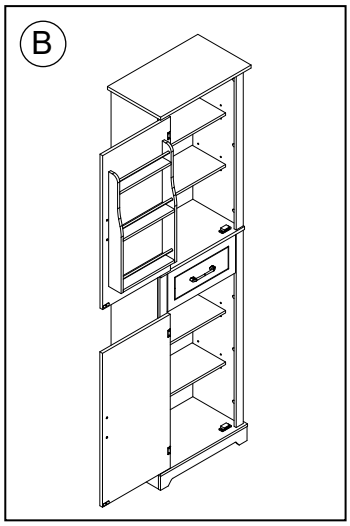


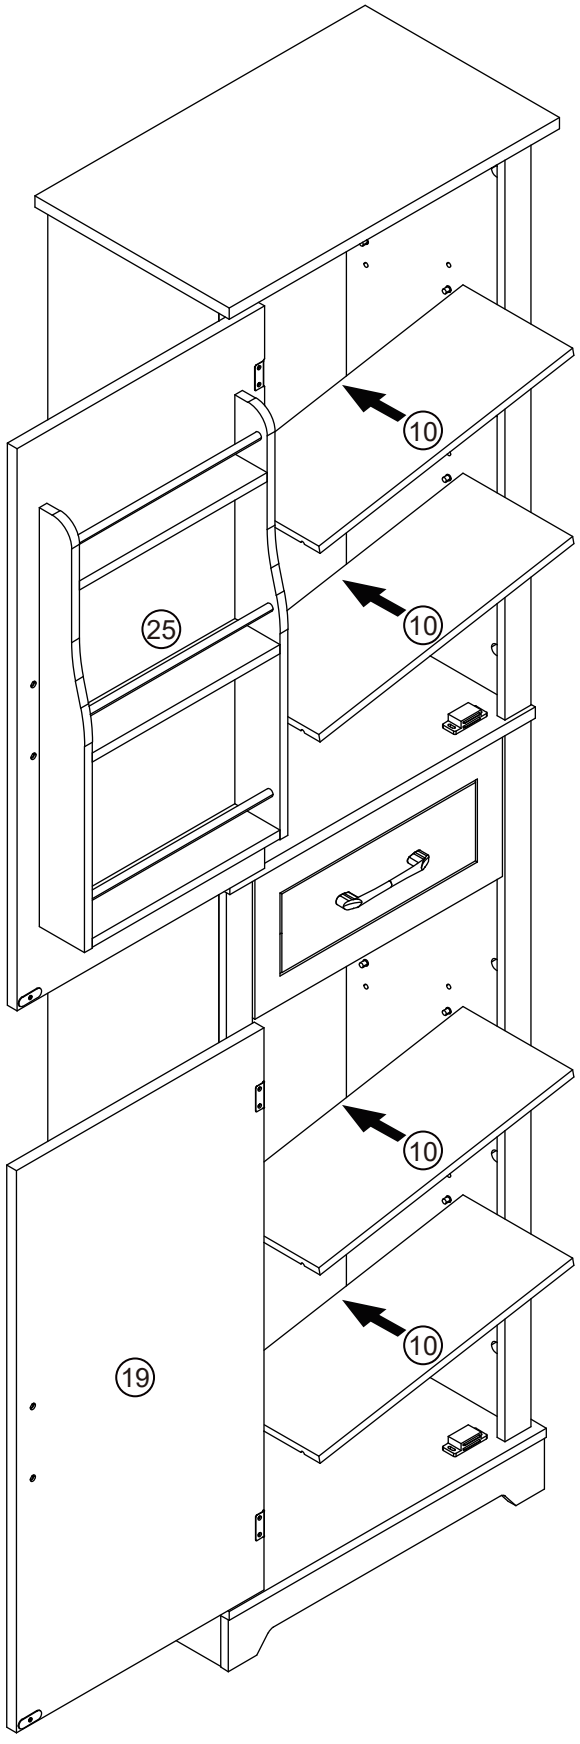


Assembly Instructions

Step 32 - B

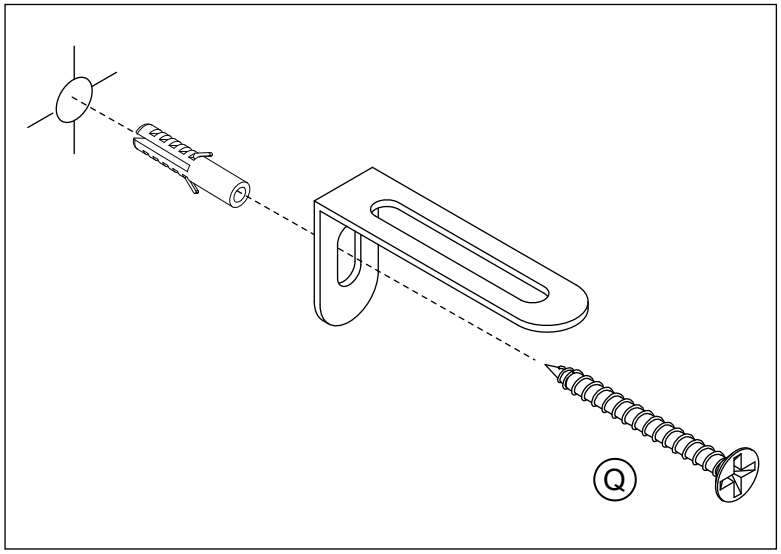

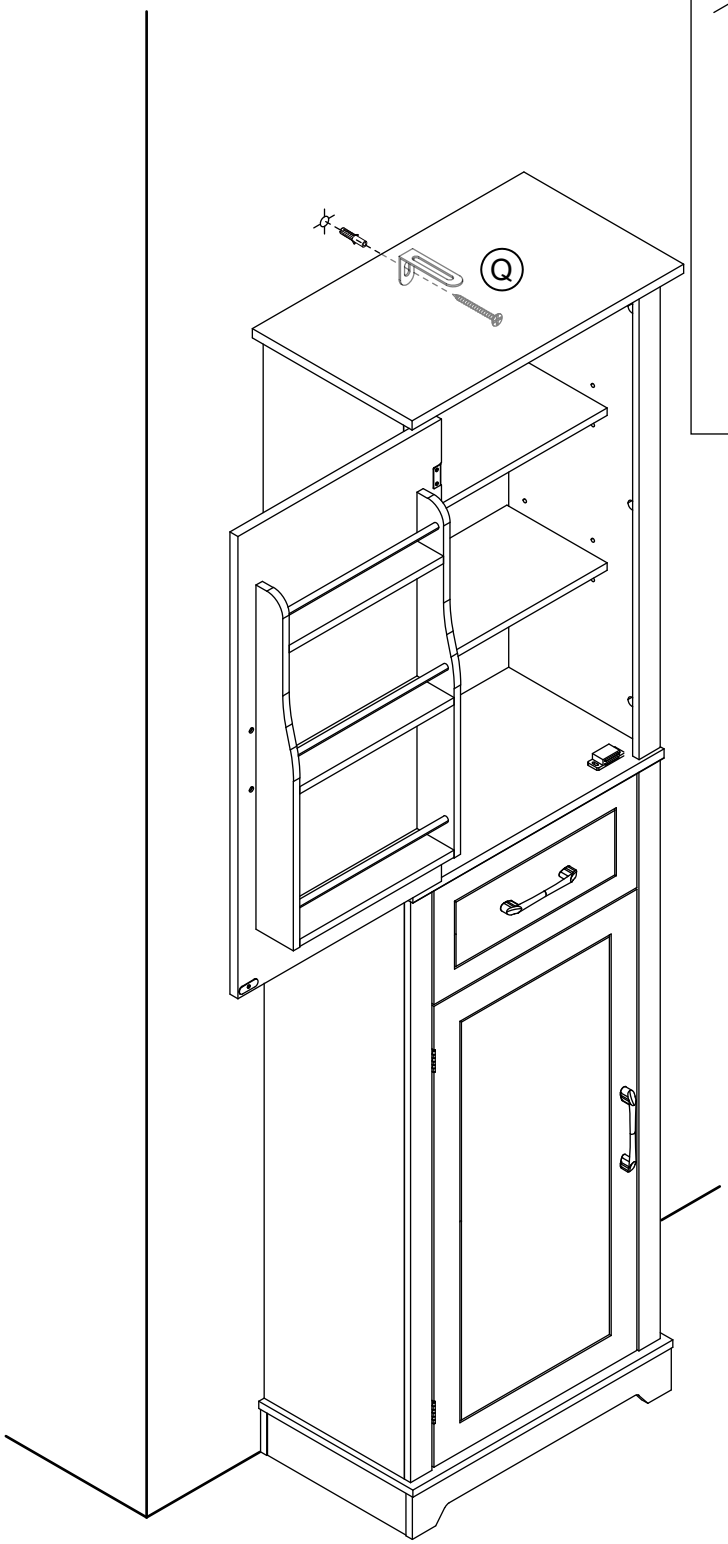

Q



Wall Plug x 1

Assembly Instructions

Step 33

