



Assembly Instructions - Please keep for future reference

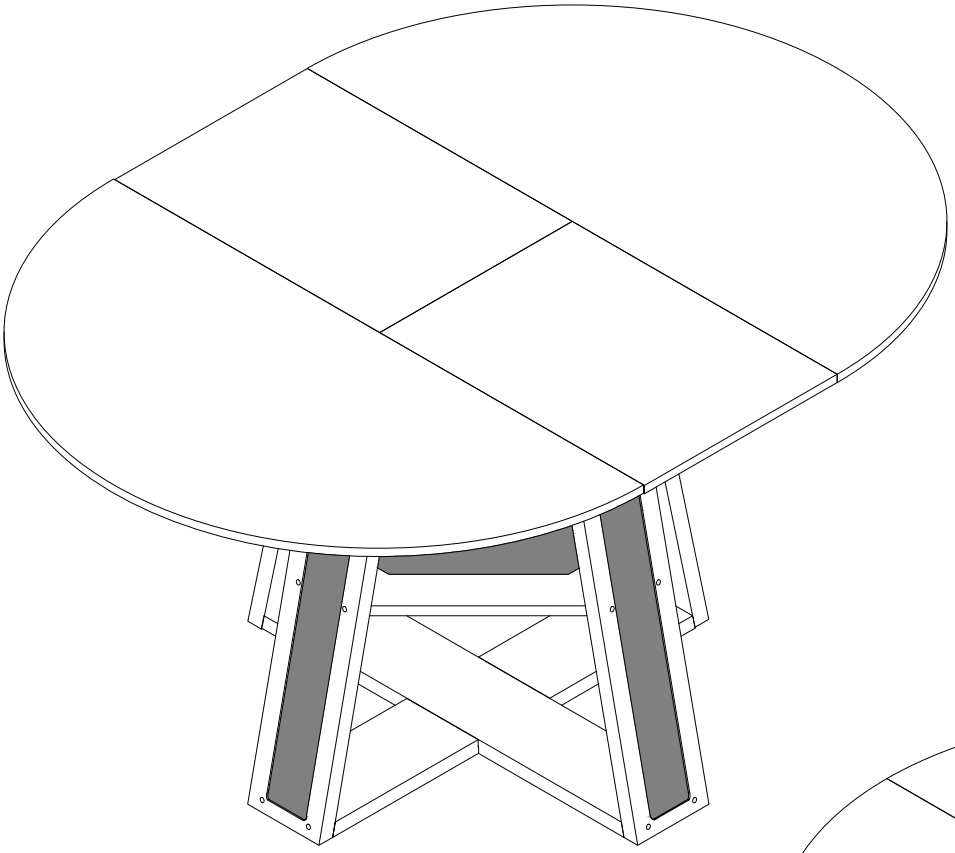

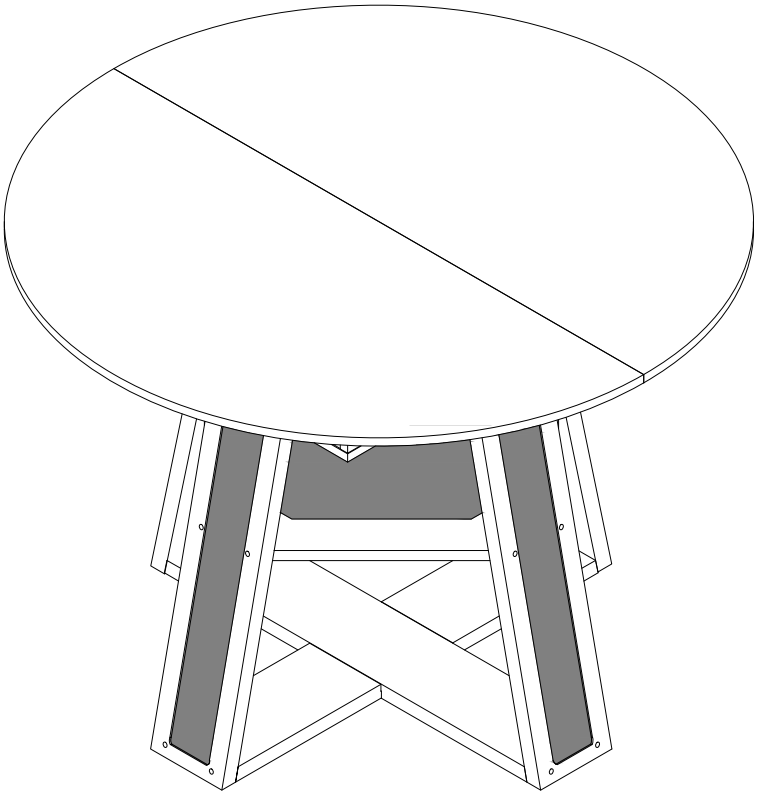

Important – Please read these instructions fully before starting assembly

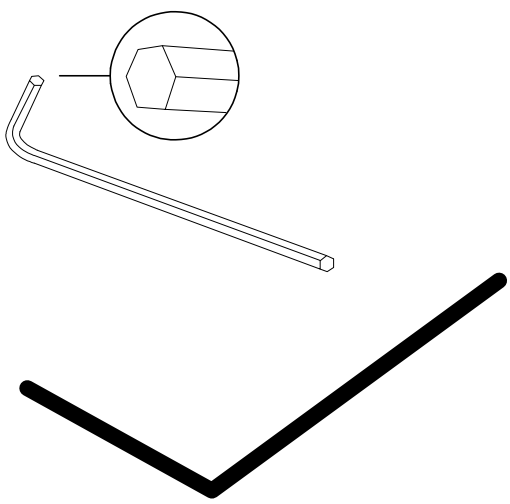

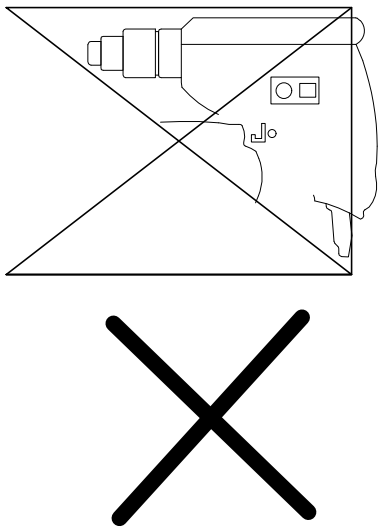

(DE): Verwenden Sie beim Anbringen der Tischplatte keinen Bohrer! Bitte verwenden Sie die im Paket enthaltenen Werkzeuge.

(UK): Do not use an electric drill when installing the desktop! Please use the tools provided in the package.

(FR): Ne pas utiliser de perceuse électrique lors de l'installation du plateau de table ! Veuillez utiliser les outils fournis dans l'emballage.

(IT): Non utilizzare un trapano elettrico durante l'installazione del piano del tavolo! Si prega di utilizzare gli strumenti forniti nella confezione.

(ES): ¡No utilice un taladro eléctrico al instalar el escritorio! Por favor, use las herramientas incluidas en el paquete.

(NL): Gebruik geen elektrische boormachine bij het monteren van het tafelblad! Gebruik de meegeleverde gereedschappen uit de verpakking.

(SE): Använd inte en elektrisk borrmaskin vid montering av bordsskivan! Använd de verktyg som medföljer i förpackningen.

(PL): Nie używaj wiertarki elektrycznej podczas montażu blatu! Użyj narzędzi dołączonych do opakowania.

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-


Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

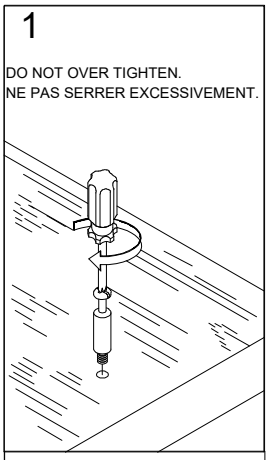

Step 2


Push the male camlock into the entry hole.

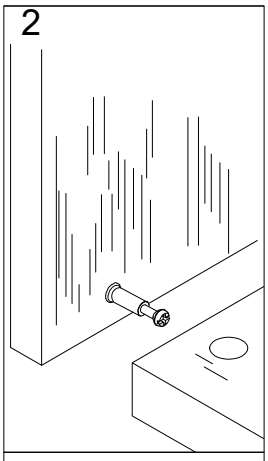

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

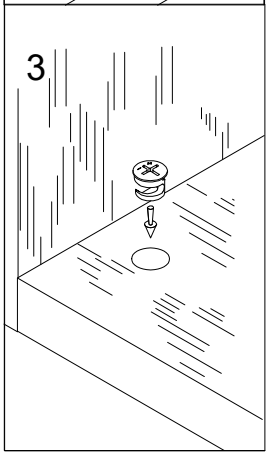



Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

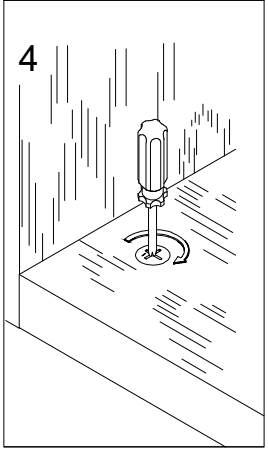












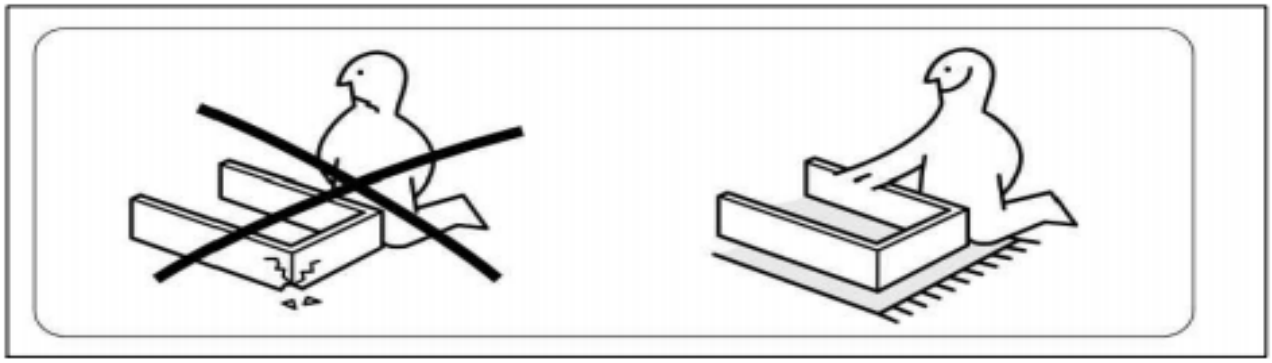








Make sure to put one carpet or some thicker film under the cabinet body during the installation in order to avoid scratch or damage to the parts.

Assembly Instructions

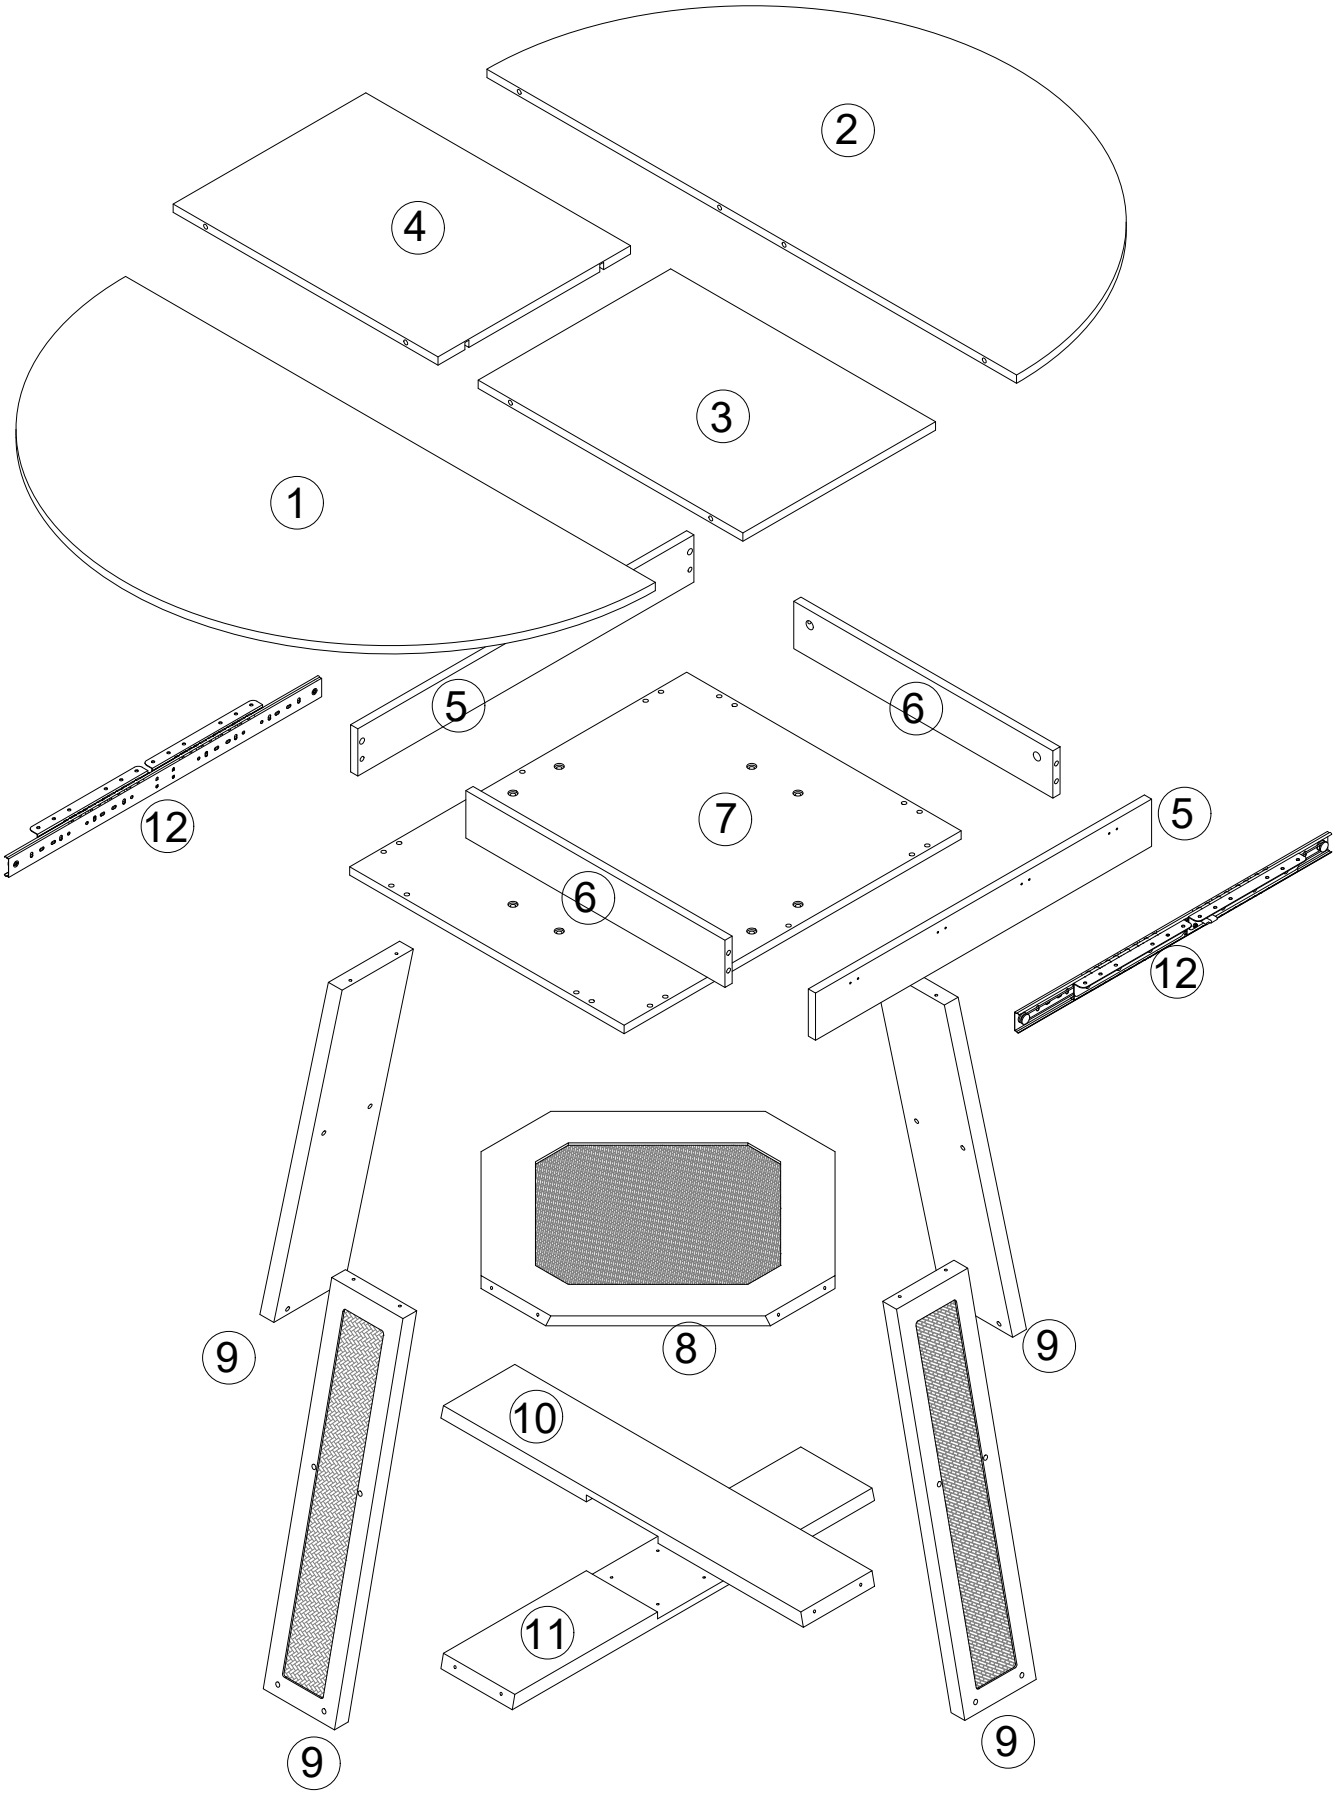


Assembly Instructions

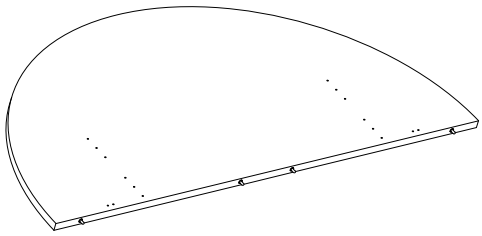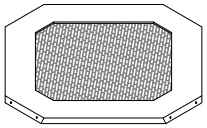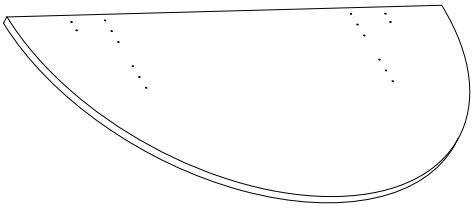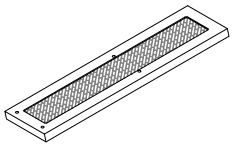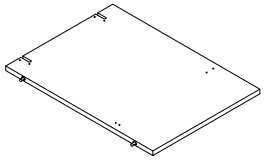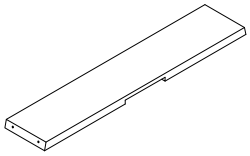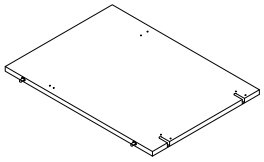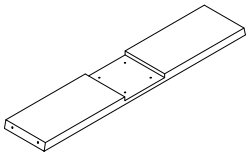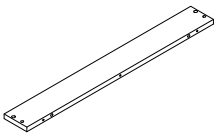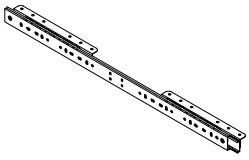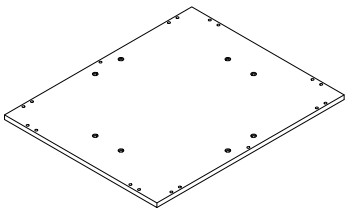
1  1	8  1
2  1	9  4
3  1	10  1
4  1	11  1
5  2	12  2
6  2	
7  1	


A  x4	B  φ15 x4	C  M3.5*14mm x64	D  M6*50mm x16
E  φ8*40 x12	F  x2	G  x4	H  x12
I  x28	J  M6*40mm x18	K  M3.5*20mm x4	L  x4
			


Step 1

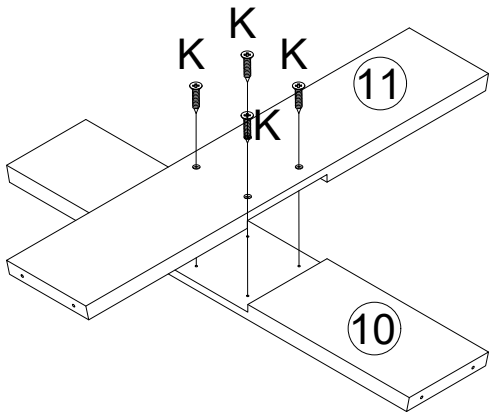

The D screw here is only tightened by 70%

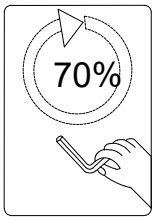


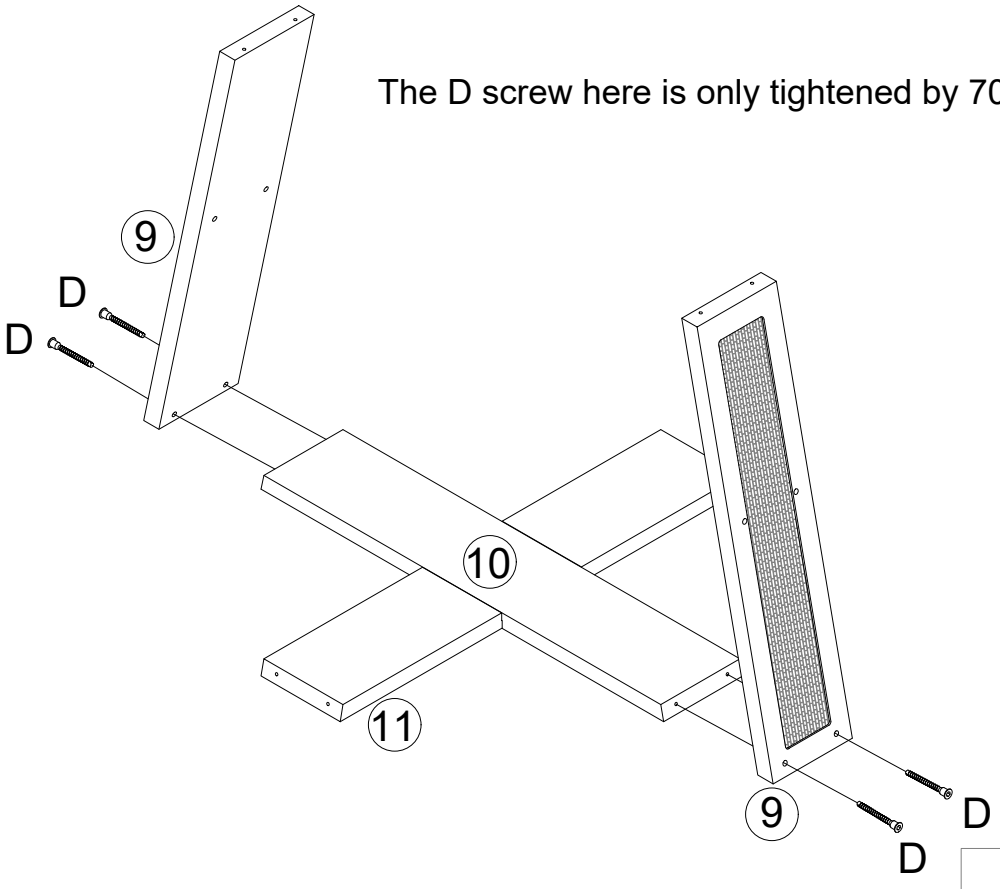


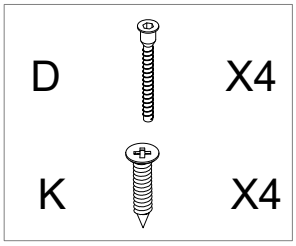


Step 2


The D screw here is only tightened by 70%

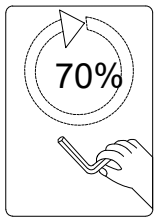


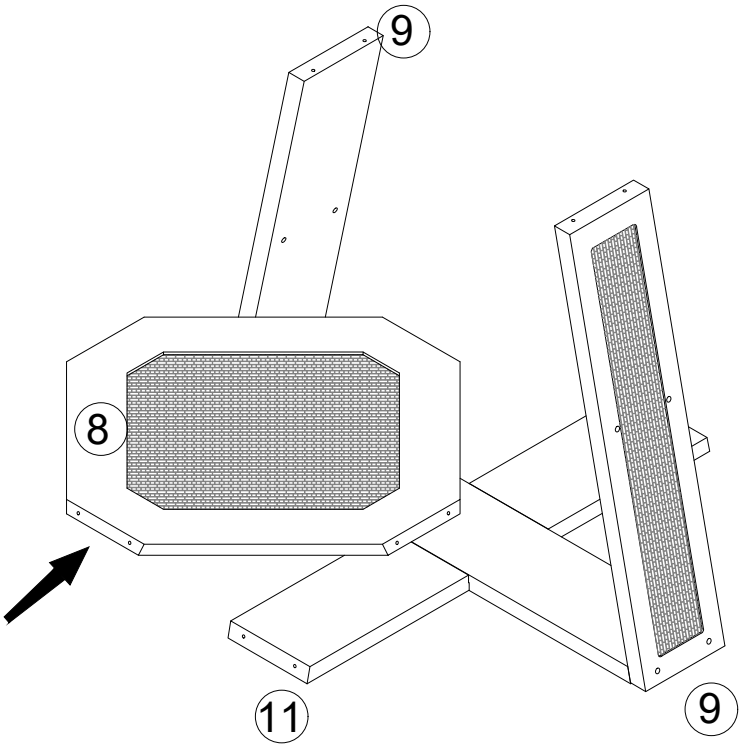

The D screw here is only tightened by 70%

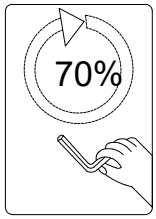


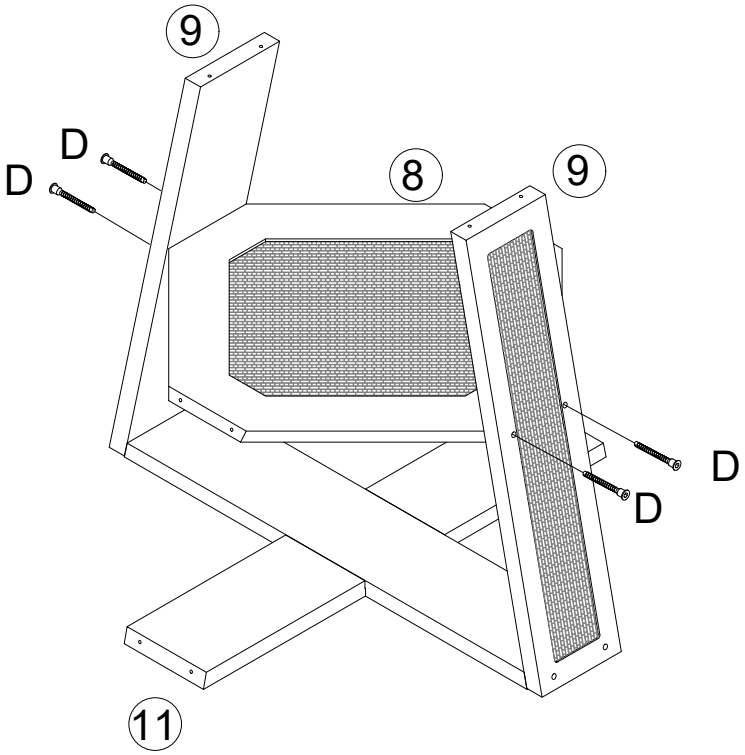


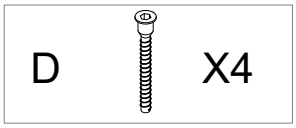



Step 3

The D screw here is only tightened by 70%

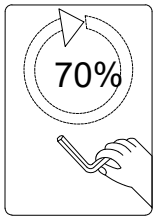


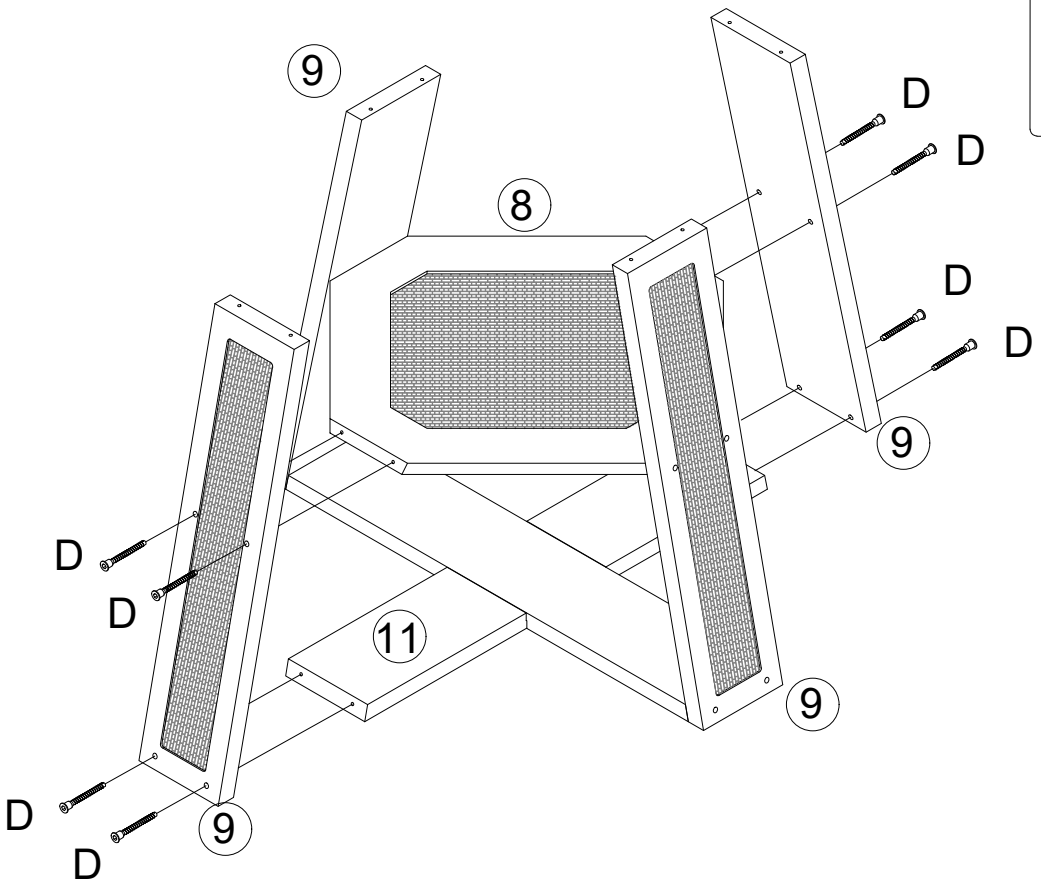


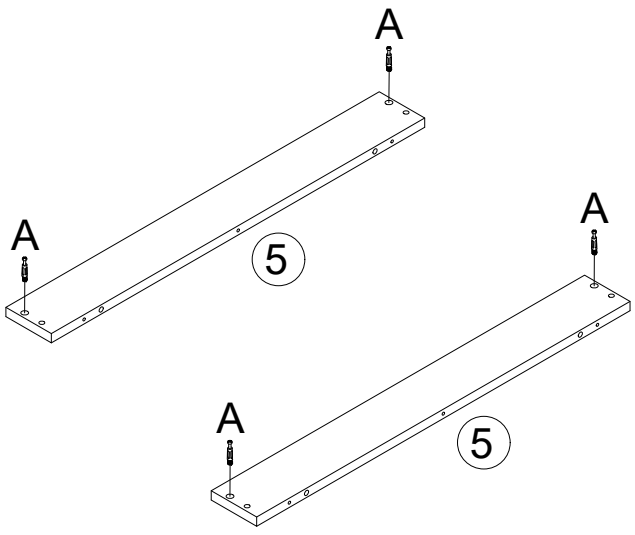



A		X4
D		X8


Step 4

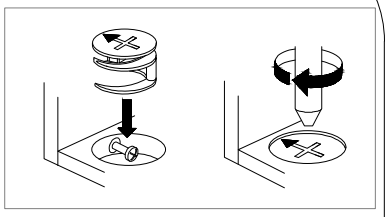

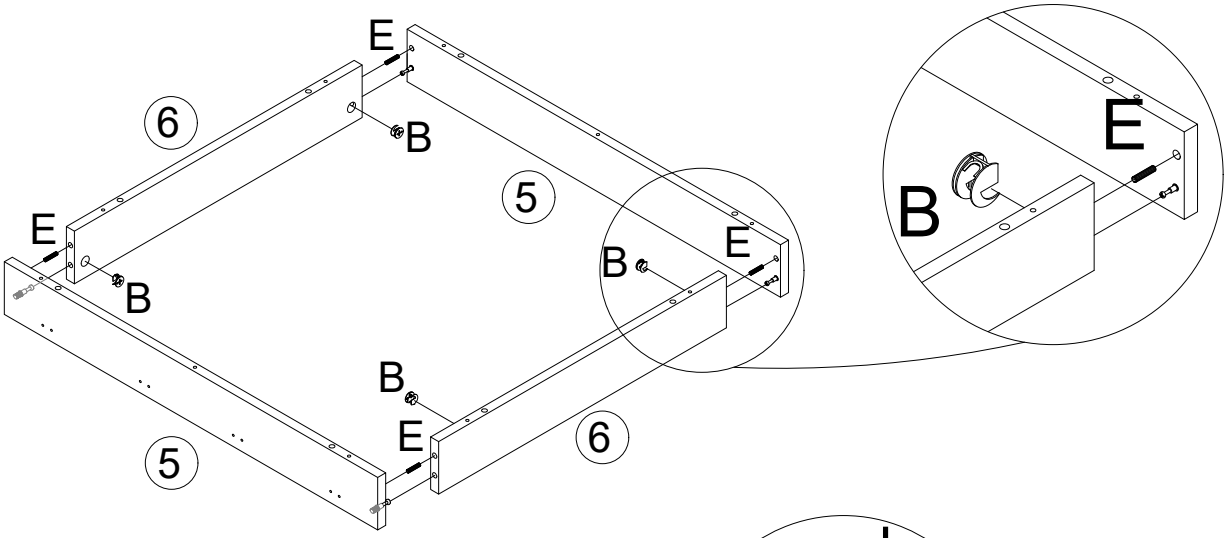

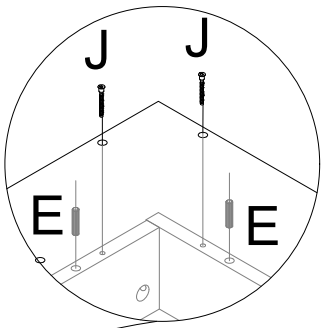


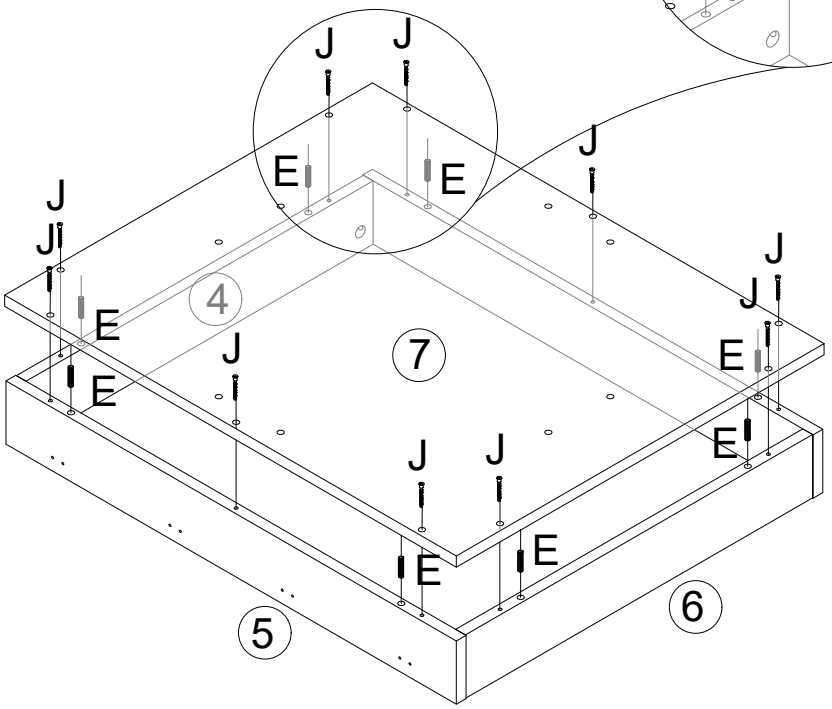


B		X4
J		X10
E		X12


Assembly Instructions


Step 5



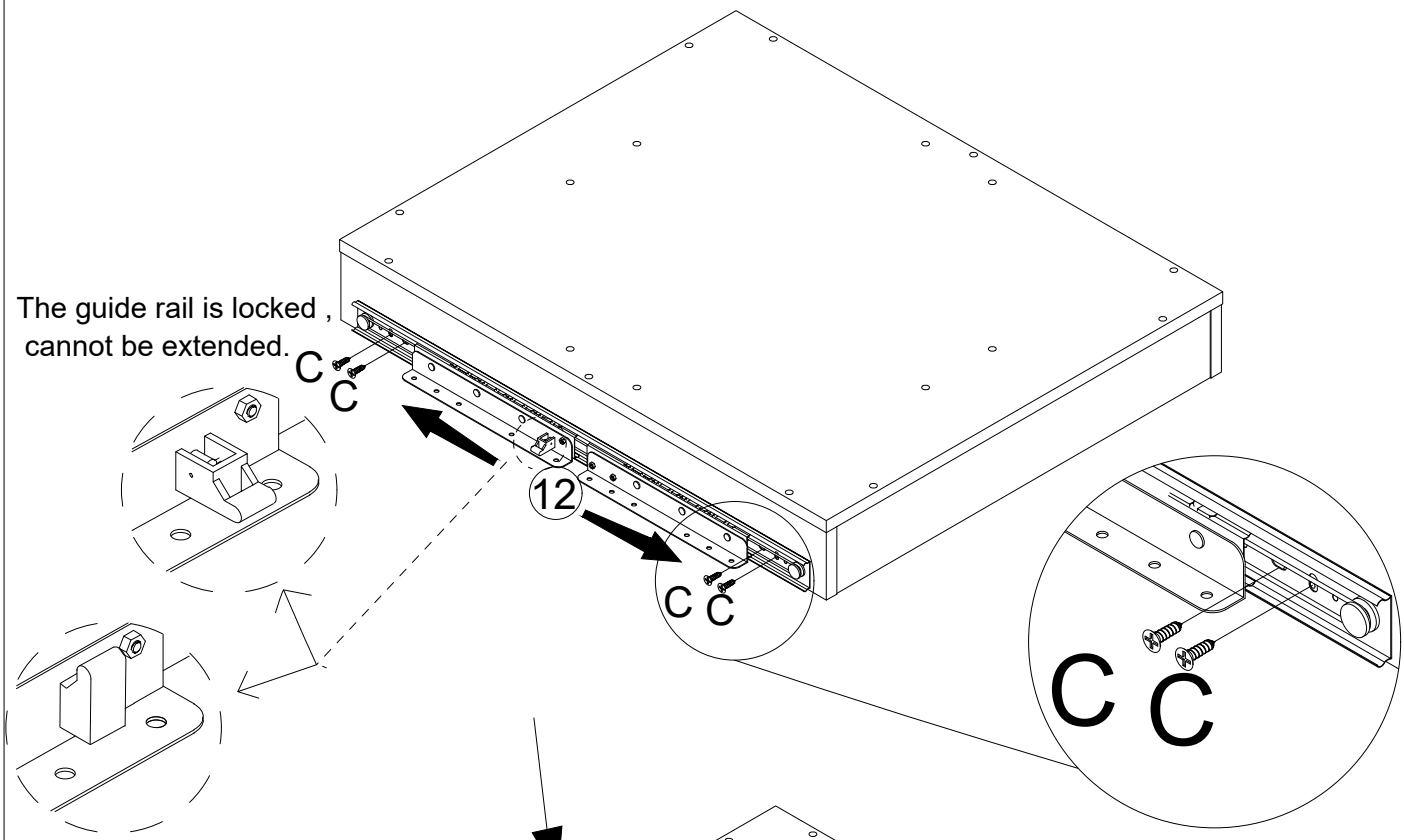



The guide rail is not locked ,
can be stretched.

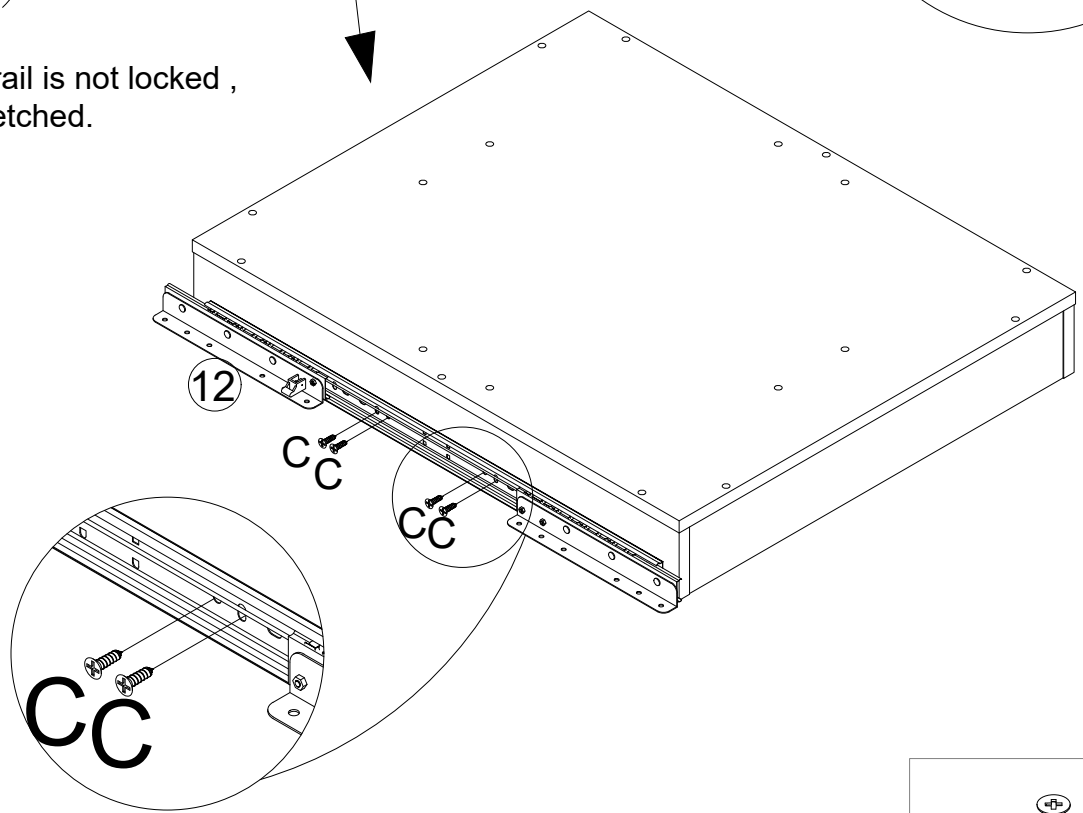

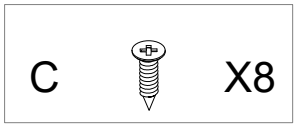


Step 6


12

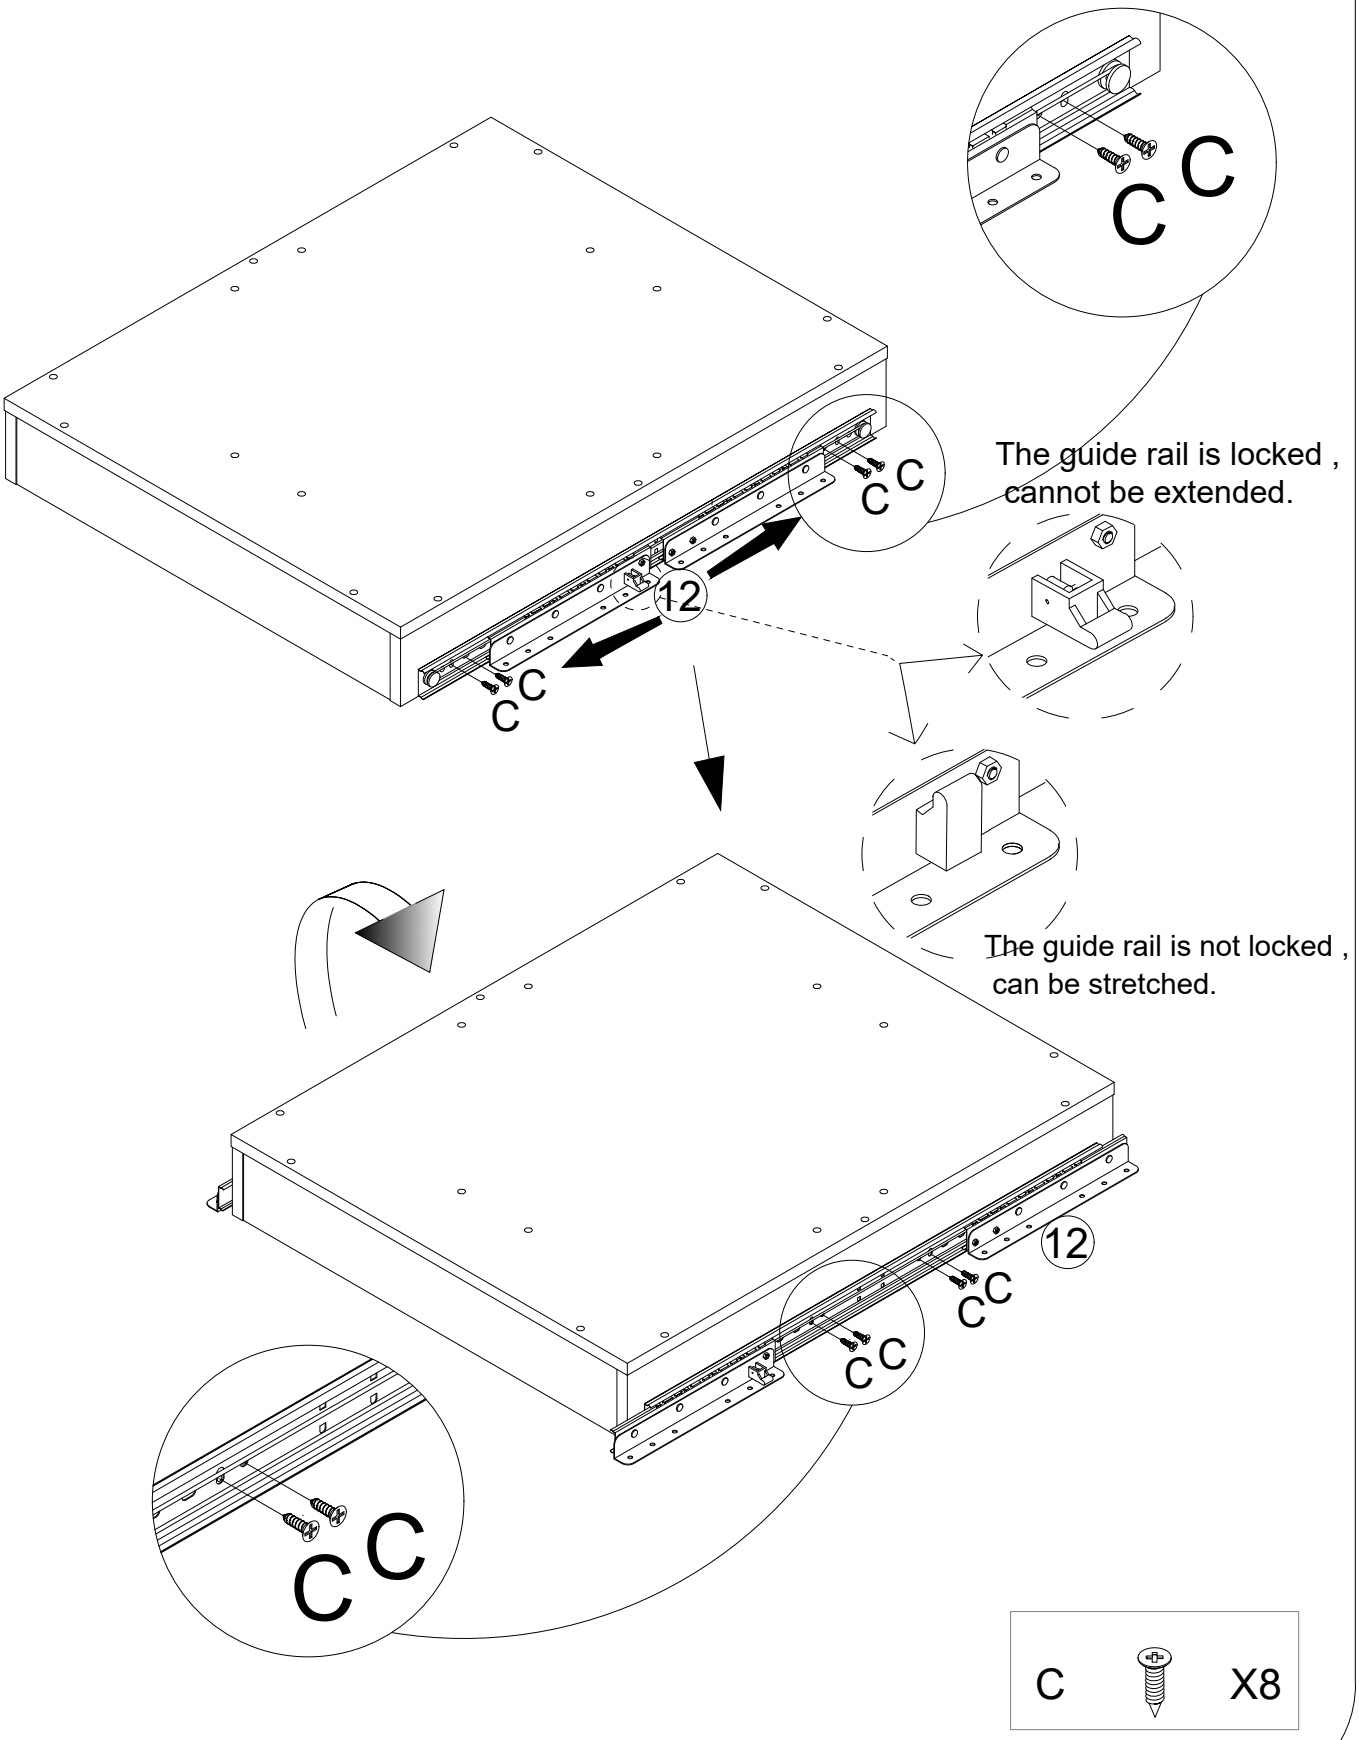

C C
C C
12
C C
The guide rail is locked ,
cannot be extended.
The guide rail is not locked ,
can be stretched.
12
C C
C C
C C


C X8

Step 7

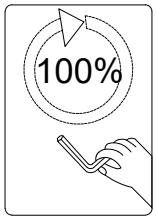



After this step, tighten all previous D screws to 100%

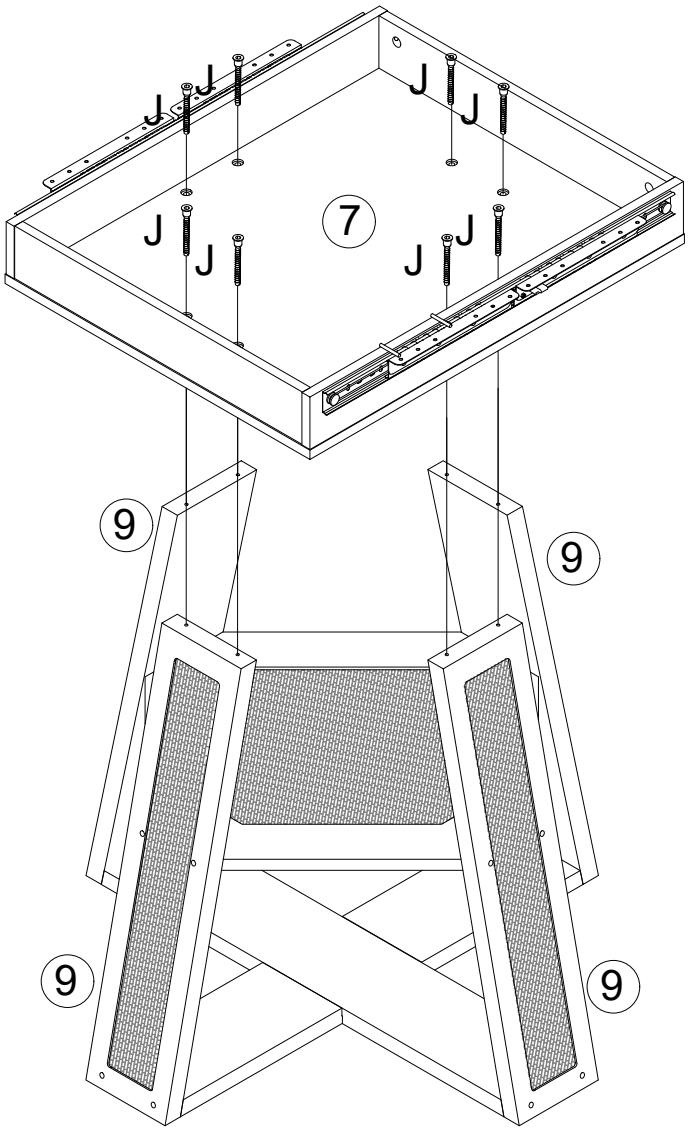


J  X8


Step 8

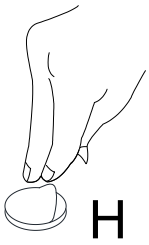

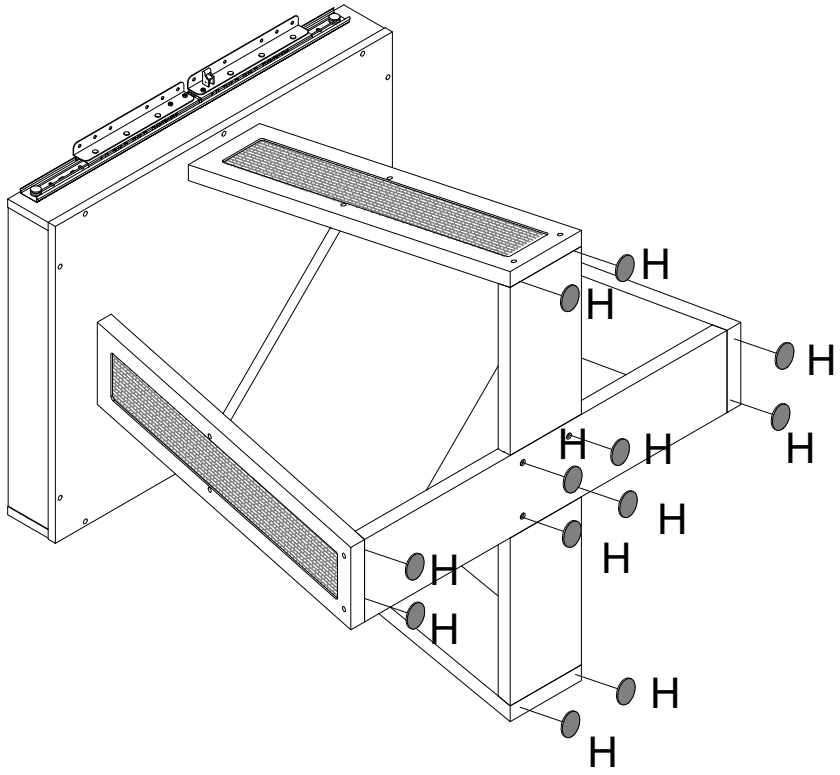


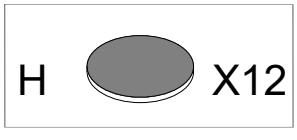


Step 9

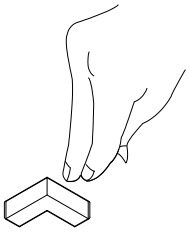

Please privately apply the adhesive film of component L and stick it on the corner of the table

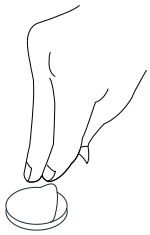


Attach accessory I to the exposed B ,D,J according to personal needs

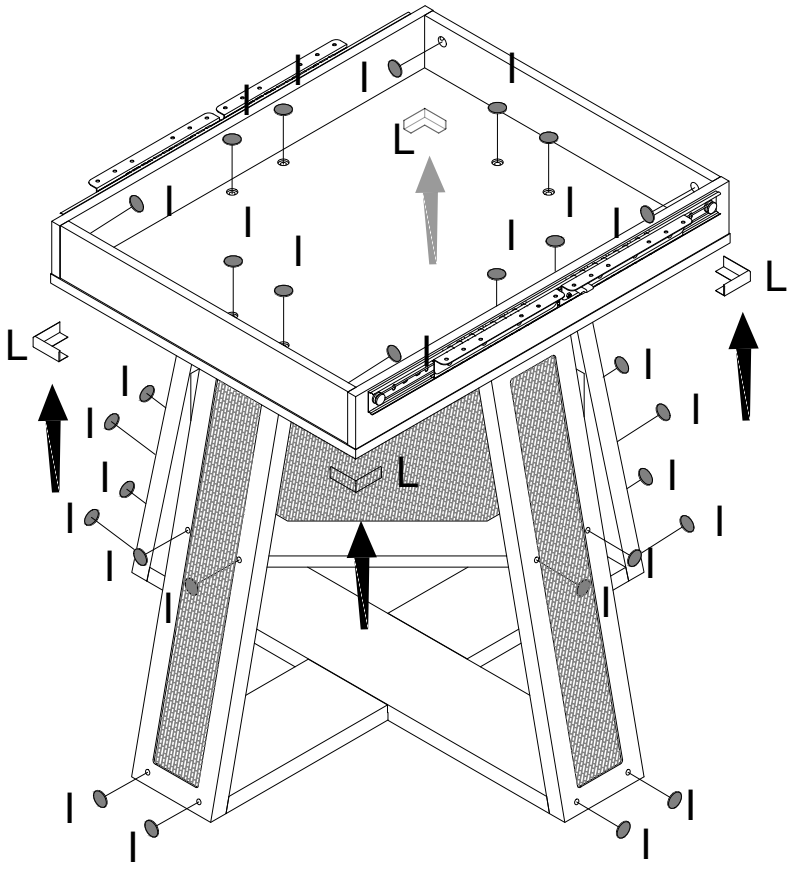

L		X4
I		X28


Step 10

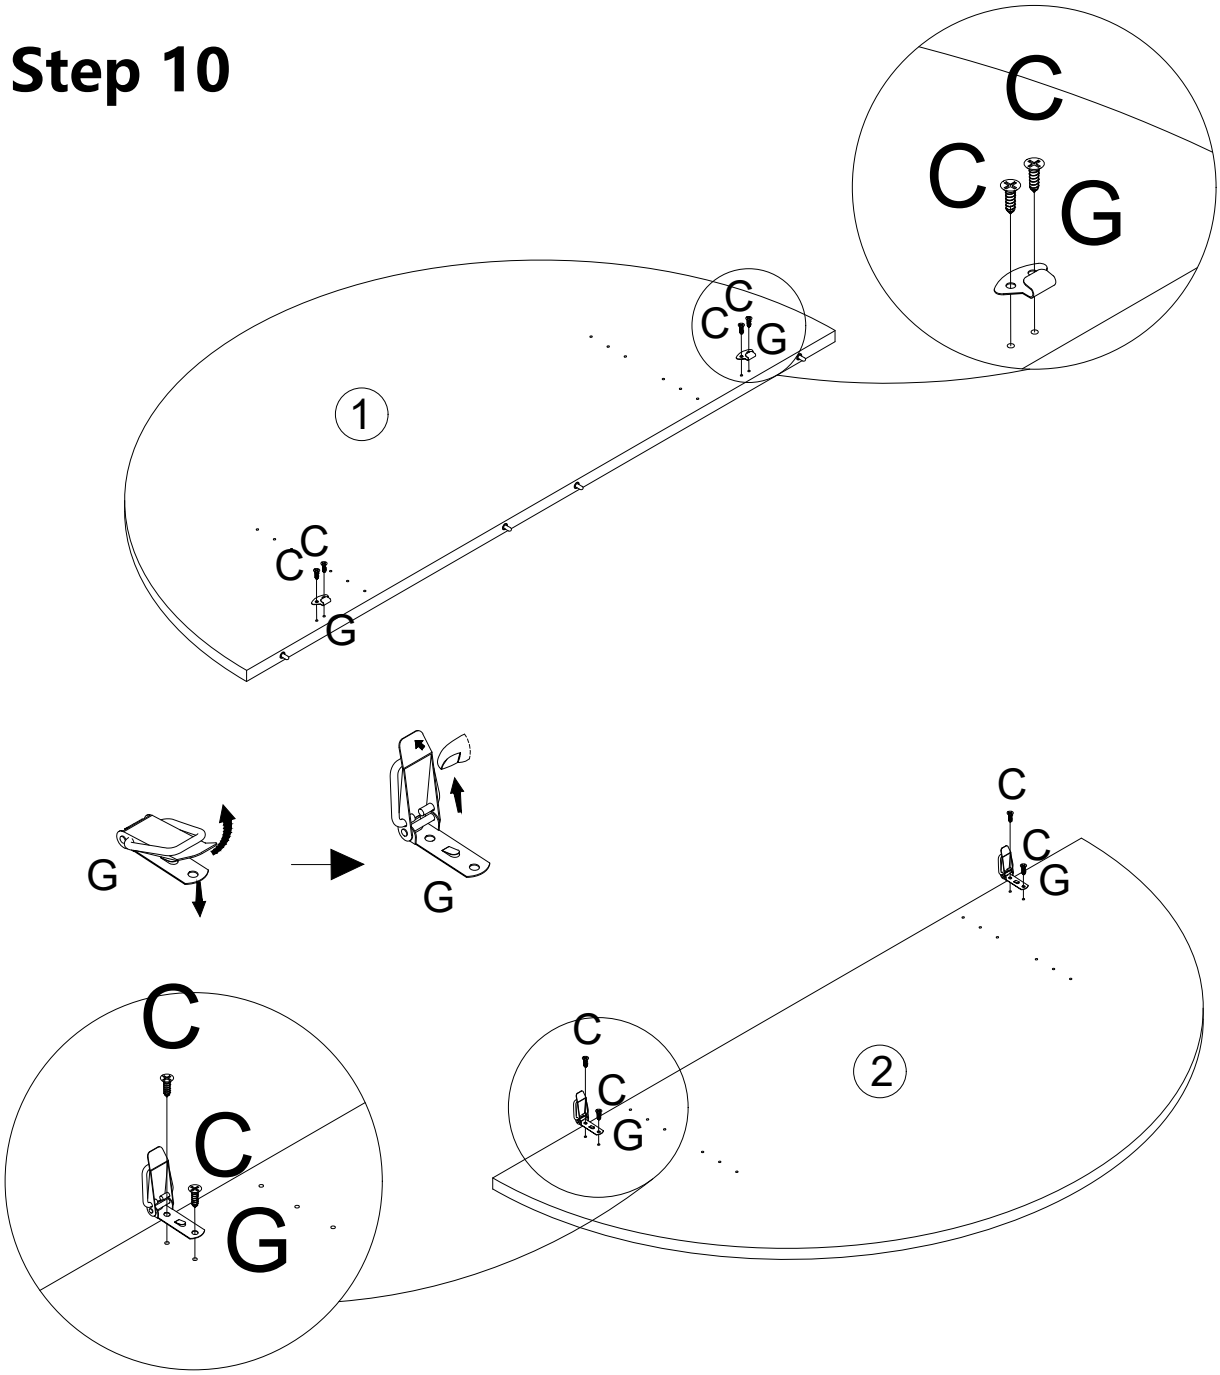



C		X8
G		X2

Step 11


Attention: Please lock this accessory before turning the table upside down.

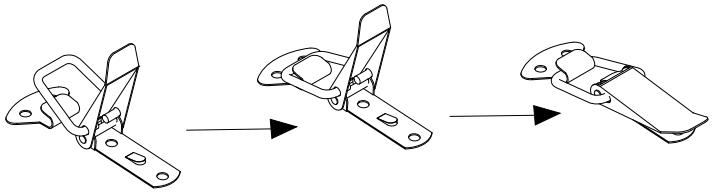

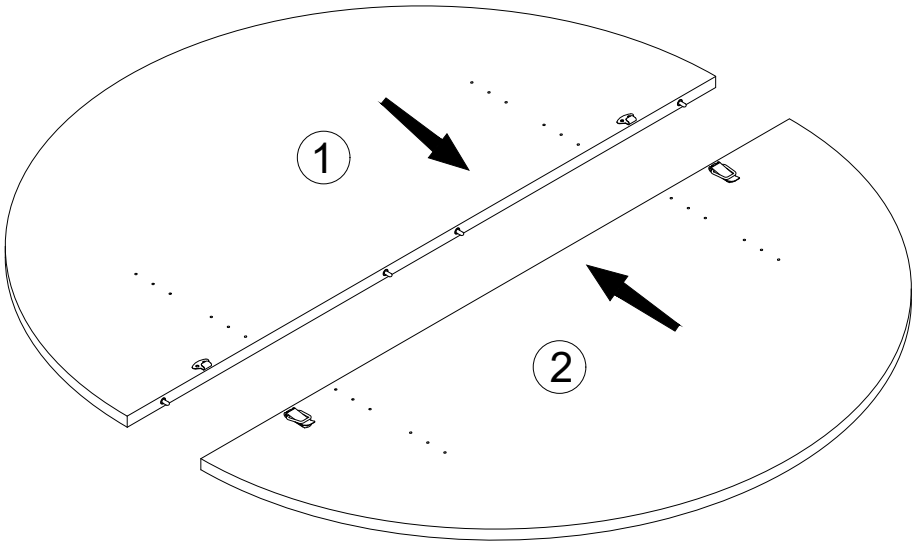

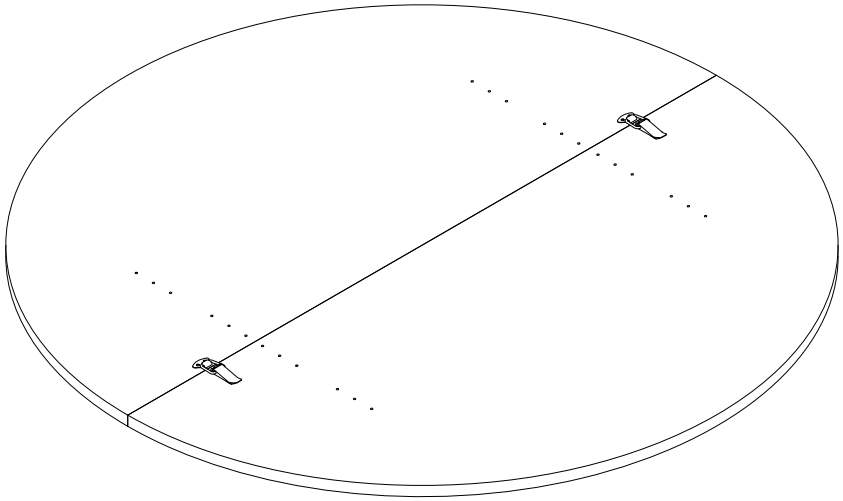


Step 12

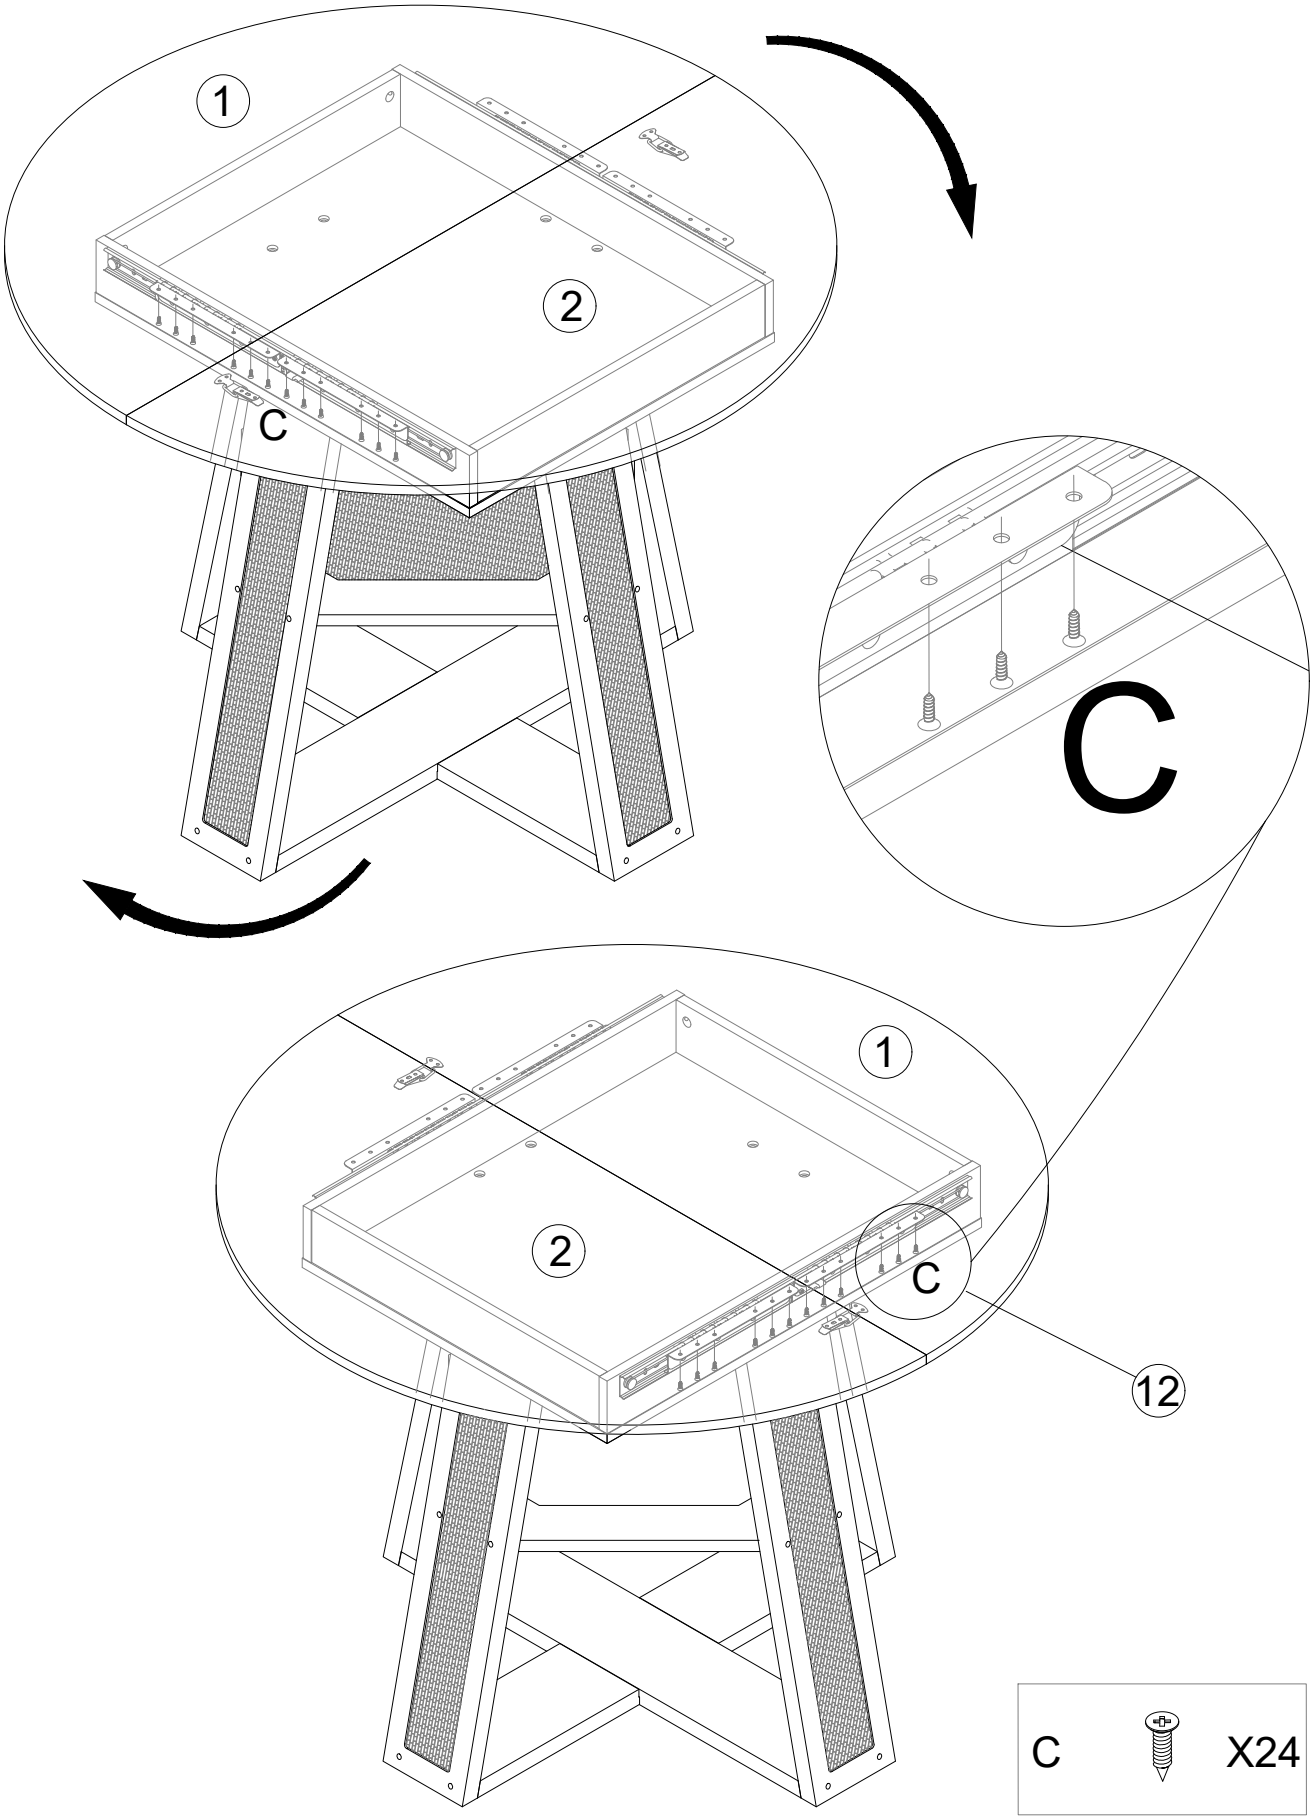


C X24


Step 13


Attention: Please open this accessory before pulling apart the desktop

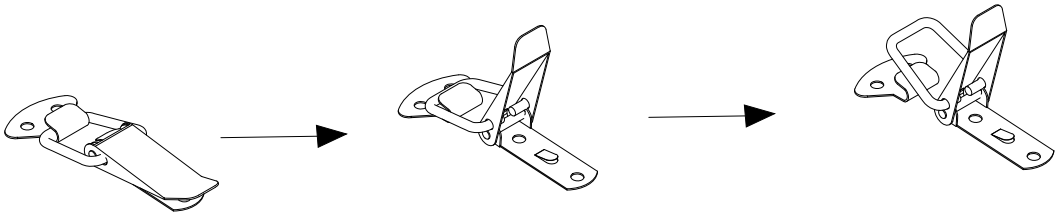


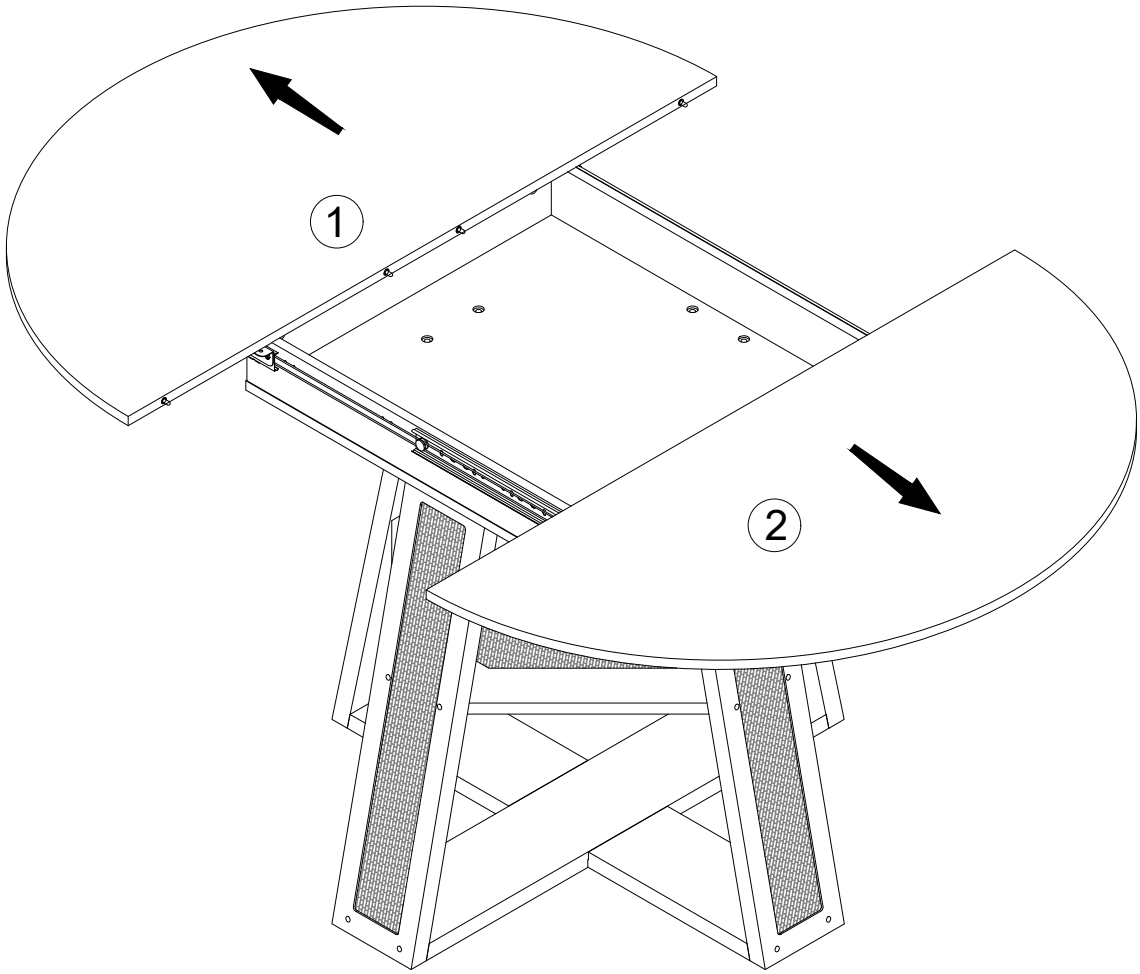

Step 14

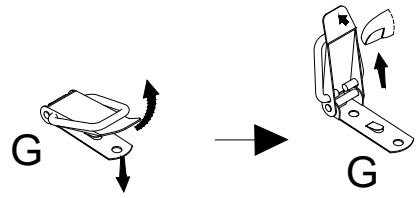


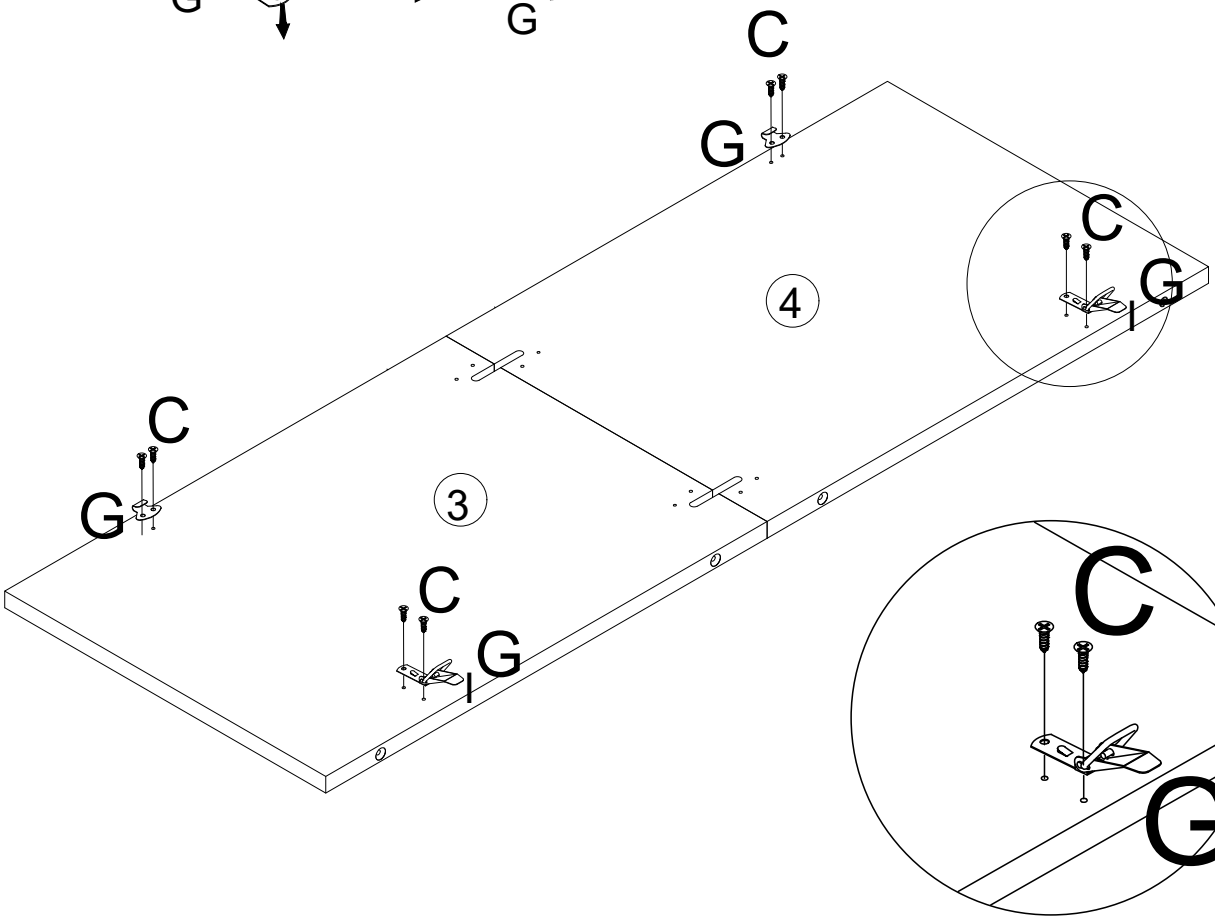

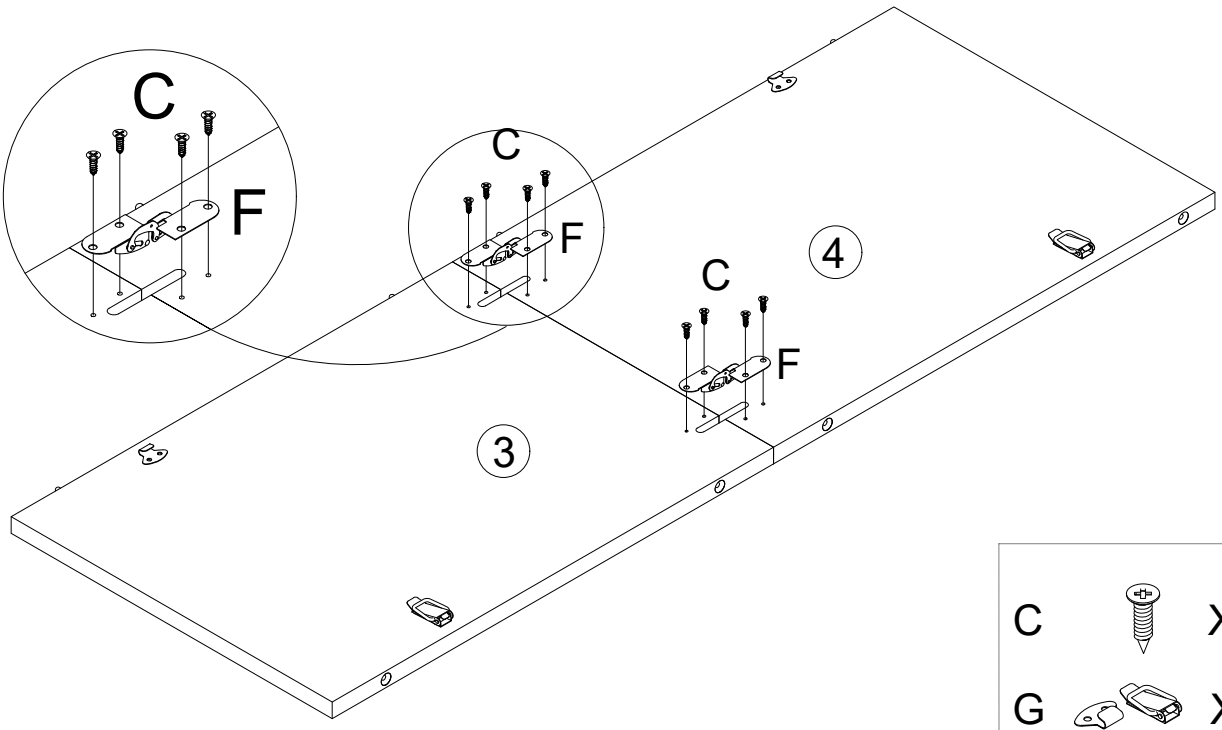

C		X16
G		X2
F		X2


Step 15

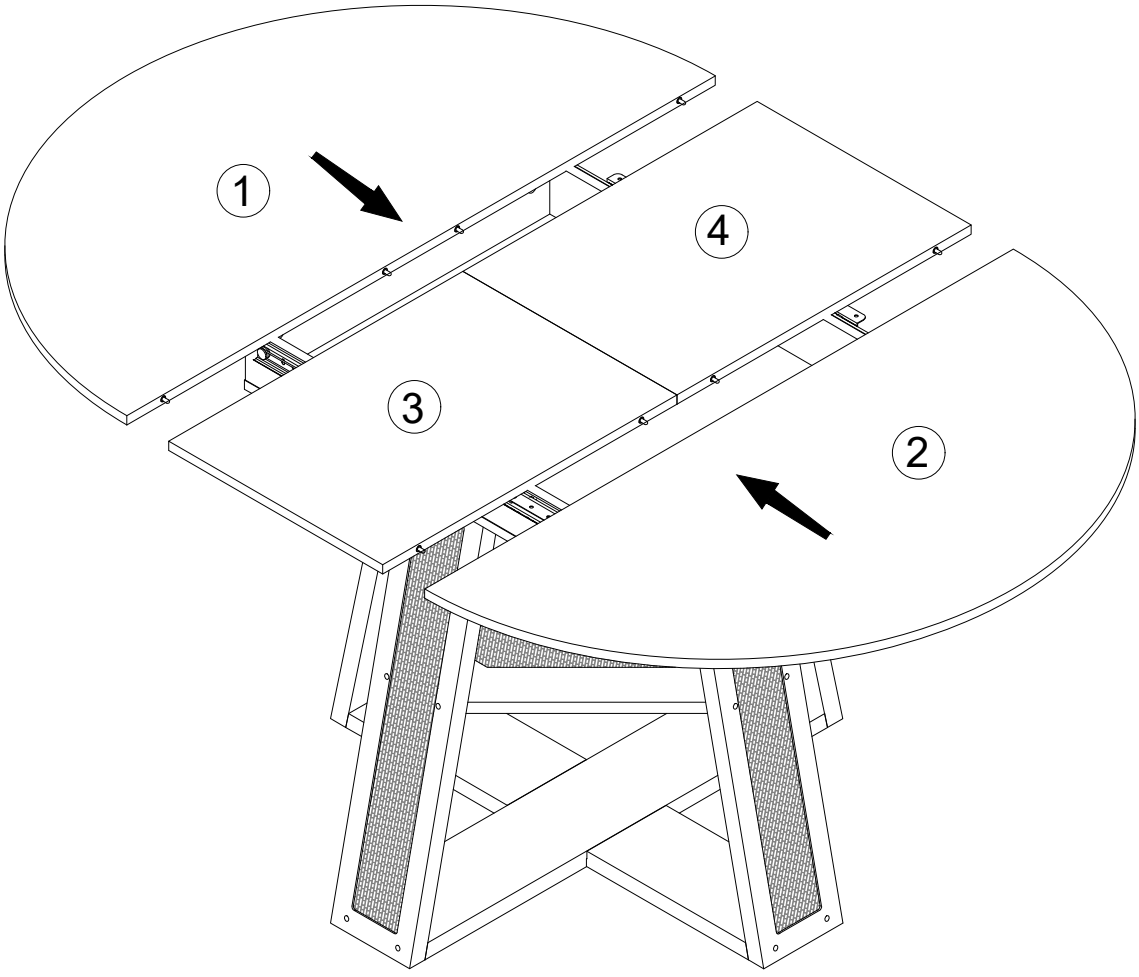


Step 16

Method 1


Attention: Please lock this accessory after installation is complete

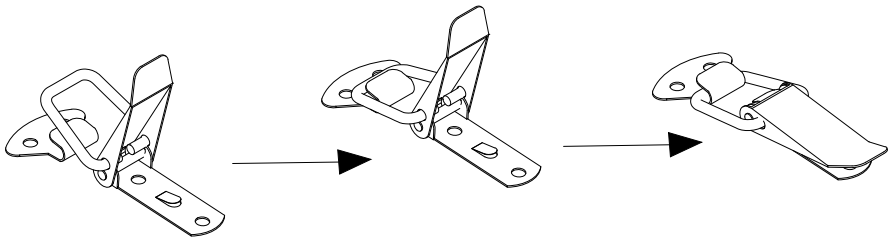

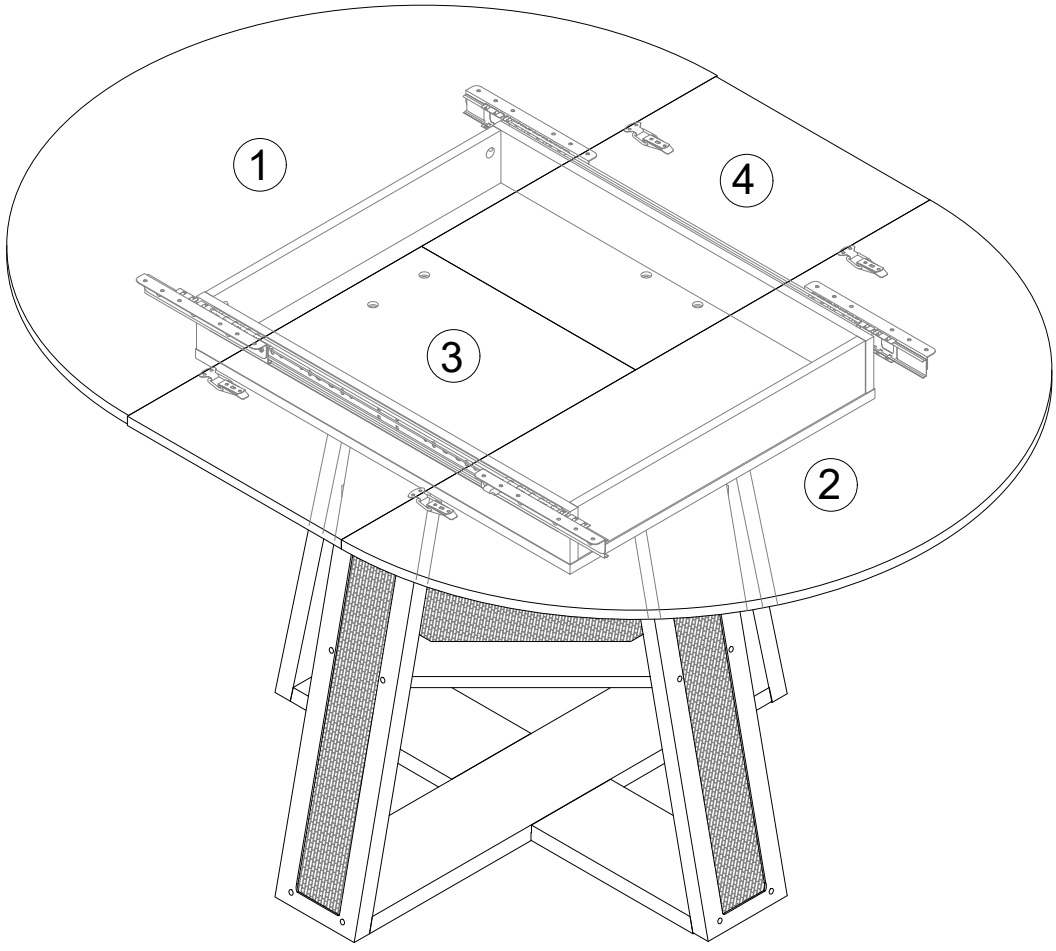


Step 17


Attention: Please open this accessory before pulling apart the desktop

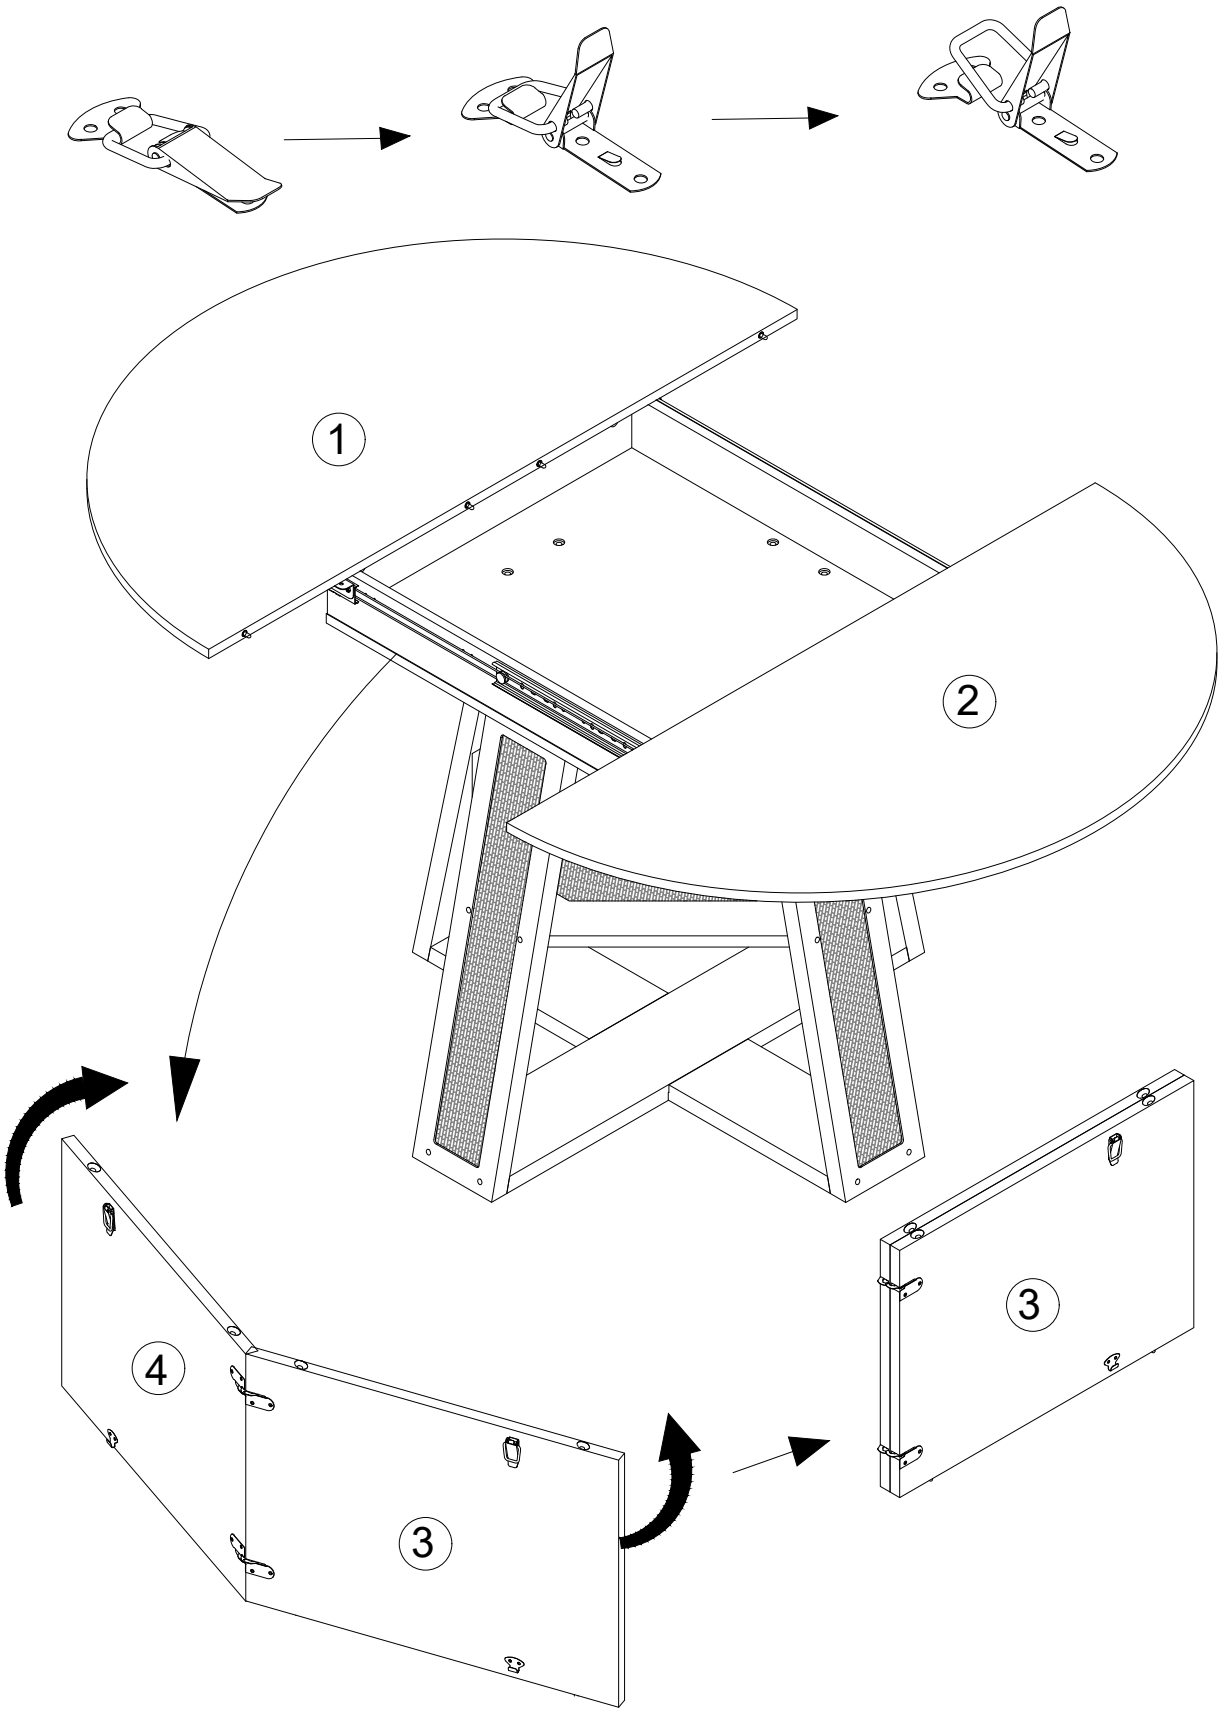

Step 18

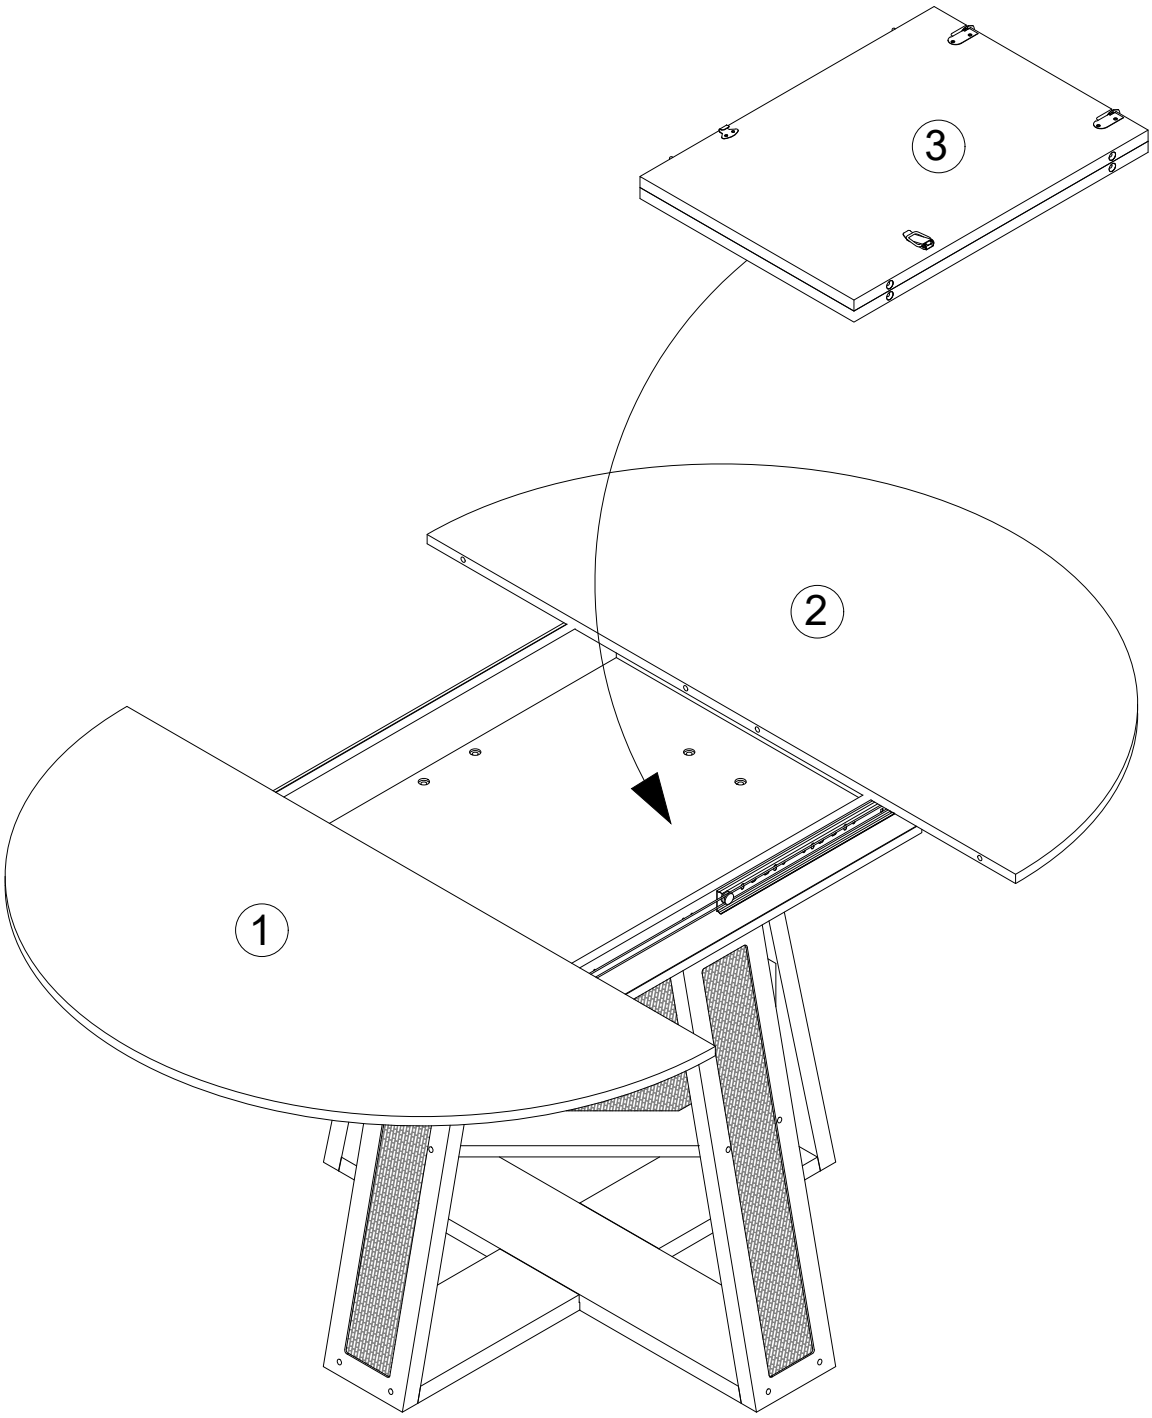

Step 19

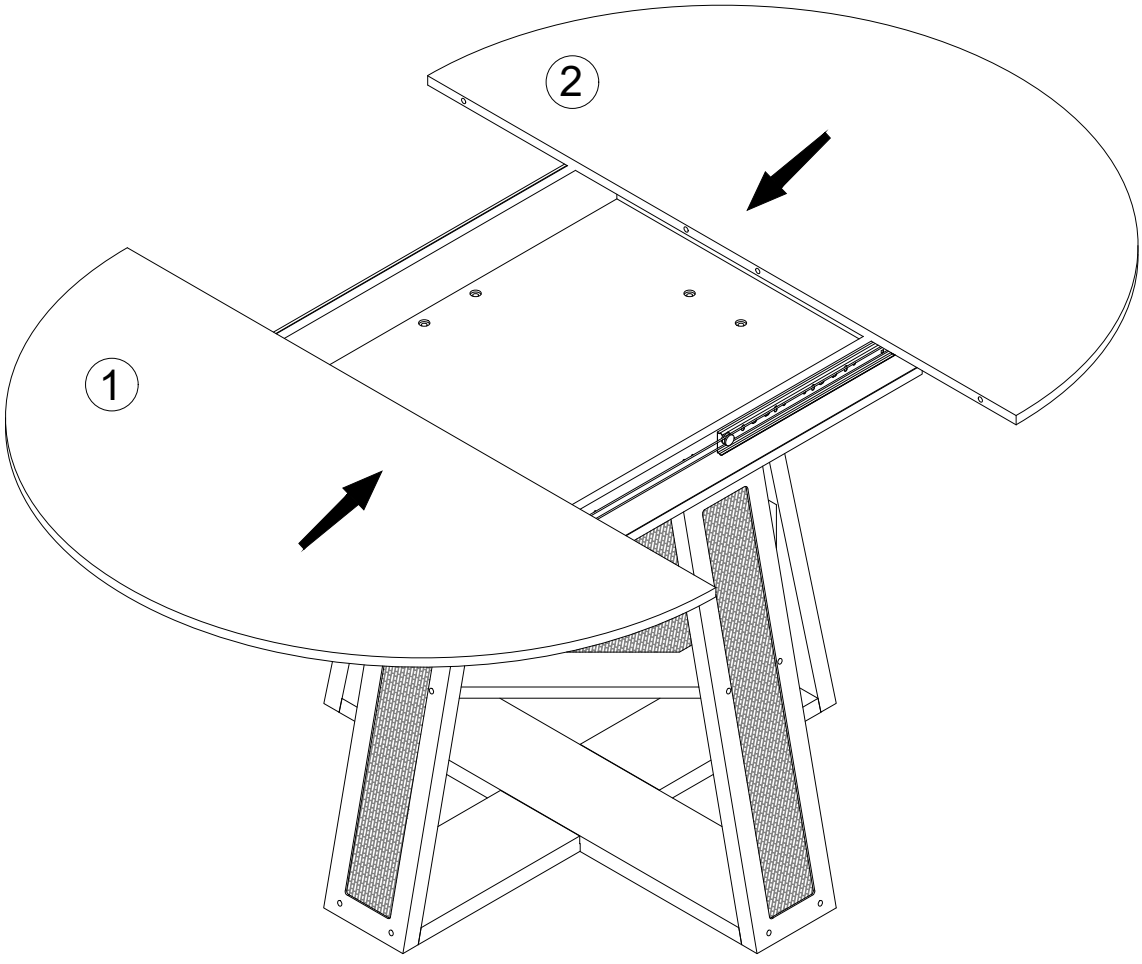

Step 20

Method 2

Attention: Please lock this accessory after installation is complete

