












INSTALLATION GUIDE

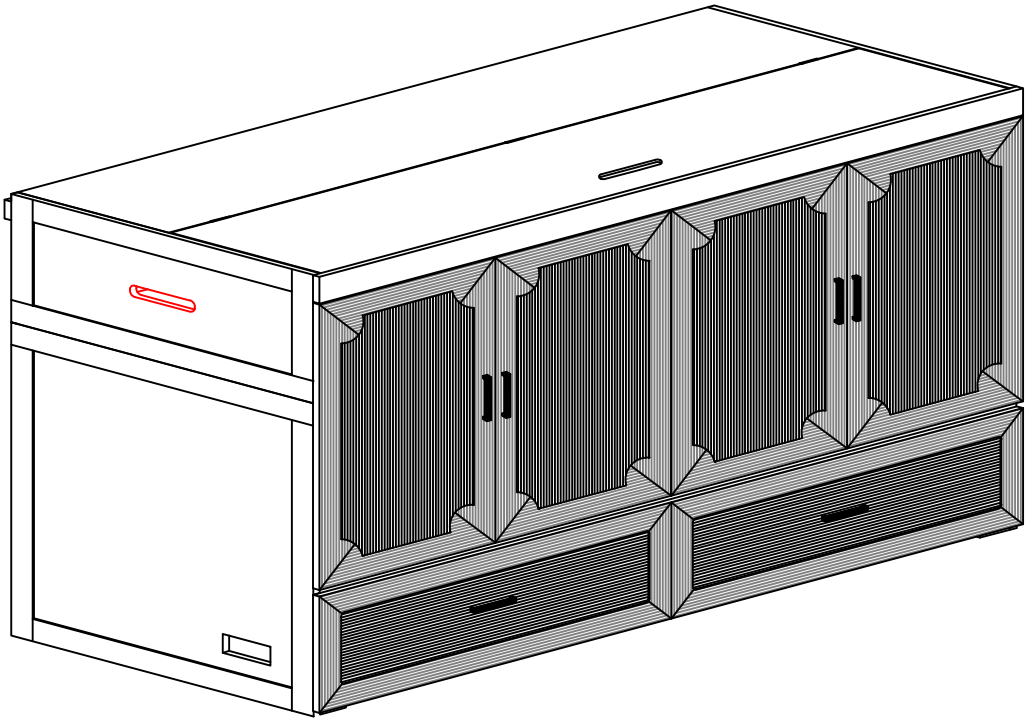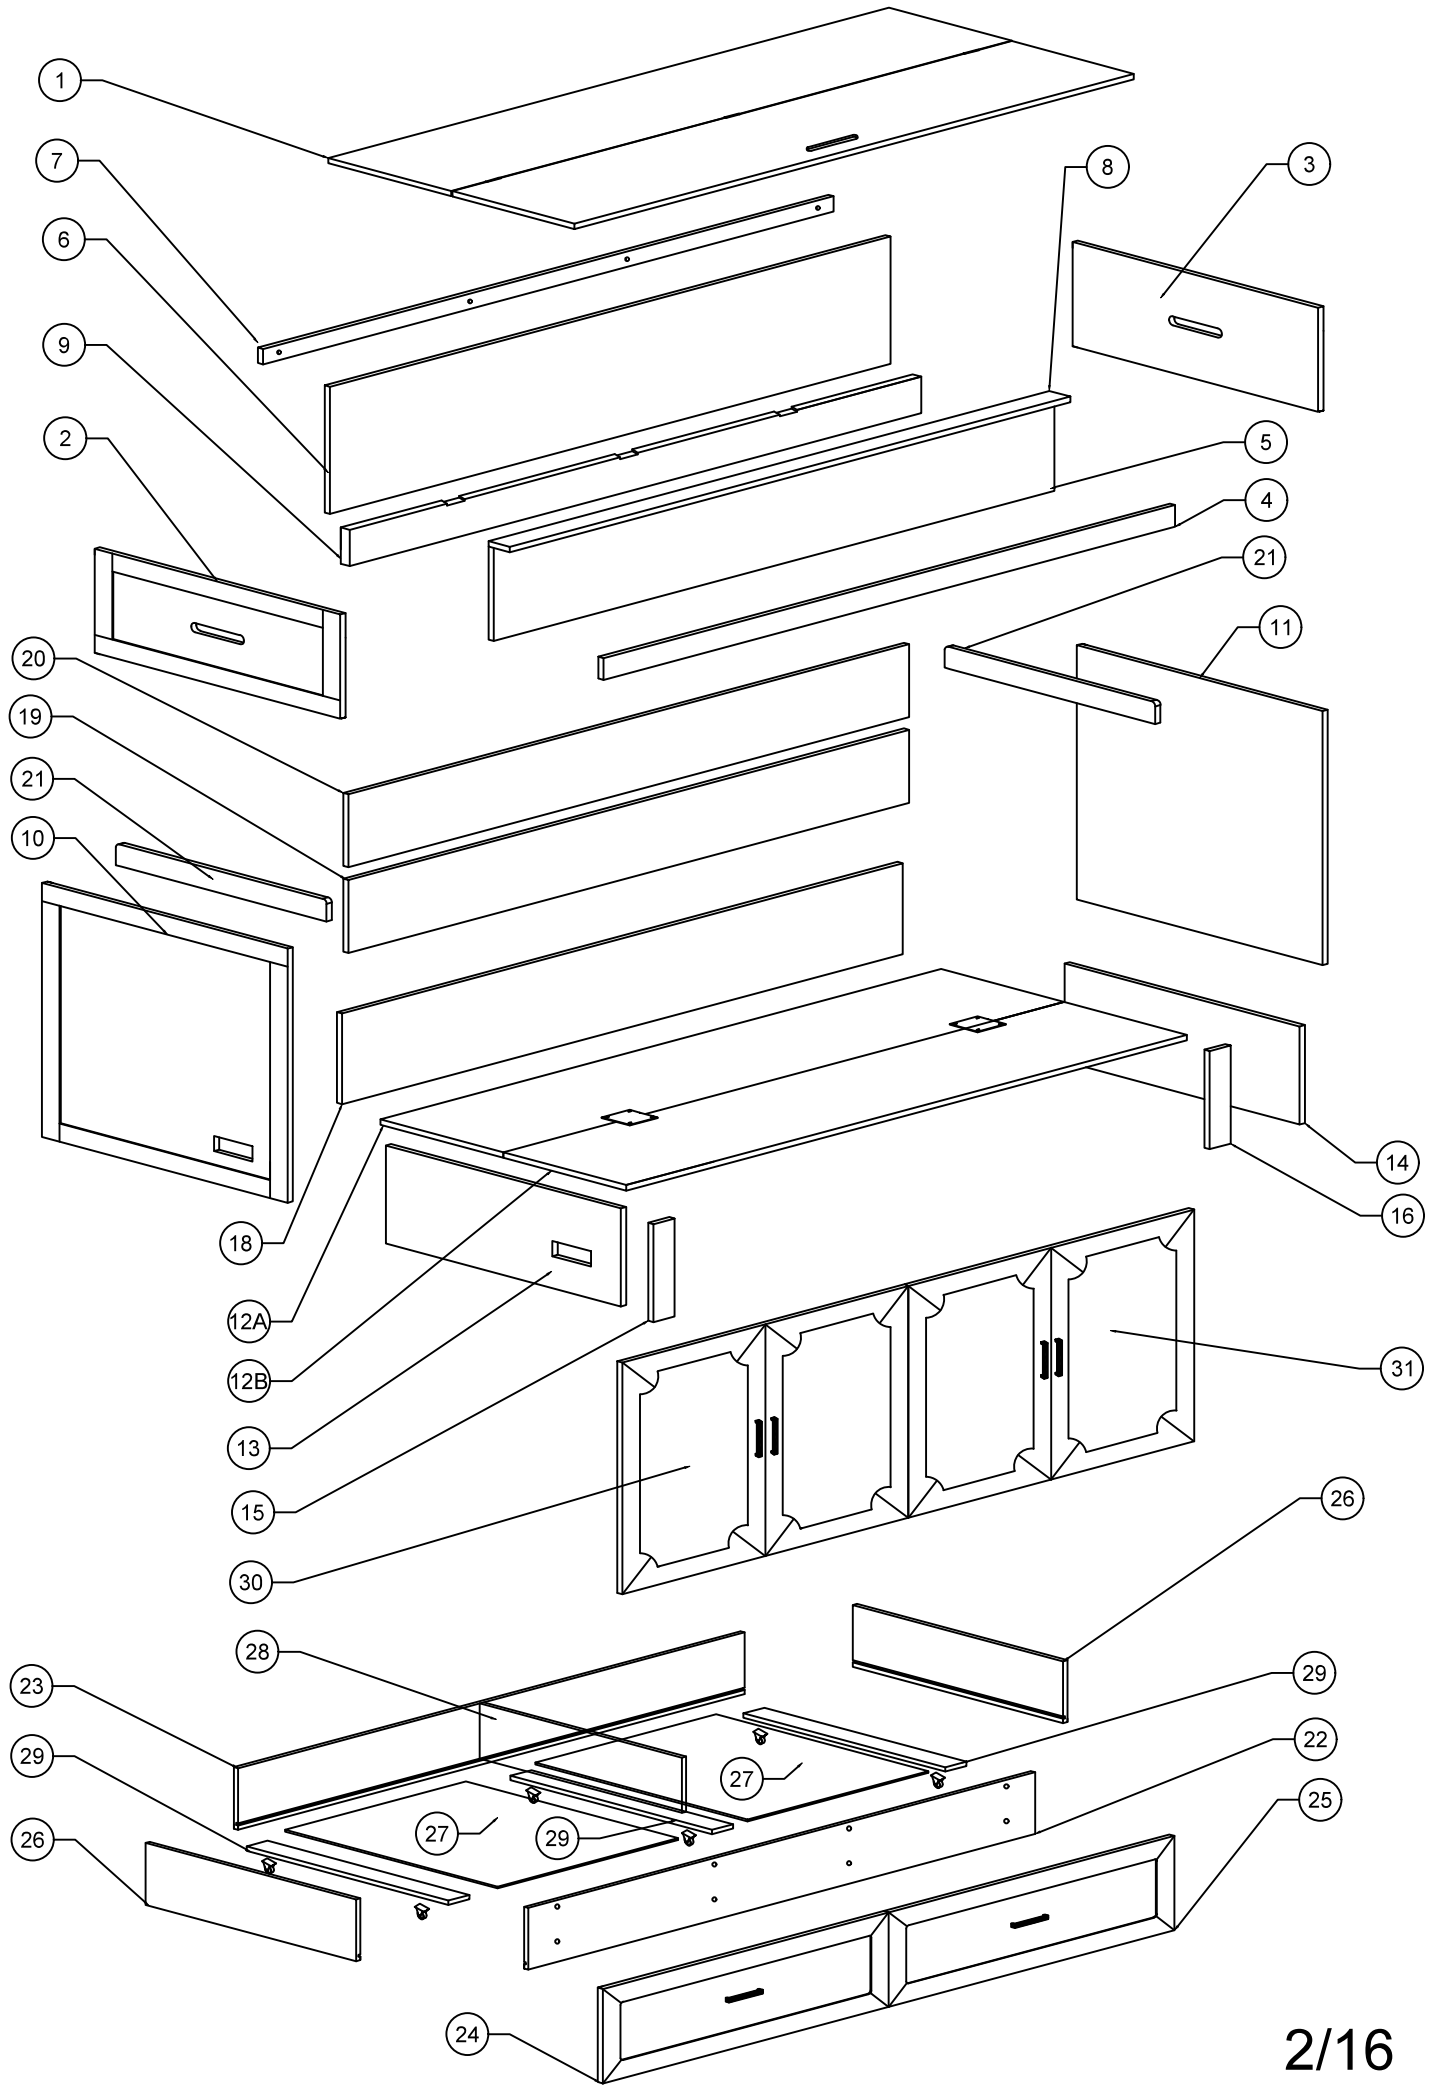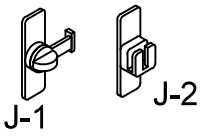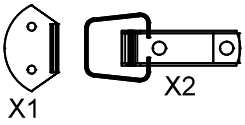


Suggest using electric tools for installation







1
7
6
9
2
8
3
5
4
21
11
20
19
21
10
18
12A
12B
13
15
30
14
16
31
26
28
23
29
27
29
26
27
29
22
25
24

A		46 PCS	J	 J-1 J-2	2 PCS
B	 M15	46 PCS	T		1 PCS
C	 80*80	4 PCS	K		6 PCS
E	 M4*30	25 PCS	L		4 PCS
D	 M8*40	10 PCS	P		1 PCS
F	 M3.5*14	72 PCS	Q	 M7*38	16 PCS
H	 M4*12	12 PCS	R	 M6*13	17 PCS
I	 M-96	6 PCS	Z	 M6*30	4 PCS
S	 M6*20	20 PCS	M	 M10*5	2 PCS
X	 X1 X2	2 PCS	Y		2 PCS
N	 M3.5*12	8 PCS	V	 M50	1 PCS


A		7 PCS	B	 M15	7 PCS


STEP 1

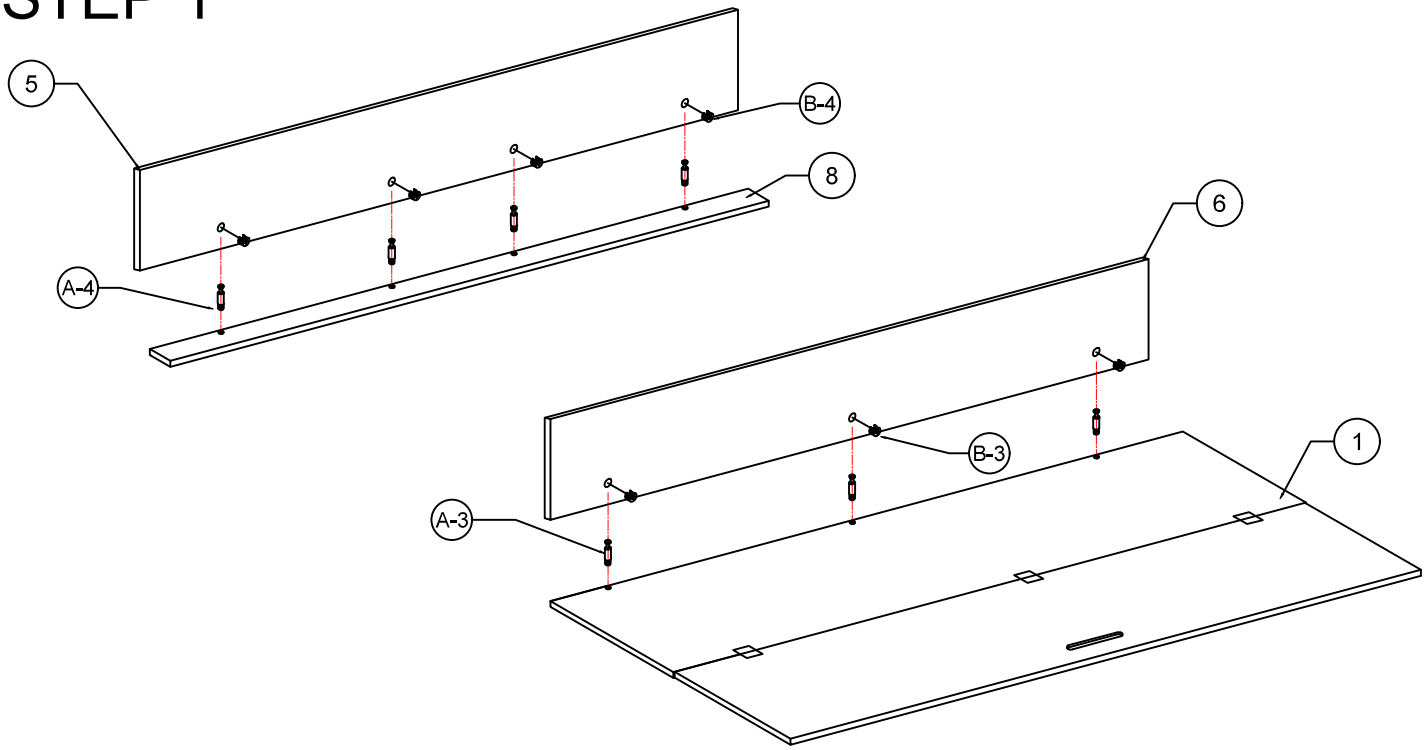


A		18 PCS	B	 M15	18 PCS
D	 M8*40	4 PCS			

STEP 2

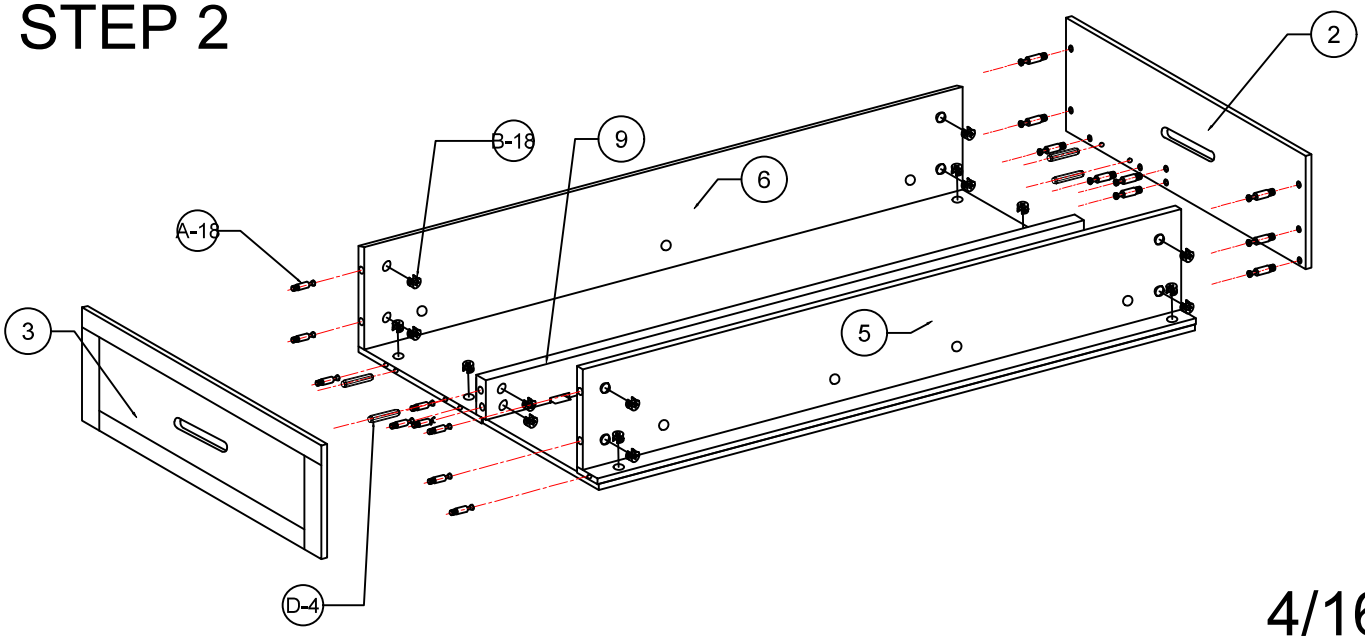


Y		2 PCS	N	 M3.5*12	8 PCS



STEP 3

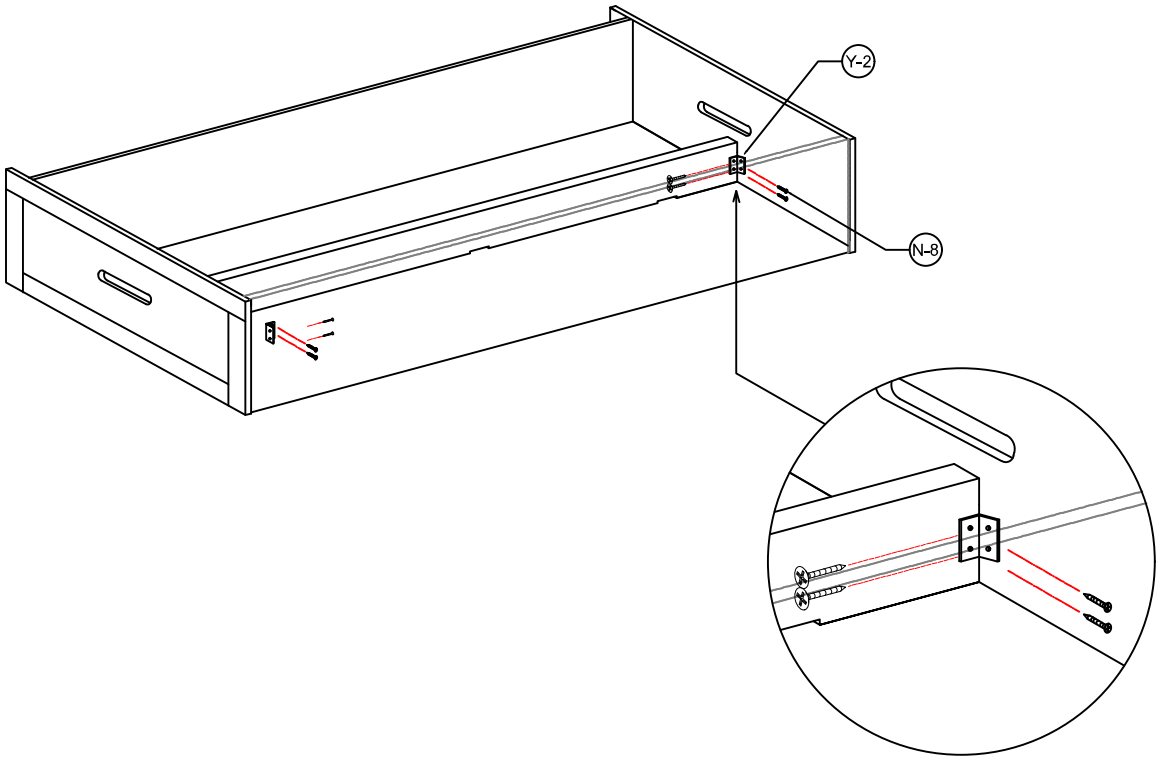


A		5 PCS	B	 M15	5 PCS


STEP 4

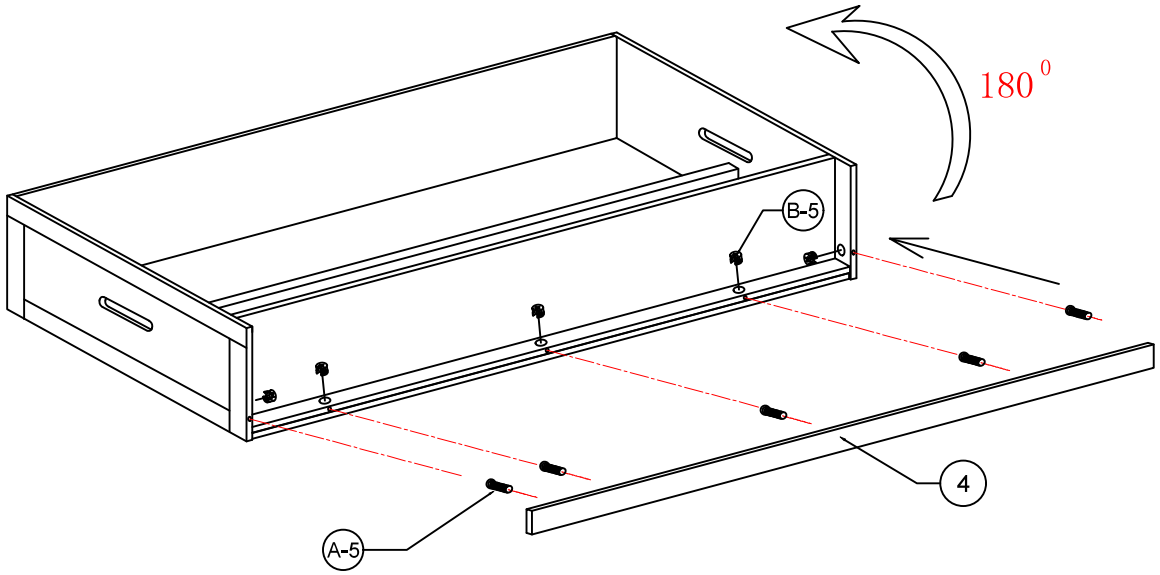


Z	 M6*30	4 PCS	F	 M3.5*14	4 PCS
X	 X1	2 PCS	M	 M10*5	2 PCS


STEP 5

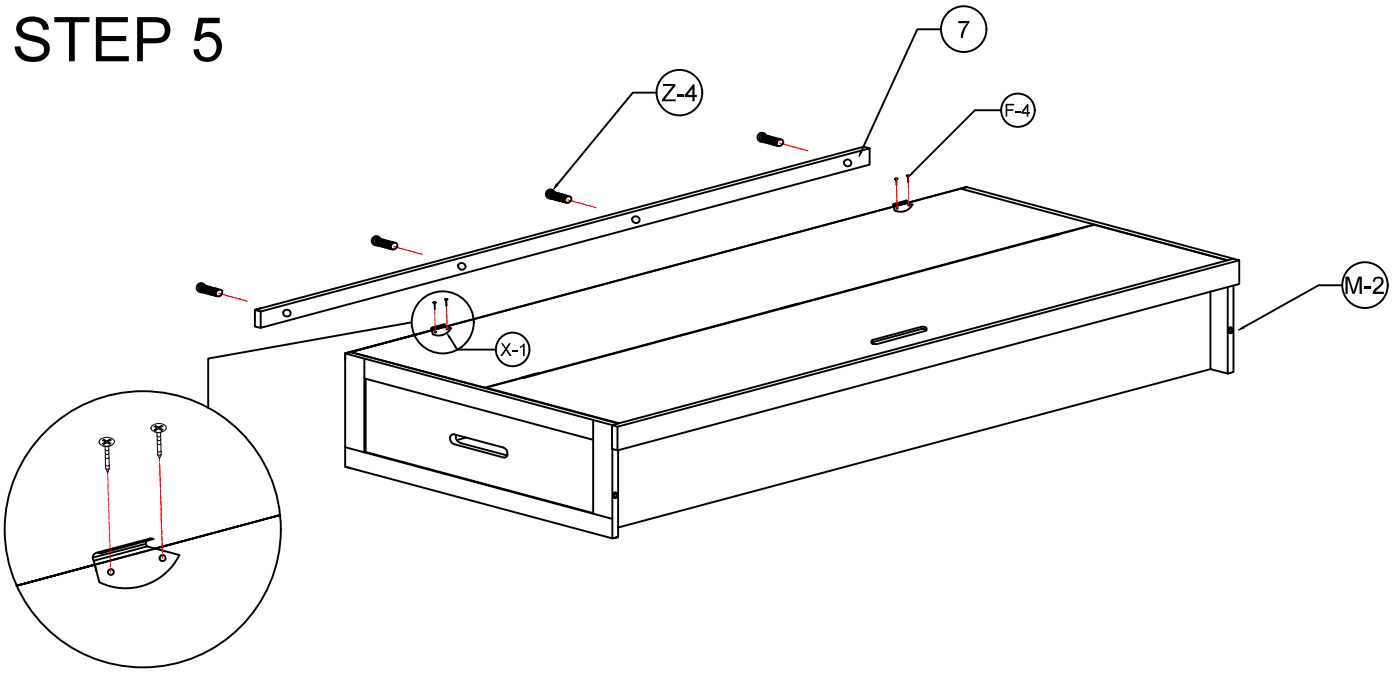


Q	 M7*38	4 PCS	V	 M50	1 PCS


STEP 6

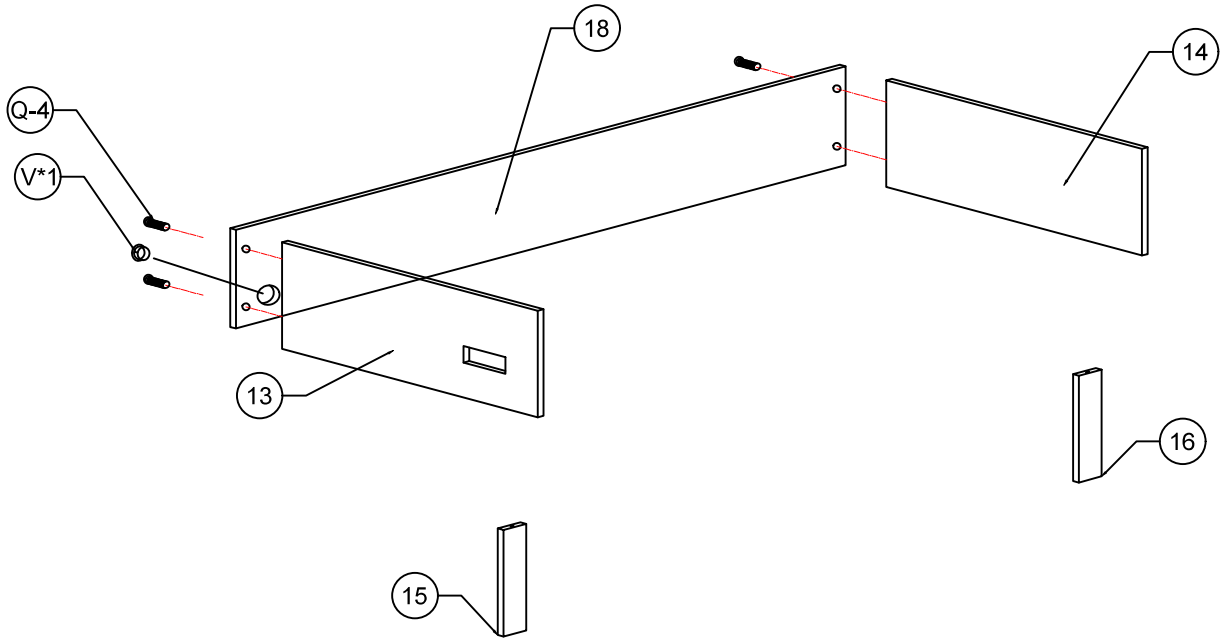


A		4 PCS	B	 M15	4 PCS

STEP 7

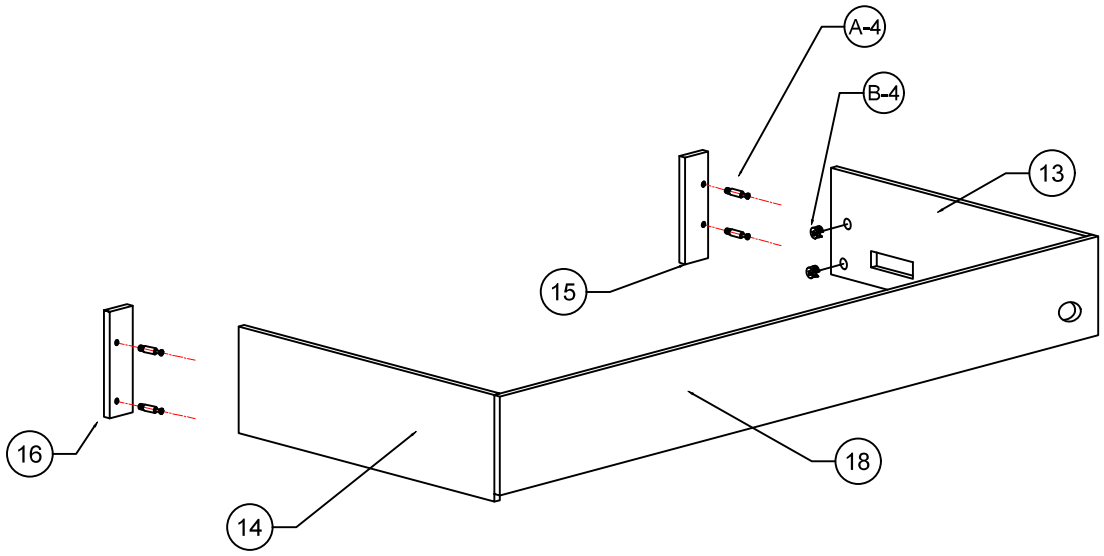


Q	 M7*38	12 PCS


STEP 8

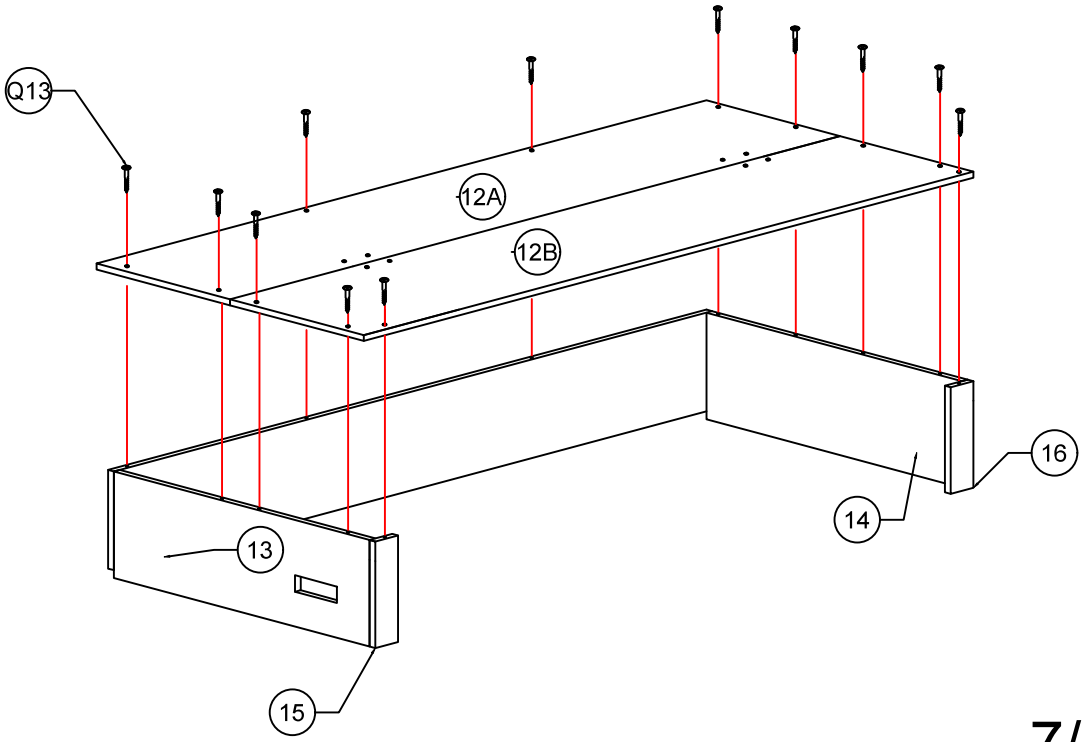


R	 M6*13	8 PCS	C	 80*80	2 PCS


STEP 9

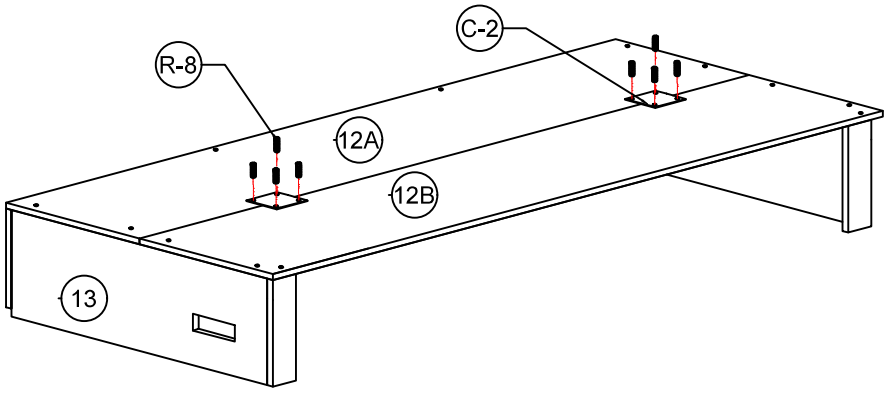


A		3 PCS	B	 M15	3 PCS
D		3 PCS			



STEP 10

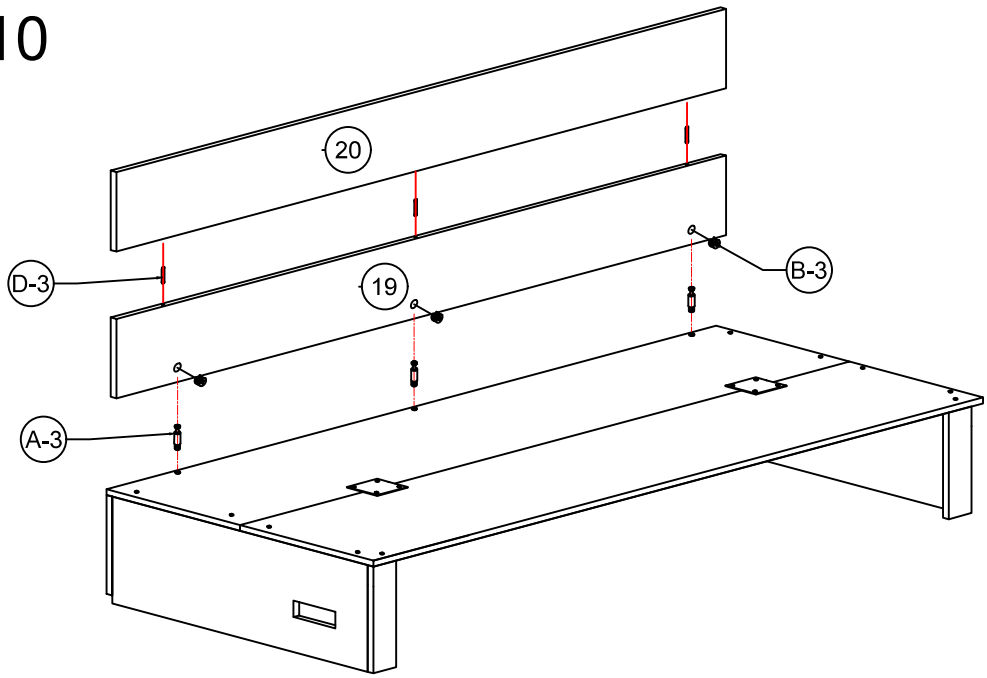


A		8 PCS	B	 M15	8 PCS
S	 M6*20	8 PCS			

STEP 11

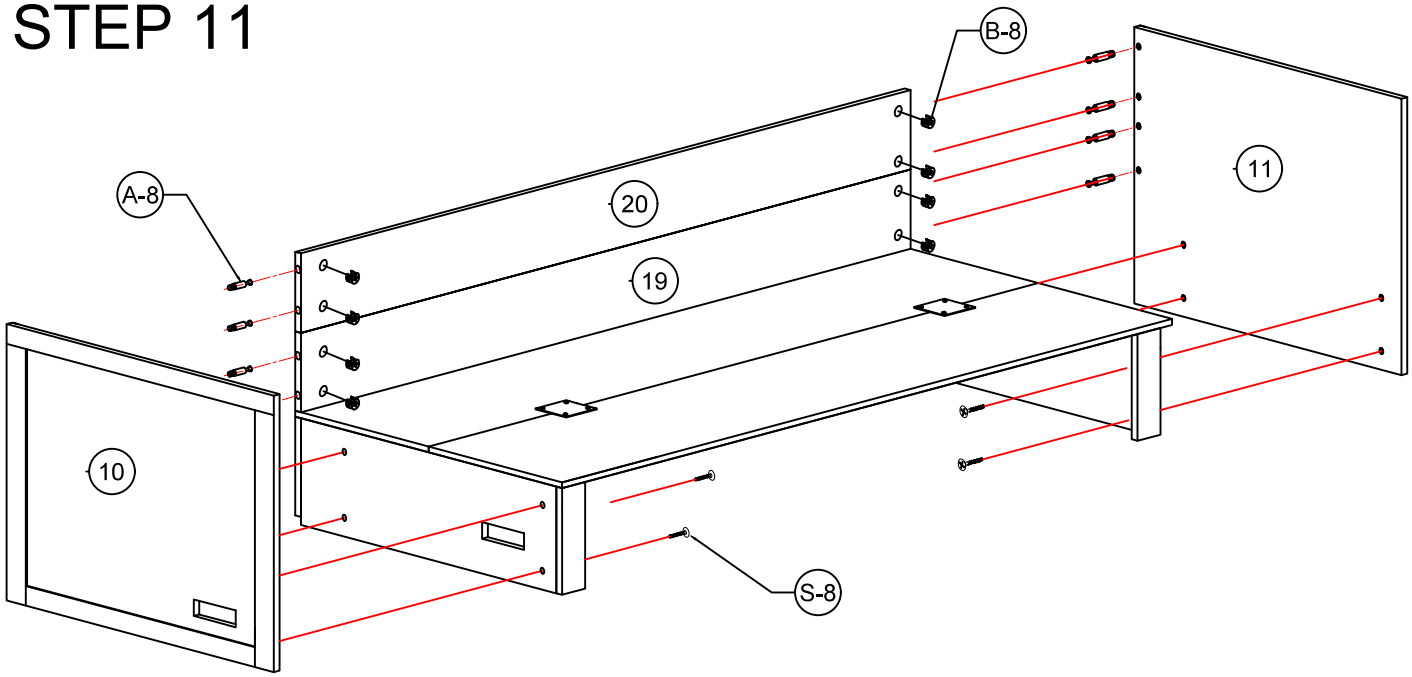


S	 M6*20	4 PCS	F	 M3.5*14	2 PCS
P		1 PCS			

STEP 12

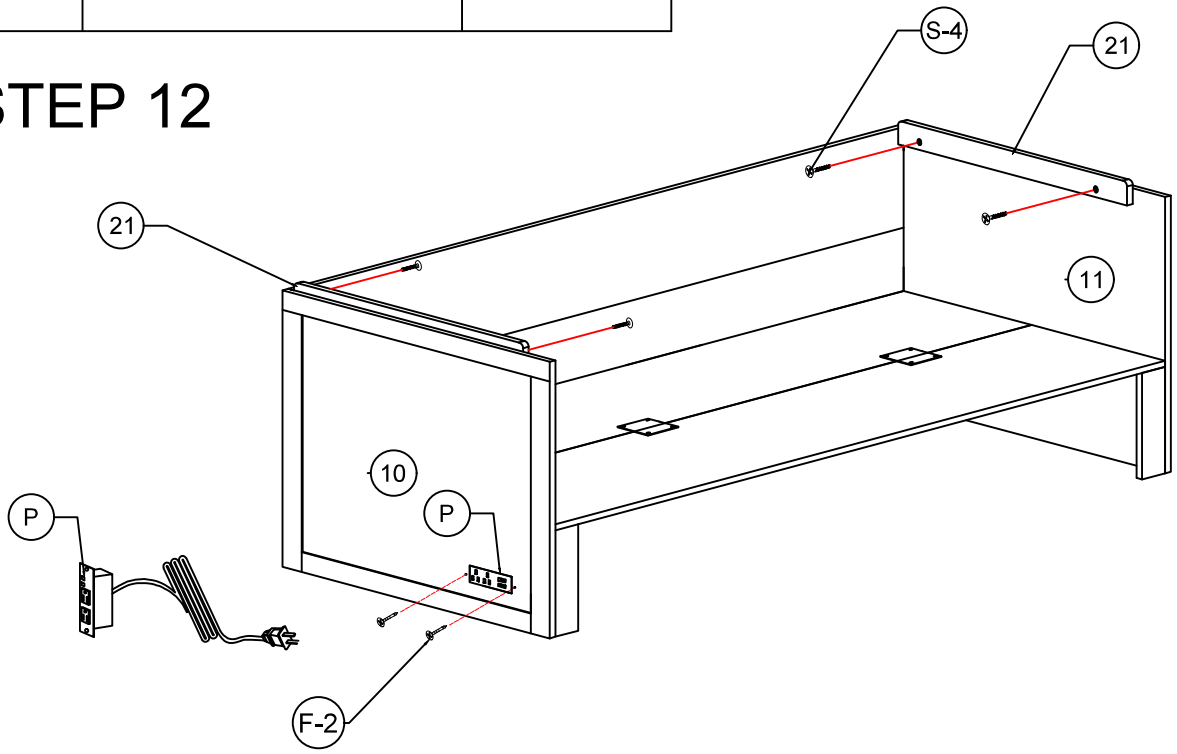


F	M3.5*14	4 PCS	J	J-2	2 PCS


STEP 13

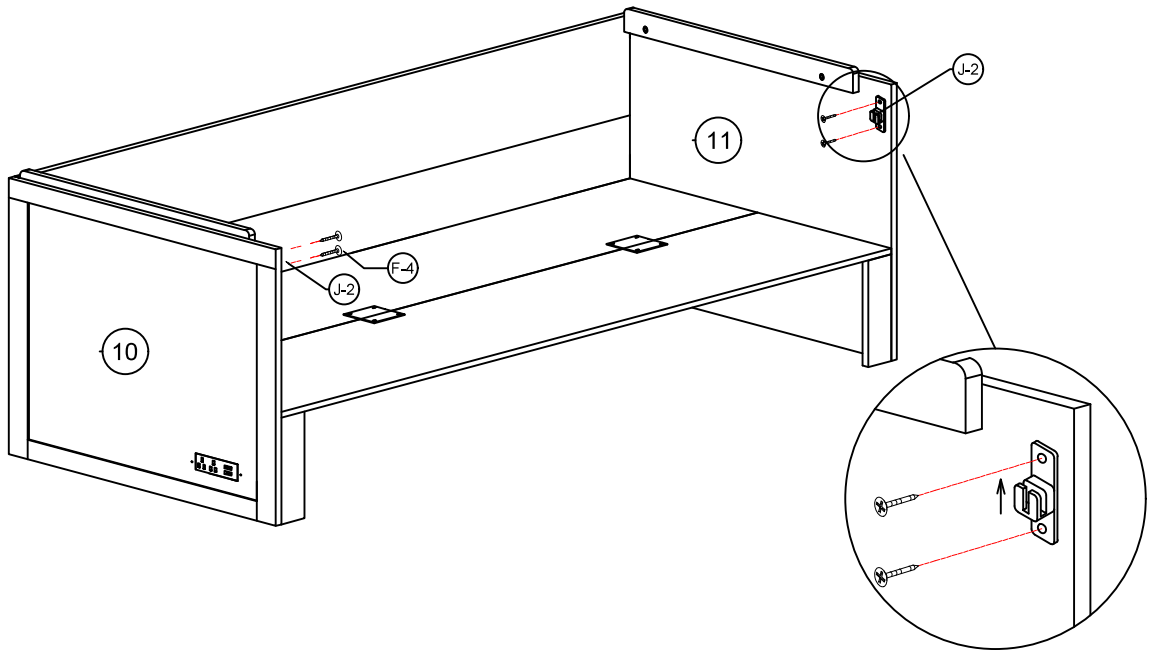


E	M4*30	8 PCS	K		6 PCS
F	M3.5*14	12 PCS			


STEP 14

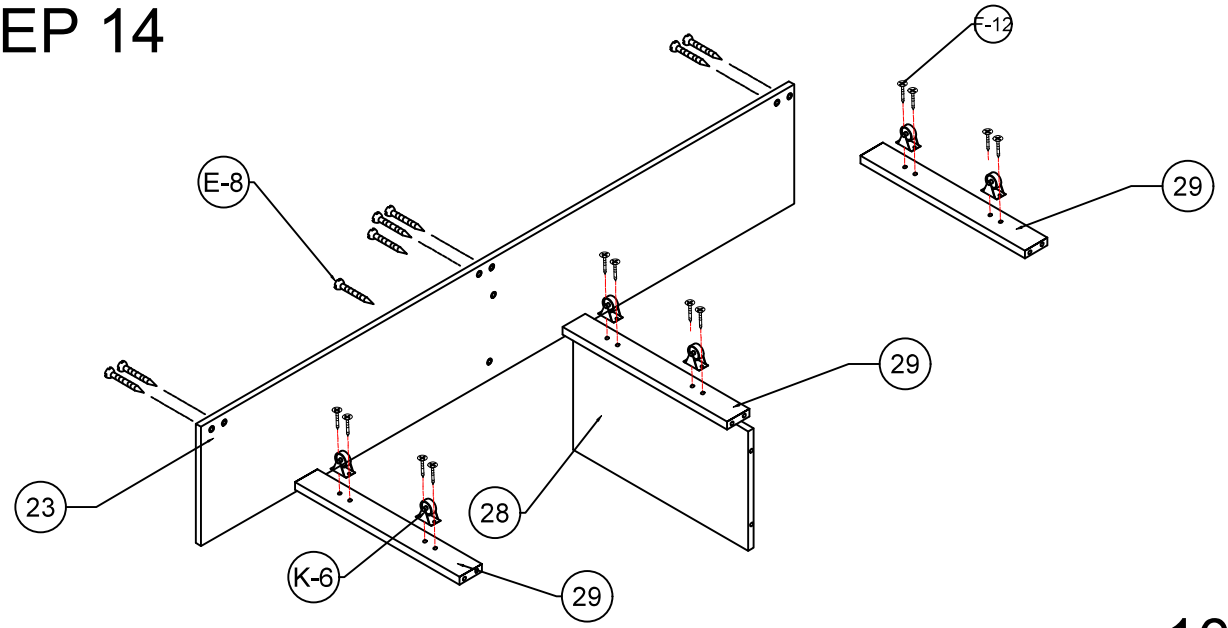


E	 M4*30	8 PCS			


STEP 15

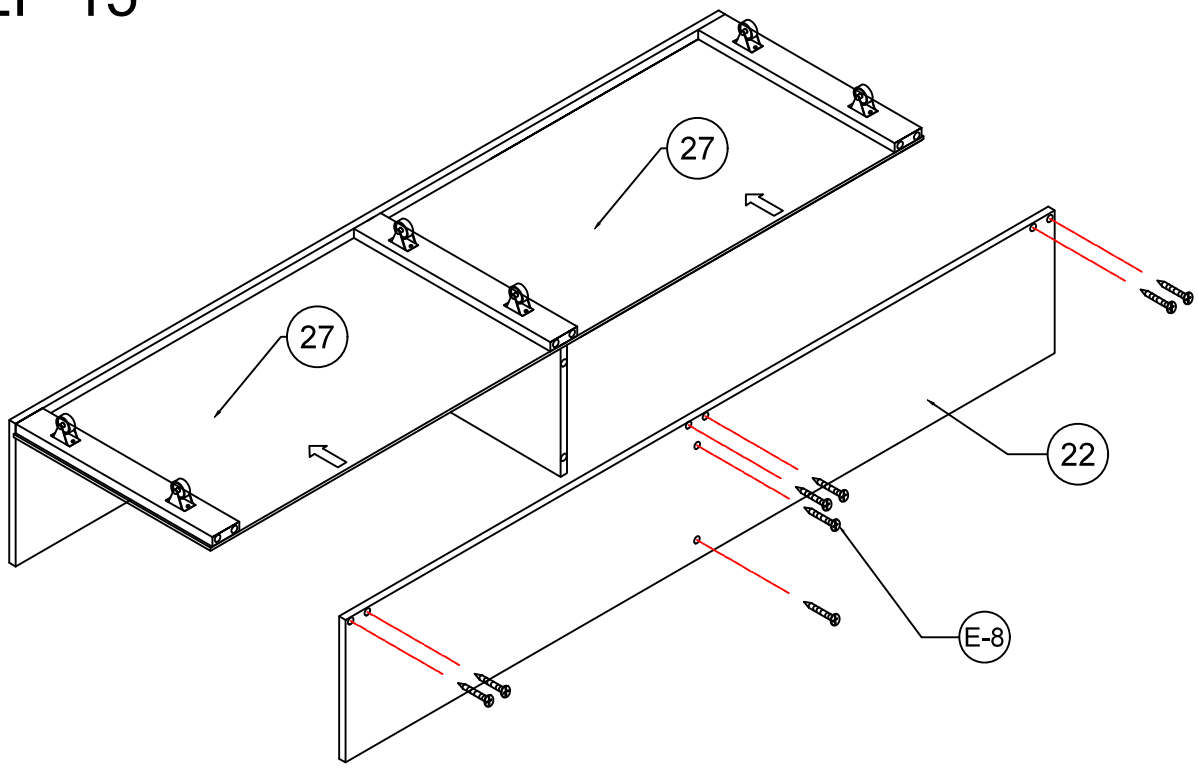


E	 M4*30	8 PCS			


STEP 16

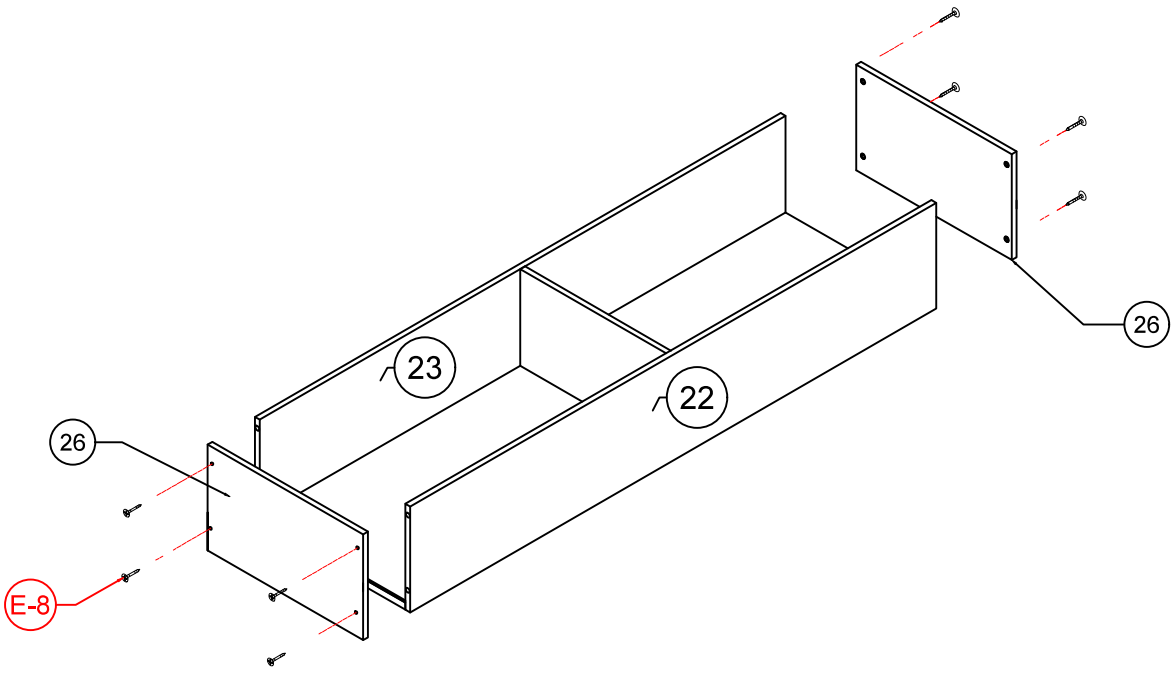


H	 M4*12	4 PCS	I		2 PCS
S	 M6*20	8 PCS			


STEP 17

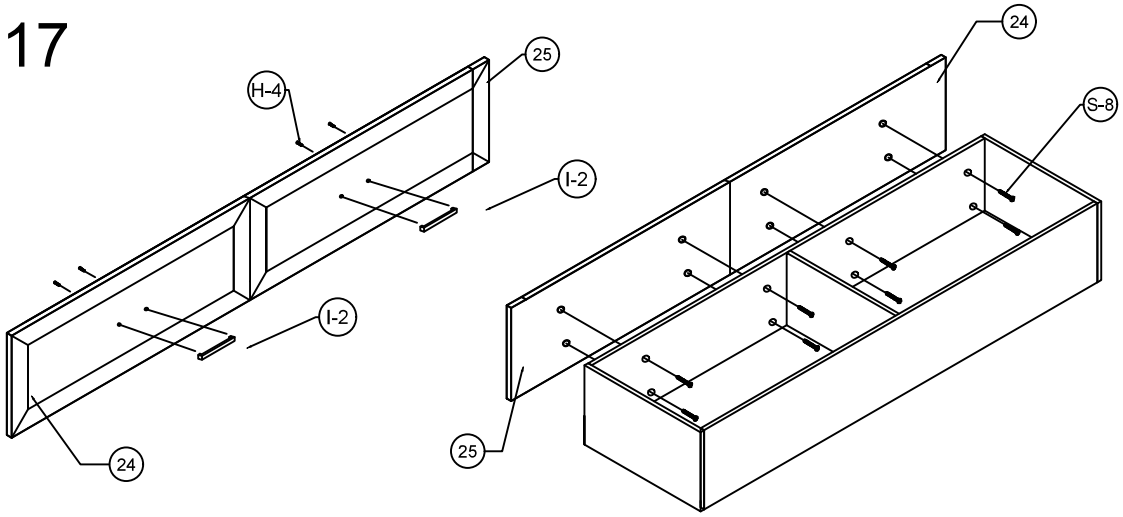


H	 M4*12	8 PCS	I		4 PCS
C	 80*80	2 PCS	R	 M6*13	8 PCS

STEP 18

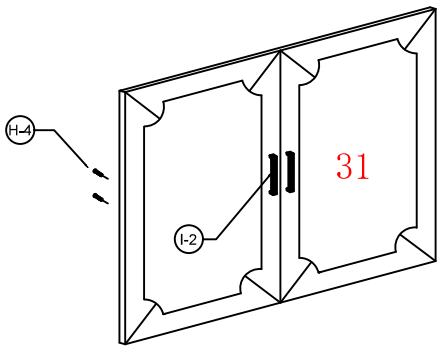





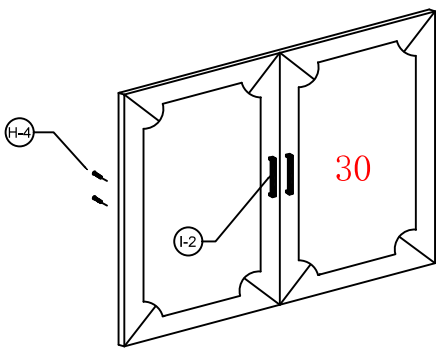


Install the handle first, then install the iron plate.

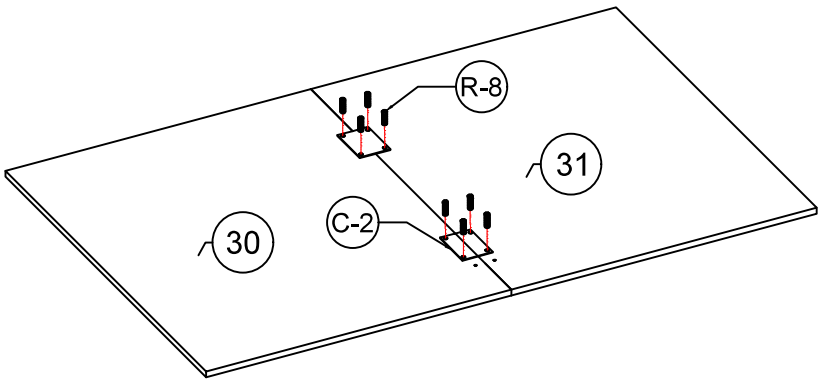


STEP 19

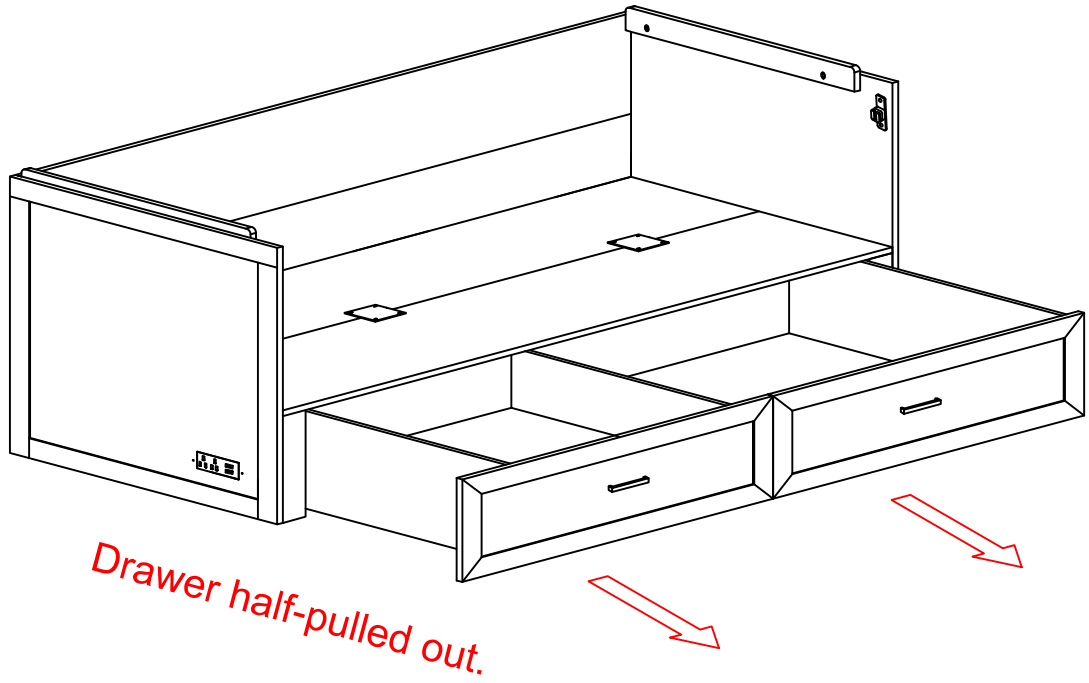


L		4 PCS	F	 M3.5*14	48 PCS
J	 J-1	2 PCS	X	 X2	2

STEP 20


PCS

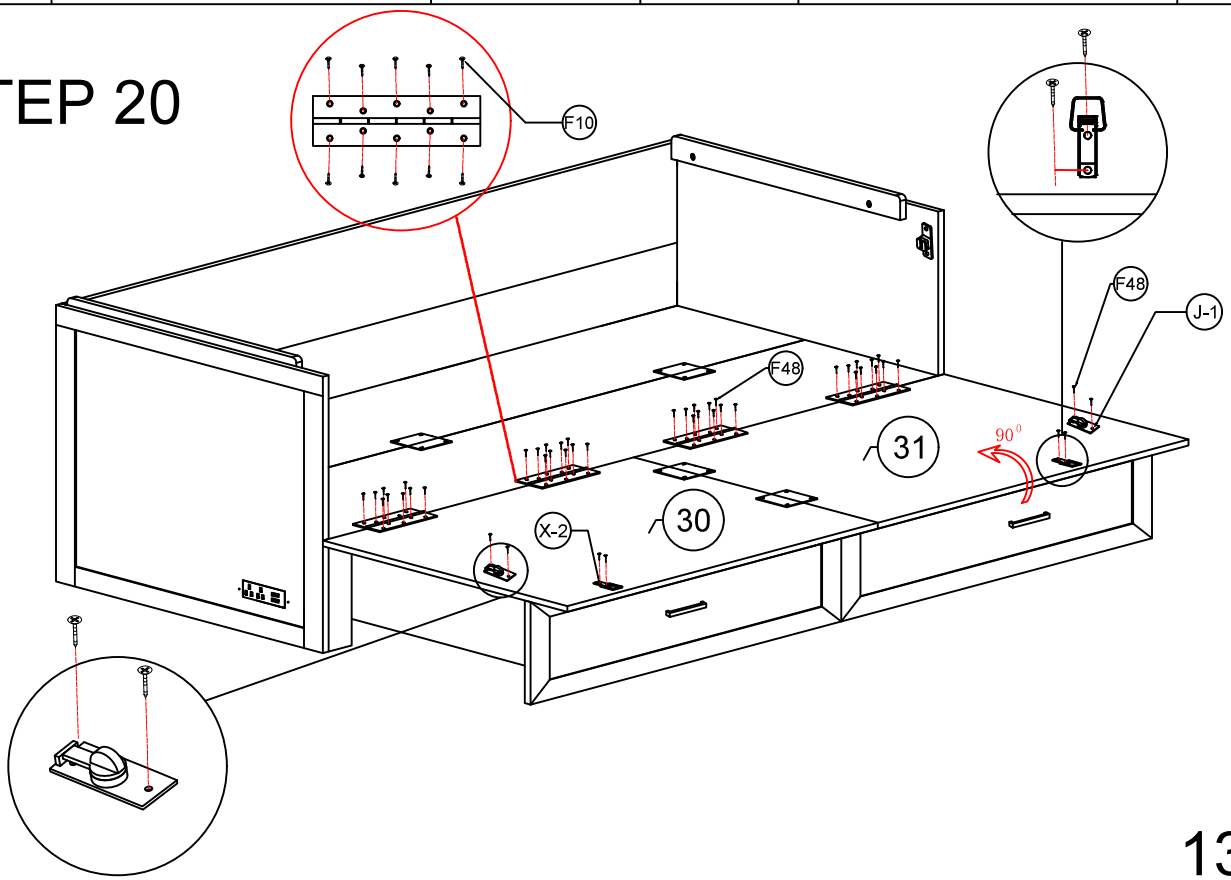


STEP 21

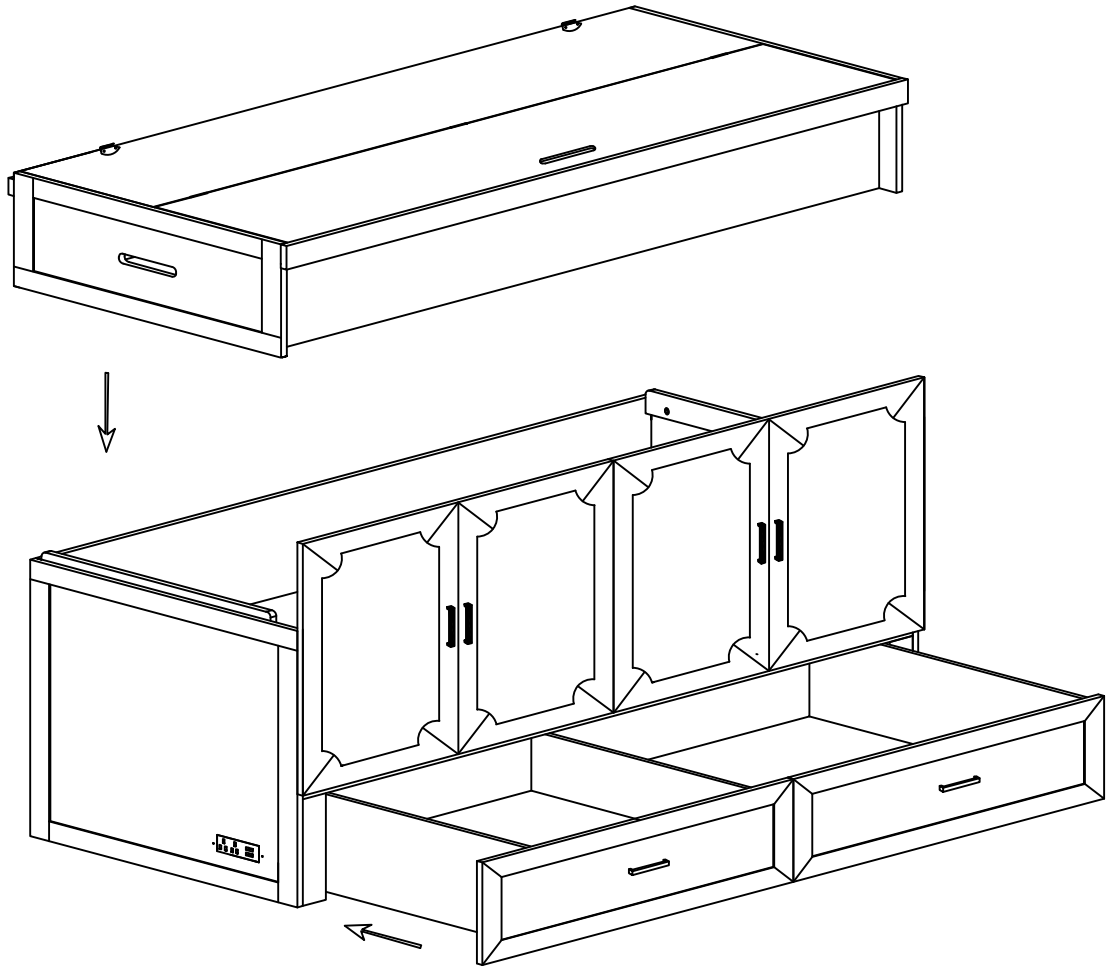


STEP 22

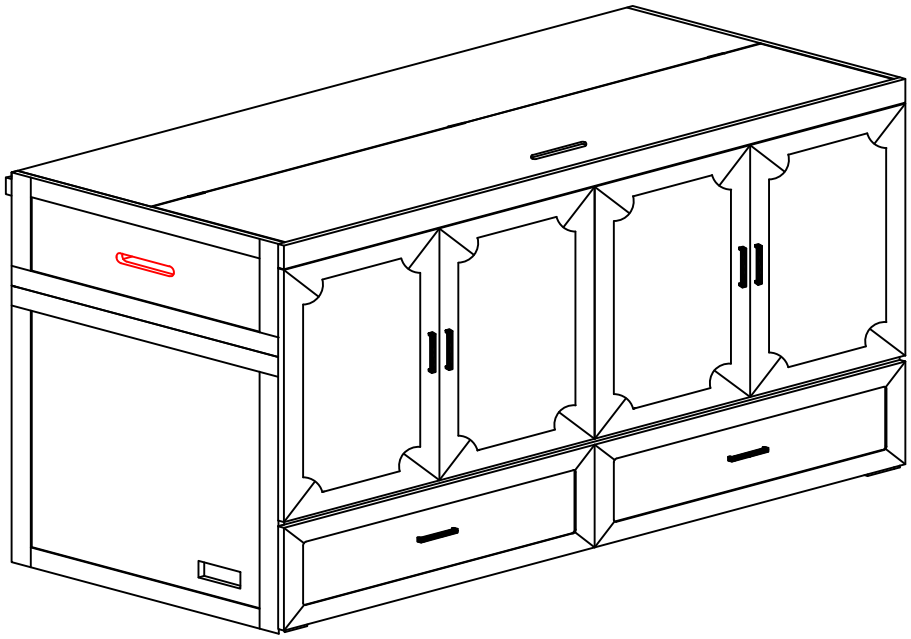


1

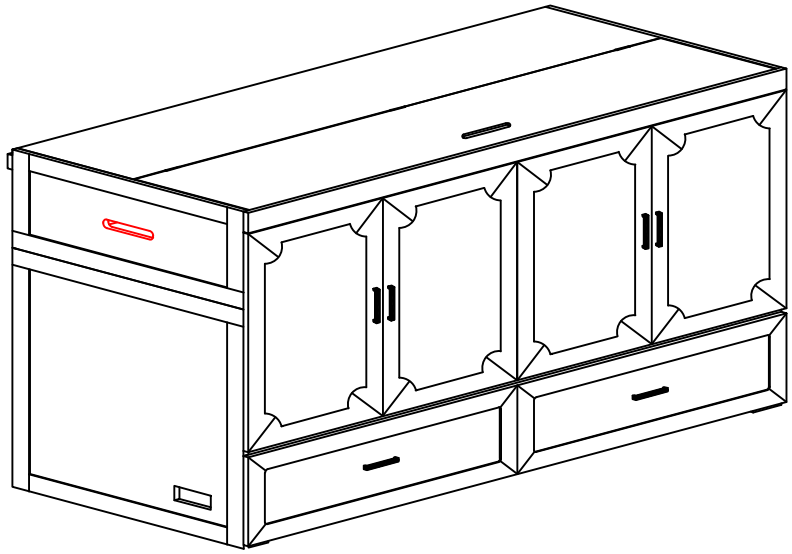


2

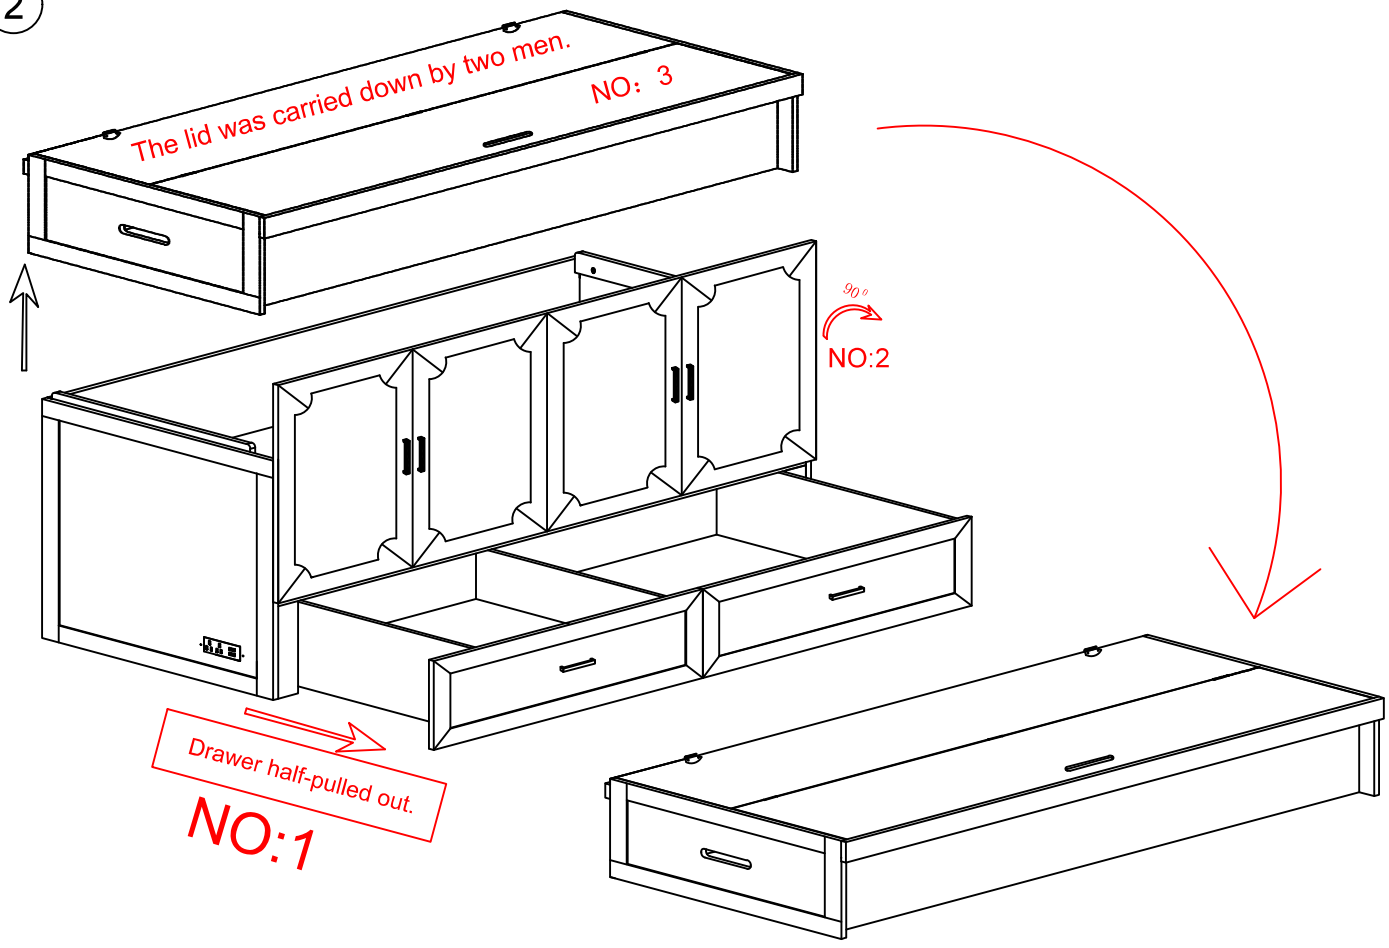
The lid was carried down by two men.
NO：3
90°
NO:2
Drawer half-pulled out.
NO:1

3

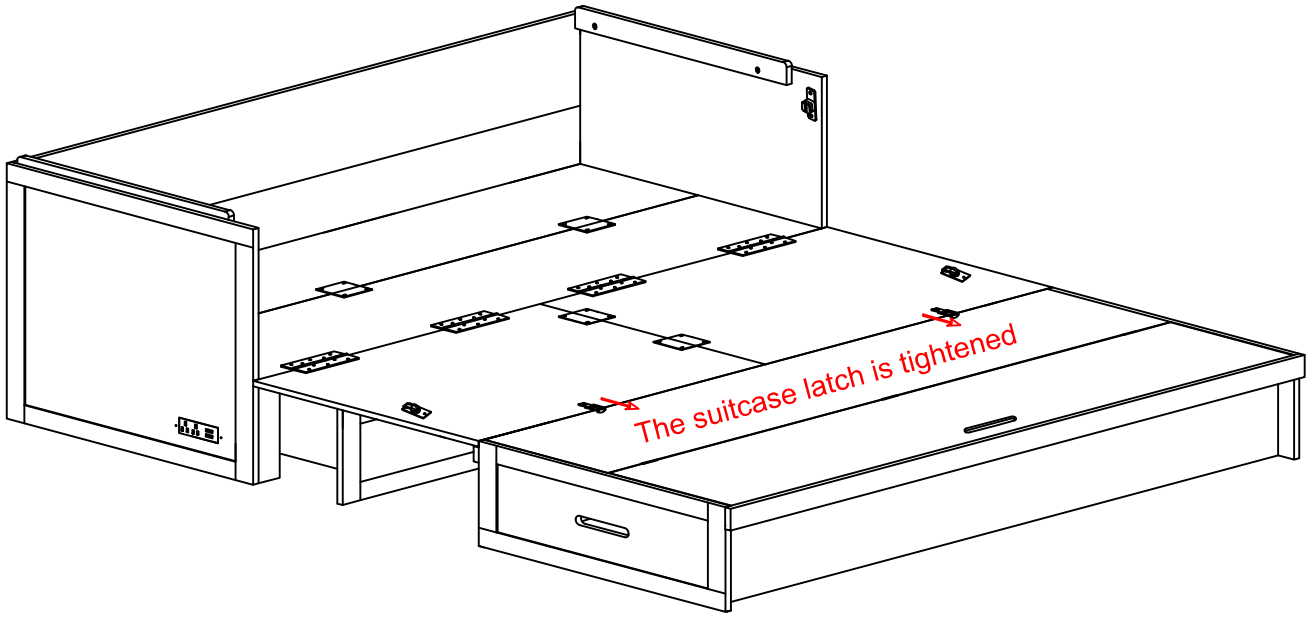

4

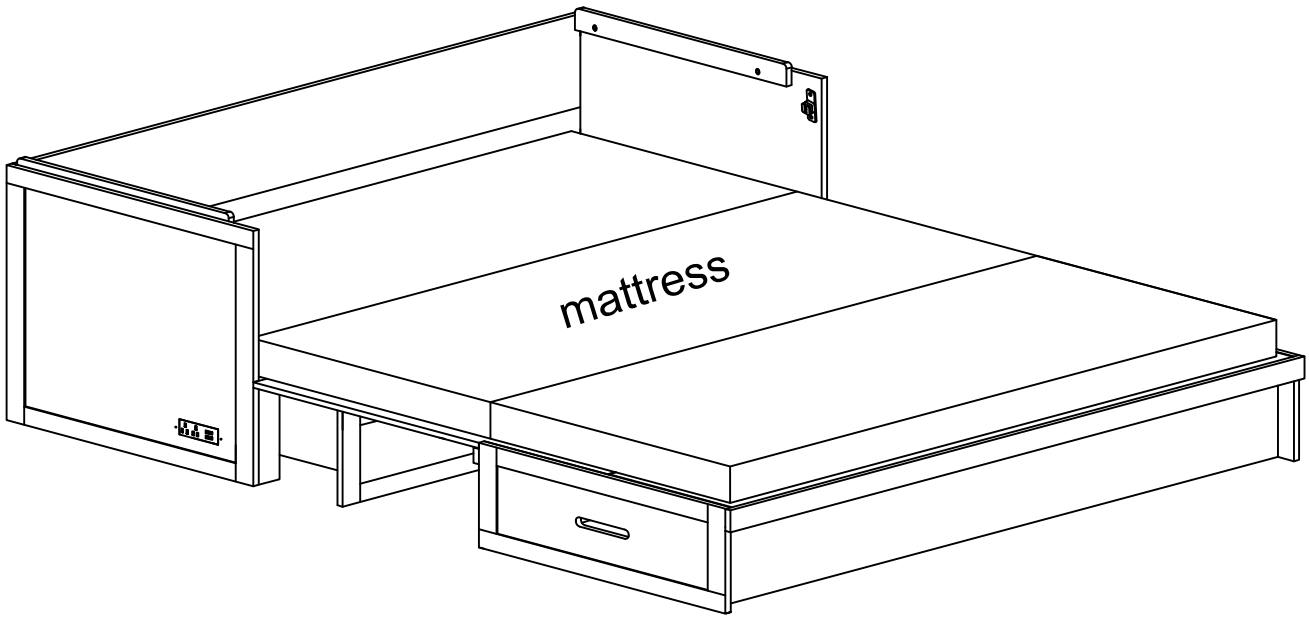

Operating Instructions

WARNING: HEAVY UNIT - TWO-PERSON OPERATION REQUIRED.

