






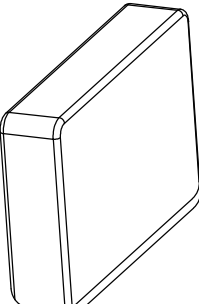
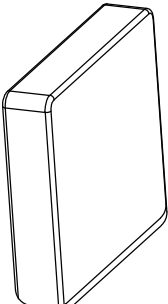


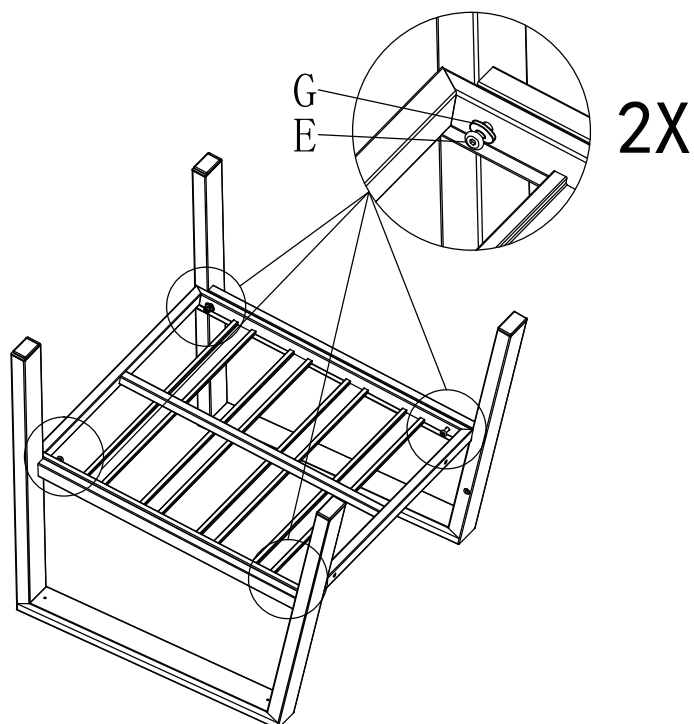
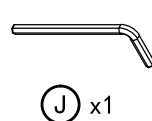

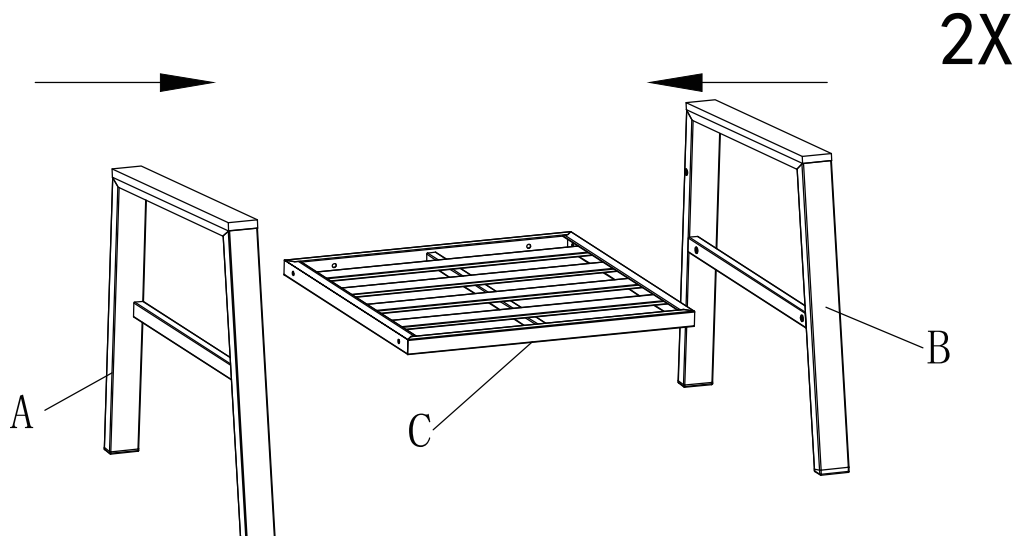
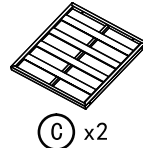
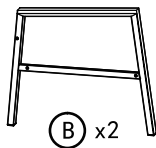
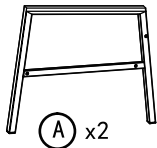


2 Pcs Patio Aluminum Sofa

Assembly Instructions

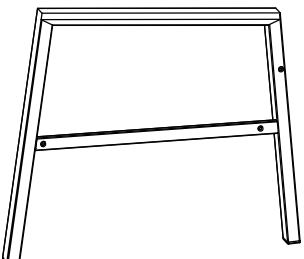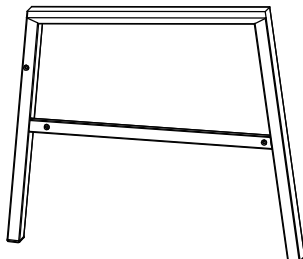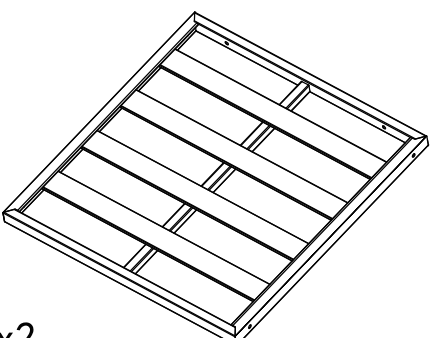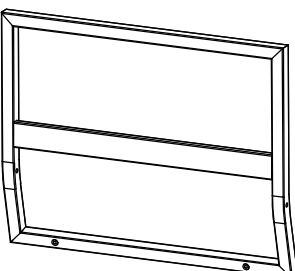


	<div>  <p>(A) x2</p> </div> <div>  <p>(B) x2</p> </div>
	<div>  <p>(C) x2</p> </div> <div>  <p>(D) x2</p> </div>
	<div>  <p>(E) x8 M6*28</p> </div> <div>  <p>(F) x8 M6*35</p> </div>
	<div>  <p>(G) x16</p> </div> <div>  <p>(H) x2</p> </div>
	<div>  <p>(I) x2</p> </div> <div>  <p>(J) x1</p> </div>
	
1	





2 Warm Tip: Please don't tighten screws before finish assemble.

Ⓓ x2

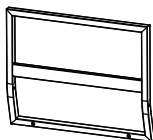

D

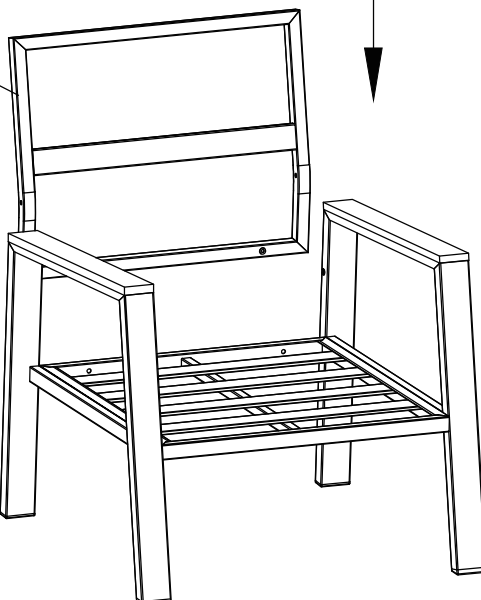

2X




M6*35


Ⓕ x8




Ⓖ x8






Ⓙ x1

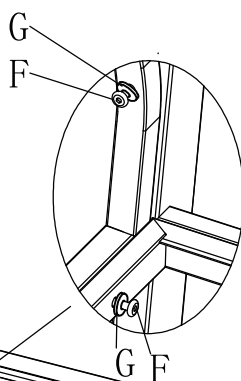


2X

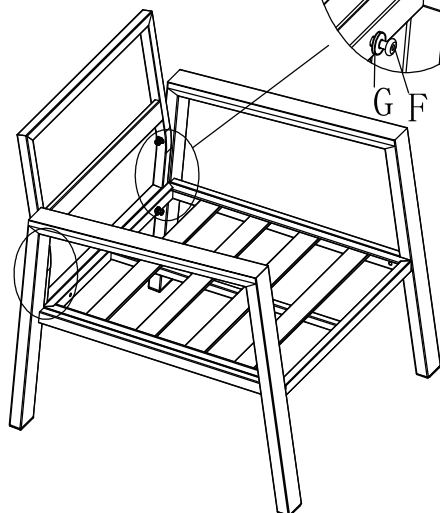

3 Warm Tip: Tighten all screws before using.

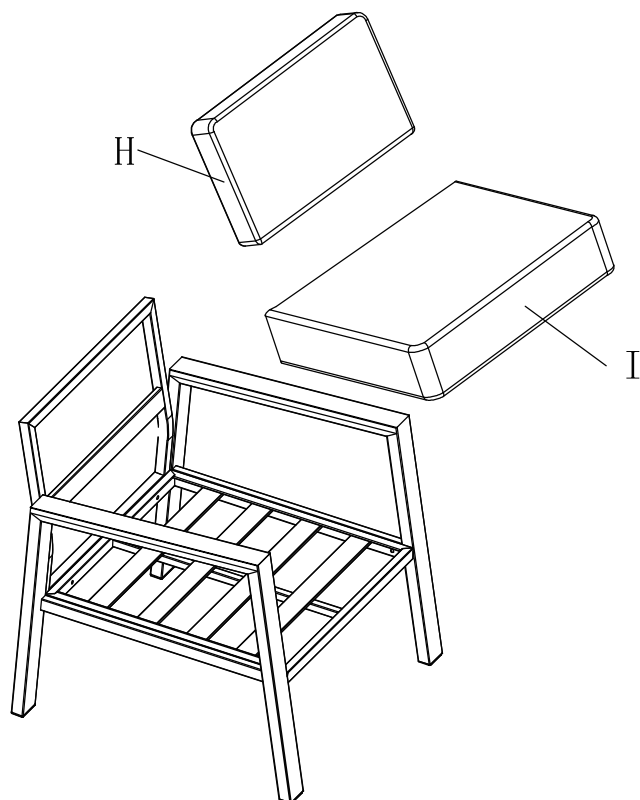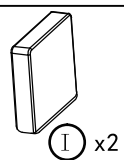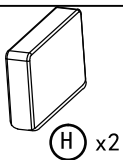

2X

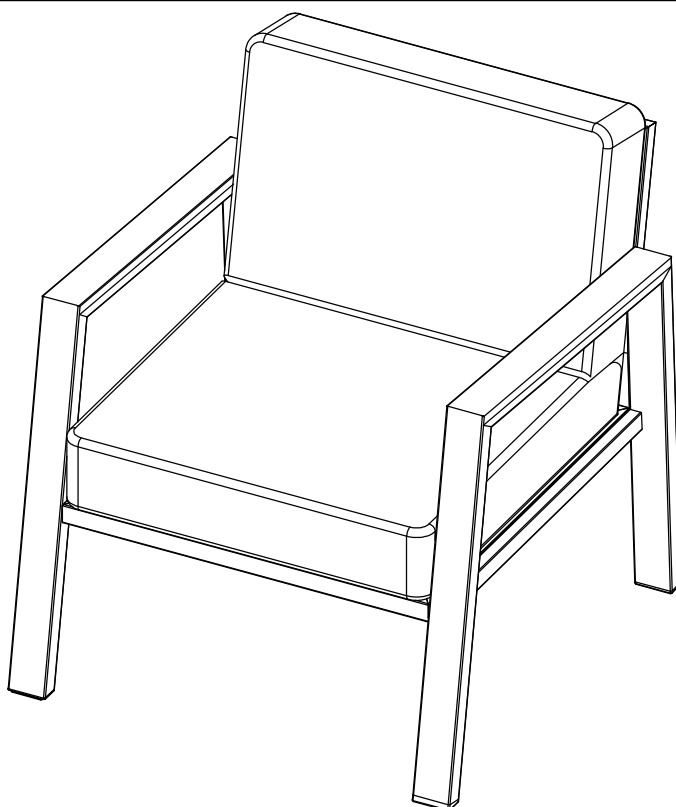

2X