


Installation & Assembly

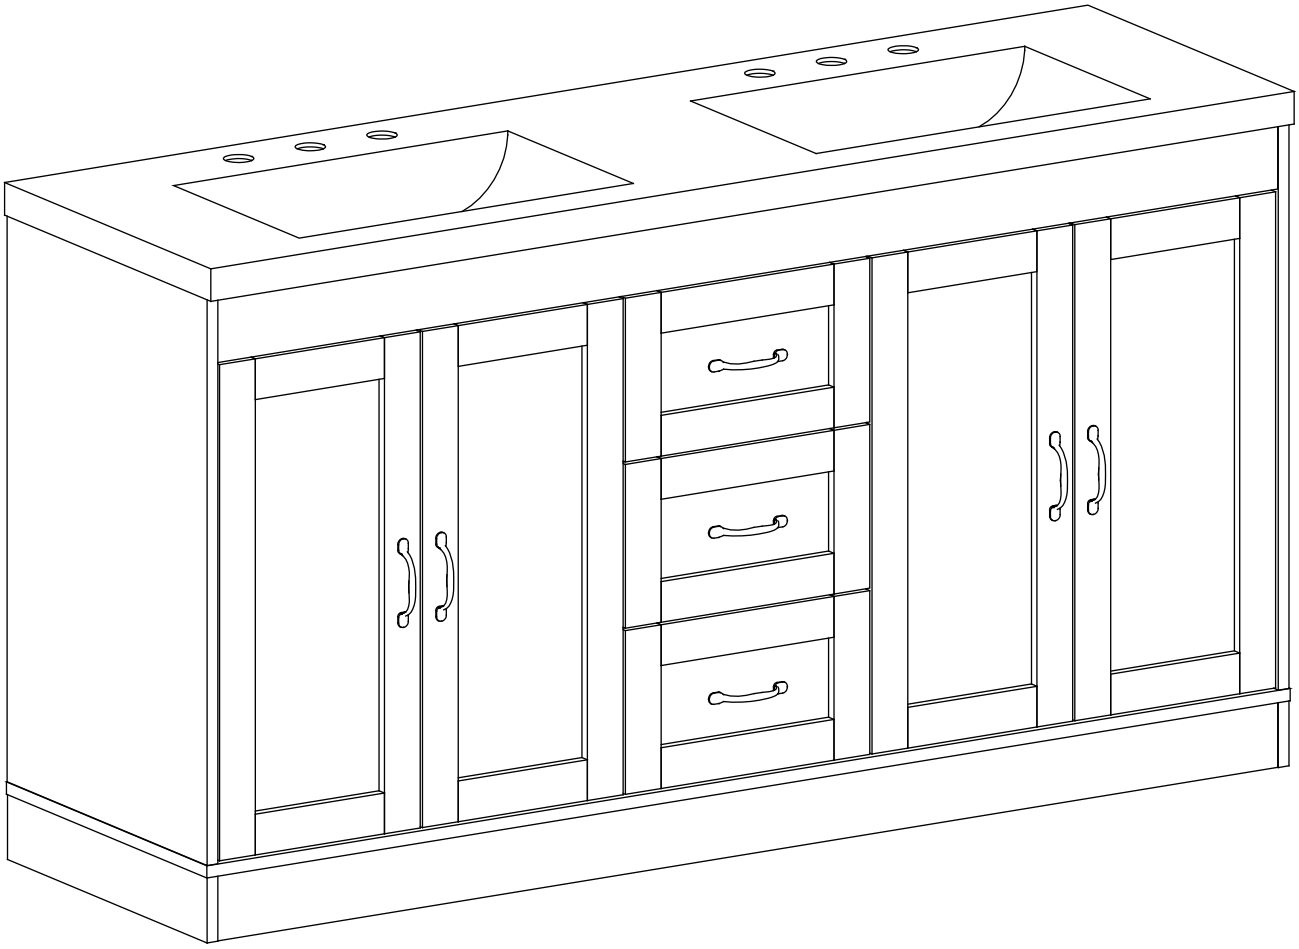


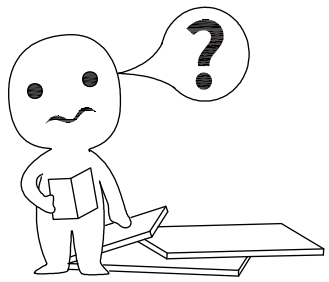

IMPORTANT INFORMATION!


please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

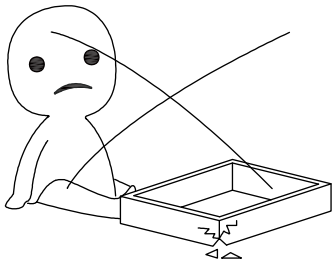


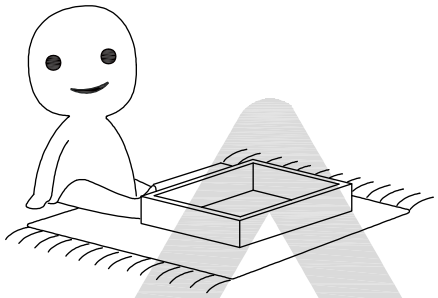

AVOID SCRATCHES!


In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

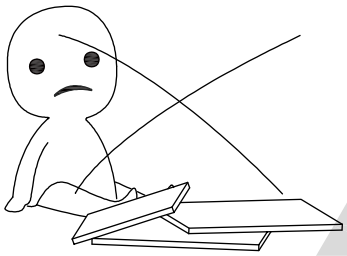

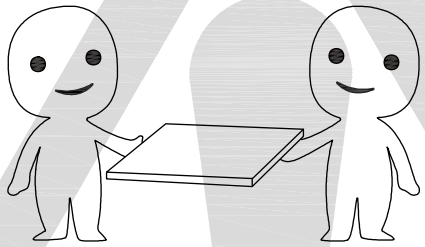

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

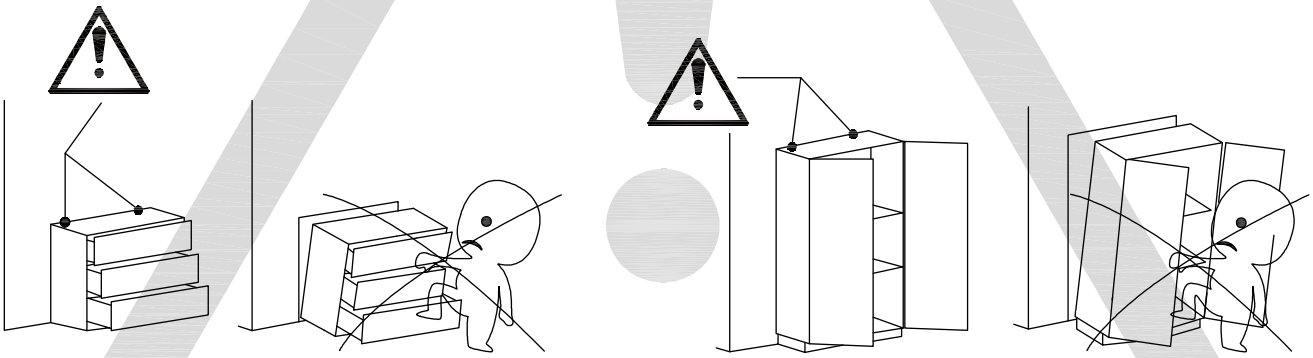

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

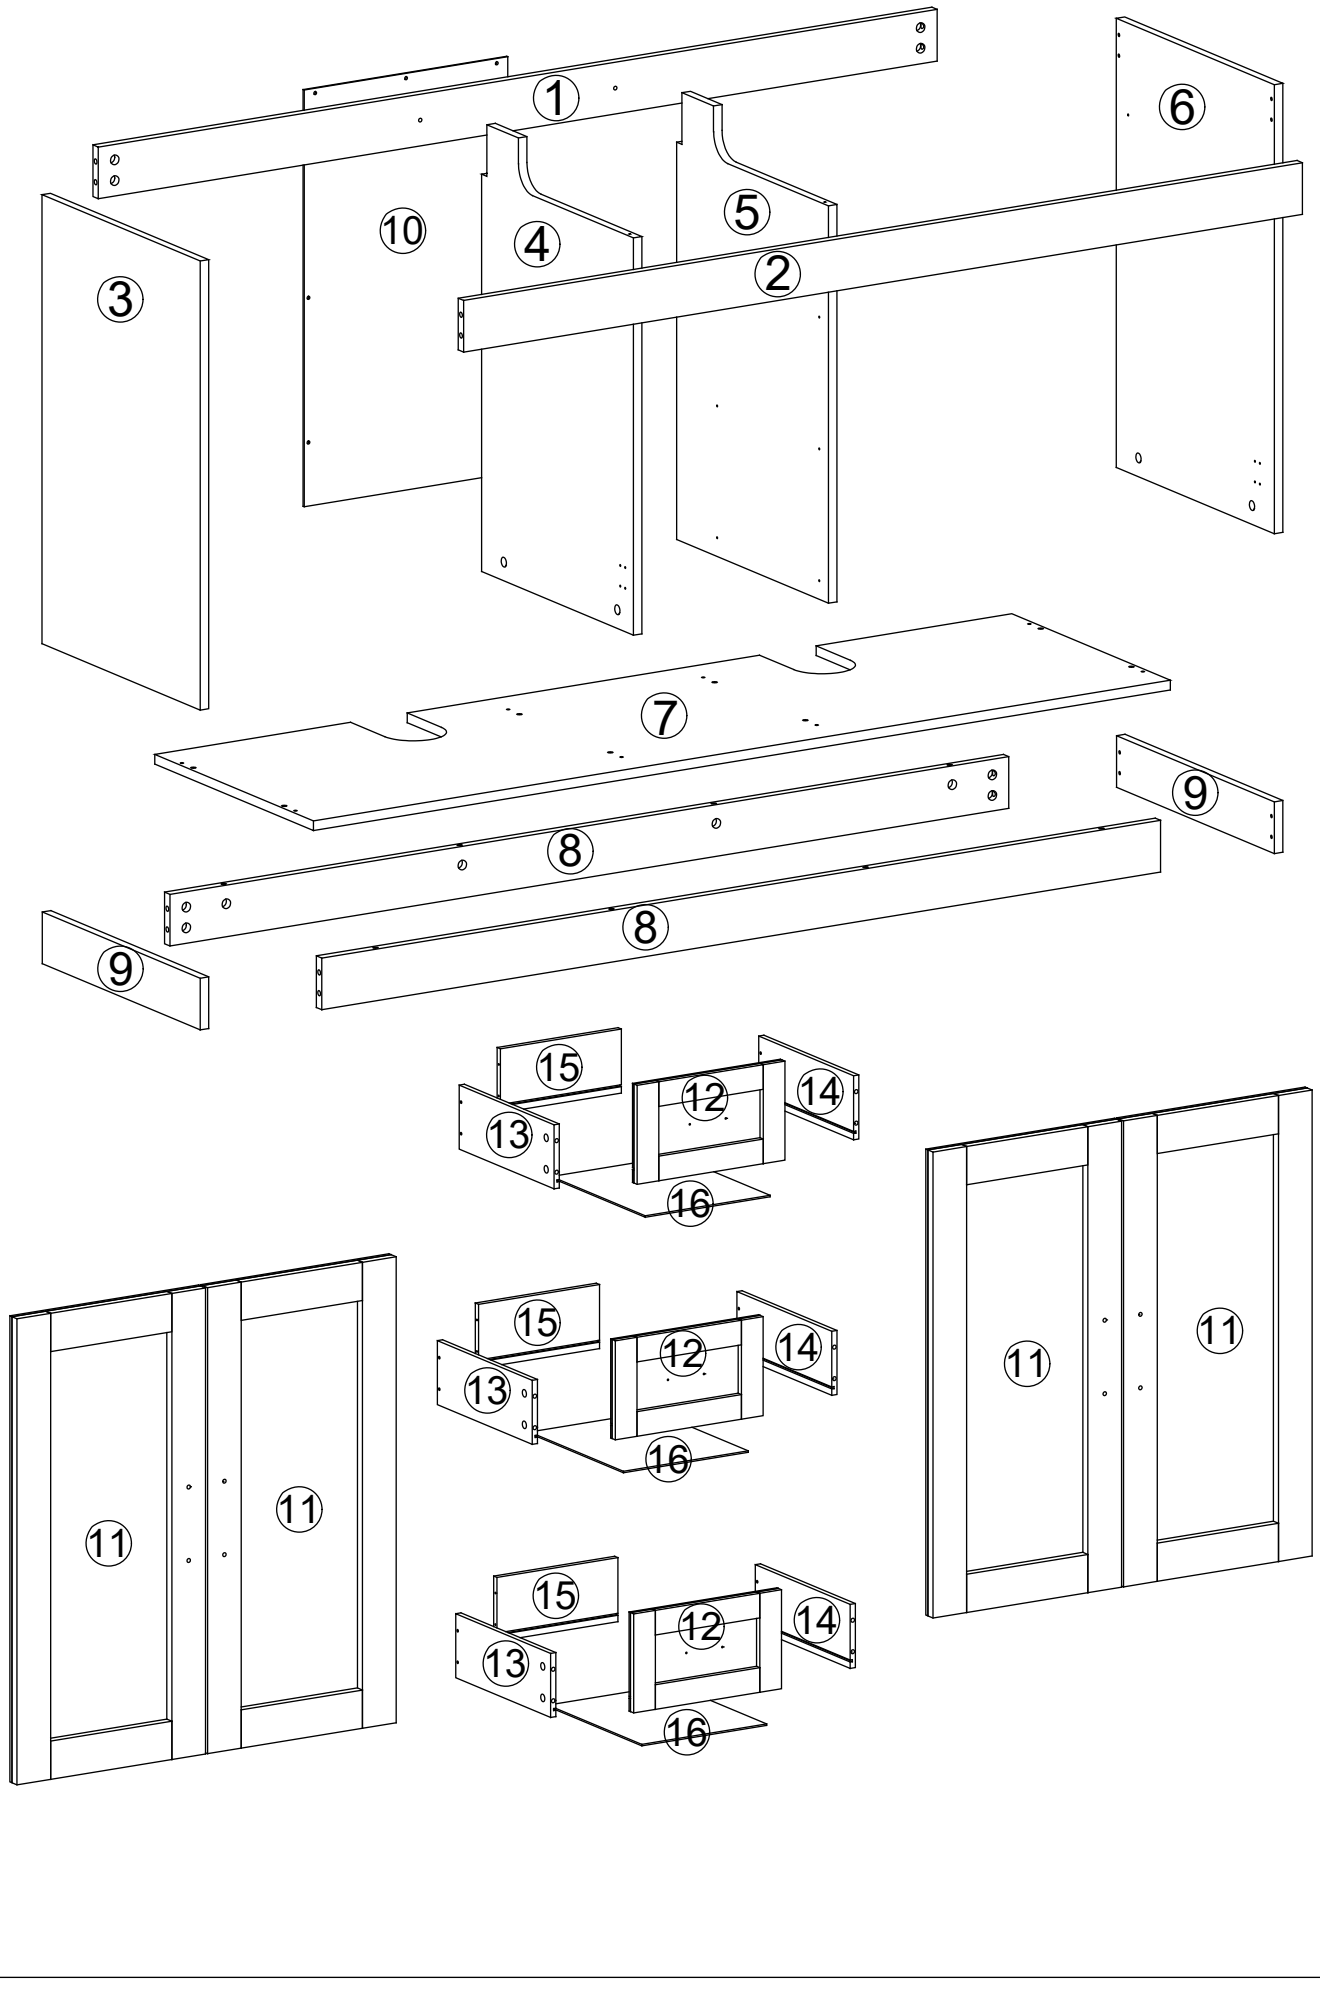
1
6
10
4
5
3
2
7
9
8
8
9
15
12
14
13
16
11
11
15
12
14
13
16
11
11
15
12
14
13
16


① x1




② x1




③ x1




④ x1




⑤ x1




⑥ x1

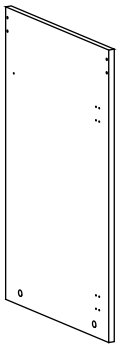


⑦ x1




⑧ x2

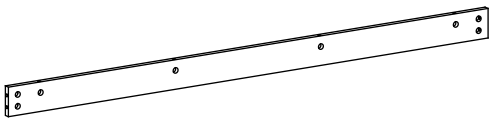


⑨ x2

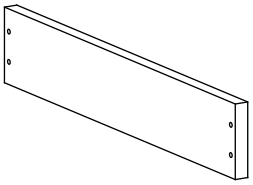


⑩ x1

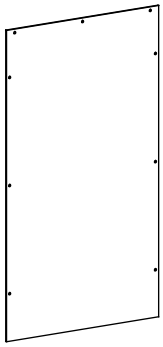


⑪ x4

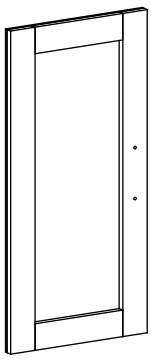


⑫ x3

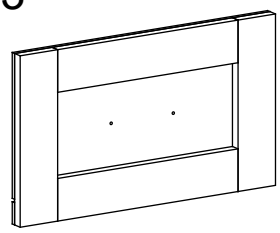


⑬ x3

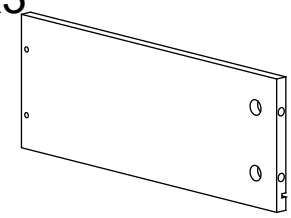


⑭ x3















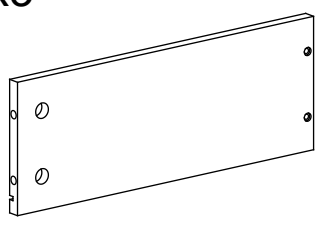


⑮ x3

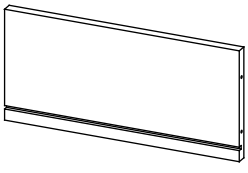


⑯ x3

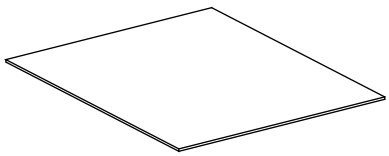


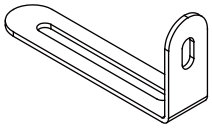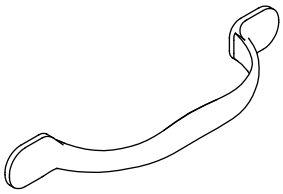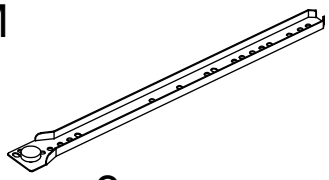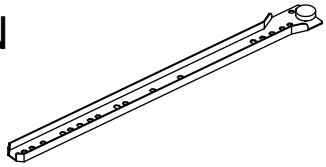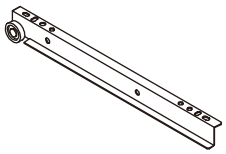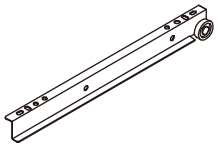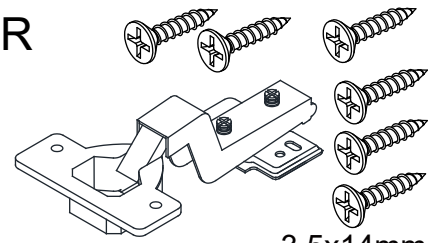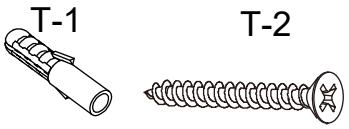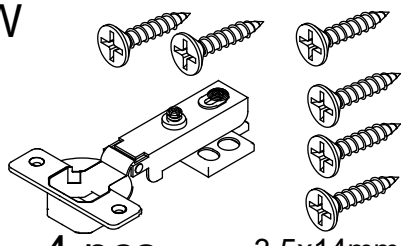A  Ø6x35mm 44+2 pcs	B  Ø15x9.5mm 44+2 pcs	C  Ø8x30mm 8 pcs
D  3.5x12mm 30+2 pcs	E  2 pcs	F  7 pcs
G  14+2 pcs	H  Ø3.5x30mm 12+2 pcs	J  5x40mm x 2 pcs
K  M4x20 mm 8 pc	L  M4×8 mm 6 pc	M  3 pcs
N  3 pcs	P  3 pcs	Q  3 pcs
R  3.5x14mm 4 pcs	S  2 pcs	T T-1 T-2  2 pcs
U  2 pcs	V  44+2 pcs	W  4 pcs 3.5x14mm


STEP 1

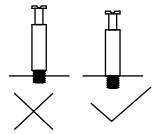

M	N	D
		3.5x12mm
x 3 pcs	x 3 pcs	x 12 pcs




Please assembly screws in the holes marked with arrows




Please assembly screws in the holes marked with arrows

STEP 2

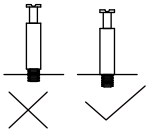


A	E	G
x 8 pcs	x 2 pcs	x 2 pcs


STEP 3

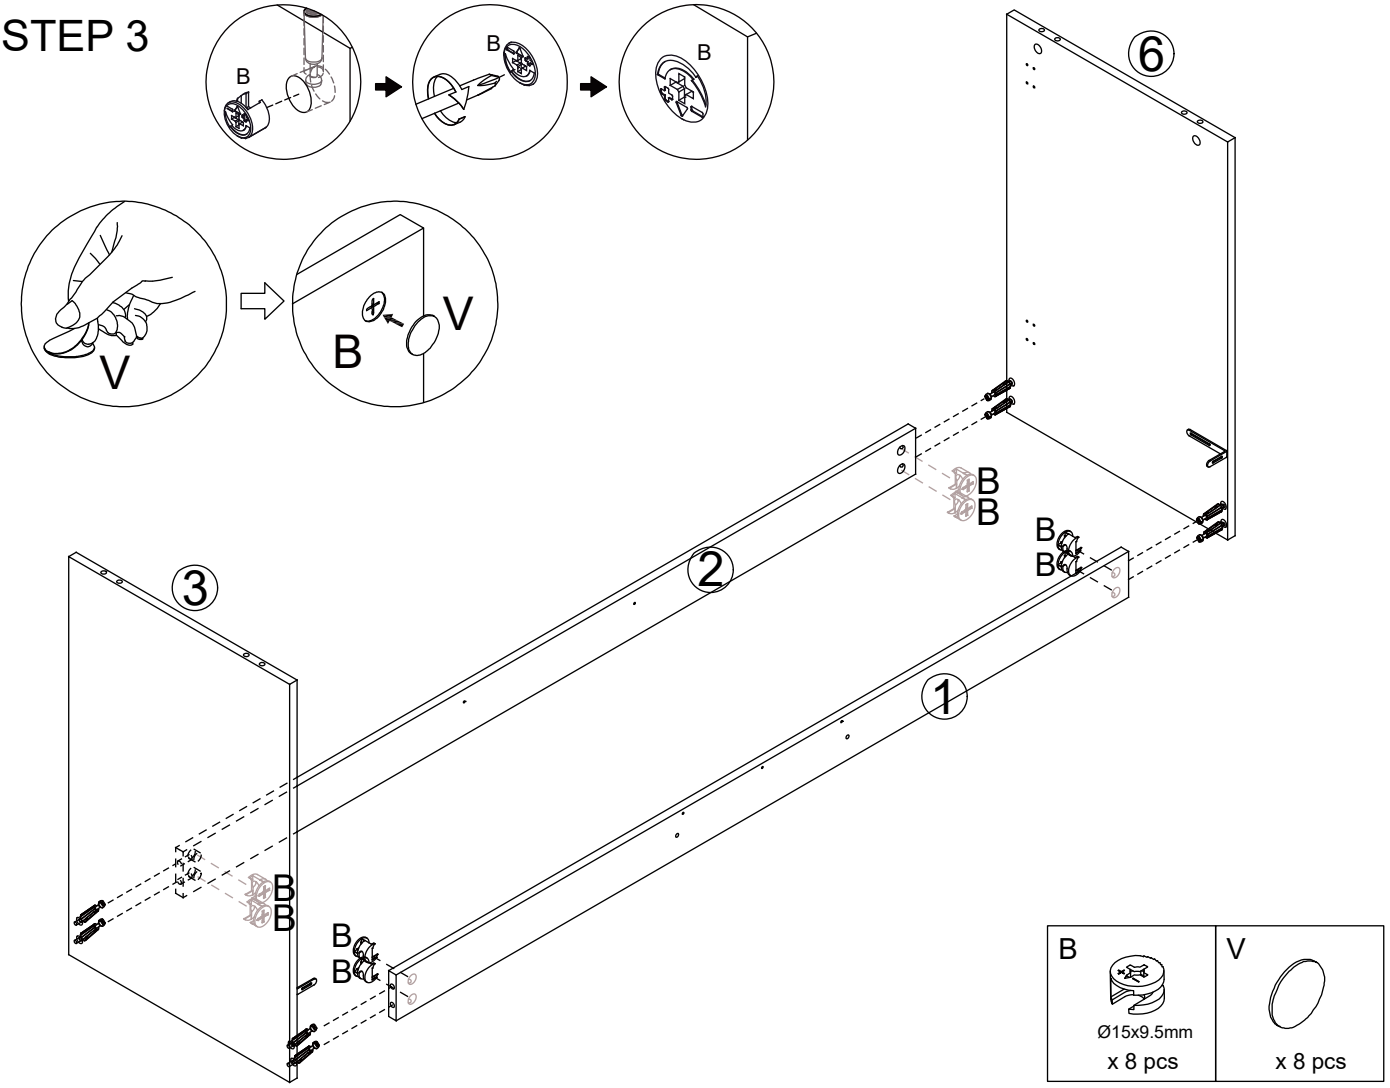

STEP 4

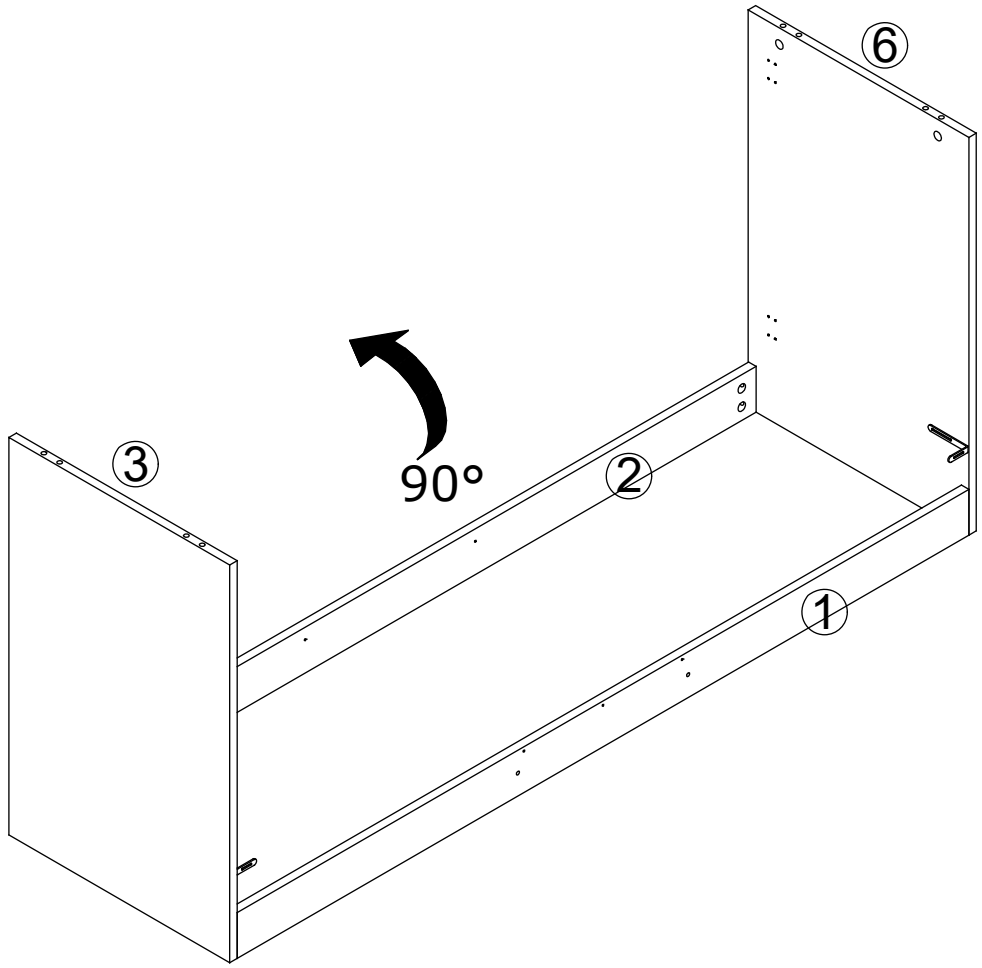


STEP 5

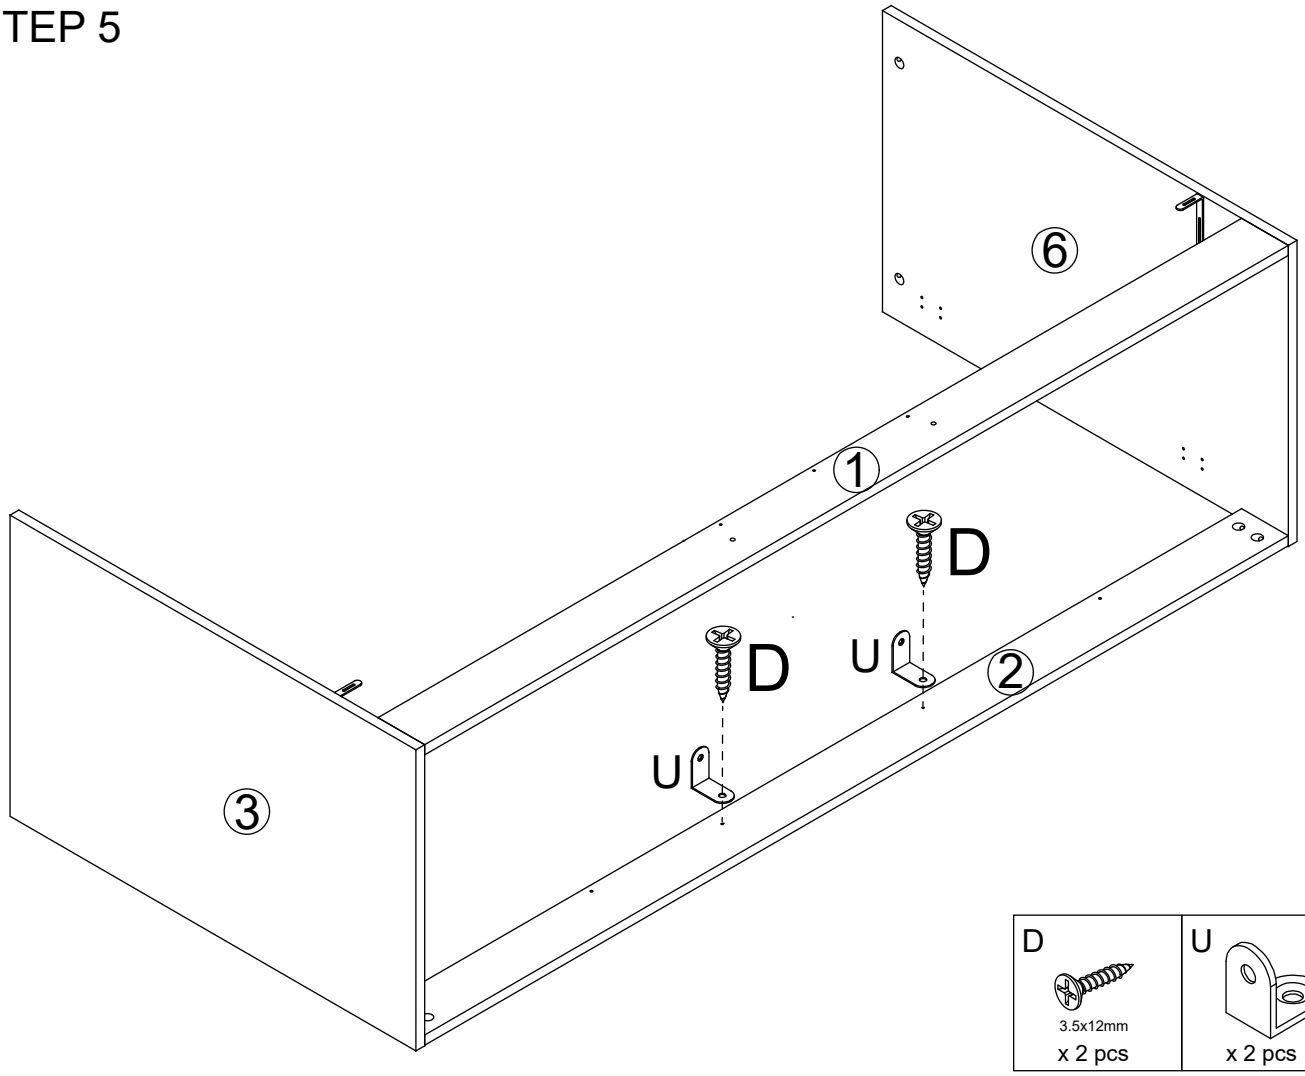



D	U
3.5x12mm x 2 pcs	x 2 pcs

STEP 6

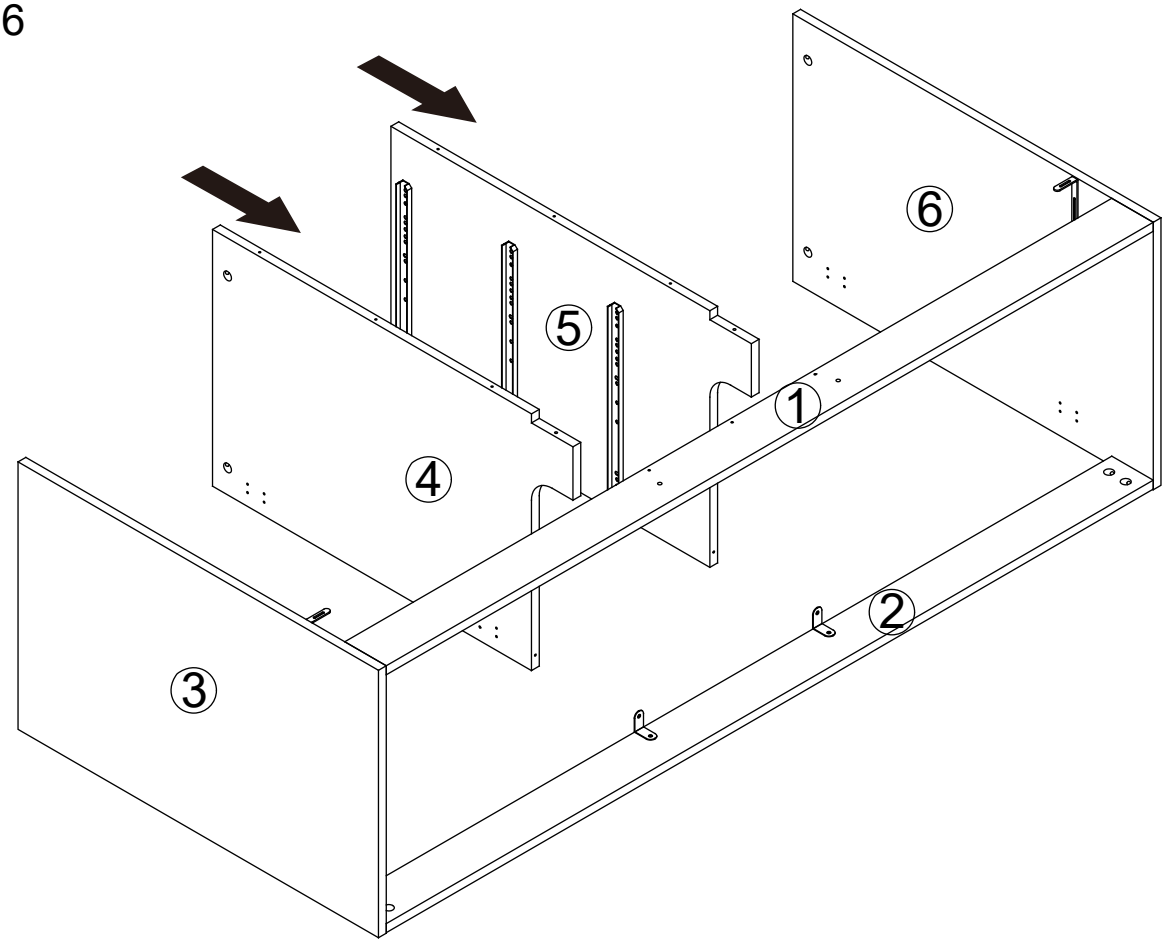



STEP 7

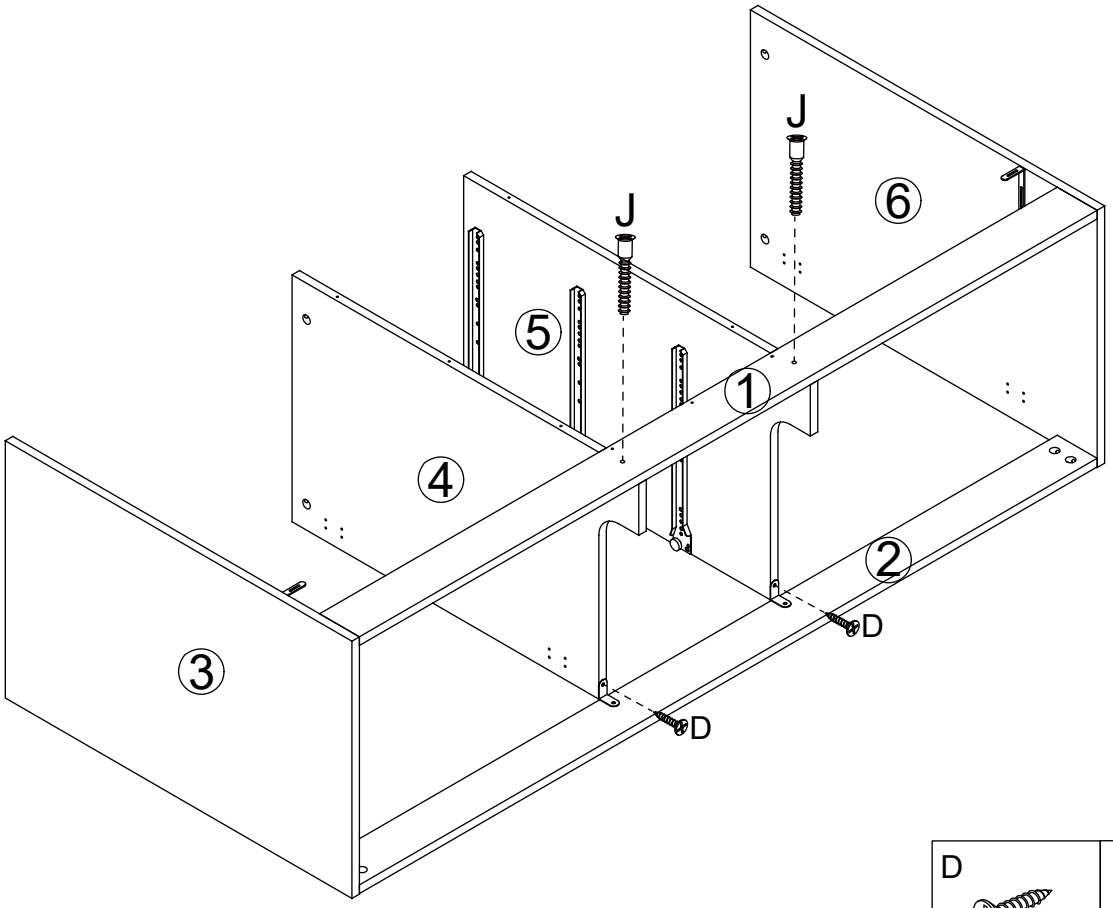

D	J
 3.5x12mm x 2 pcs	 x 2 pcs


STEP 8

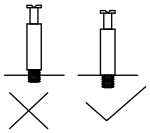

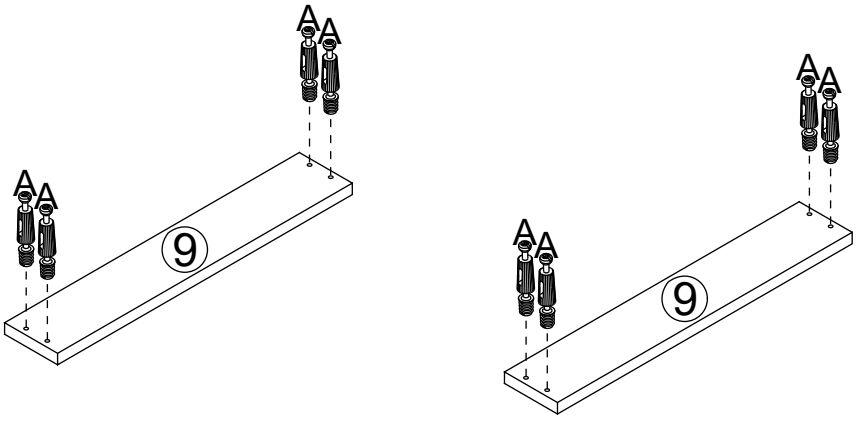


A
 x 8 pcs


STEP 9

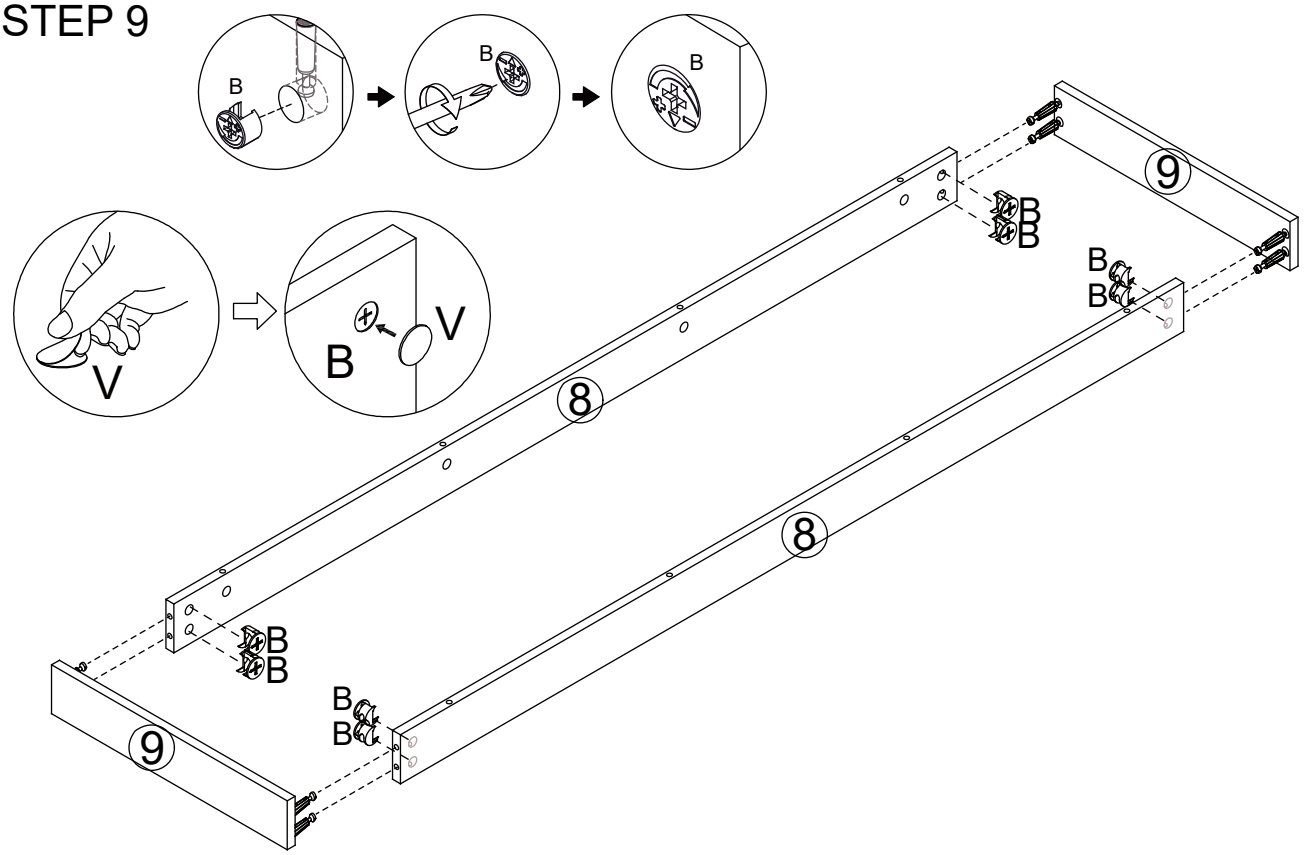


B	V
 Ø15x9.5mm x 8 pcs	 x 8 pcs


STEP 10

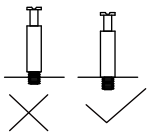

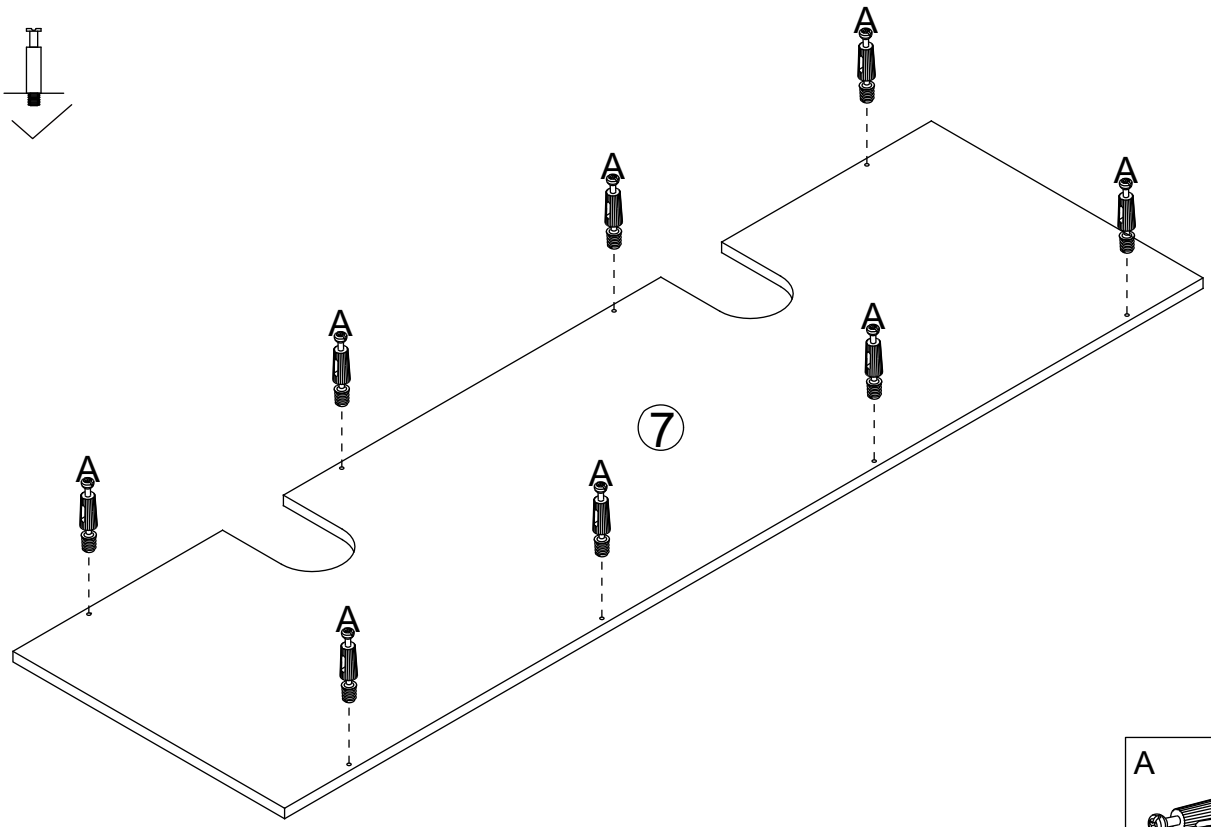


A
 x 8 pcs


STEP 11

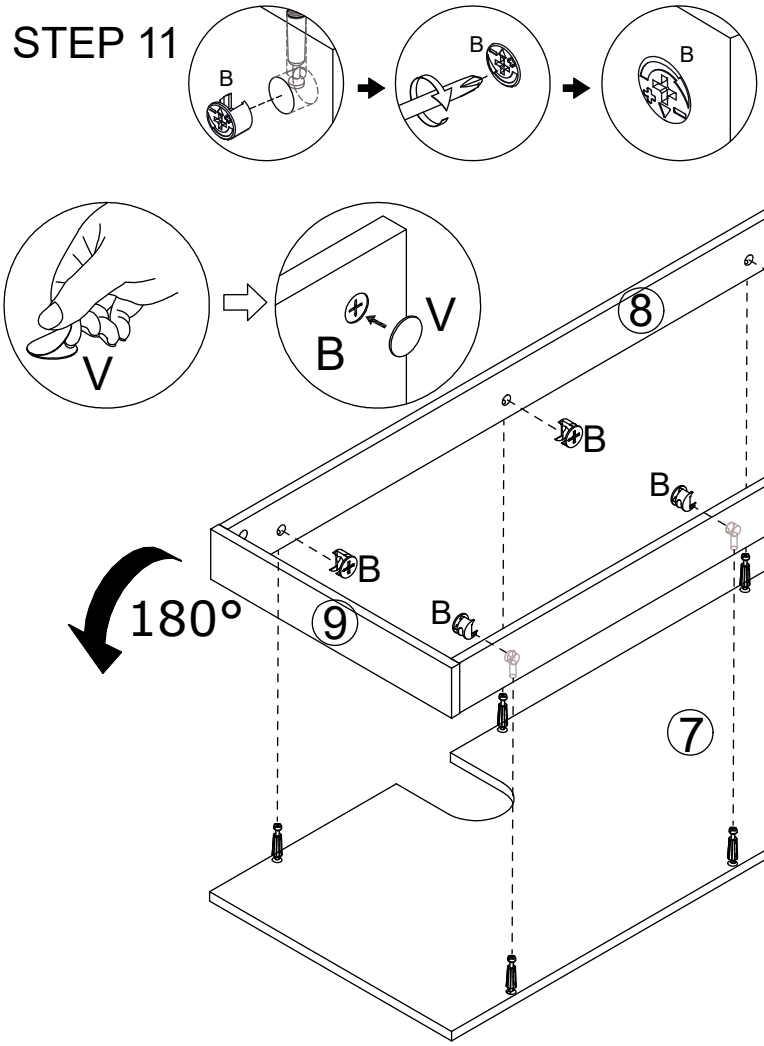

B	V
Ø15x9.5mm x 8 pcs	x 8 pcs


STEP 12

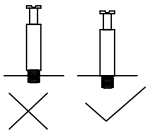

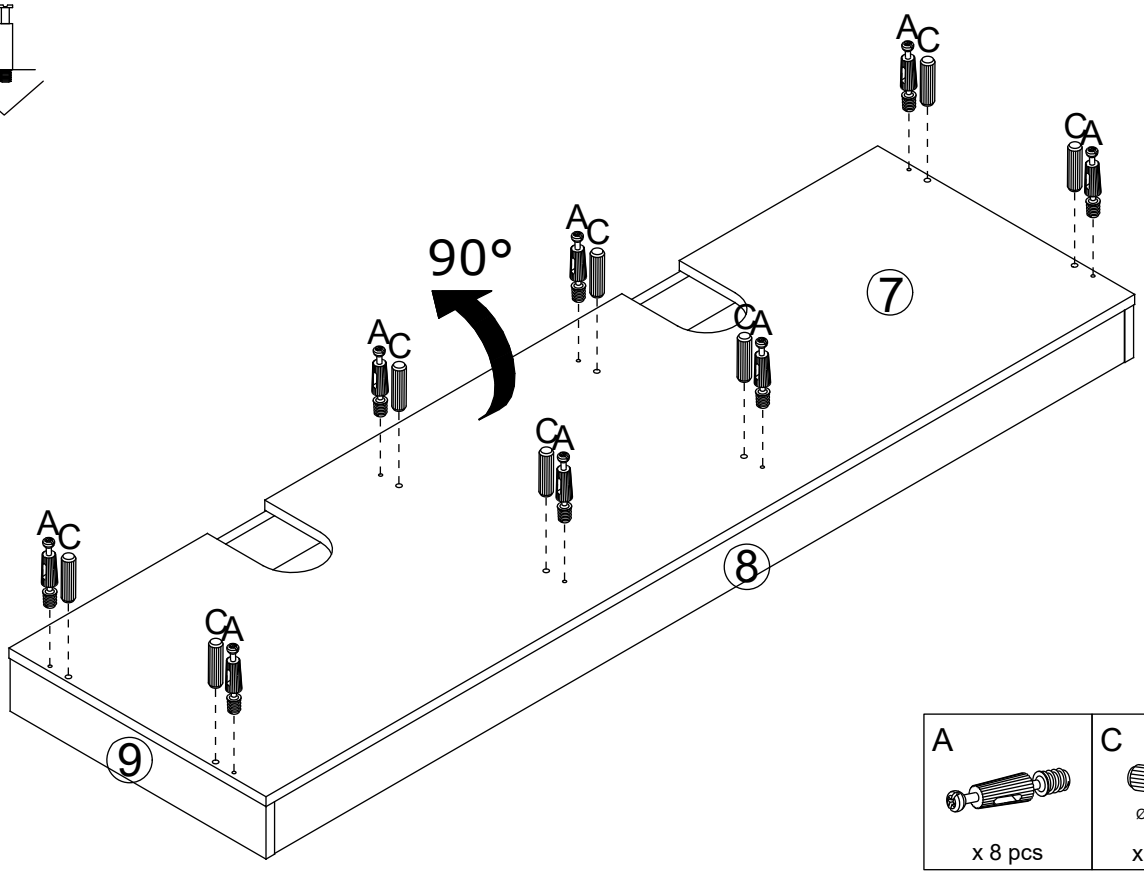


A	C
x 8 pcs	Ø8x30mm x 8 pcs

STEP 13

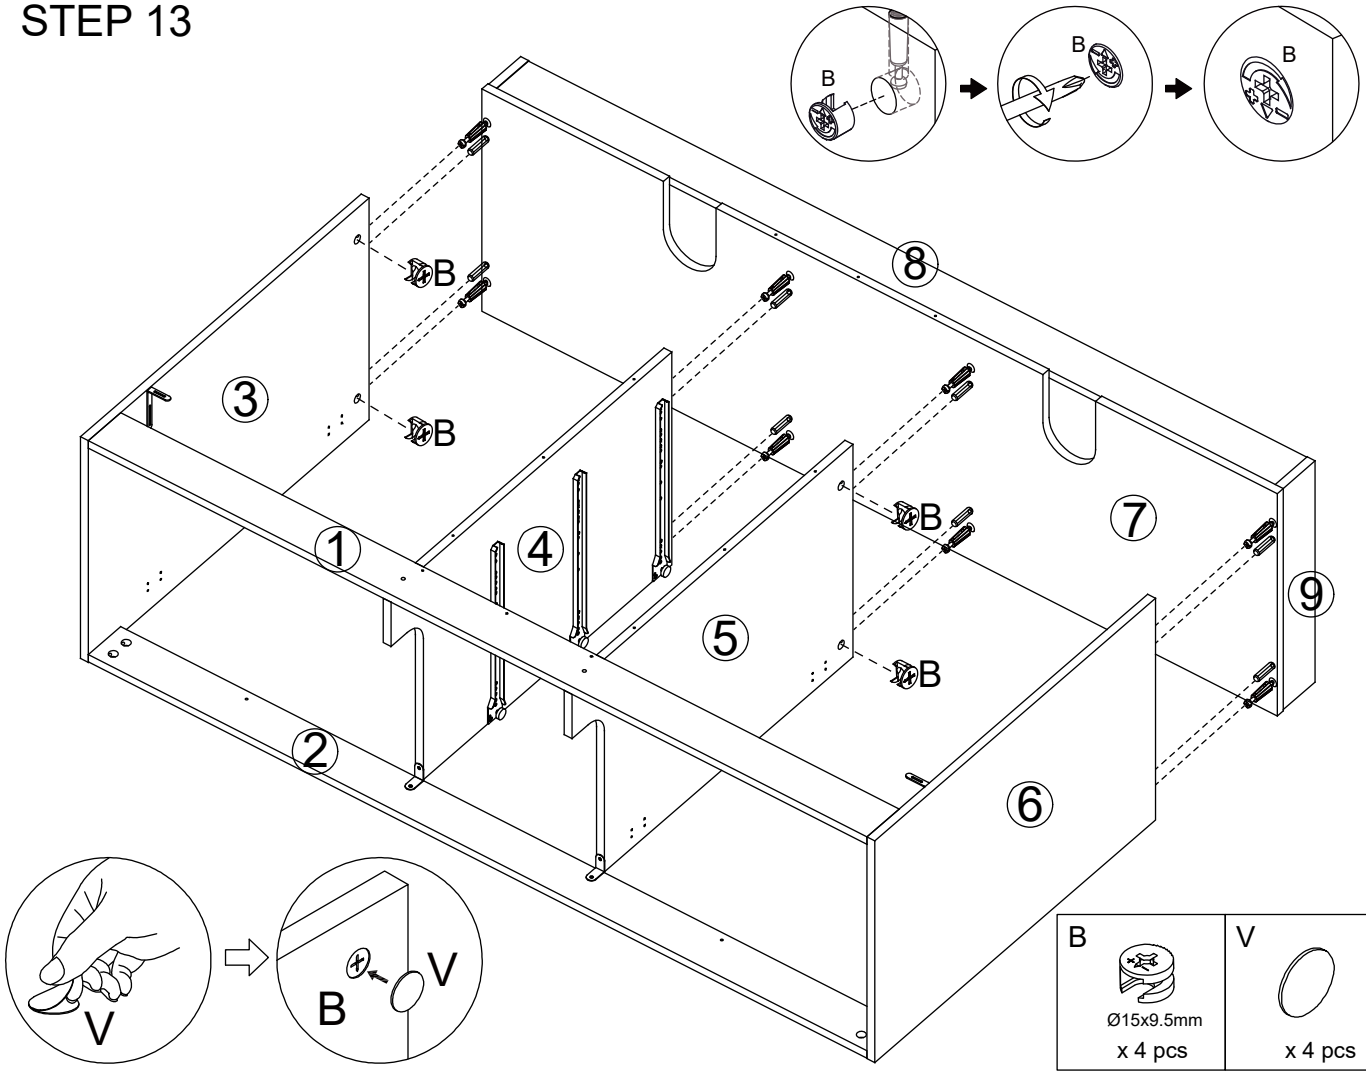


B	V
Ø15x9.5mm x 4 pcs	x 4 pcs

STEP 14

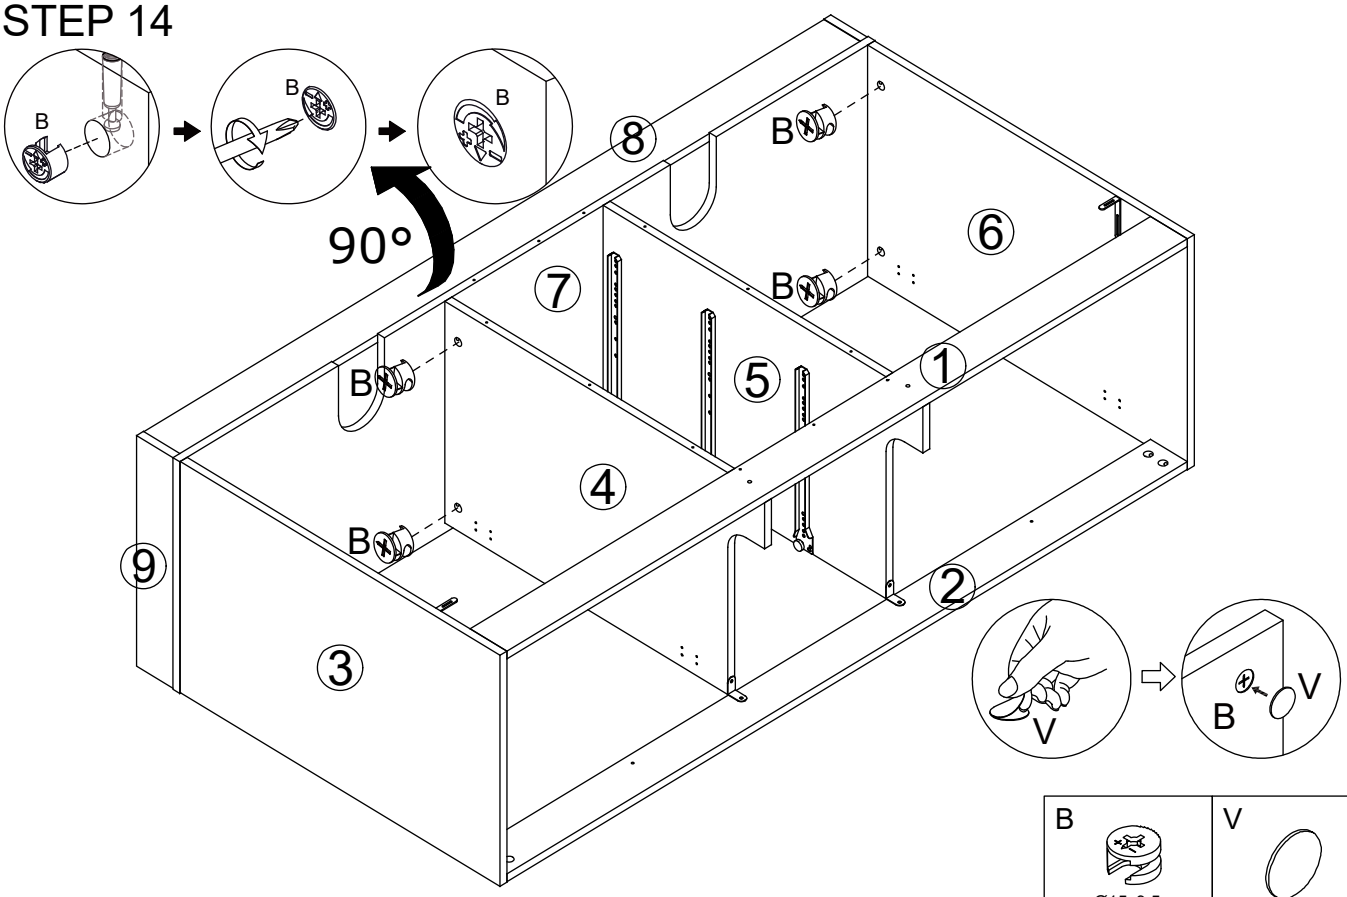


B	V
Ø15x9.5mm x 4 pcs	x 4 pcs

STEP 15

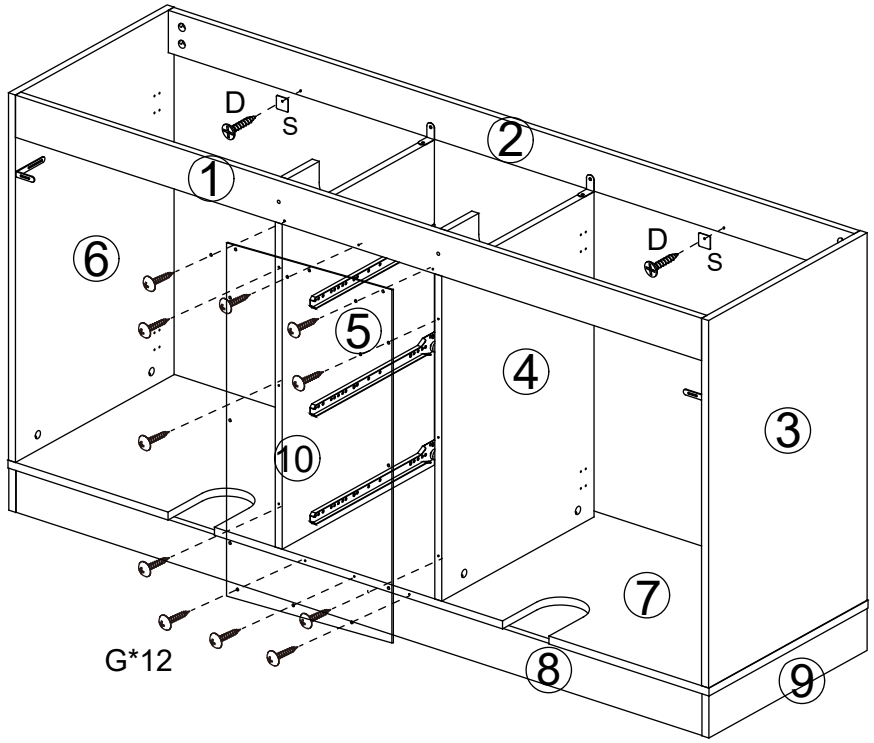


G	D	S
x 12 pcs	3.5x12mm x 2 pcs	x 2 pcs

STEP 16

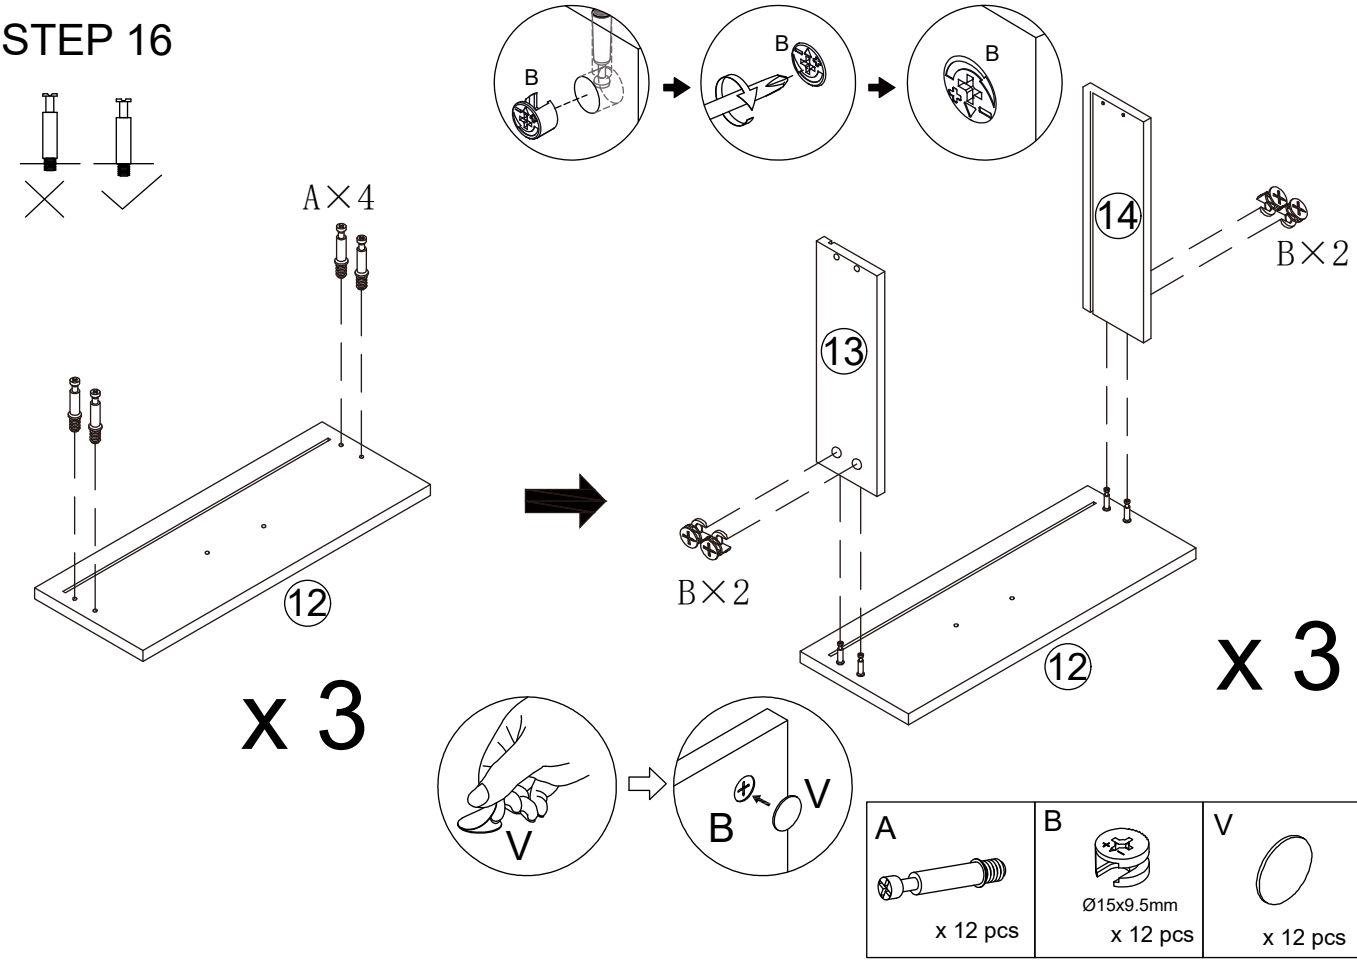


A	B	V
x 12 pcs	Ø15x9.5mm x 12 pcs	x 12 pcs

STEP 17

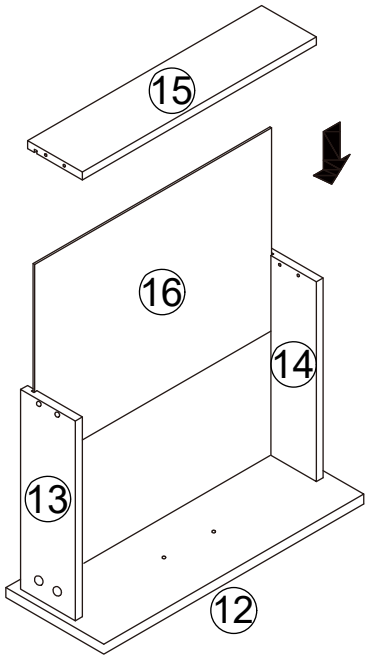


x 3

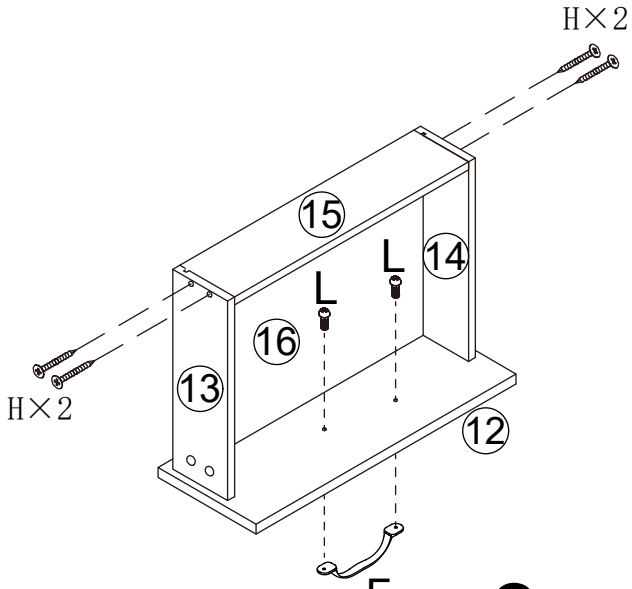


x 3

H	F	L
Ø3.5x30mm x 12 pcs	x 3 pcs	x 6 pcs

STEP 18

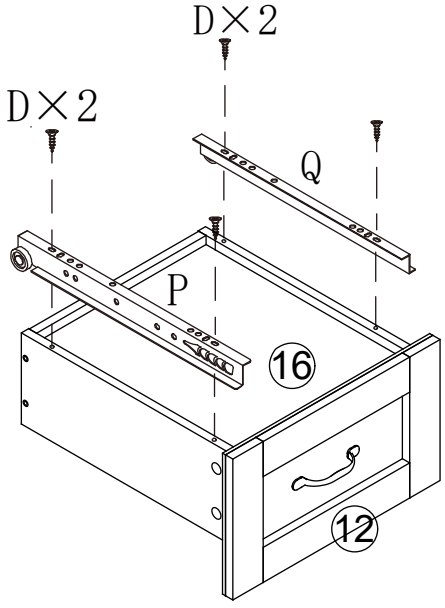


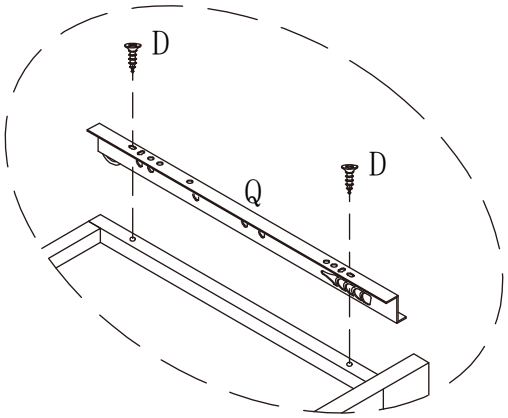

x 3


Q	P	D
x 3 pcs	x 3 pcs	x 12 pcs

STEP 19

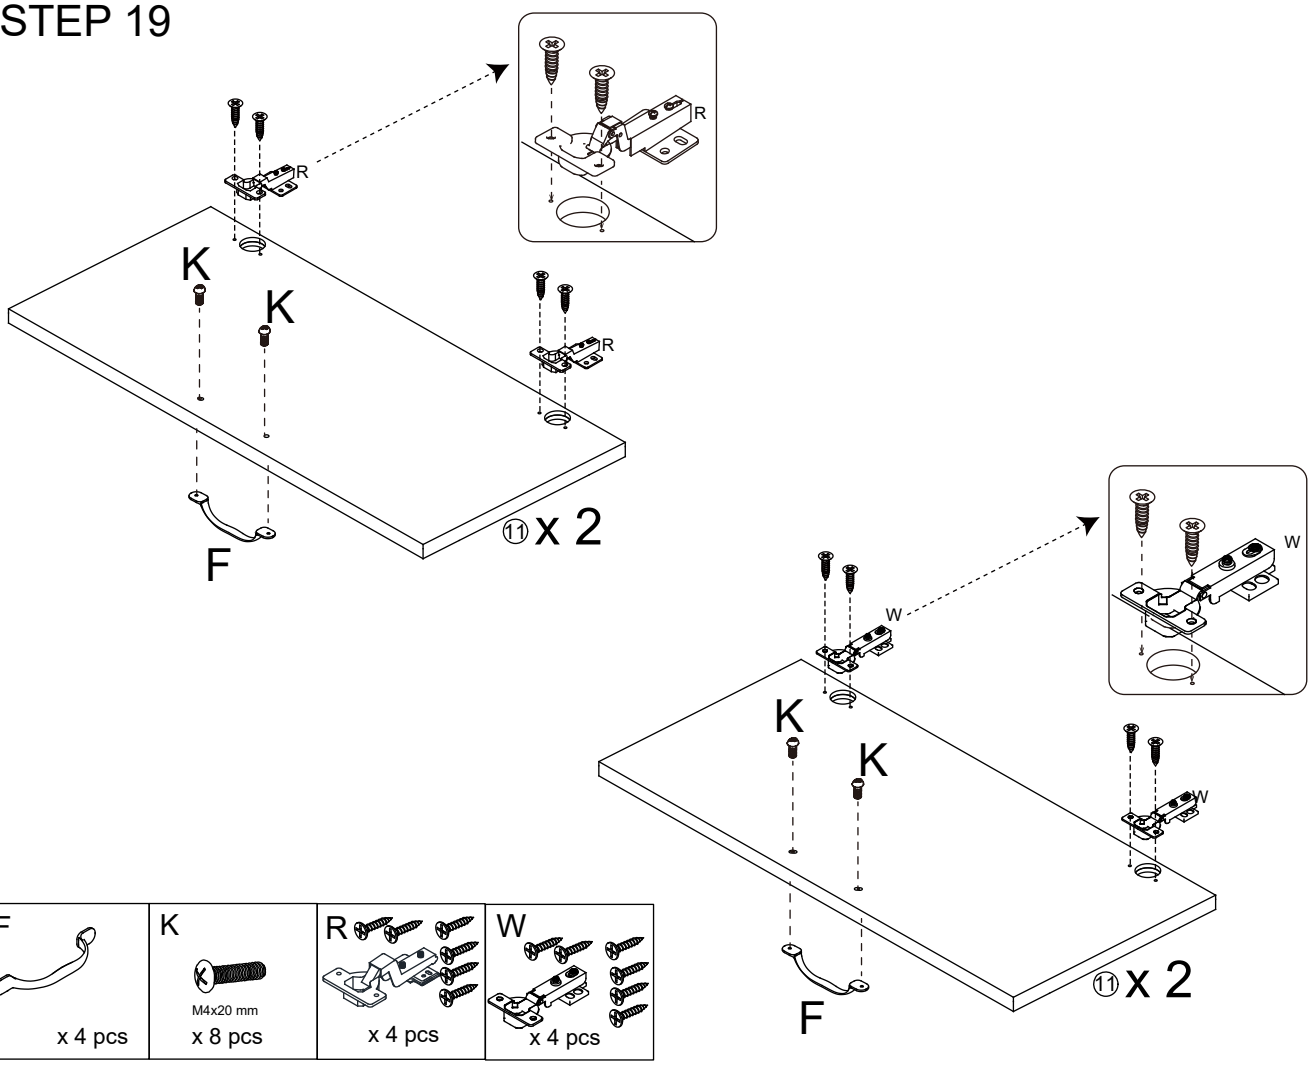


F	K	R	W
x 4 pcs	M4x20 mm x 8 pcs	x 4 pcs	x 4 pcs

STEP 20

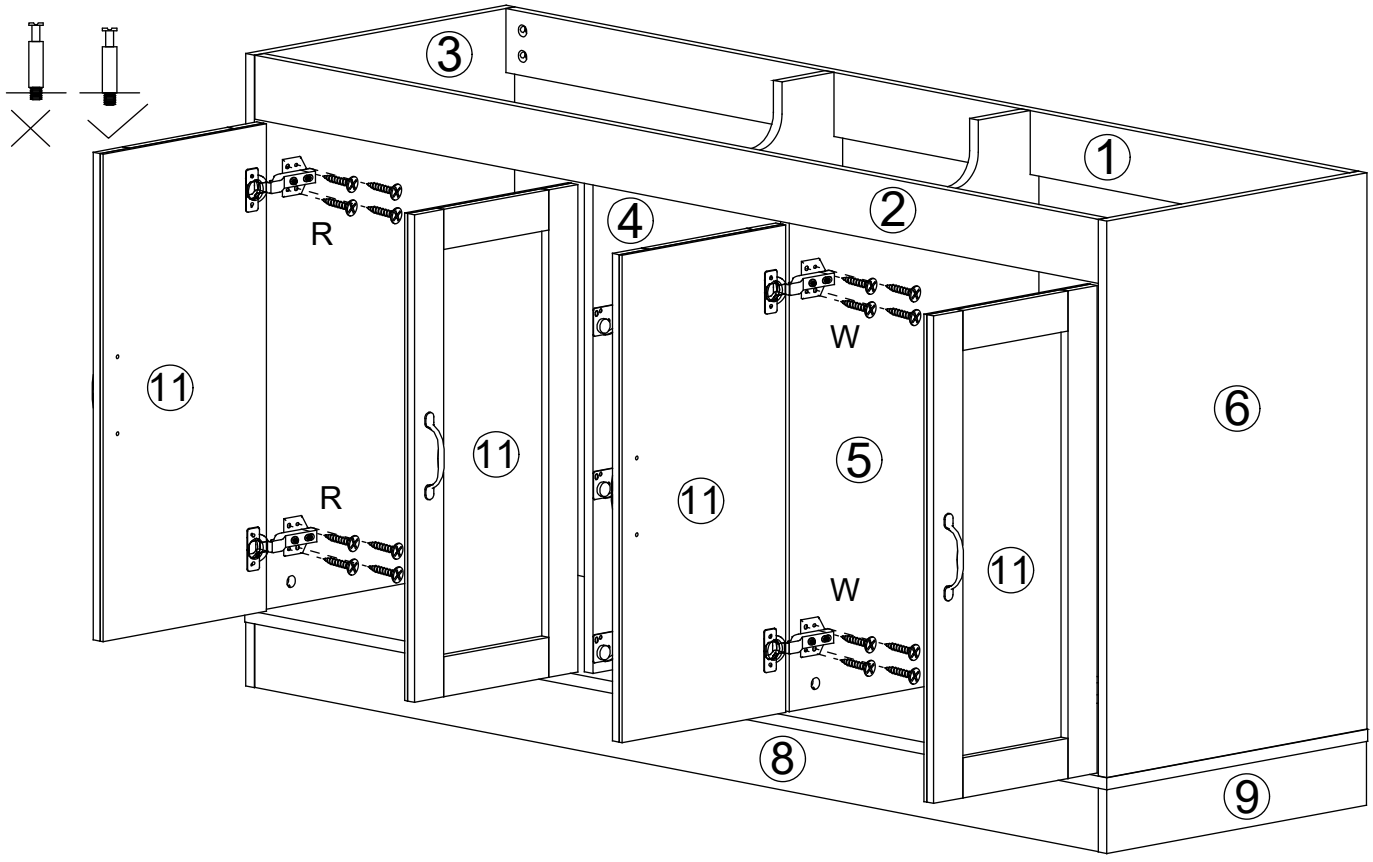


STEP 21

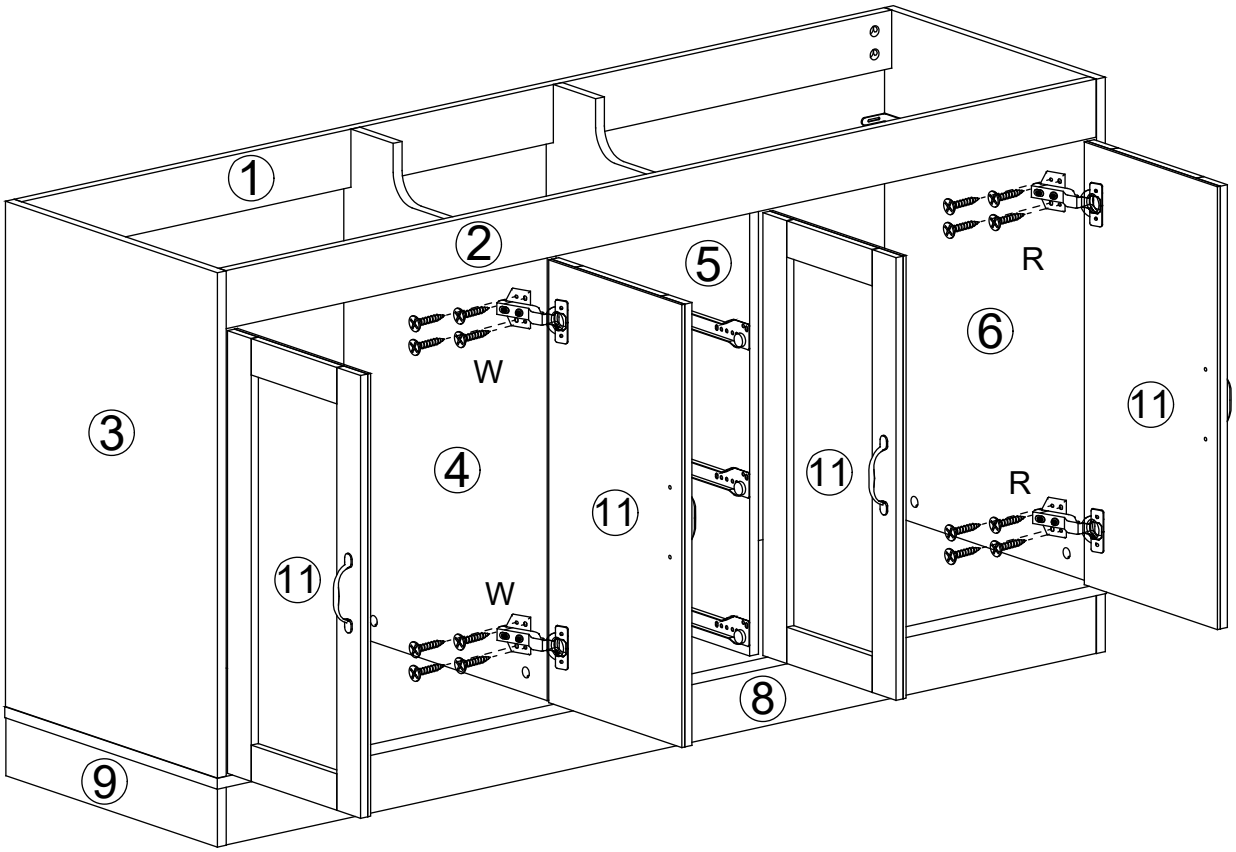

STEP 22

HINGE ADJUSTMENT SUPPLEMENT

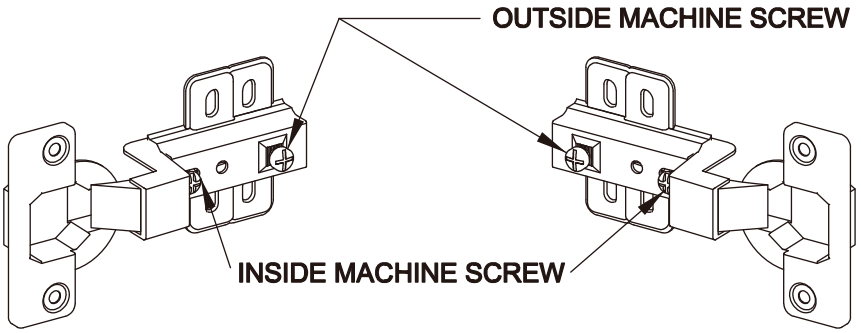

In the event that the door does not align properly, the INSIDE Machine Screws located on the Hinges are for adjusting slightly to the Left or Right. **DO NOT LOOSEN THE OUTSIDE MACHINE SCREW FOR ADJUSTMENT.**


A. To adjust the door toward the OUTSIDE of the unit, turn the Inside Machine Screws to the LEFT, or COUNTERCLOCKWISE. (See Figure A)

B. To adjust the door toward the INSIDE of the unit, turn the Inside Machine Screws to the RIGHT, or CLOCKWISE. (See Figure B)

***Note: Please be patient, it may take several minutes to adjust properly.**


Only once the door is in the desired position, fully tighten the OUTSIDE Machine Screws. This will ensure that the door is secure.

A

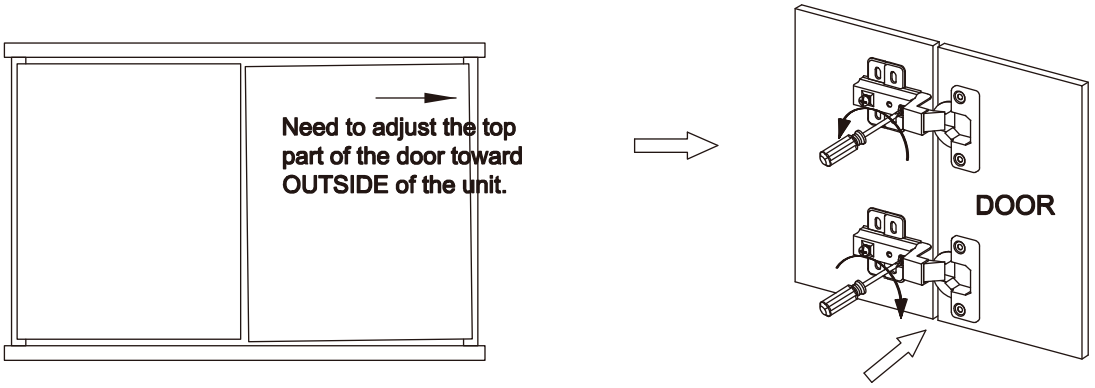


You may also need to adjust slightly the lower part of the door toward INSIDE of the unit at the same time.


B

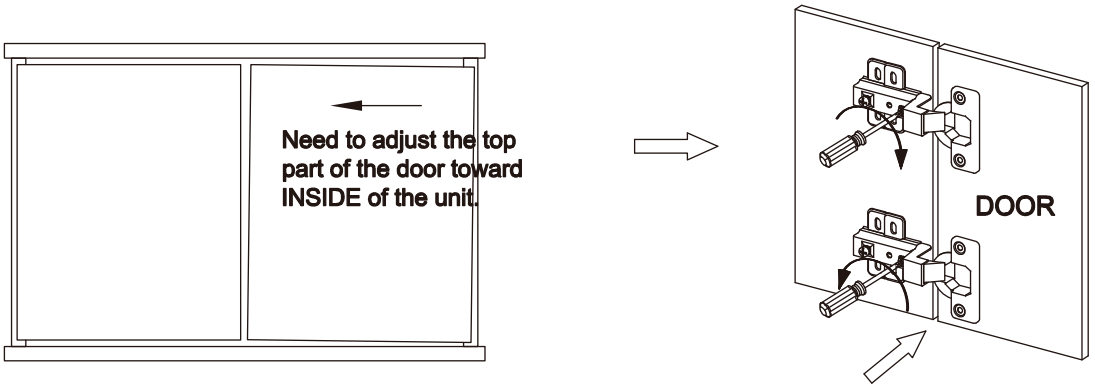


You may also need to adjust slightly the lower part of the door toward OUTSIDE of the unit at the same time.

STEP 23

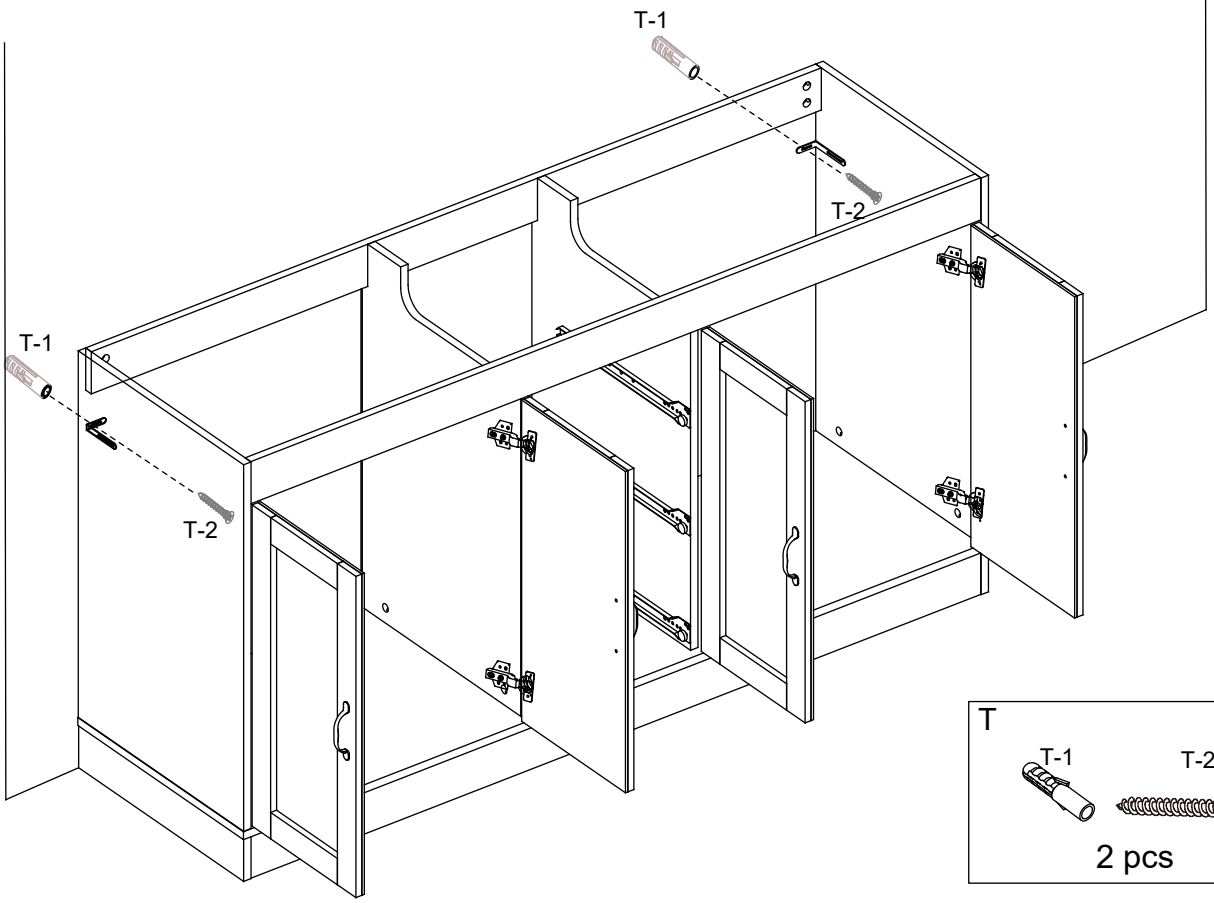

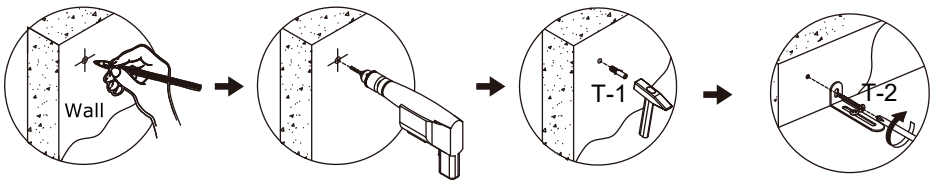


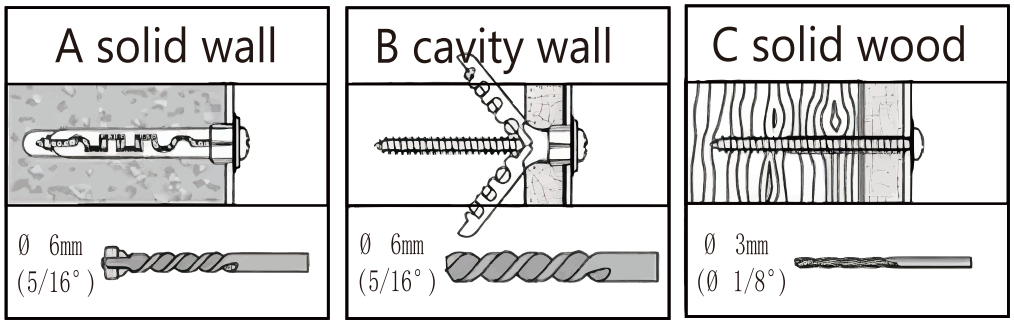

⚠ Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.


1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

STEP 24

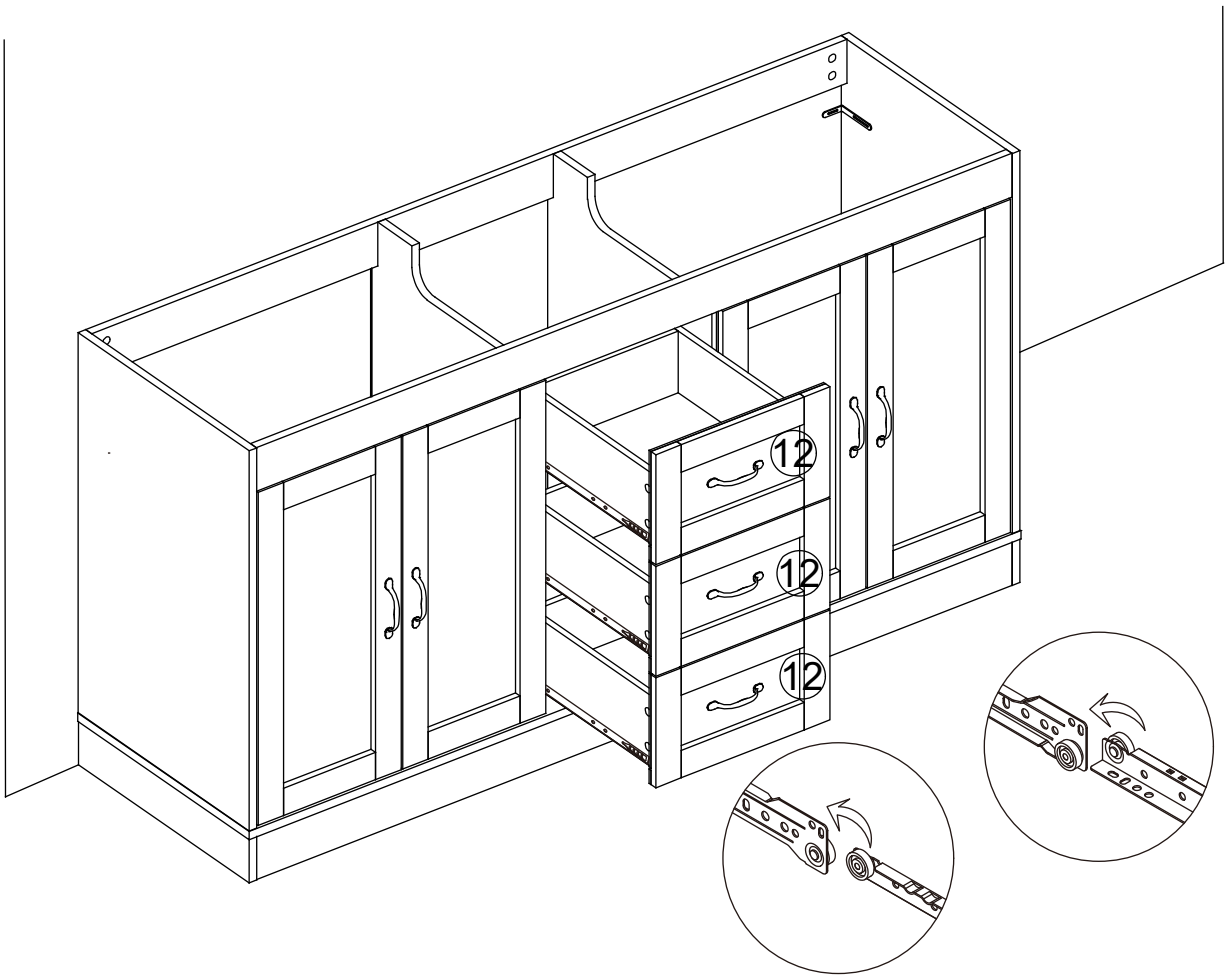

STEP 25

Please complete the installation of the faucet and basin first, and then place the basin on the cabinet

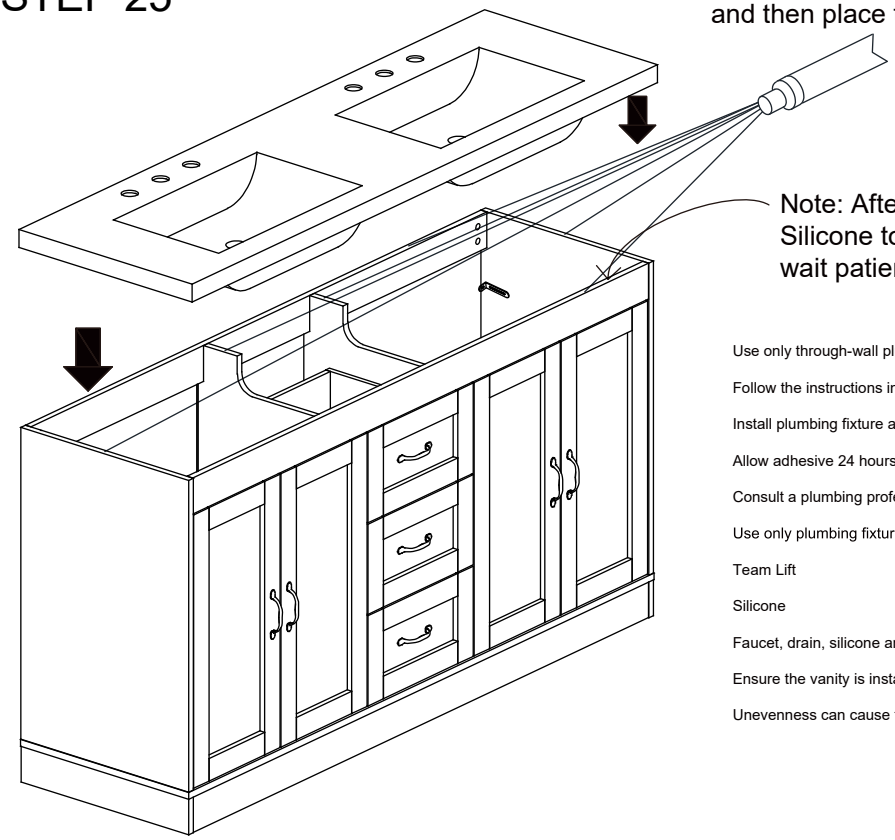

silicone(NOT provided)

Note: After installing the sink, you need to apply Silicone to fix the circle, and you need to wait patiently for 10 hours for the glue to dry.

Use only through-wall plumbing attachments.

Follow the instructions included with your plumbing fixtures.

Install plumbing fixture and drain to basin before attaching basin to vanity using 100% silicone adhesive.

Allow adhesive 24 hours cure time to achieve full strength.

Consult a plumbing professional for specific installation questions and consult local codes as applicable.

Use only plumbing fixtures designed to fit either single hole or 3 hole, 4″ centerline faucets.

Team Lift

Silicone

Faucet, drain, silicone and all other plumbing components, tools and hardware are not included.

Ensure the vanity is installed on a level floor.

Unevenness can cause the vanity to become misaligned, resulting in twisting of the cabinet.

