




# ASSEMBLY INSTRUCTIONS

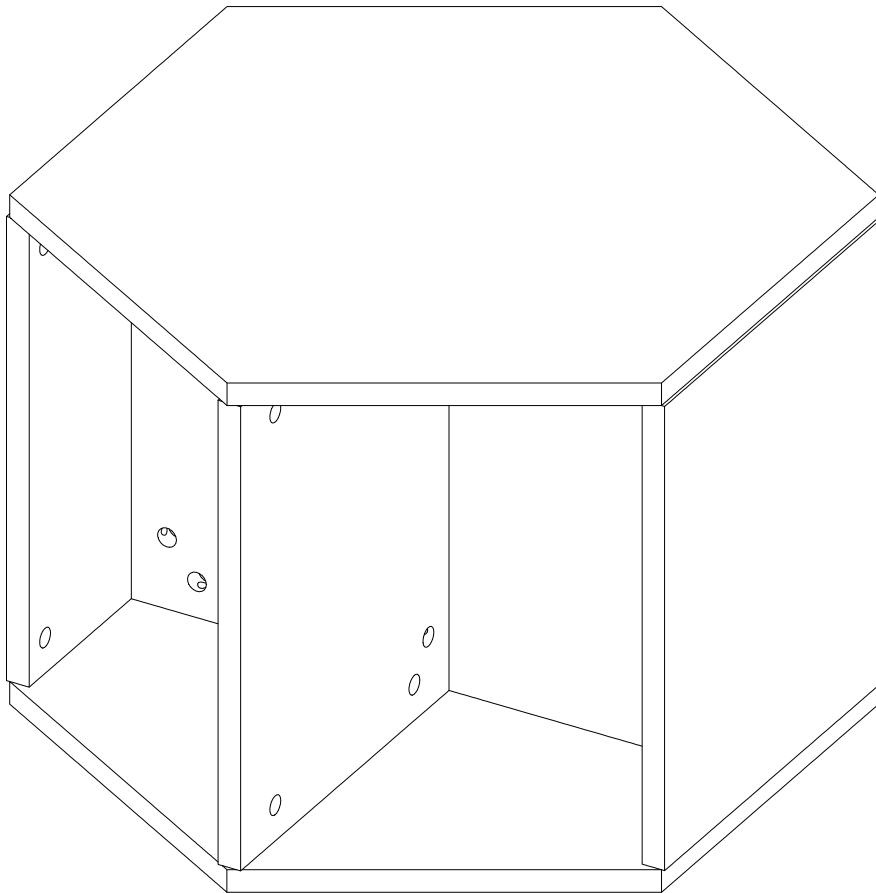

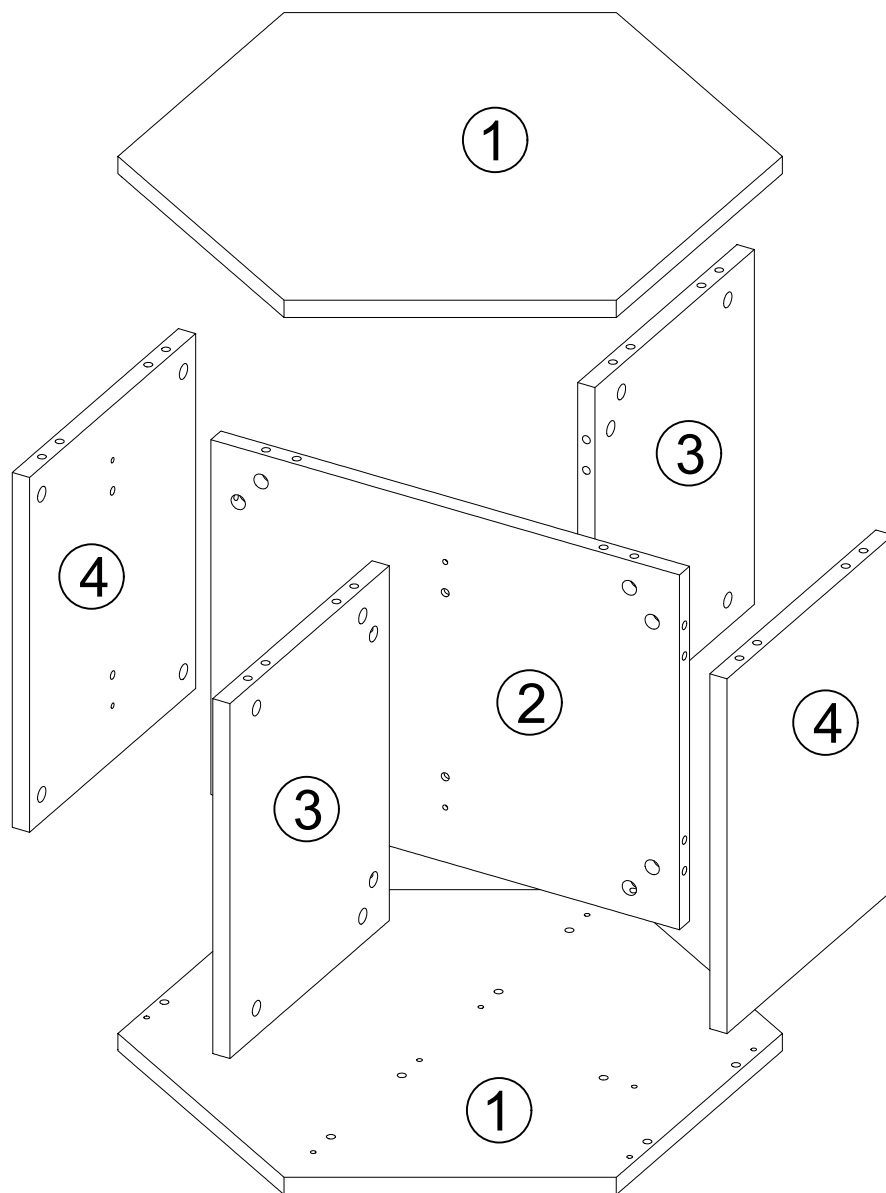


1

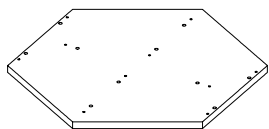


x2

2

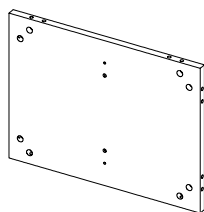


x1

3

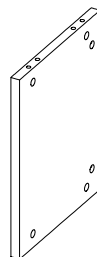


x2

4

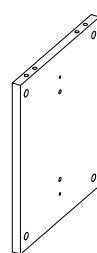


x2

A

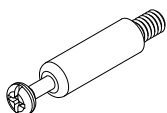


x28

B

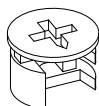


x28

C

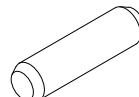

x24

D


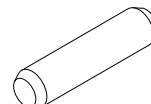


x2

# SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

DON'T FULLY TIGHTEN THE SCREWS BEFORE FINISHING ASSEMBLY, ONLY TIGHTEN THEM 80% TO ENSURE THE CAM-LOCK DO NOT DROP OUT.




NOTE: AFTER ASSEMBLY, PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED.

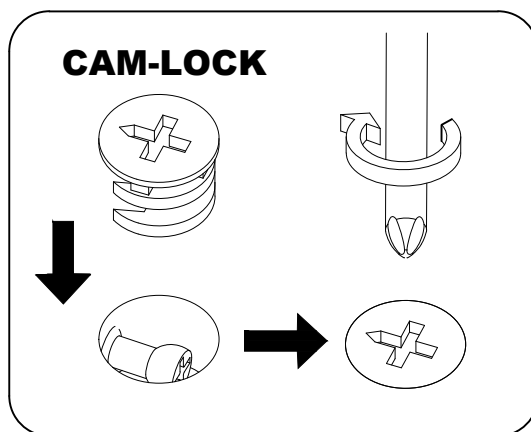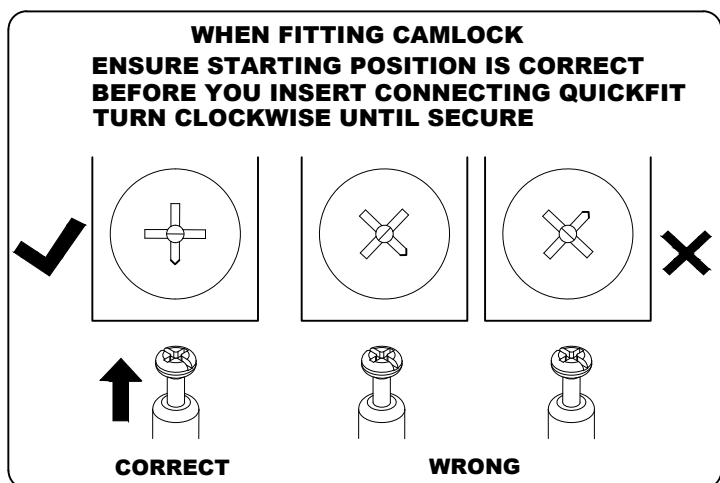

**Quickfit head needs to be in centre**



## QUICKFIT

**Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)**

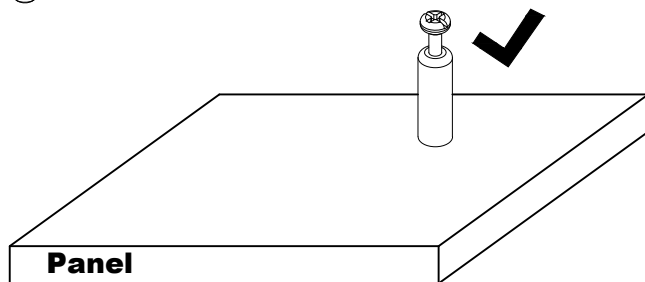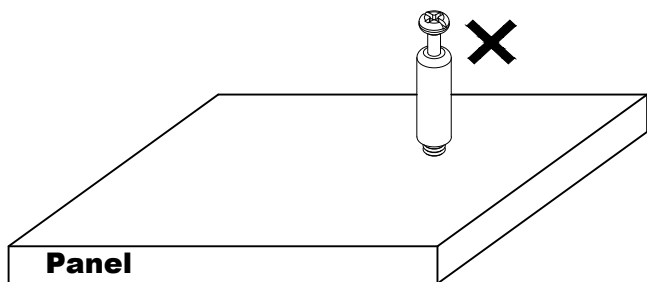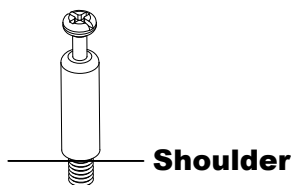


## ATTENTION


**When installing the screw, it should be kept perpendicular to the board surface and should not tilt to the left or right, otherwise it will affect subsequent installation.**

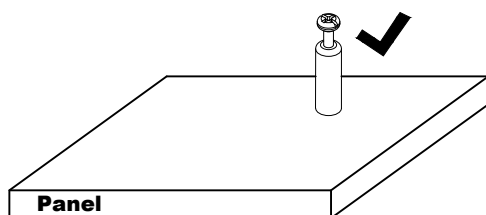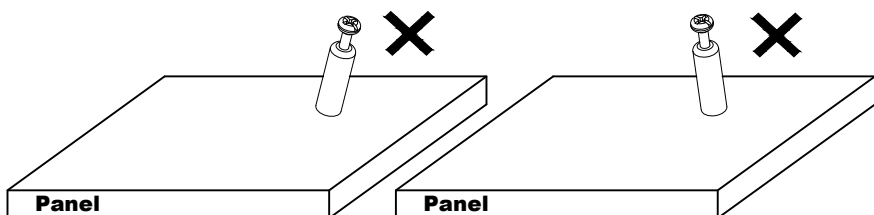




STEP:1

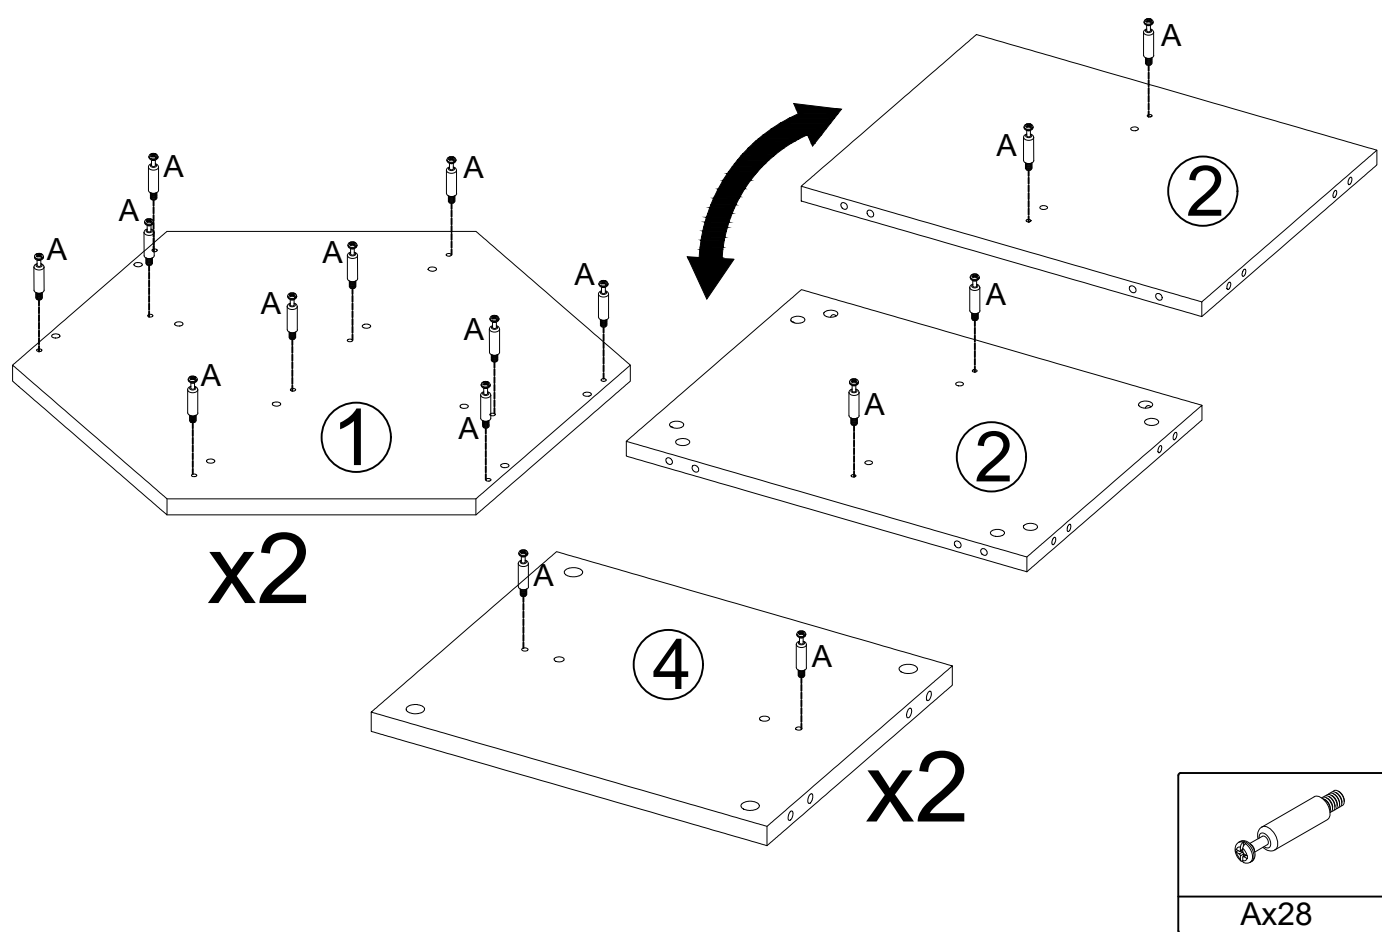

STEP:2



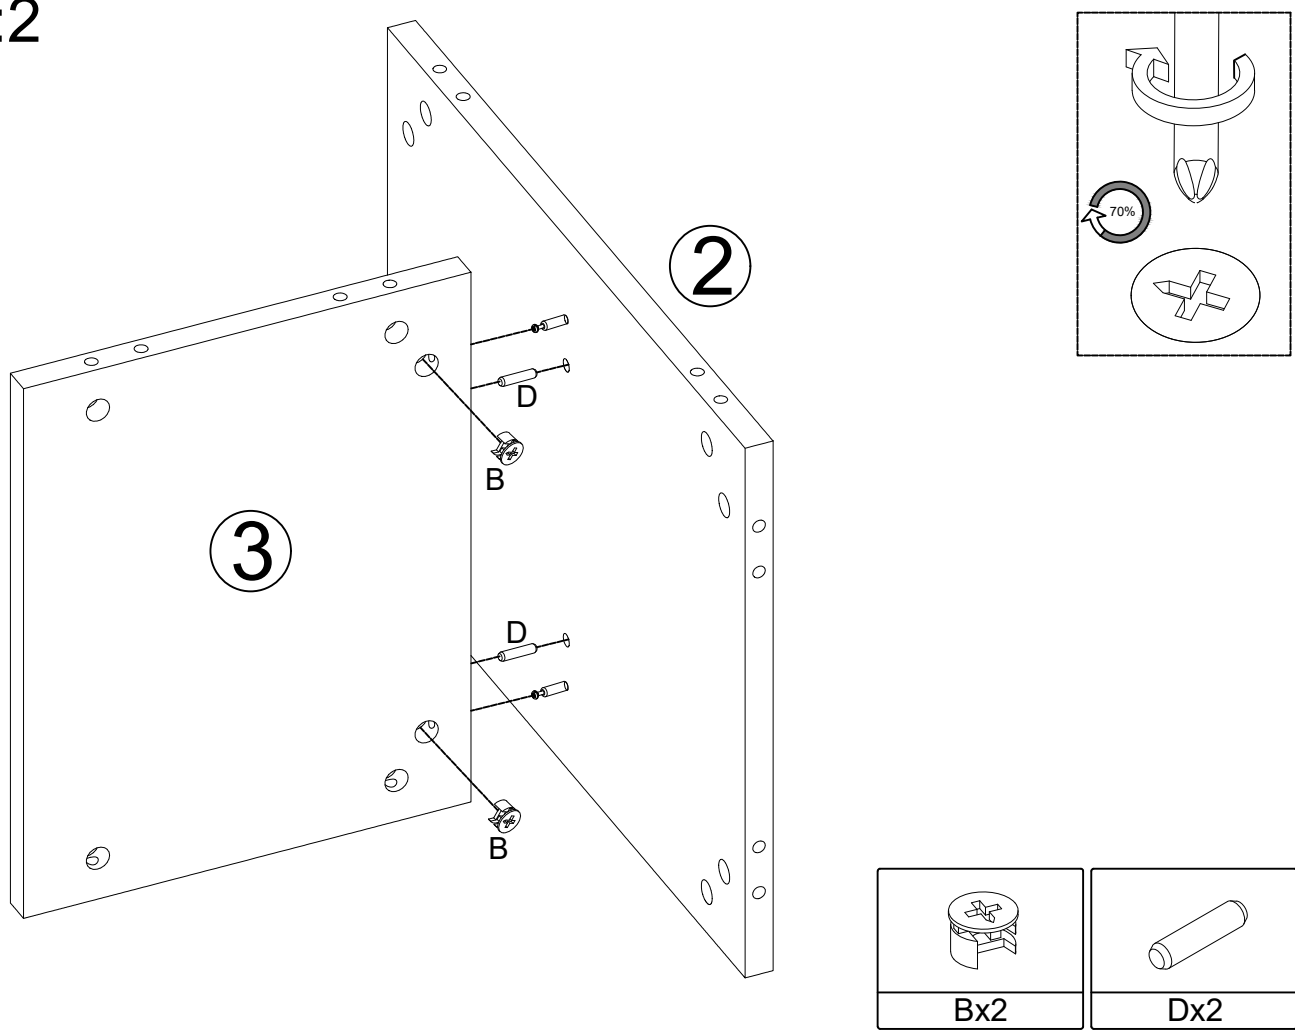


STEP:3

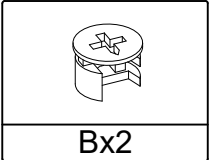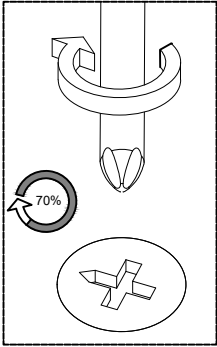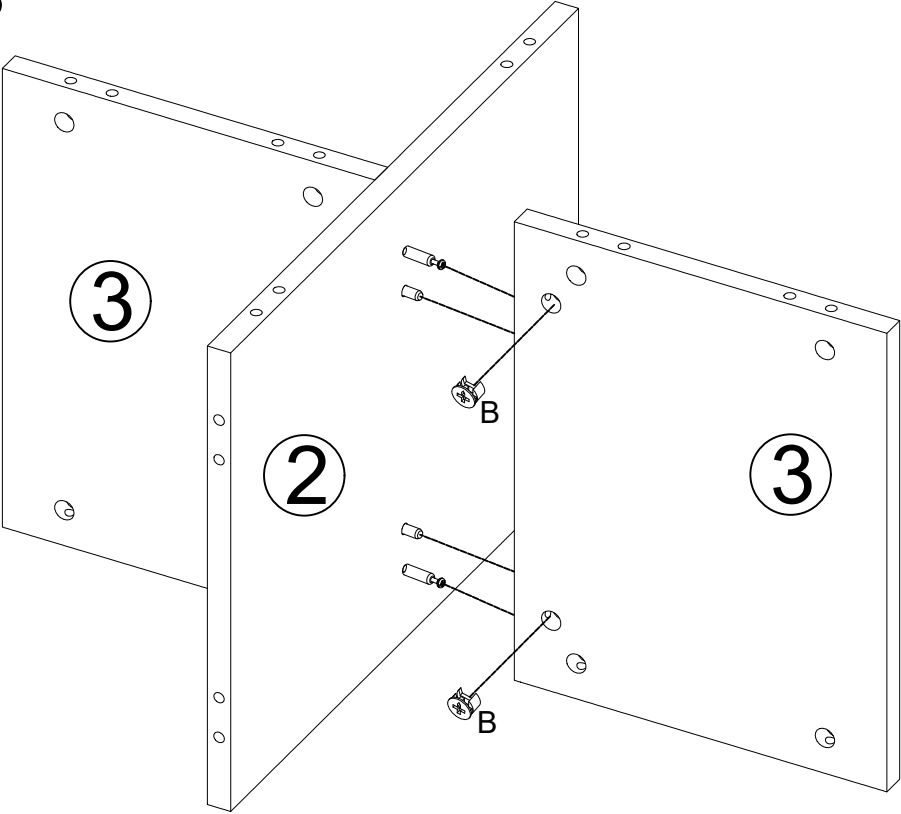


Bx2

STEP:4

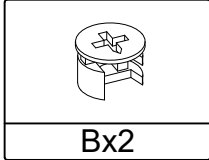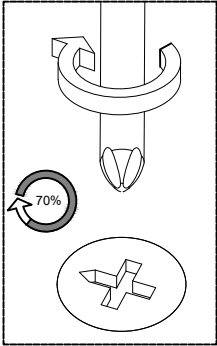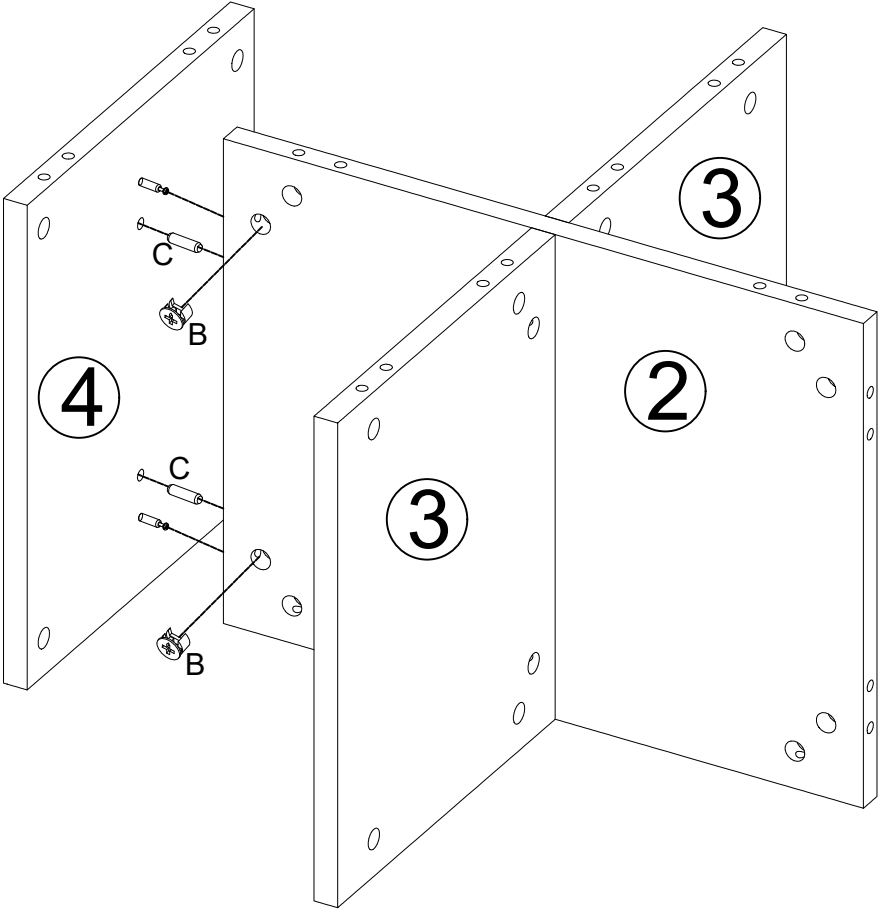


Bx2

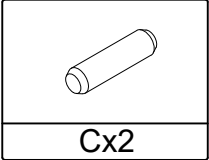


Cx2




STEP:5

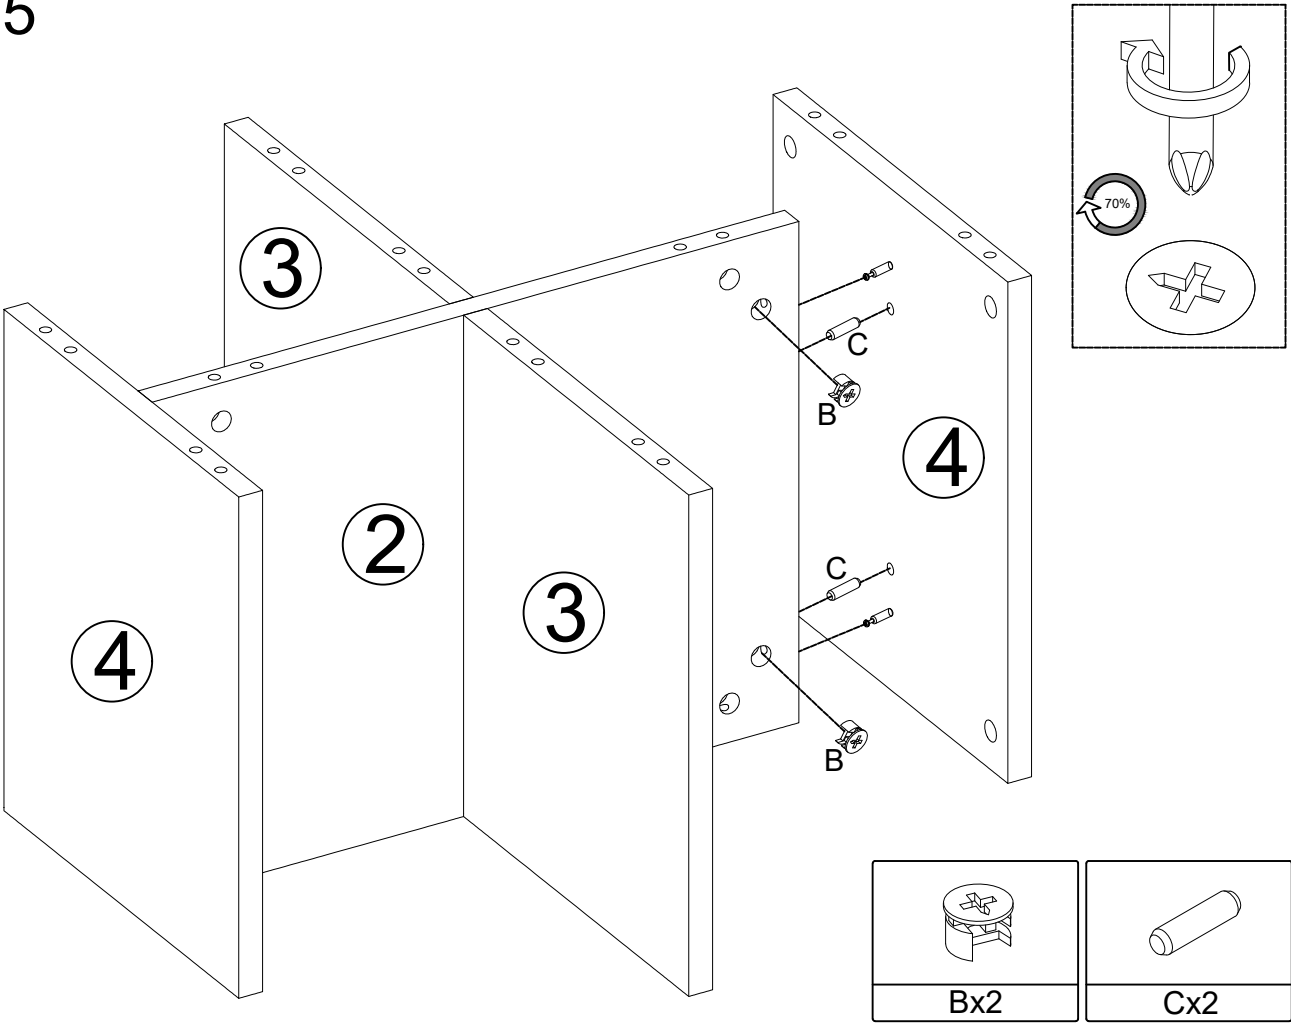

STEP:6

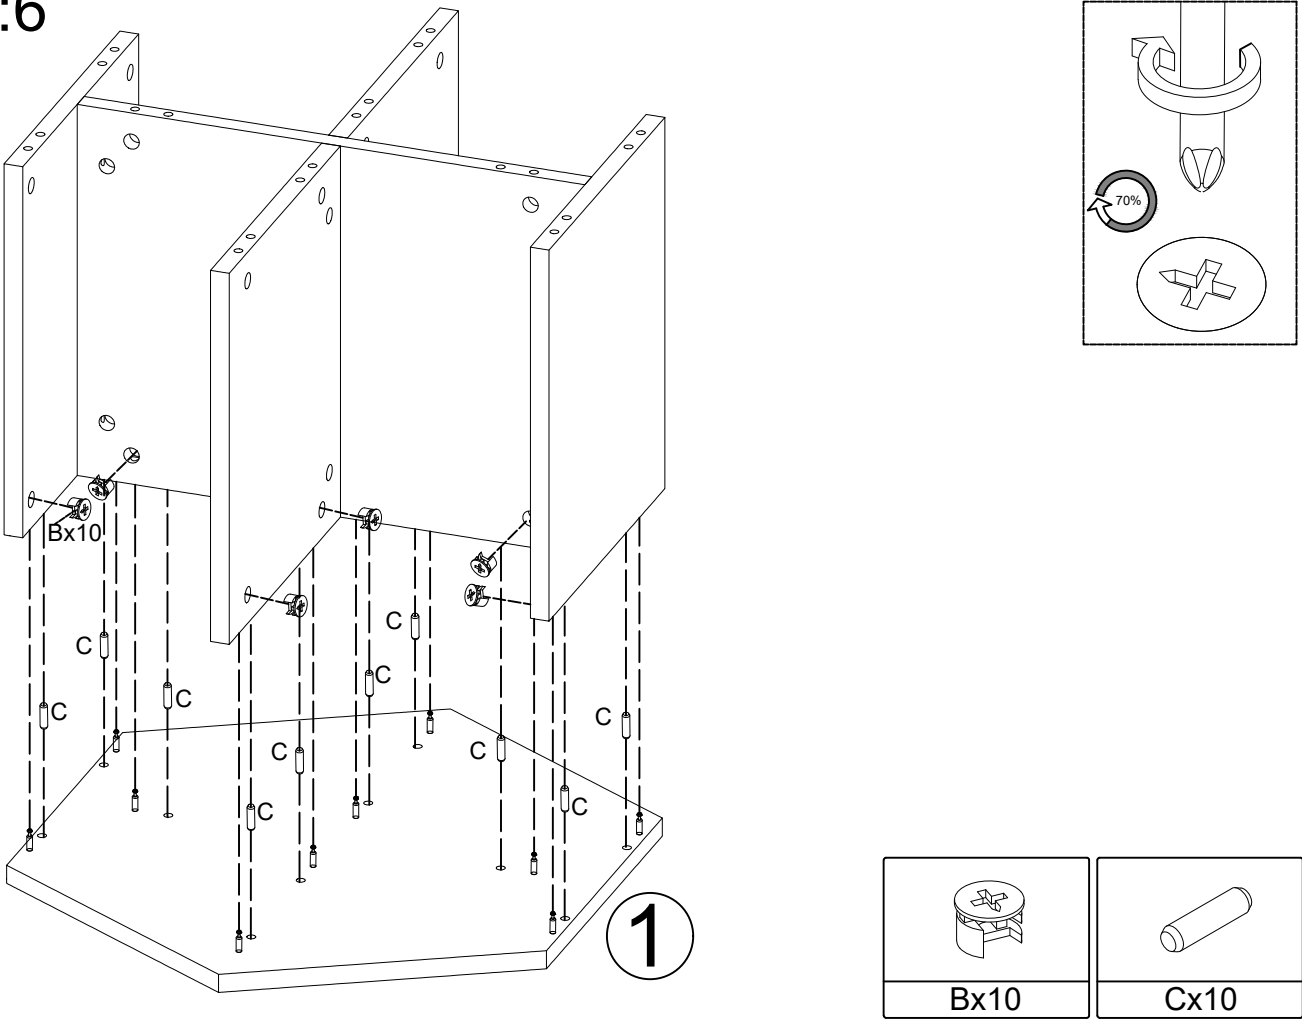

STEP:7

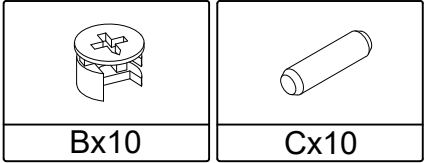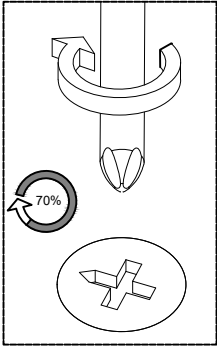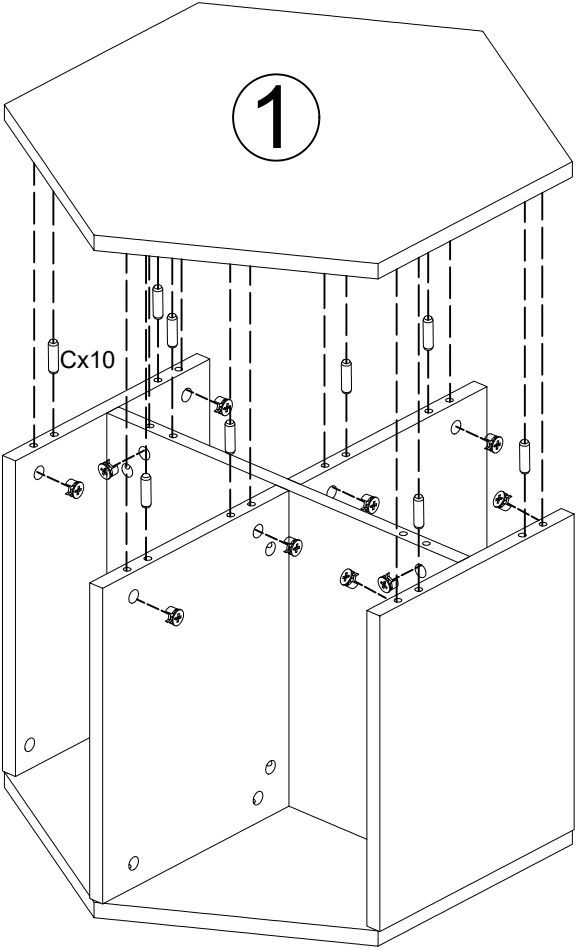

STEP:8

