
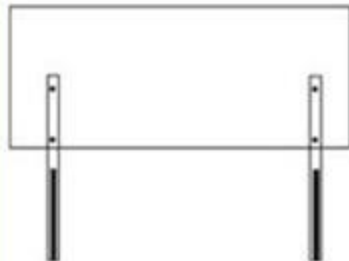


HEADBOARD ASSEMBLING INSTRUCTIONS

Remove Headboard From Box
Unpack Polythene Cover

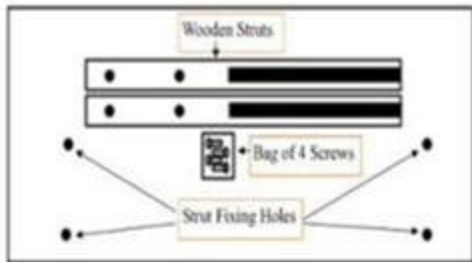

Locate Two Screw Holes
On The End Of The Bed
Fix Assembled Headboard
To The Bed With Screws
Provided By Your Bed
Supplier

Align Strut fixing Holes Over
Headboard Fixing Holes
Insert Screws Provided Tighten
First by Hand And Then By
Screwdriver

