



ASSEMBLY INSTRUCTIONS

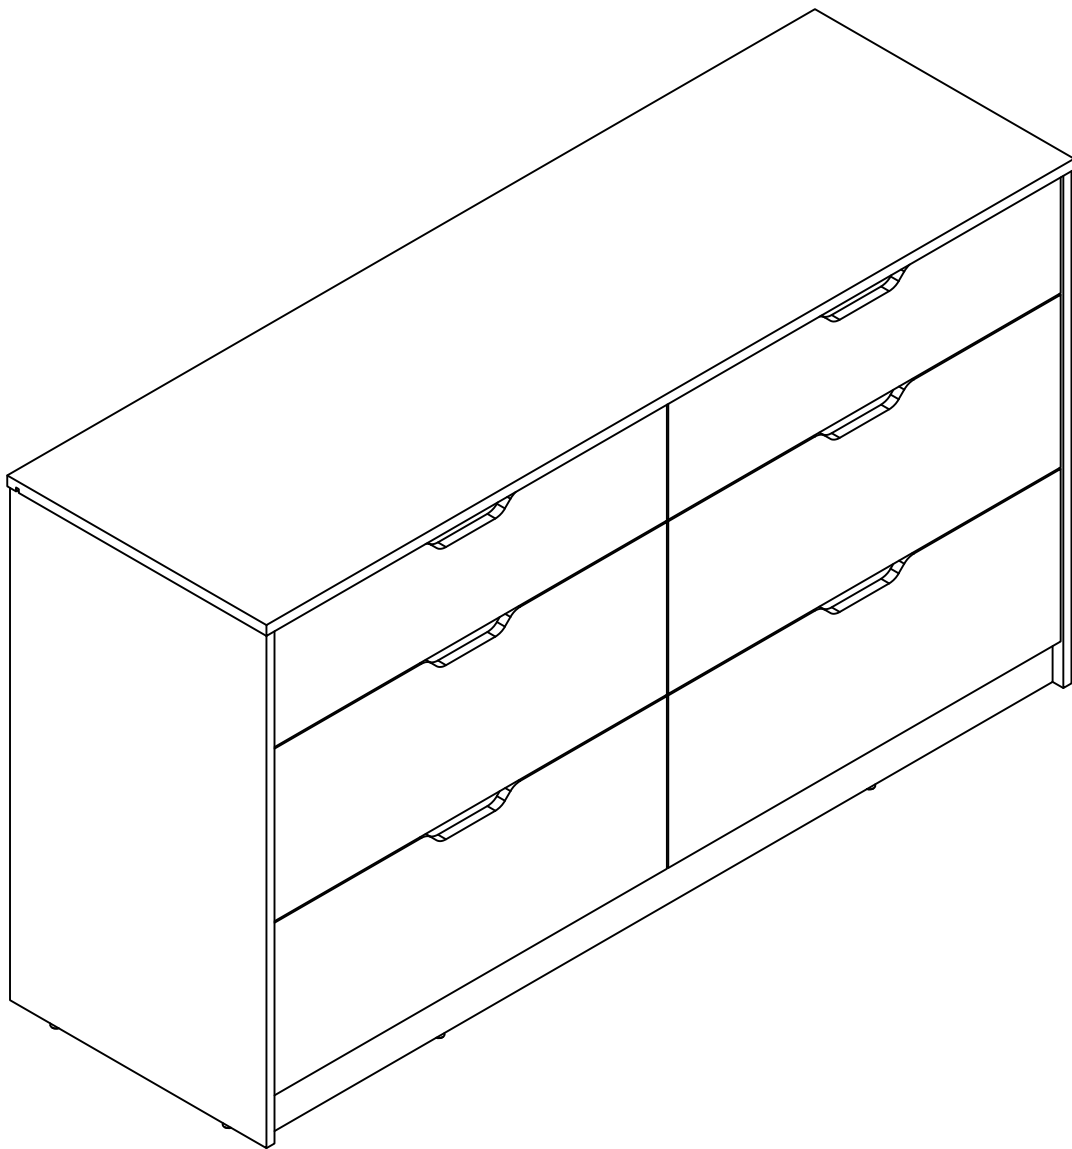

WARNING !

MAXIMUM LOAD
220 lb/ 100kg

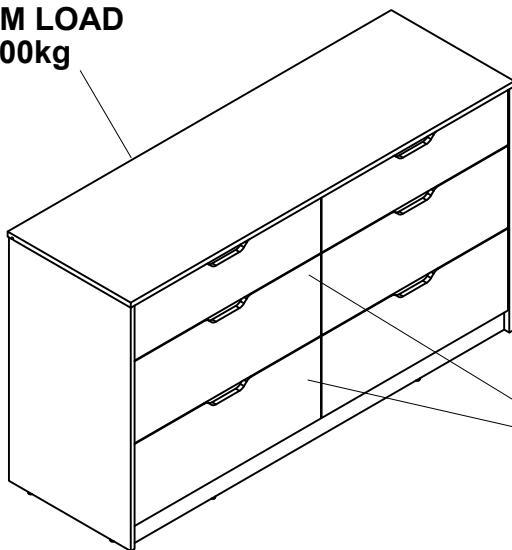


MAXIMUM LOAD
20 lb/ 9.1kg




Estimated Time for Assembly

60 mins

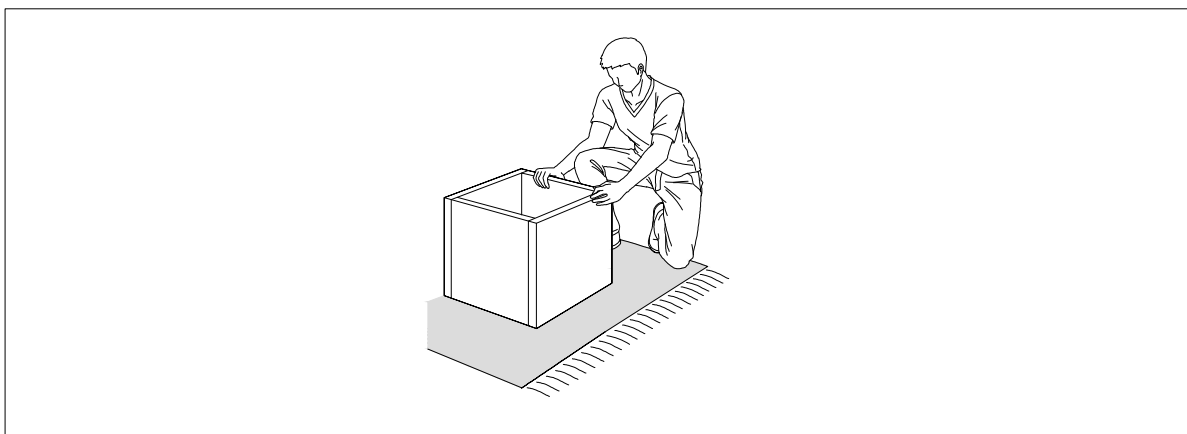

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.





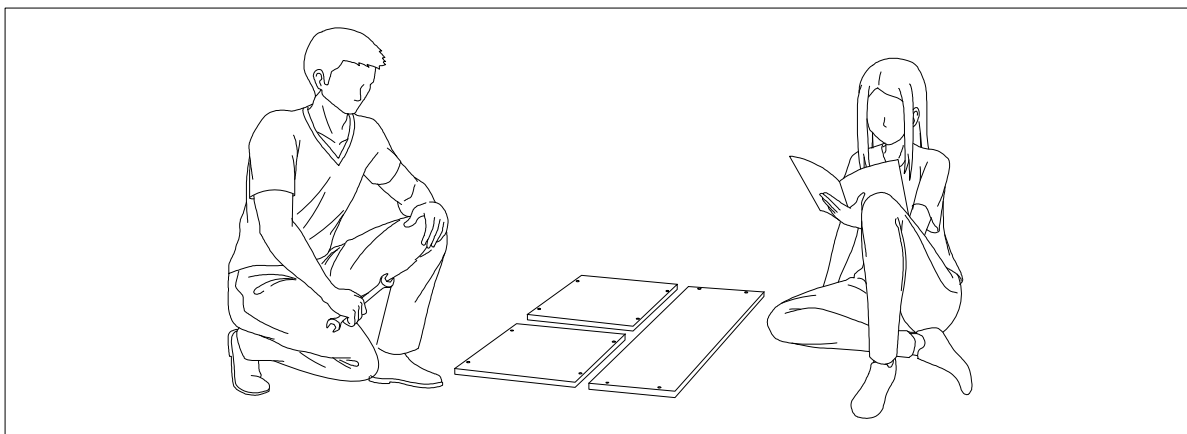


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

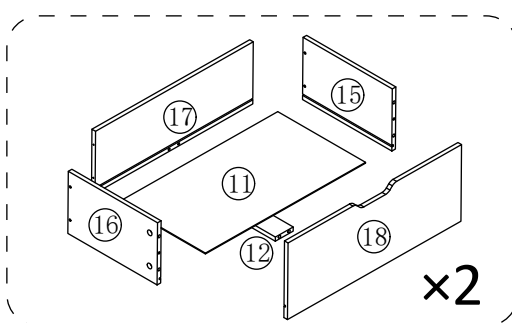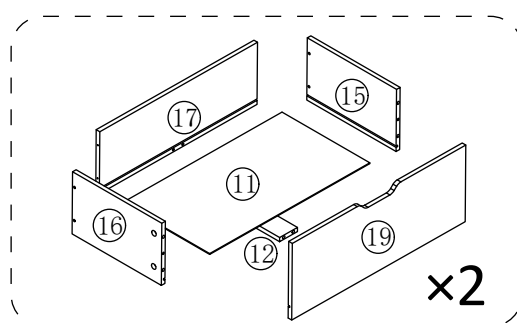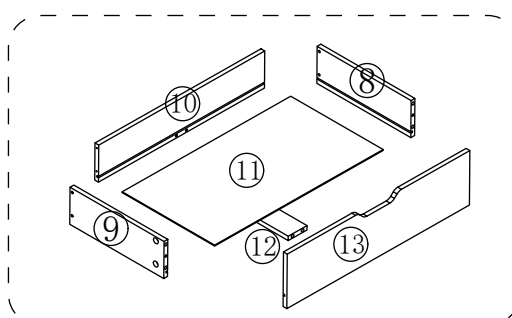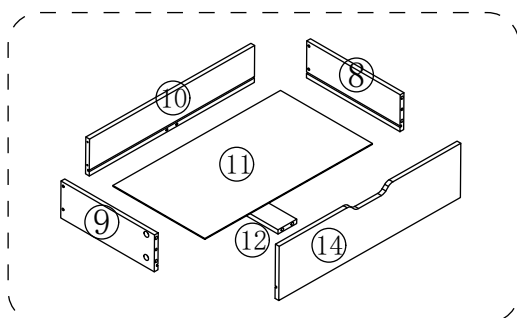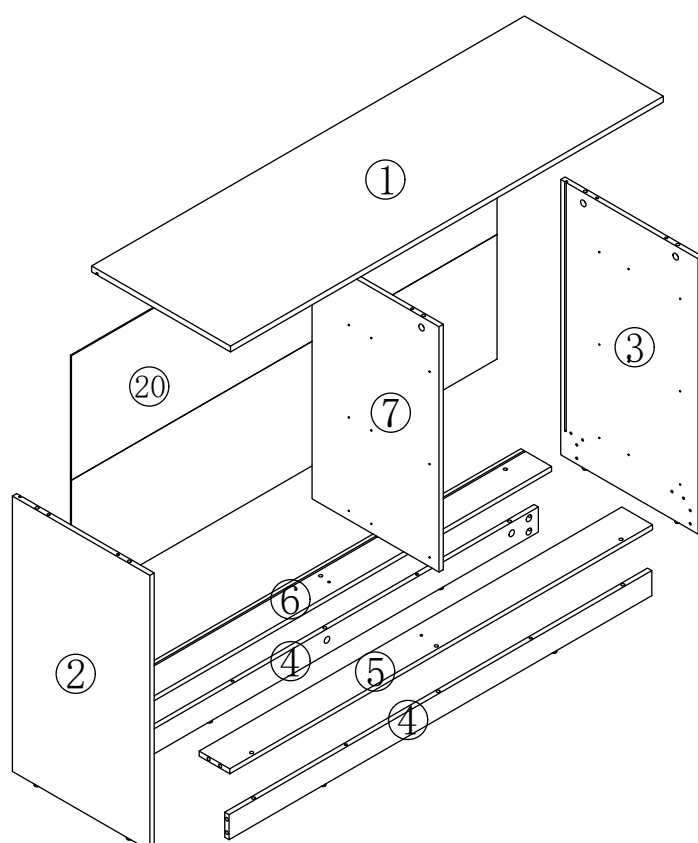


BOARD IDENTIFICATION


Not actual size

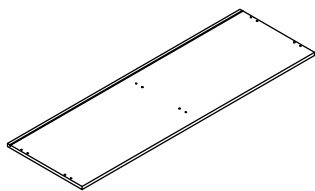


① x1




② x1




③ x1

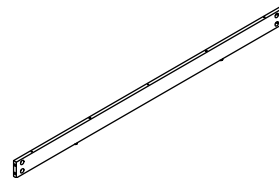

④ x2

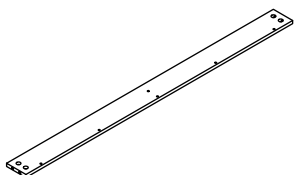


⑤ x1

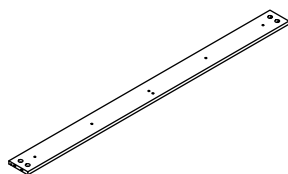


⑥ x1




⑦ x1

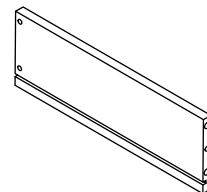


⑧ x2

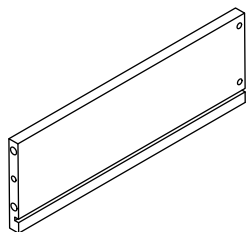


⑨ x2

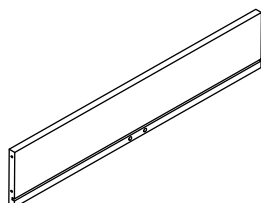


⑩ x2

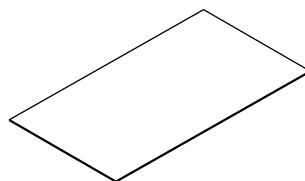


⑪ x6

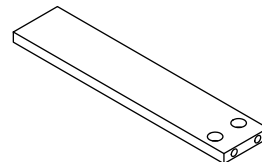


⑫ x6

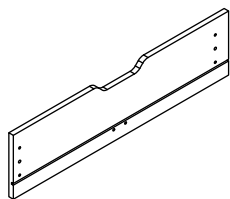


⑬ x1

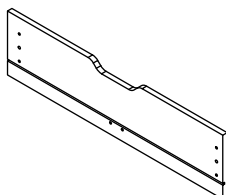


⑭ x1

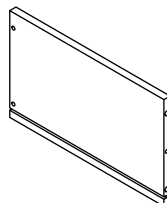


⑮ x4

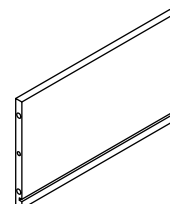


⑯ x4

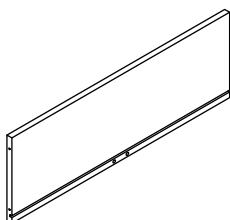


⑰ x4

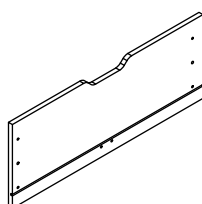

⑱ x2








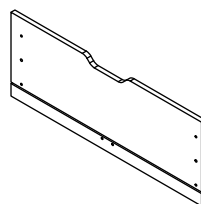


⑲ x2

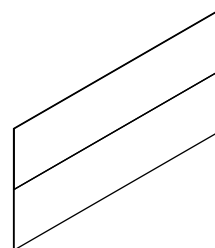


⑳ x1

HARDWARE LIST

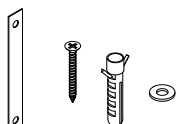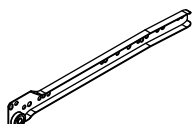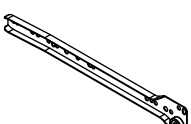
 $\text{Ø}5 \times 40\text{mm}$ A x8+1	 $\text{Ø}6 \times 33.5\text{mm}$ B x58+2	 $\text{Ø}15 \times 9.5\text{mm}$ C x58+2	 $\text{Ø}6 \times 40\text{mm}$ D x22+2
 $\text{Ø}3.5 \times 12\text{mm}$ E x62+2	 $\text{Ø}3 \times 14\text{mm}$ F x12+1	 G x12	 $\text{Ø}4 \times 40\text{mm}$ H x36+2
 I x2	 J x24	 K x1	
 CL x6	 CR x6	 DL x6	 DR x6

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

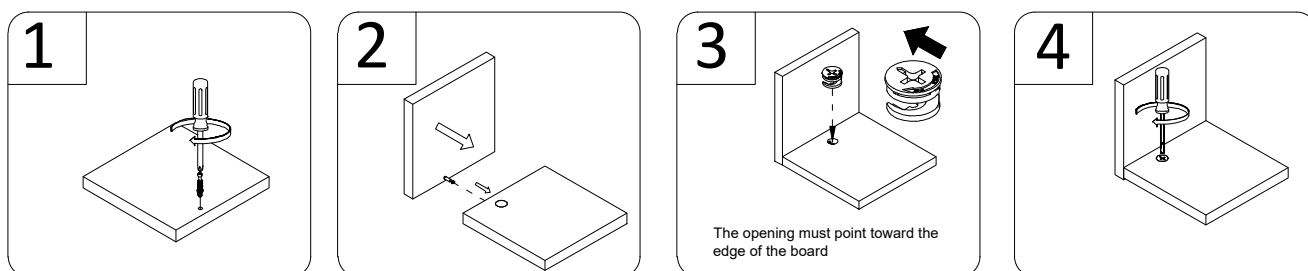


STEP 1

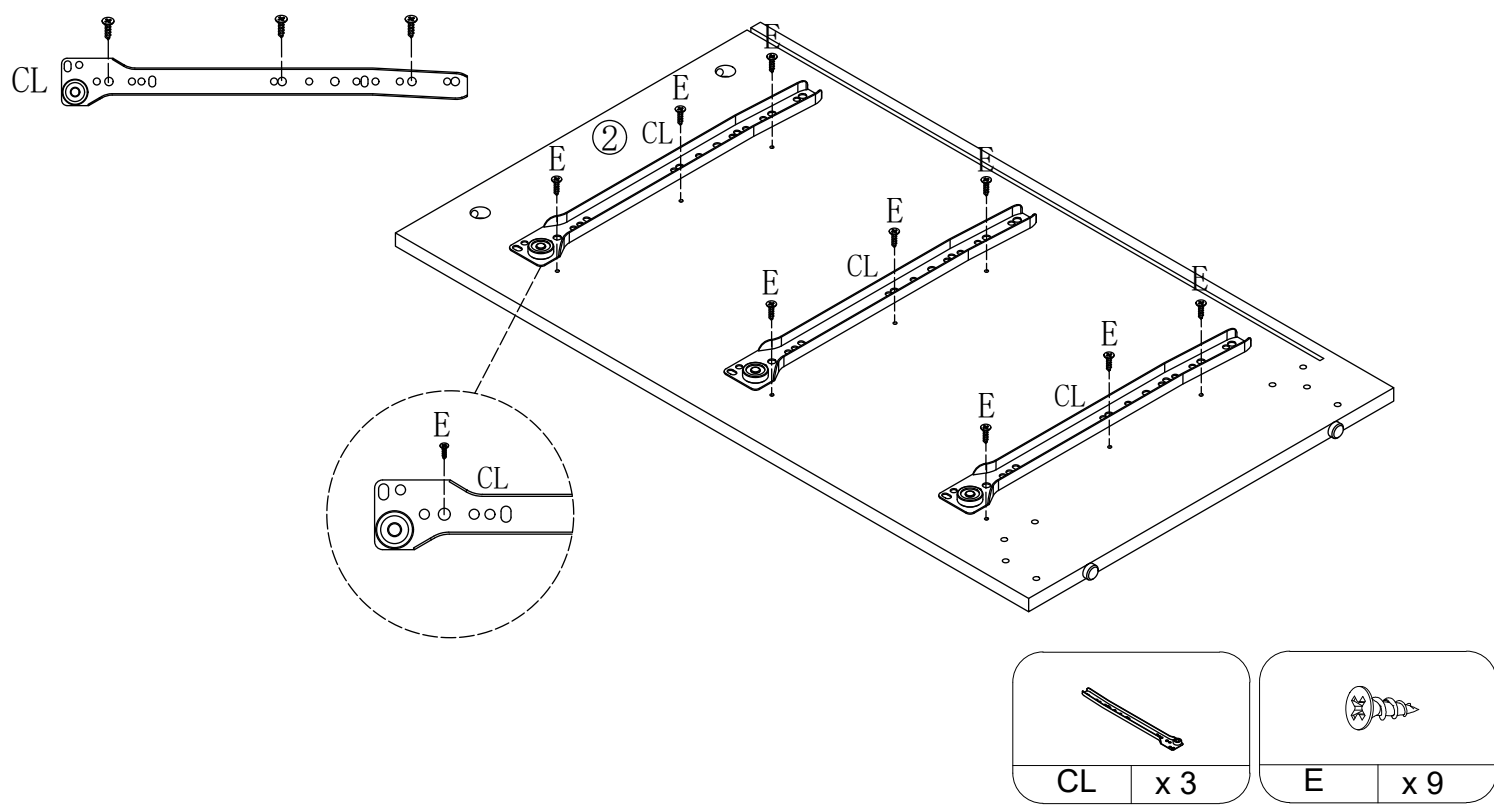



STEP 2

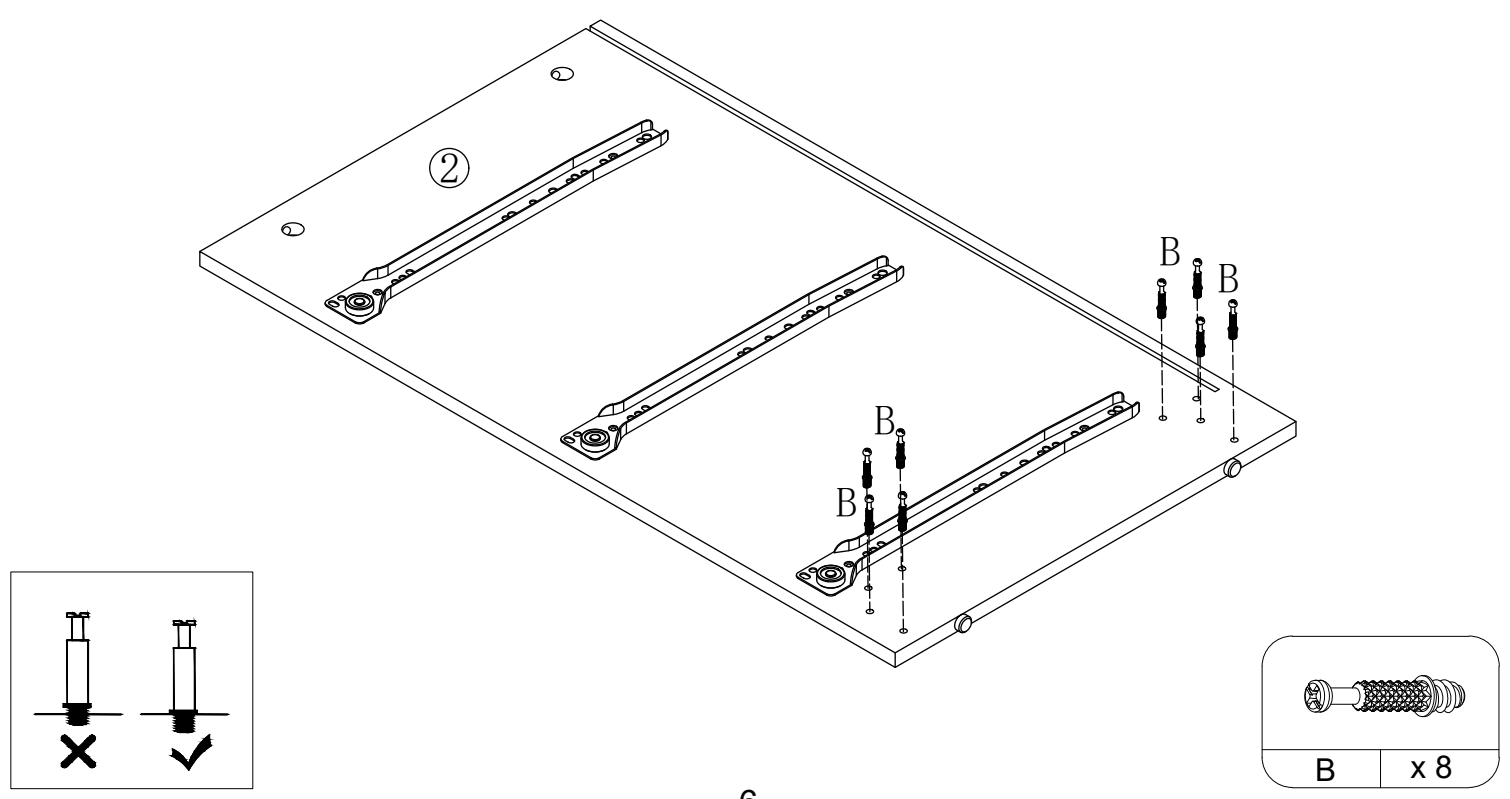


STEP 3

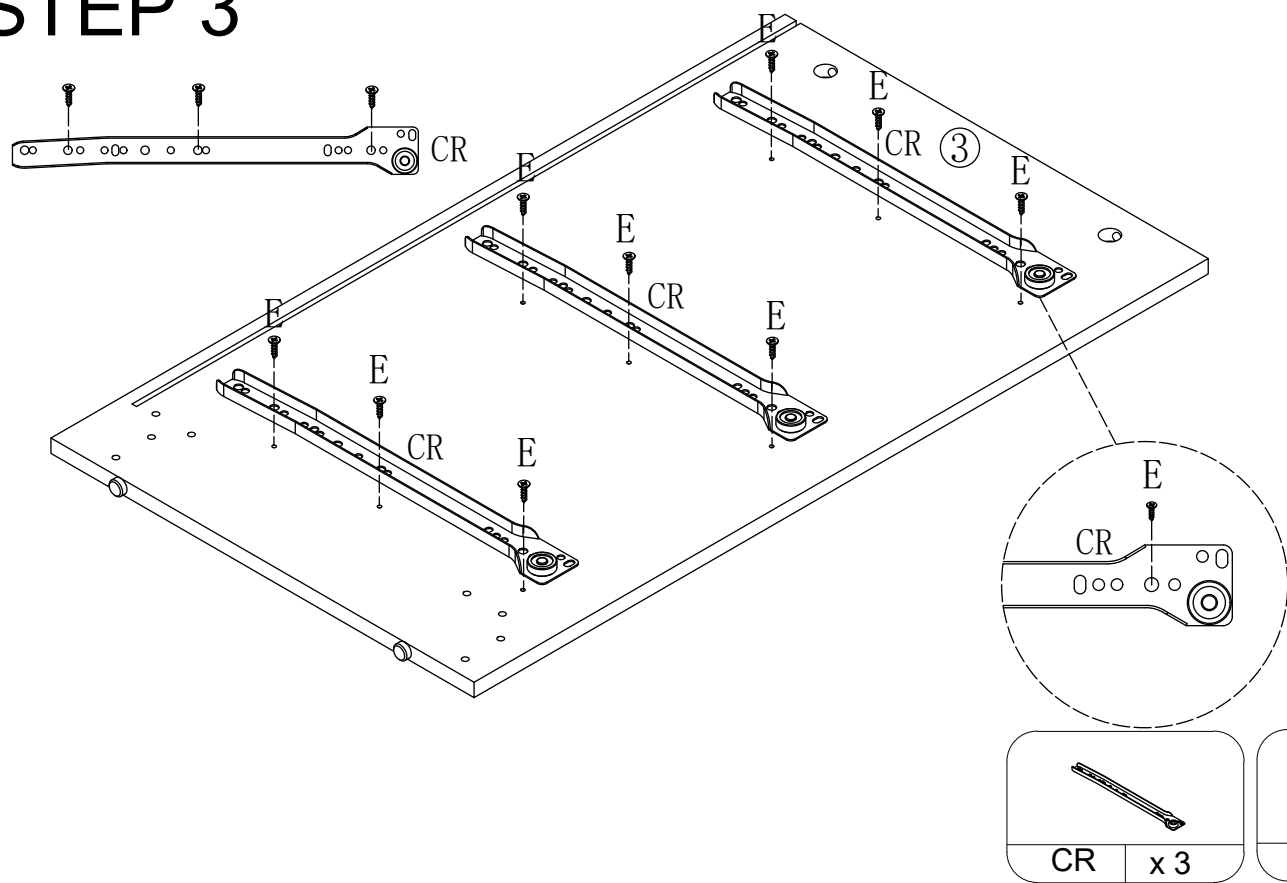


STEP 4

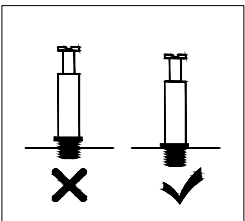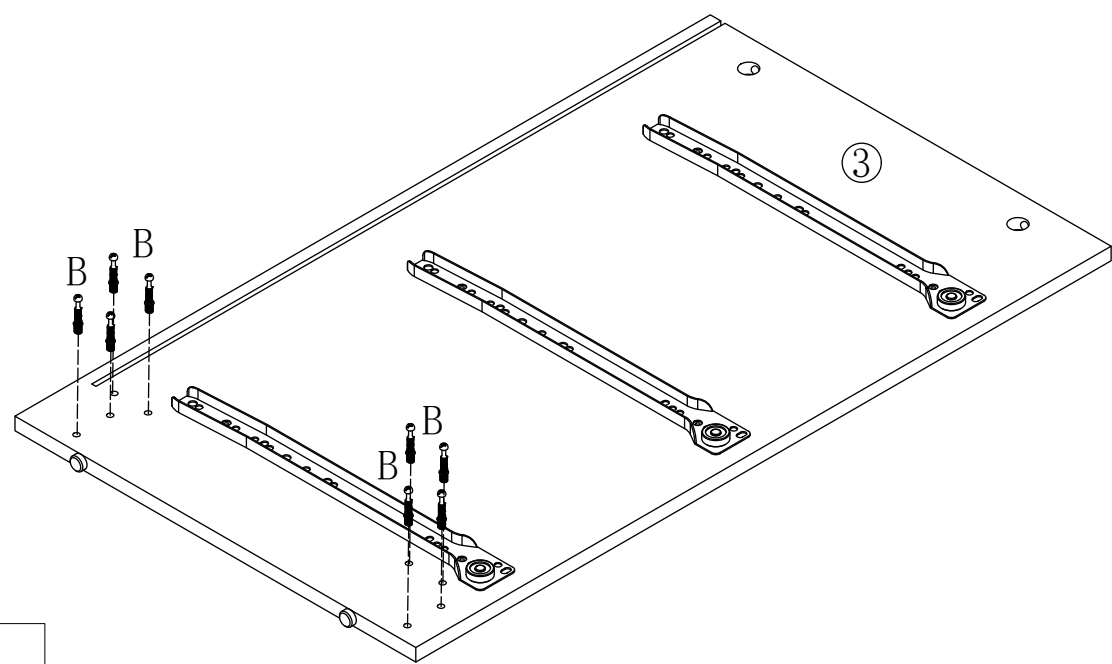

STEP 5


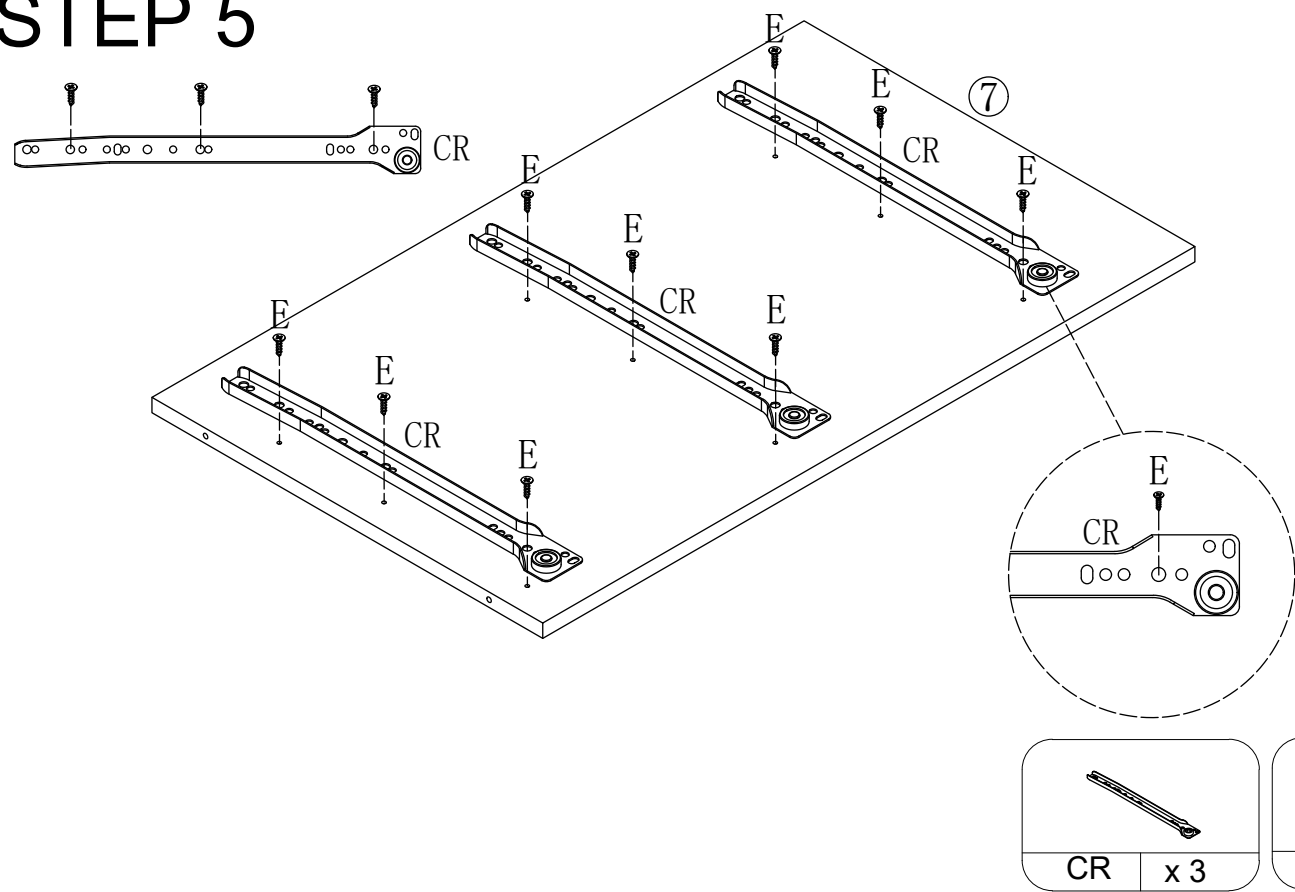


STEP 6


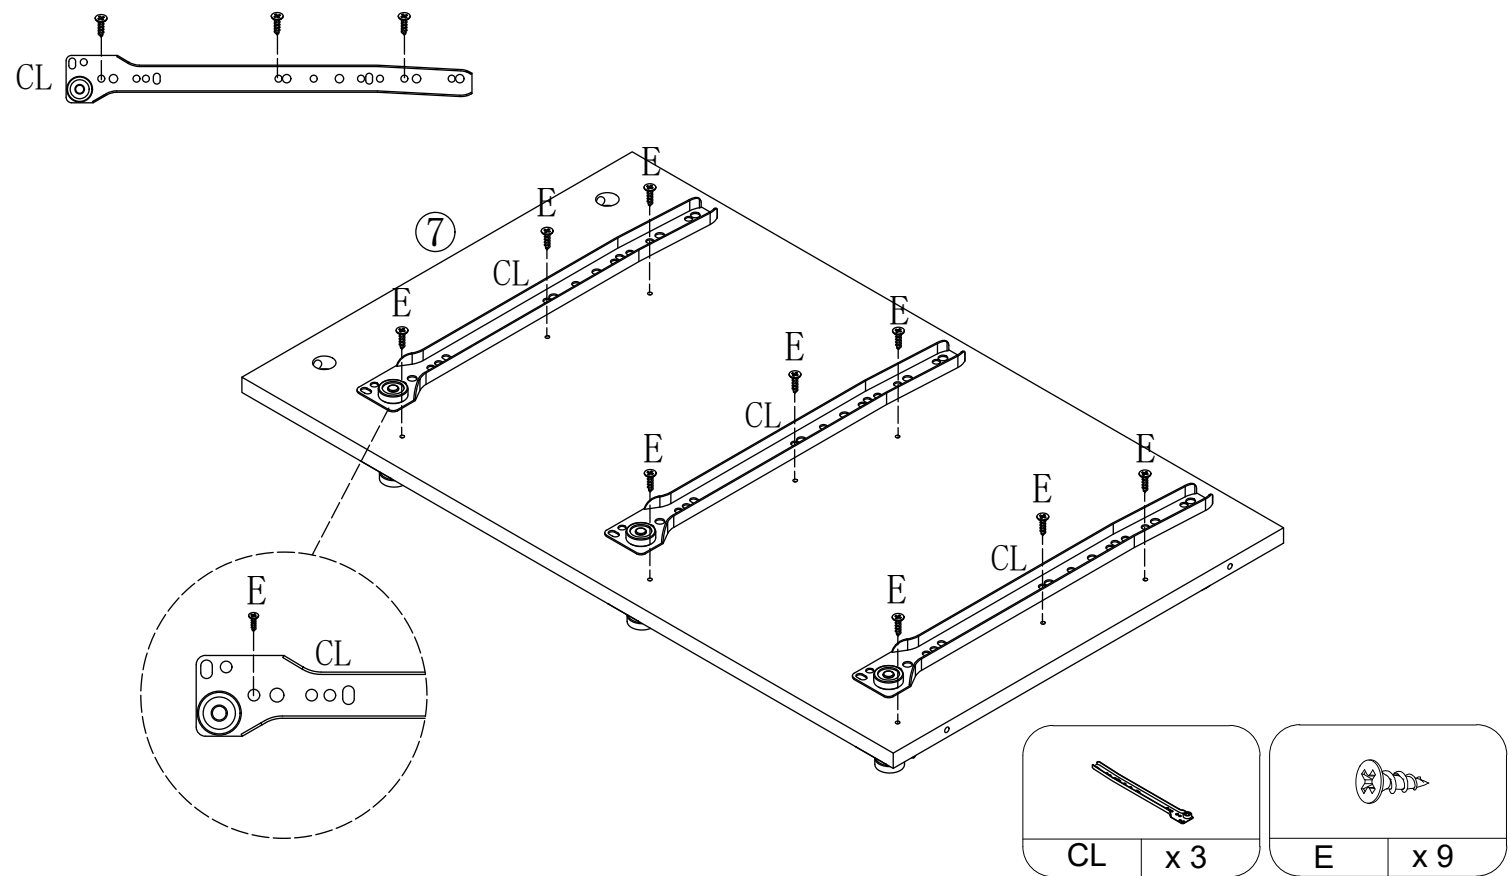


STEP 7


×2

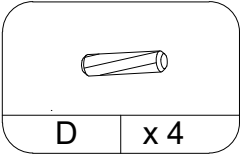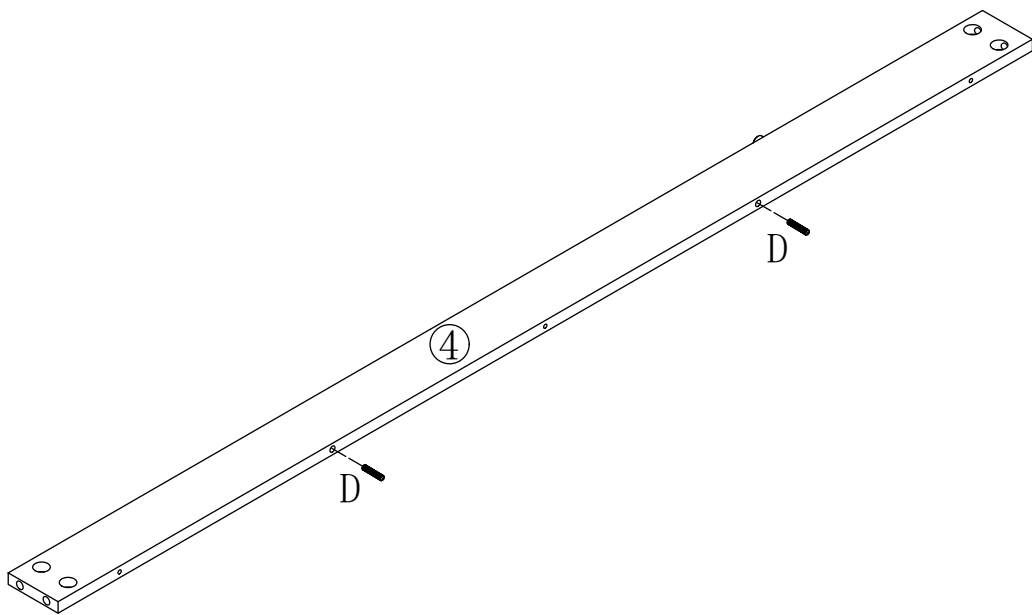


STEP 8

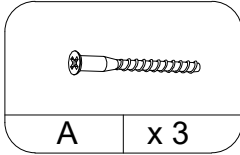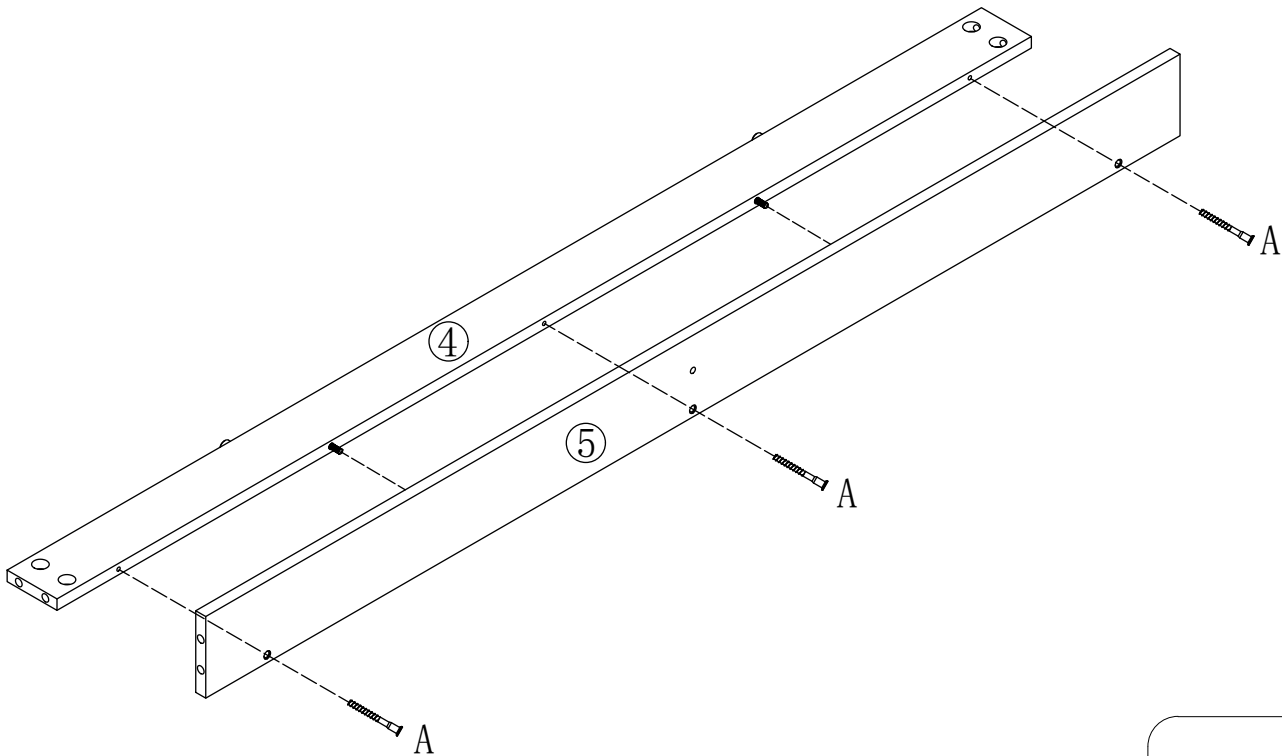



STEP 9

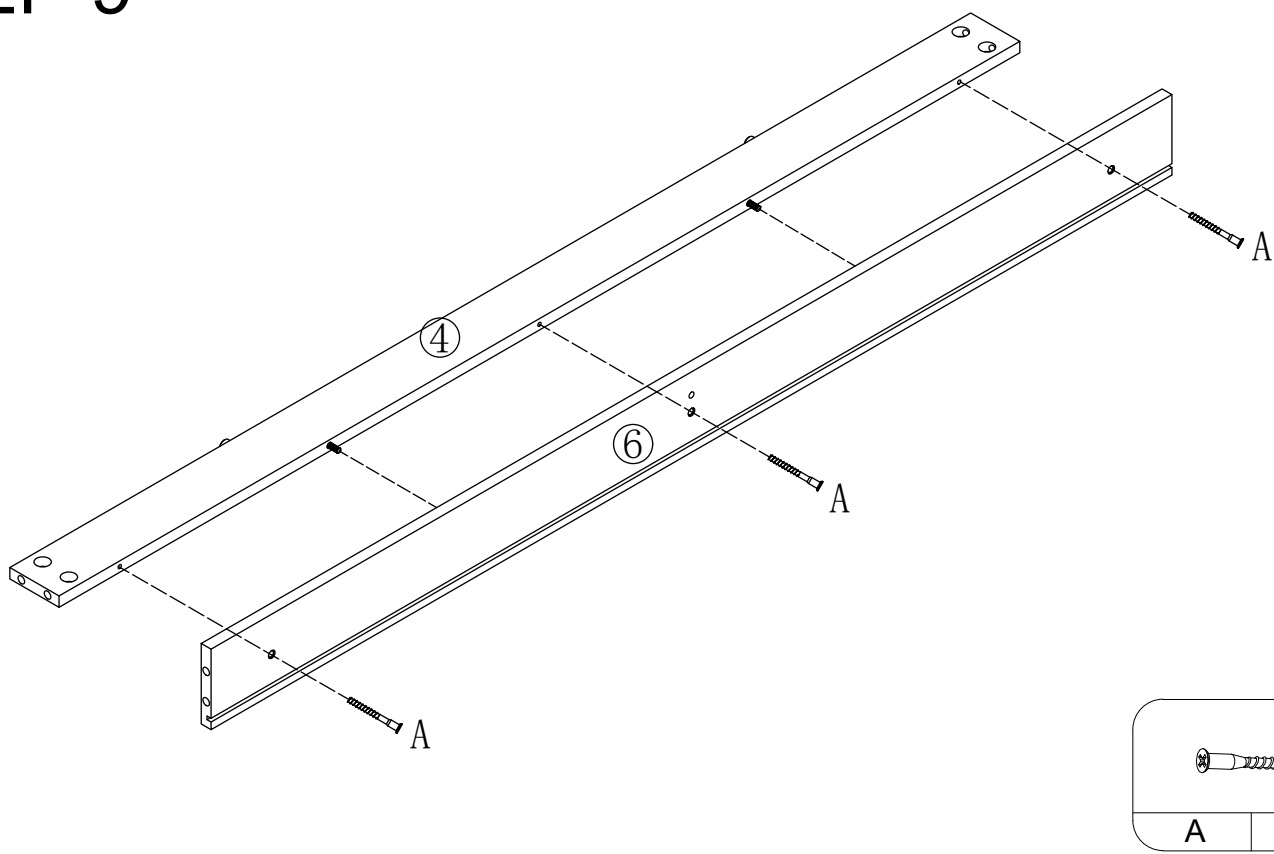




STEP 10

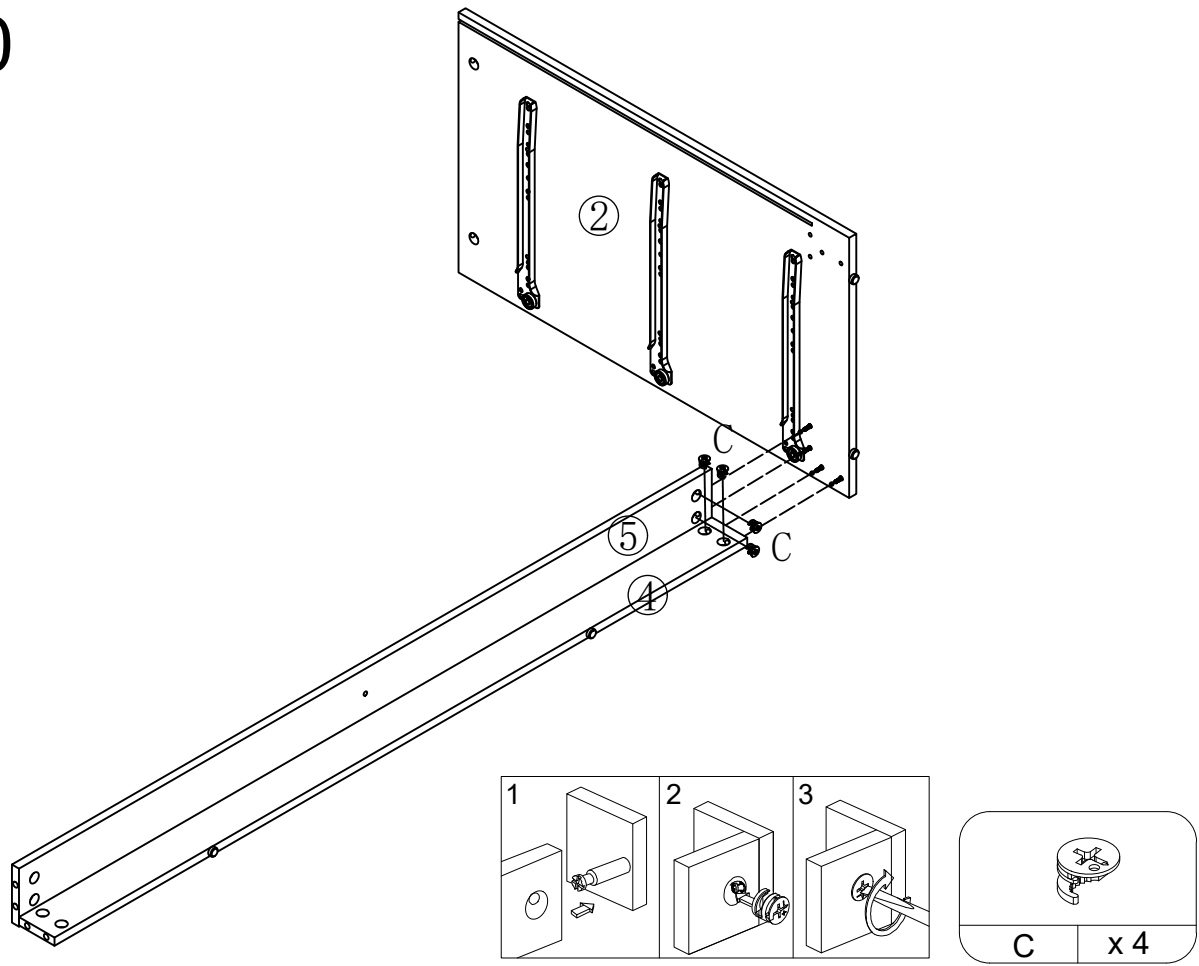




STEP 11

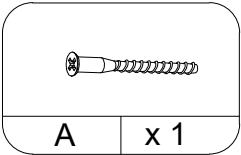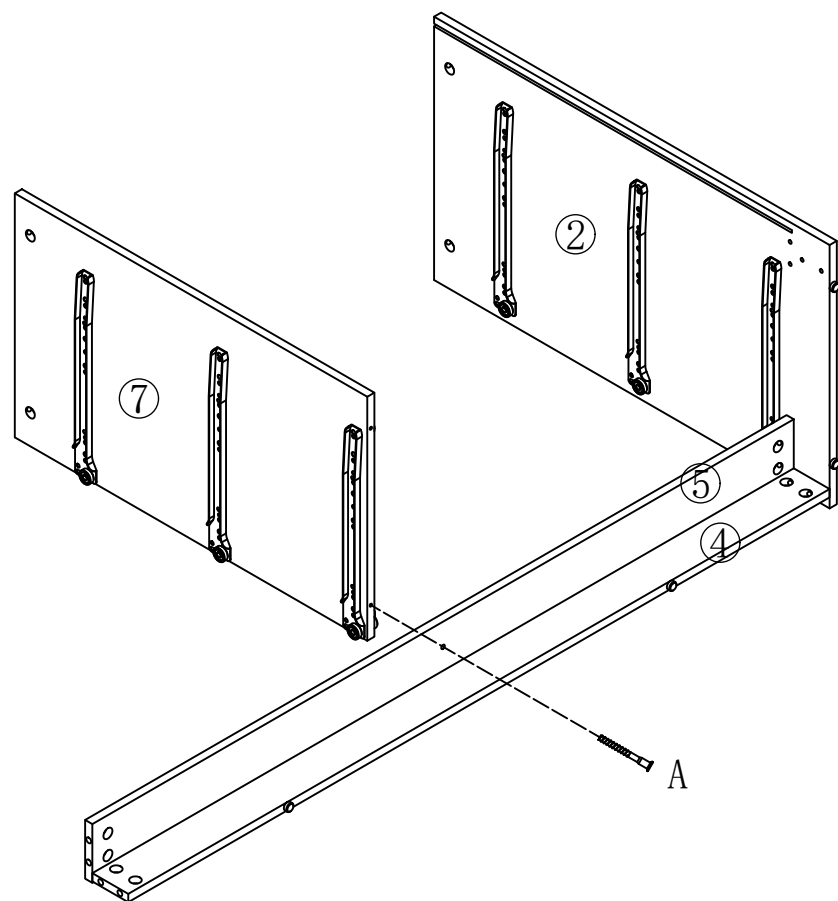


STEP 12

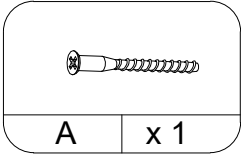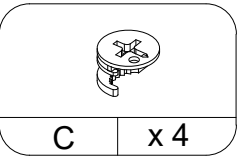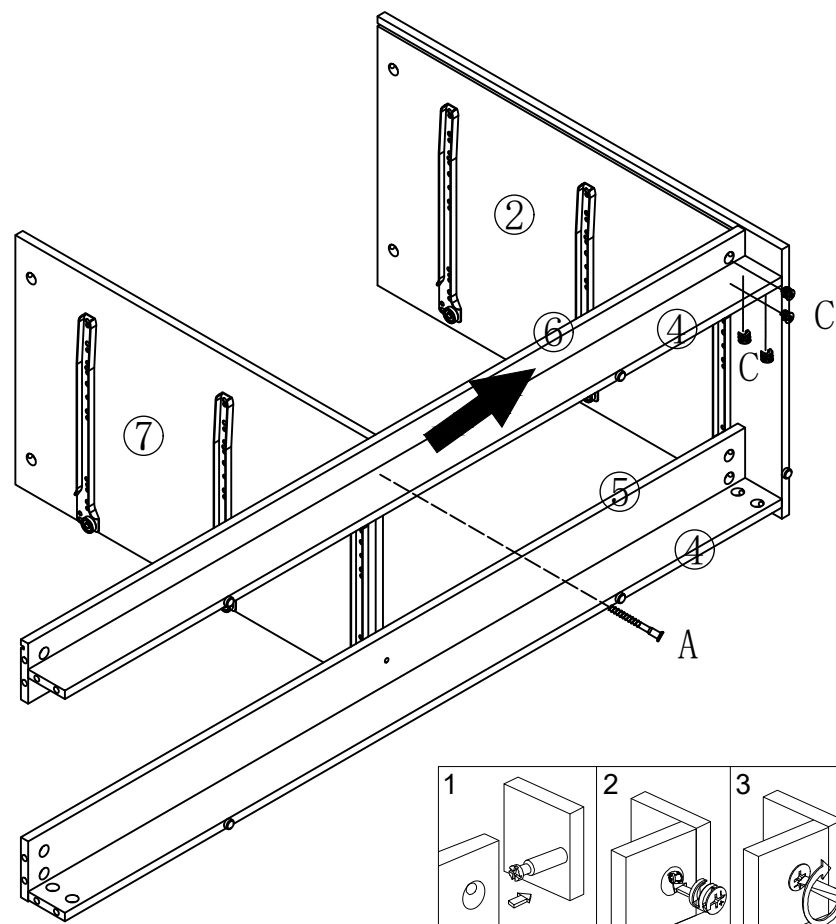




STEP 13

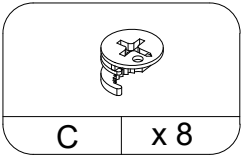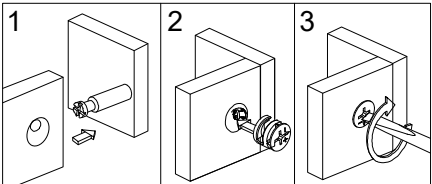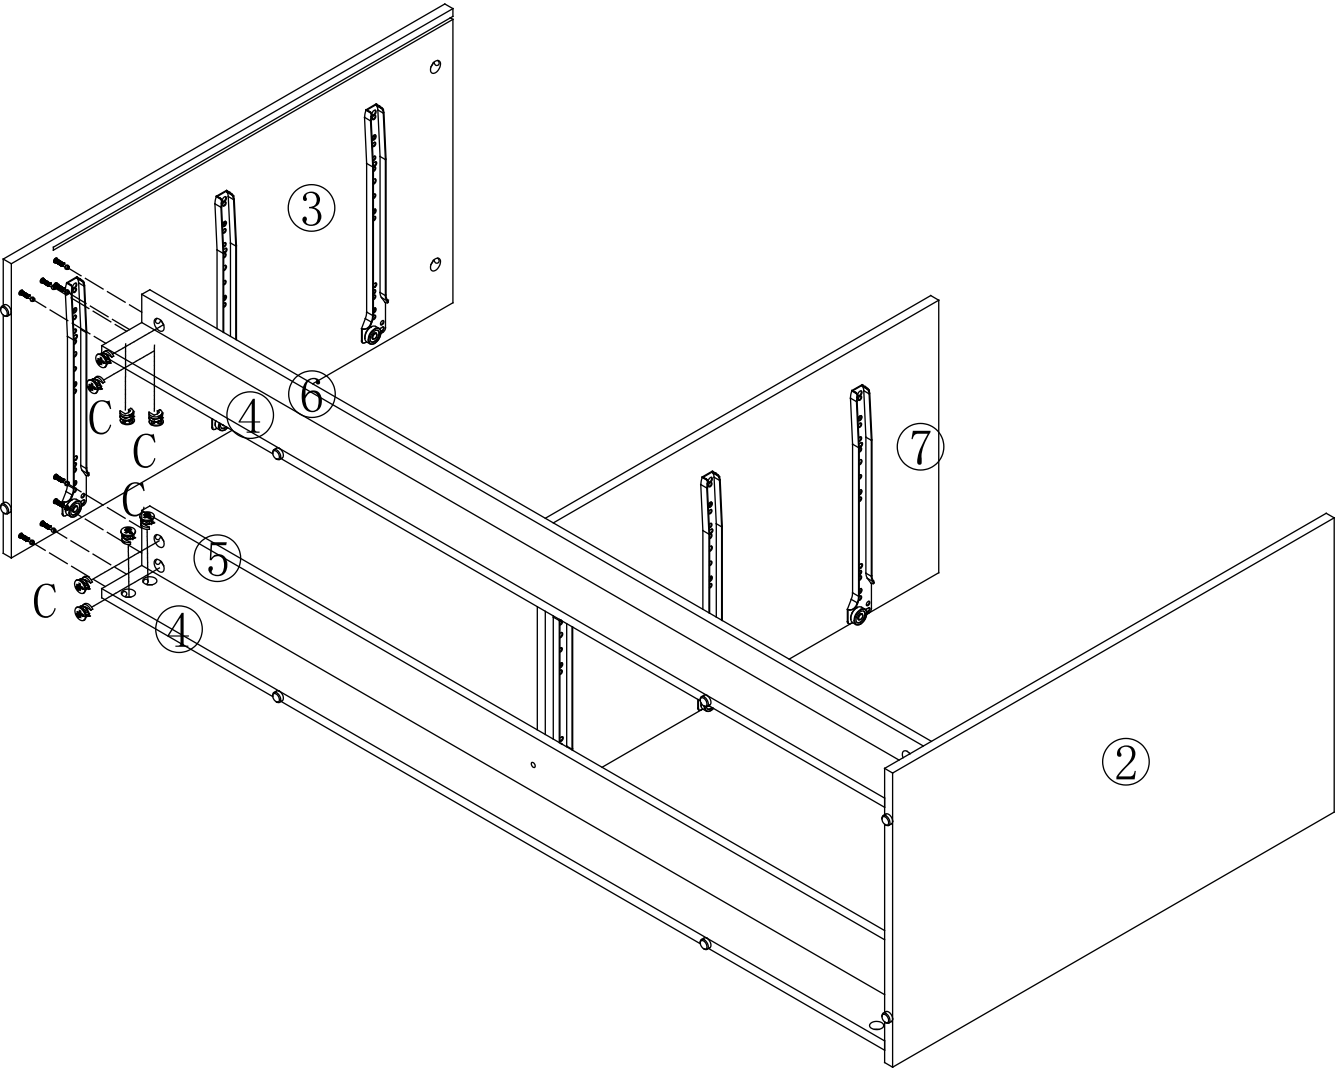



STEP 14

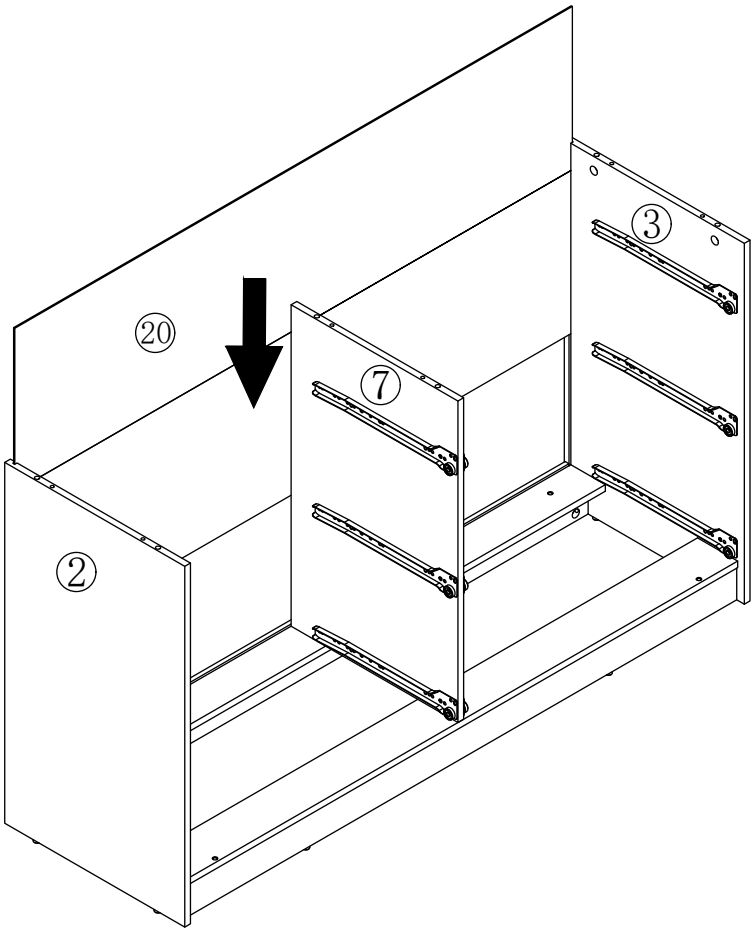



STEP 15

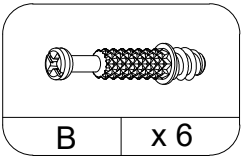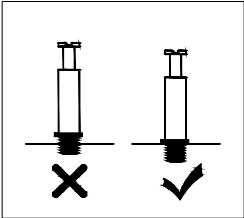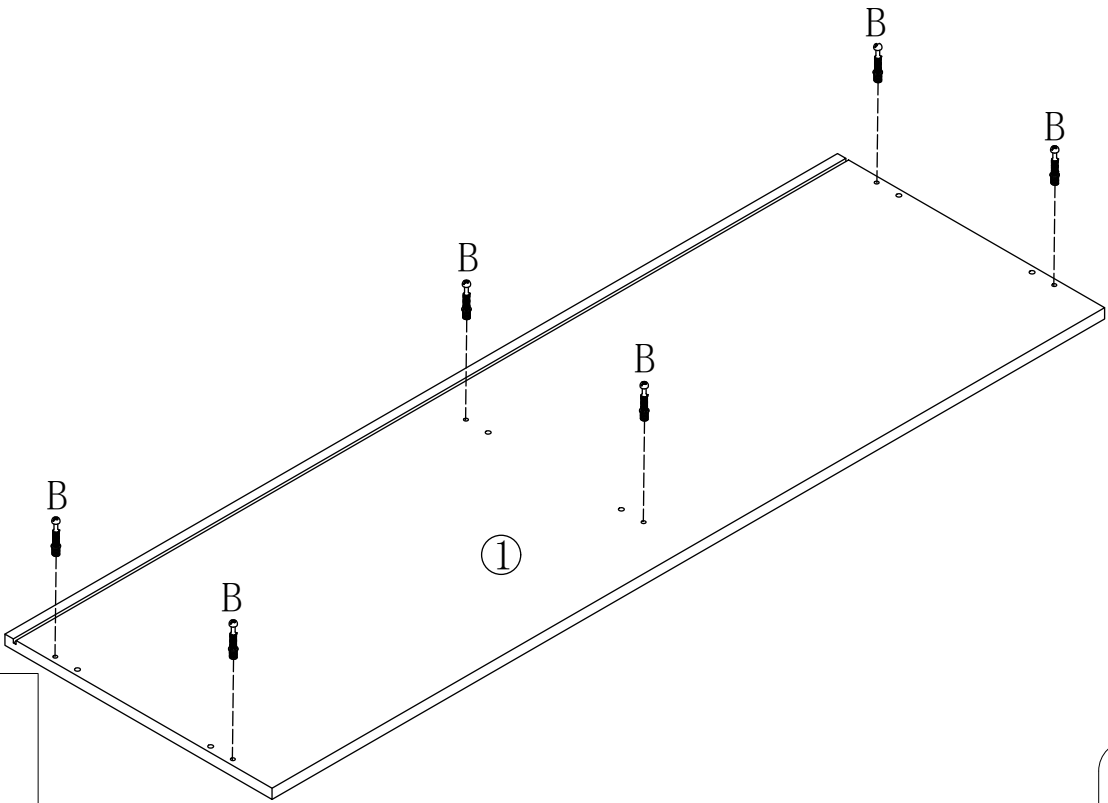


STEP 16

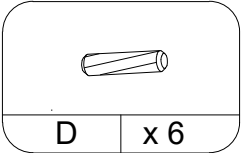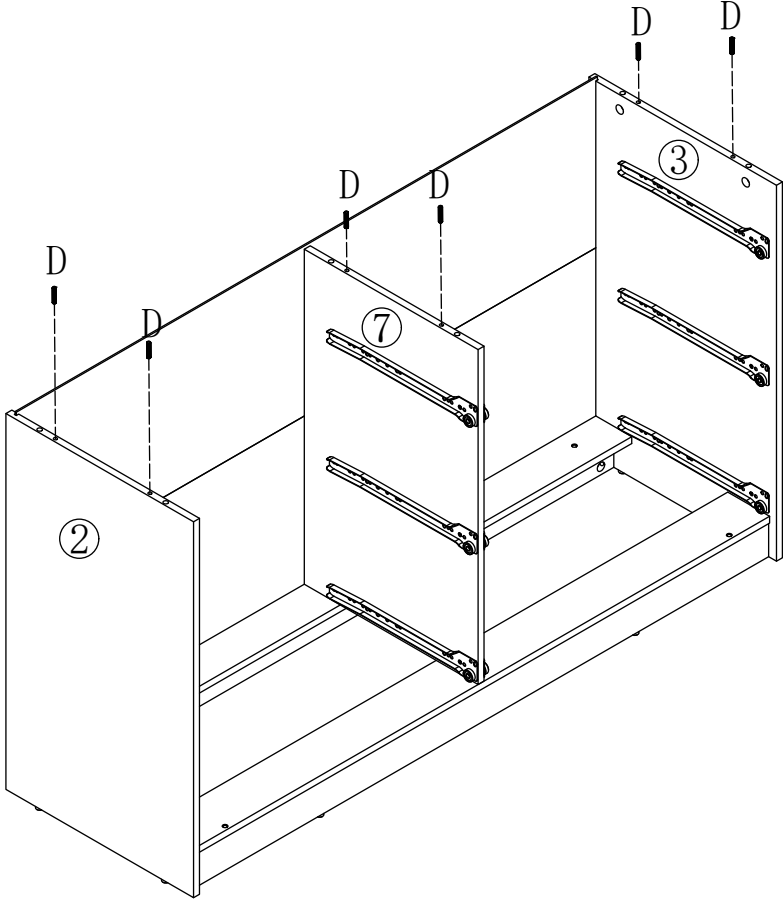

STEP 17

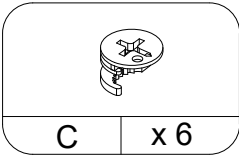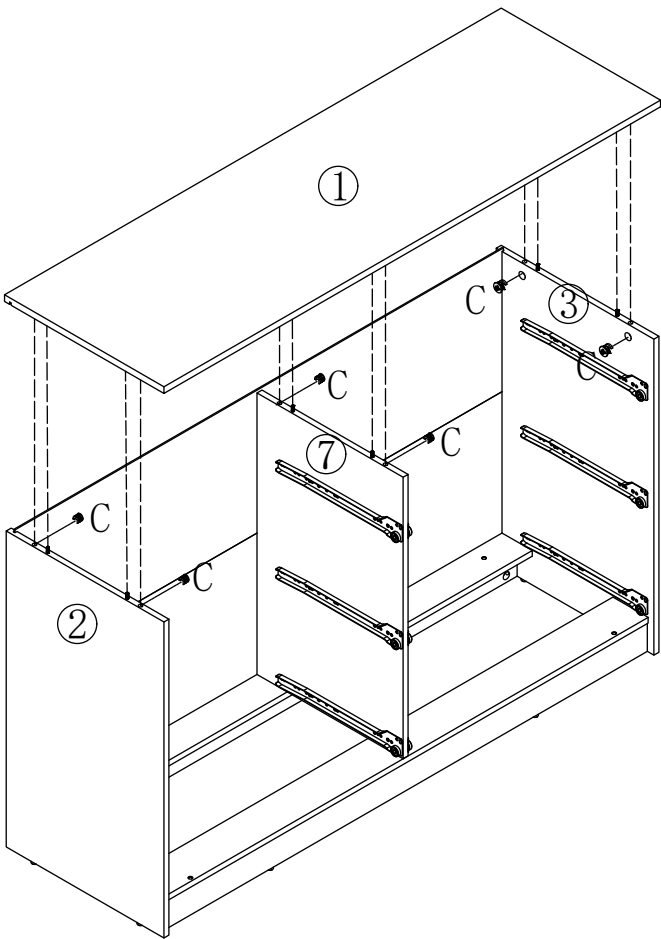


STEP 18

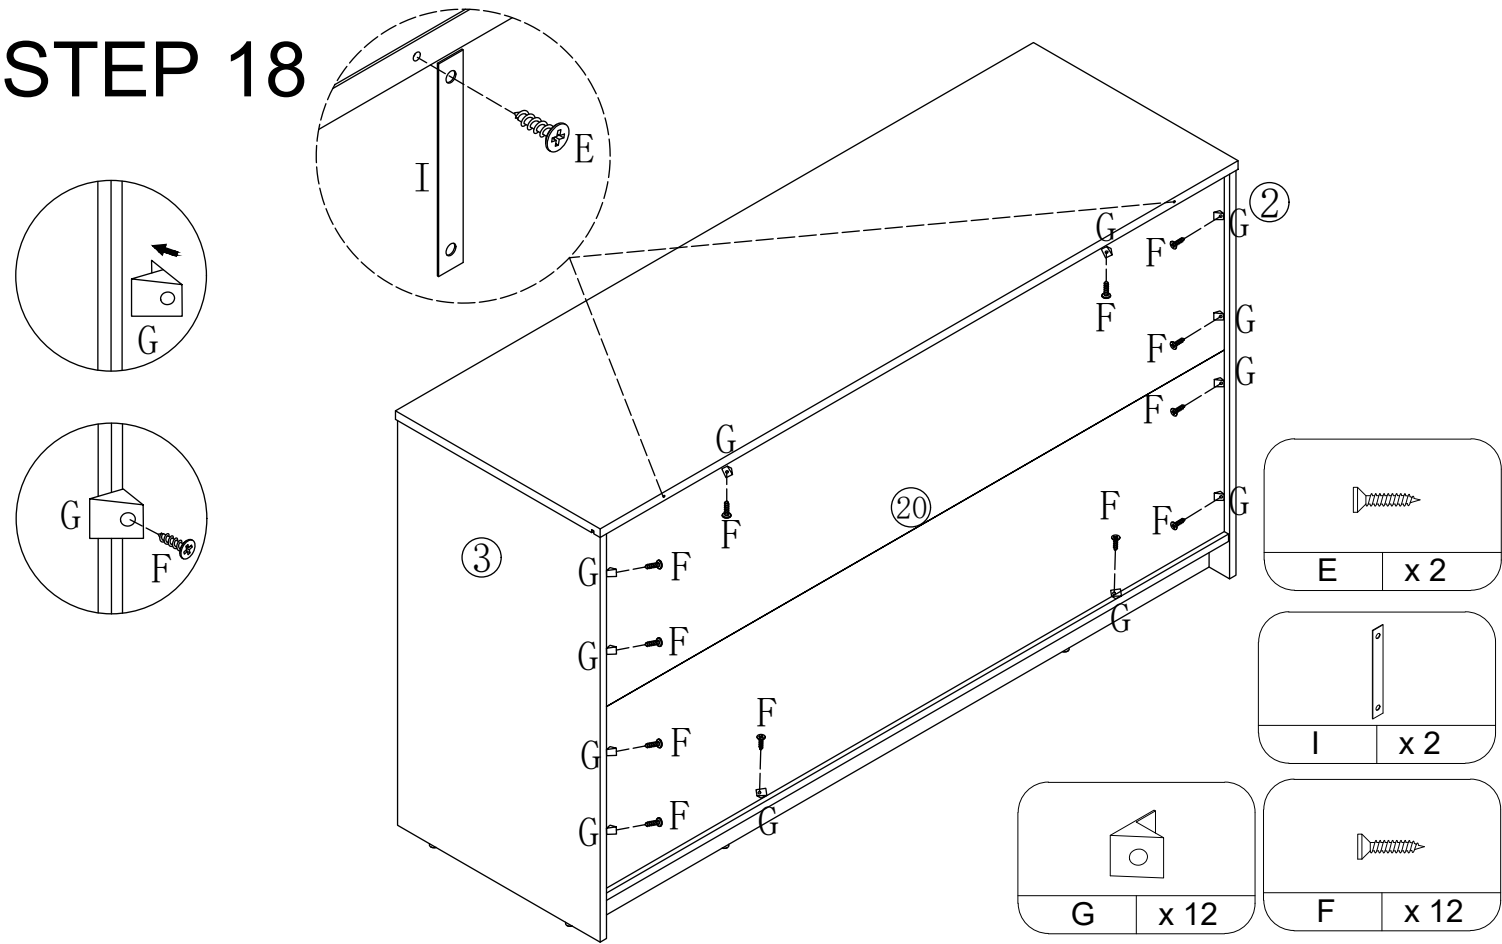



STEP 19

x2

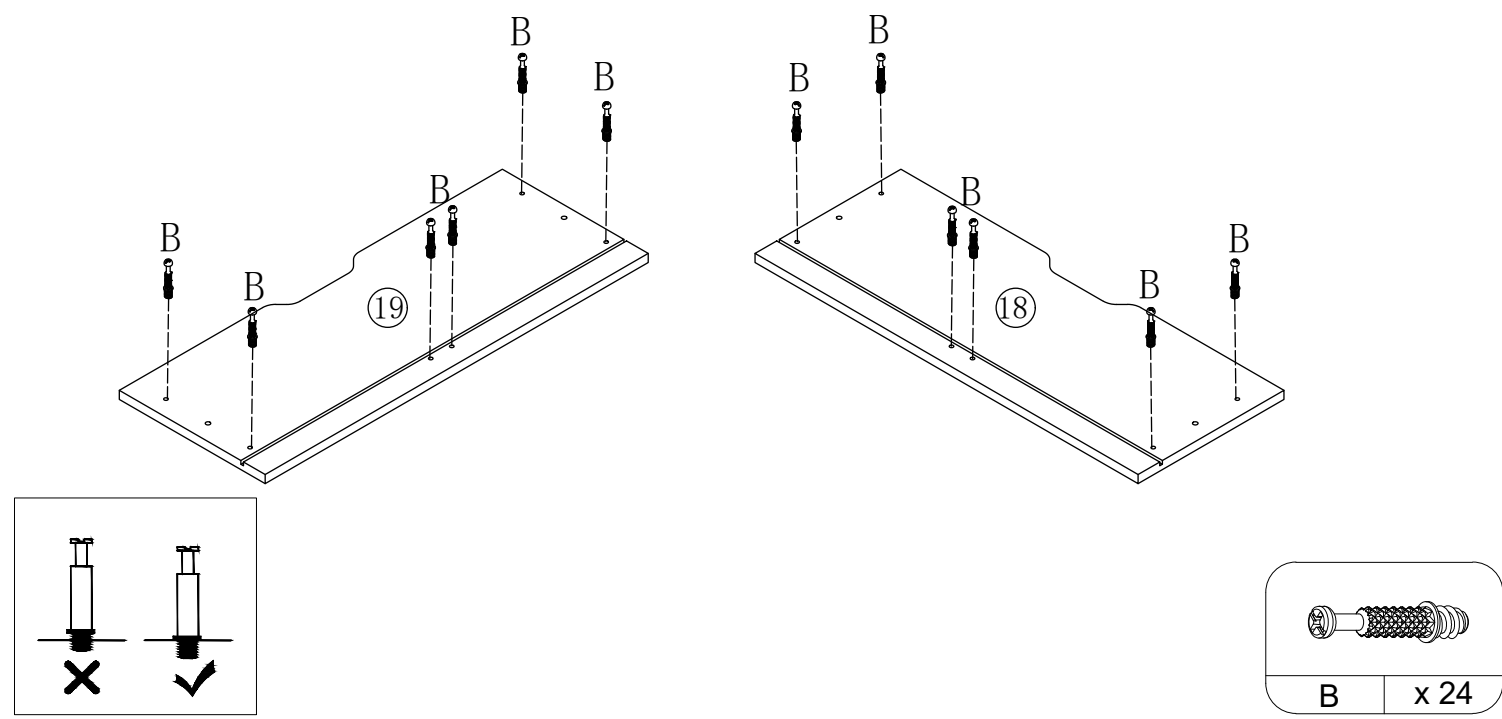




STEP 20

×4

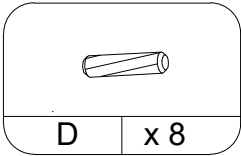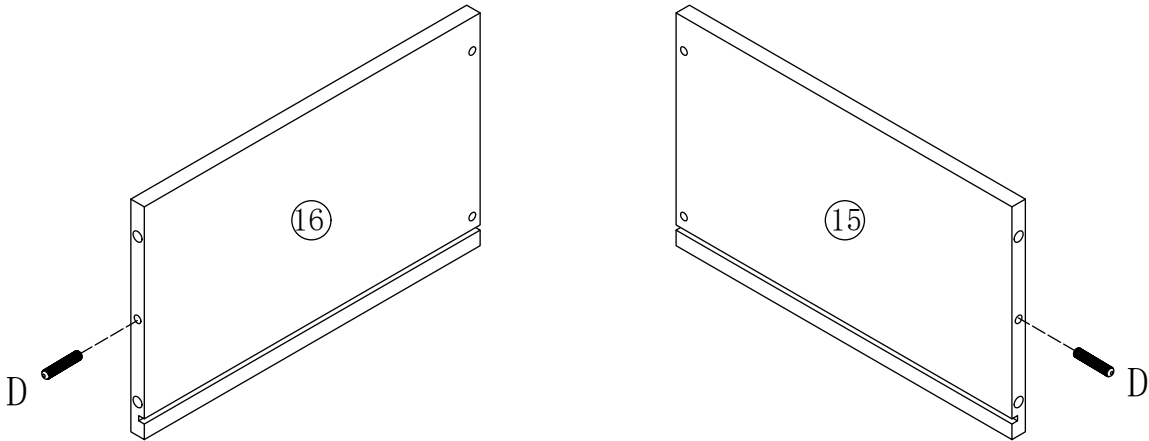


STEP 21

×2

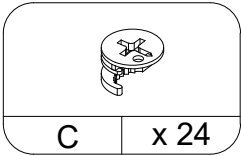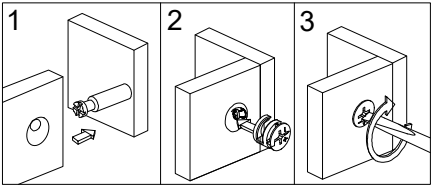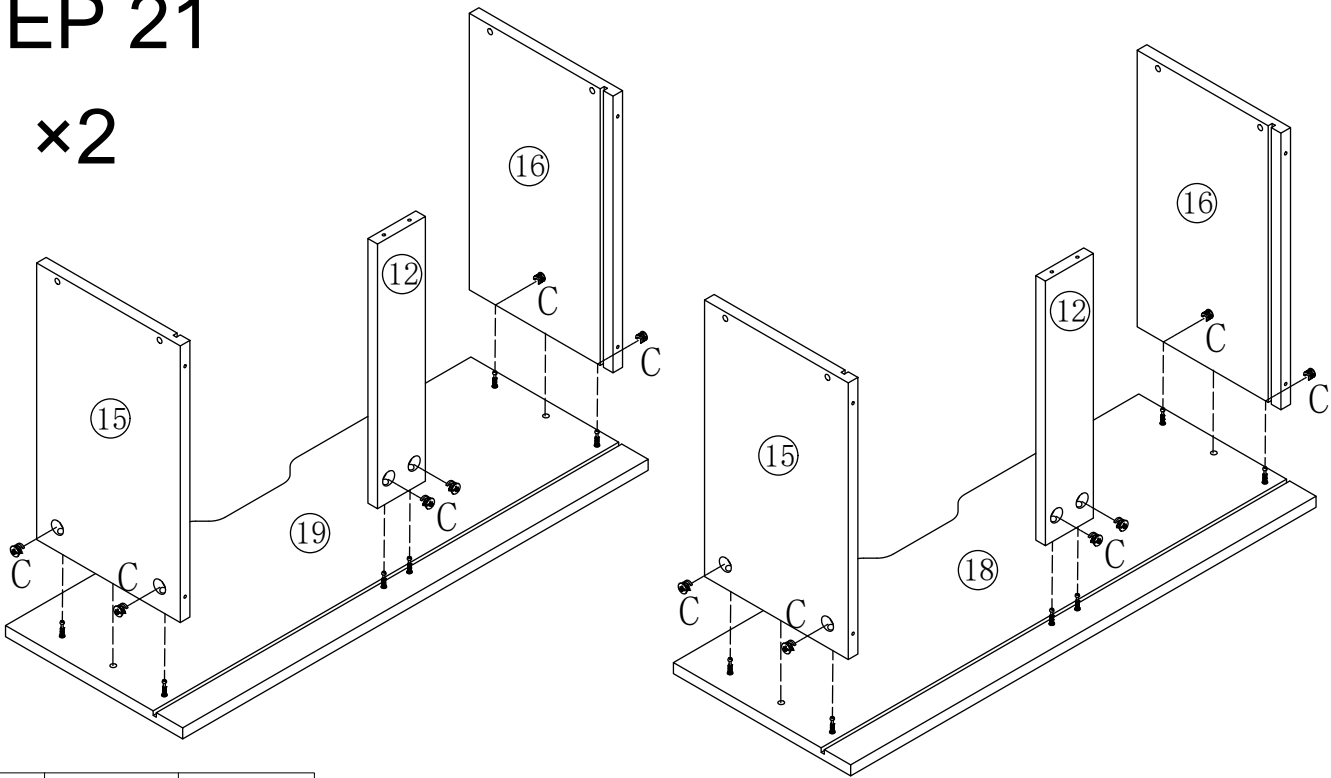



STEP 22

×2

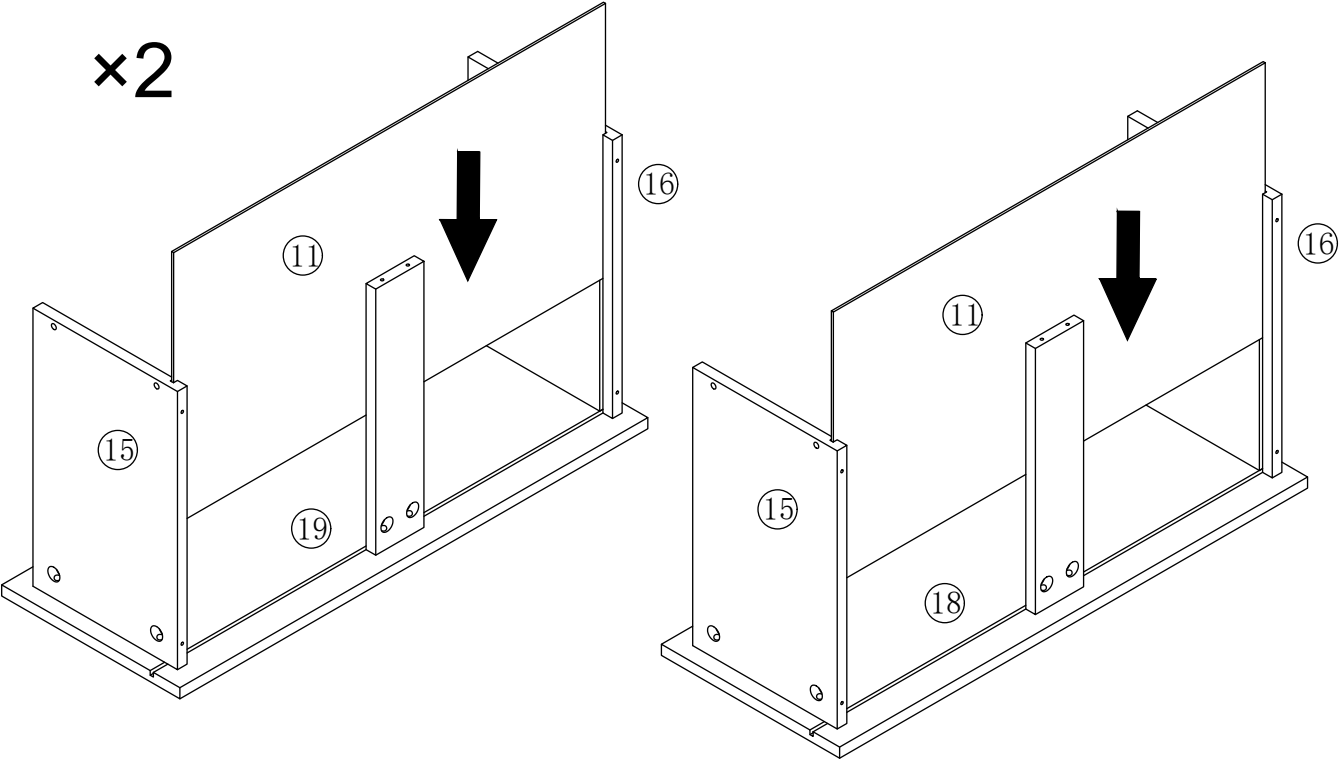


STEP 23

×2

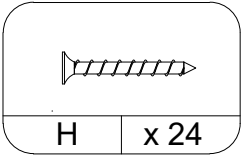
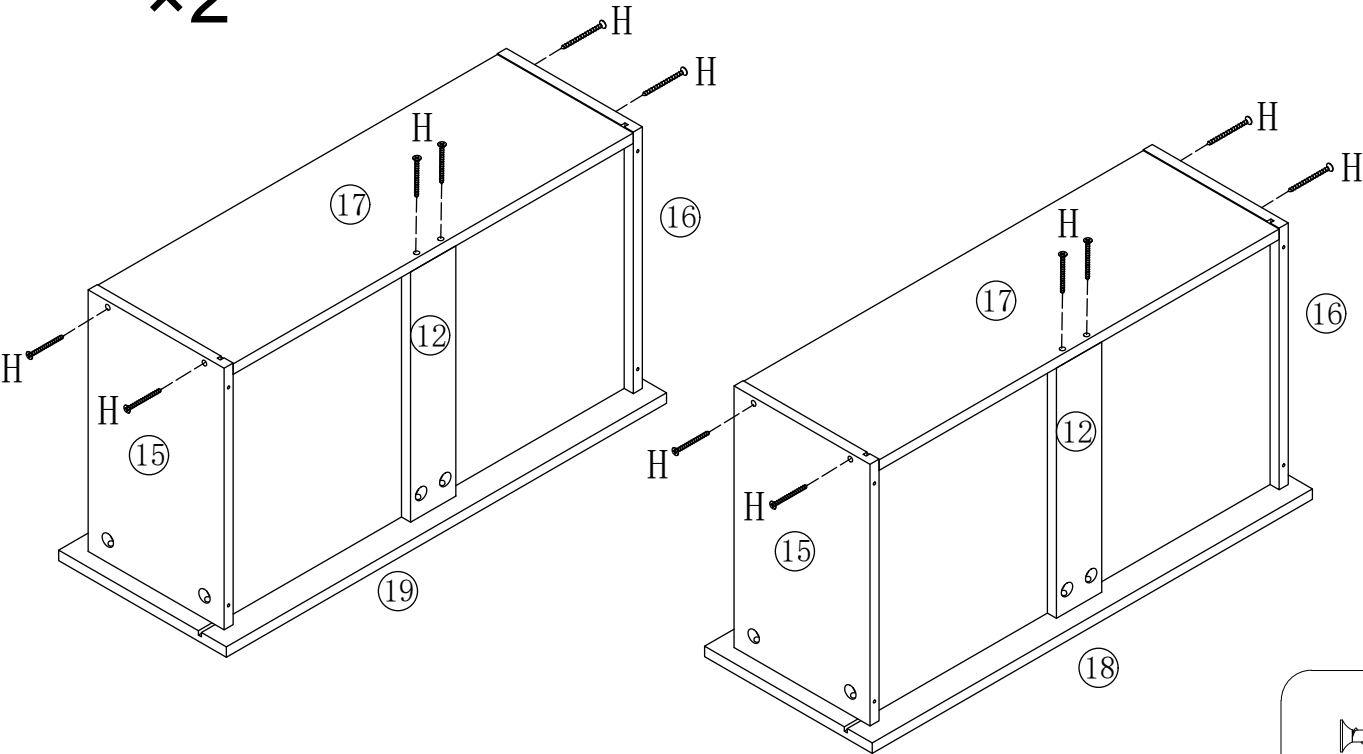


STEP 24

×4


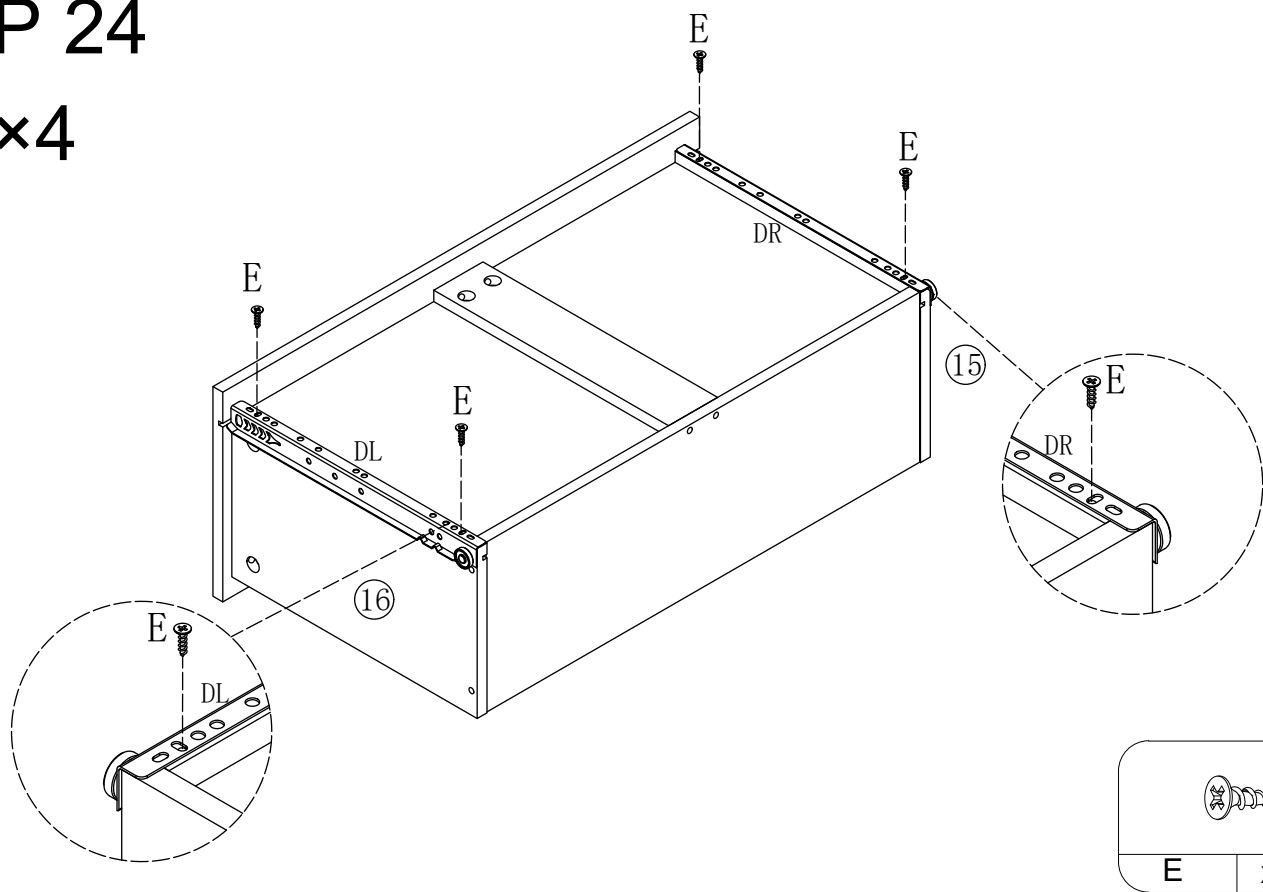


STEP 25


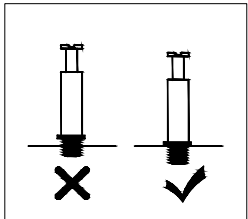
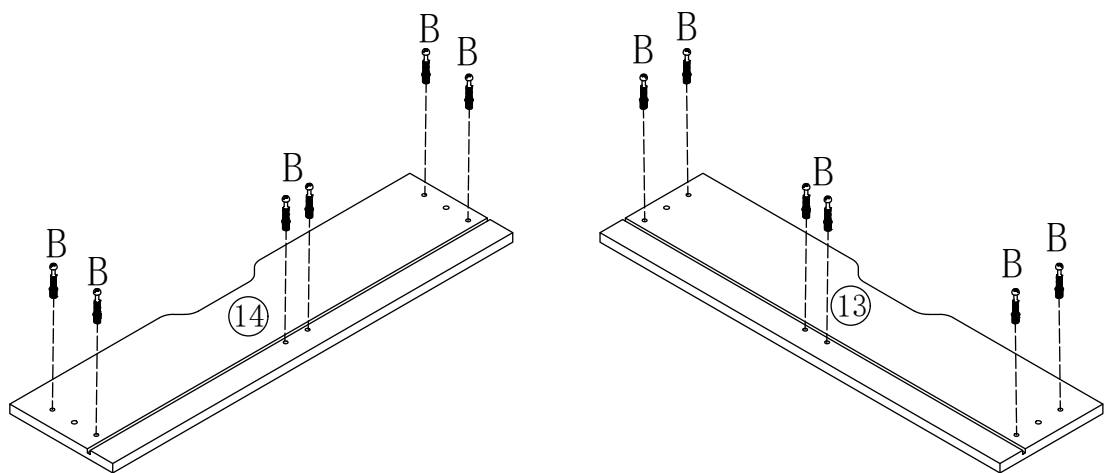


STEP 26


×2

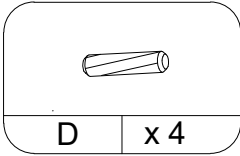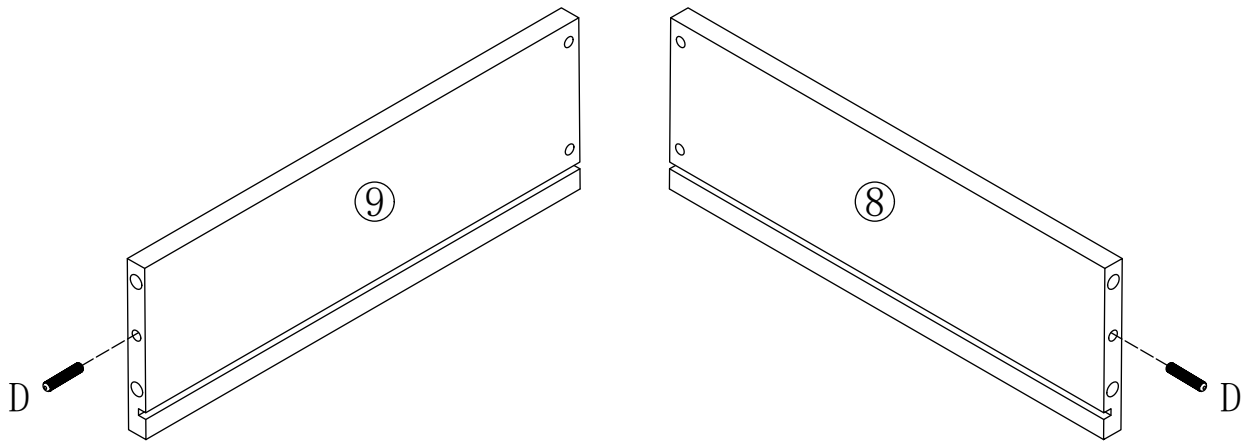



STEP 27

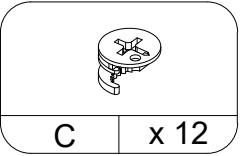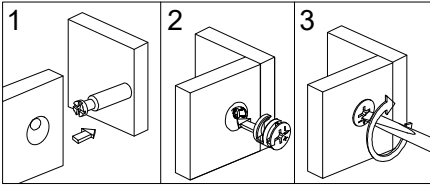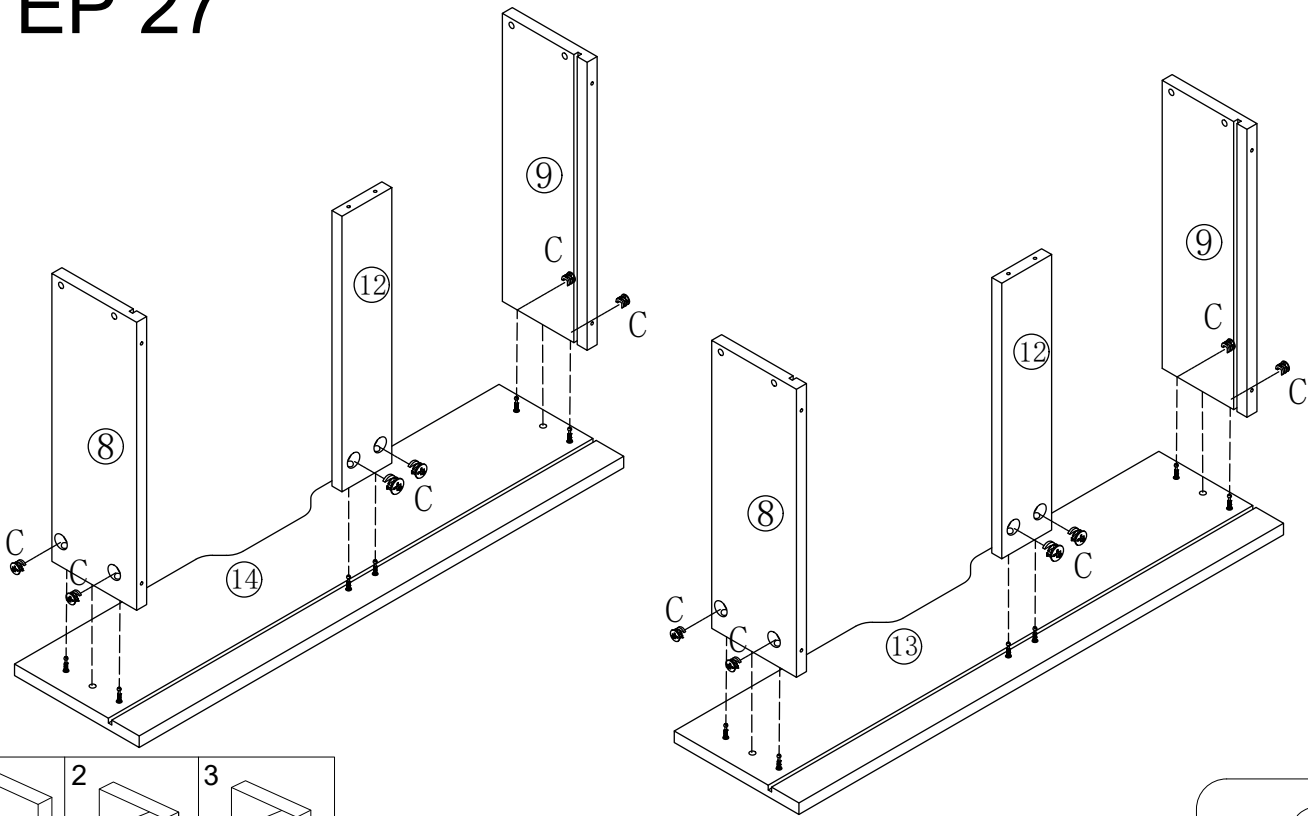


STEP 28

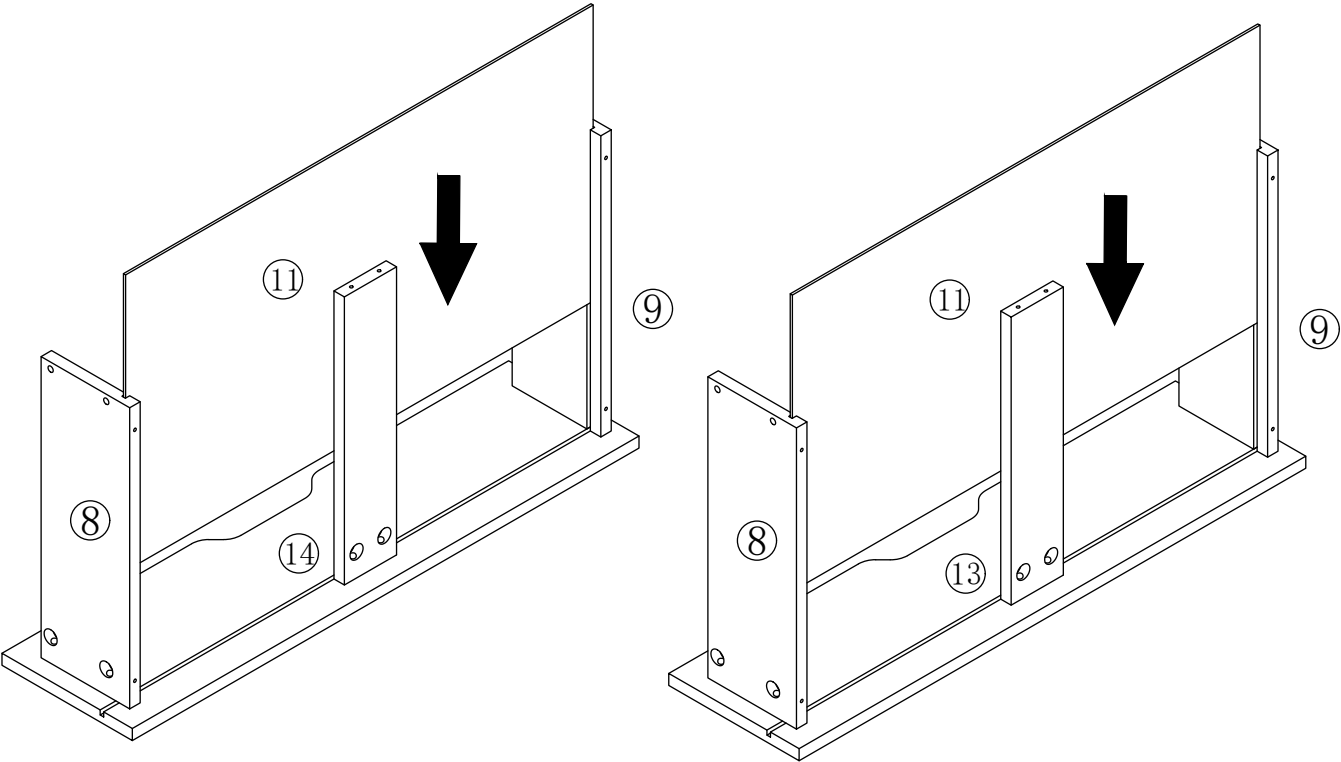


STEP 29

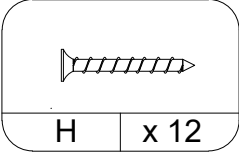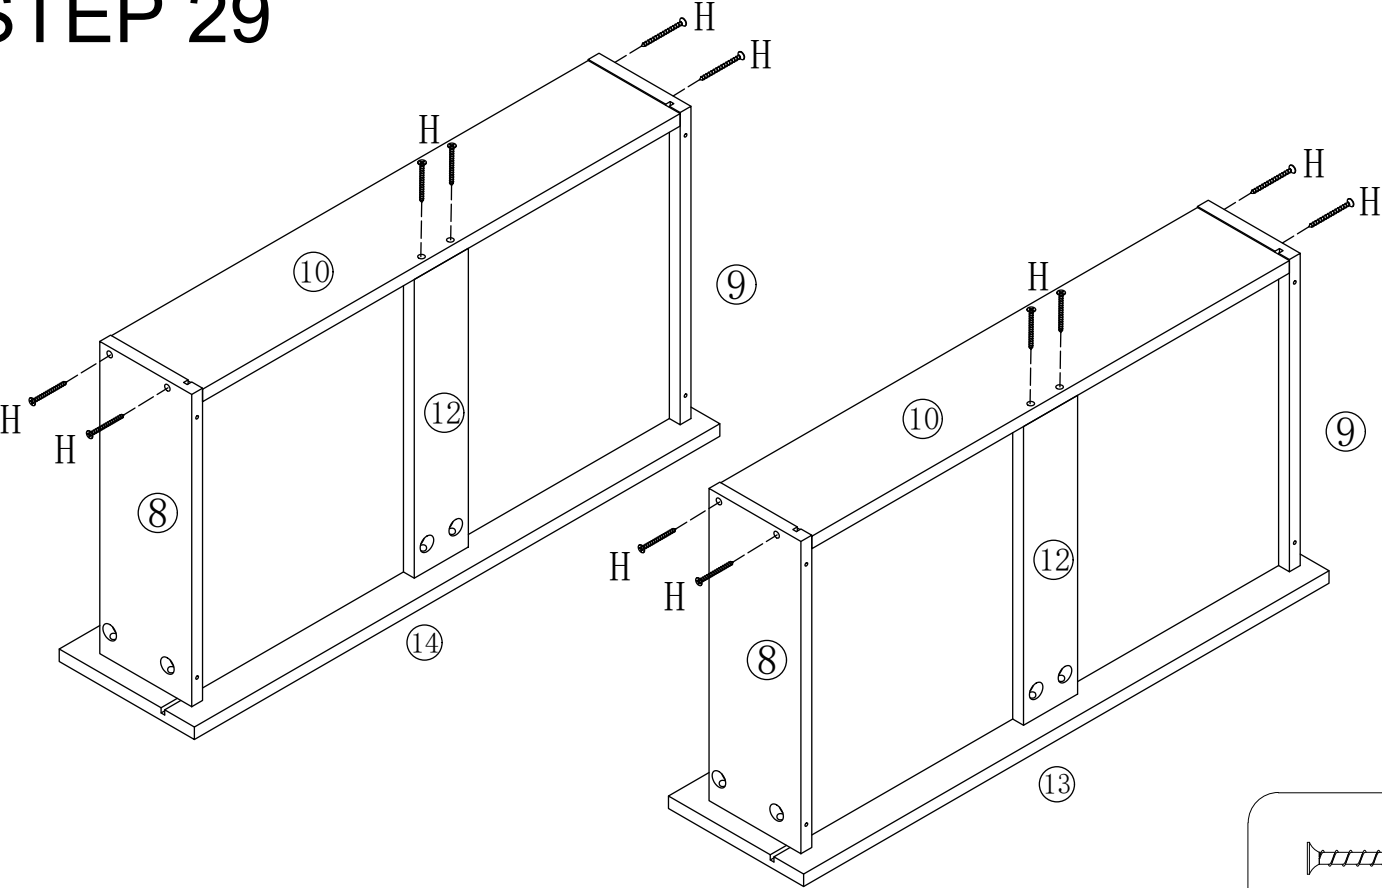


STEP 30

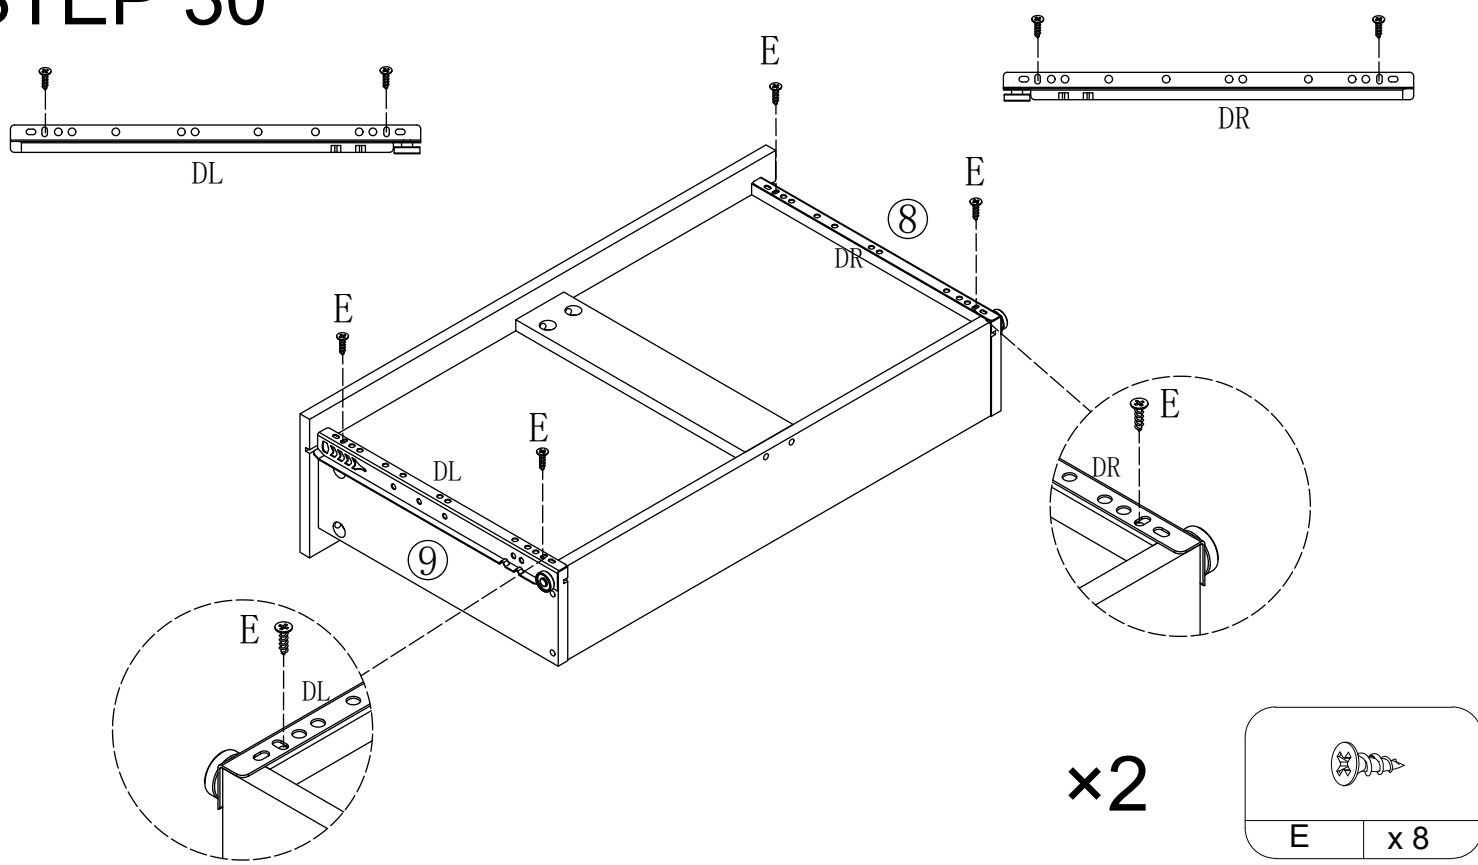


STEP 31

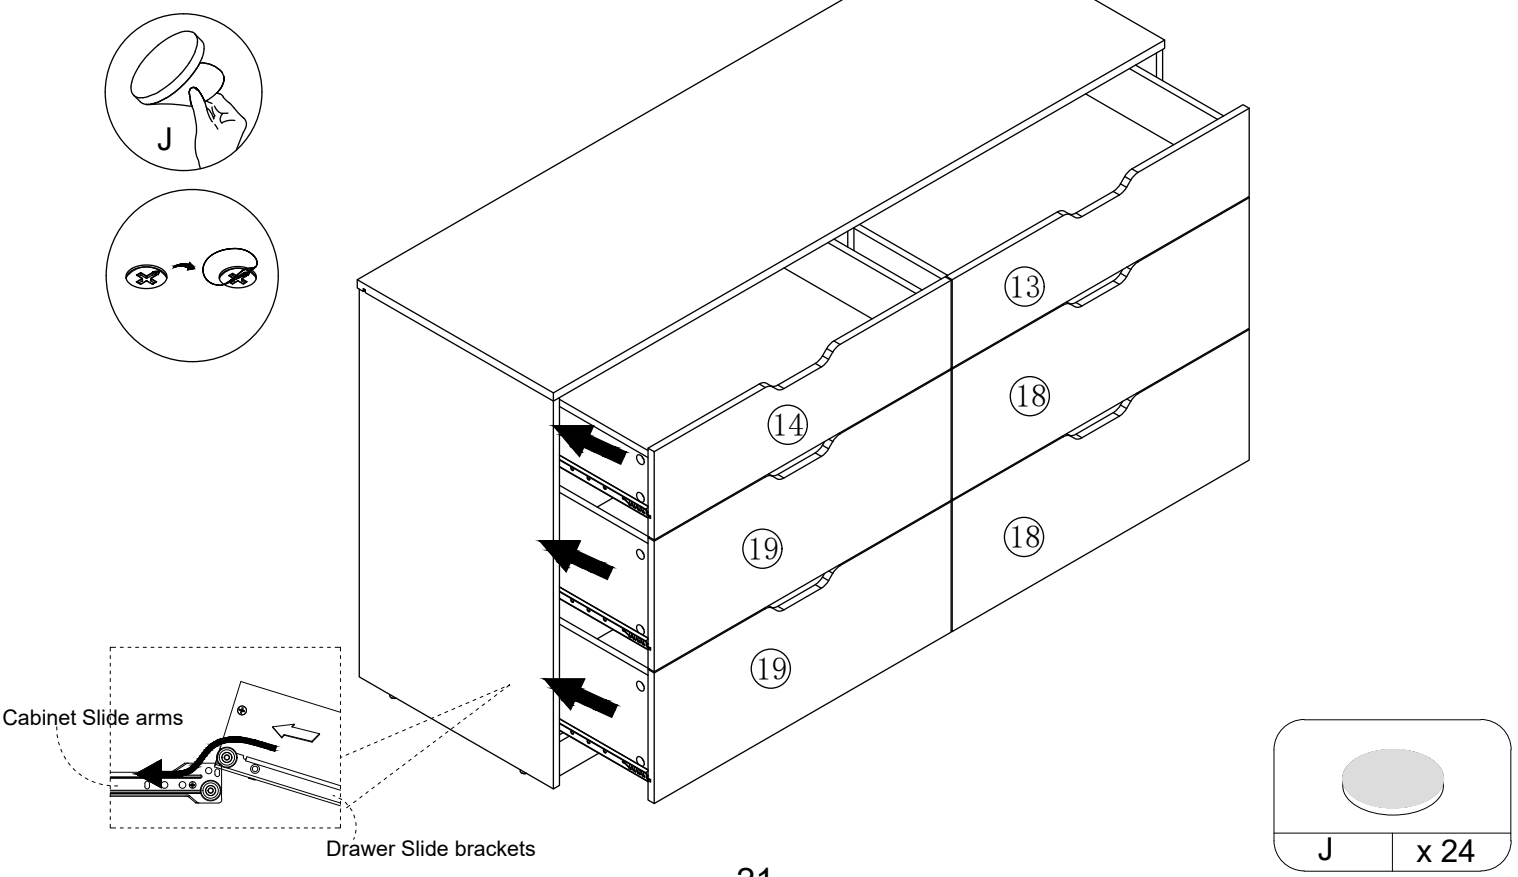

STEP 32

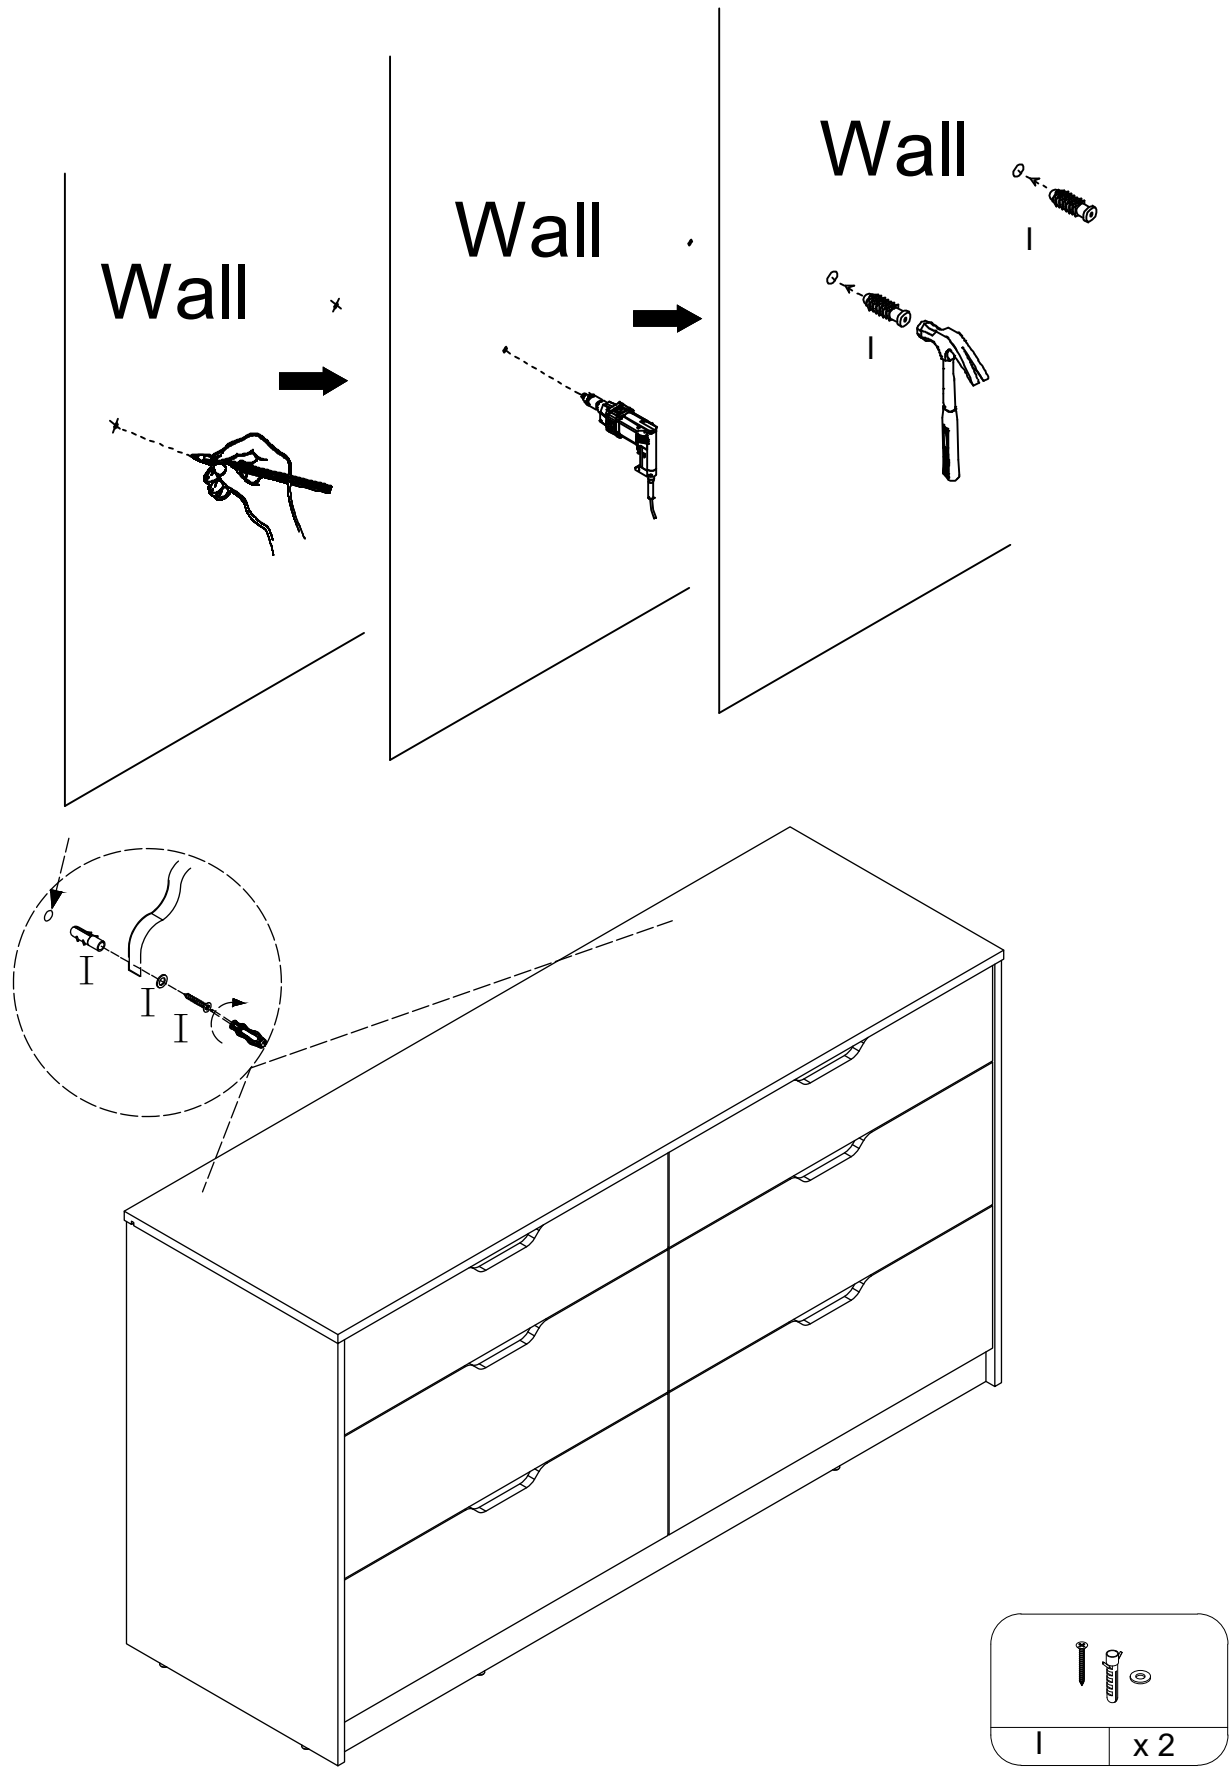

STEP 33

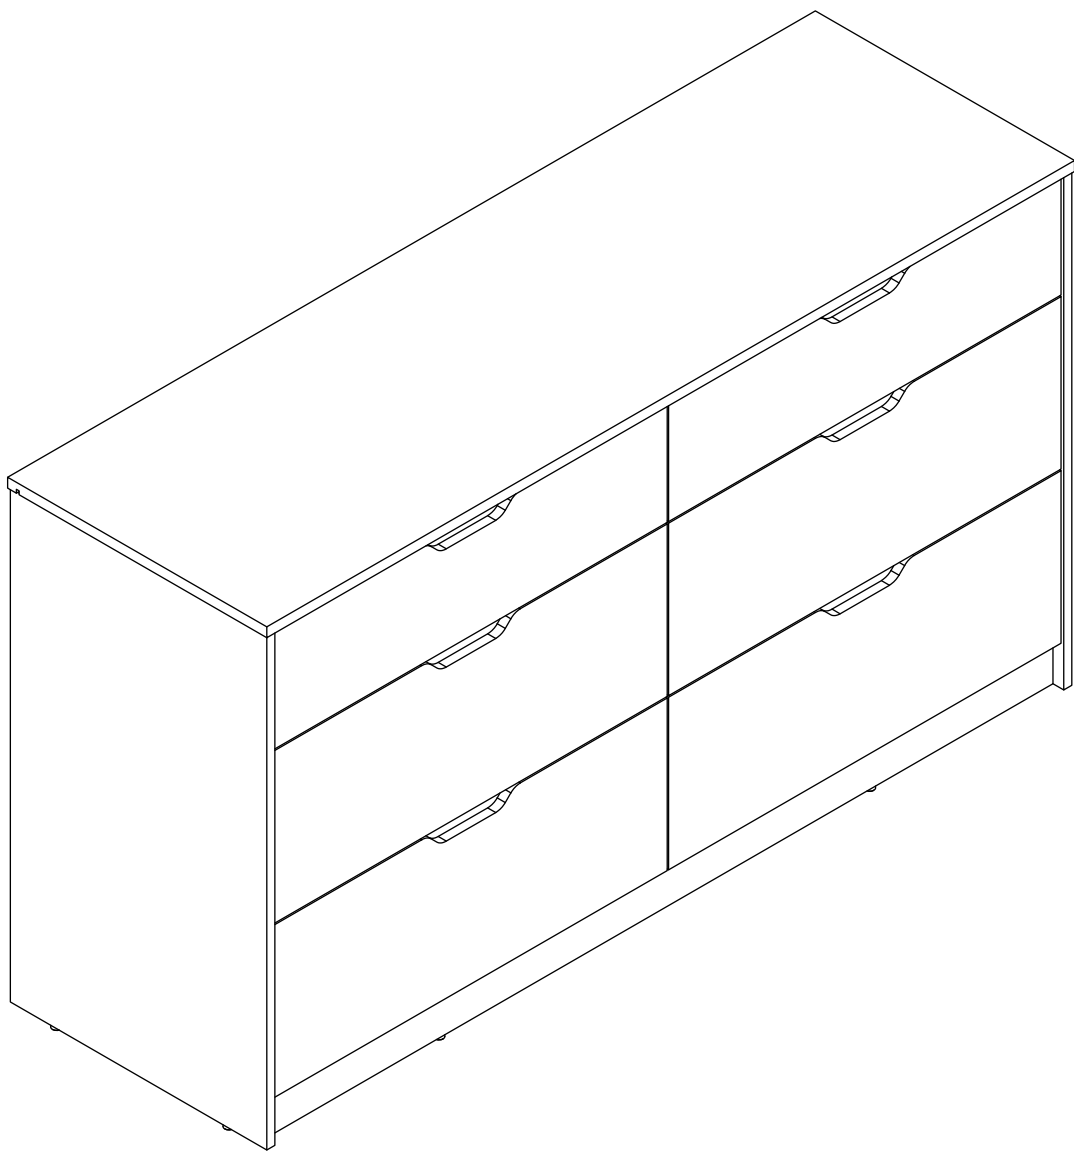

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning