


SKU:S025

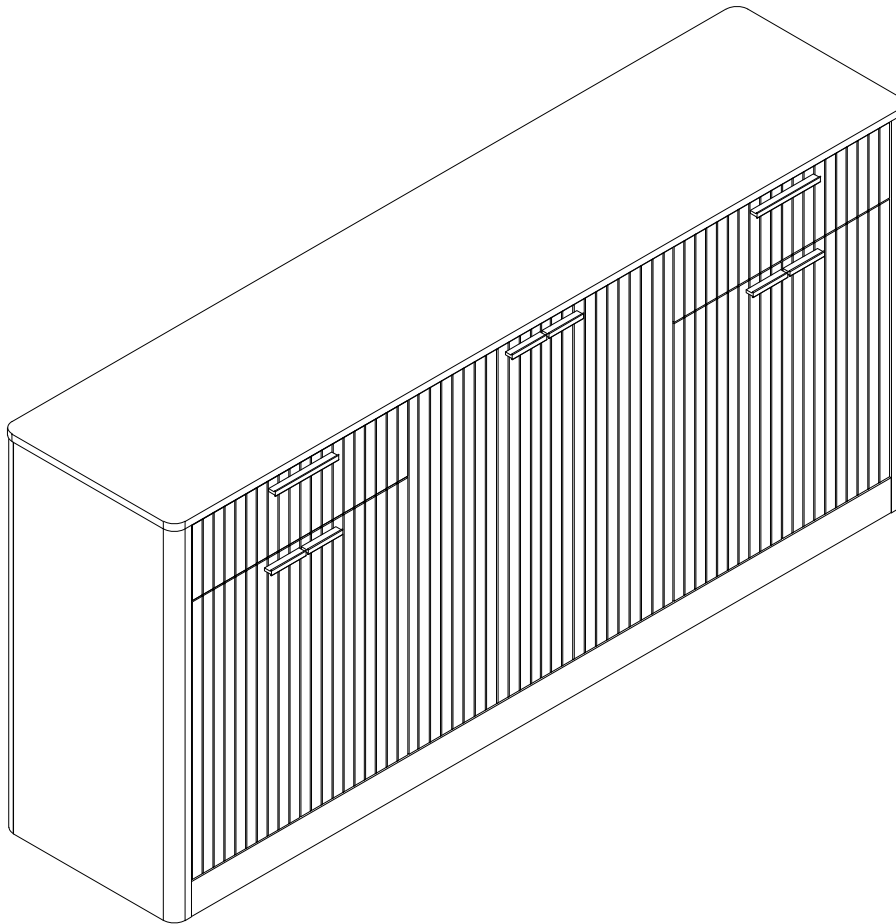


 WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.


1.Note:This is not clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.

2.All cabinets come with TRO, stainless steel or our "L-Bracket" when shipped.


















SKU:S025

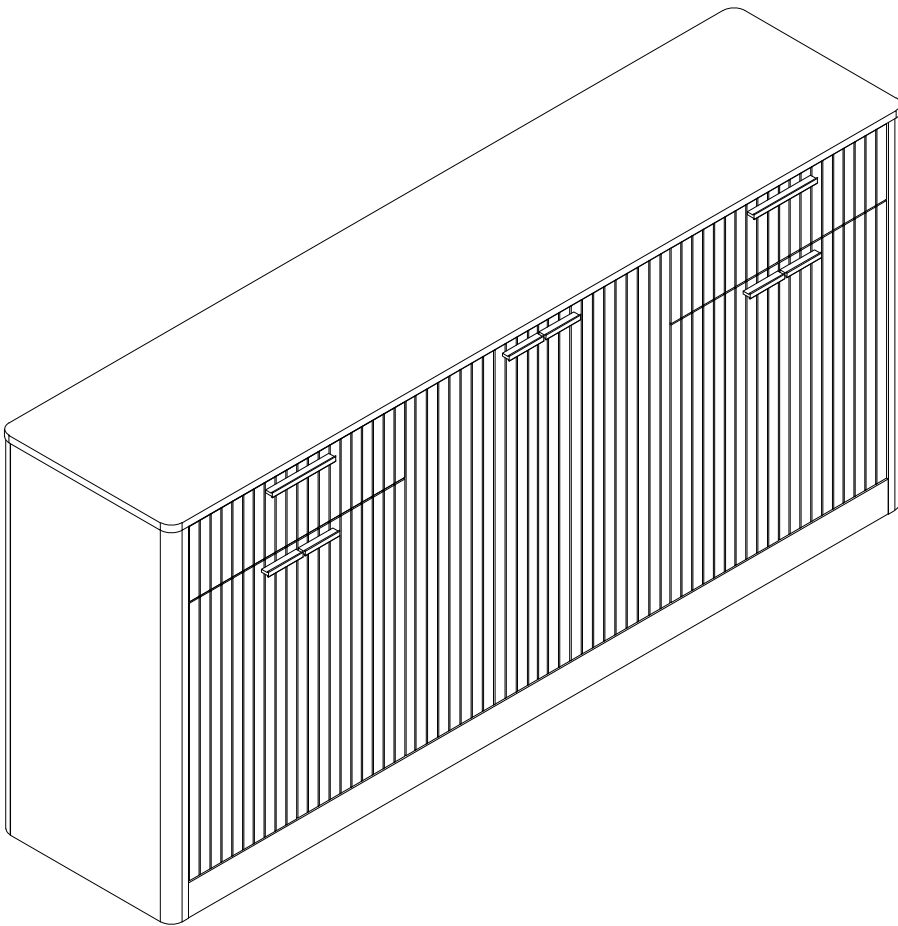










Part List

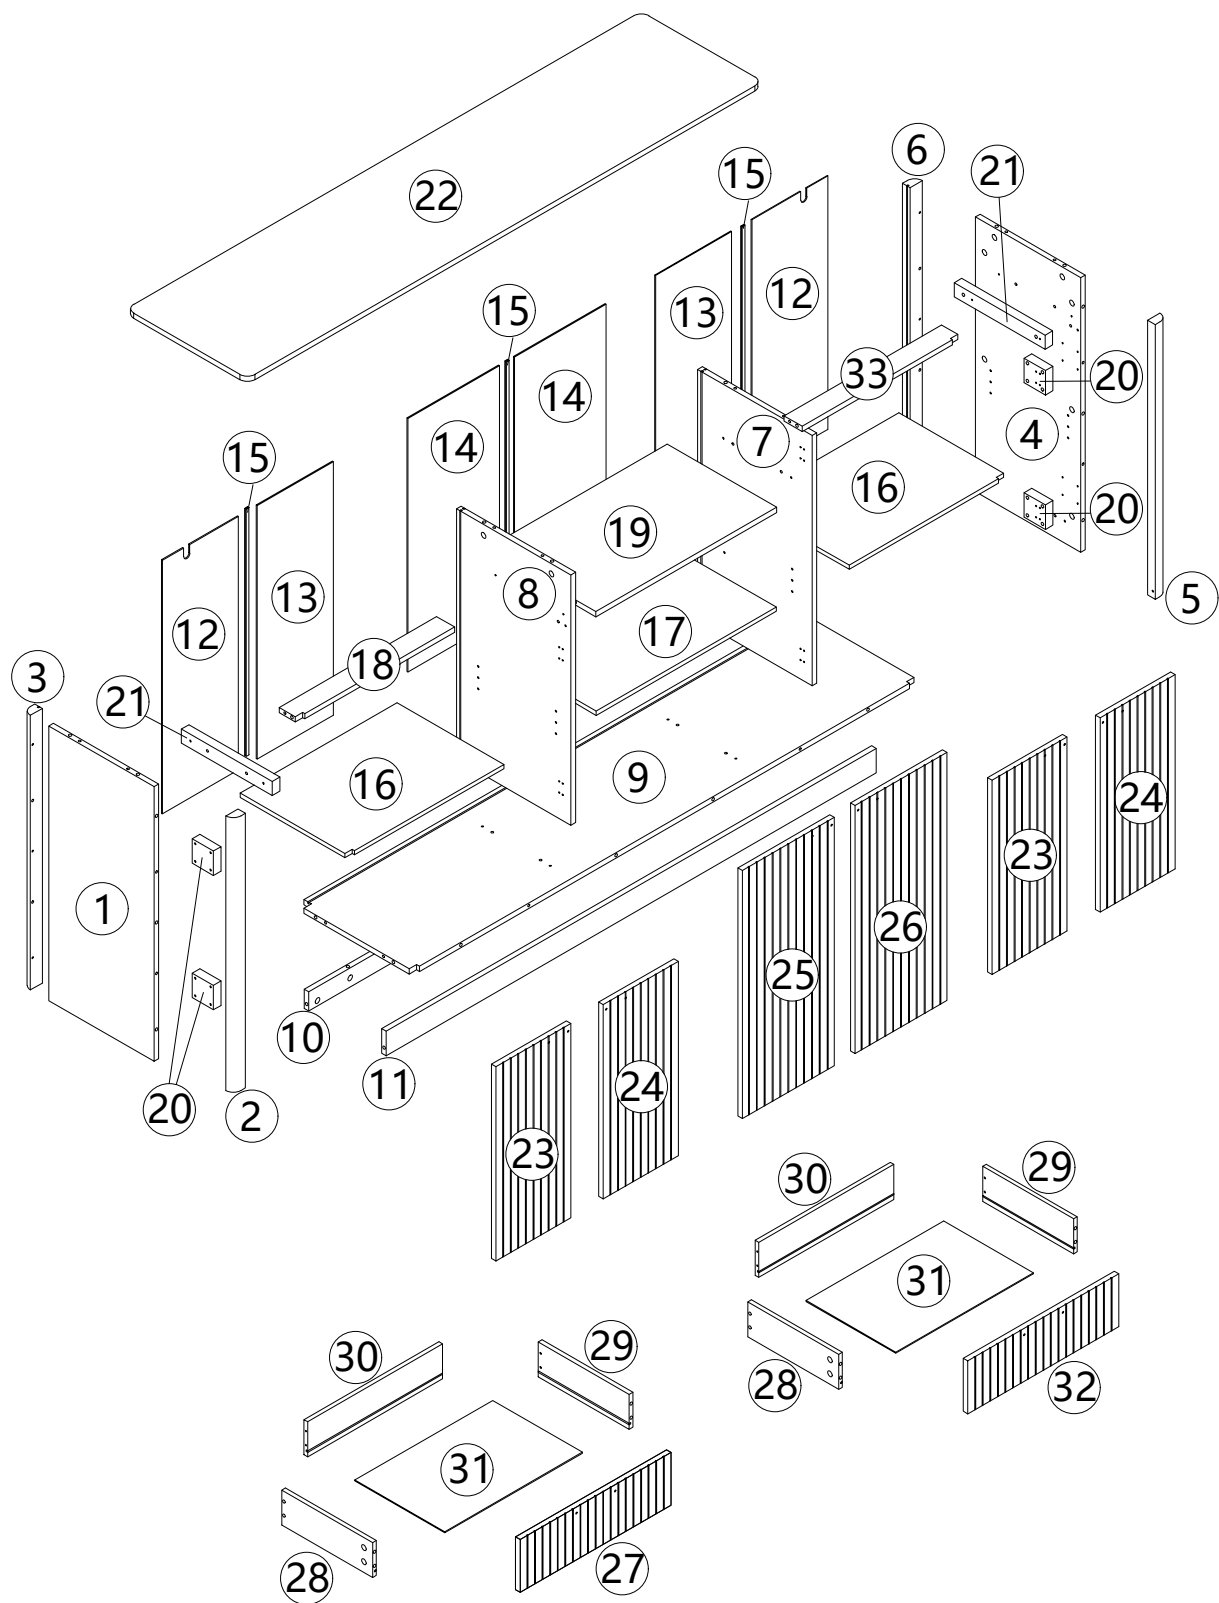


BOX A

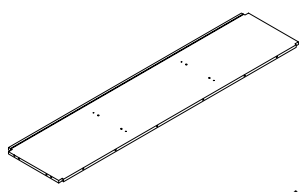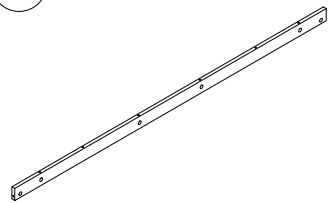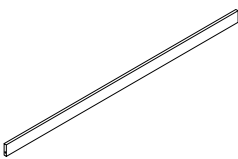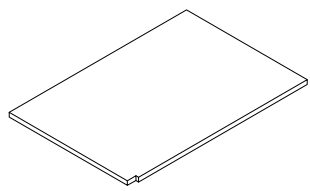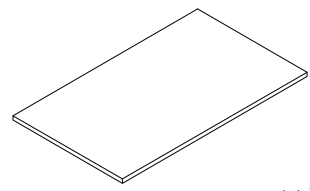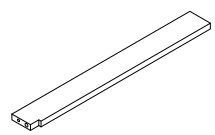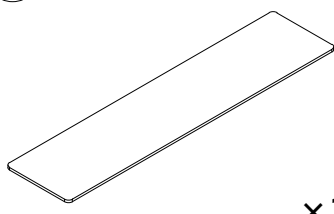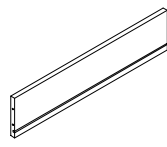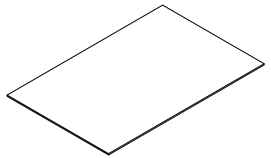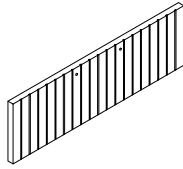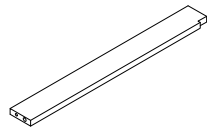7  x1	8  x1	9  x1
10  x1	11  x1	14  x2
15  x3	16  x2	17  x1
18  x1	22  x1	24  x2
25  x1	26  x1	30  x2
31  x2	32  x1	33  x1


BOX B

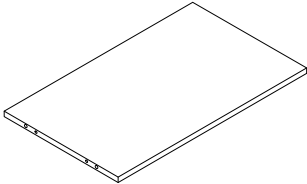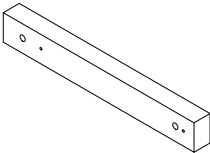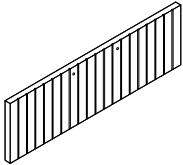1  x1	2  x1	3  x1
4  x1	5  x1	6  x1
12  x2	13  x2	19  x1
20  x4	21  x2	23  x2
27  x1	28  x2	29  x2


Step1

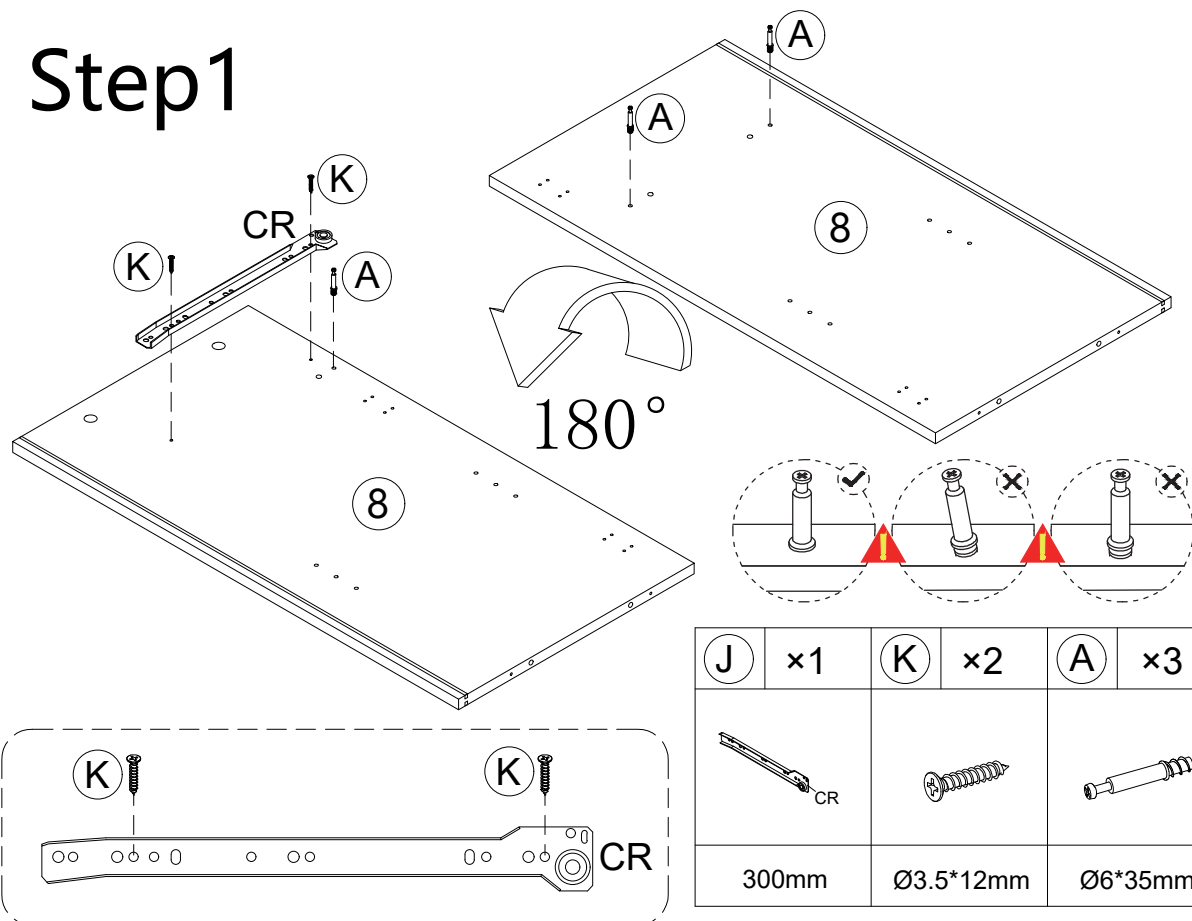


Step2

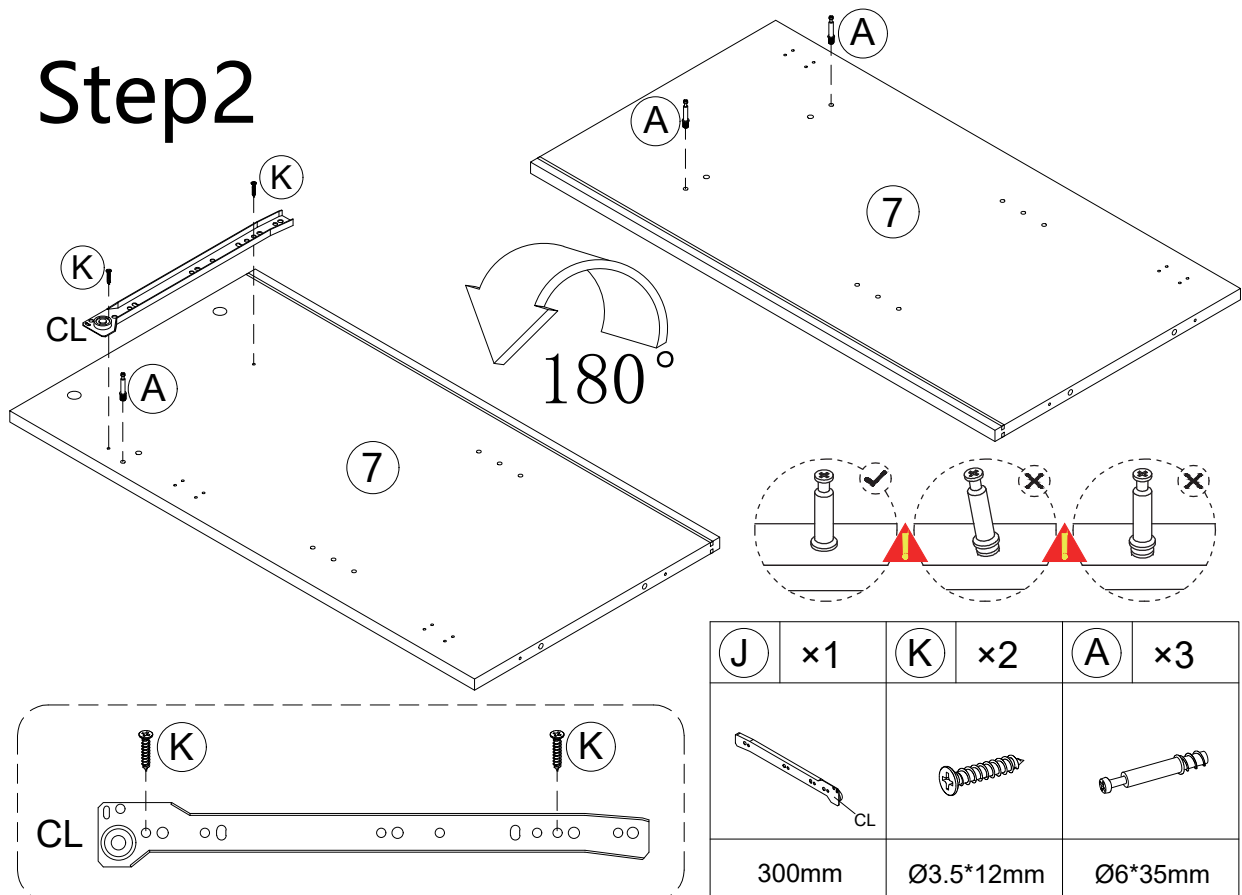



Step3

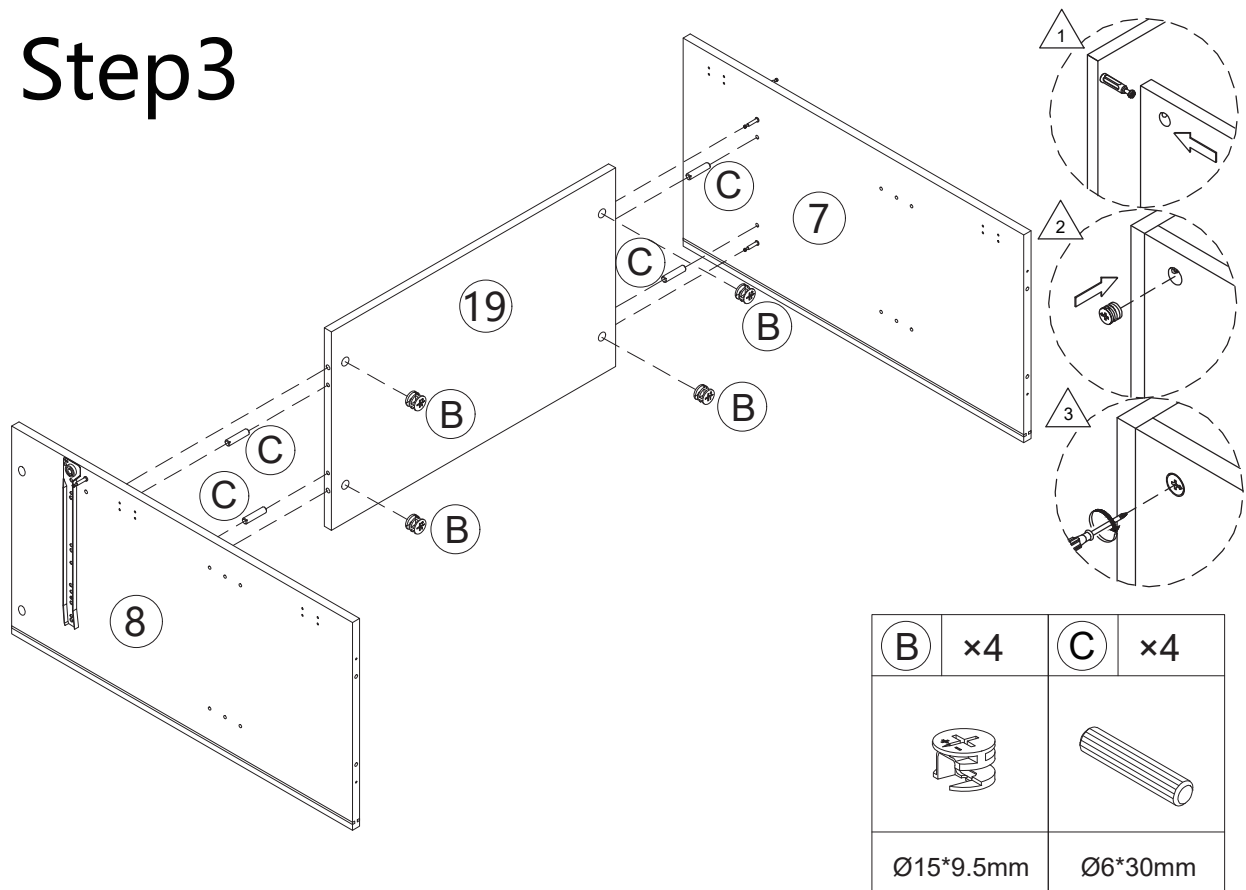


Step4


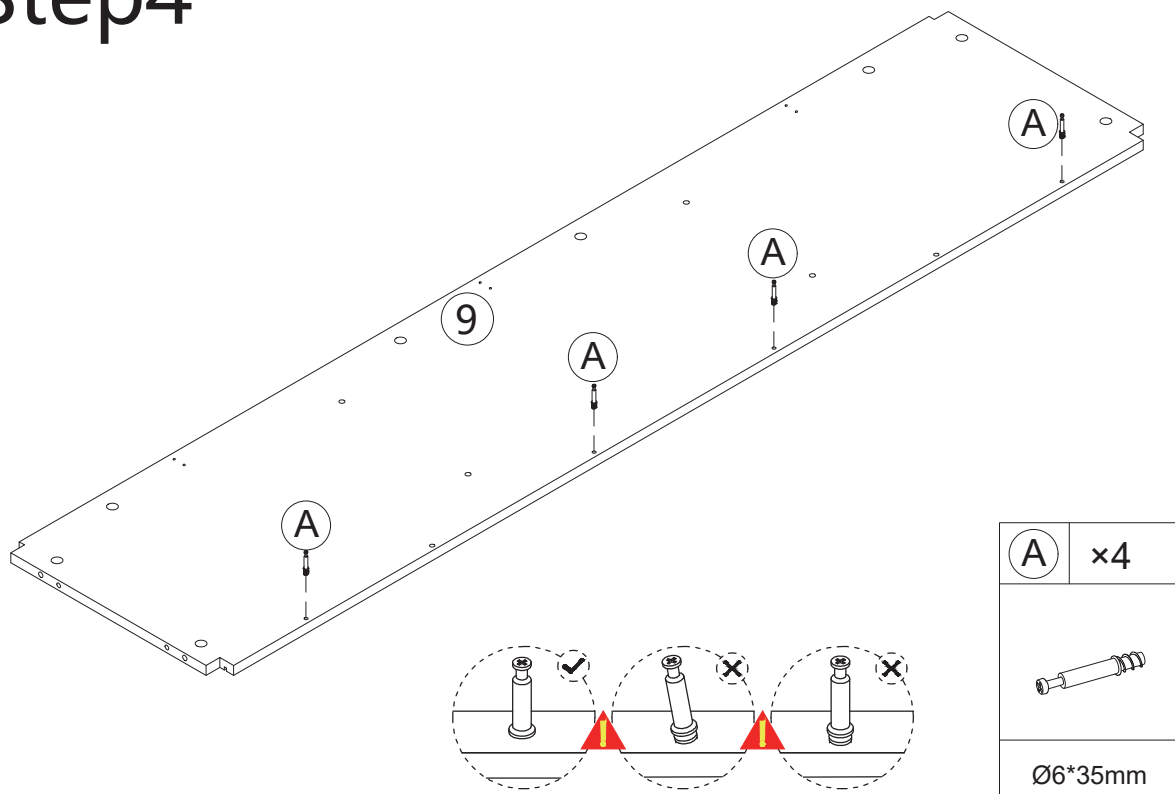



Step5

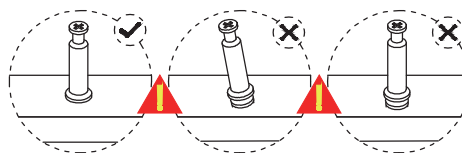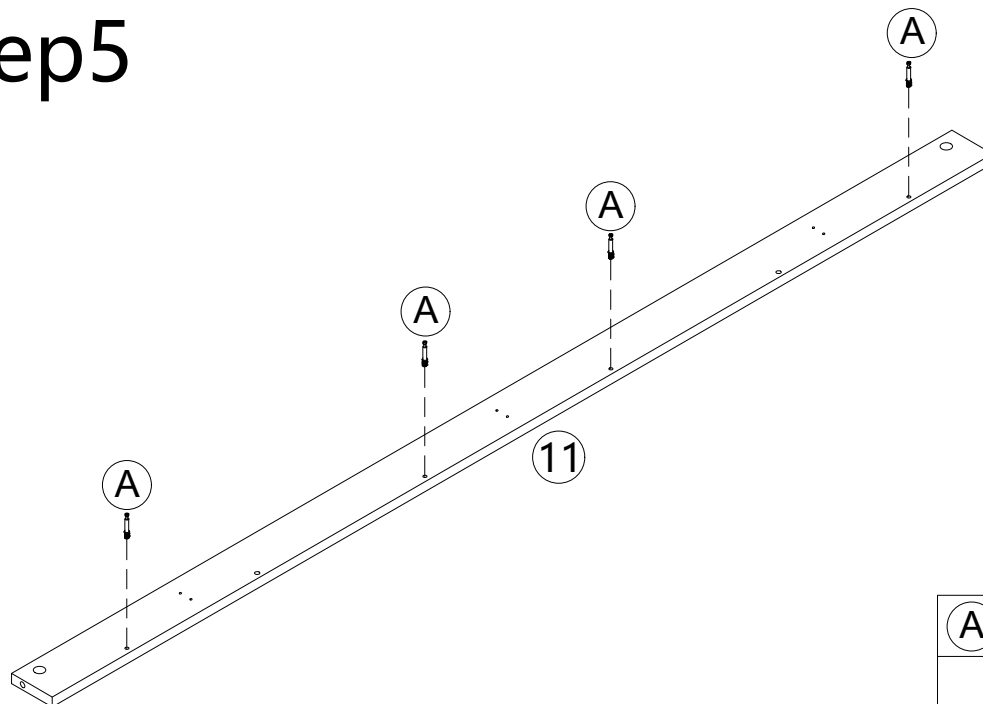


A	×4
	
Ø6*35mm	

Step6

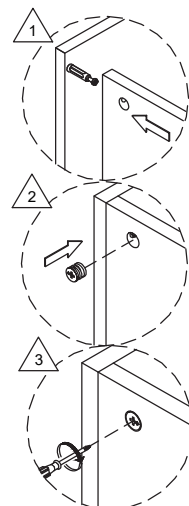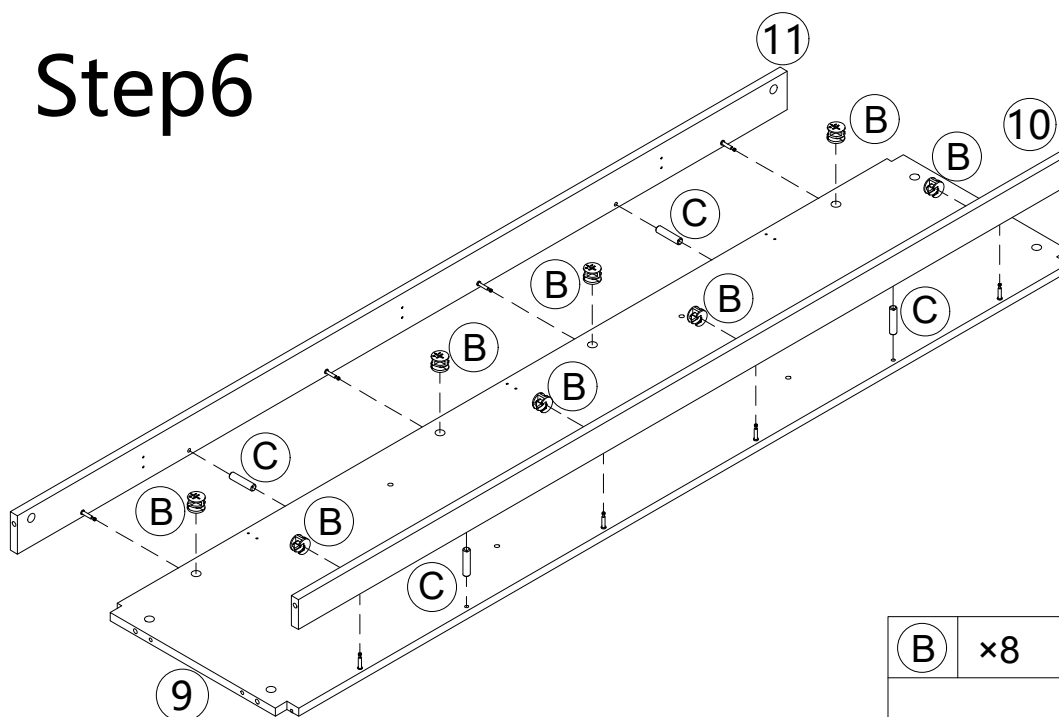


B	×8	C	×4
			
Ø15*9.5mm		Ø6*30mm	


Step7

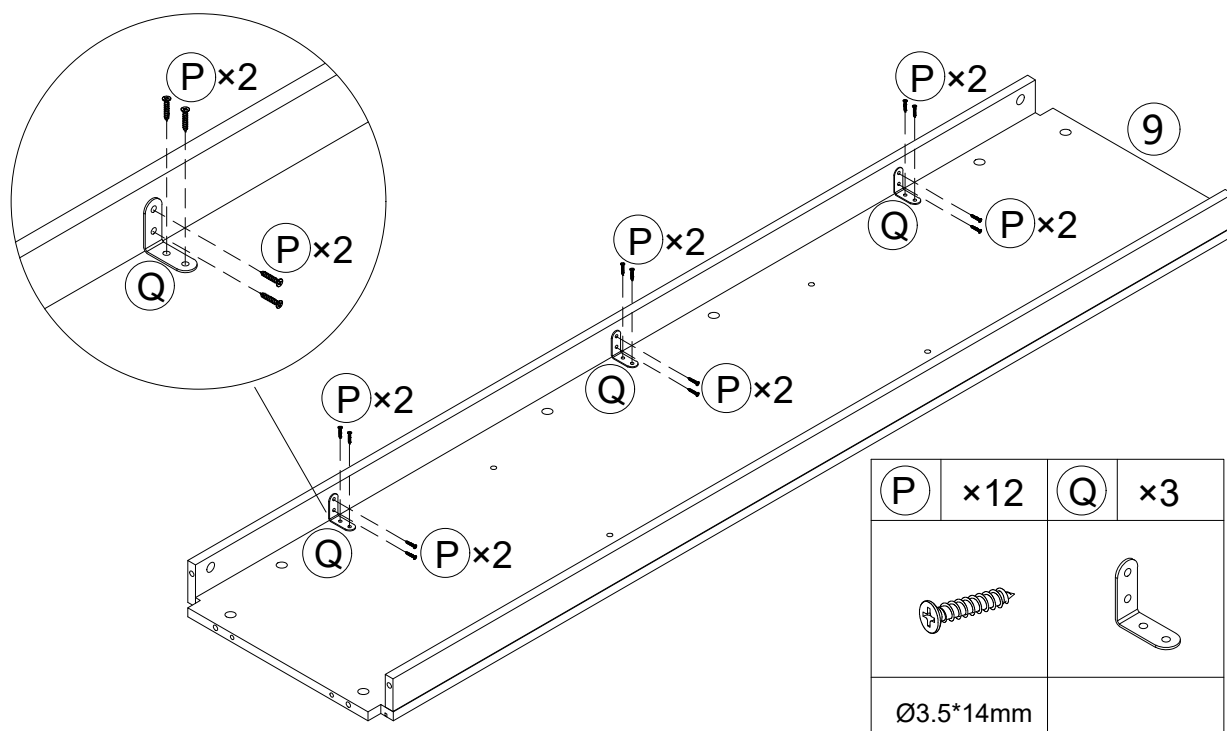


Step8

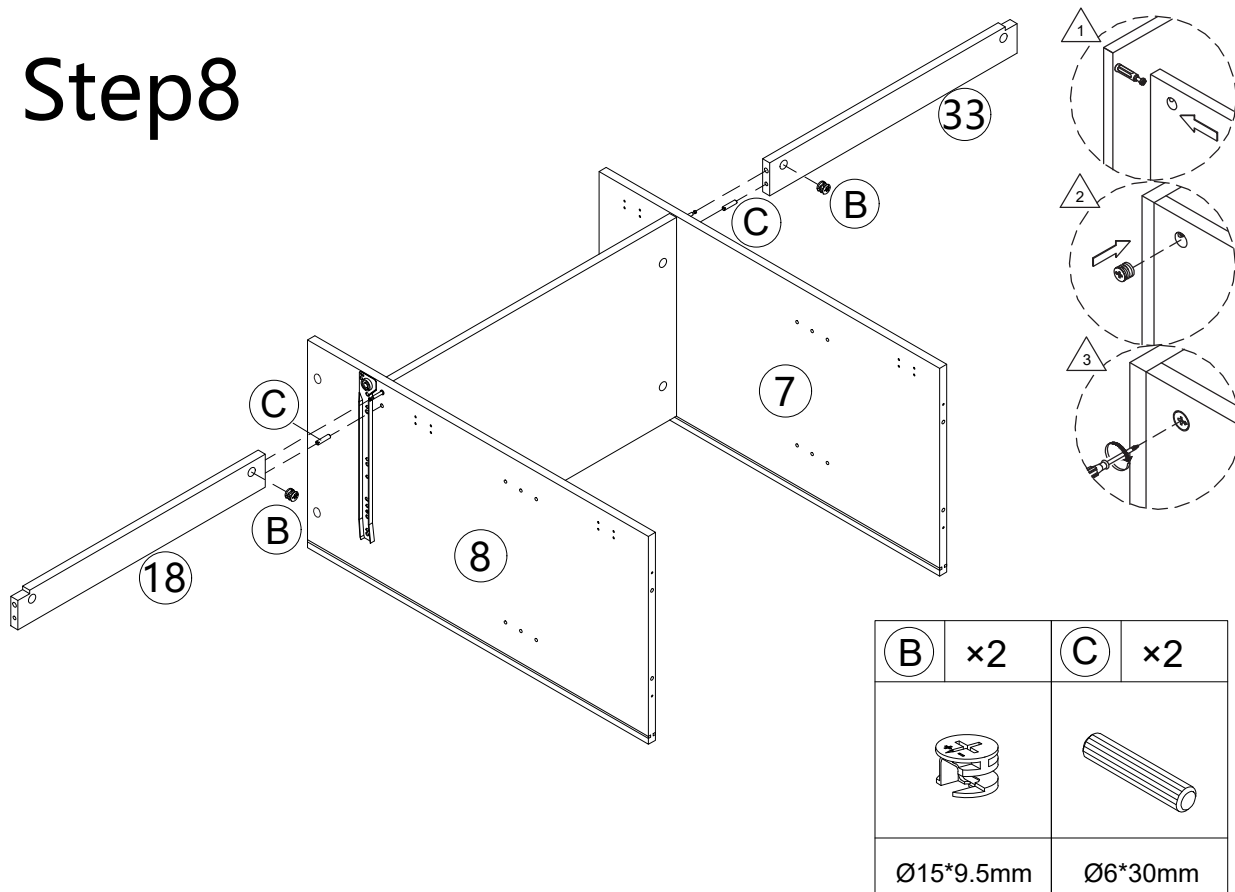


Step9

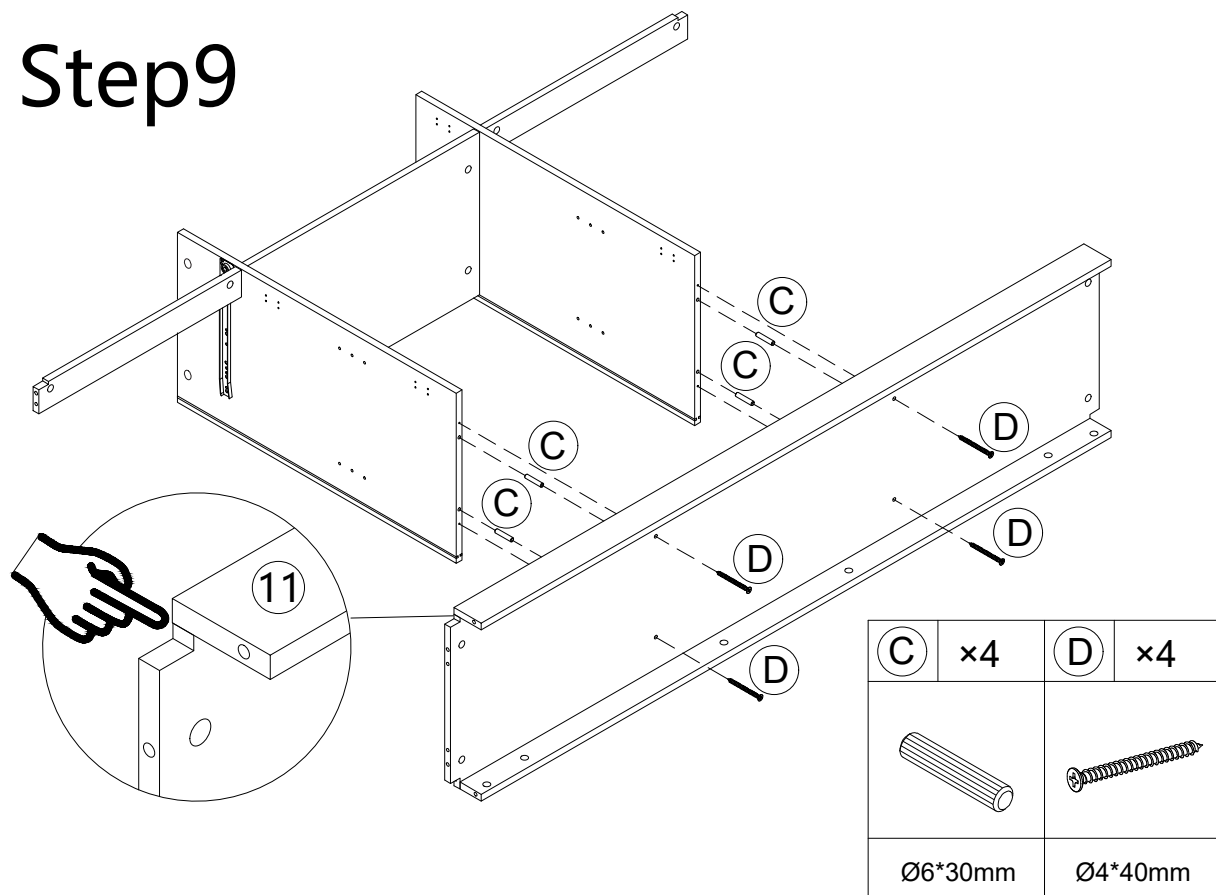

Step10

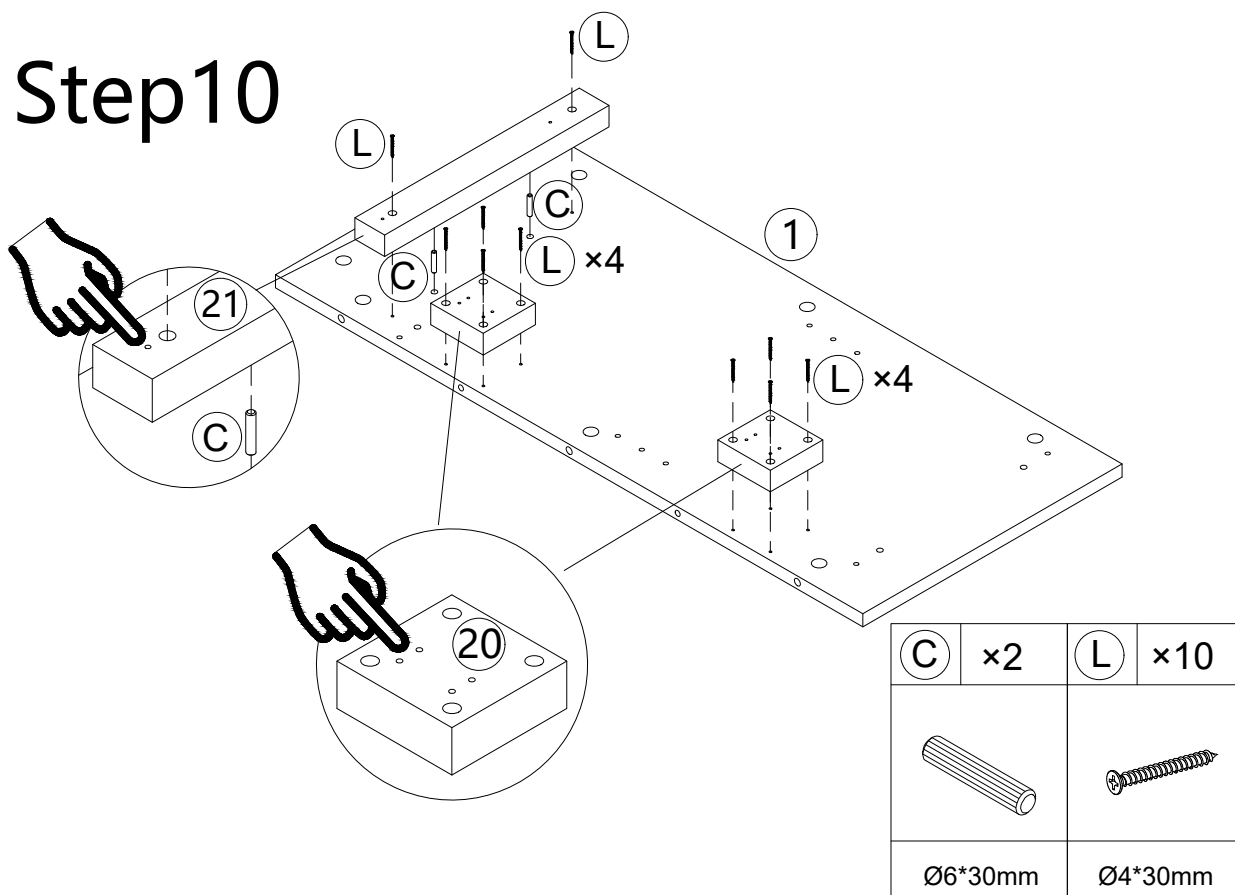


Step11

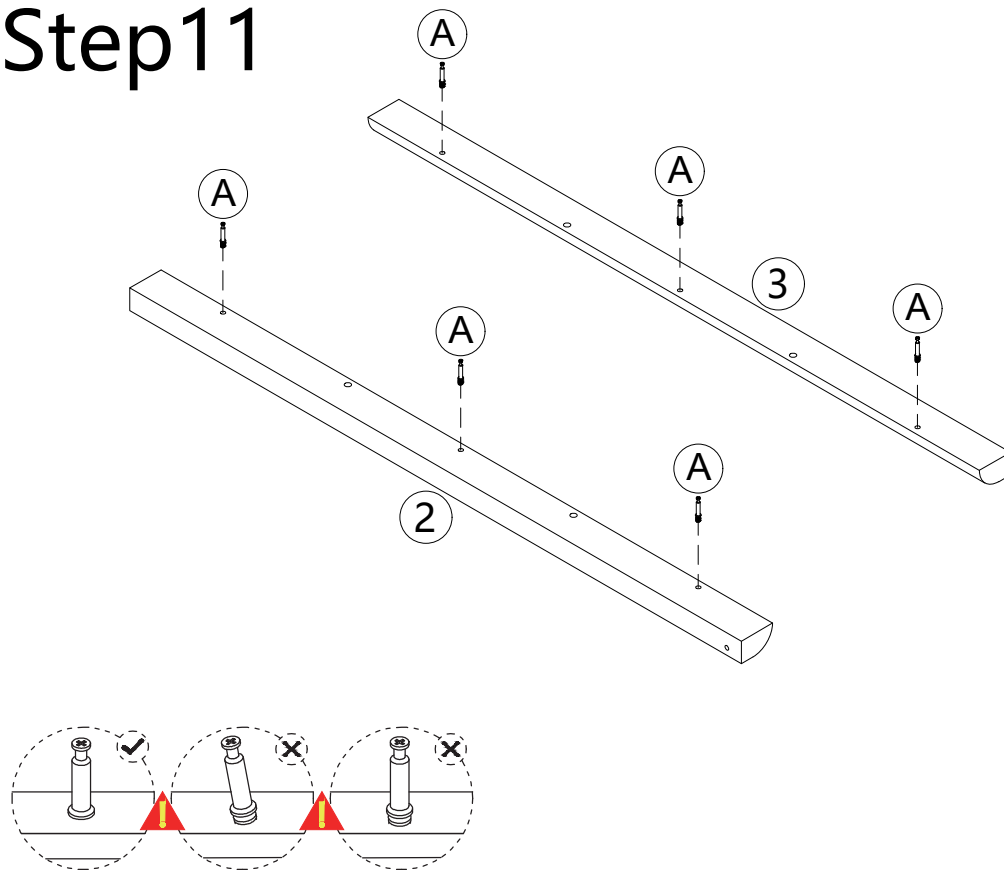


(A)	×6
Ø6*35mm	

Step12

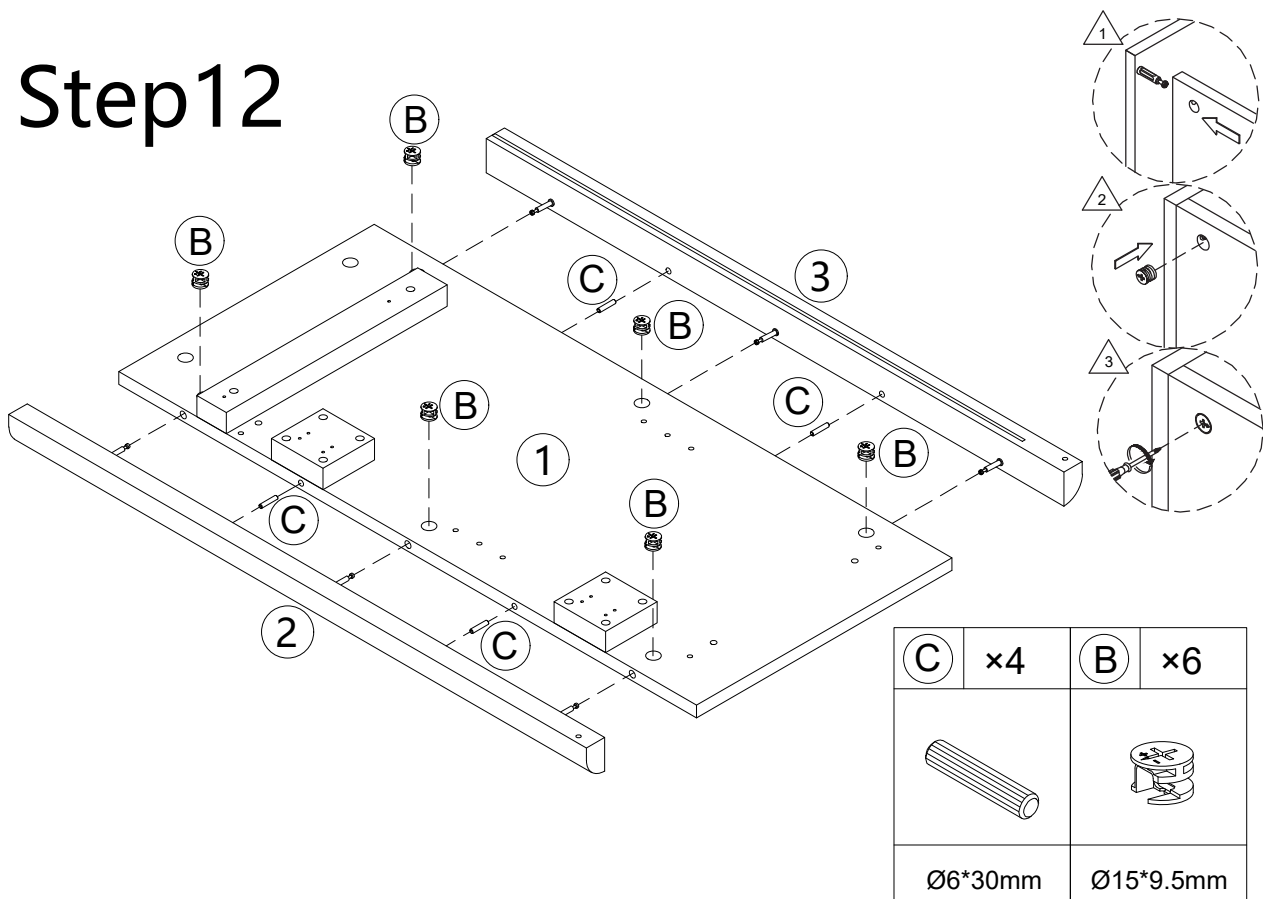


(C)	×4	(B)	×6
Ø6*30mm		Ø15*9.5mm	


Step13

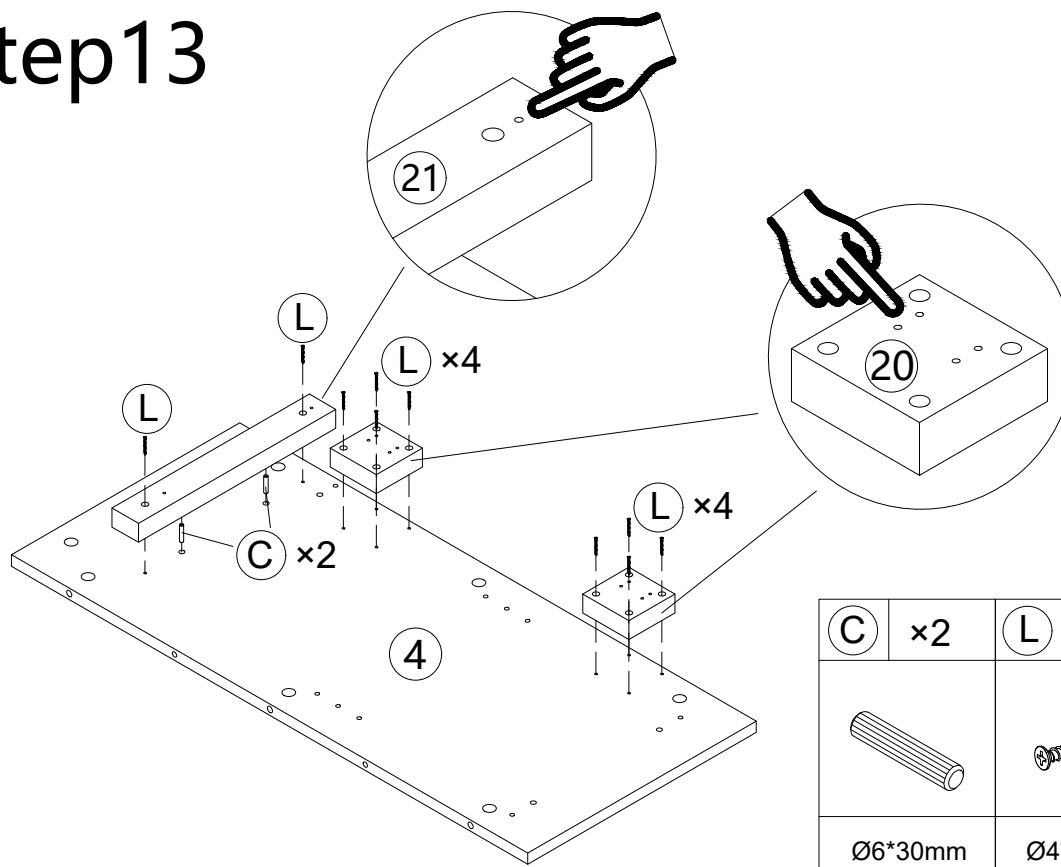


Step14

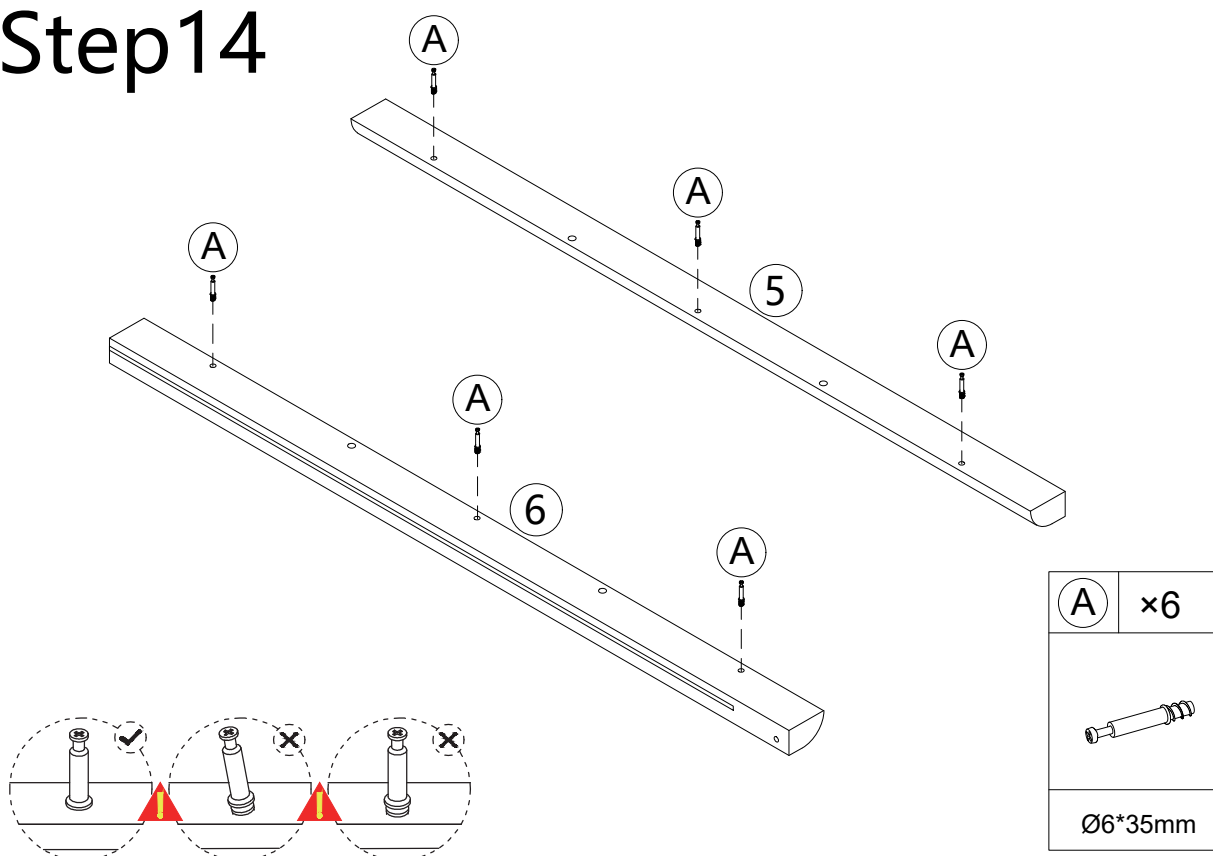




Step15

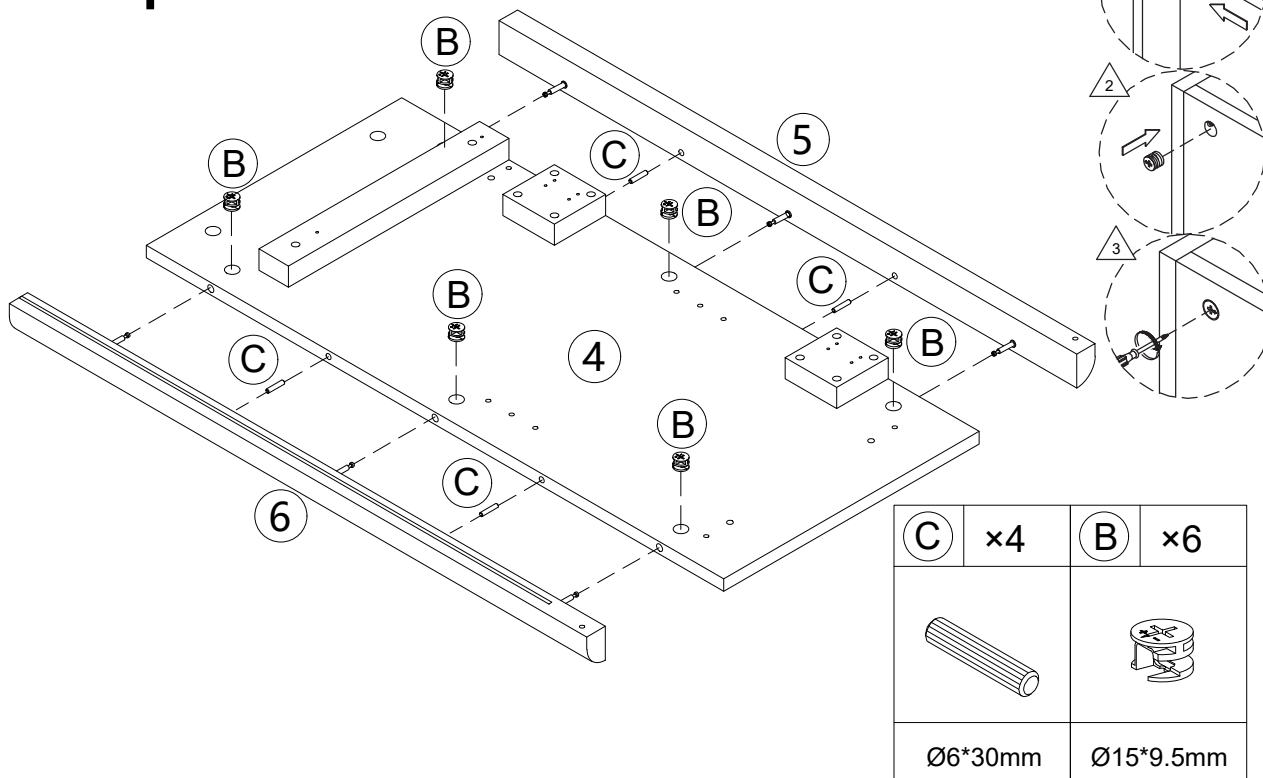

Step16



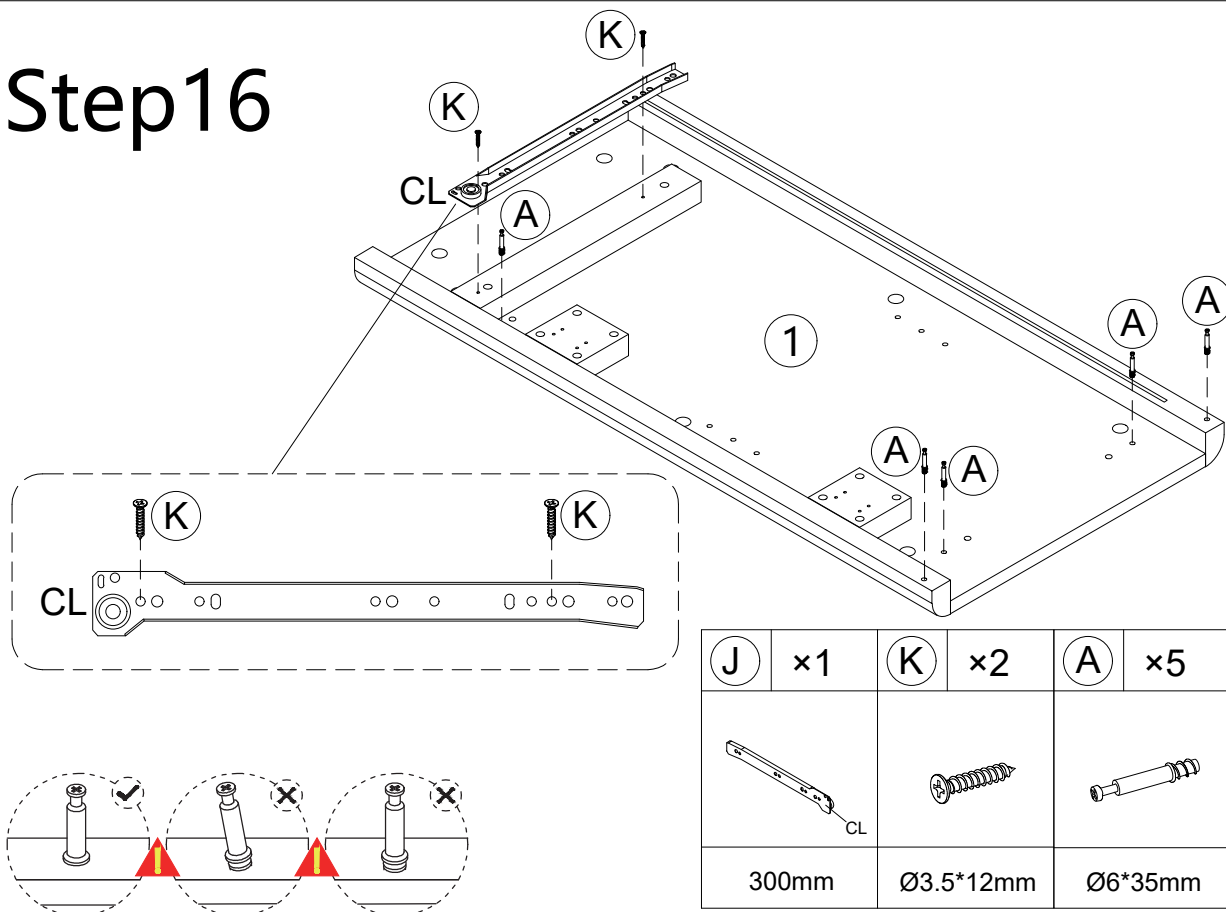


Step17

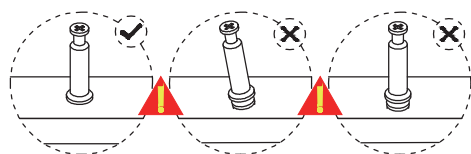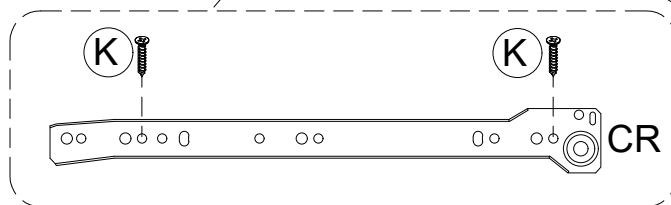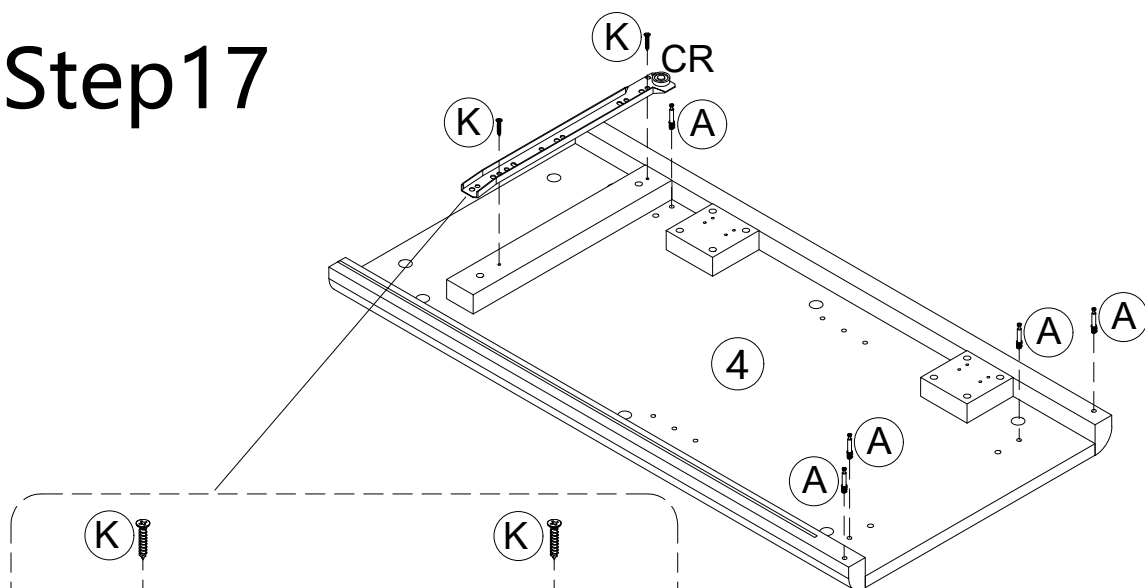


(J)	×1	(K)	×2	(A)	×5
300mm		Ø3.5*12mm		Ø6*35mm	

Step18

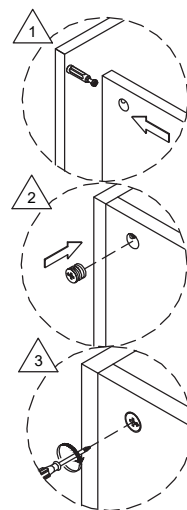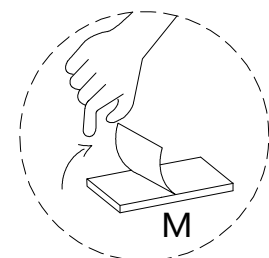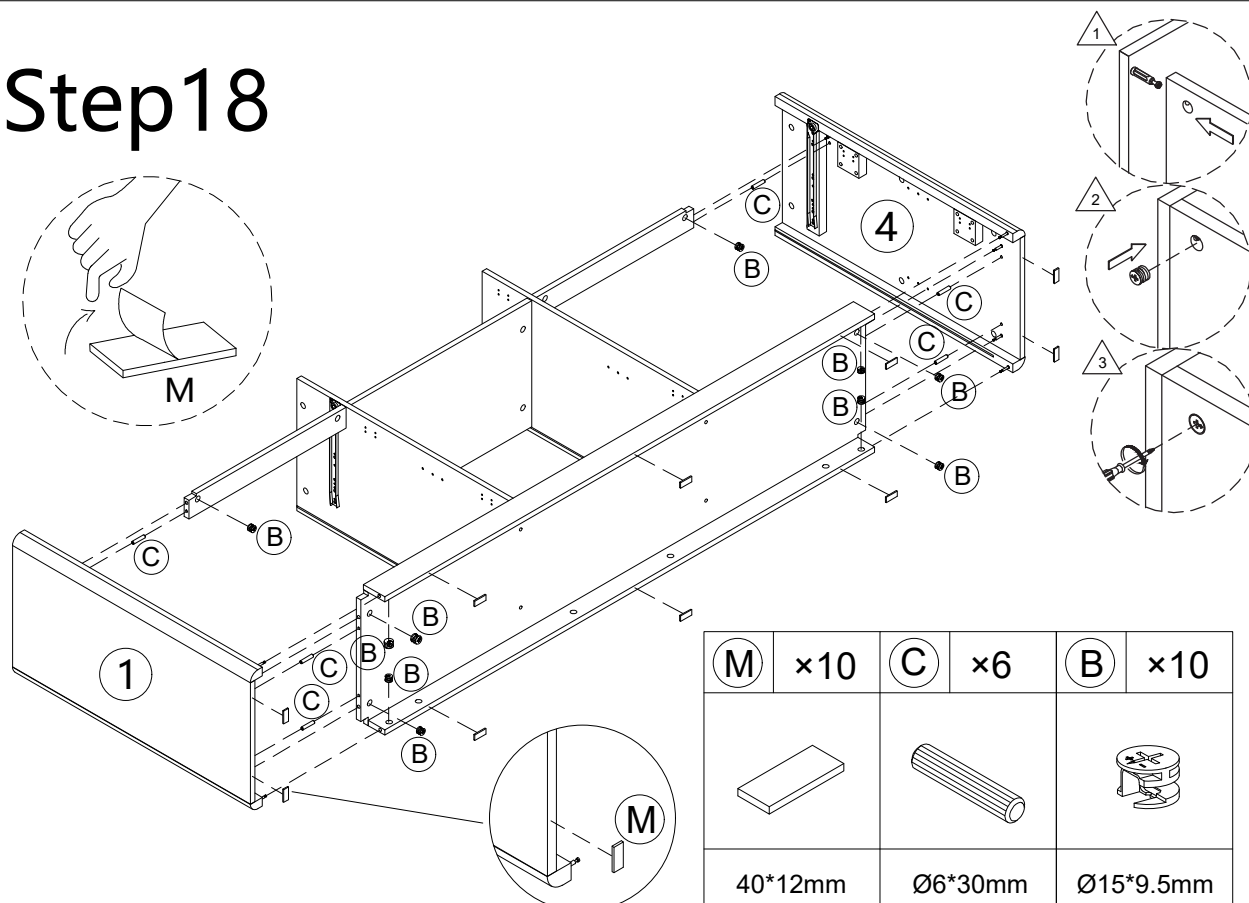


(M)	×10	(C)	×6	(B)	×10
40*12mm		Ø6*30mm		Ø15*9.5mm	


Step19

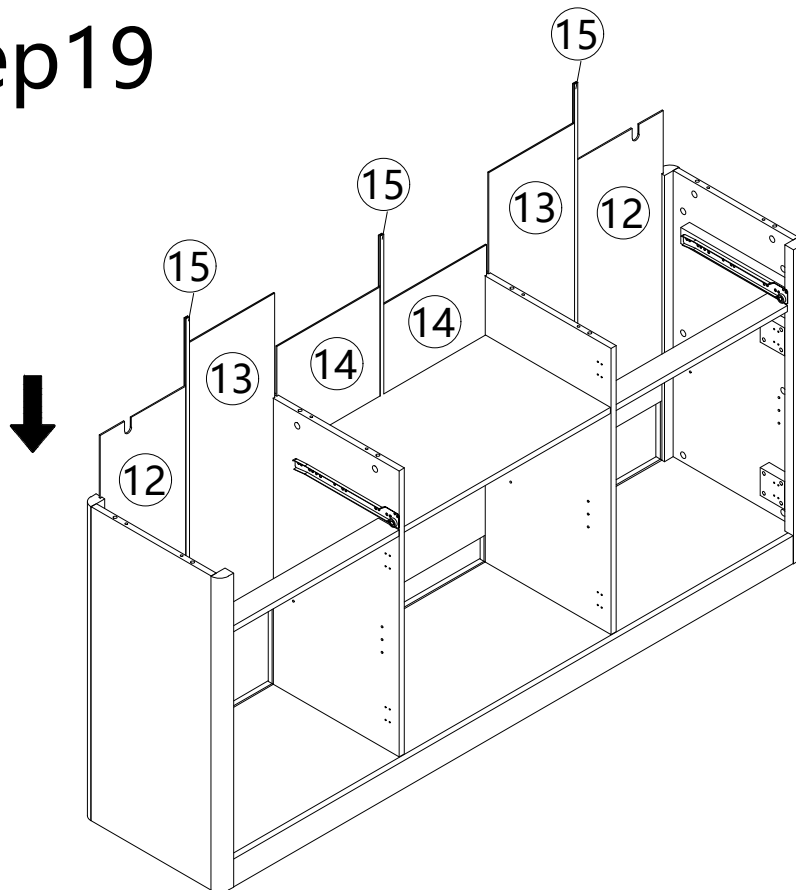



Step20

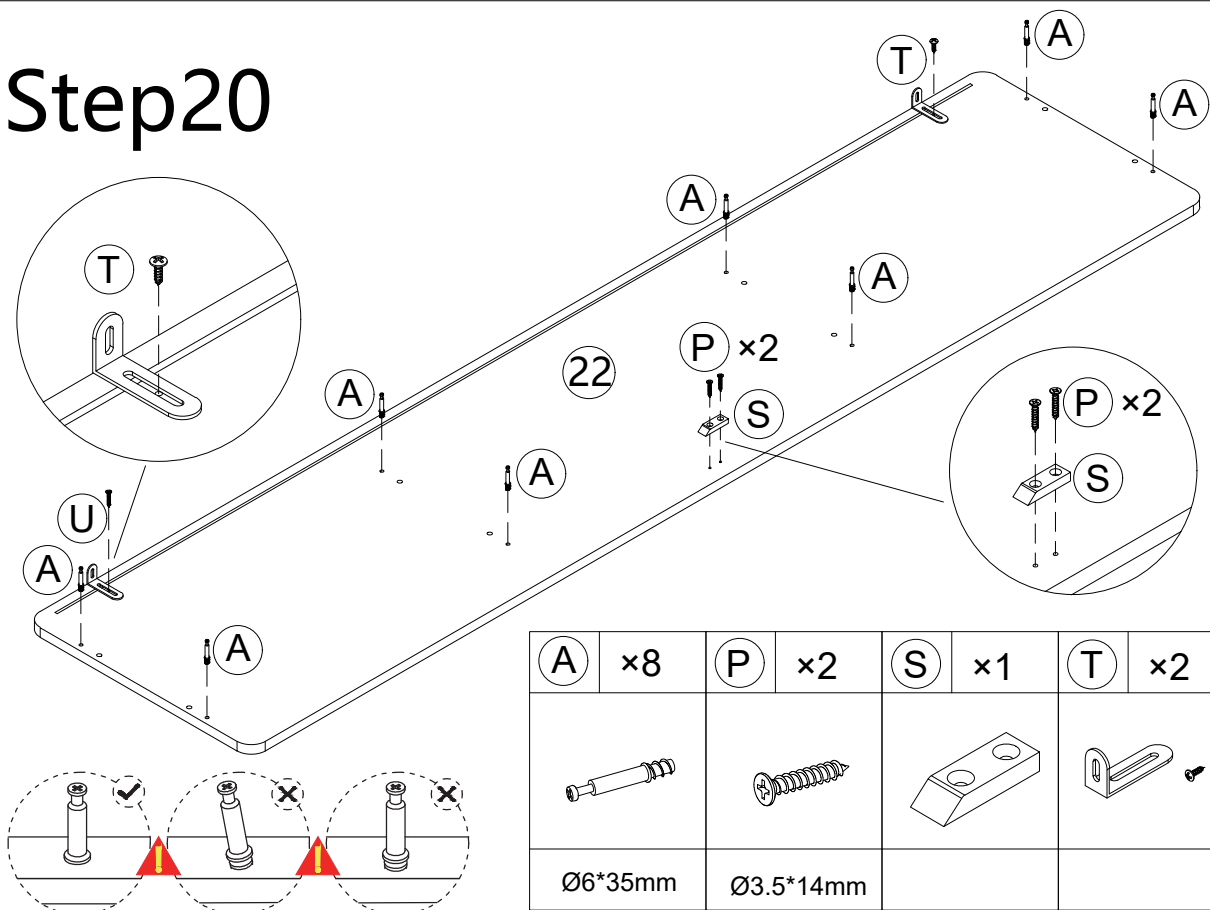

Step21

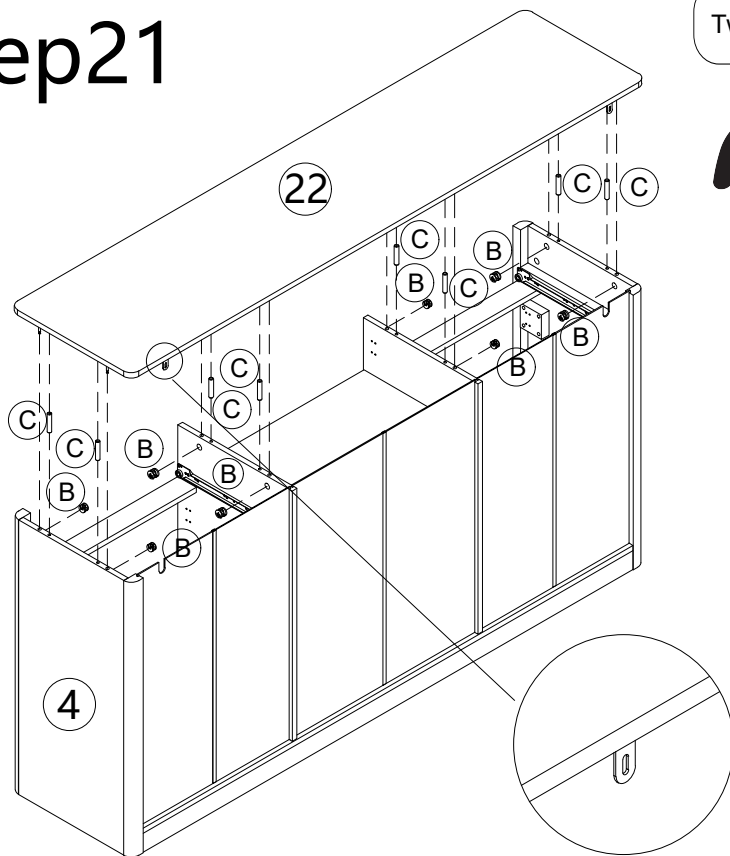


Two people are needed to install it

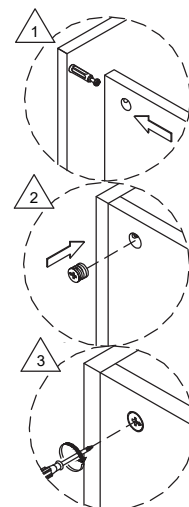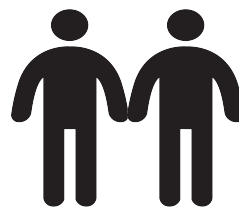


(C)	×8	(B)	×8
Ø6*30mm		Ø15*9.5mm	

Step22

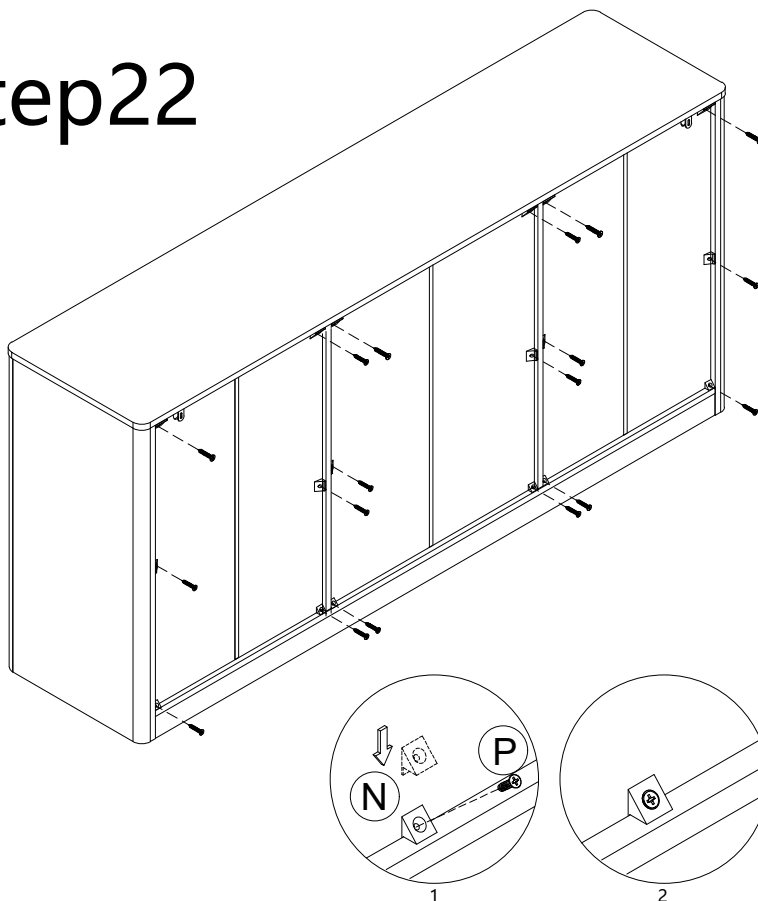


(N)	×18	(P)	×18
		Ø3.5*14mm	

Step23

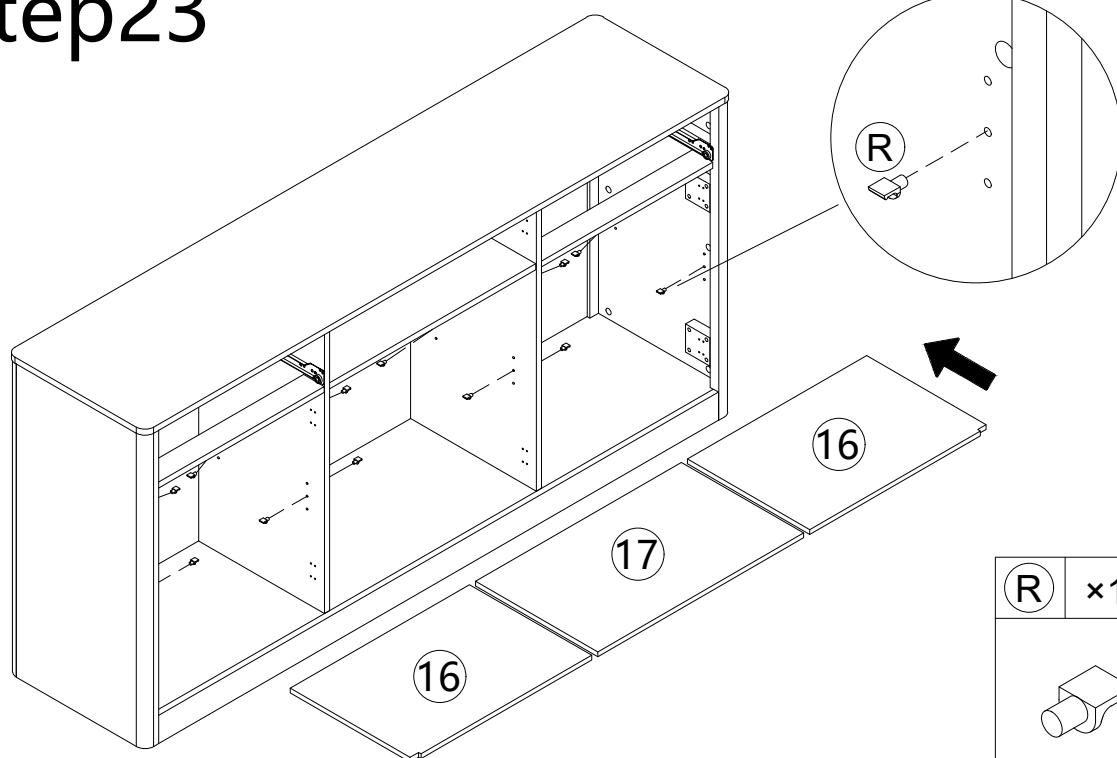



(R)	x12

Step24

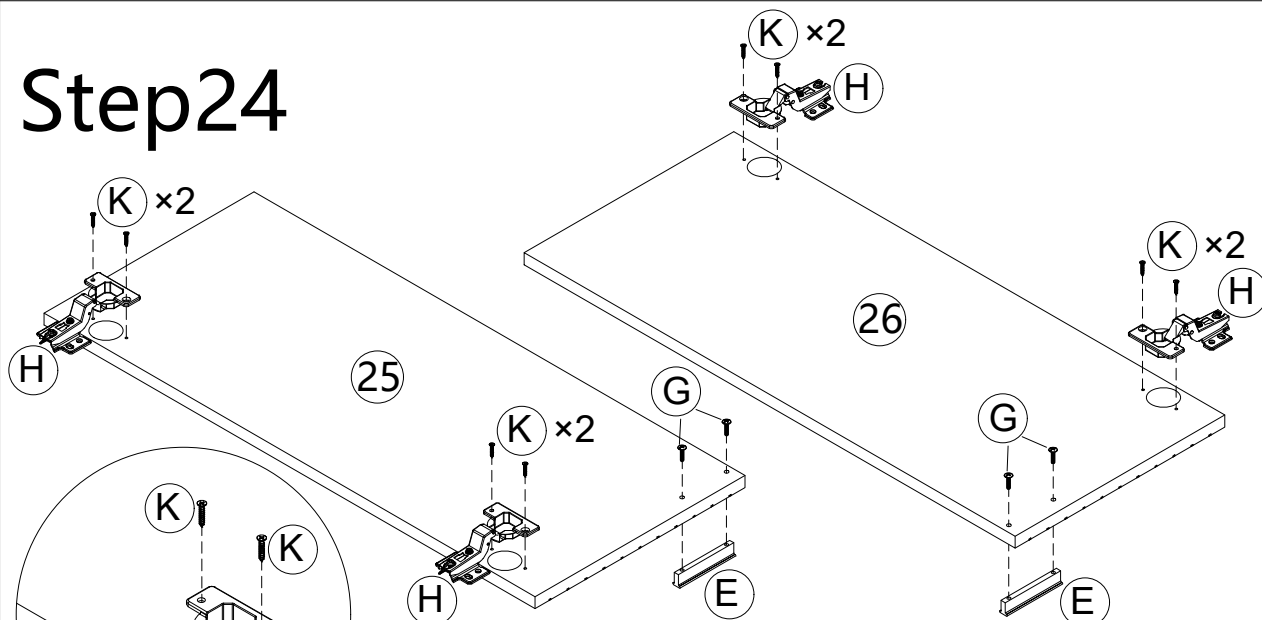



(K)	x8	(H)	x4	(G)	x4	(E)	x2
Ø3.5*12mm				M4*18mm			

Step25

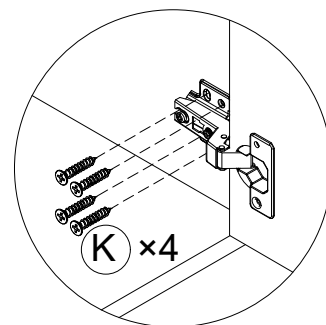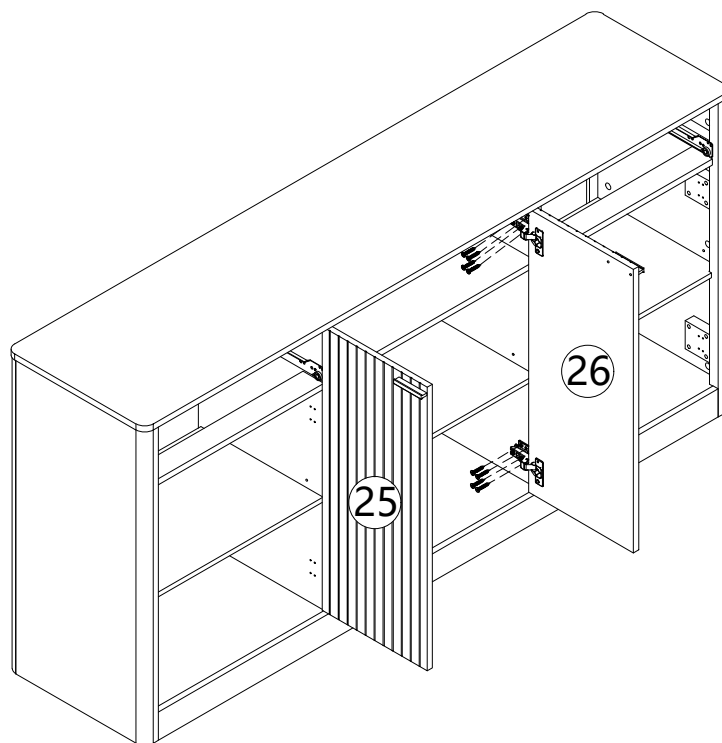



(K)	x16
Ø3.5*12mm	

Step26

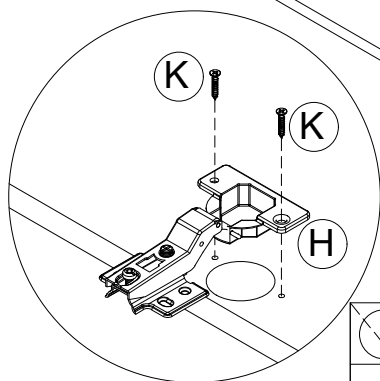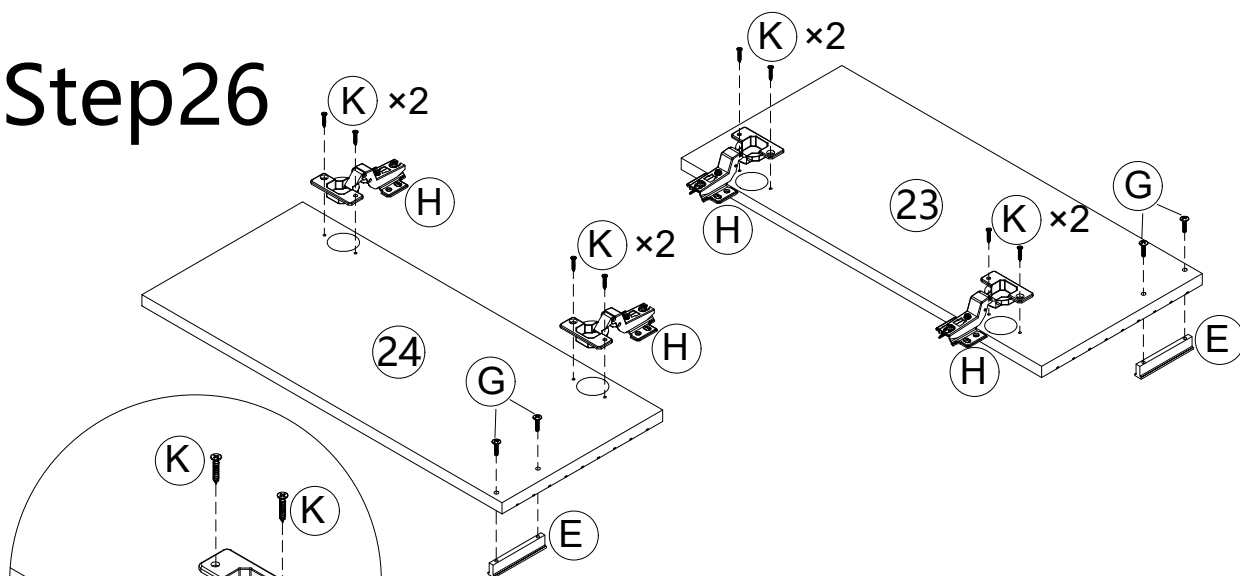



(K)	x8	(H)	x4	(G)	x4	(E)	x2
Ø3.5*12mm				M4*18mm			


Step27

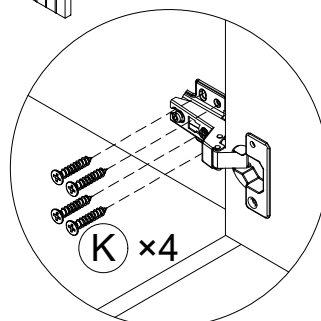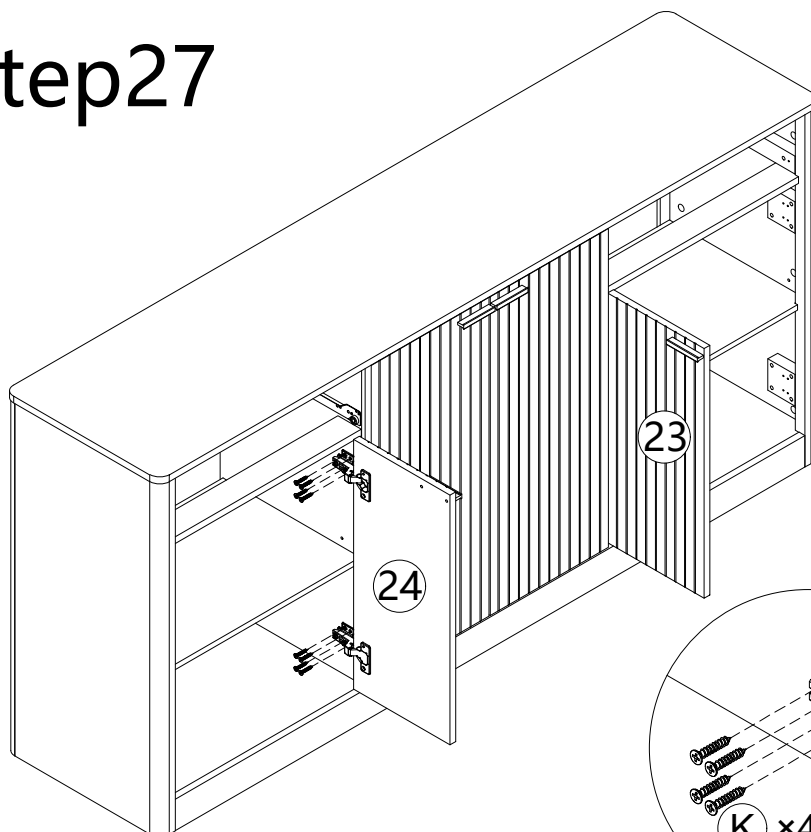


(K)	x16
	
Ø3.5*12mm	

Step28

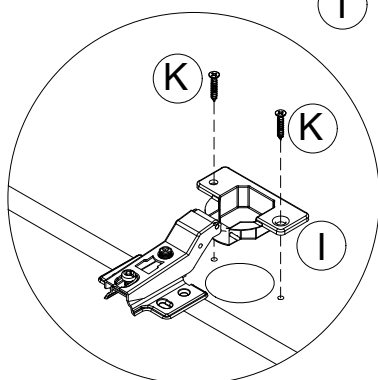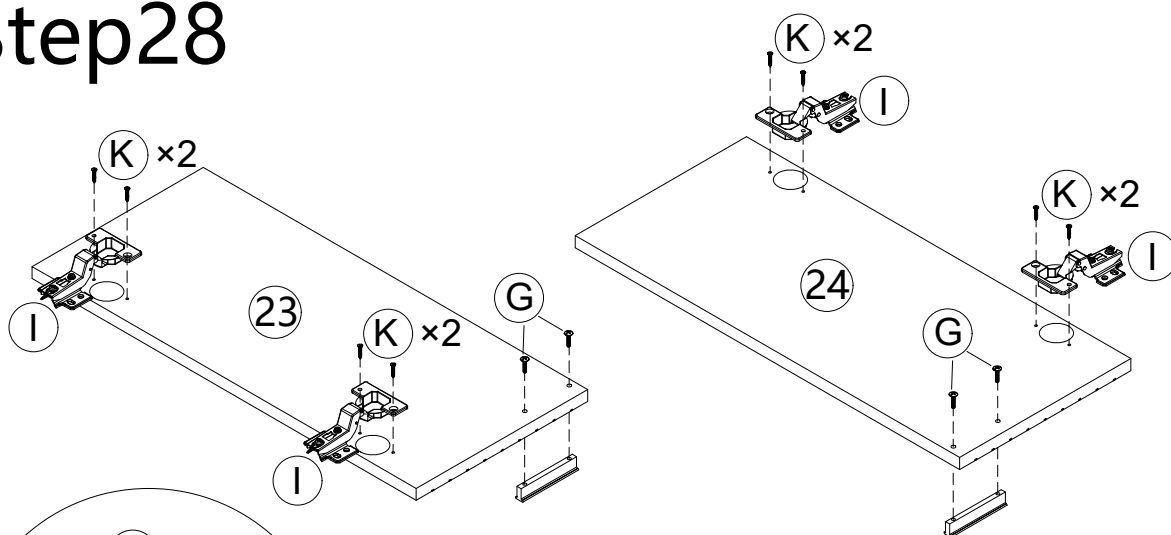





(K)	x8	(I)	x4	(G)	x4	(E)	x2
							
Ø3.5*12mm				M4*18mm			

Step29

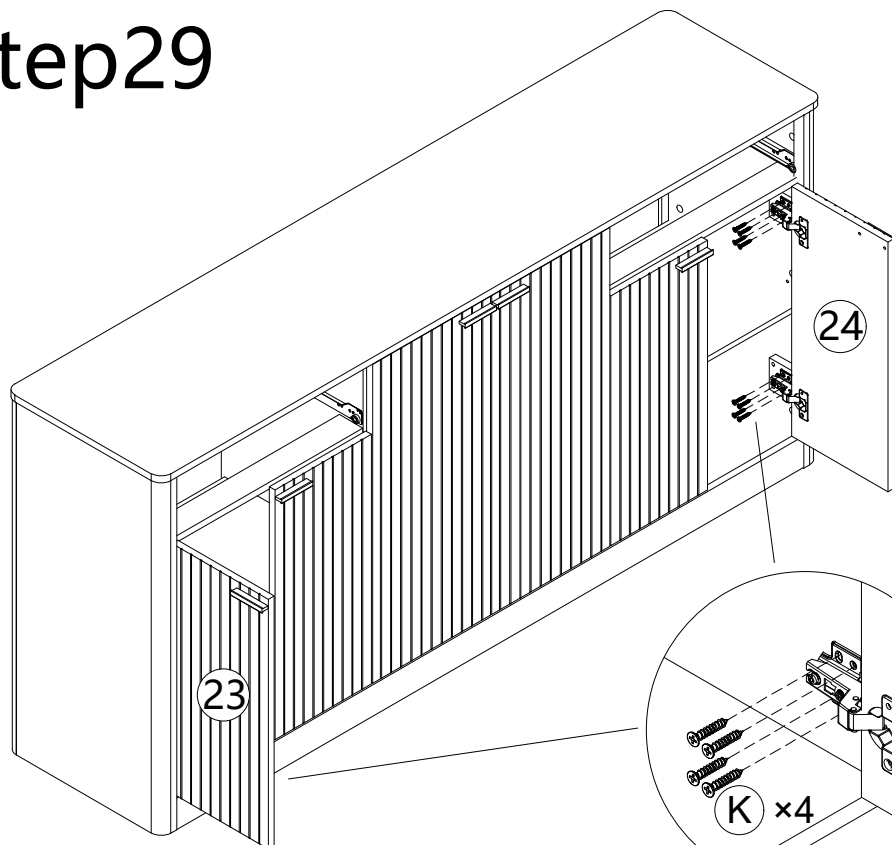

K	x16
	
Ø3.5*12mm	

Step30

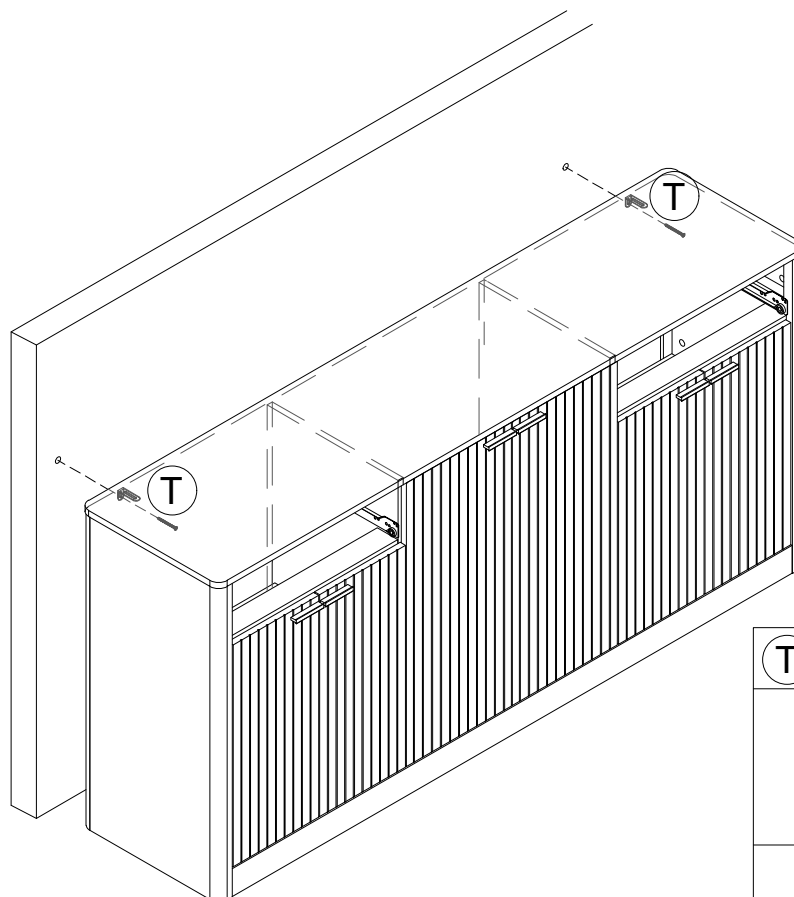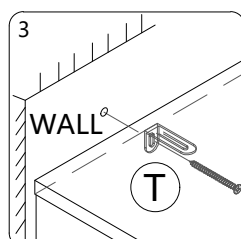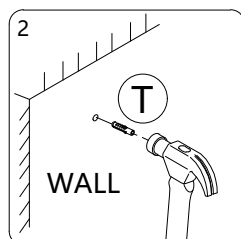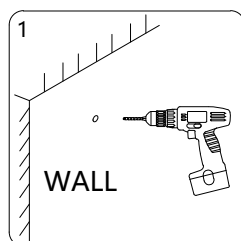


T	x2
	

Assembly Steps

HOW TO ADJUST THE HINGES TO ALIGN THE DOORS IF NEEDED.


STEP 1

Open the door.

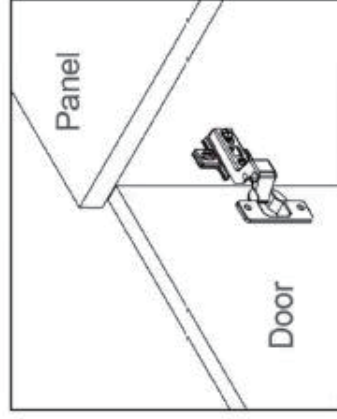


STEP 2

Adjust the door panels up or downward

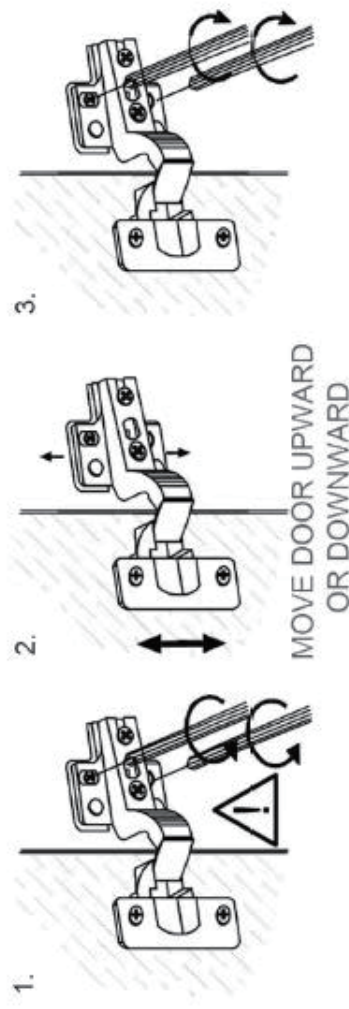


STEP 3

Adjust the flush between door panel and side panel

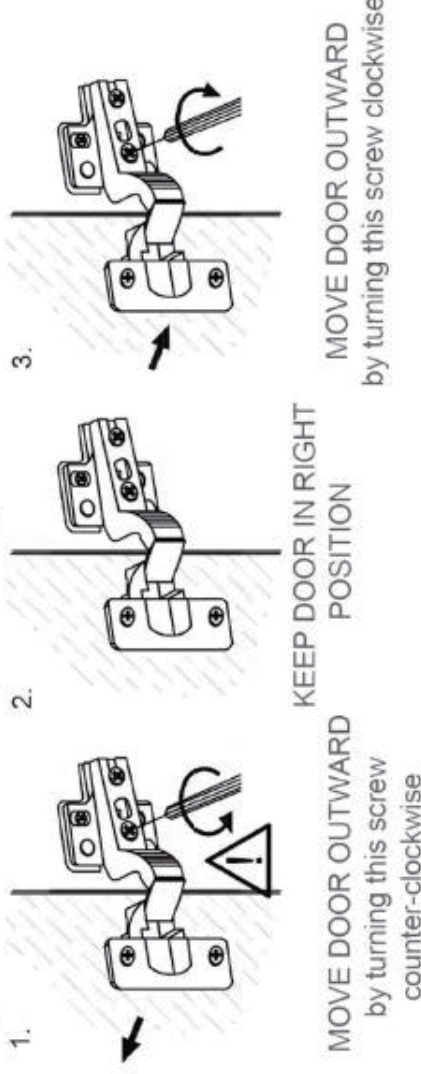


STEP 4

Adjust the Gap between door panel and side panel

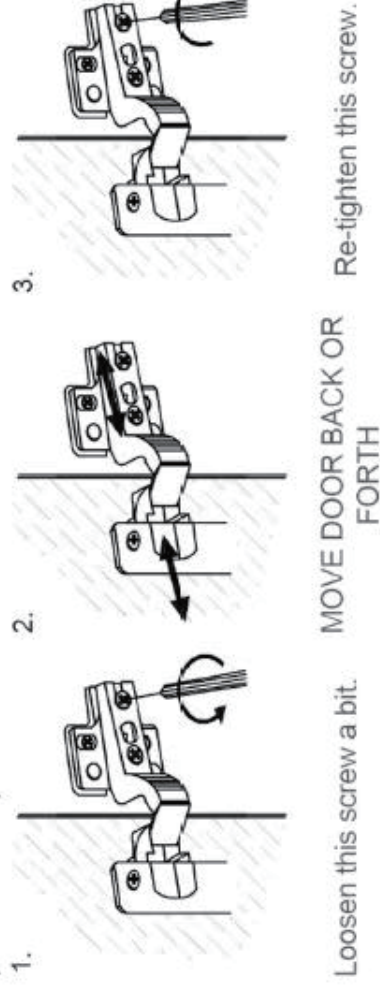


Step31

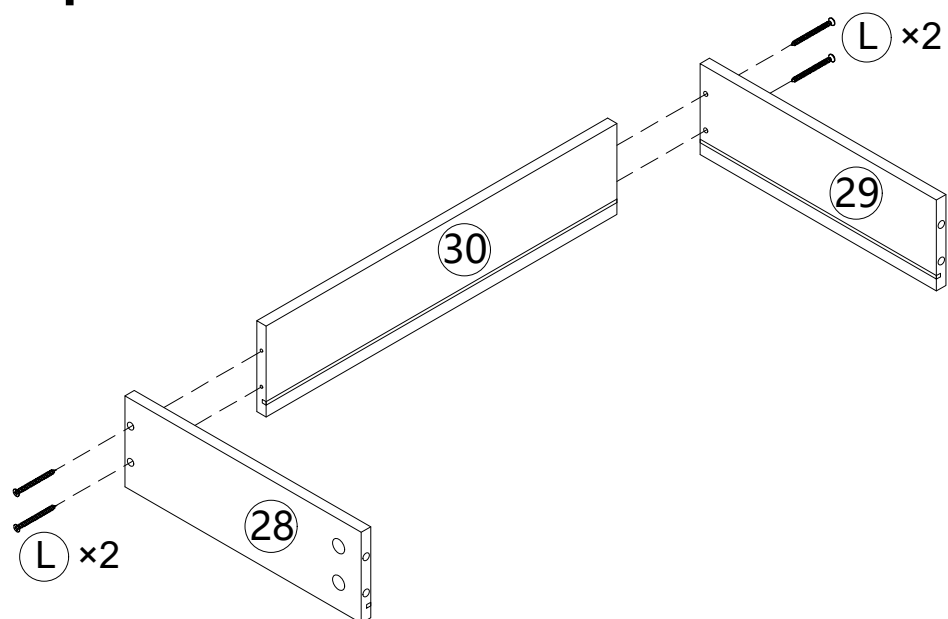

x2


L	x8
	
Ø4*30mm	

Step32

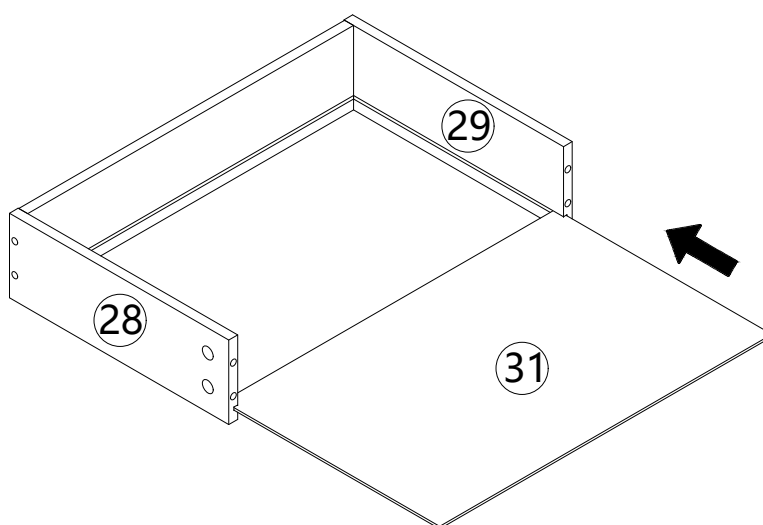


x2



Step33

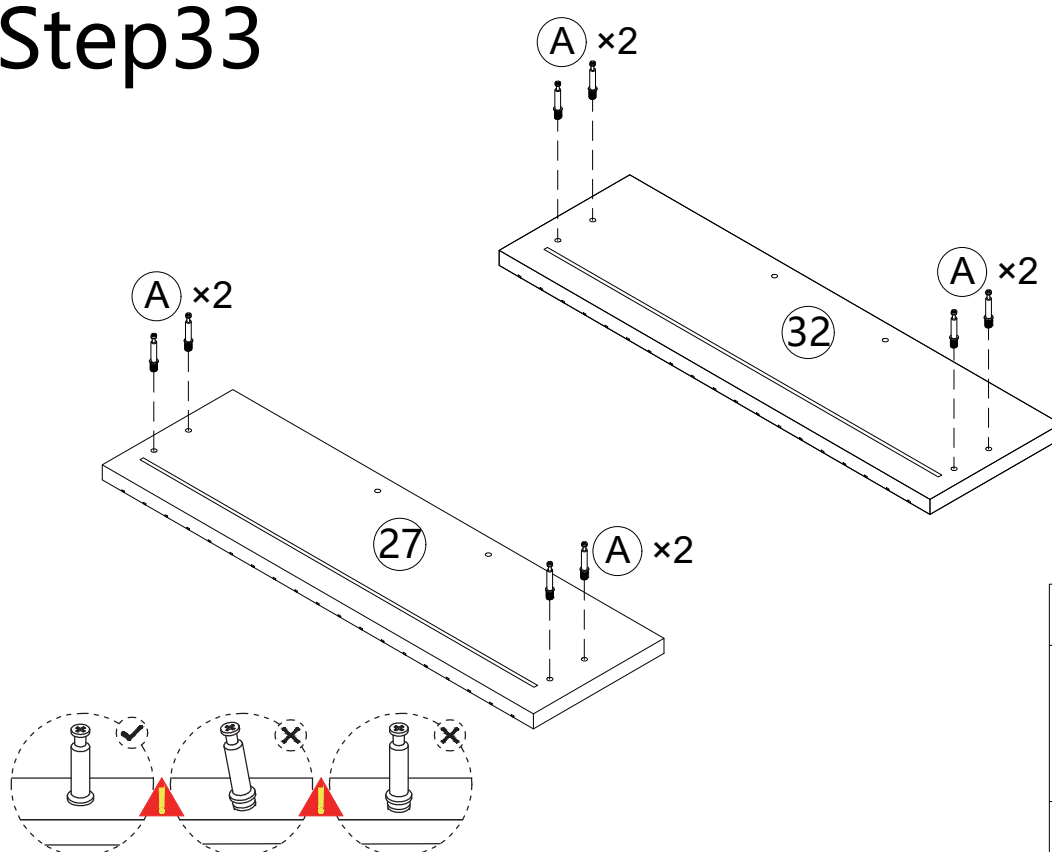

Step34


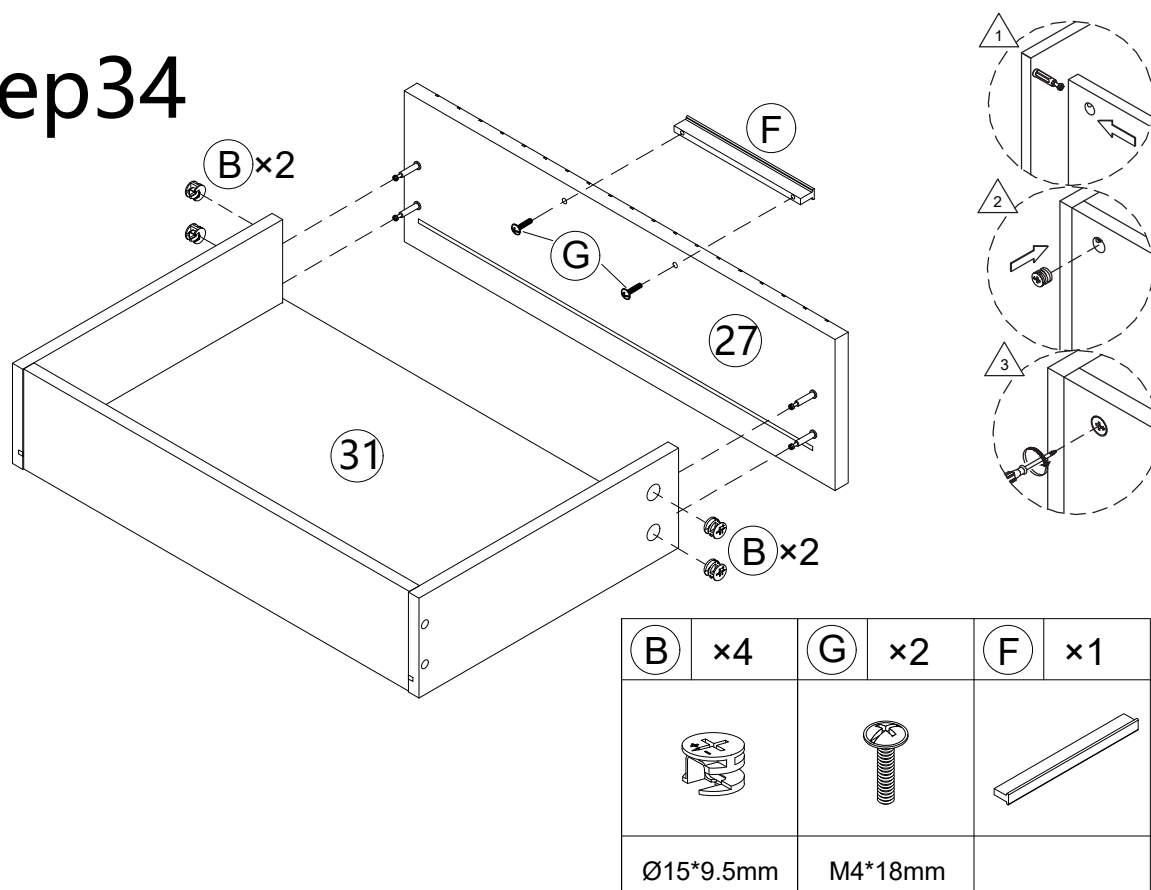


Step35

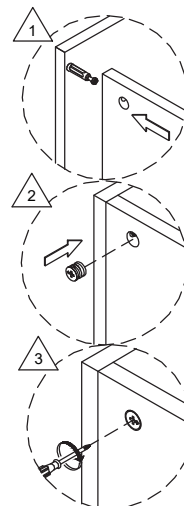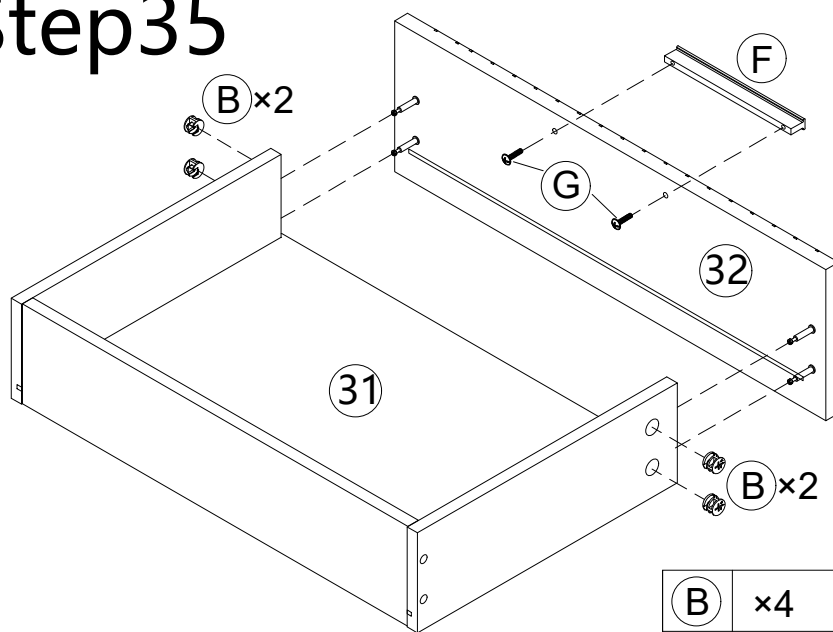

(B) ×4	(G) ×2	(F) ×1
Ø15*9.5mm	M4*18mm	




Step36

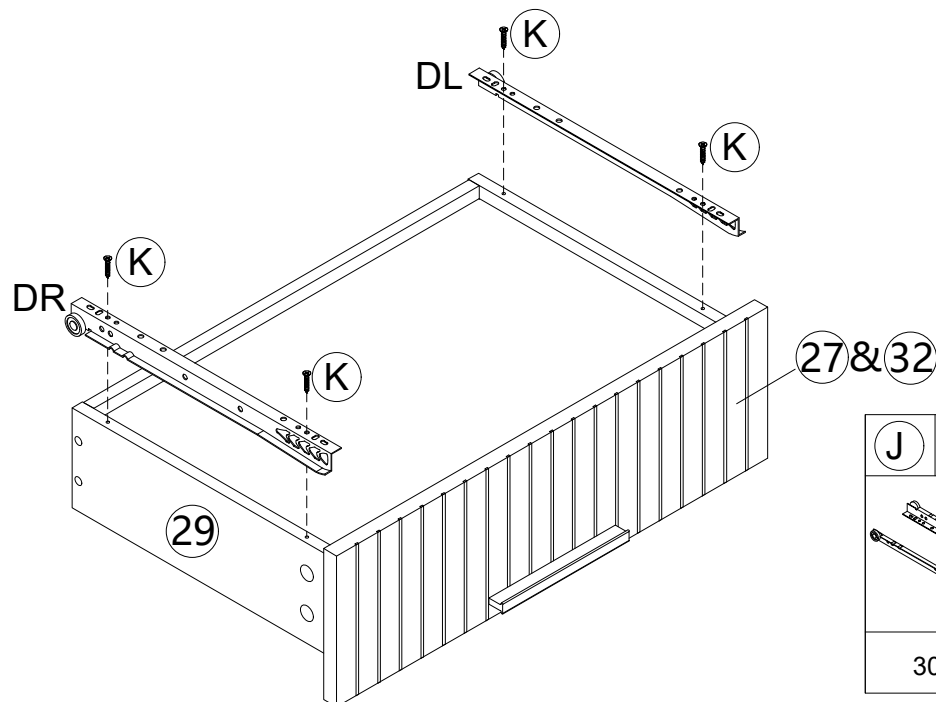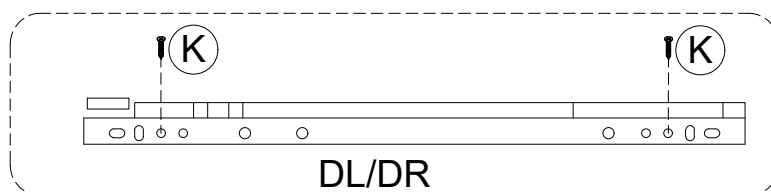

x2

(J) ×2	(K) ×8
300mm	Ø3.5*12mm

Step37

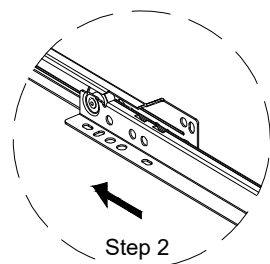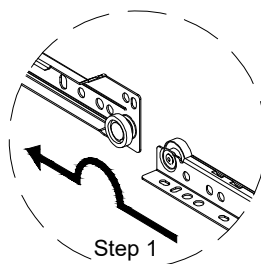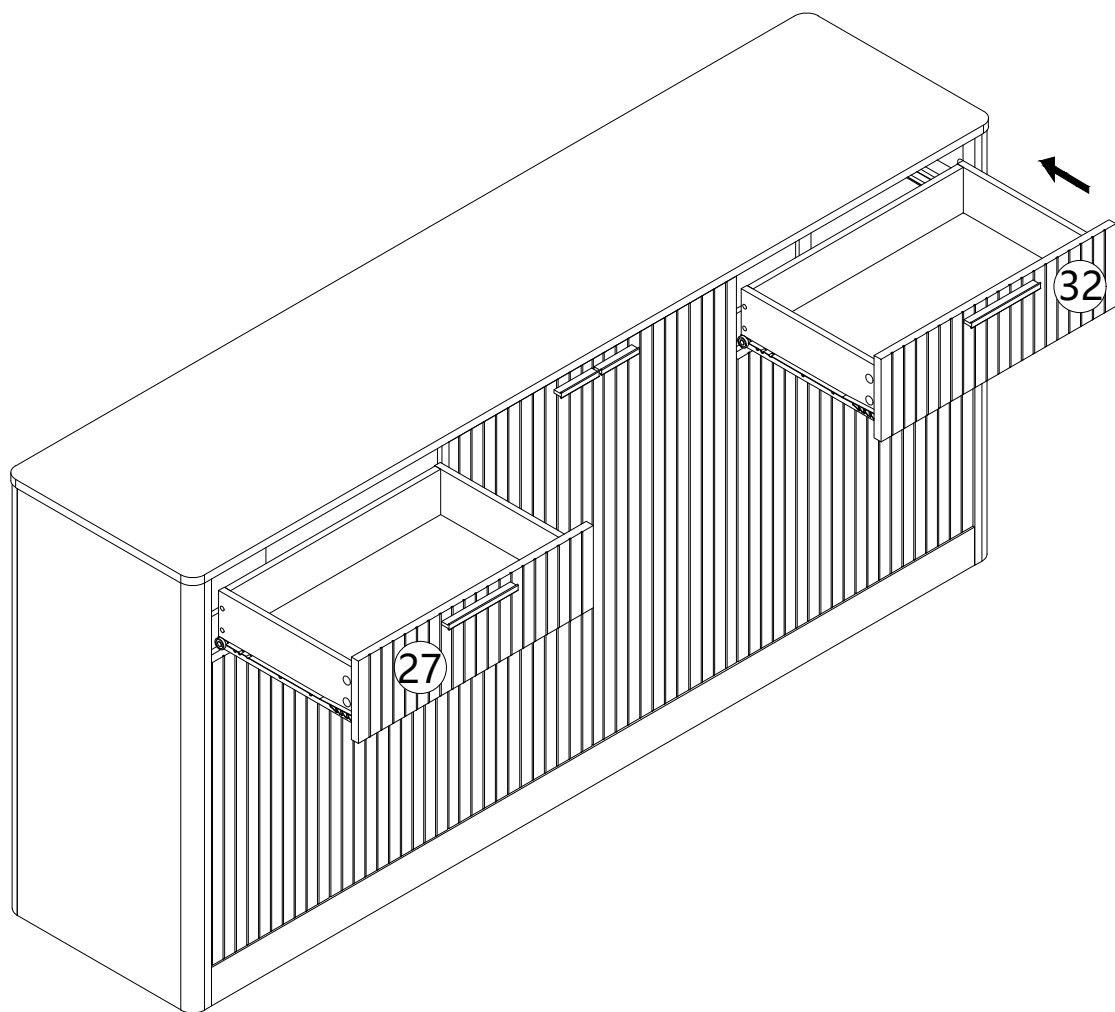

COMPLETE

