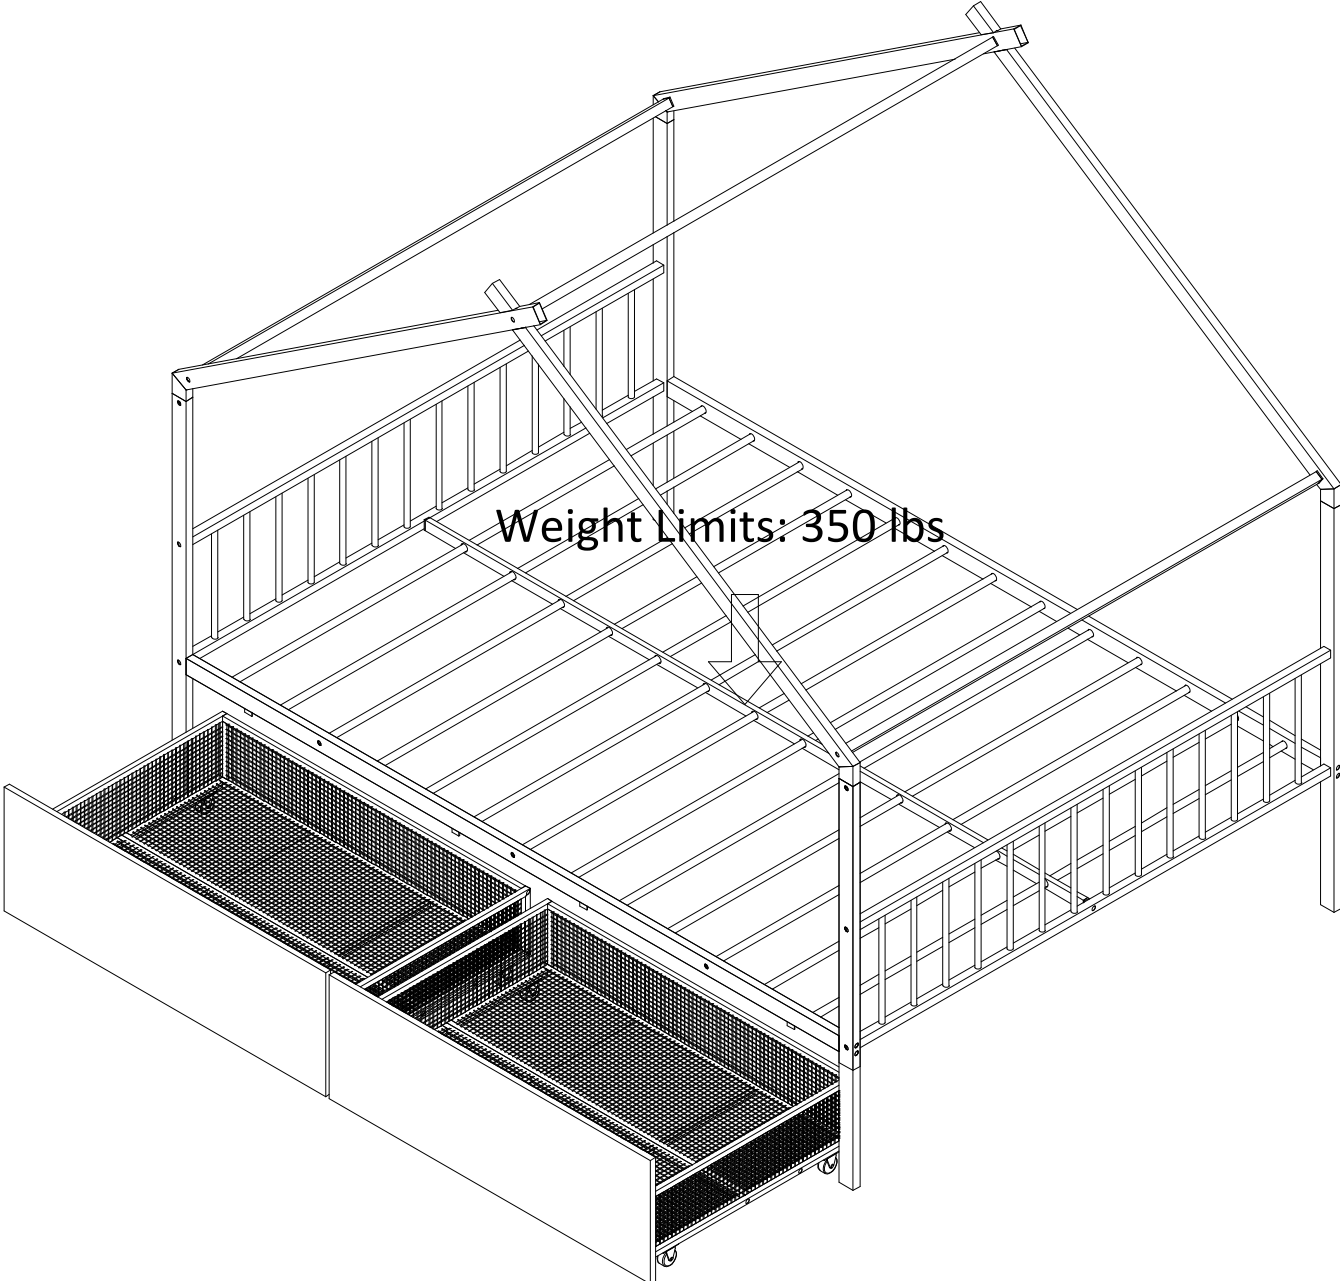



ASSEMBLY INSTRUCTIONS



Detail View


BUNK BED

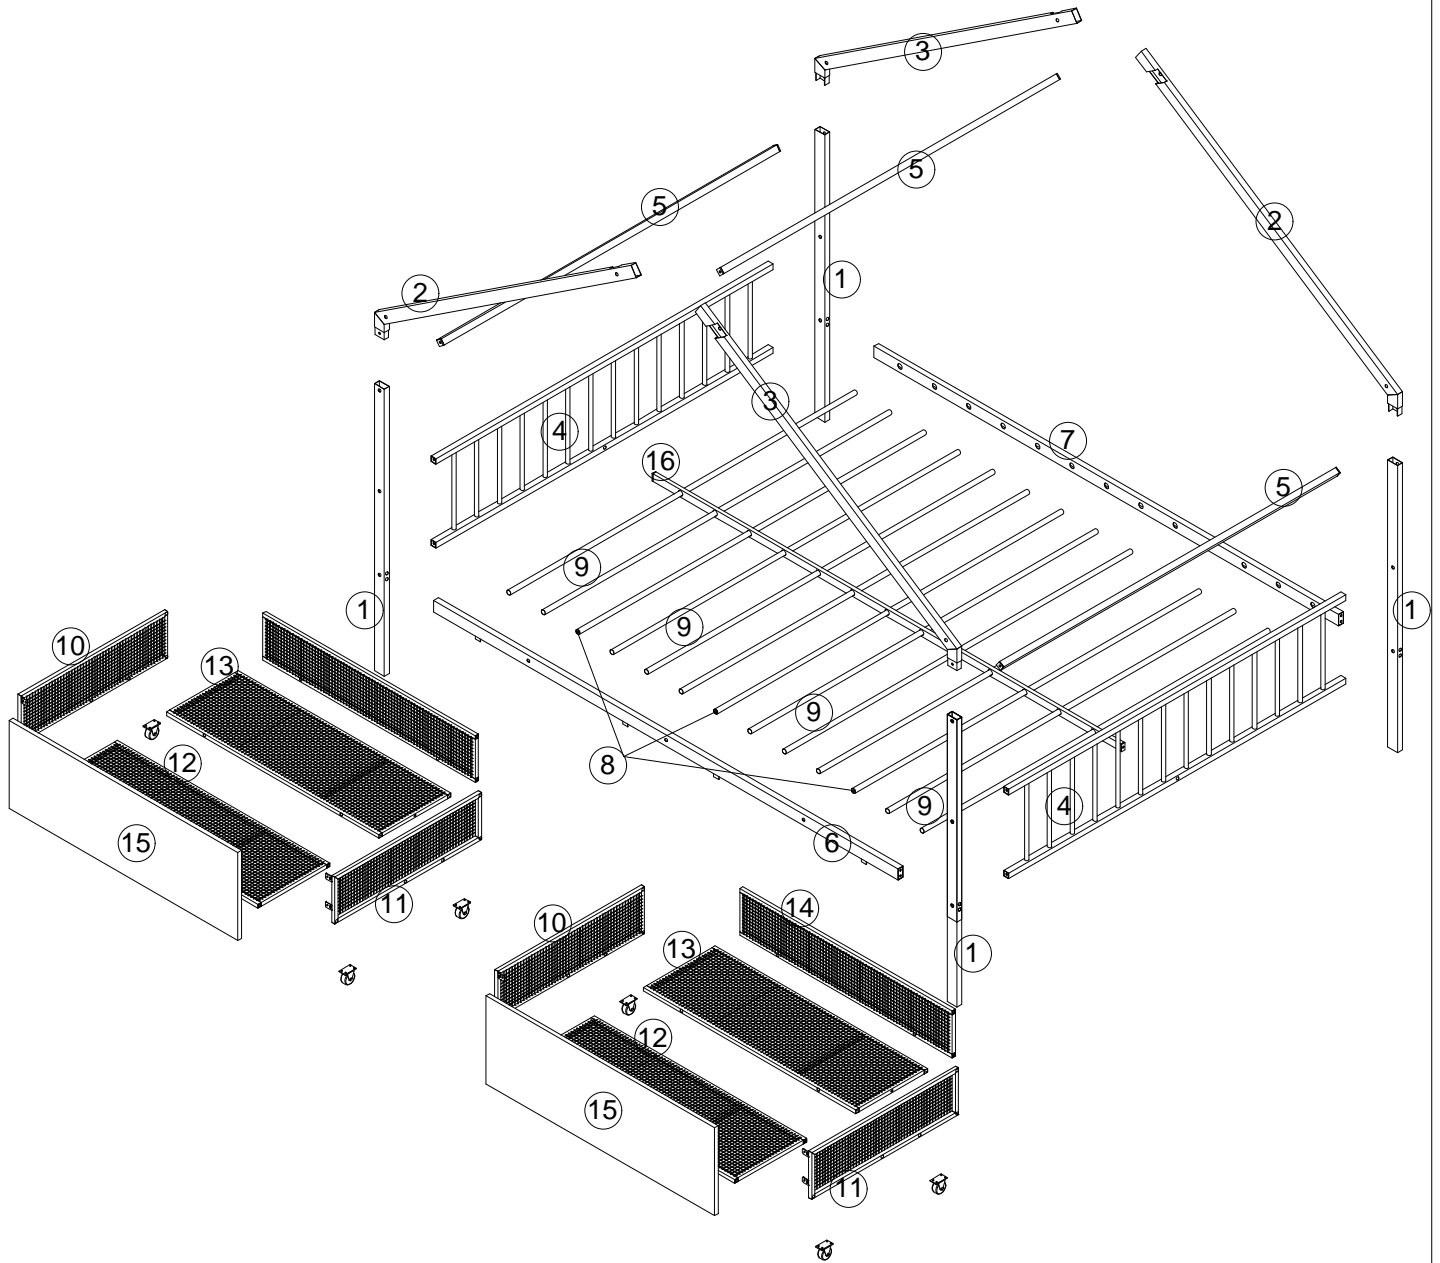IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY



ASSEMBLY INSTRUCTIONS

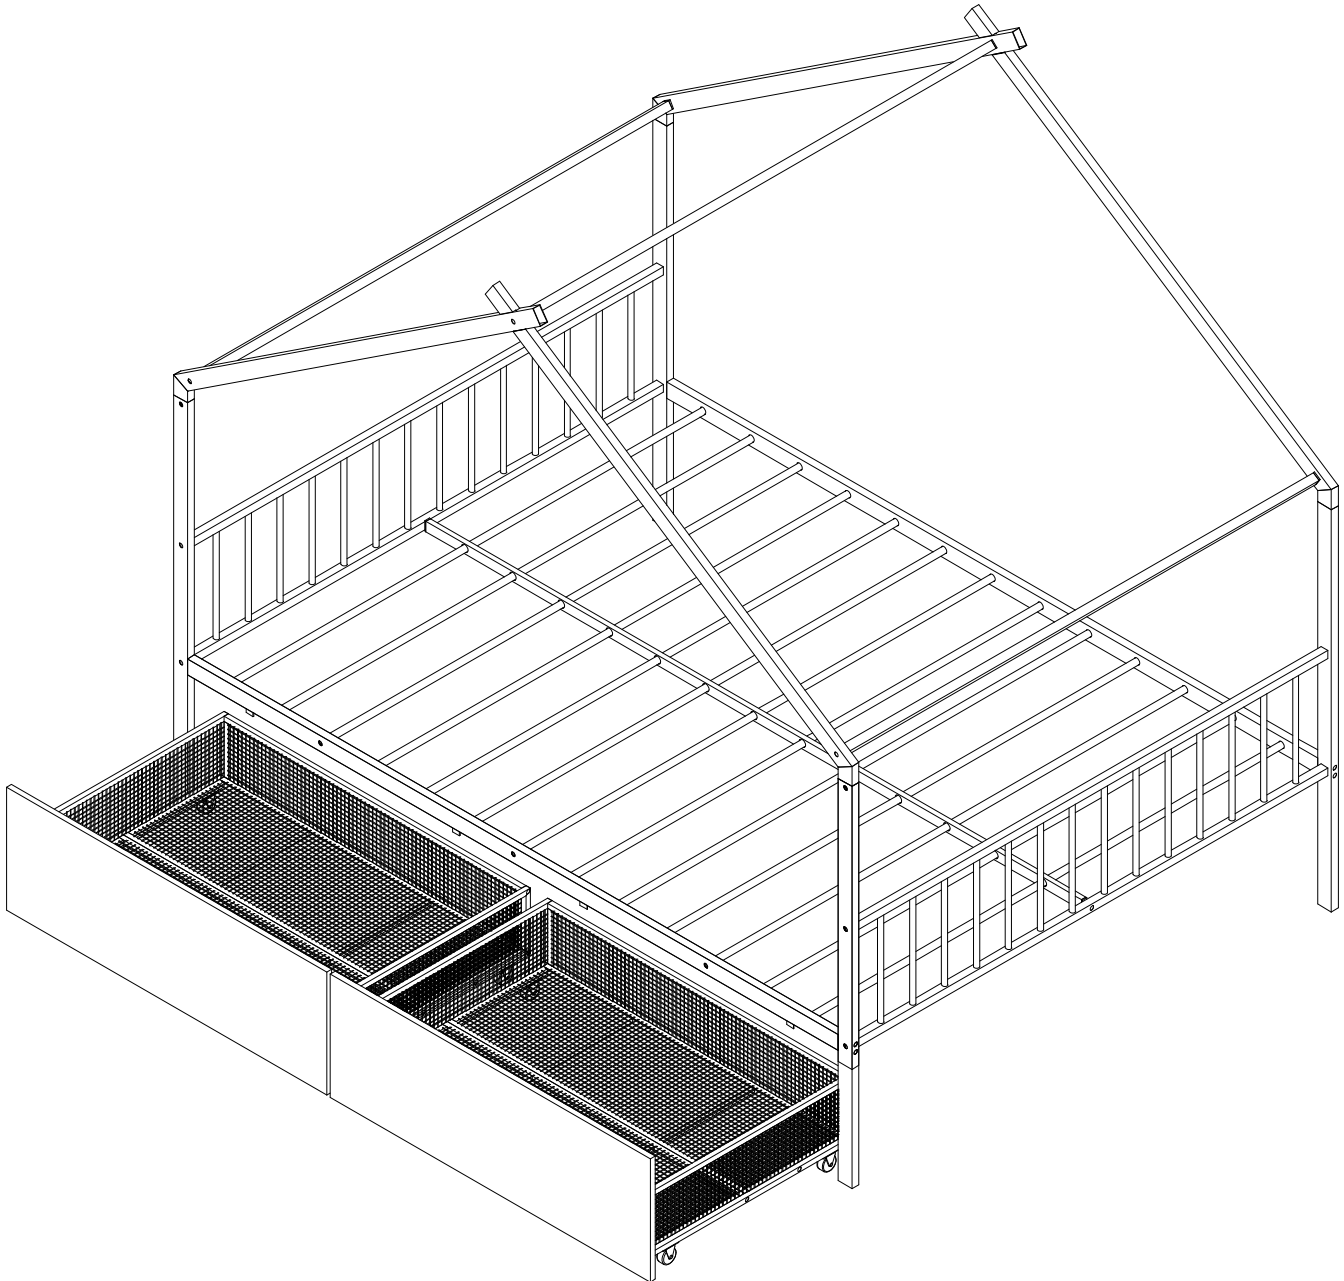
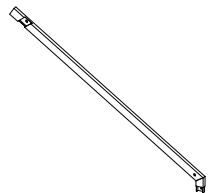
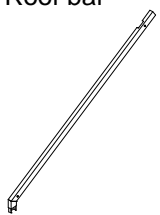
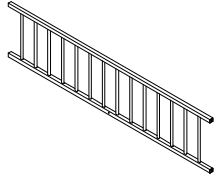
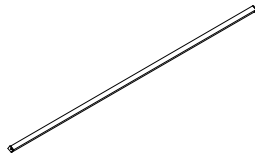
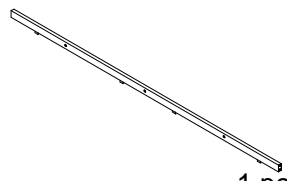
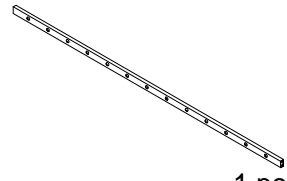
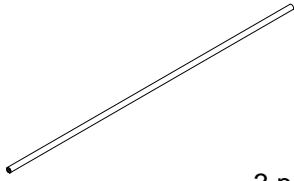
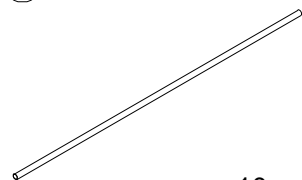
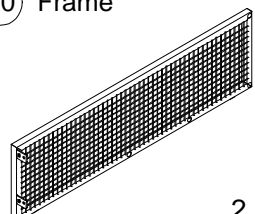
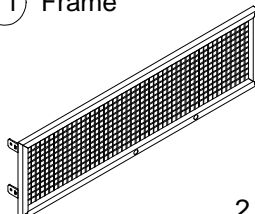
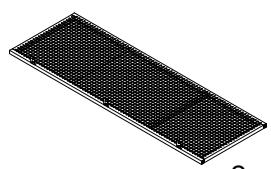
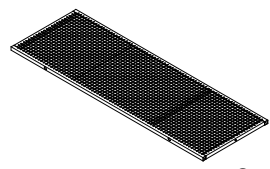
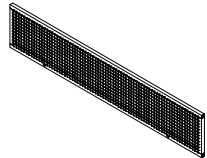
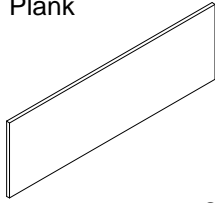

BUNK BED



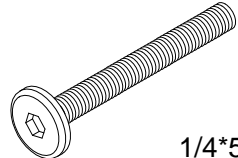
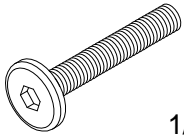






Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


<p>1 Vertical bar</p>  <p>4 pcs</p>	<p>2 Roof bar</p>  <p>2 pcs</p>	<p>3 Roof bar</p>  <p>2 pcs</p>	<p>4 Headboard</p>  <p>2 pcs</p>
<p>5 Horizontal bar</p>  <p>3 pcs</p>	<p>6 Horizontal bar</p>  <p>1 pc</p>	<p>7 Horizontal bar</p>  <p>1 pc</p>	<p>8 Slats</p>  <p>3 pcs</p>
<p>9 Slats</p>  <p>10 pcs</p>	<p>10 Frame</p>  <p>2 pcs</p>	<p>11 Frame</p>  <p>2 pcs</p>	<p>12 Frame</p>  <p>2 pcs</p>
<p>13 Frame</p>  <p>2 pcs</p>	<p>14 Frame</p>  <p>2 pcs</p>	<p>15 Plank</p>  <p>2 pcs</p>	<p>16 Horizontal bar</p>  <p>1 pc</p>

HARDWARE

<p>A Bolts</p>  <p>1/4*55 8 pcs</p>	<p>B Bolts</p>  <p>1/4*40 16 pcs</p>	<p>C Bolts</p>  <p>1/4*18 10 pcs</p>	<p>D Bolts</p>  <p>1/4*32 28 pcs</p>
<p>E Screws</p>  <p>#8*10 14 pcs</p>	<p>F Bolts</p>  <p>5/32*10 16 pcs</p>	<p>G Caster</p>  <p>8 pcs</p>	<p>H Allen Key</p>  <p>4*59 1 pc</p>


BUNK BED ASSEMBLY INSTRUCTIONS

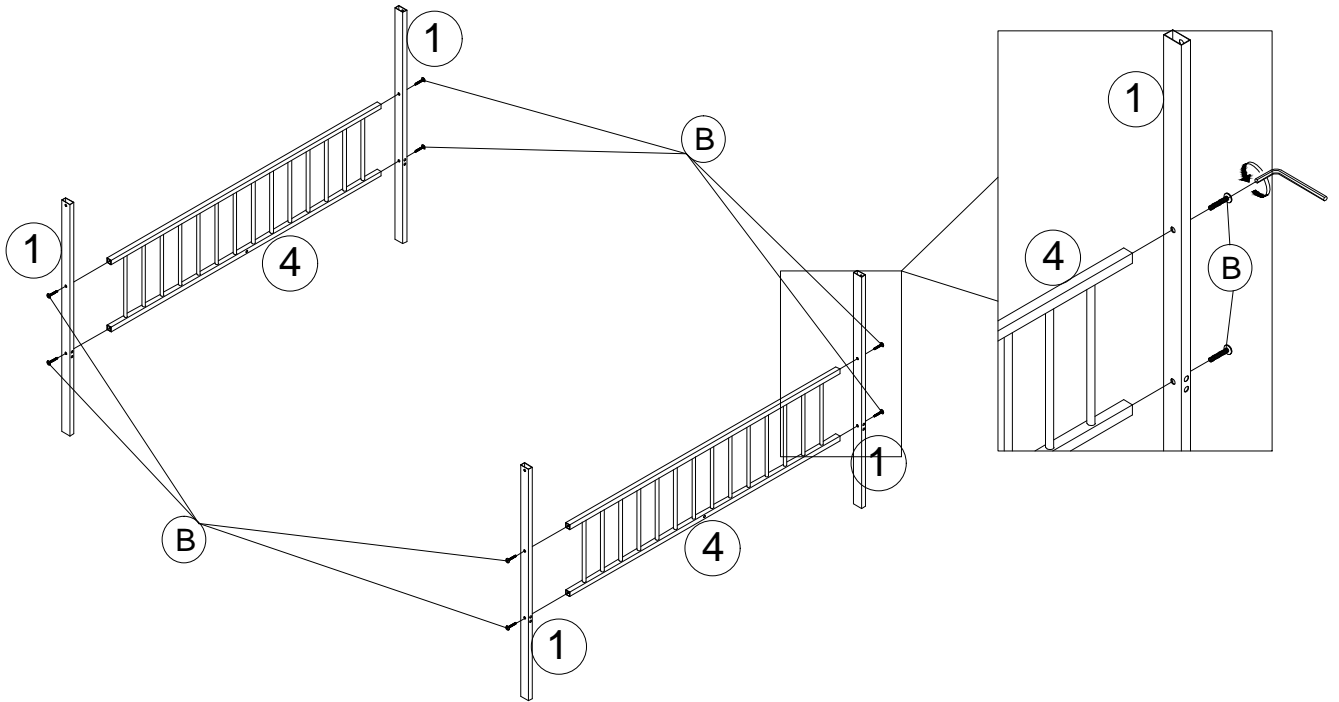
STEP 1



(B)		1/4*40	8 pcs
-----	---	--------	-------

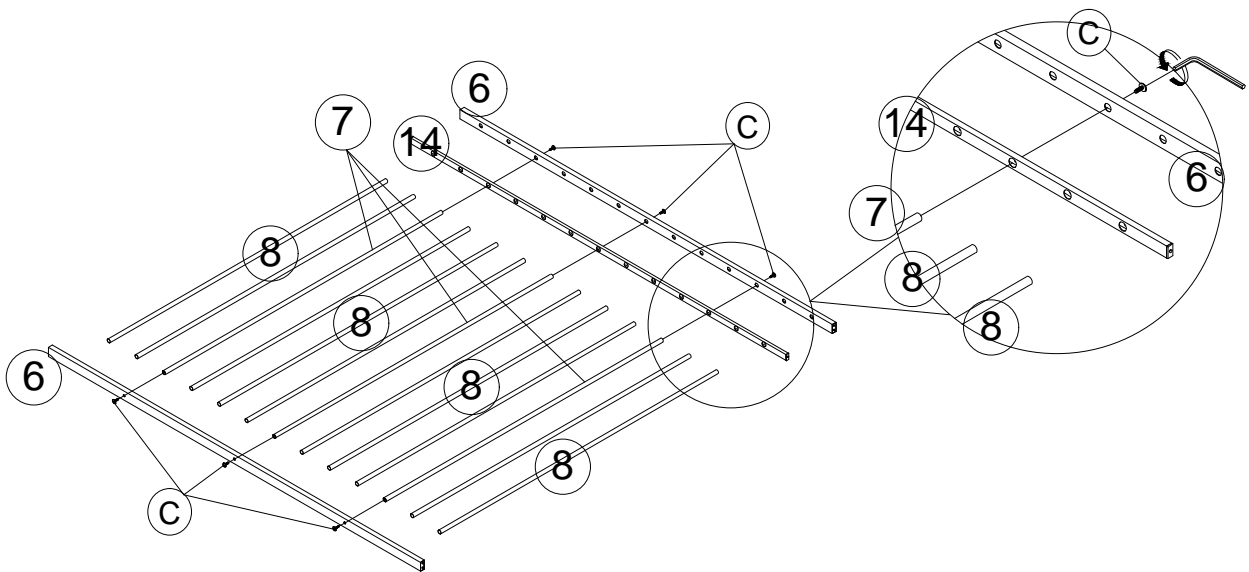
STEP 2





(C)		1/4*18	6 pcs
-----	---	--------	-------


BUNK BED ASSEMBLY INSTRUCTIONS

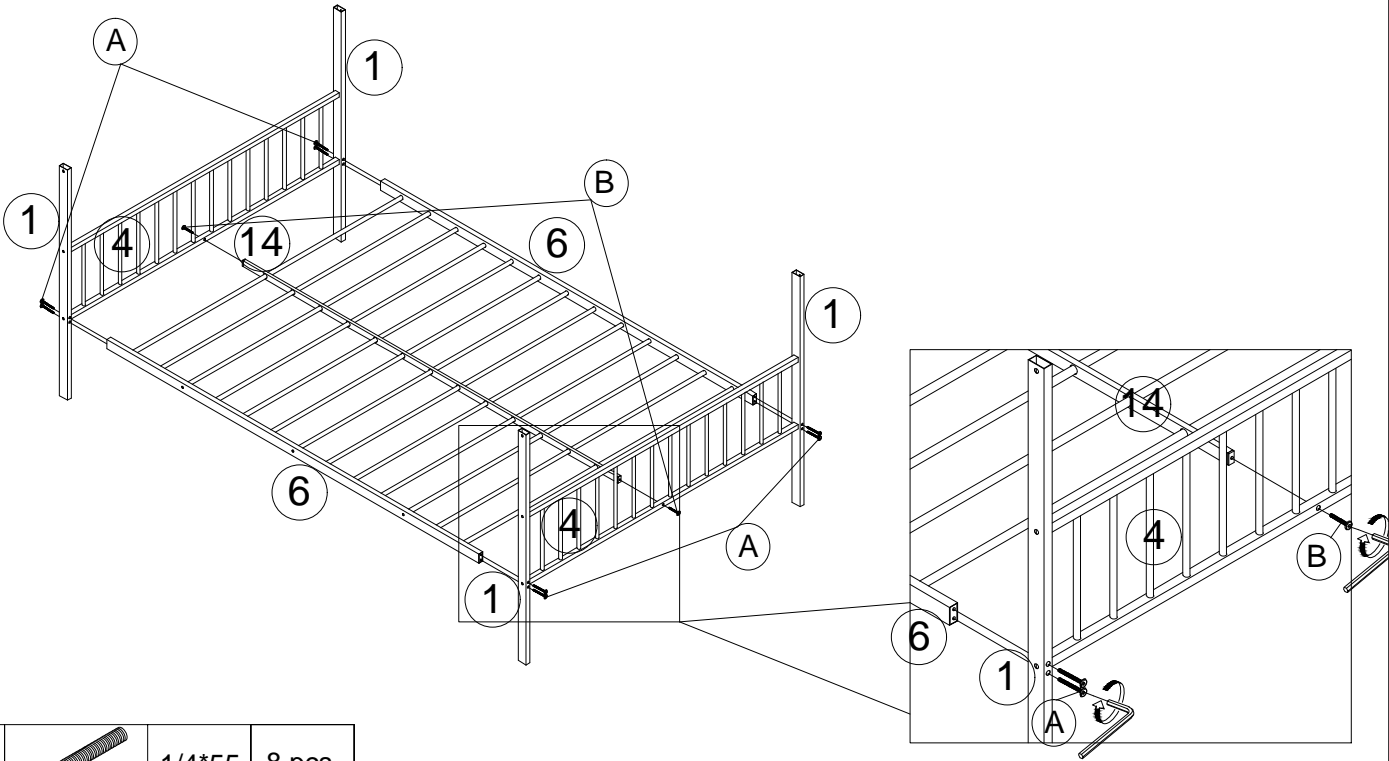
STEP 3



(A)		1/4*55	8 pcs
(B)		1/4*40	2 pcs

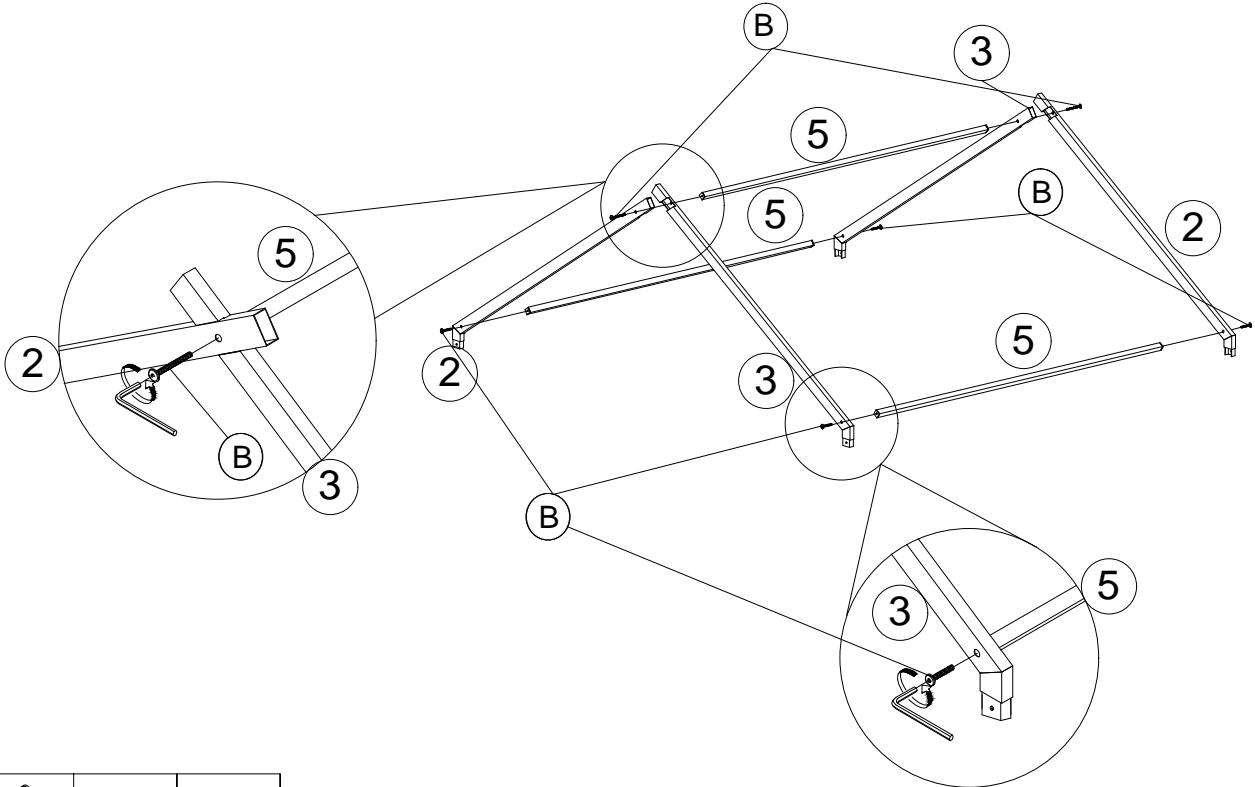
STEP 4




(B)		1/4*40	6 pcs
-----	---	--------	-------


BUNK BED ASSEMBLY INSTRUCTIONS

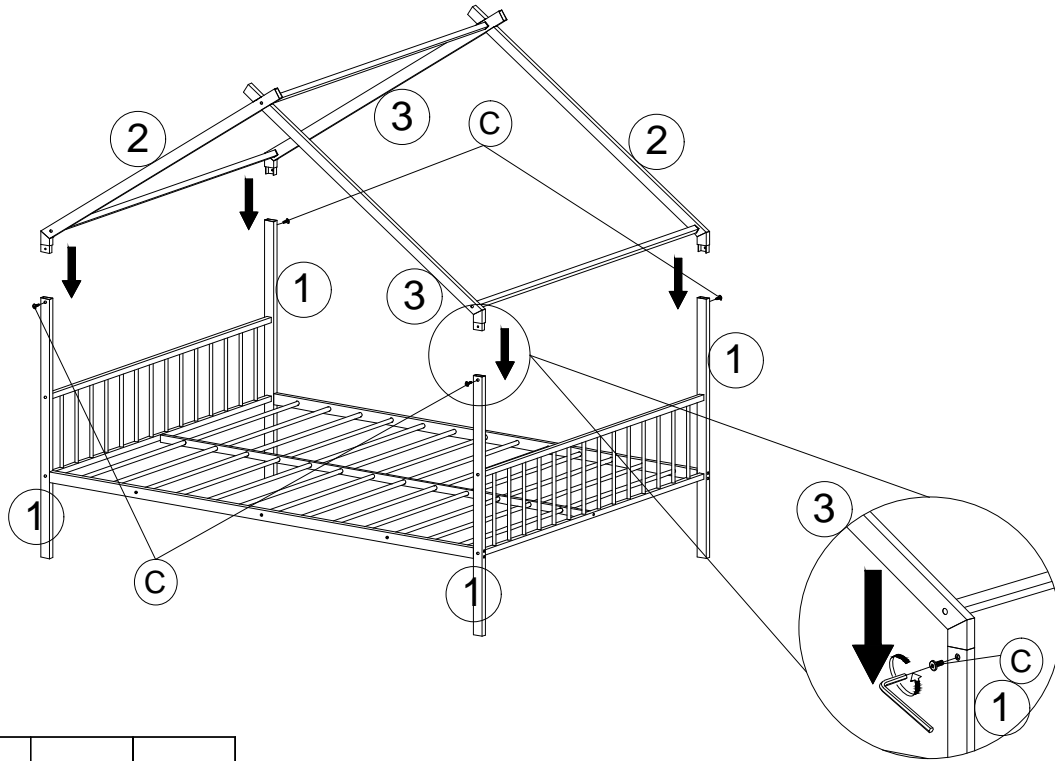
STEP 5



C		1/4*18	4 pcs
---	---	--------	-------

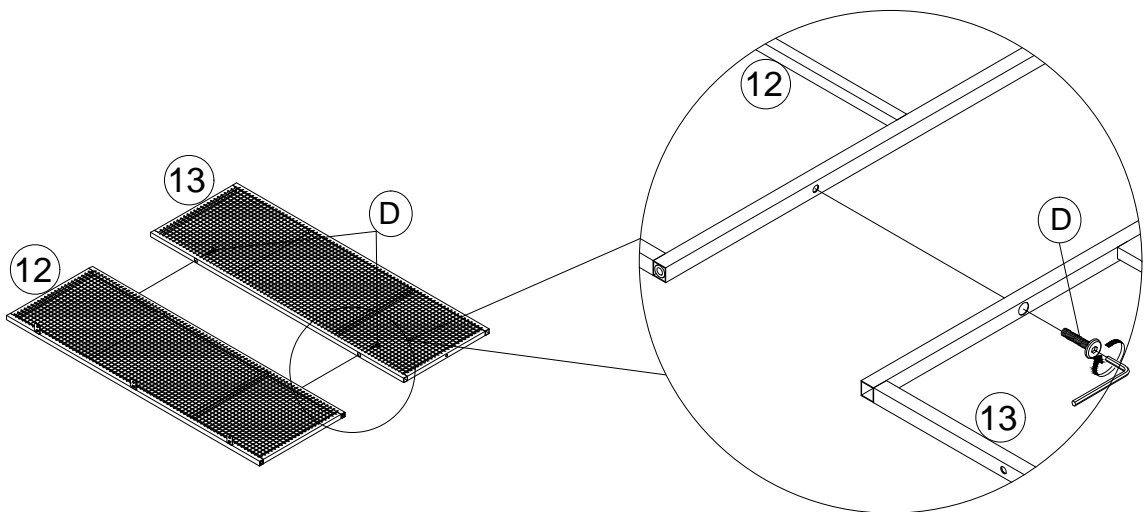
STEP 6 x2




D		1/4*32	2 pcs x2
---	---	--------	----------


BUNK BED ASSEMBLY INSTRUCTIONS

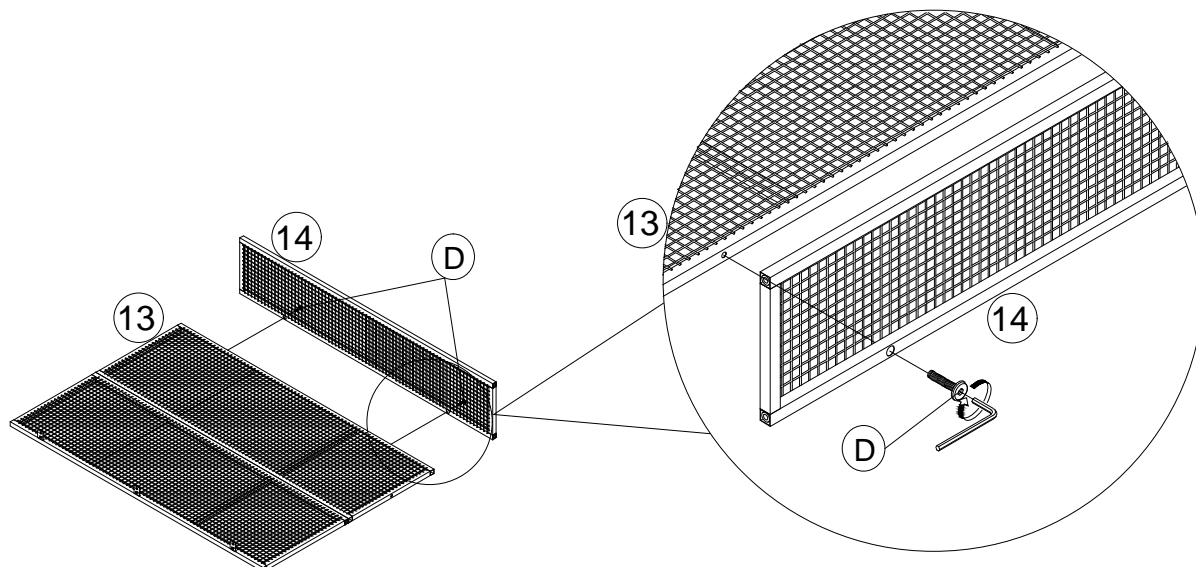
STEP 7 x2



(D)		1/4*32	2 pcs	x2
-----	---	--------	-------	----

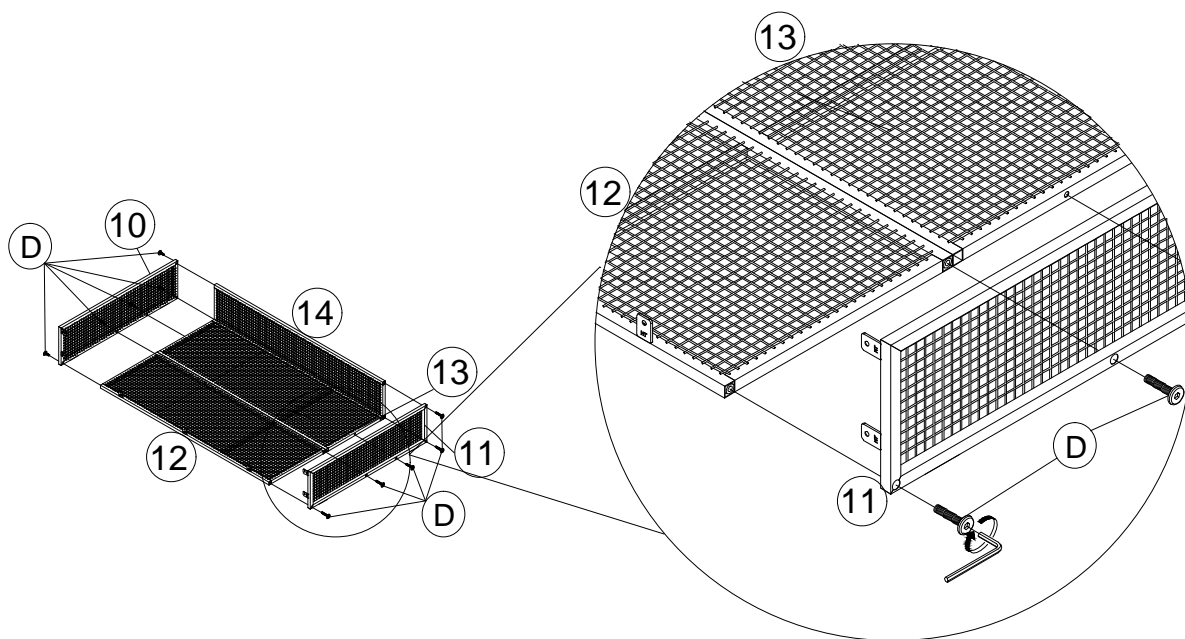
STEP 8 x2




(D)		1/4*32	10 pcs	x2
-----	---	--------	--------	----


BUNK BED ASSEMBLY INSTRUCTIONS

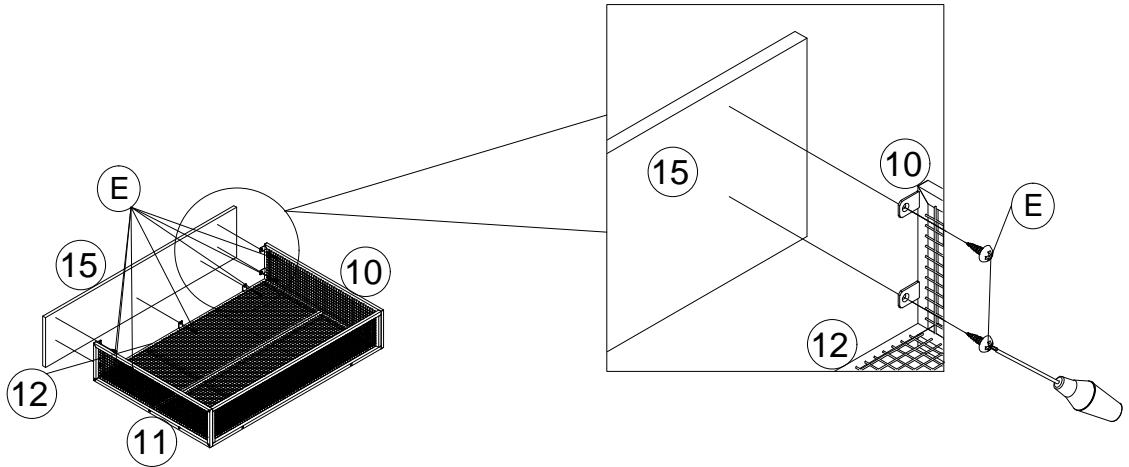
STEP 9 x2




(E)		#8*10	7 pcs	x2
-----	---	-------	-------	----

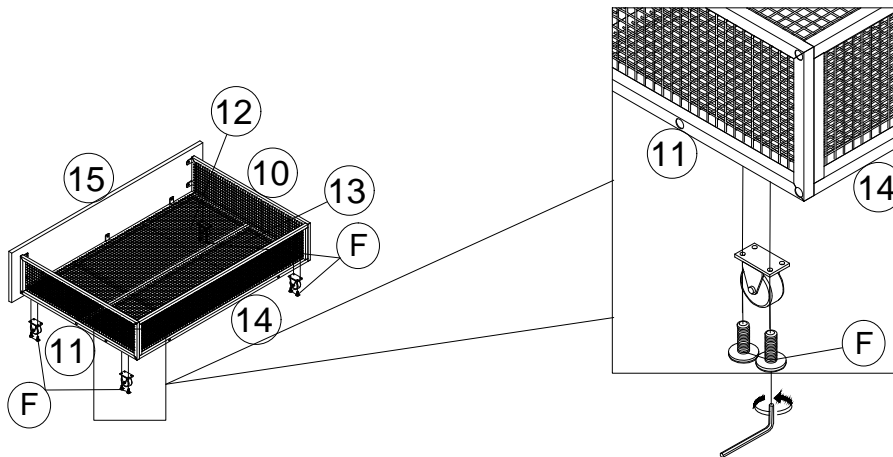STEP 10 x2



(F)		5/32*10	8 pcs	x2
-----	---	---------	-------	----

(G)			4 pcs	x2
-----	---	--	-------	----

BUNK BED ASSEMBLY INSTRUCTIONS

COMPLETE

