

Serial Number： SDP06-22
R 1.0

Shower Door Installation Instructions

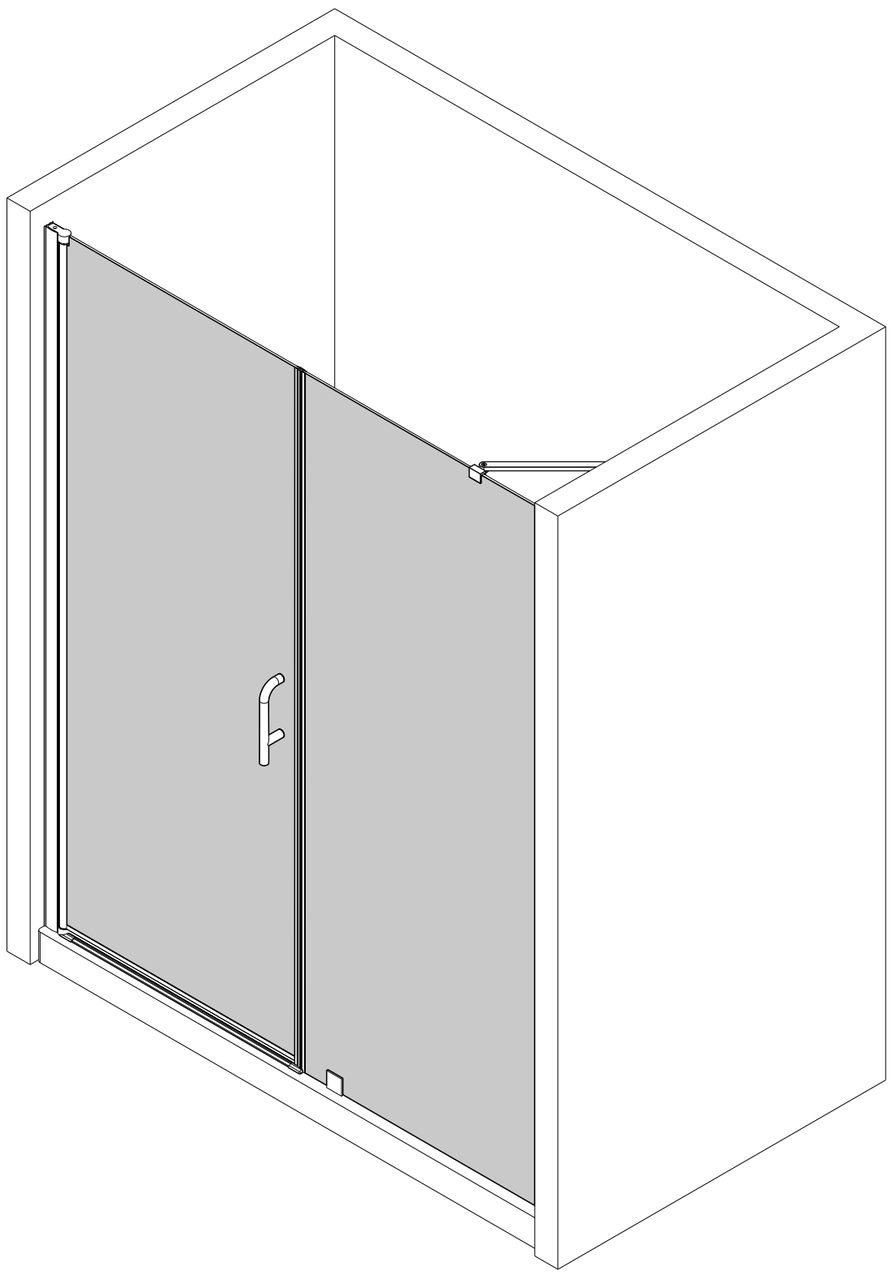

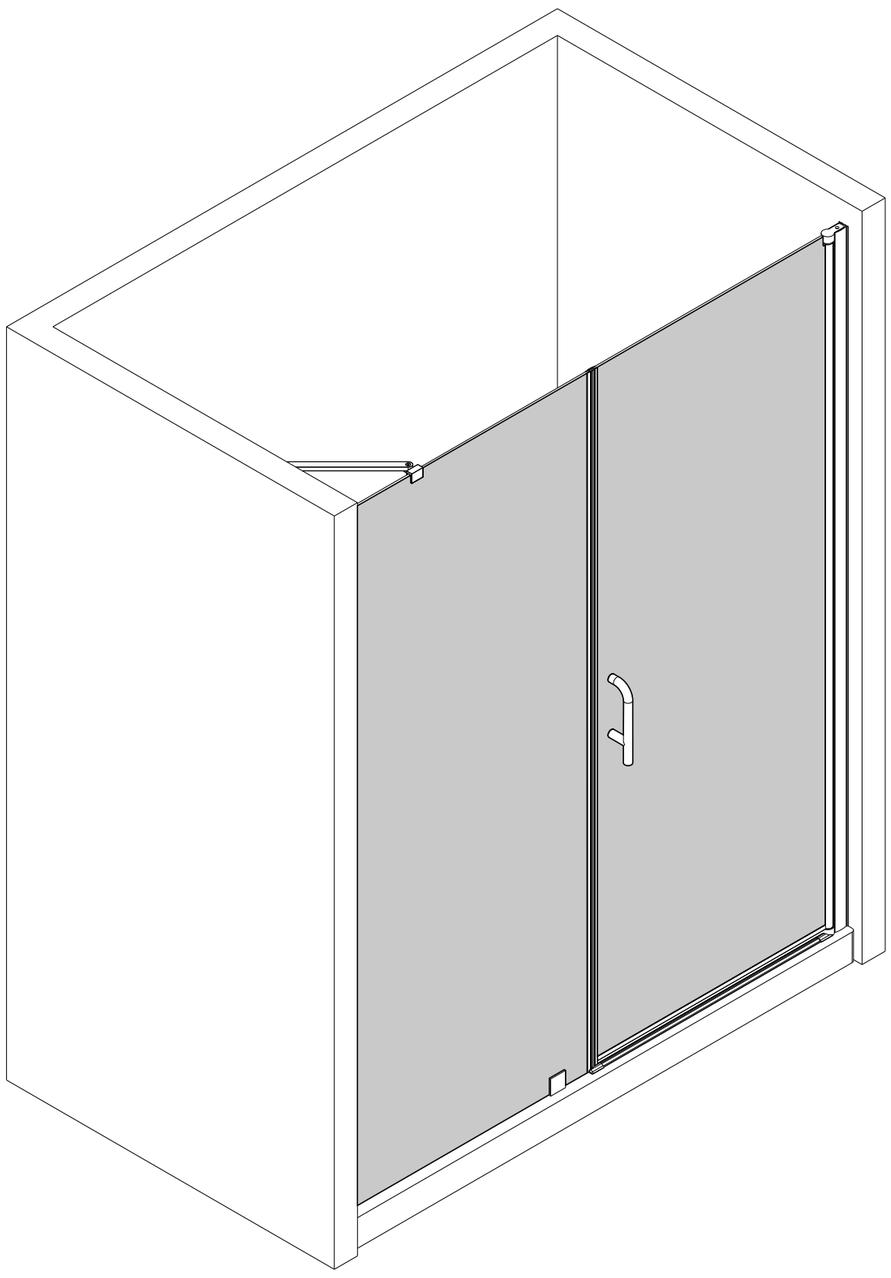

Reversible For a Left or Right Door


Please Do Not Return the Product to the Store.
Contact us with any questions.

Model Specific Preparation


REQUIRED:


Verify threshold and wall with a level.


1/4"(6mm) Maximum out of plumb adjustment from top to bottom

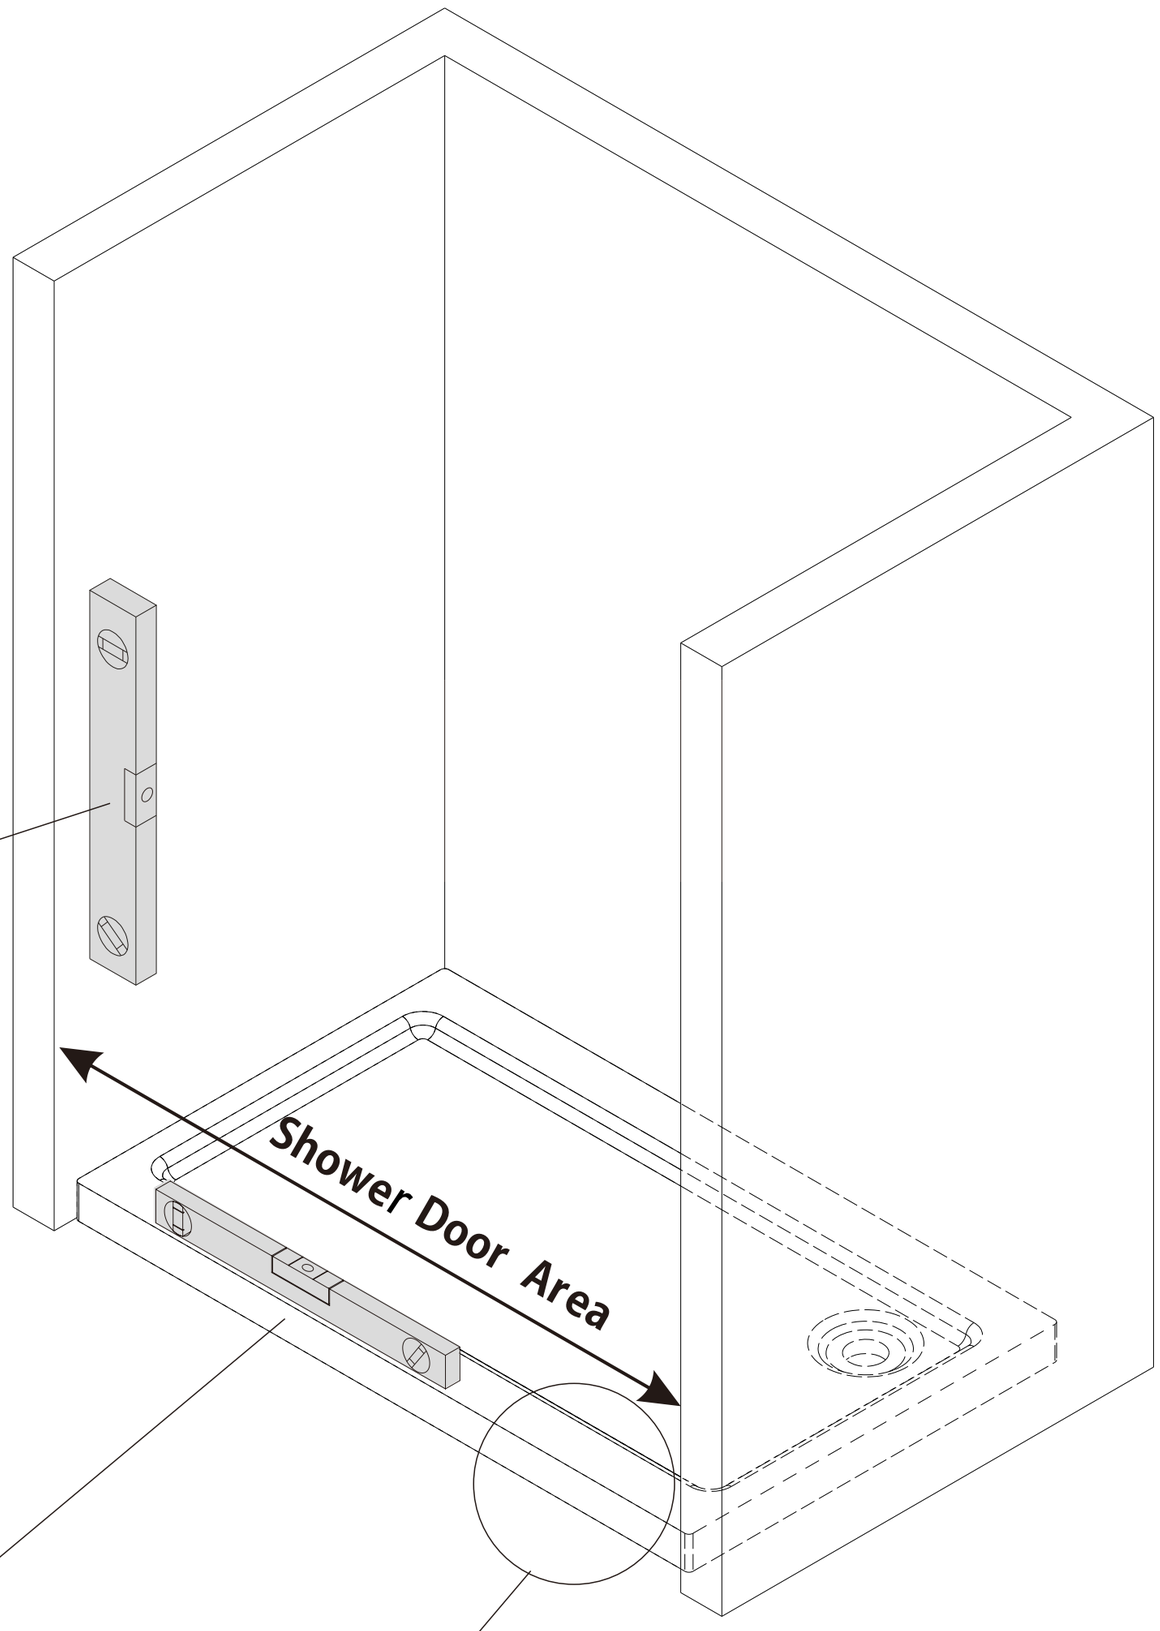

Threshold must be level.

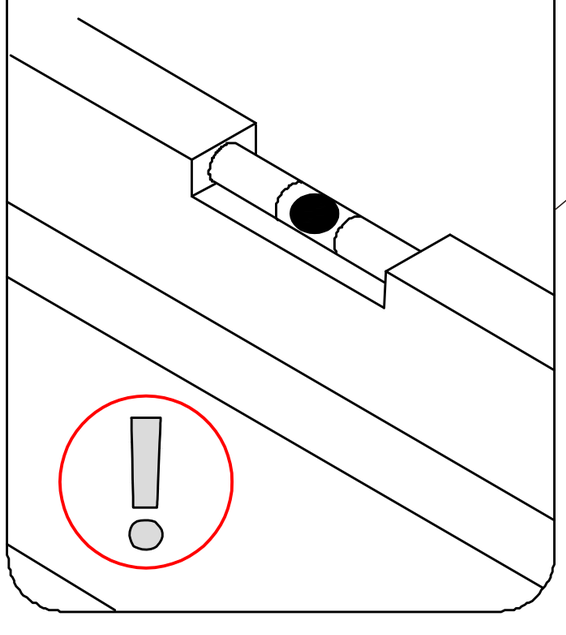


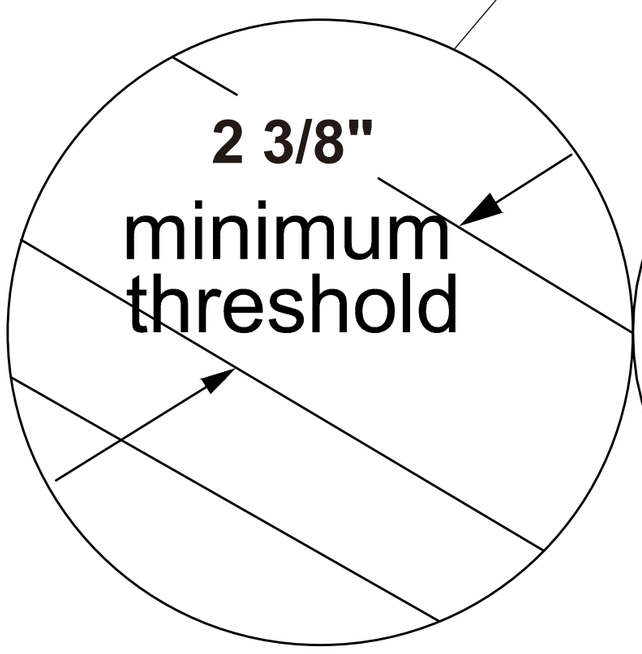

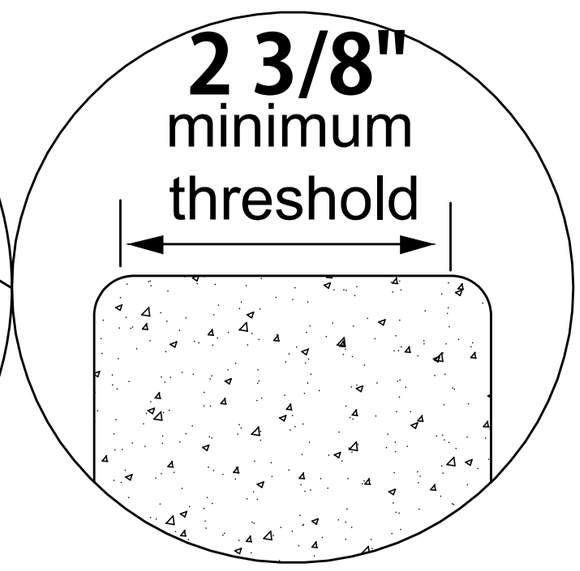

Hotline : + 1 302 336 8180

PACKAGE CONTENT

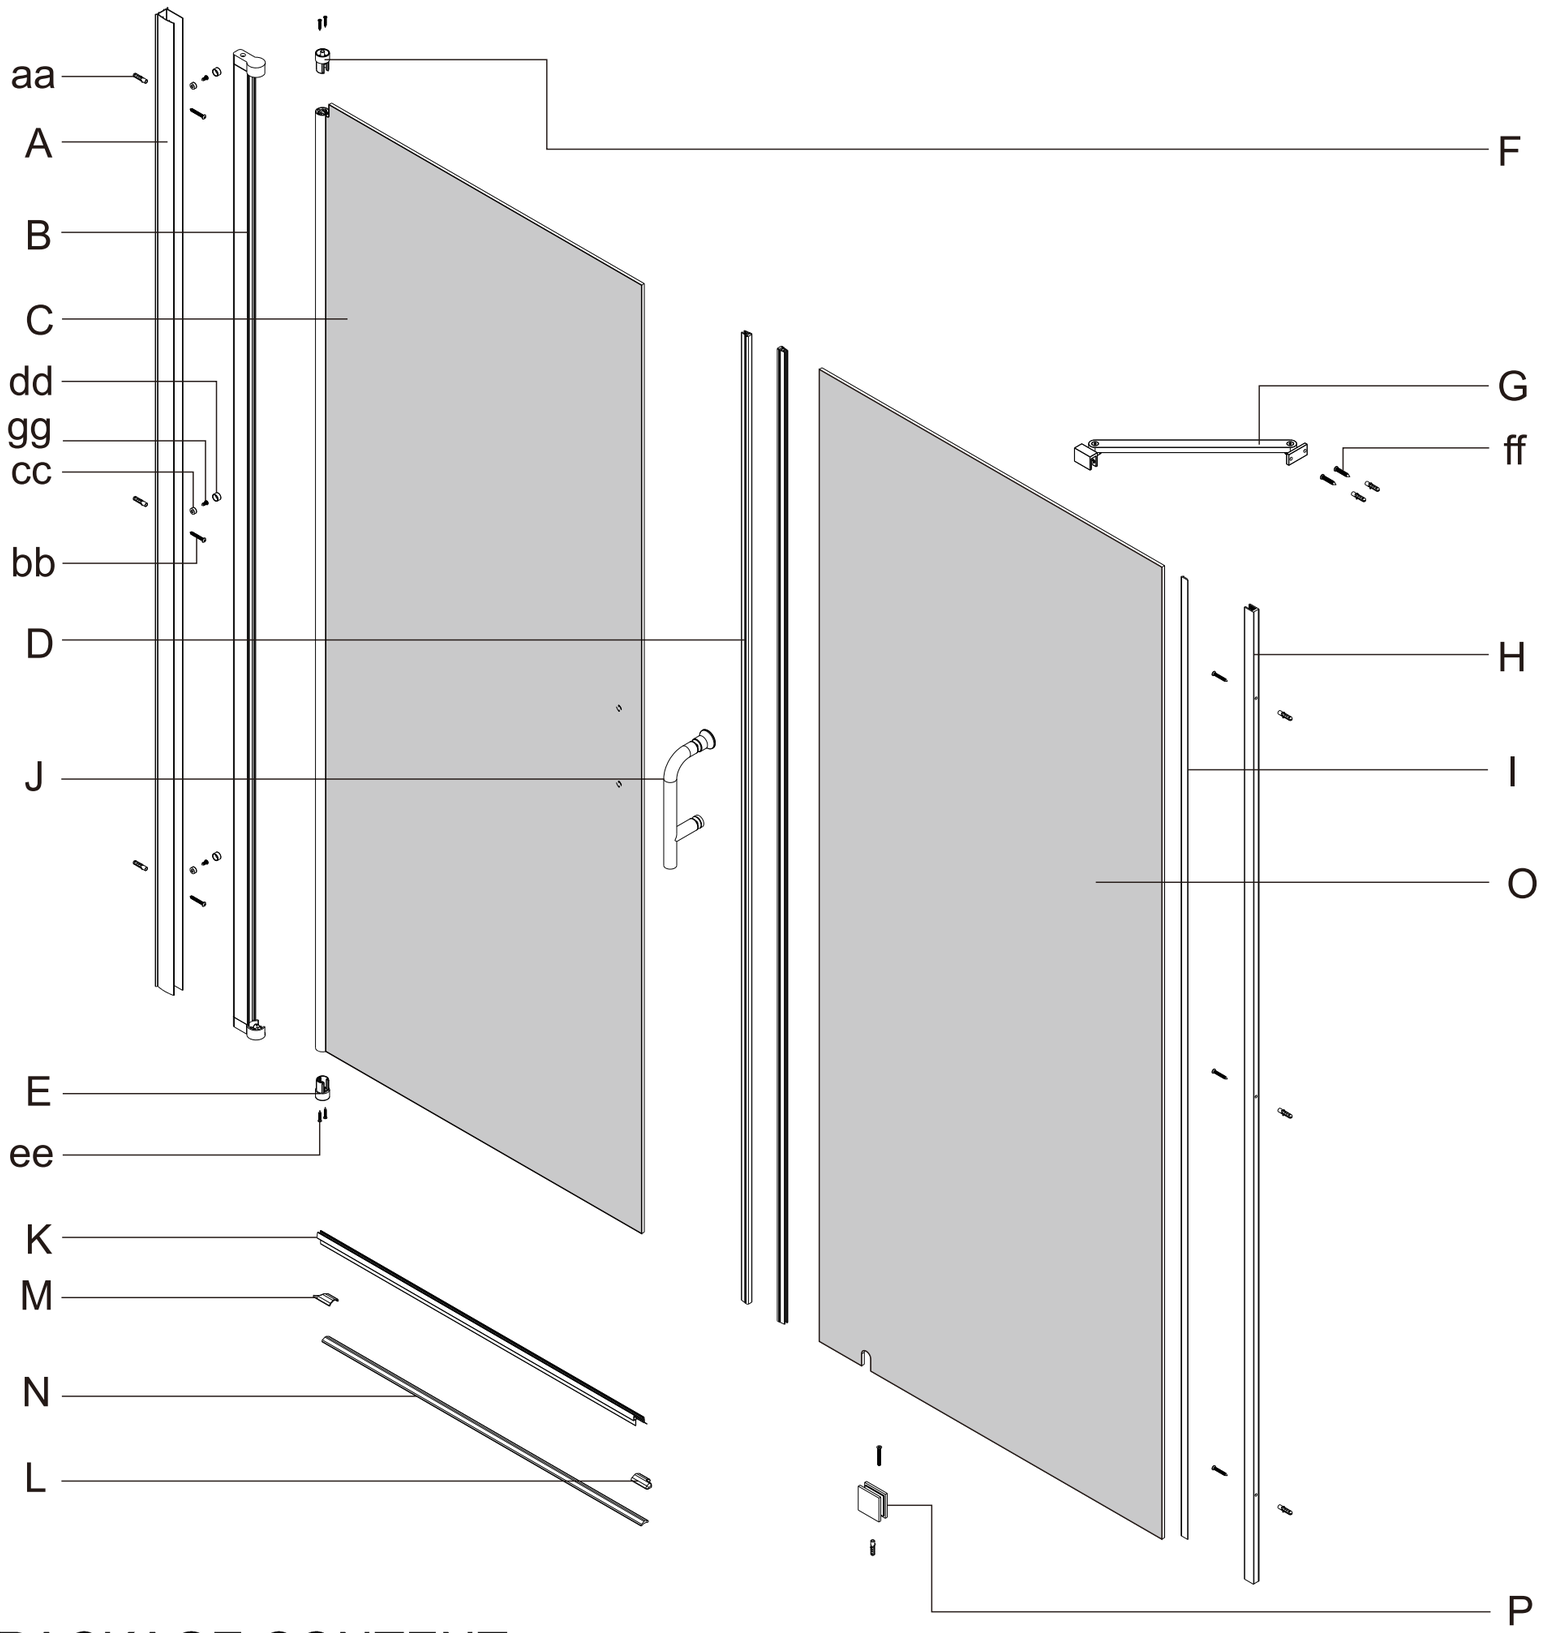

PACKAGE CONTENT

PART#	DESCRIPTION	QTY
A	Wall Jamb	1
B	**Upright Profile**	1
C	Glass Door	1
D	Magnetic Strip	2
E	**Bottom pivot sleeve**	1
F	**Top pivot sleeve**	1
G	Support Rod	1
H	Wall Jamb	1


PART#	DESCRIPTION	QTY
I	Wedge Strip	1
J	Handle	1
K	Bottom Anti-Water Strip	1
L	Connector	2
M	Connector	2
N	Alu. Threshold	1
O	Stationary Glass	1
P	Fixed Fittings	1

NOTE


Inspect all parts for missing prior to installation!
Contact us for any part missing.

PACKAGE CONTENT


A
x1

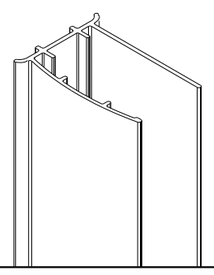


B
x1

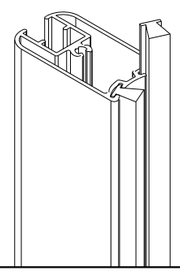


C
x1




D
x 2

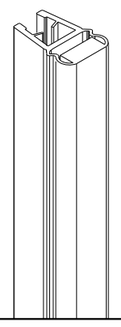


E
x1

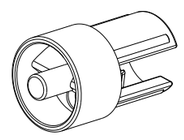


F
x1

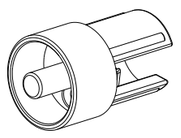


G
x1

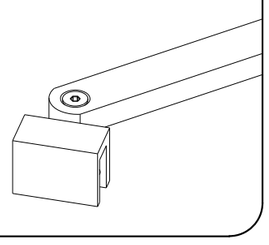


H
x1




I
x1

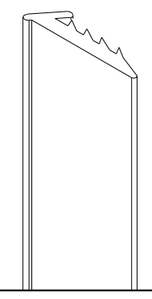


J
x1

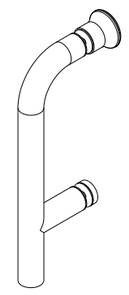


K
x1

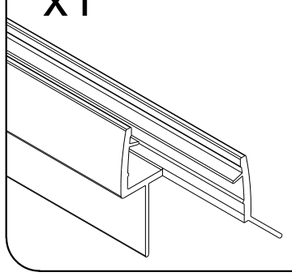


L
x2

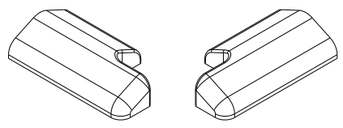


M
x2



N
x1

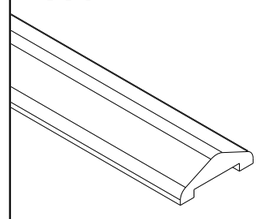

O
x1




P
x1

Hotline : + 1 302 336 8180

HARDWARE CONTENT


Additional spare parts are included.

aa

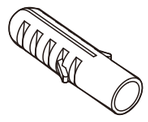

Wall anchor
Ø6x28mm
10 pcs

bb

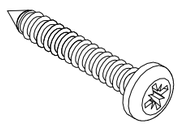

Screw
ST4X30mm
4 pcs

cc



Washer
Φ10XΦ5X1.0
3 pcs

dd




Screw cap
3 pcs

ee



Screw
ST3X20mm
5 pcs

ff

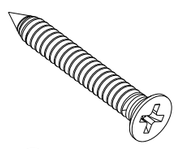


Screw
ST4X30mm
7 pcs

gg



Metric Screw
ST4X12mm
3 pcs

hh

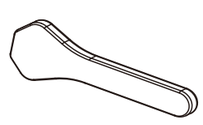


Wedge strip
install tool
1PC

NOTE

Inspect all parts for missing prior to installation!
Contact us for any part missing.

TOOLS REQUIRED


Drill Bits

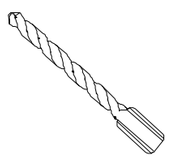

Ø1/8” & Ø1/4” (3&6mm) dia.

HSS


Phillips screw driver

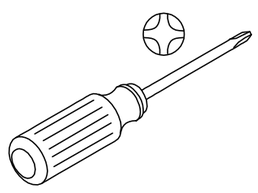


Electric hand drill




Level

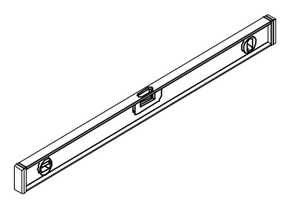


Caulkinggun

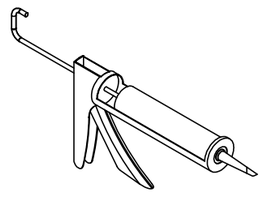


Measuring Tape

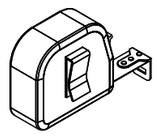


Soft Head Hammer

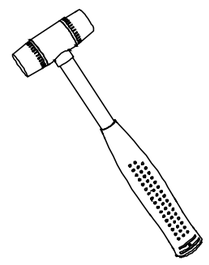


Marking Pencil



Utility Knife

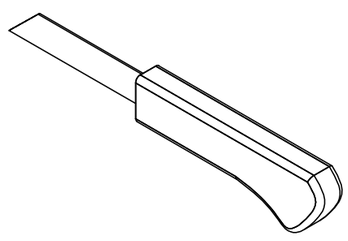


Sealant

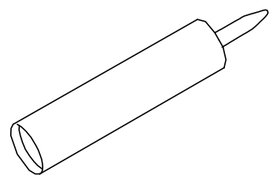

MASONRY DRILL BIT FOR TILE Ø6mm




Safety Glasses

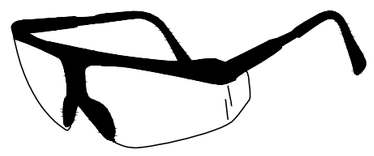


Gloves




Carpenter's Squarer

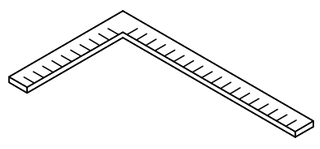


Masking or painter's tape

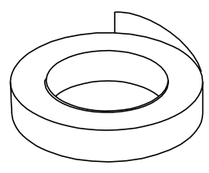


Hack Saw

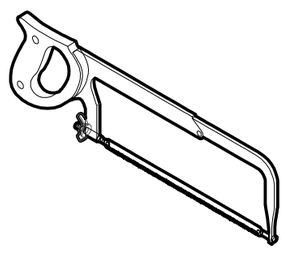

Metal File

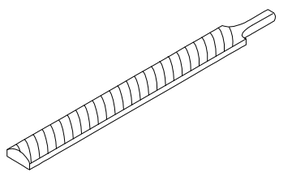

Glass suction Handle

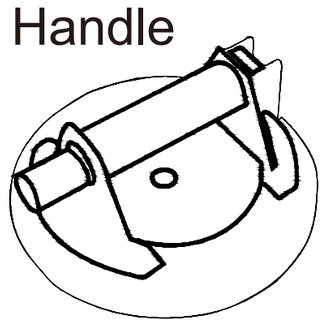


SAFETY INFORMATION

CAUTION


Please carefully read the following important safety information before handling or installing this shower door . There is a risk of serious injury while handling this product. To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation,protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements.Professional installation is recommended!
- Keep this installation manual for future reference.

NOTE: Two people should perform this installaton.

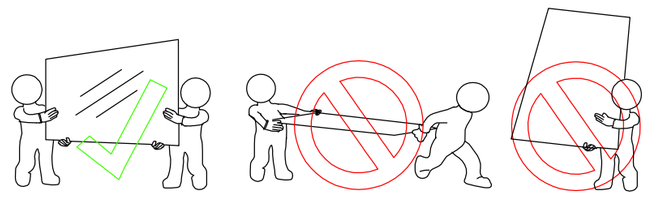

Model Dimensions

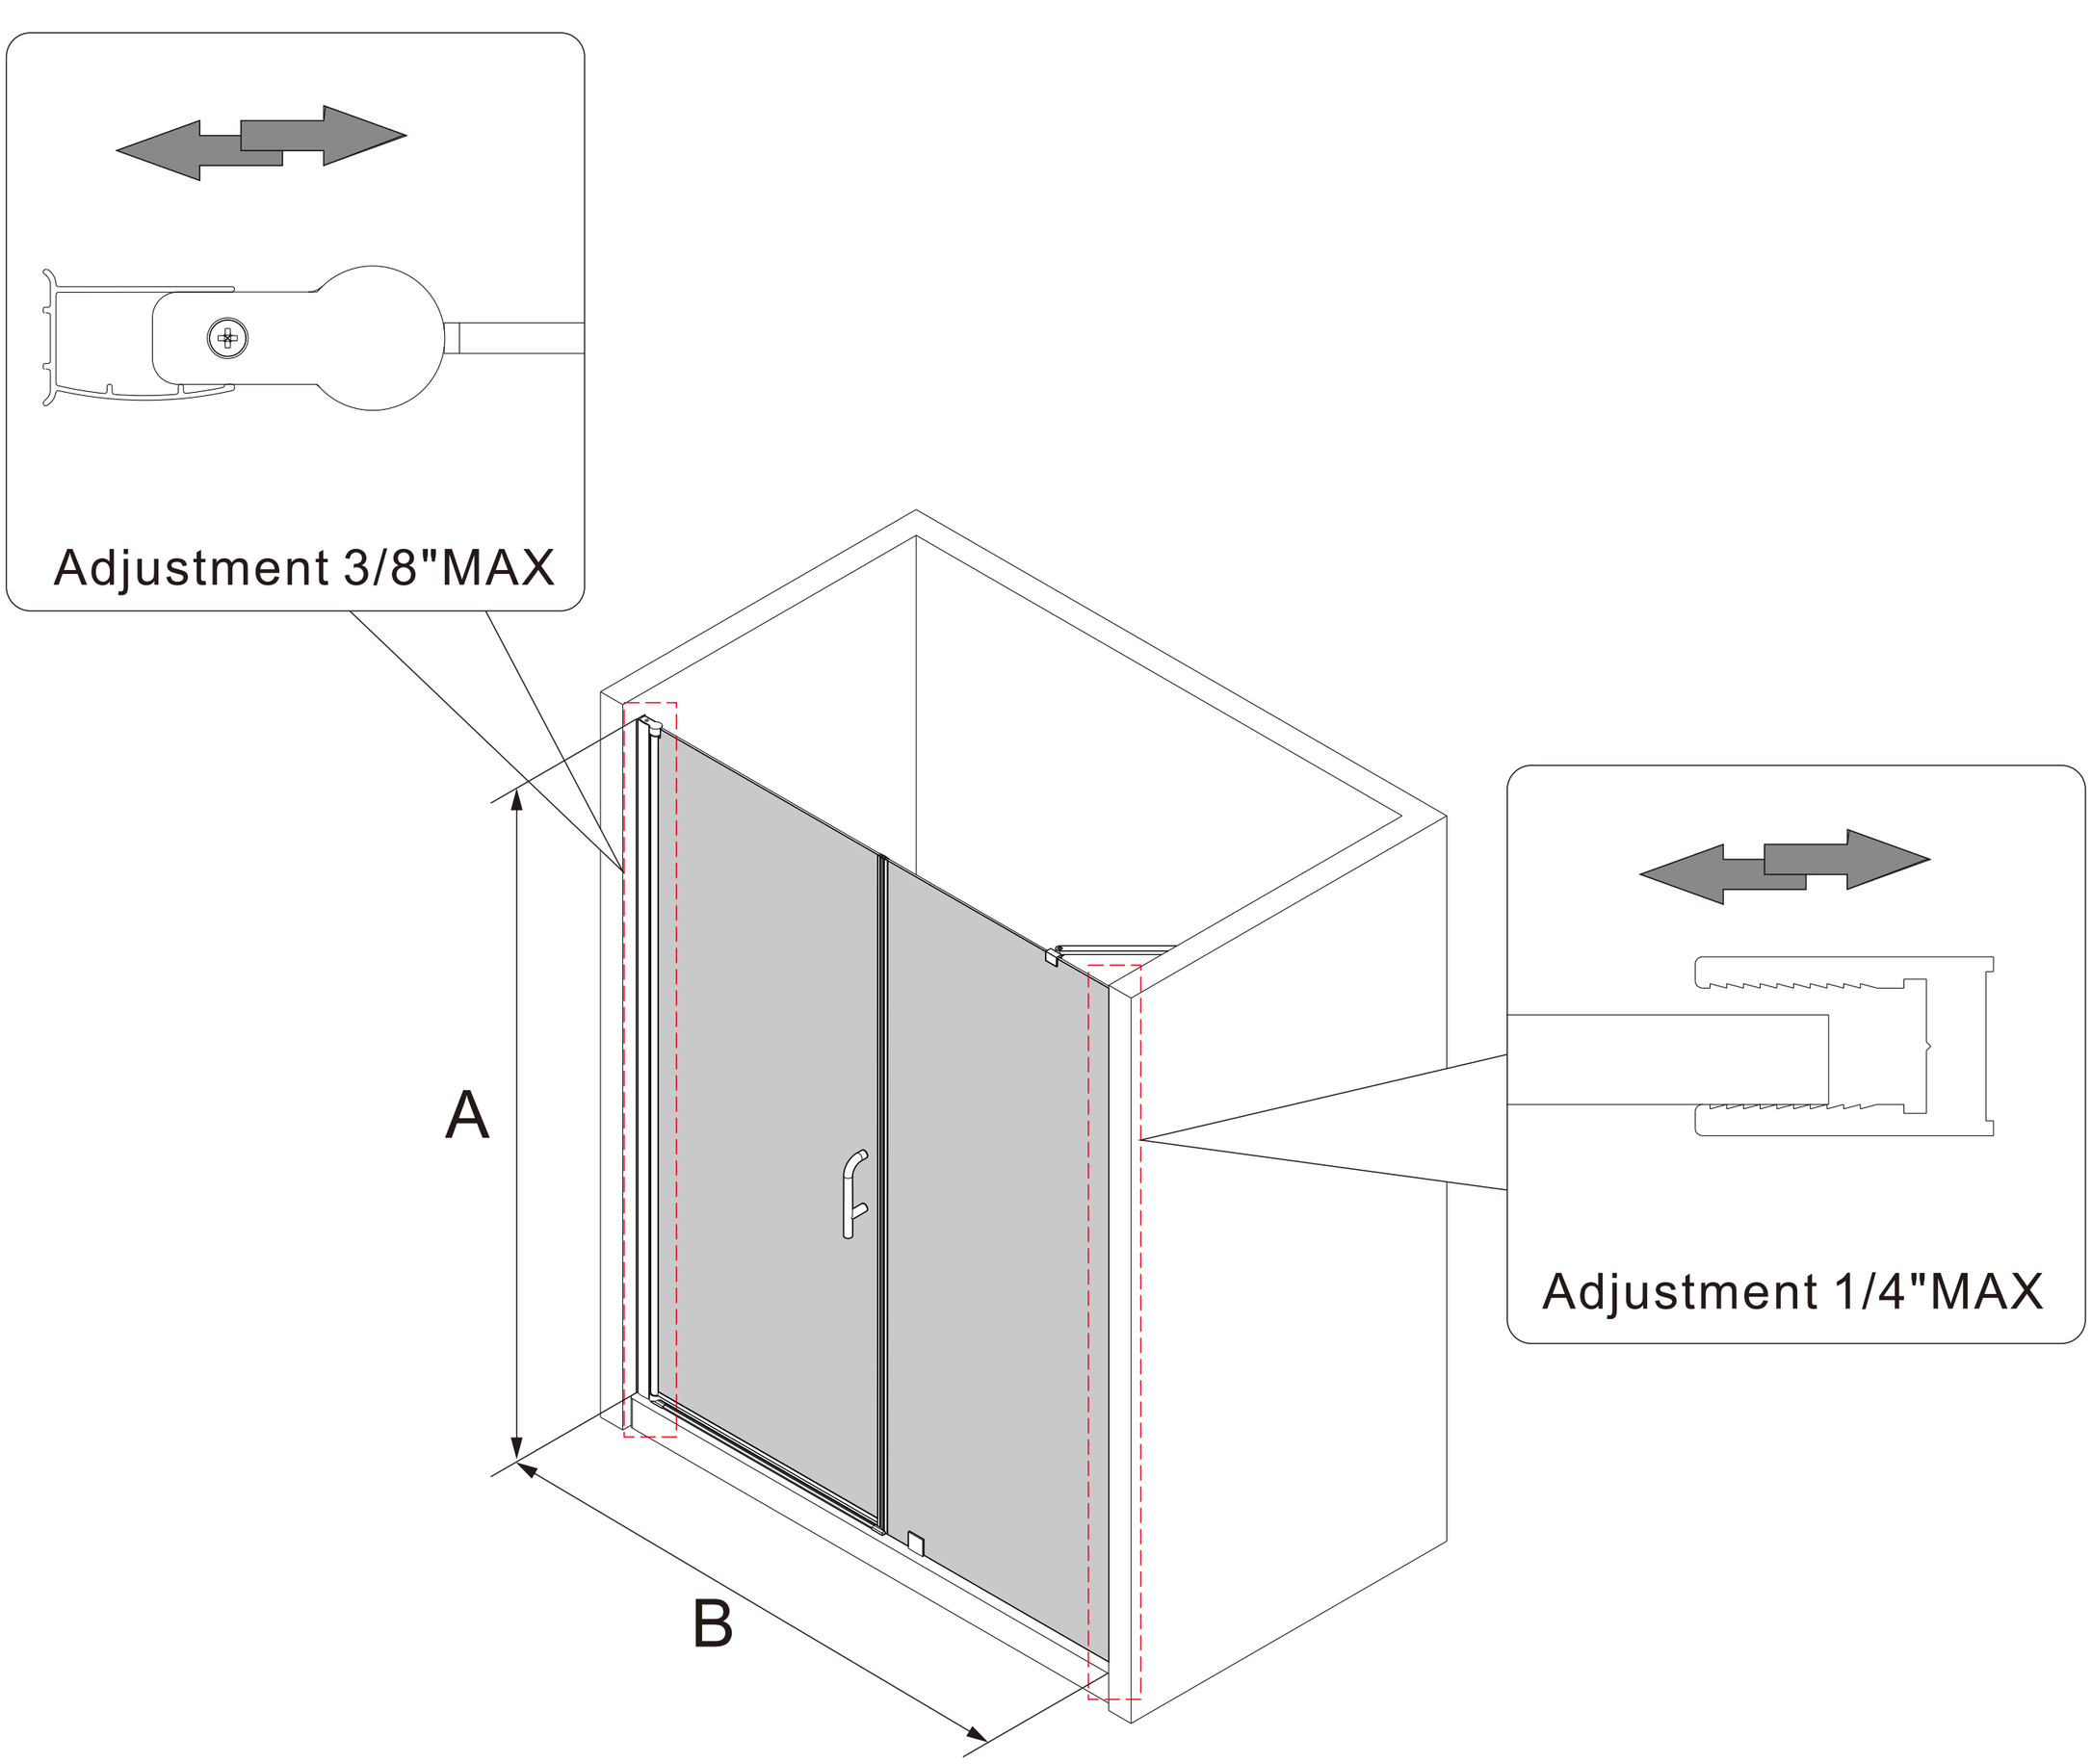

configuration dimensions:


A Product Height	B Model width	Installation width
72"	**60"**	60" ~60 5/8"

Hotline : + 1 302 336 8180

1 Measure the finished opening width.

NOTE

1.Measure the finished opening width at the bottom and at the model height.
Use these dimensions as “W1” (top) and “W2”(bottom) in step #2.
2.Also check the threshold for level and the walls for plumb.

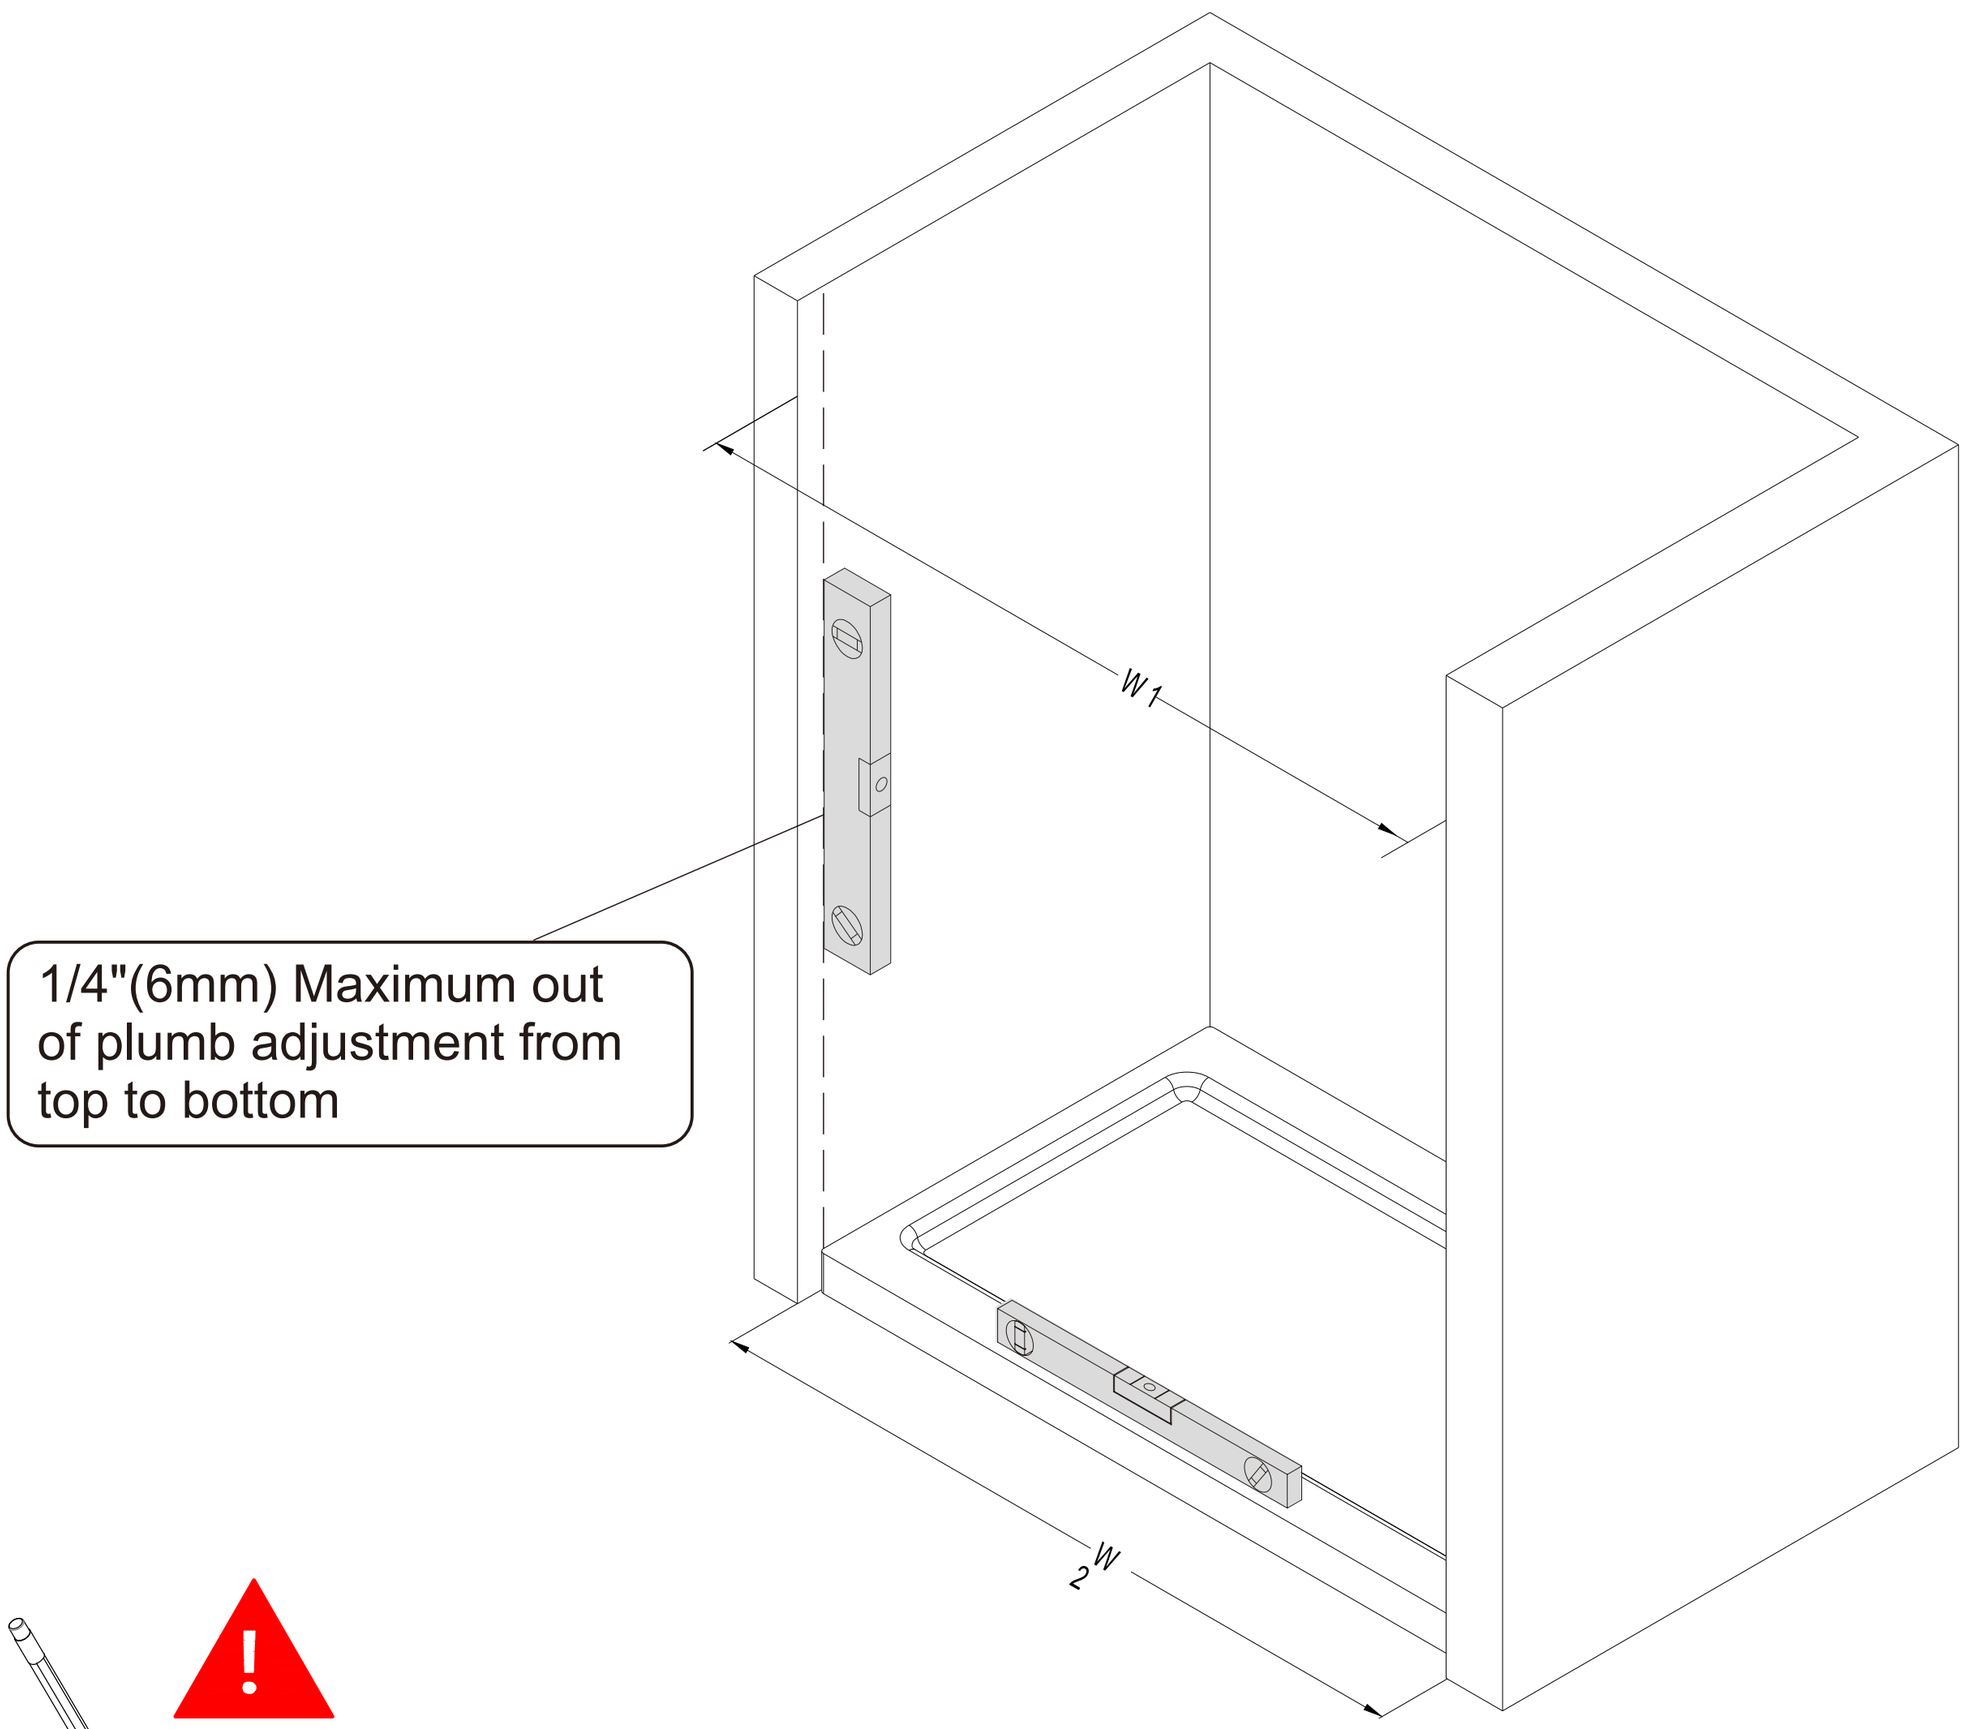

_____ Finished opening top (W1)

_____ Finished opening bottom (W2)

2 Determine your step in from the edge of tray and plumb your **Wall Jamb(A)**.

NOTE

1. Determine your starting point from the edge of tray (3/8" (10mm) is recommended) and mark the position as Fig.a .
2. Plumb your **Wall Jambs(A)** on each side and then mark screw holes position as Fig.b .

Fig.a




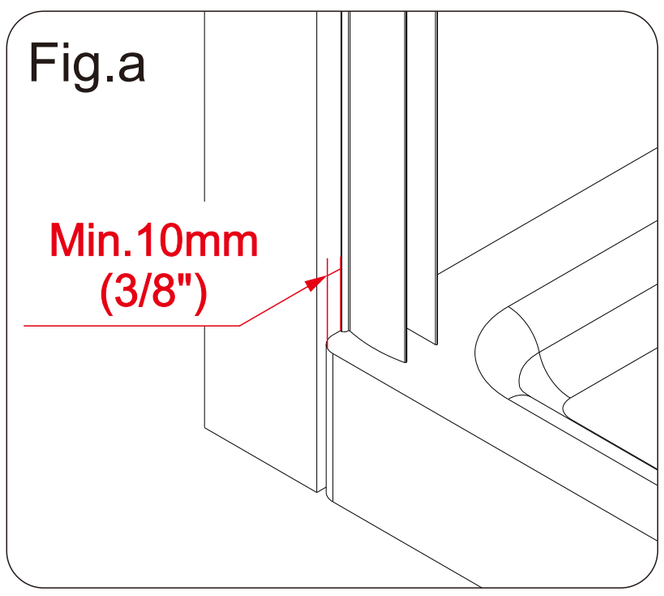


Fig.b **Inside**

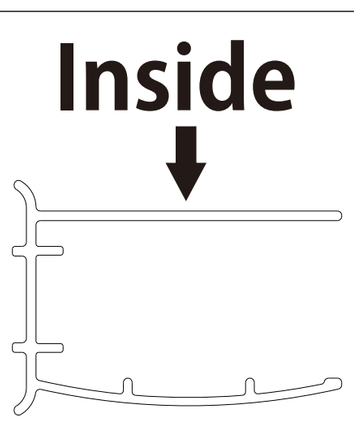

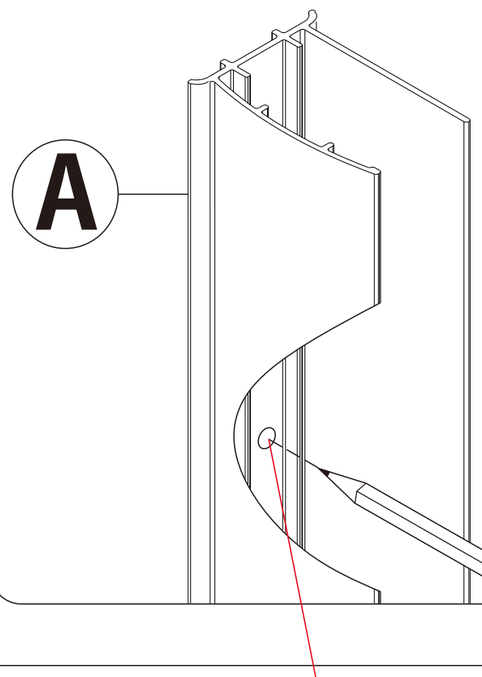

Note: mark as the outline of profile hole

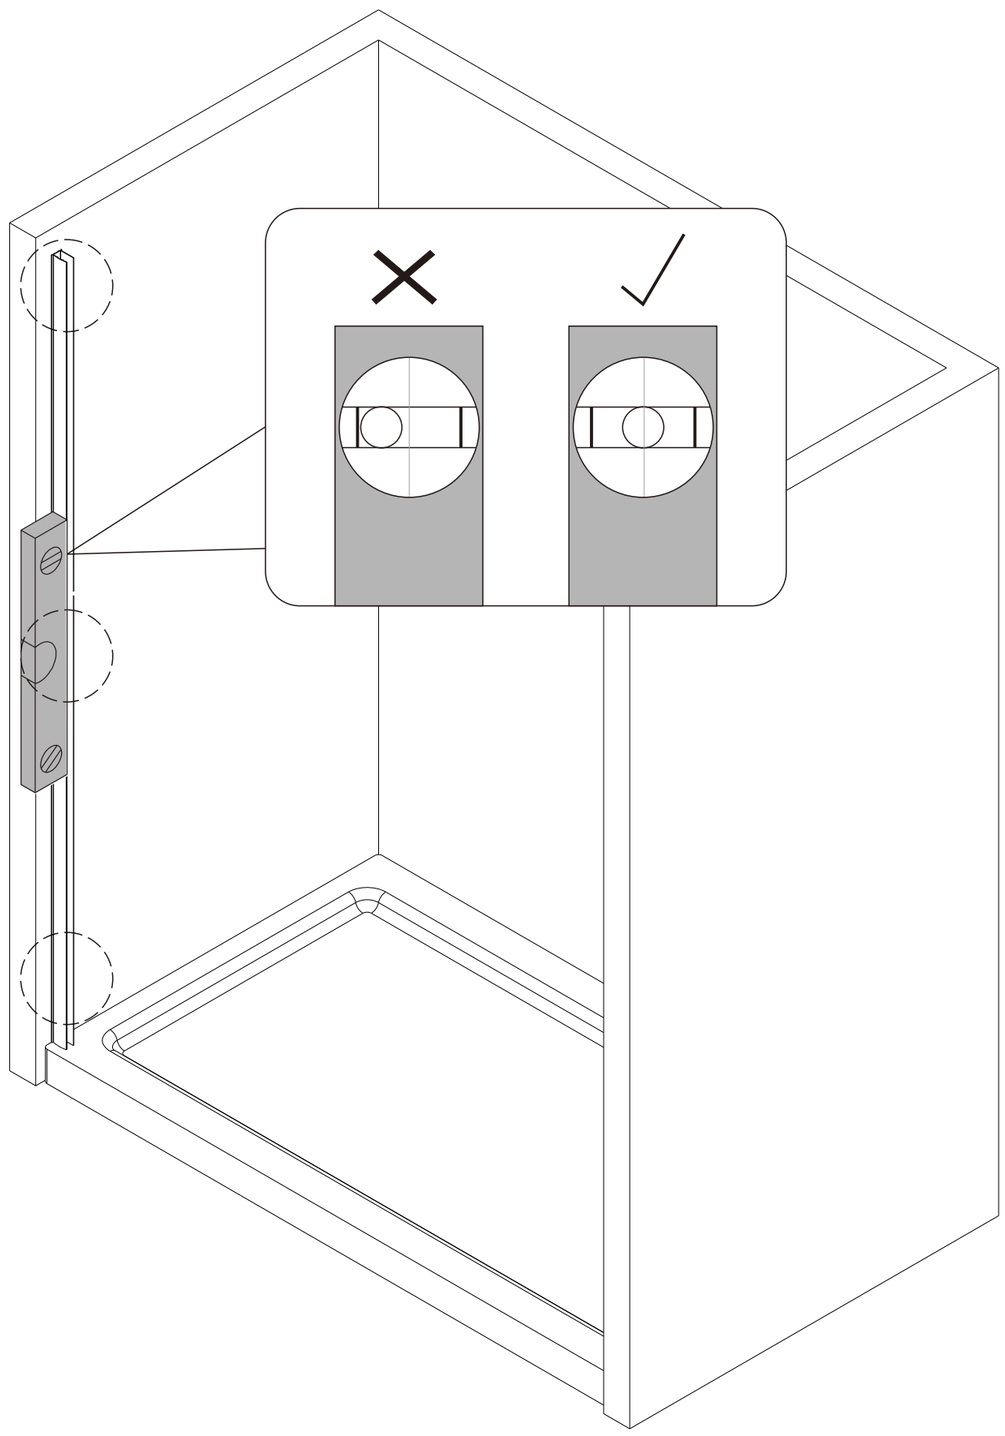

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

3 Install **Wall Anchor(aa)**

NOTE

1.Drill holes with ϕ6mm(1/4") drill bit as Fig.a .
2.Insert **Wall Anchors(aa)** as Fig.b .

Fig.a **(1/4")**



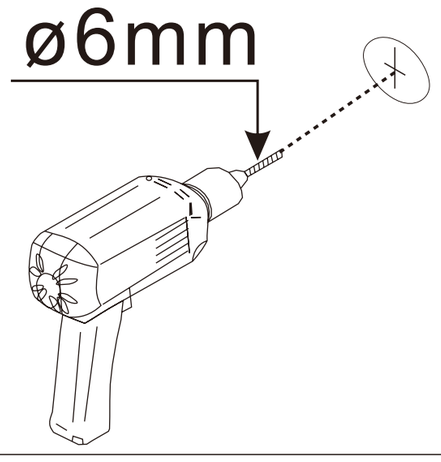


Fig.b

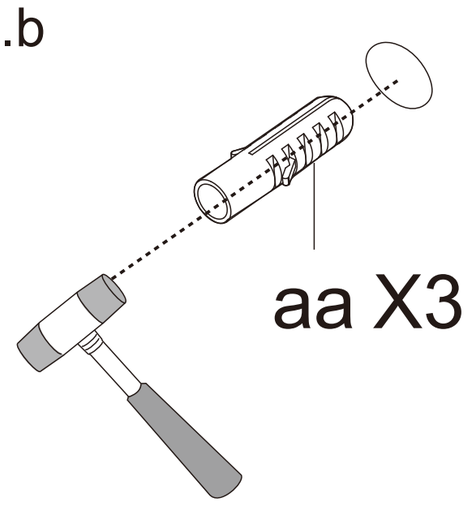

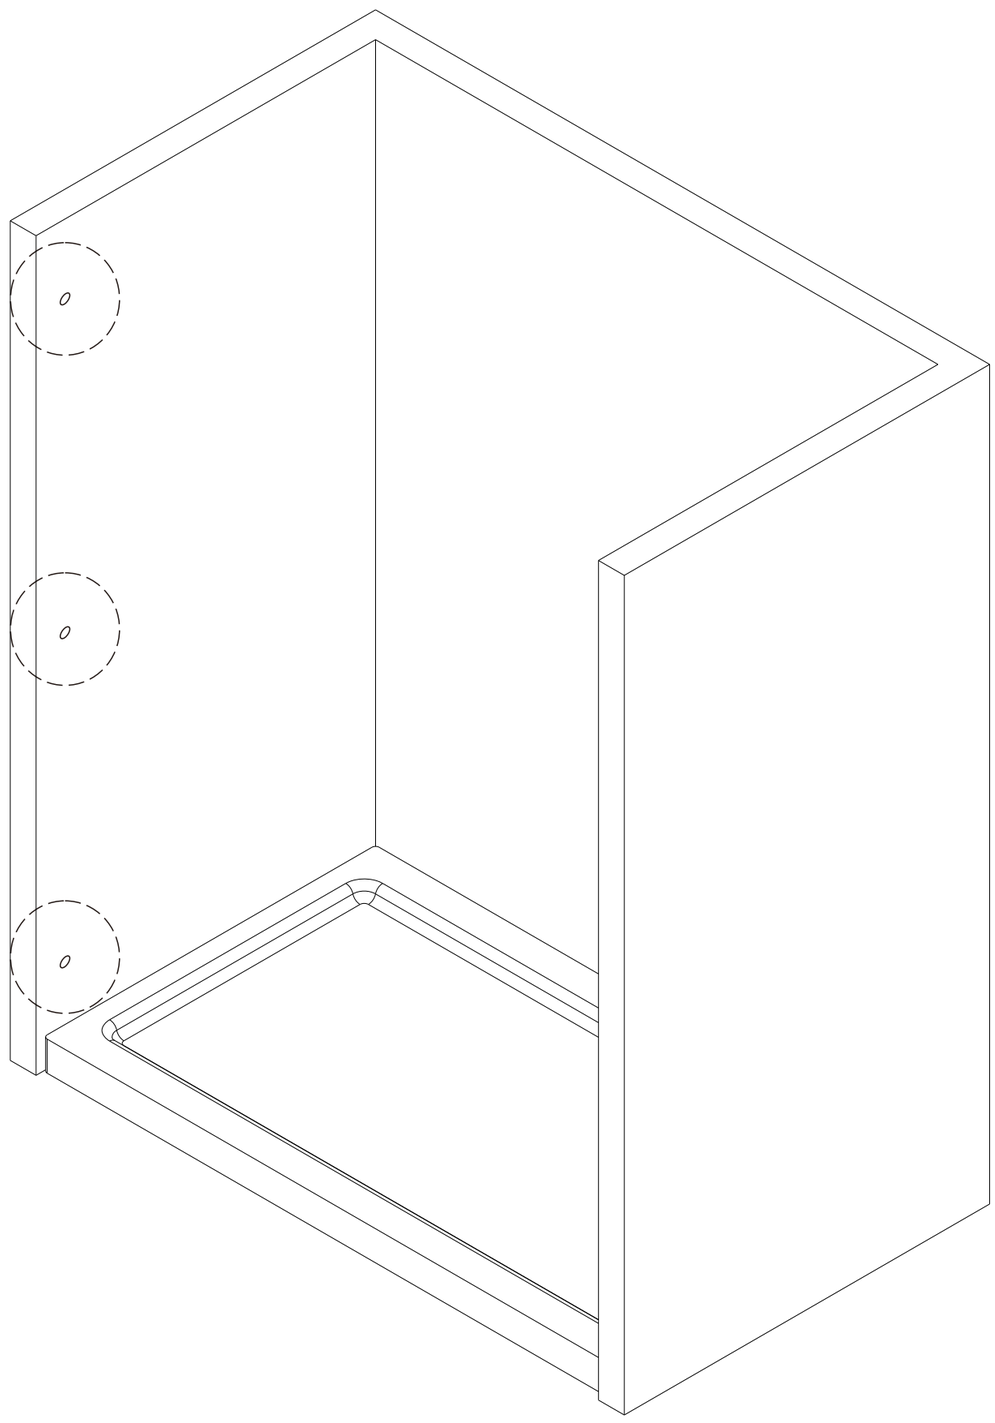

NOTE

● If a Stud is present behind the wall:
drill Φ1/8″(3mm) pilot holes into the stud and use the ST4.0x30mm **Screws(bb)**
OR
● If NO Stud is present behind the wall:
drill Φ1/4"(6mm) holes and insert the **Wall Anchors(aa)** and use the ST4.0x30mm **Screws(bb)**.


Note: The shower door can be installed left or right, according to the need to determine the installation direction.


Hotline : + 1 302 336 8180

3 Install **Wall Anchor(aa)**

NOTE

1. Fix **Wall Jambs(A)** with **Screw(bb)** as Fig.a .

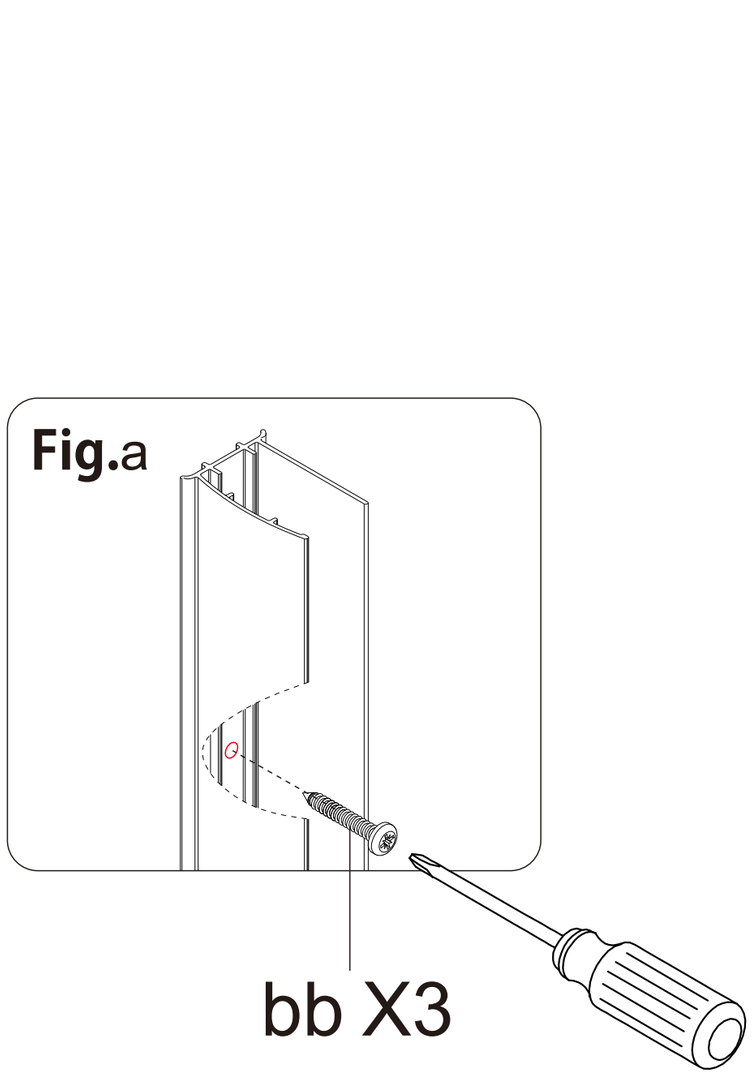

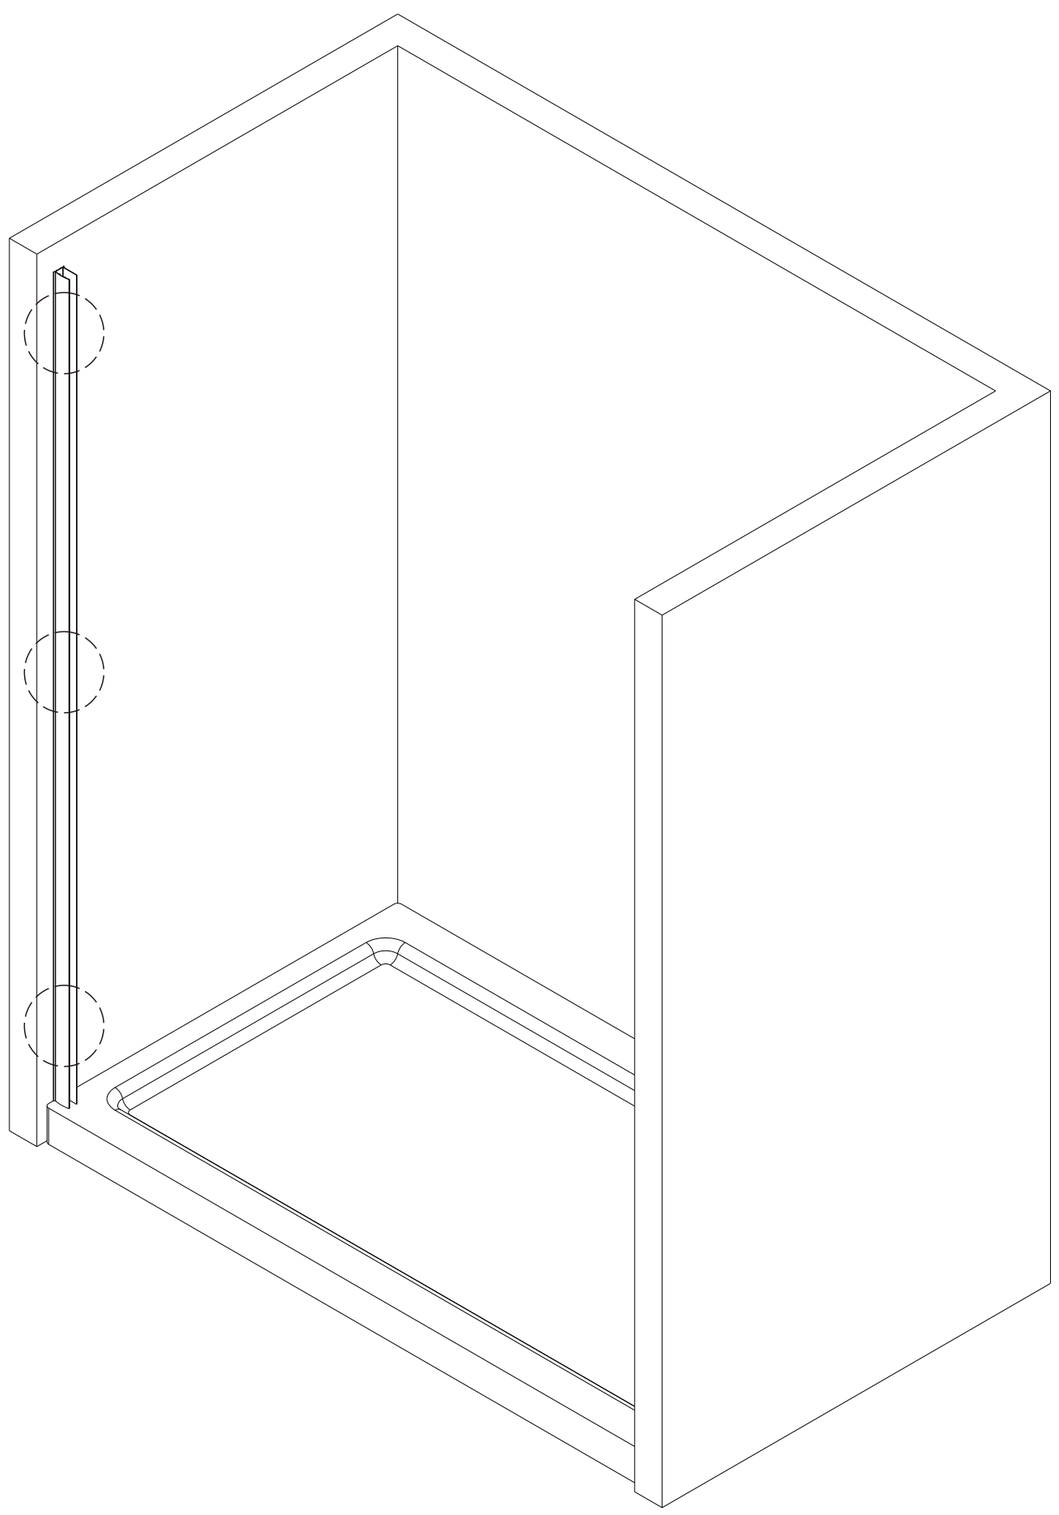


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

4 Install **Top Pivot Sleeve(F)** and **Bottom Pivot Sleeve(E)**.

NOTE


1.Install the **Top Pivot Sleeve(F)** into the **Glass Door(C)** and secure it with **screws(ee) as** Fig.a .


2.Install the **Bottom Pivot Sleeve(E)** into the **Glass Door(C)** and secure it with **screws(ee) as** Fig.b .

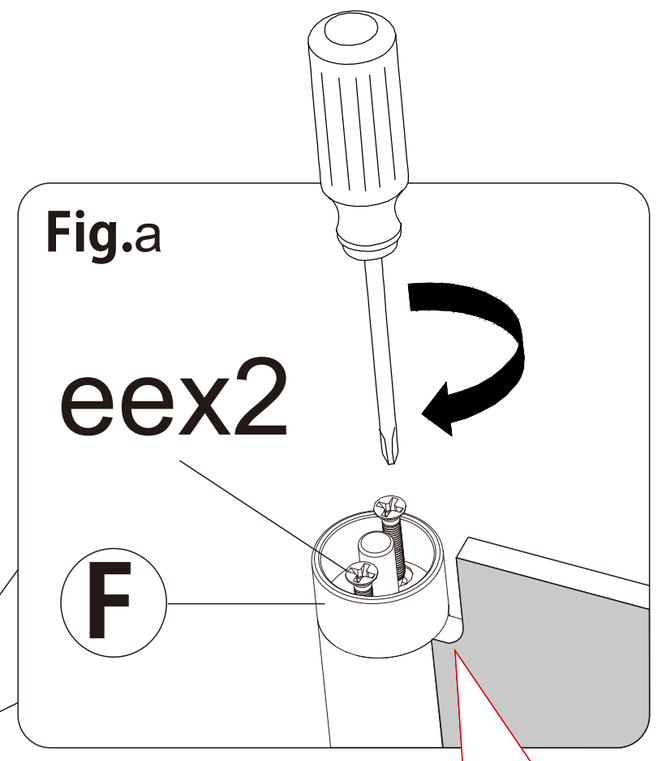

Note: ensure bracket without 'V' is always on the top

The **Glass Door(C)** notch is always facing upwards

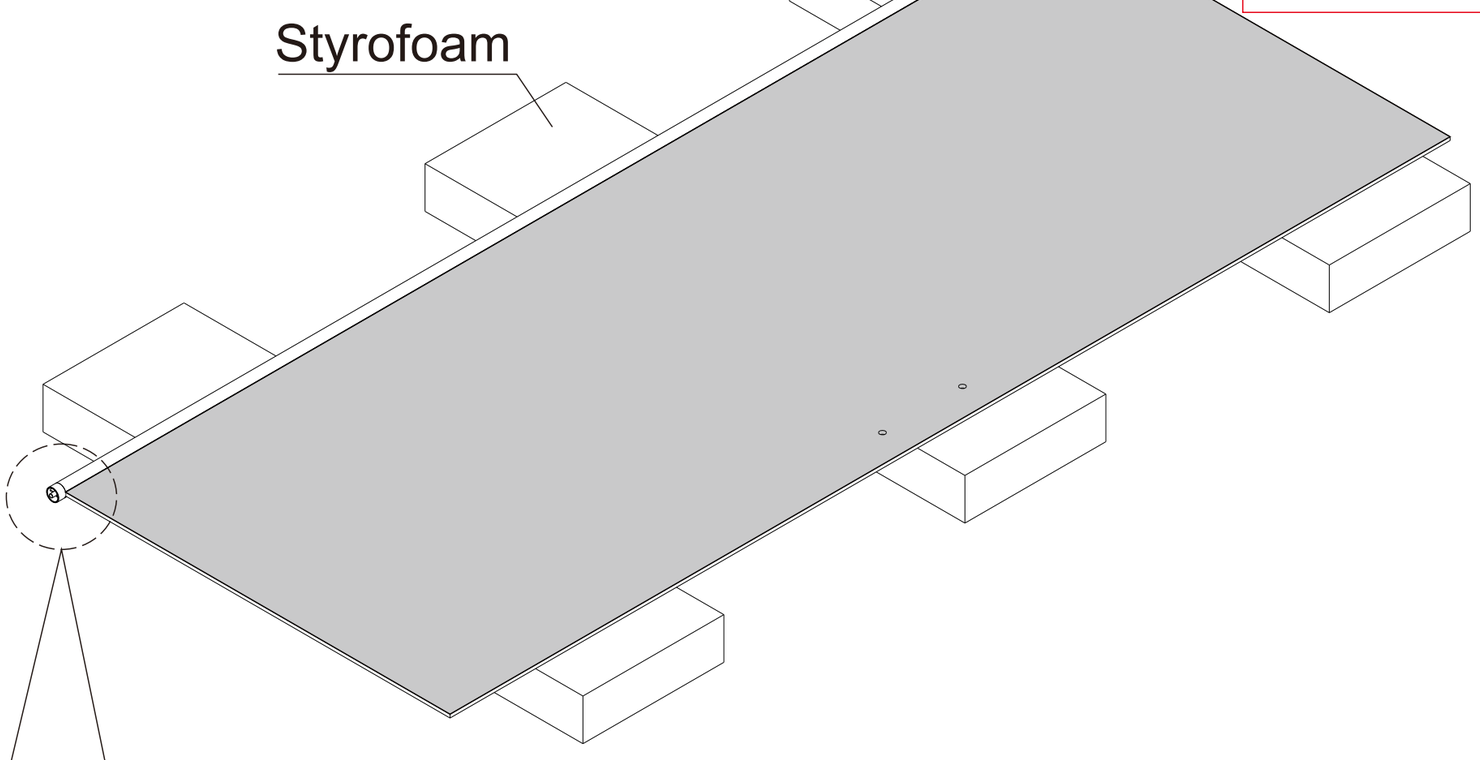

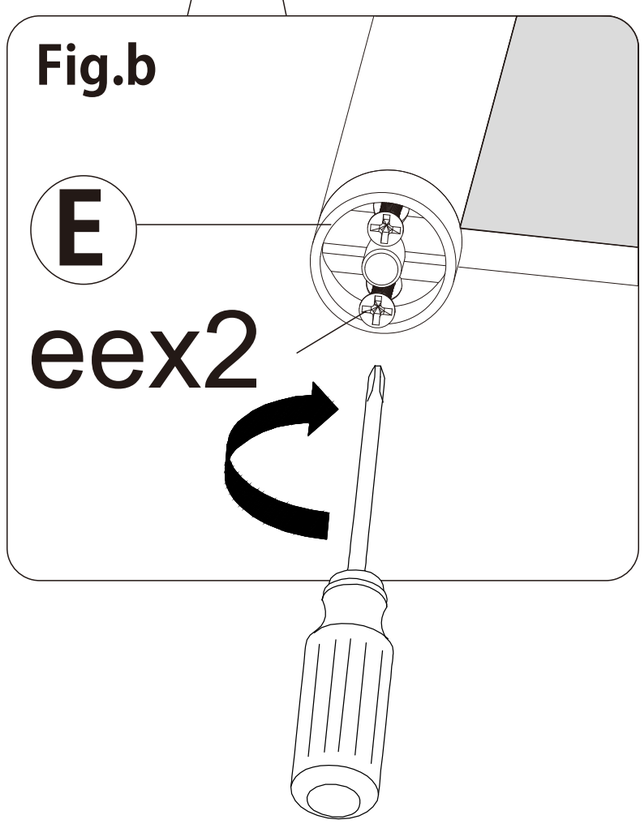


Note: ensure bracket with the 'V' is always on the bottom


CAUTION: Do not put glass directly on the ground

5 Install **Upright Profile(B)**


NOTE

1.Remove the upper and lower brackets as Fig.a and Fig.d
2.The Bracket notch is always facing inward as Fig.b and Fig.e .
3.Fix the **Upright Profile(B)** and the **Glass Door (C)** with a Bracket as Fig.c and Fig.f

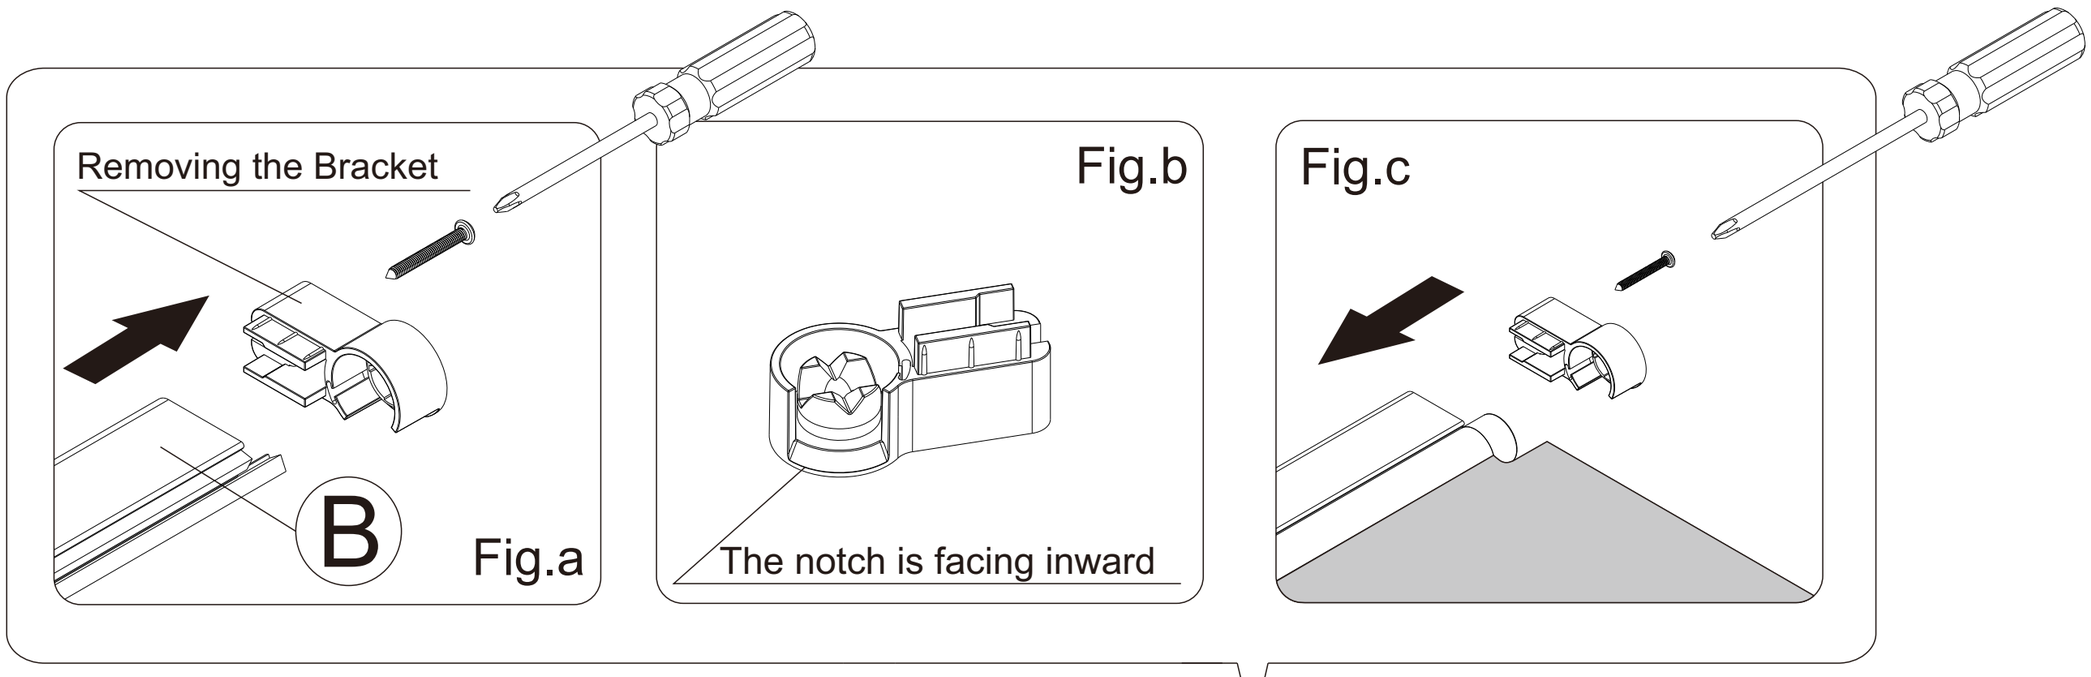

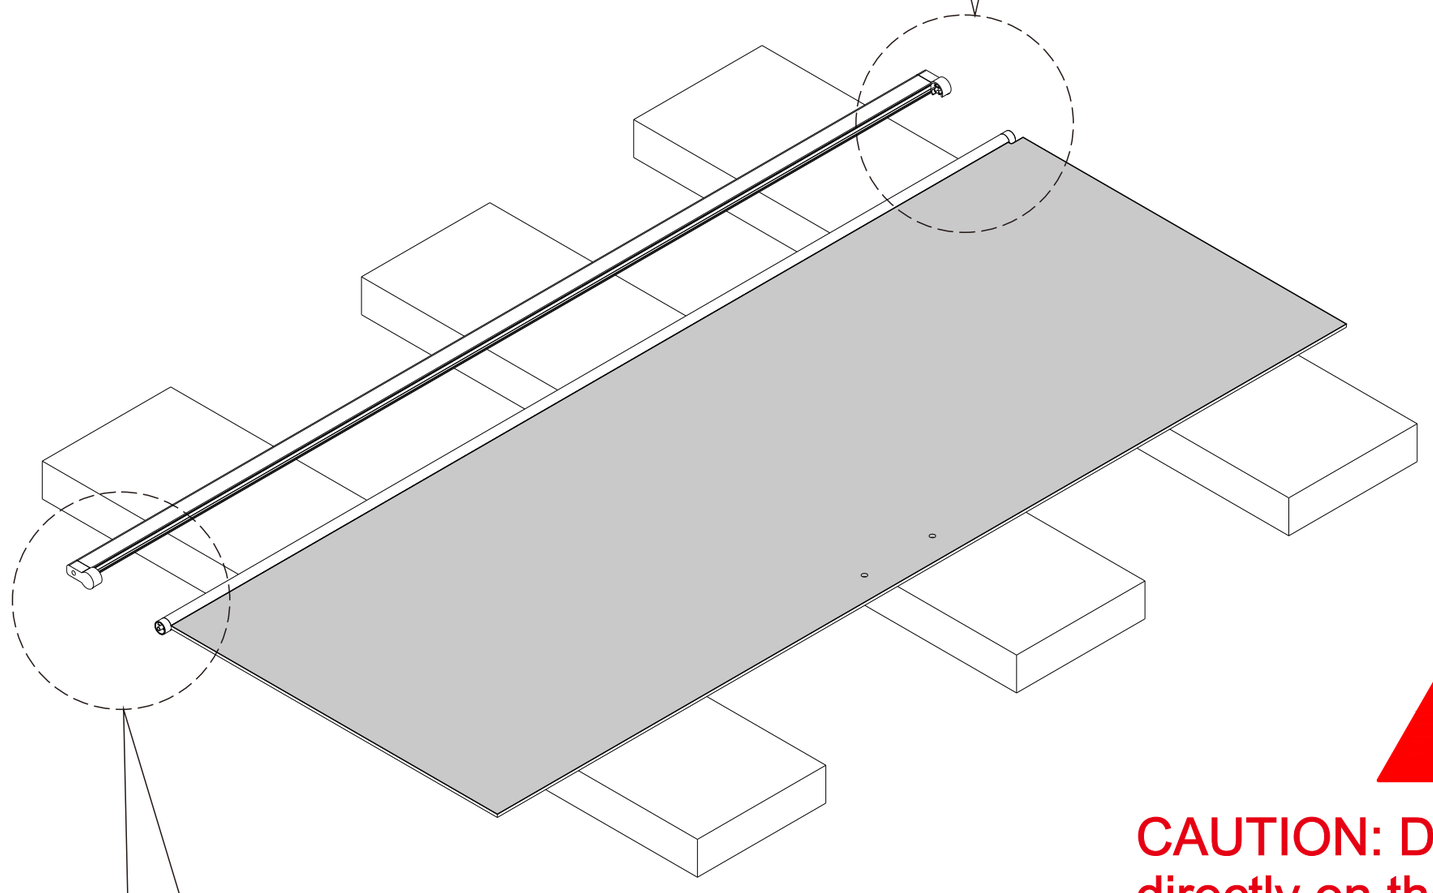

CAUTION: Do not put glass directly on the ground

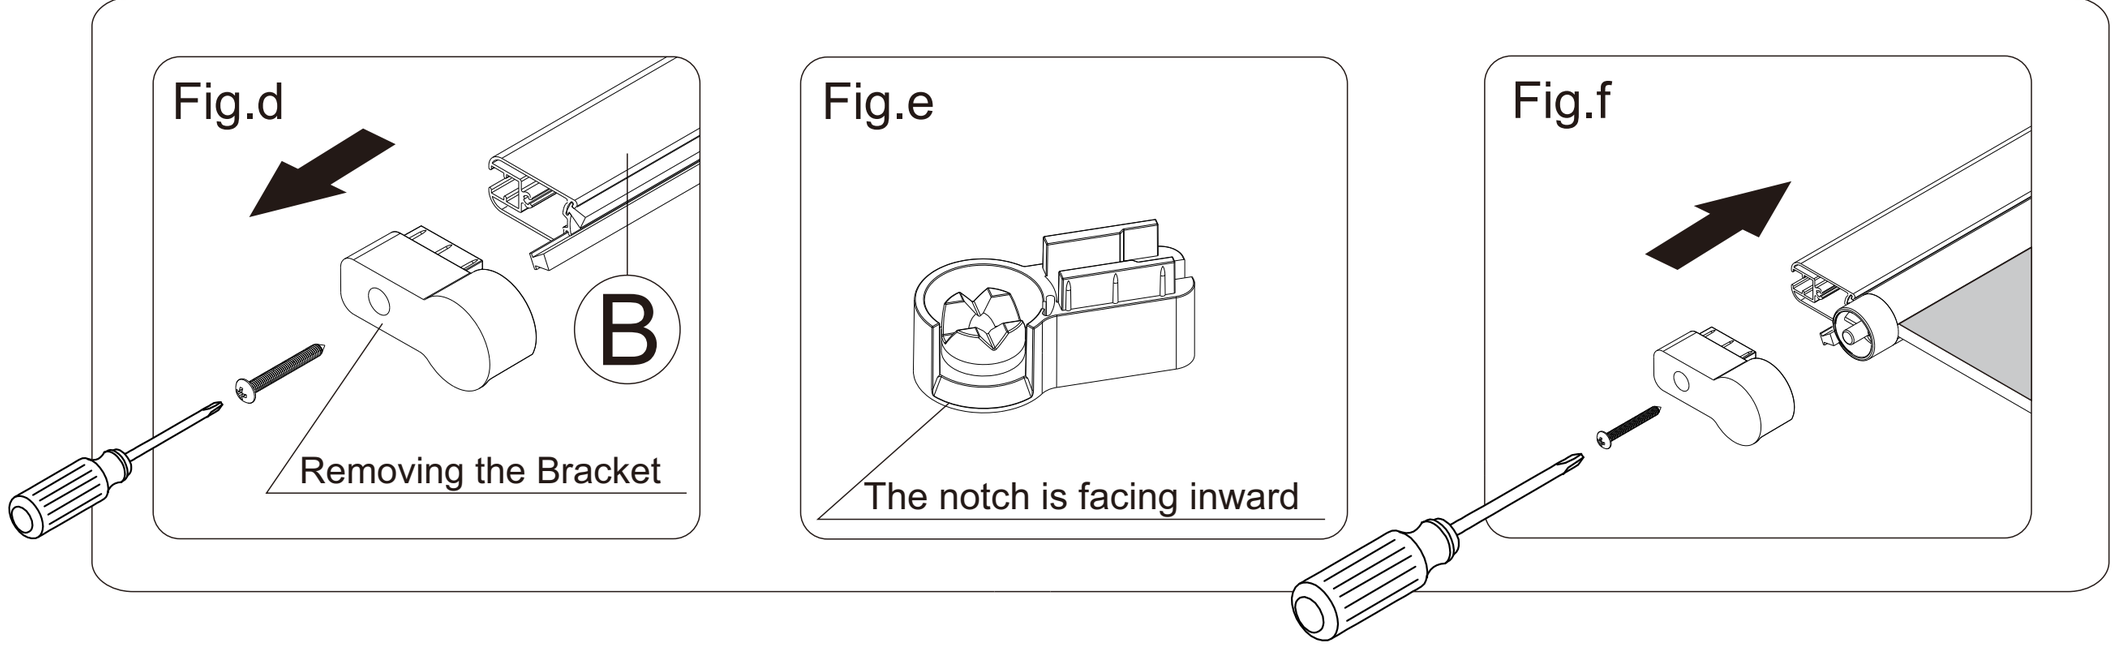

6 Install **Glass Door (C)**

NOTE

1.Insert the **Glass Door(C)** to the **Wall Jamb(A)**, the max adjustment is 3/8"(10mm) as Fig.a and Fig.b

2.Note the Bracket orientation as Fig.c

Fig.a



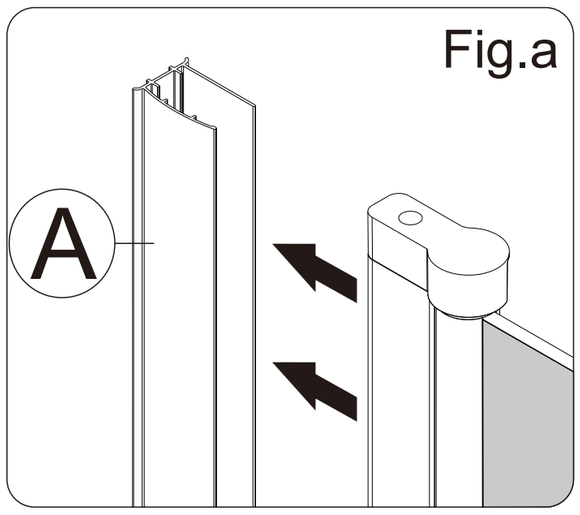


Fig.b

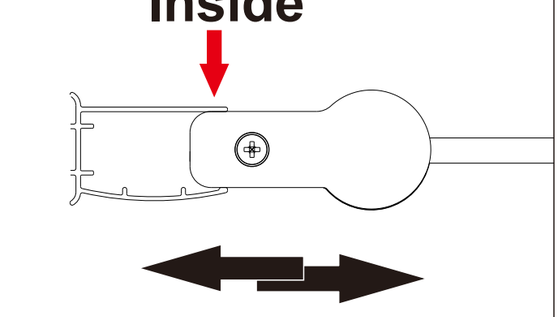


Wall jamb max adjustment:3/8″(10mm).

Fig.c

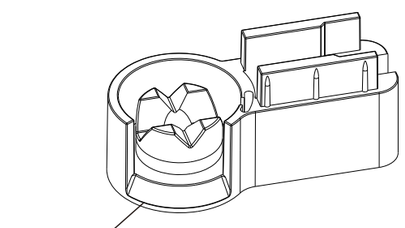


The notch is facing inward

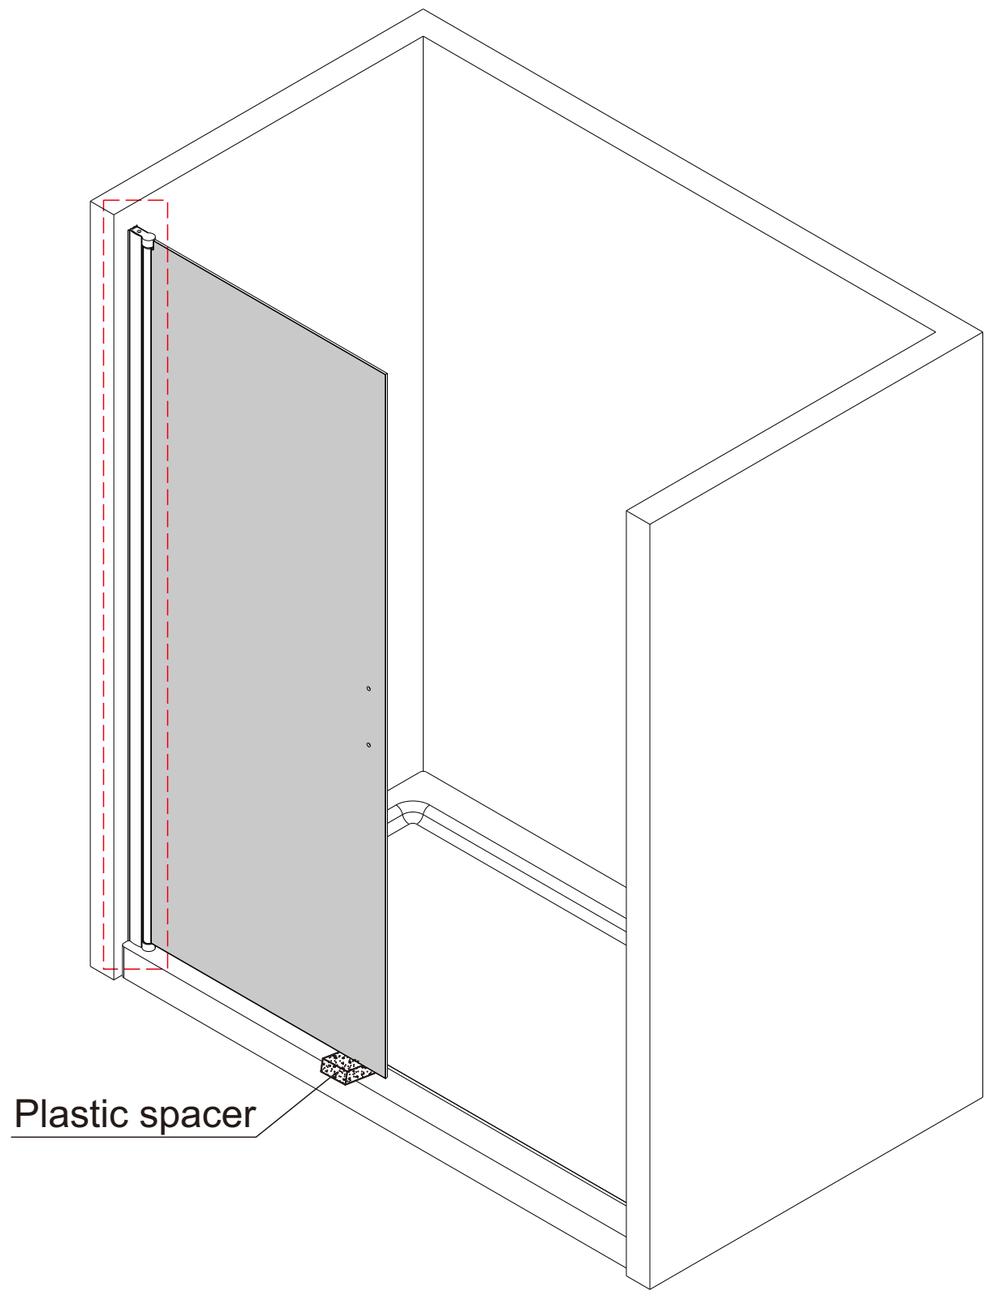


NOTE

The Plastic spacer is an aid tool to prevent the glass from touching the ground

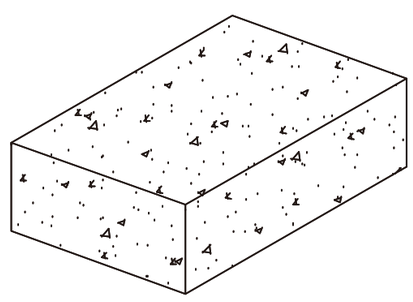

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

7 Determine your step in from the edge of tray and plumb your **Wall Jamb(H)**.

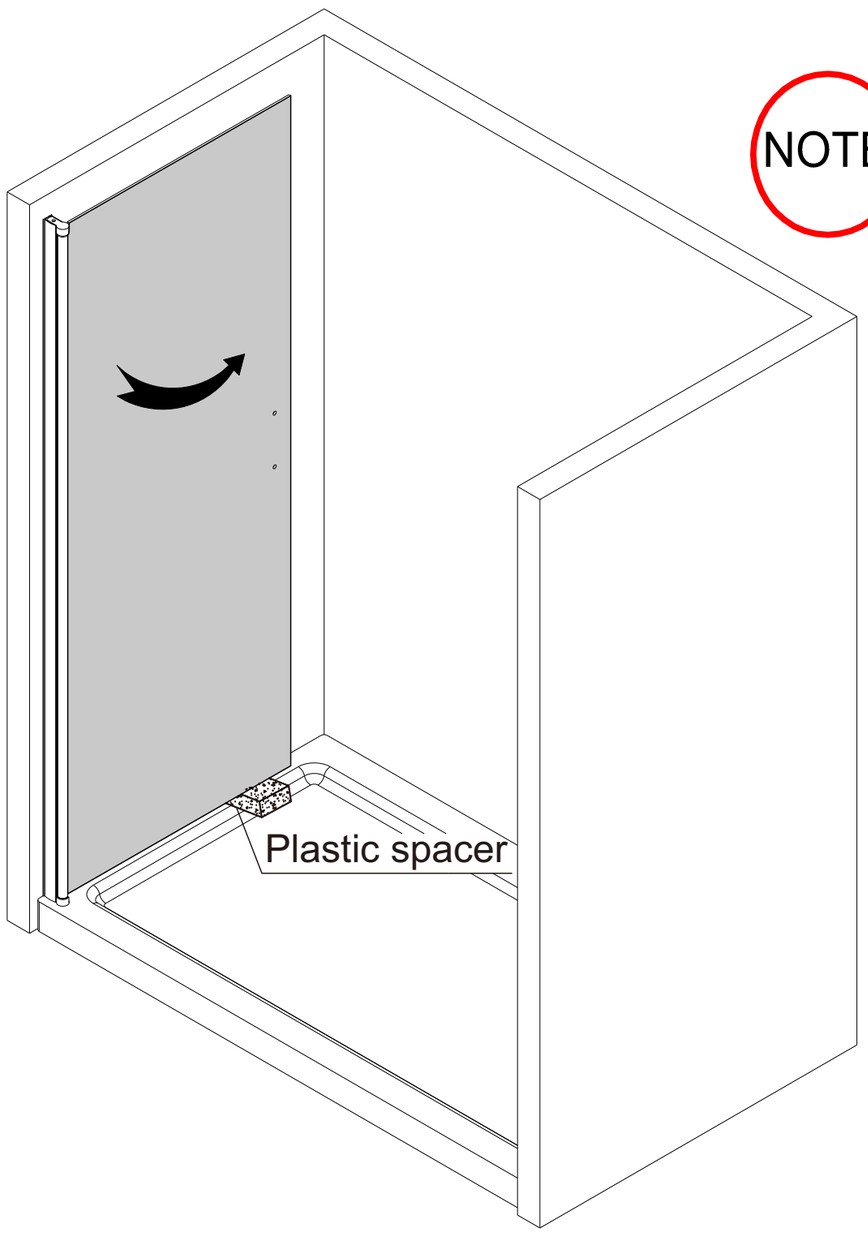


NOTE

1.Rotate the **Glass Door (C)** inward to facilitate the installation of **Wall Jamb(H)**

2.Determine your starting point from the edge of tray(3/8" (18mm) is recommended) and mark the positionas Fig.a.

3. Plumb your **Wall Jambs(H)** on each side and thenmark screw holes position as Fig.b.

Fig.a

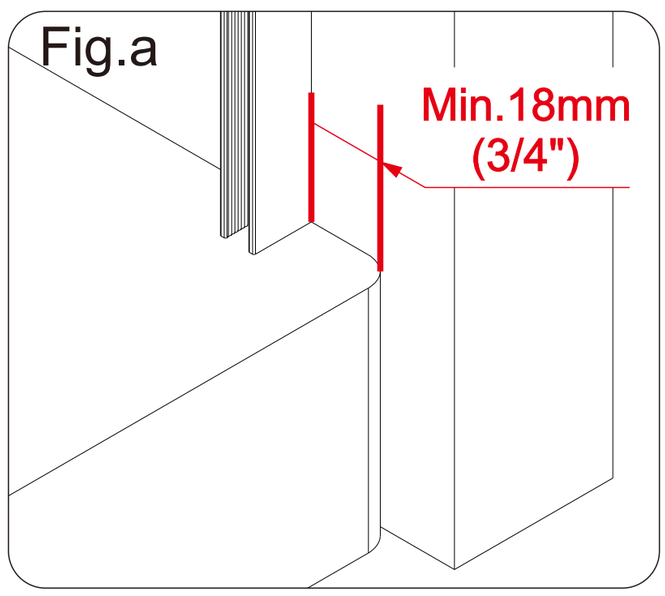


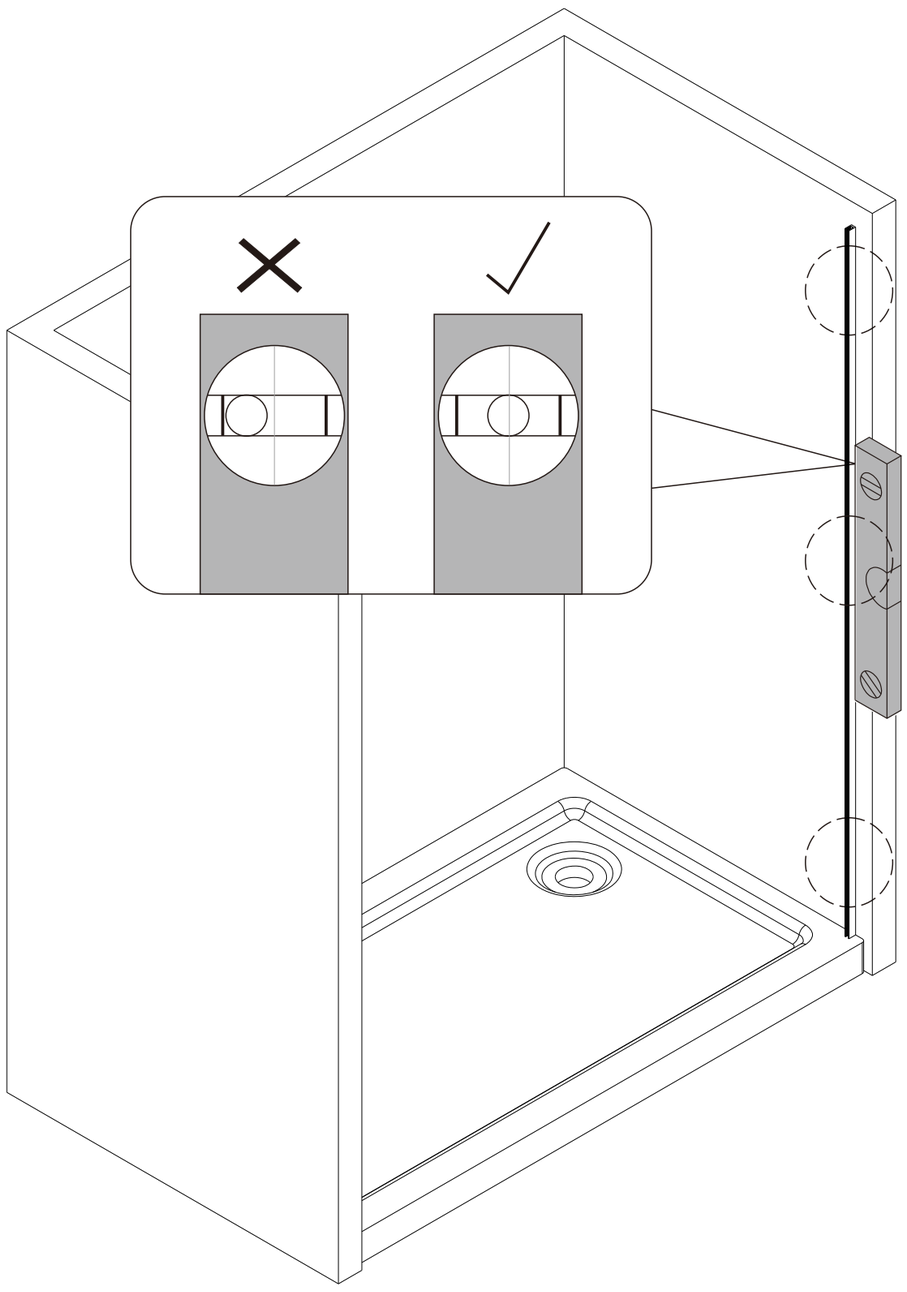


Fig.b

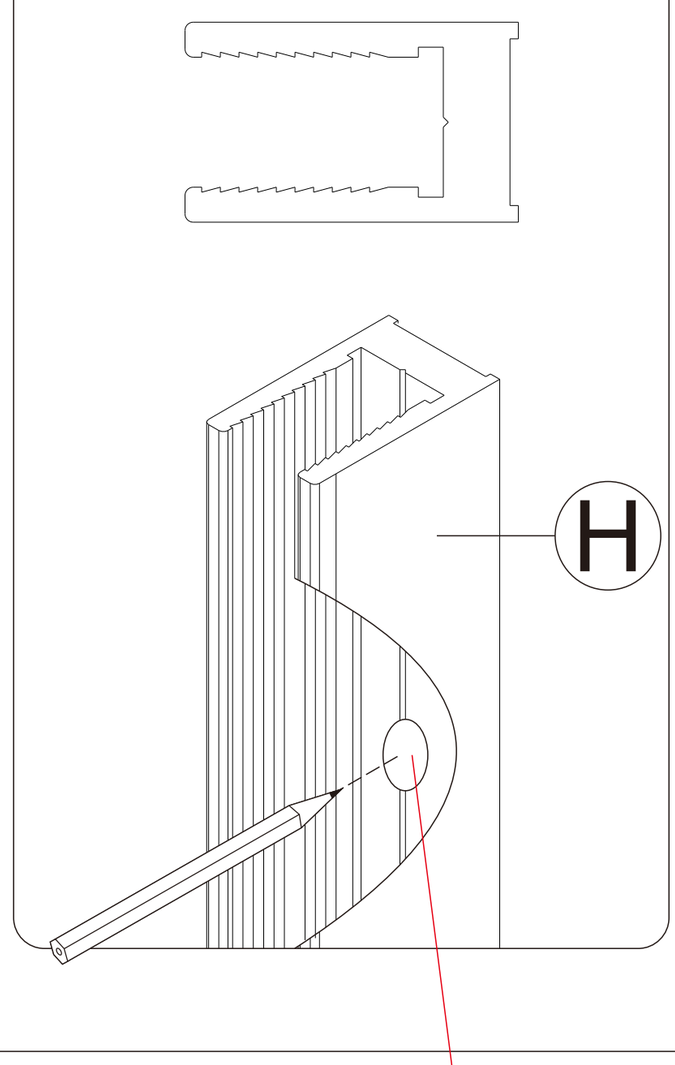


Note: mark as the outline of profile hole

8 Install **Fixed Fittings(P)**

NOTE

1.Install the **Fixed Fitting (P)** on the **Stationary Glass(O)** as Fig.a & Fig.b and Fig.c .

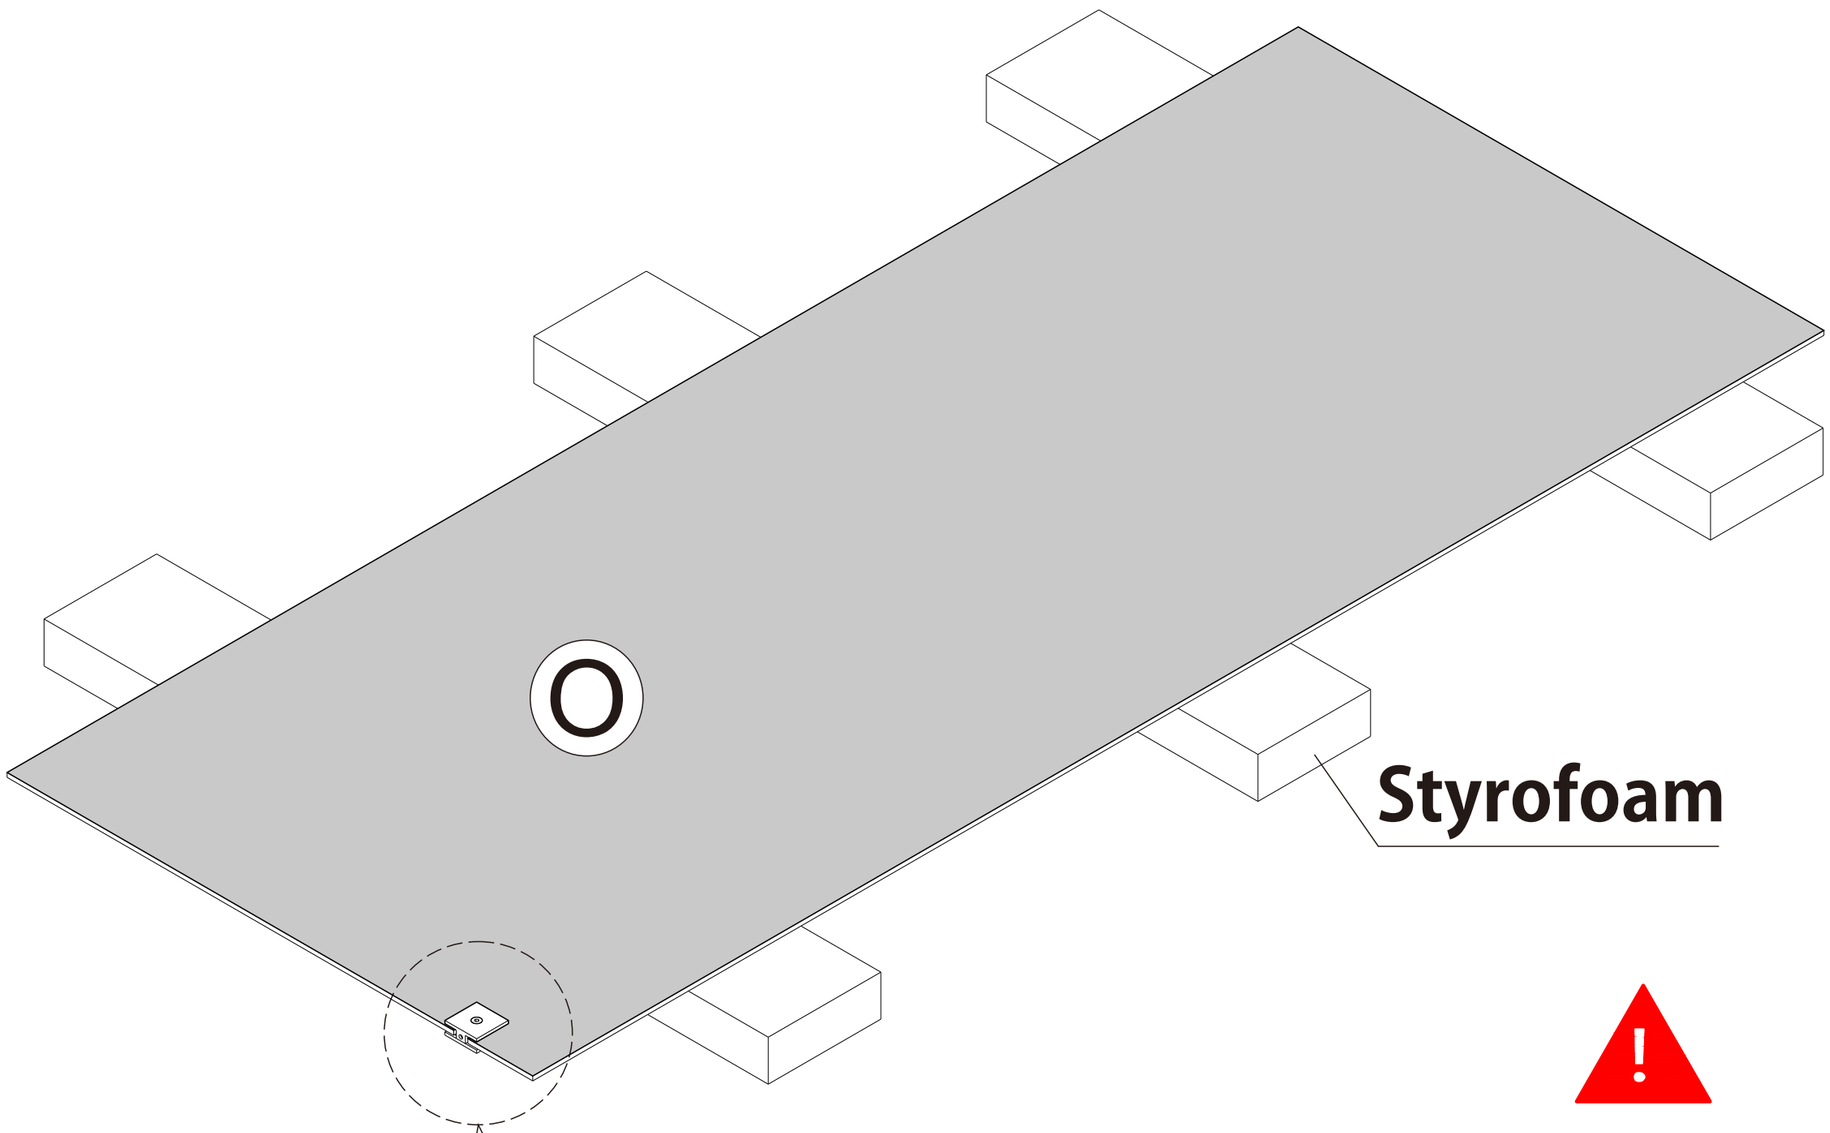

CAUTION: Do not put glass directly on the ground

Fig.a

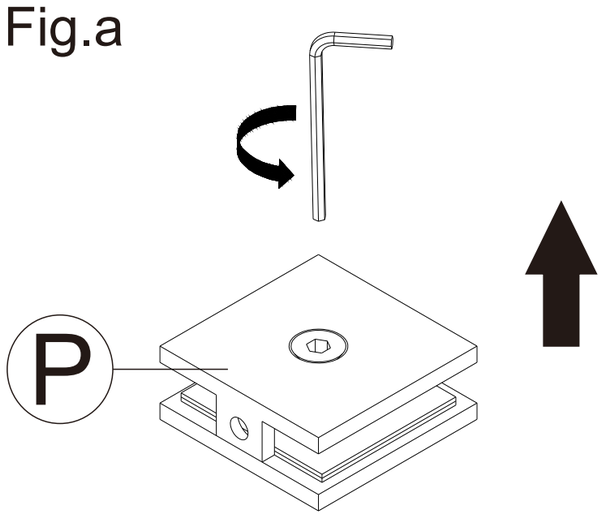


Fig.b


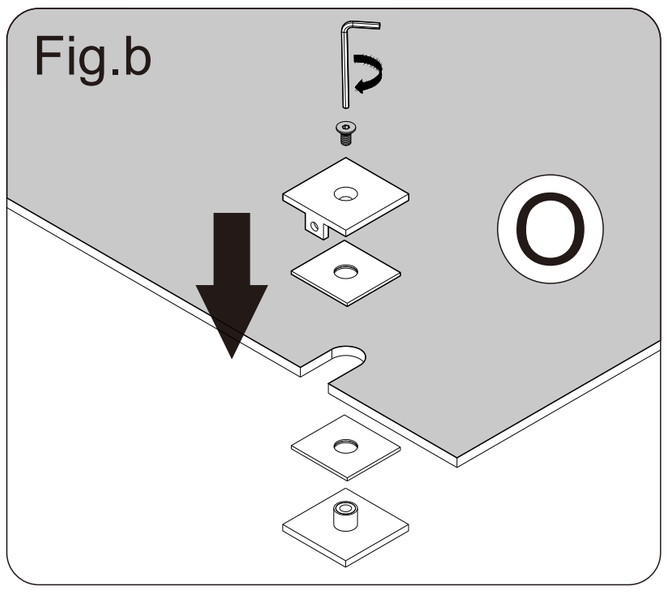



Fig.c

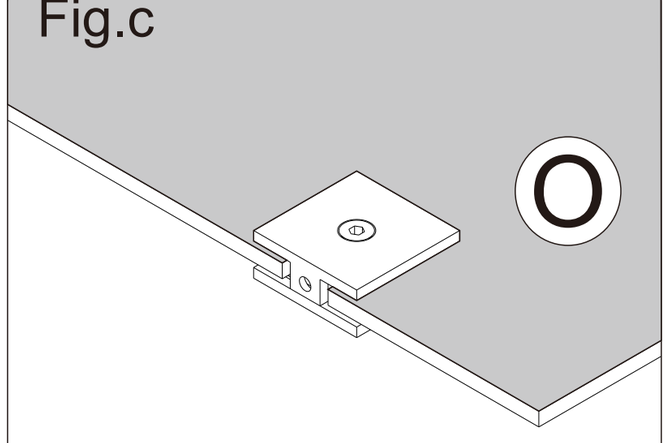

9 Install **Stationary Glass(O)**

NOTE

1.Install the **Stationary Glass(O)** on the **Wall Jamb(H)** as Fig.a and Fig.b .

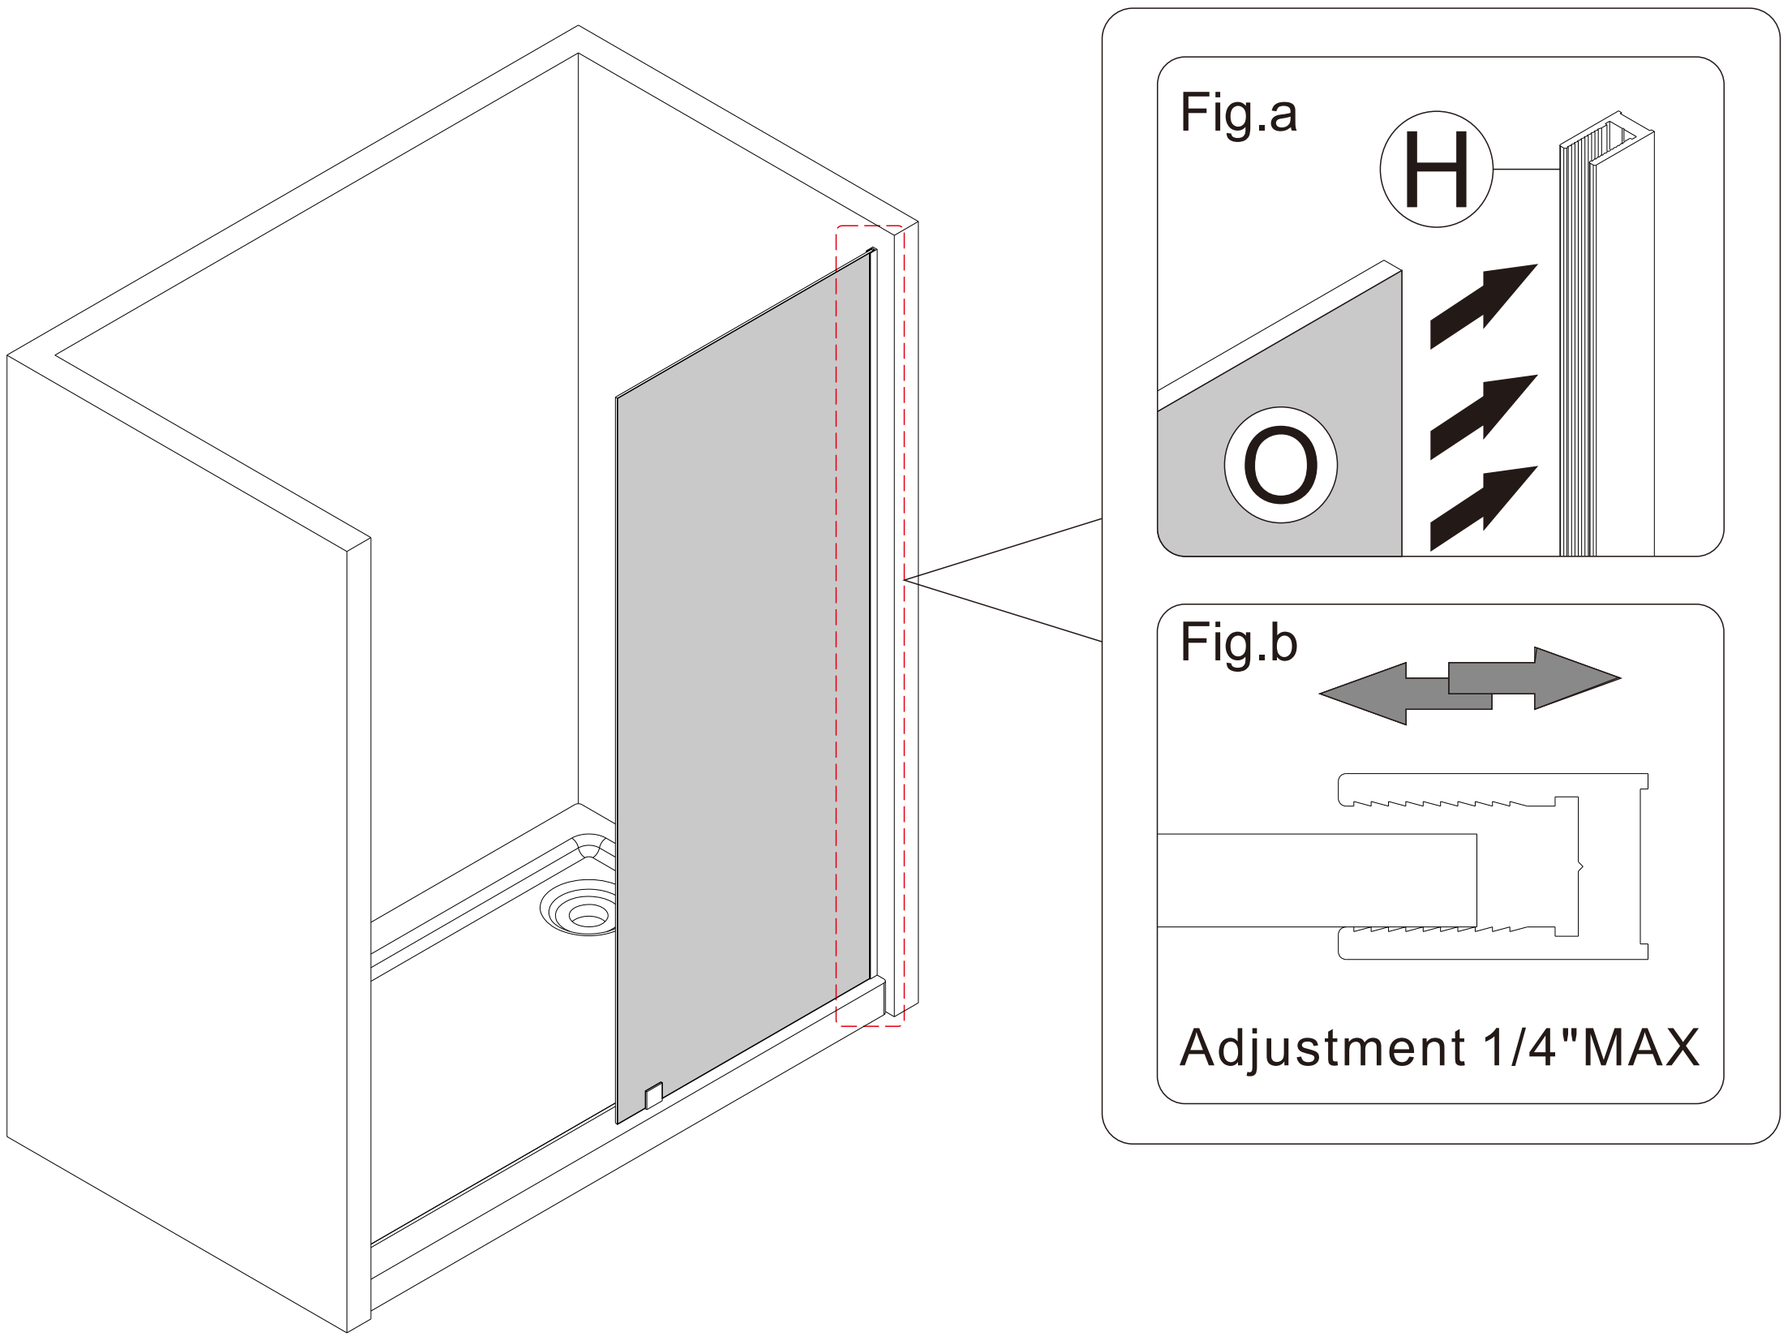


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

10 Install **Magnetic Strip(D)**

NOTE

1.Install the **Magnetic Strip(D)** on the **Glass Door(C)** as Fig.a .
2.Install the **Magnetic Strip(D)** on the **Stationary Glass(O)** as Fig.b .

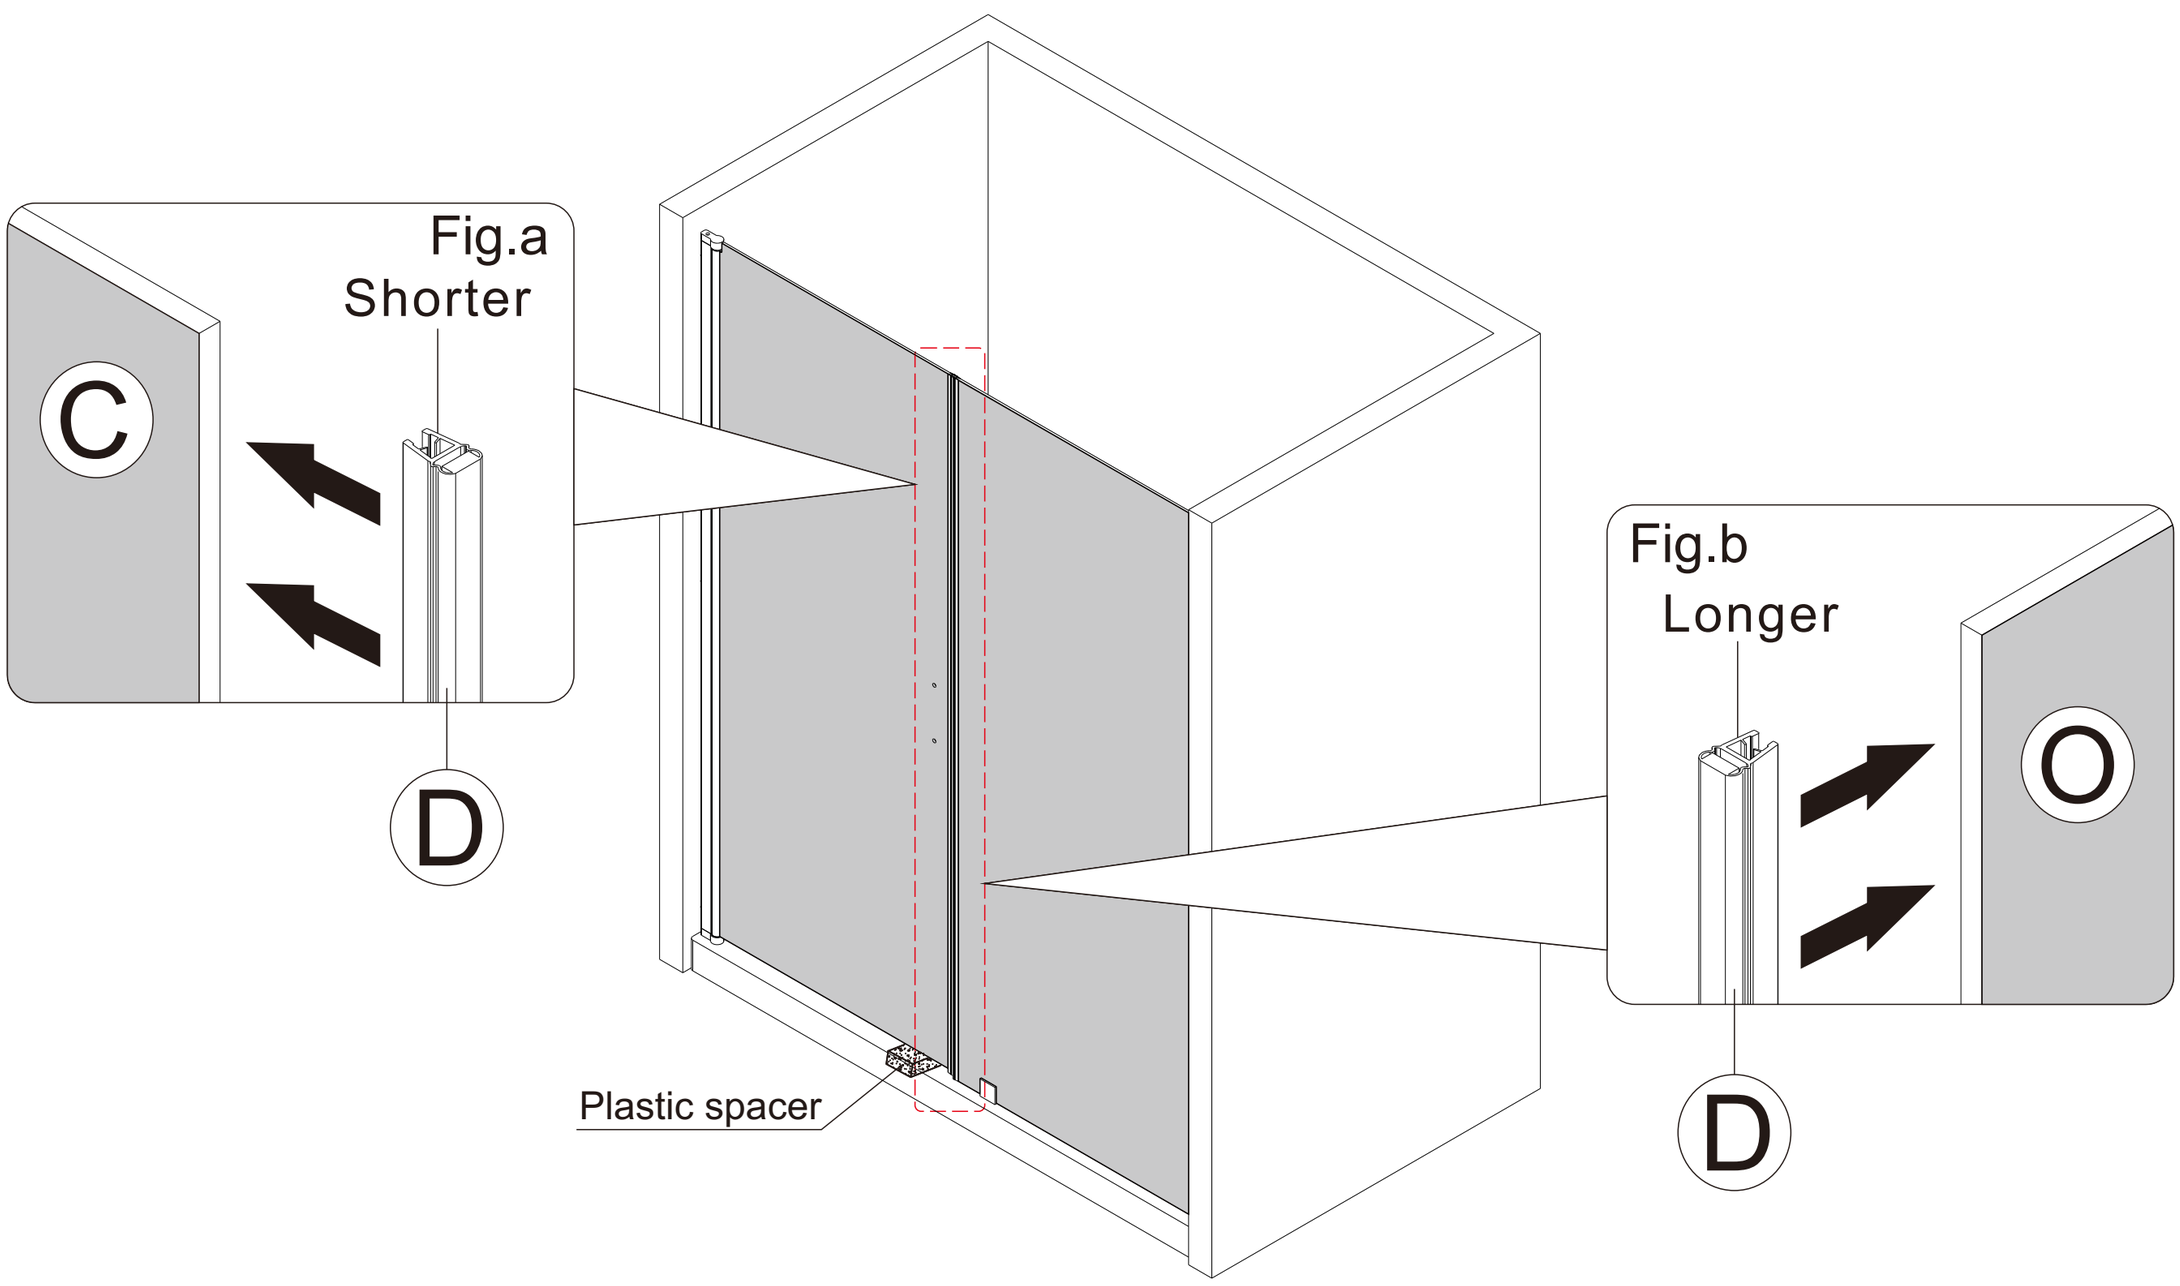

Note: The shower door can be installed left or right, according to the need to determine the installation direction.


CAUTION: Do not put glass directly on the ground

11 Adjustment

NOTE


1.Adjust the **Glass Door (C)** and **Stationary Glass(O)** up and down to make the magnetic stripe tightly suction seamlessly as Fig.a and Fig.b .

Fig.a

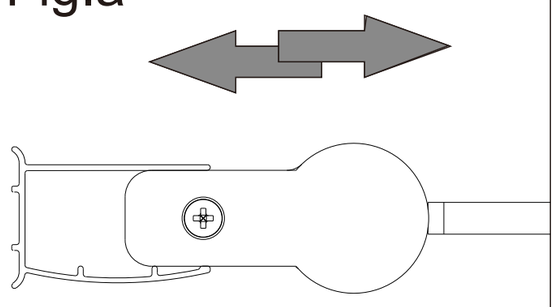



Adjustment 3/8"MAX

Fig.b

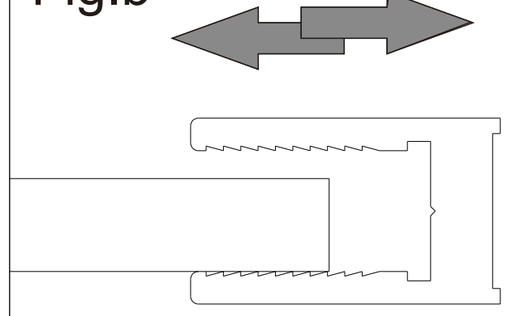

Adjustment 1/4"MAX

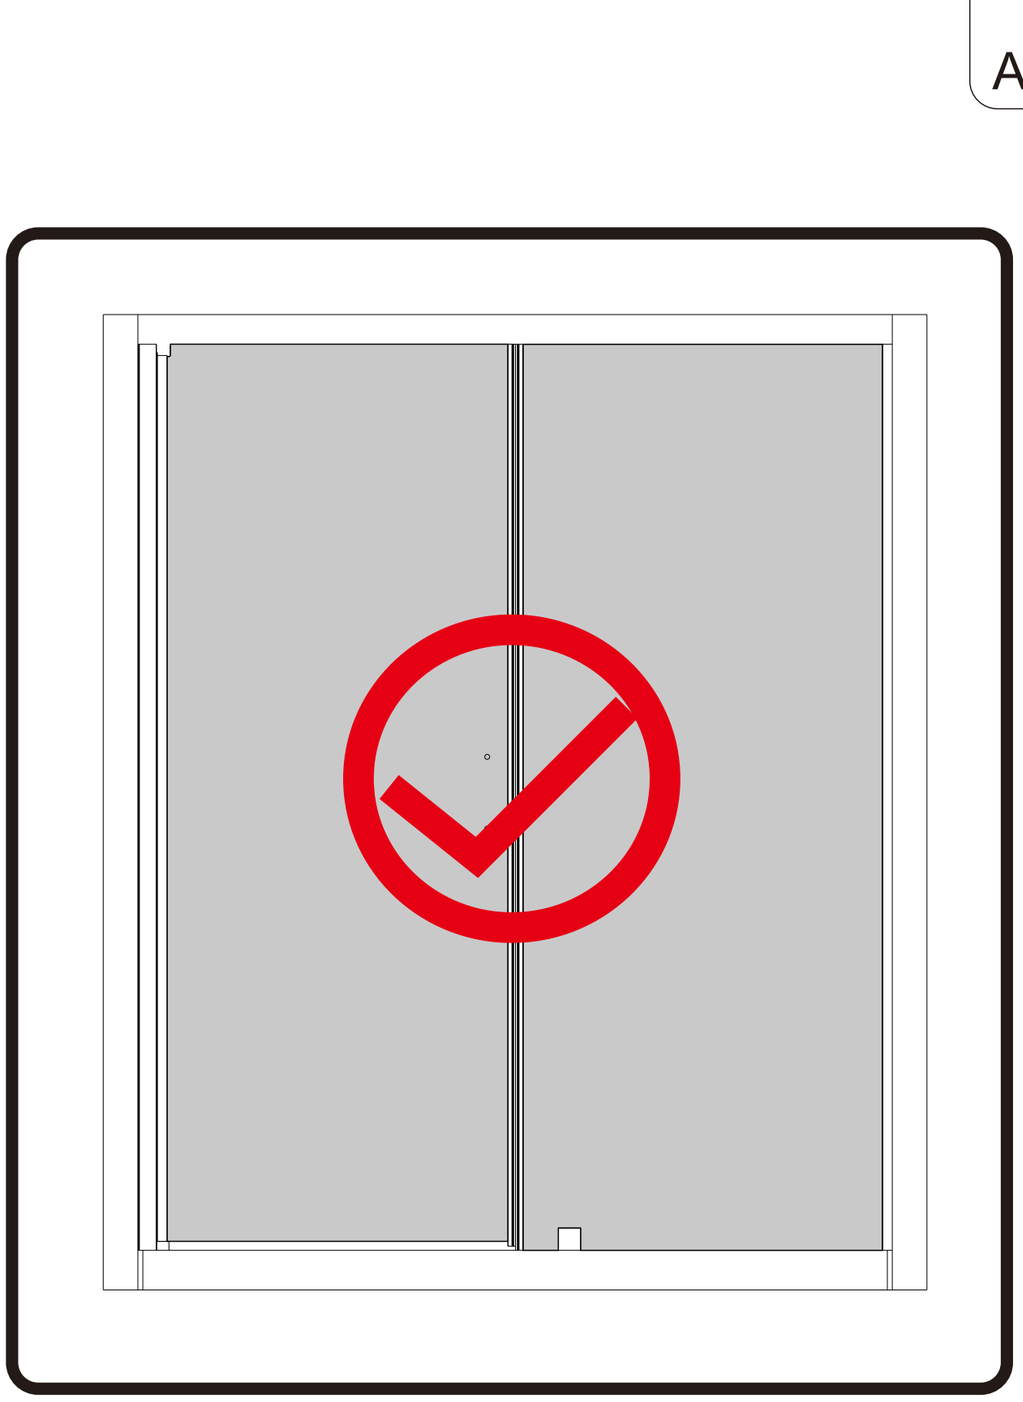

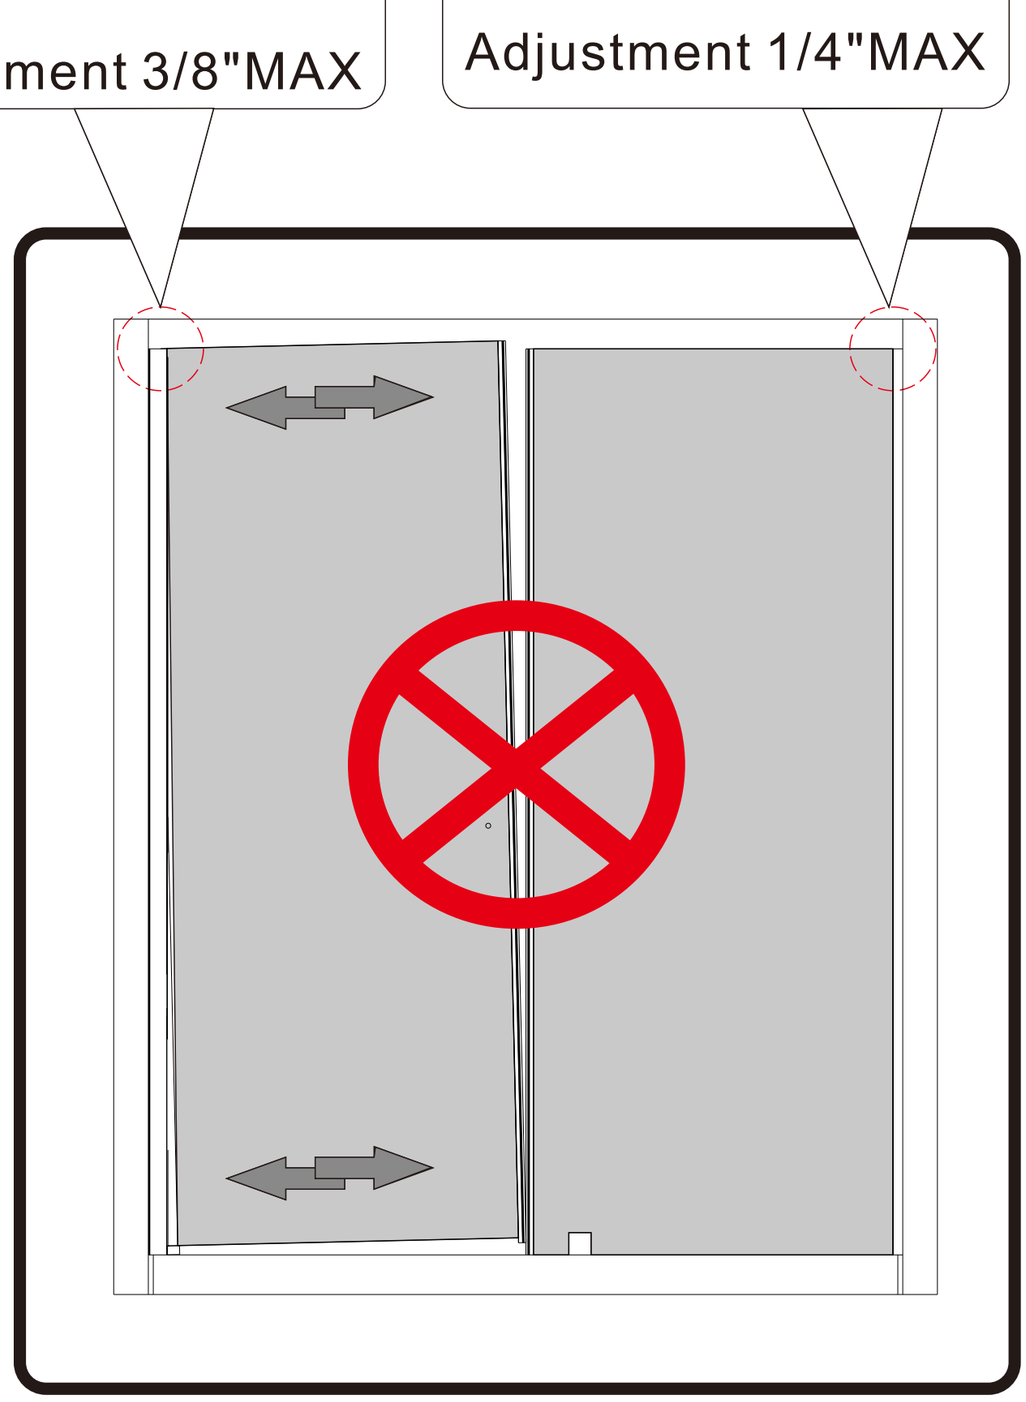



CAUTION: Do not put glass directly on the ground

12 Lock **Upright Profile(B)**

NOTE

1. **Drill 3 holes on the inside of the Wall Jamb(A)** with 1/8"(3mm) drill bit as Fig.a .
2. **Install Screws(gg)and screw cover cap Washers(cc)as Fig.b.**
3. **Install Screw caps(dd) as Fig.c.**

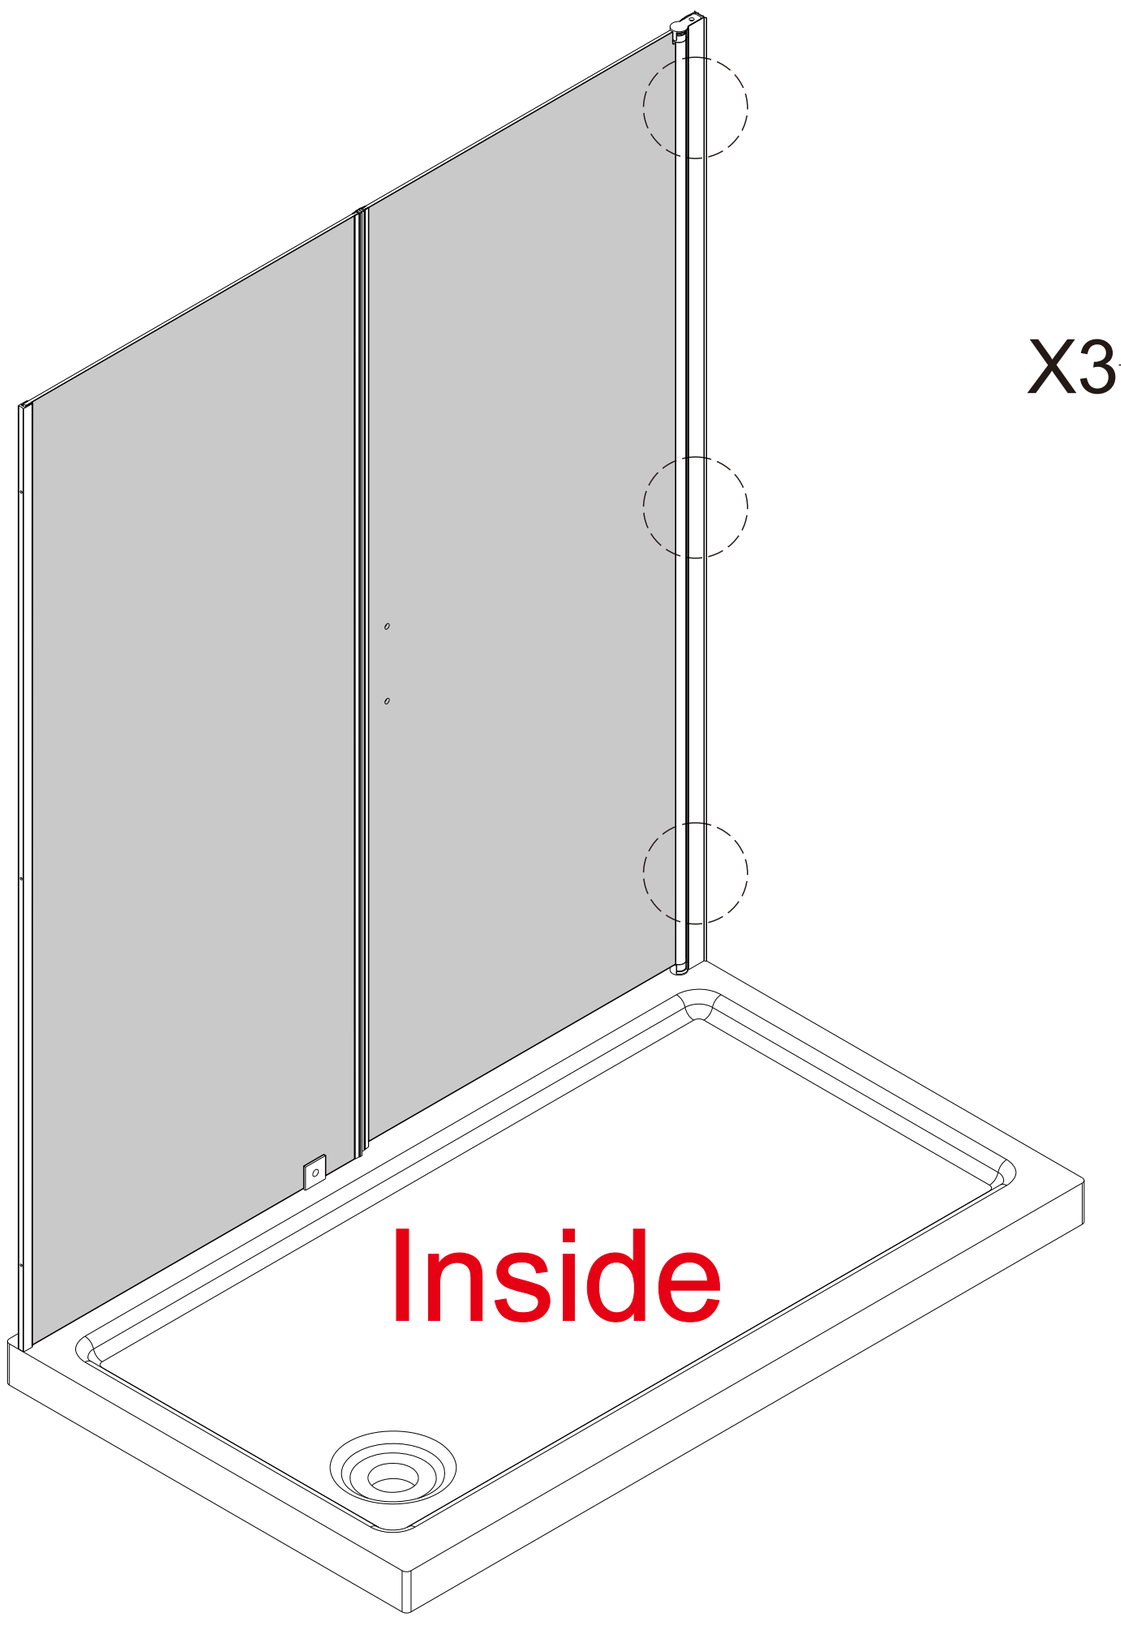

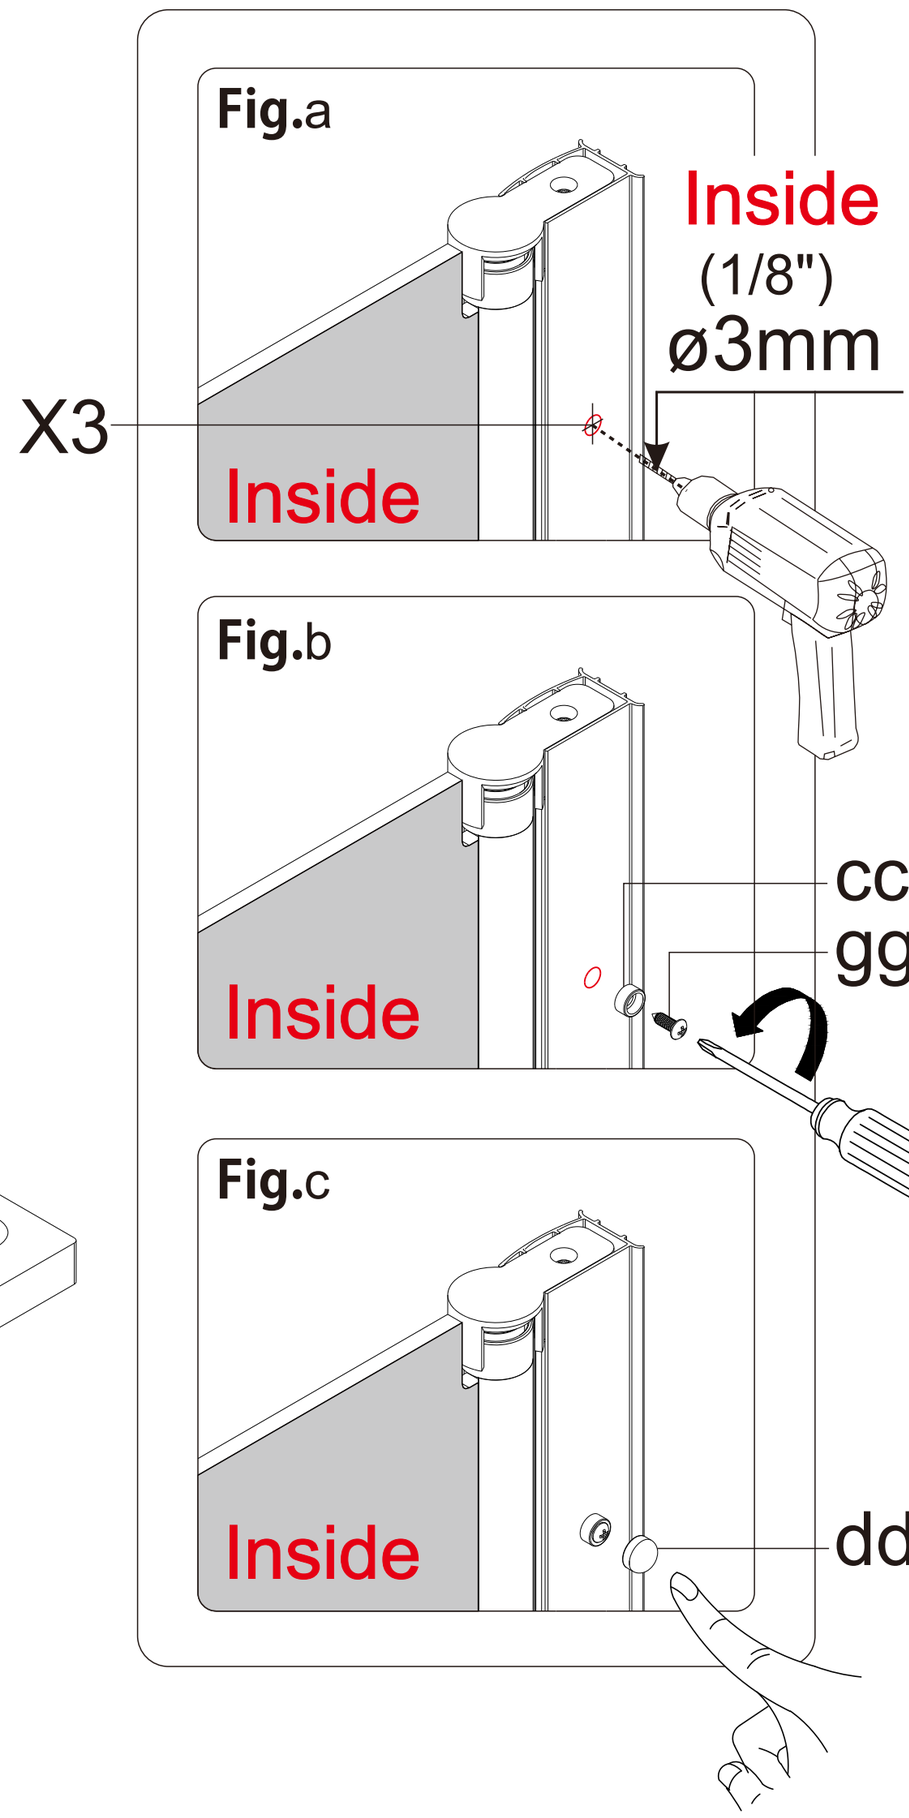


Note: The shower door can be installed left or right, according to the need to determine the installation direction.

13-1 Install **Fixed Fittings(P)**

NOTE

1.Mark the **Fixed Fittings(P)** with a pencil as Fig.a .

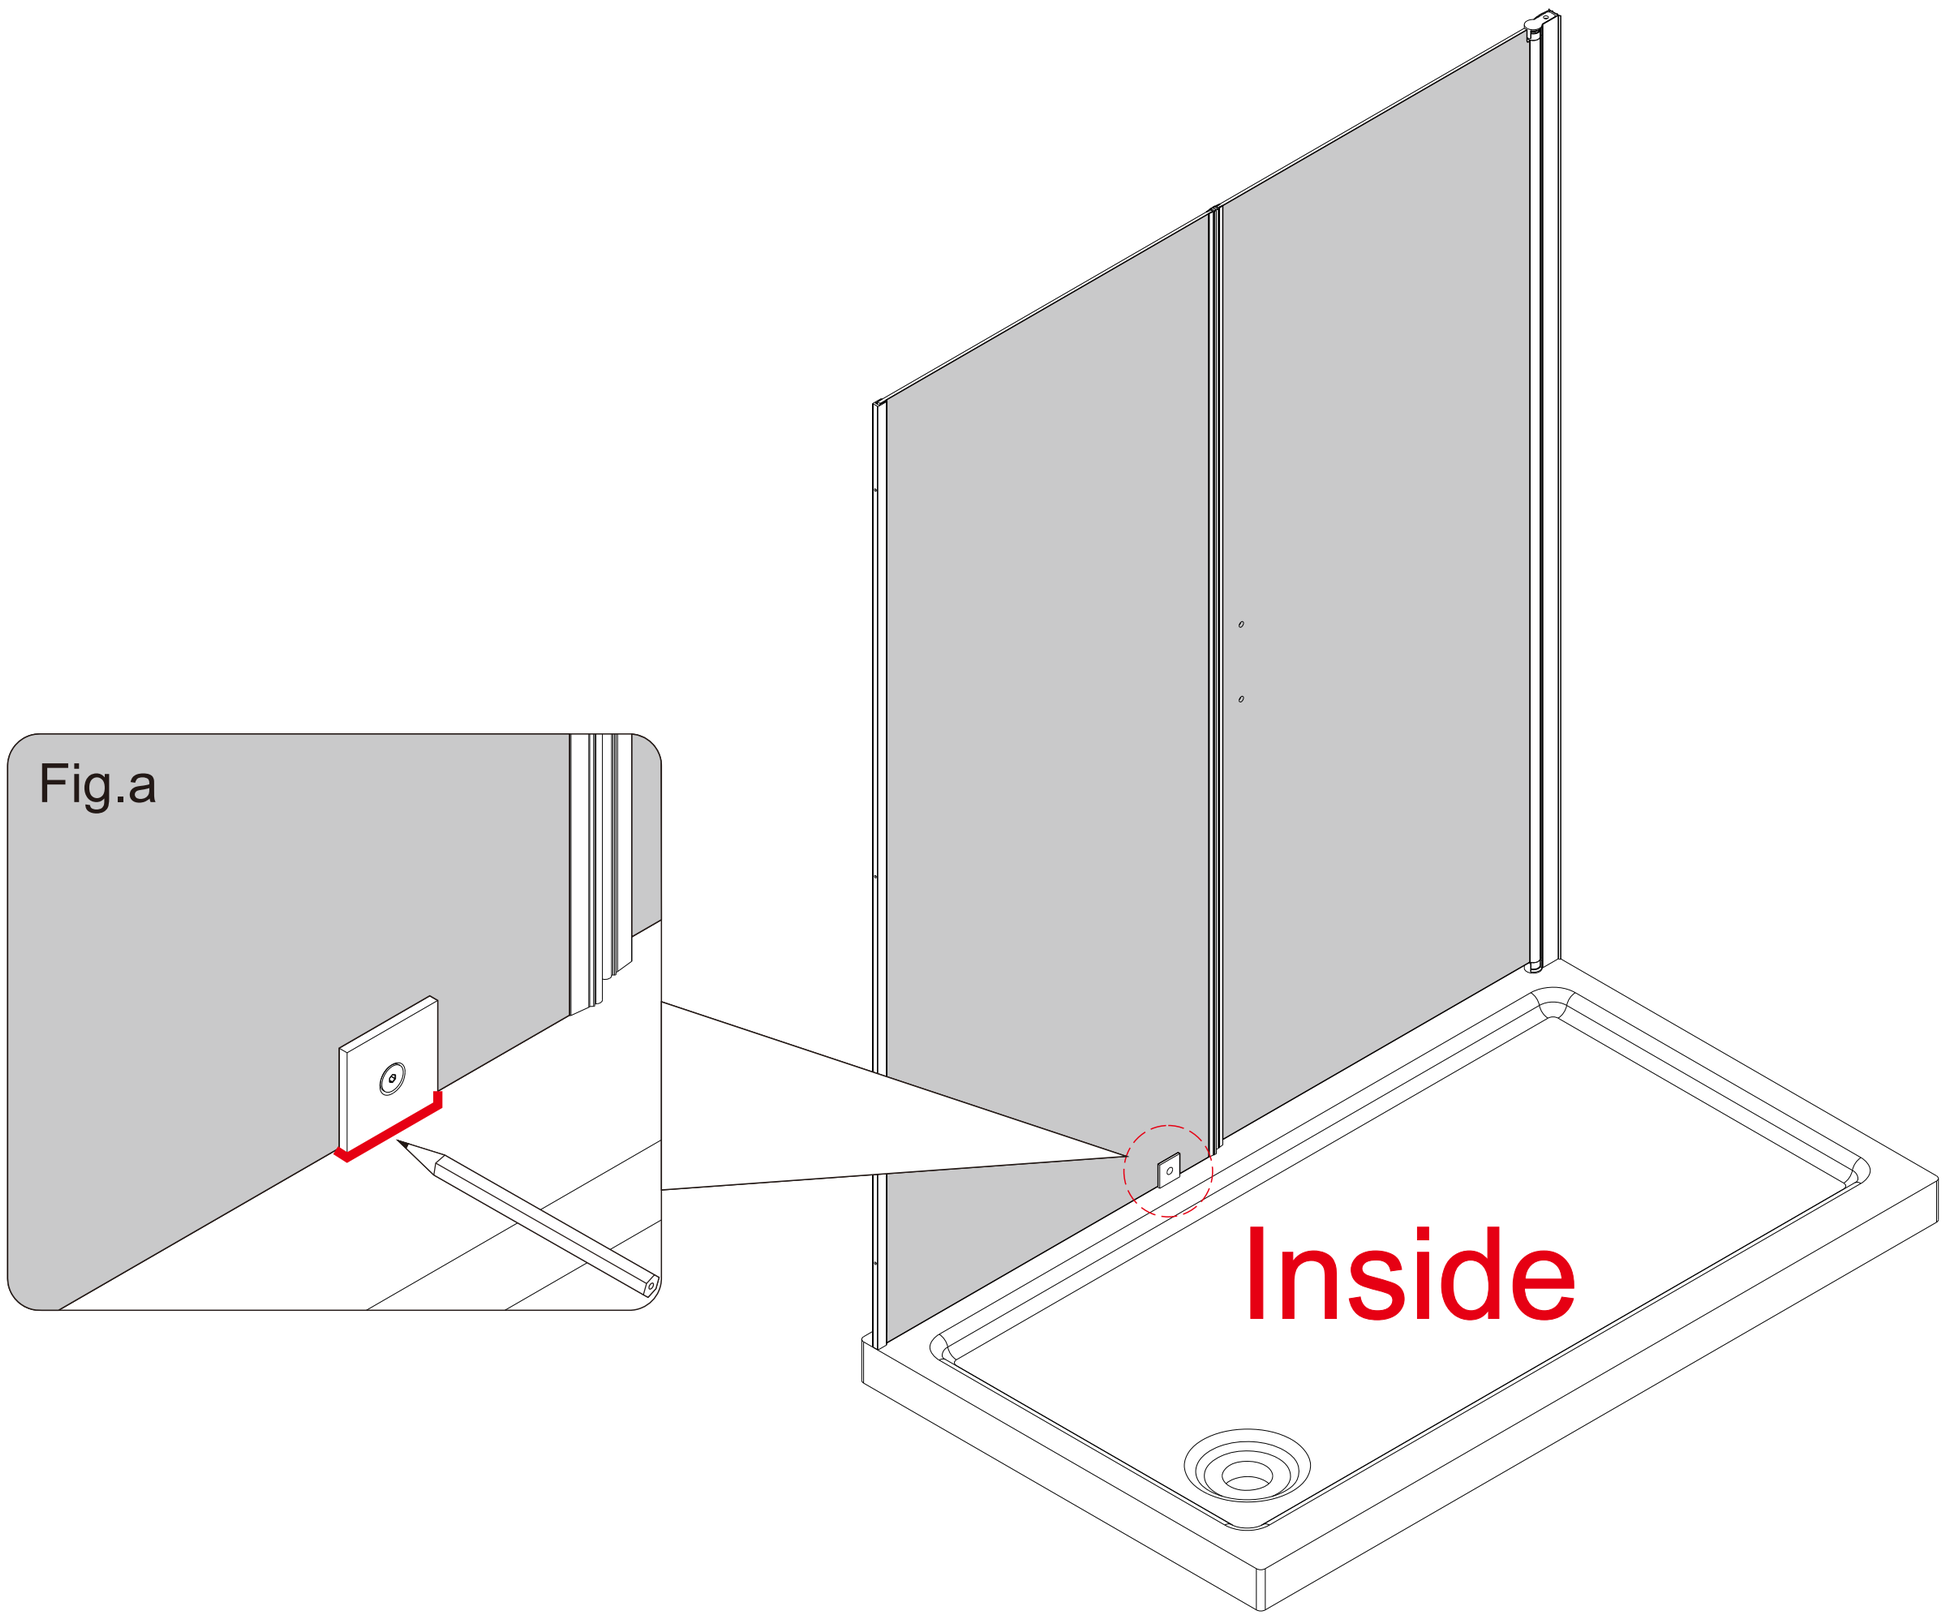





Note: The shower door can be installed left or right, according to the need to determine the installation direction.

13-2 Install **Fixed Fittings(P)**

NOTE

1.Take out the **Fixing Fittings(P)** as Fig.a .

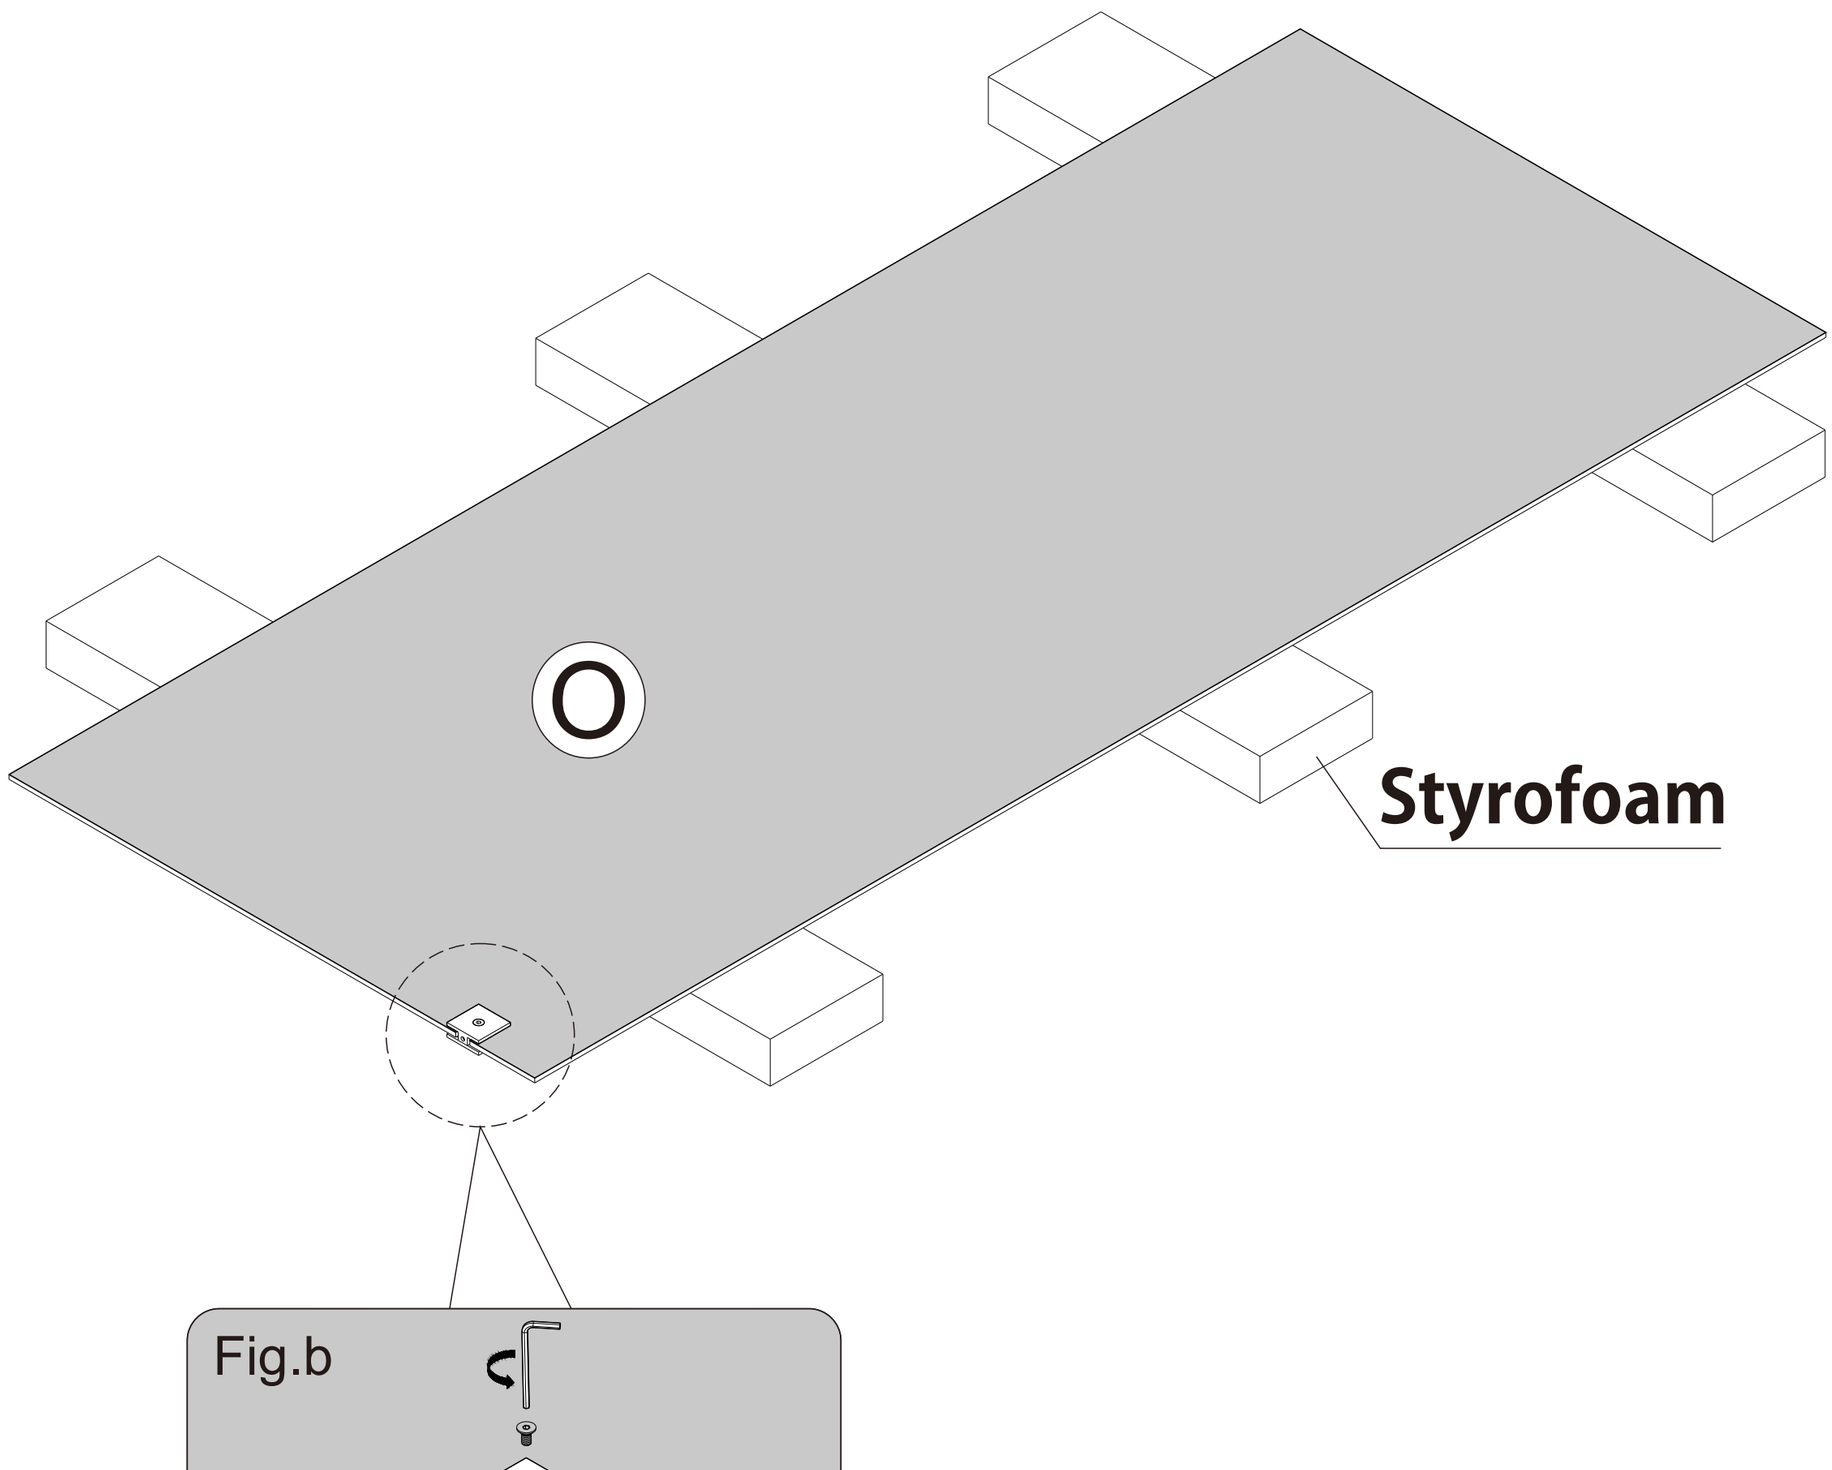

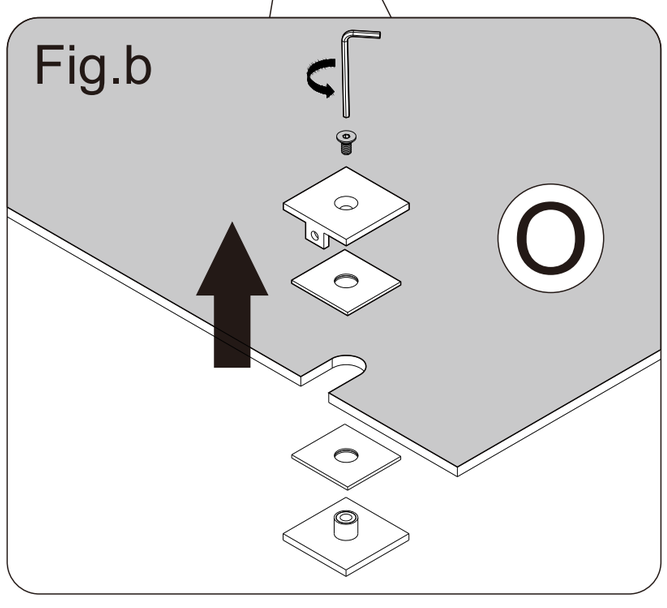



CAUTION: Do not put glass directly on the ground


13-3 Install **Fixed Fittings(P)**


NOTE

1.Mark the holes with a pencil as Fig.a .
2.Drill holes with ϕ6mm(1/4") drill bit as Fig.b .
3.Insert **Wall Anchors(aa)** as Fig.c .

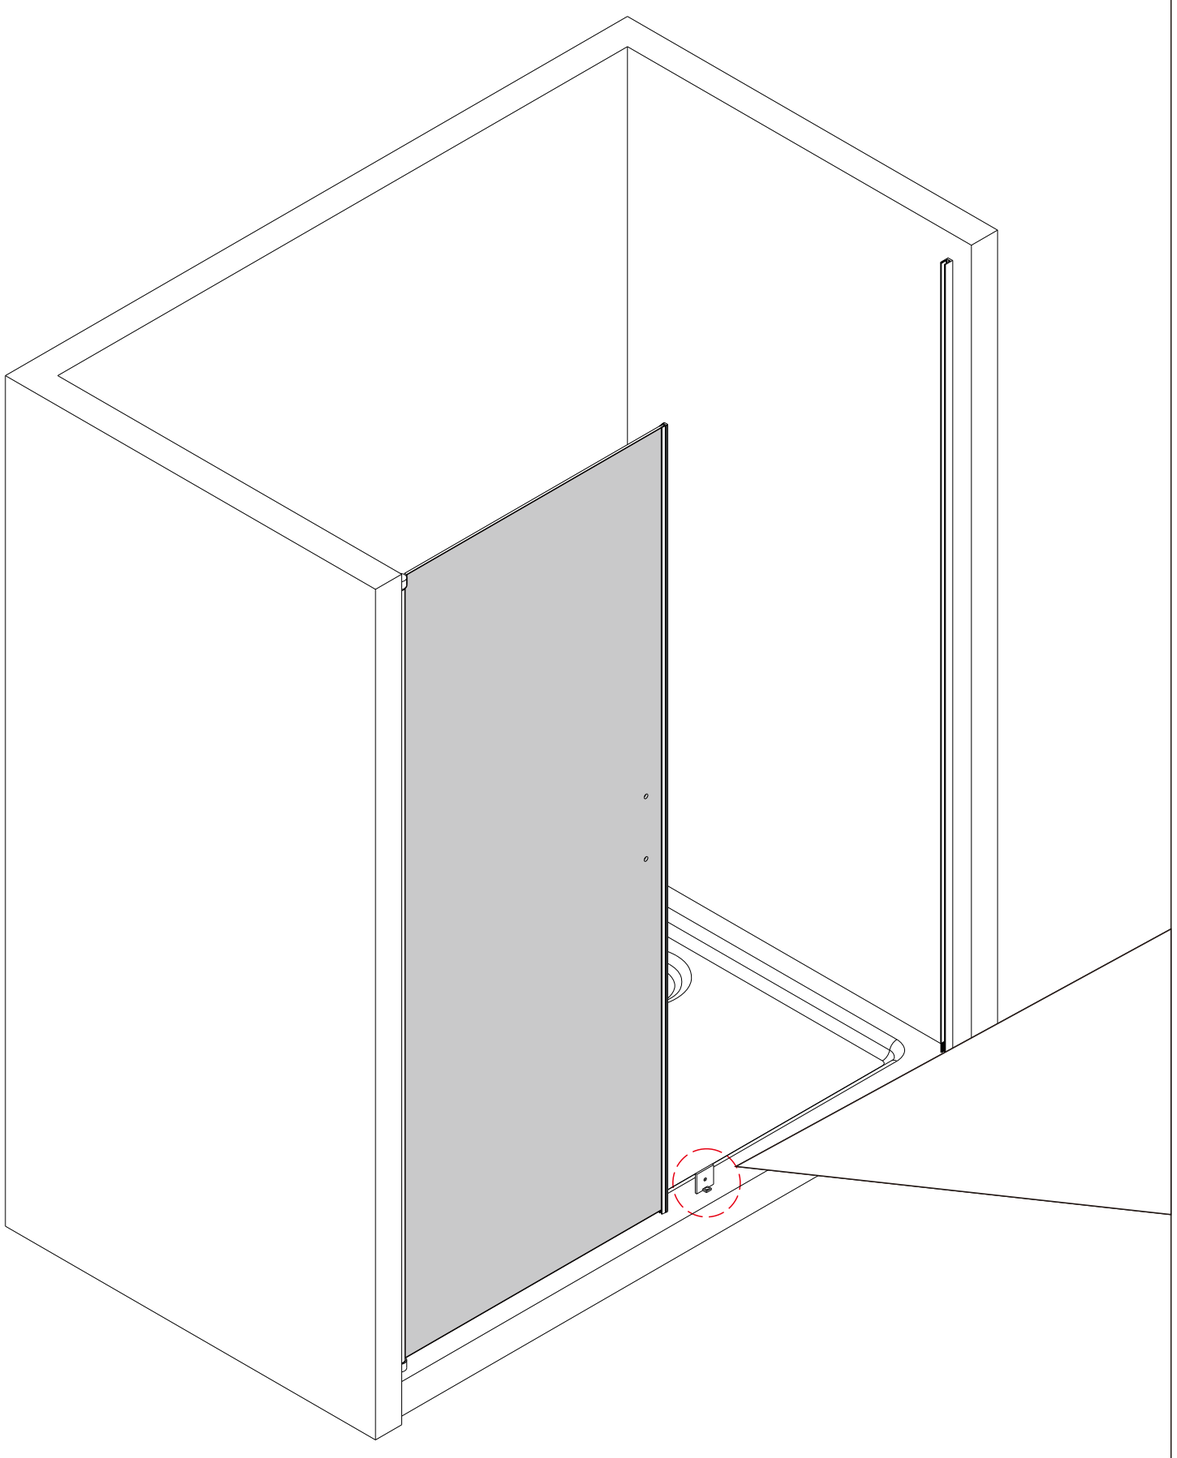

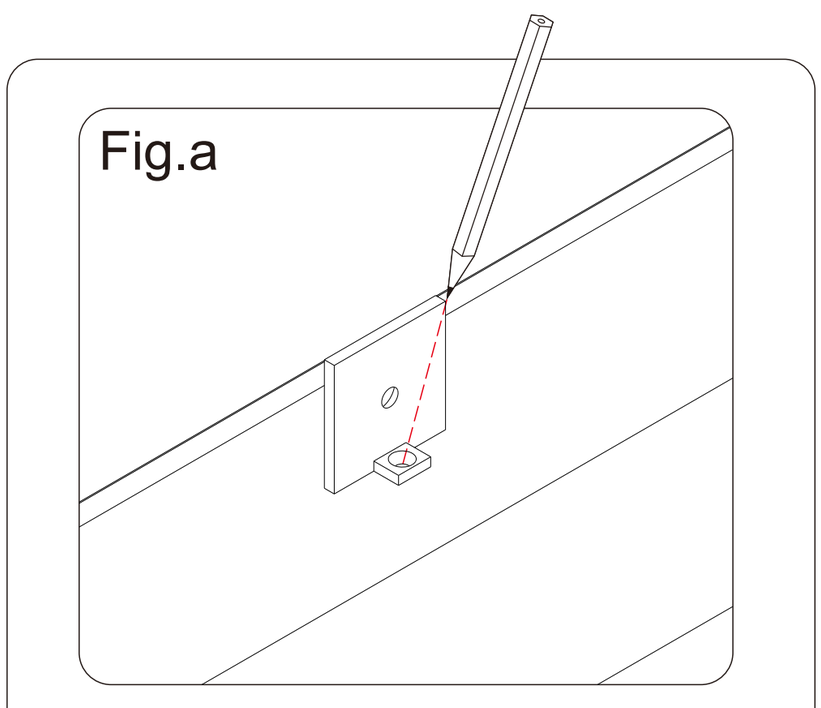

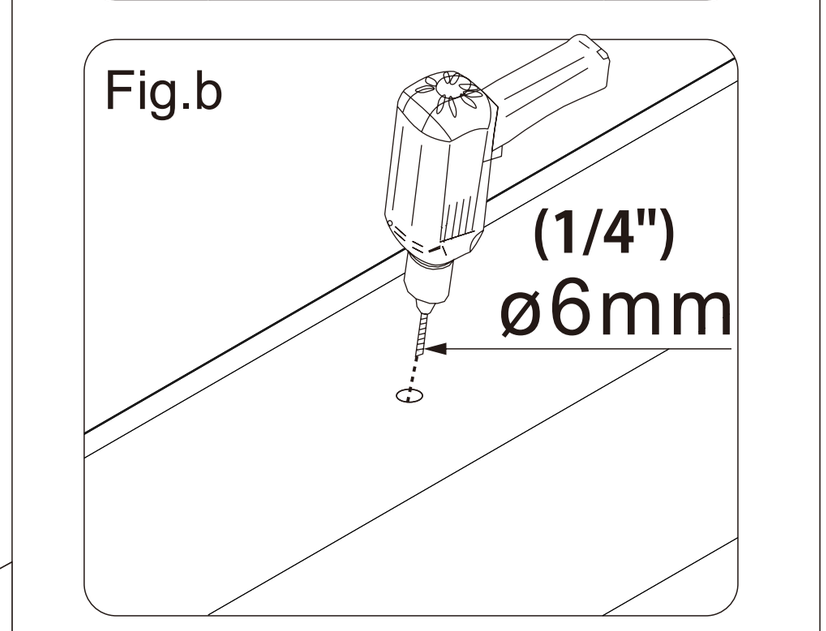

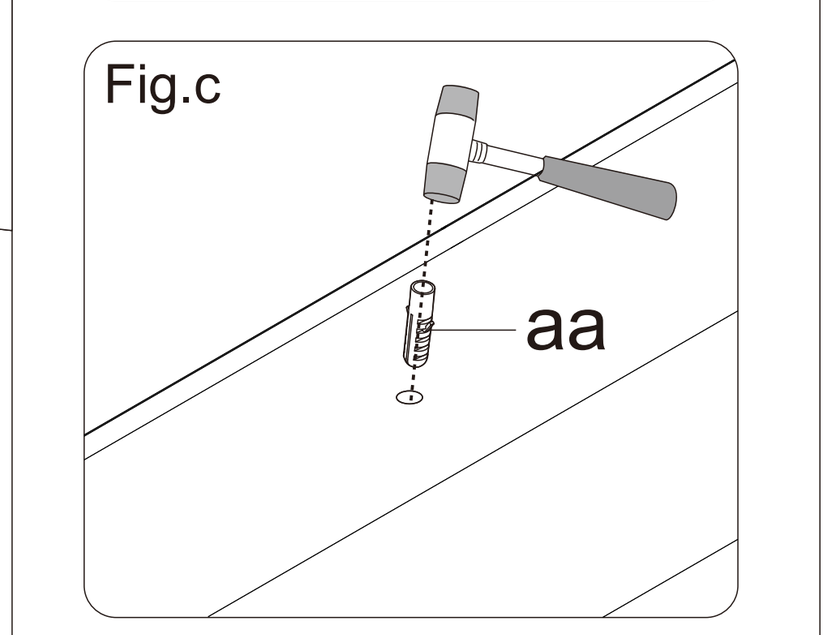



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

13-4 Install **Fixed Fittings(P)**

NOTE

1.Fix the **Fixing Fittings(P)** with **Screws(ff)** as Fig.a .

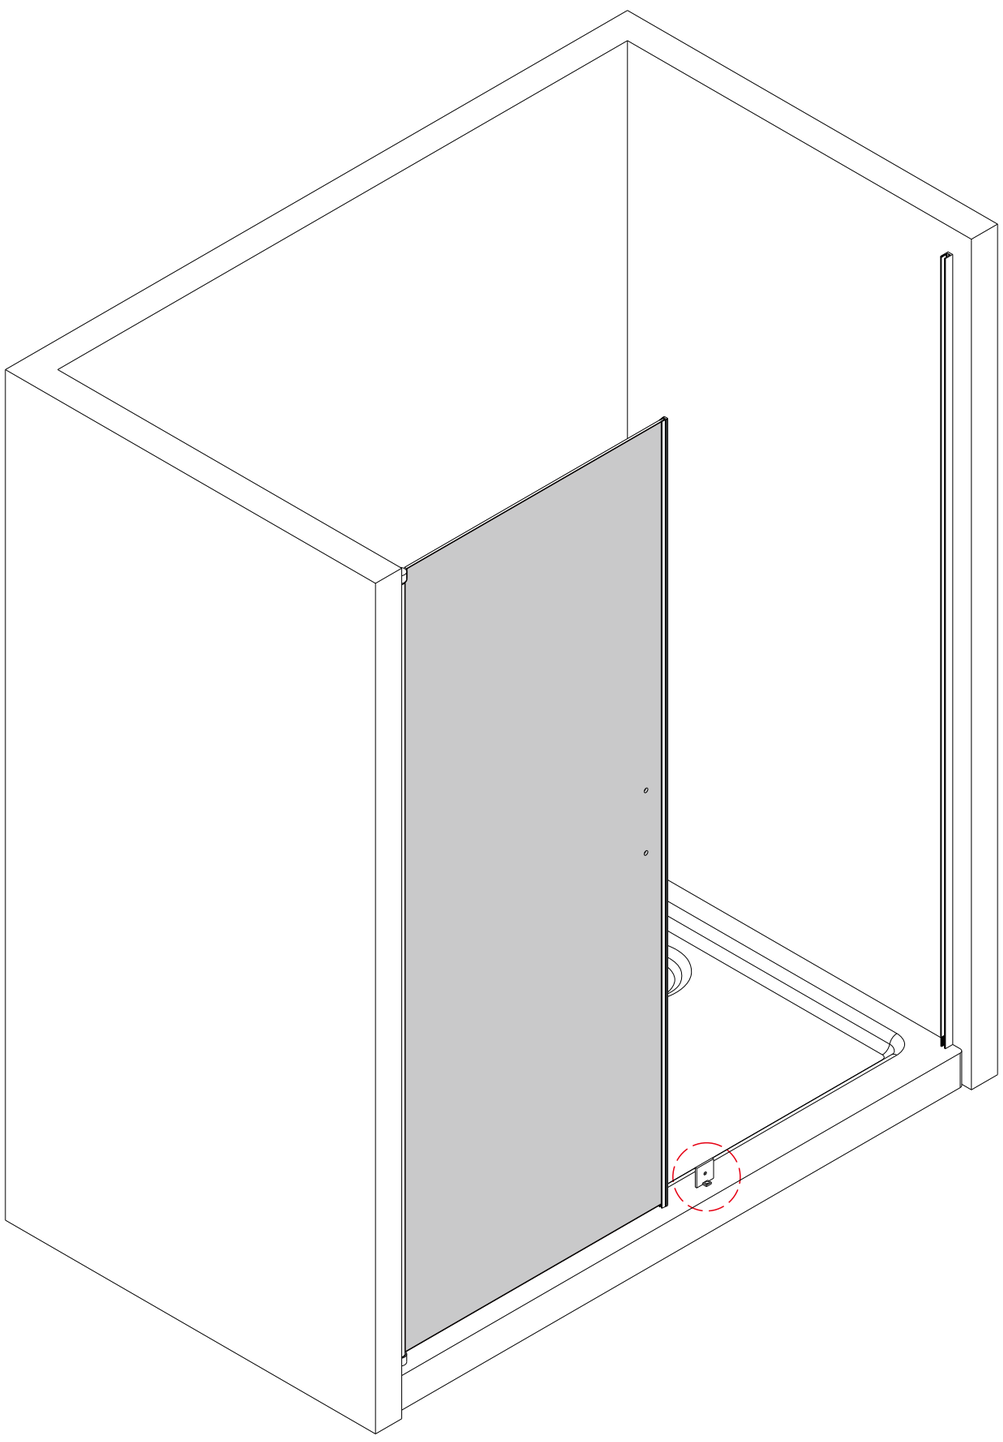

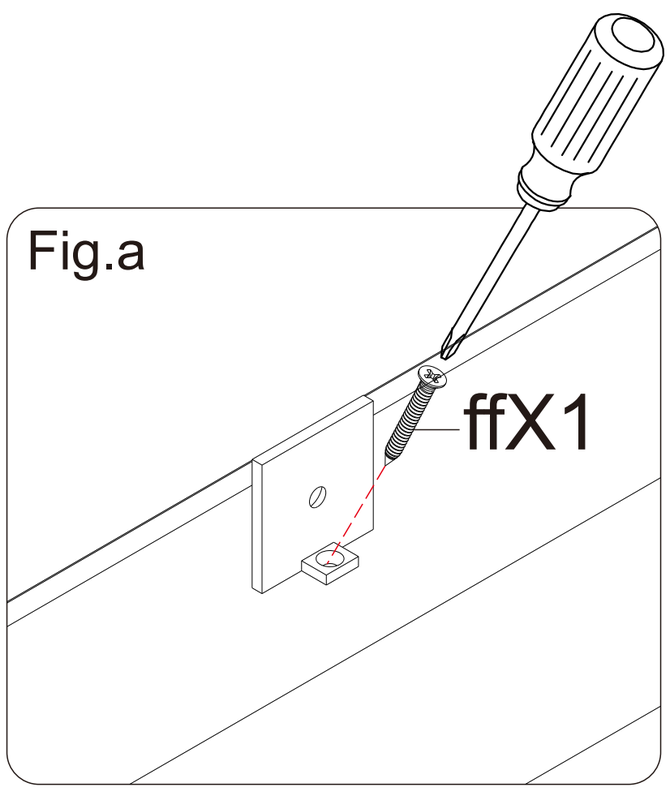

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

14 Install **Stationary Glass(O)**

NOTE

1.Install the **Stationary Glass(O)** on the **Wall Jamb(H)** as Fig.a .
2.Secure the **Stationary Glass(O)** with **Fixed Fittings(P)** as Fig.b .
3.Install the **Magnetic Strip(D)** on the **Stationary Glass(O)** as Fig.c .

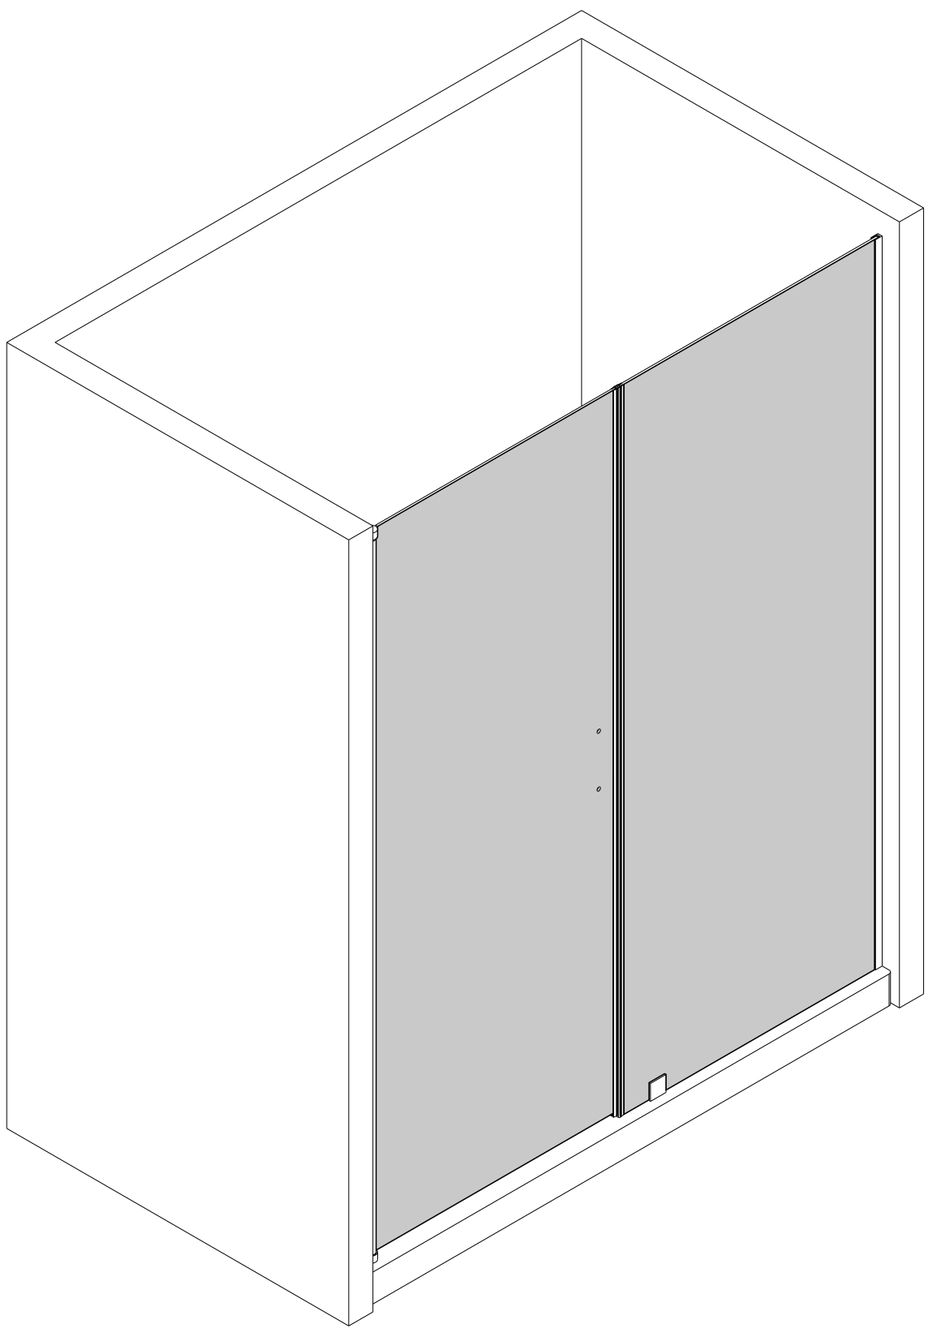


Fig.a

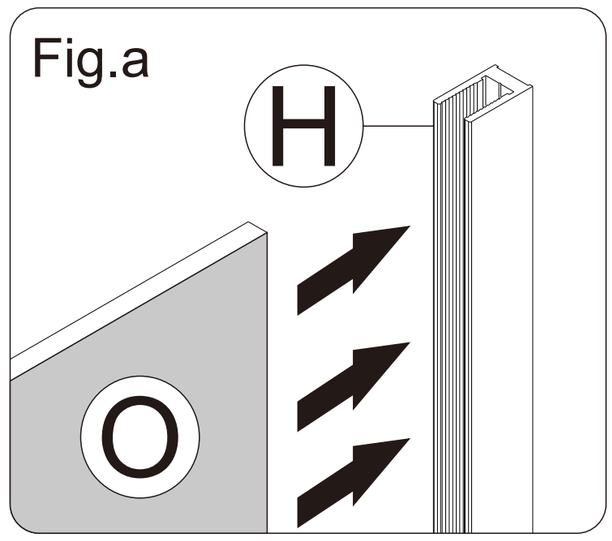


Fig.b


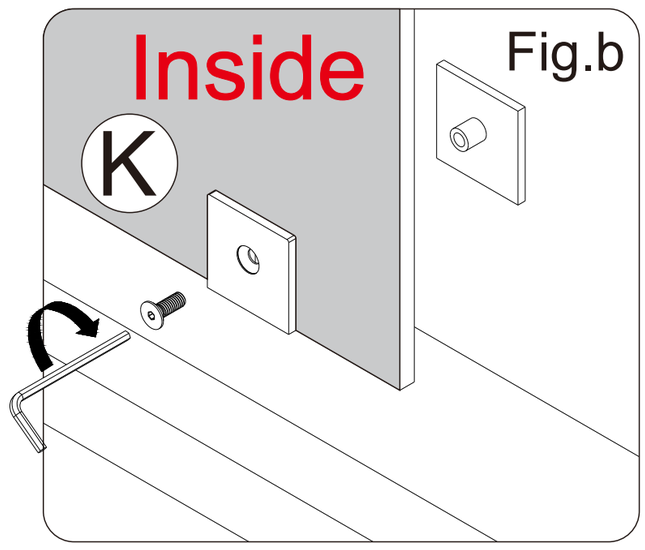


Fig.b

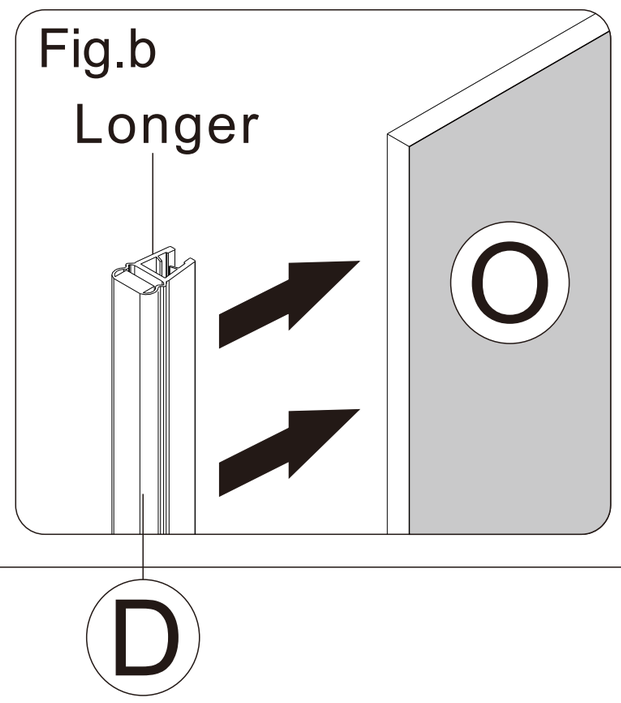

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

15 Install **Wedge Strip(I)**

NOTE

1. Spray water on the **Stationary Glass(O)** and the slot of **Wall Jamb(H)** as Fig.a.
2. Insert in the **Wedge Strip(I)** Using the given Wedge strip install tool to press the **Wedge strip(I)** and Fit it place as Fig.b .

Fig.a



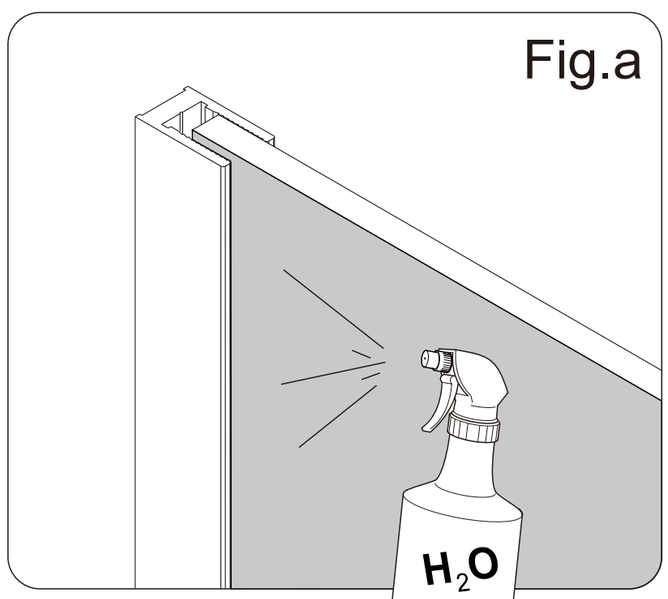


Fig.b

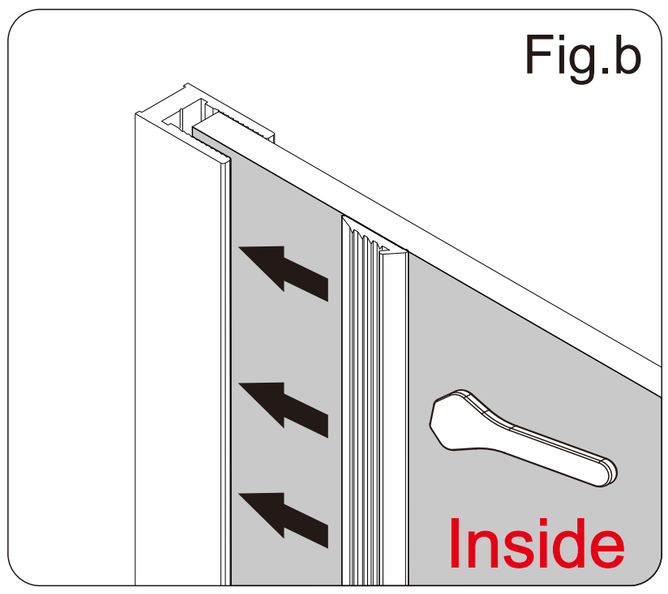

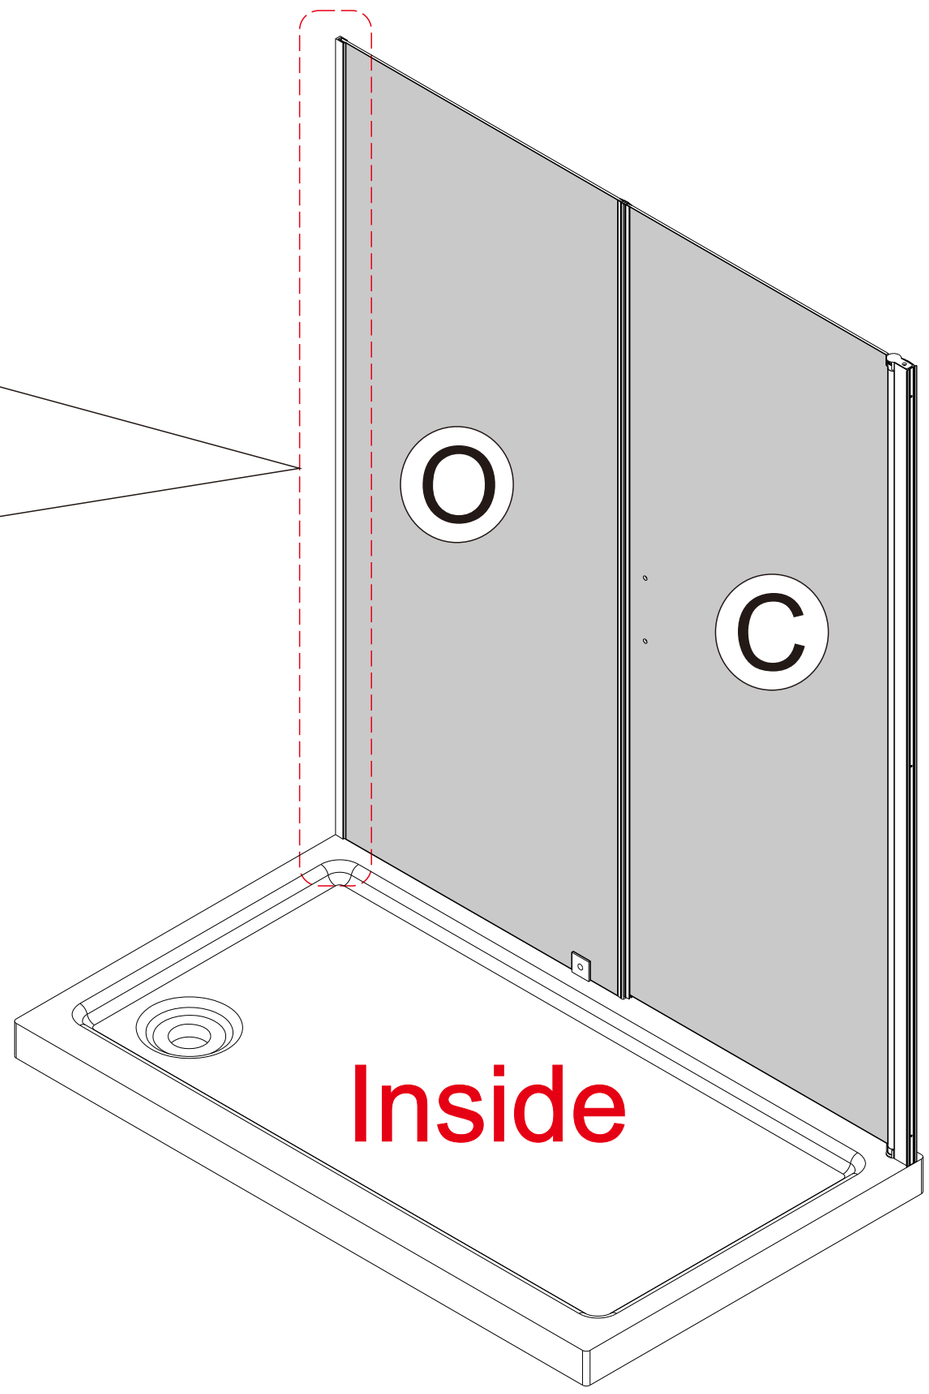



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

16-1 Install **Support Rod(G)**

NOTE

1. Put the one side of **Support Rod(G)** to the **Stationary Glass(O)**, adjust the position as Fig.a .
2. Keep it level and mark a fix point for the **Support Rod(G)** to the wall as Fig.b and Fig.c

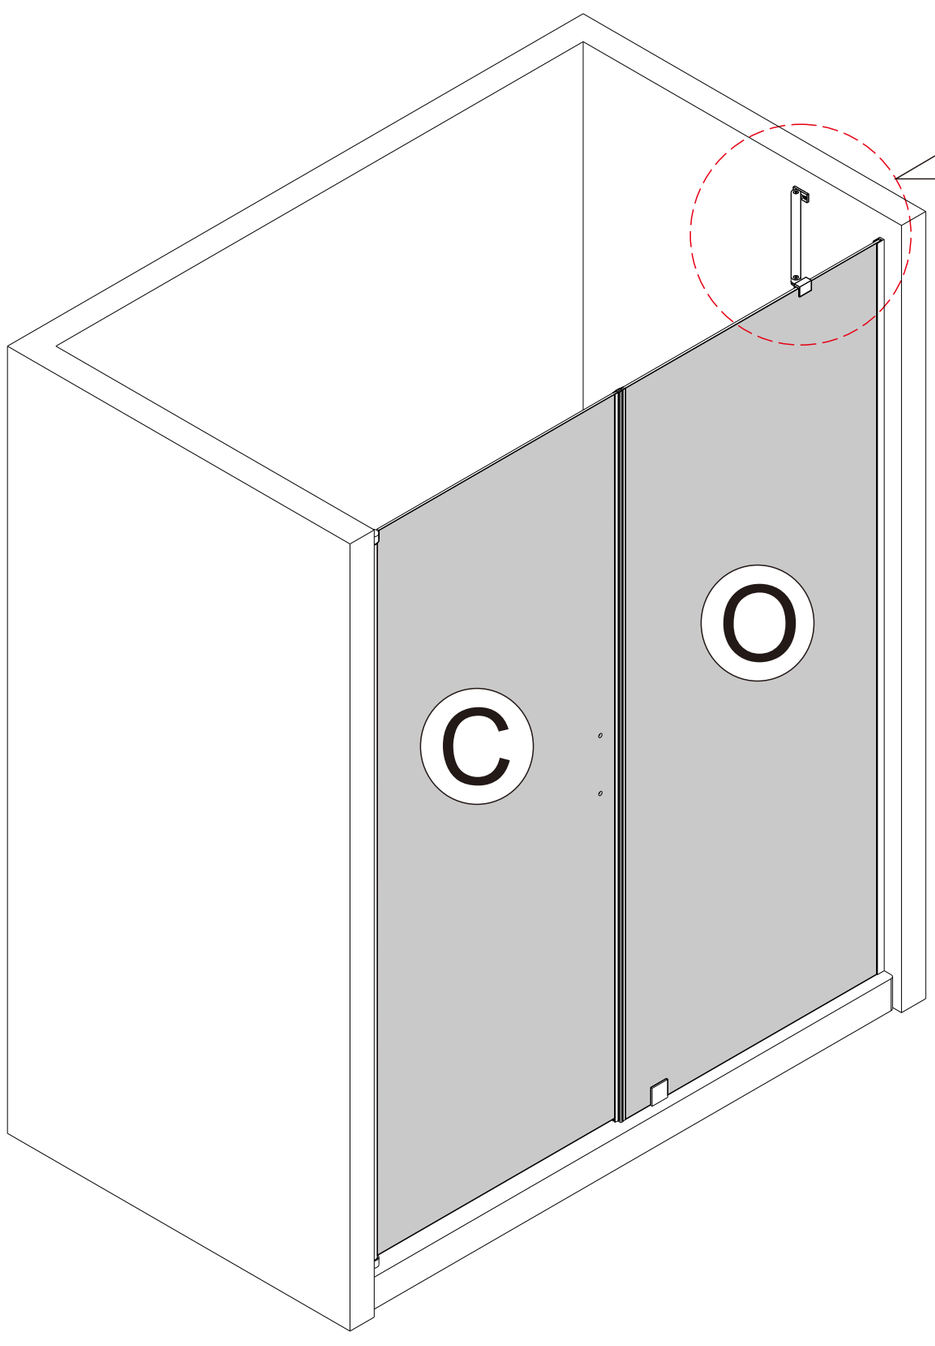

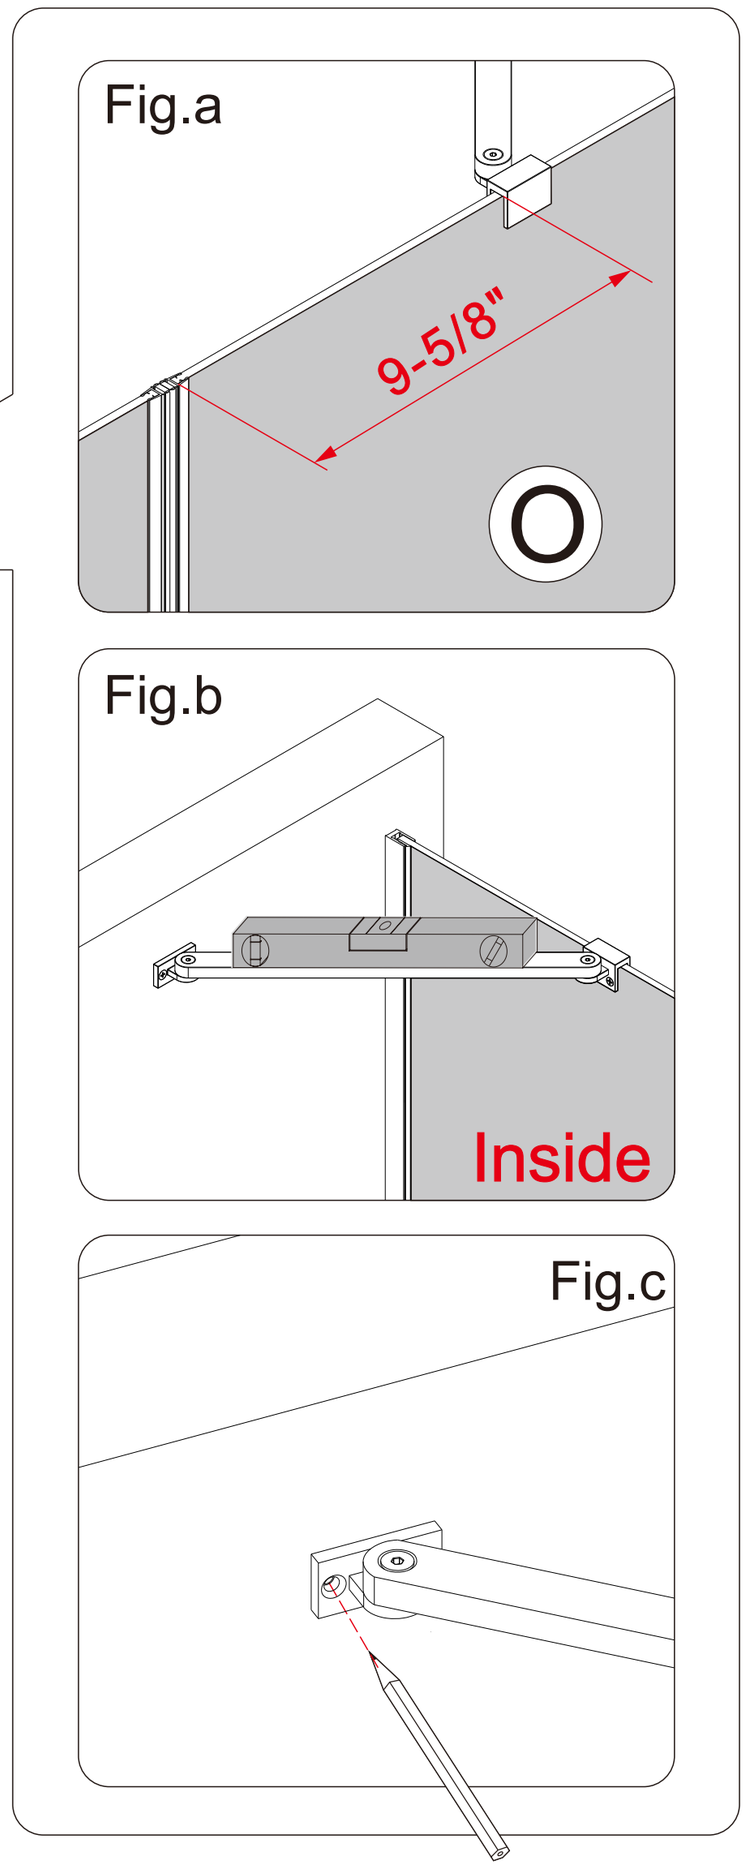



Note: The shower door can be installed left or right, according to the need to determine the installation direction.

16-2 Install **Support Rod(G)**

NOTE

1. Drill hole on the marked point as Fig.a.
2. Fix a **Wall Anchor(aa)** to the wall as Fig.b

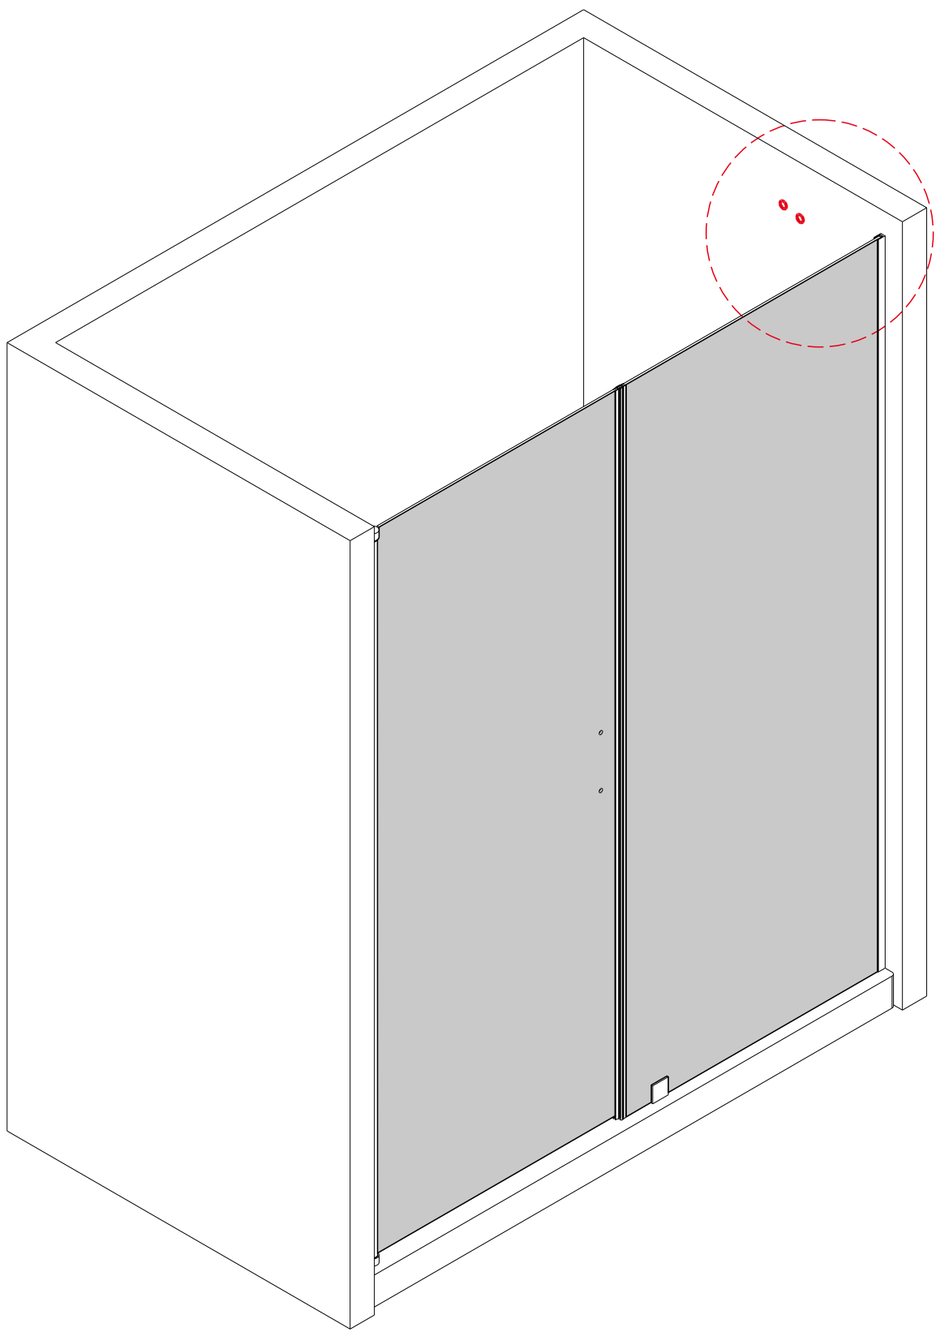

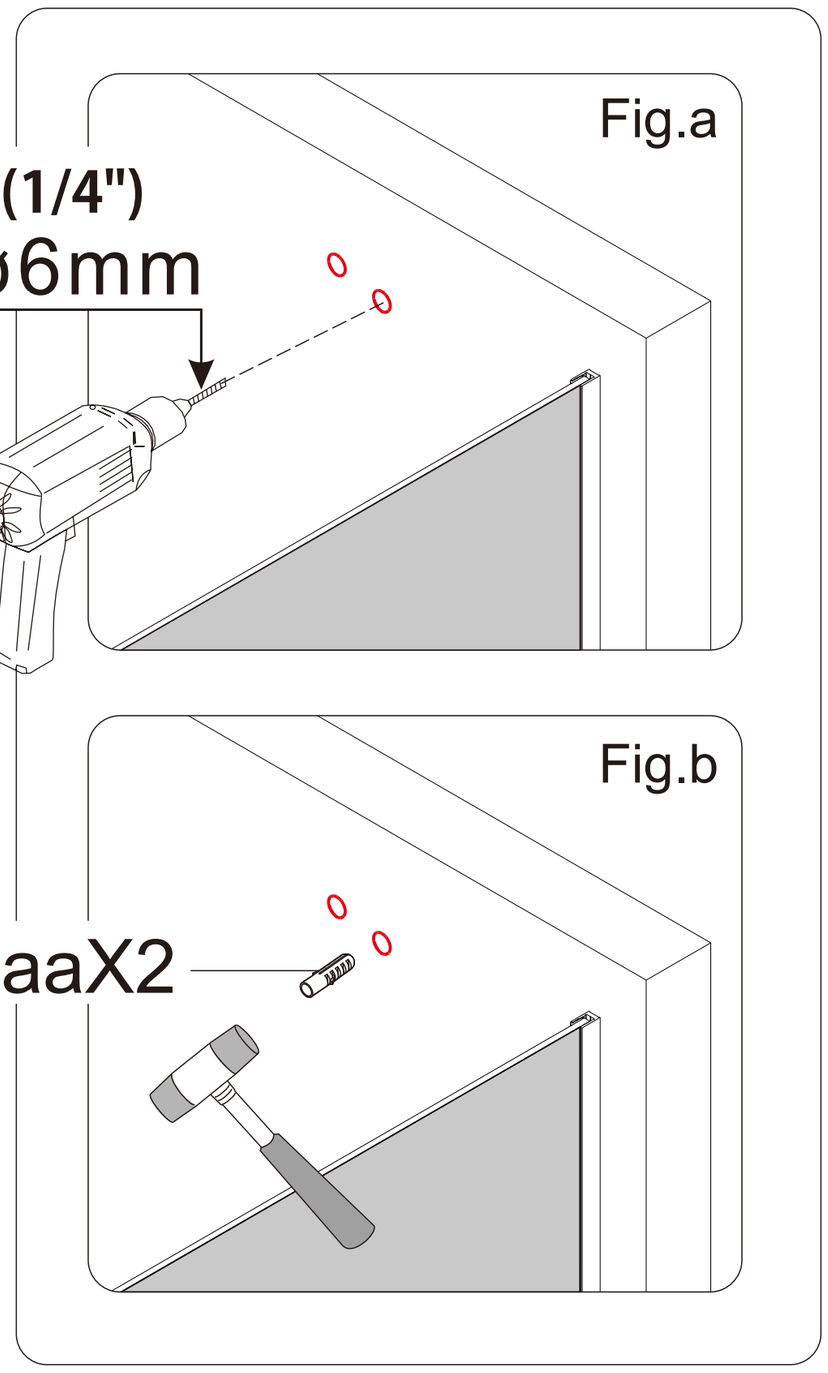

NOTE

● If a Stud is present behind the wall:
drill Φ1/8″(3mm) pilot holes into the stud and use the ST4.0x30mm **Screws(ff)**
OR
● If NO Stud is present behind the wall:
drill Φ1/4"(6mm) holes and insert the **Wall Anchors(aa)** and use the ST4.0x30mm **Screws(ff)**.

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

Hotline : + 1 302 336 8180

16-3 Install **Support Rod(G)**

NOTE

1.Place the **Support Rod(G)** to a suitable position as Fig.a .
2.Fasten the **Support Rod(G)** with screws as Fig.b and Fig.c

Fig.a

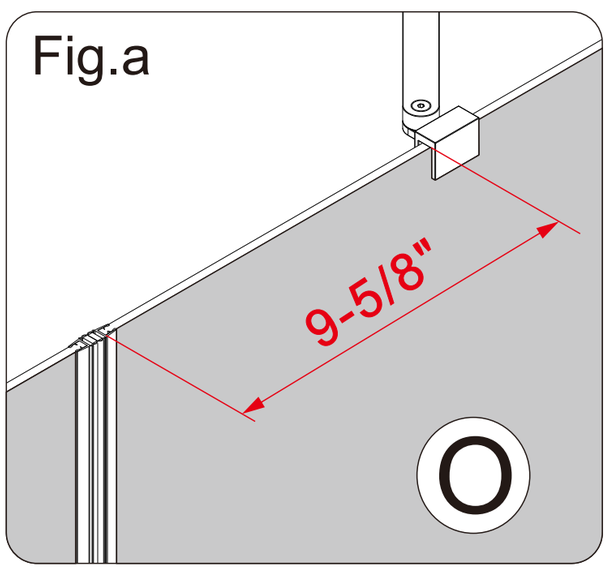


Fig.b



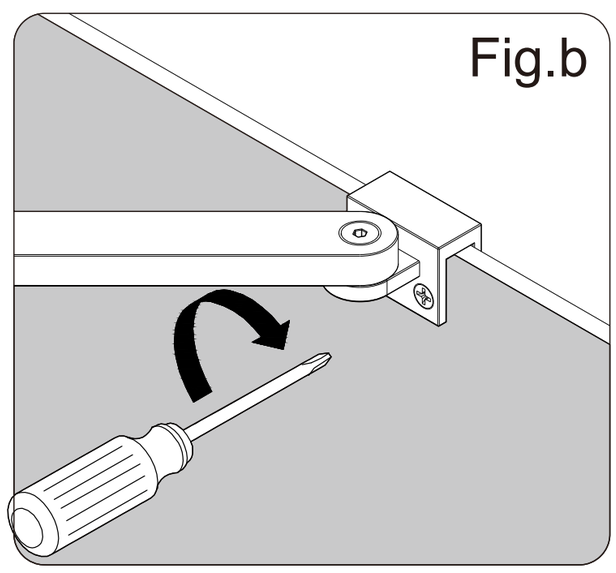


Fig.c



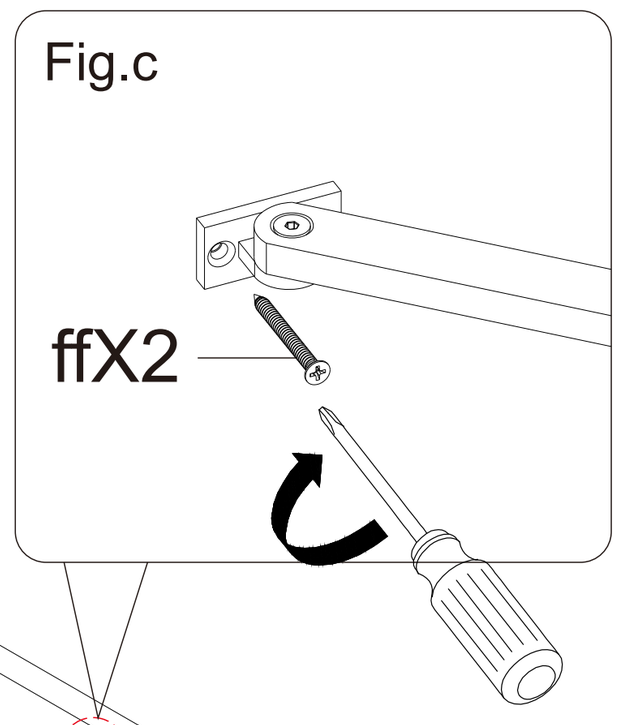

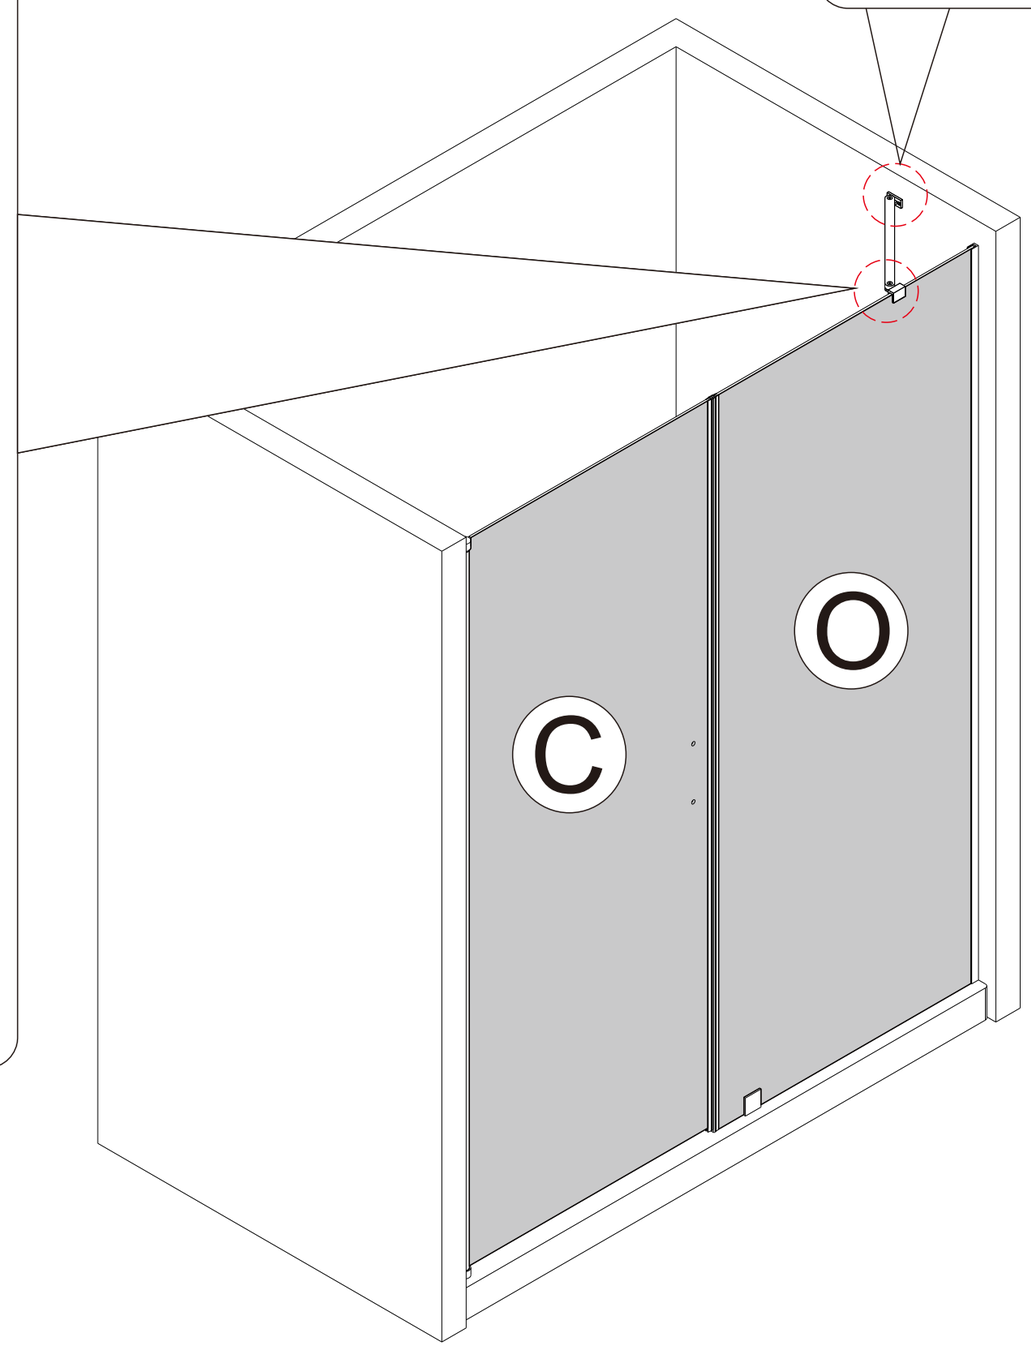

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

17-1 Install **Bottom Anti-Water Strip(K)**

NOTE

1.Pay attention to the installation direction of the **Bottom Anti-Water Strip(K)** as Fig.a.
2.Cut the protrusion of the **Bottom Anti-Water Strip(K)** as Fig.b .
3.Cut the soft edge at the bottom of the **Bottom Anti-Water Strip(K)** as Fig.c .

Fig.a



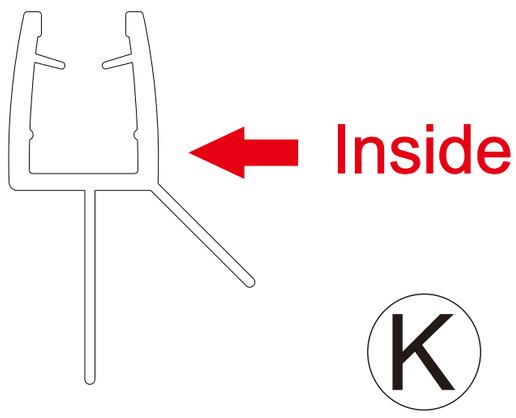


Fig.b

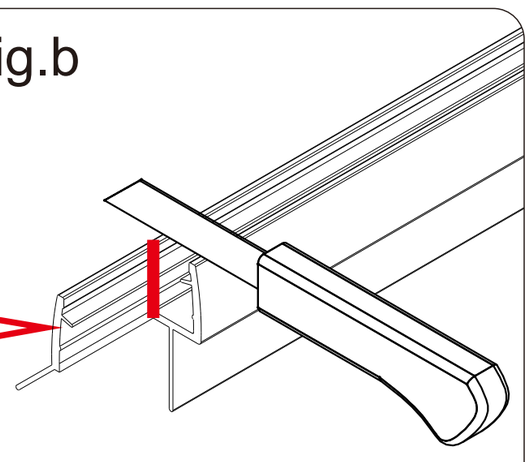


Please crop according to the installation direction

Fig.c

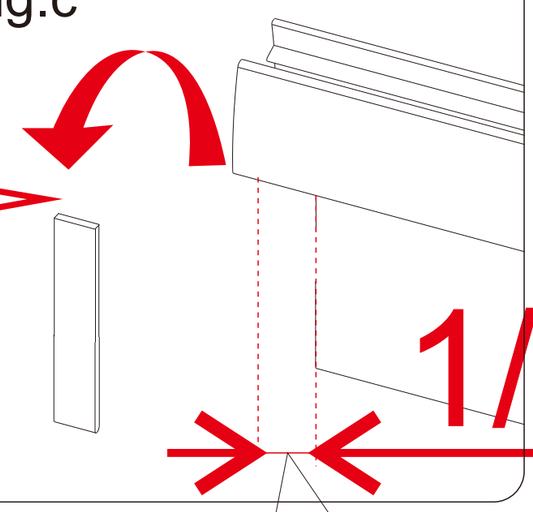

Please crop according to the installation direction

Cut the soft edge 3mm to ensure a tight fit with the bottom bracket.

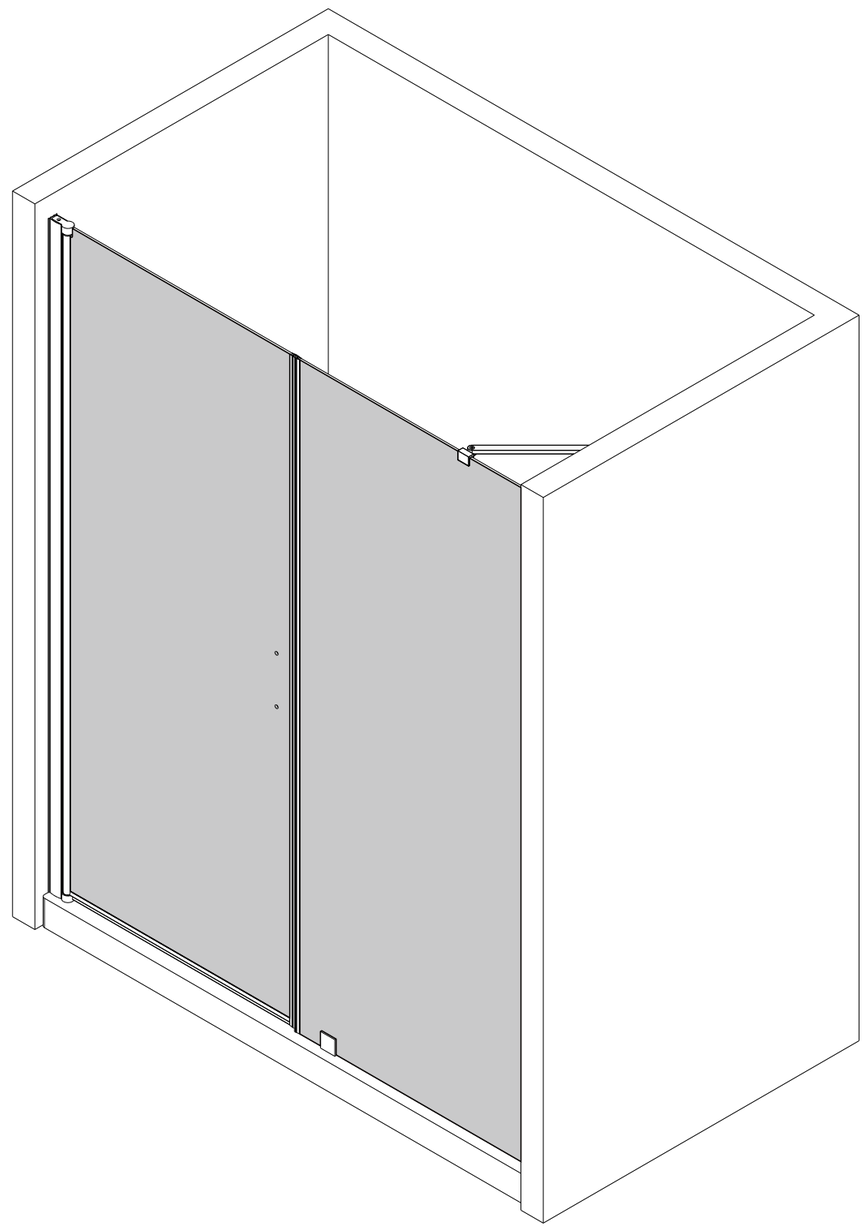

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

17-2 Install **Bottom Anti-Water Strip(K)**

NOTE

1.Install the **Bottom Anti-Water Strip(K)** on the **Glass Door(C)** as Fig.a & Fig.b & Fig.c and Fig.d .

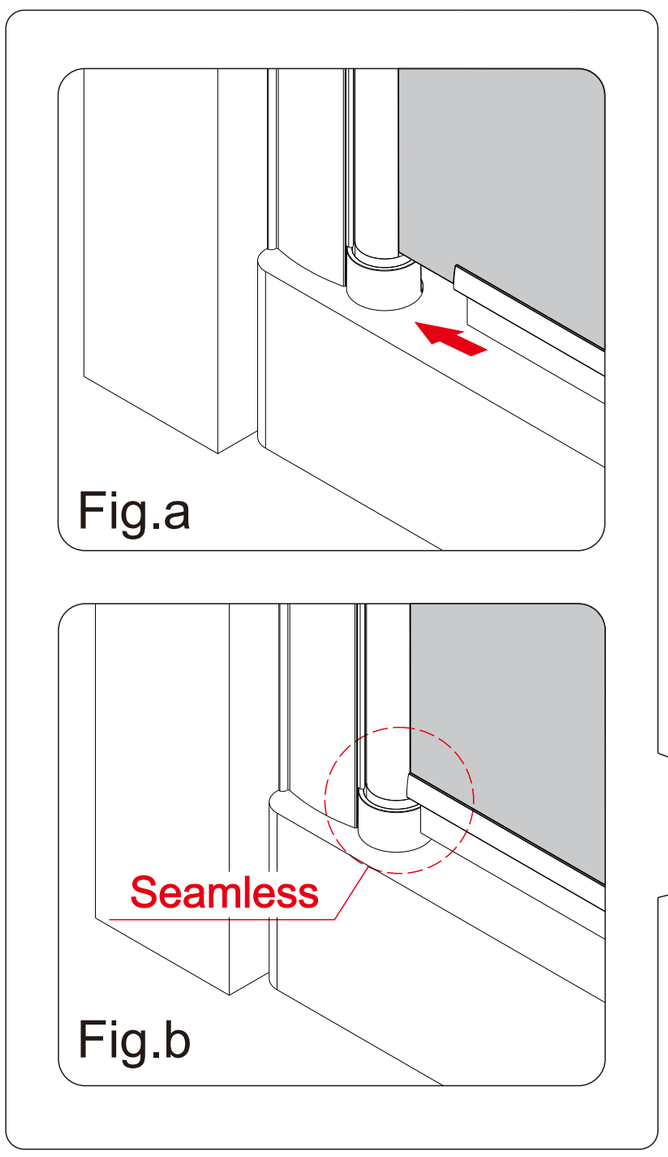
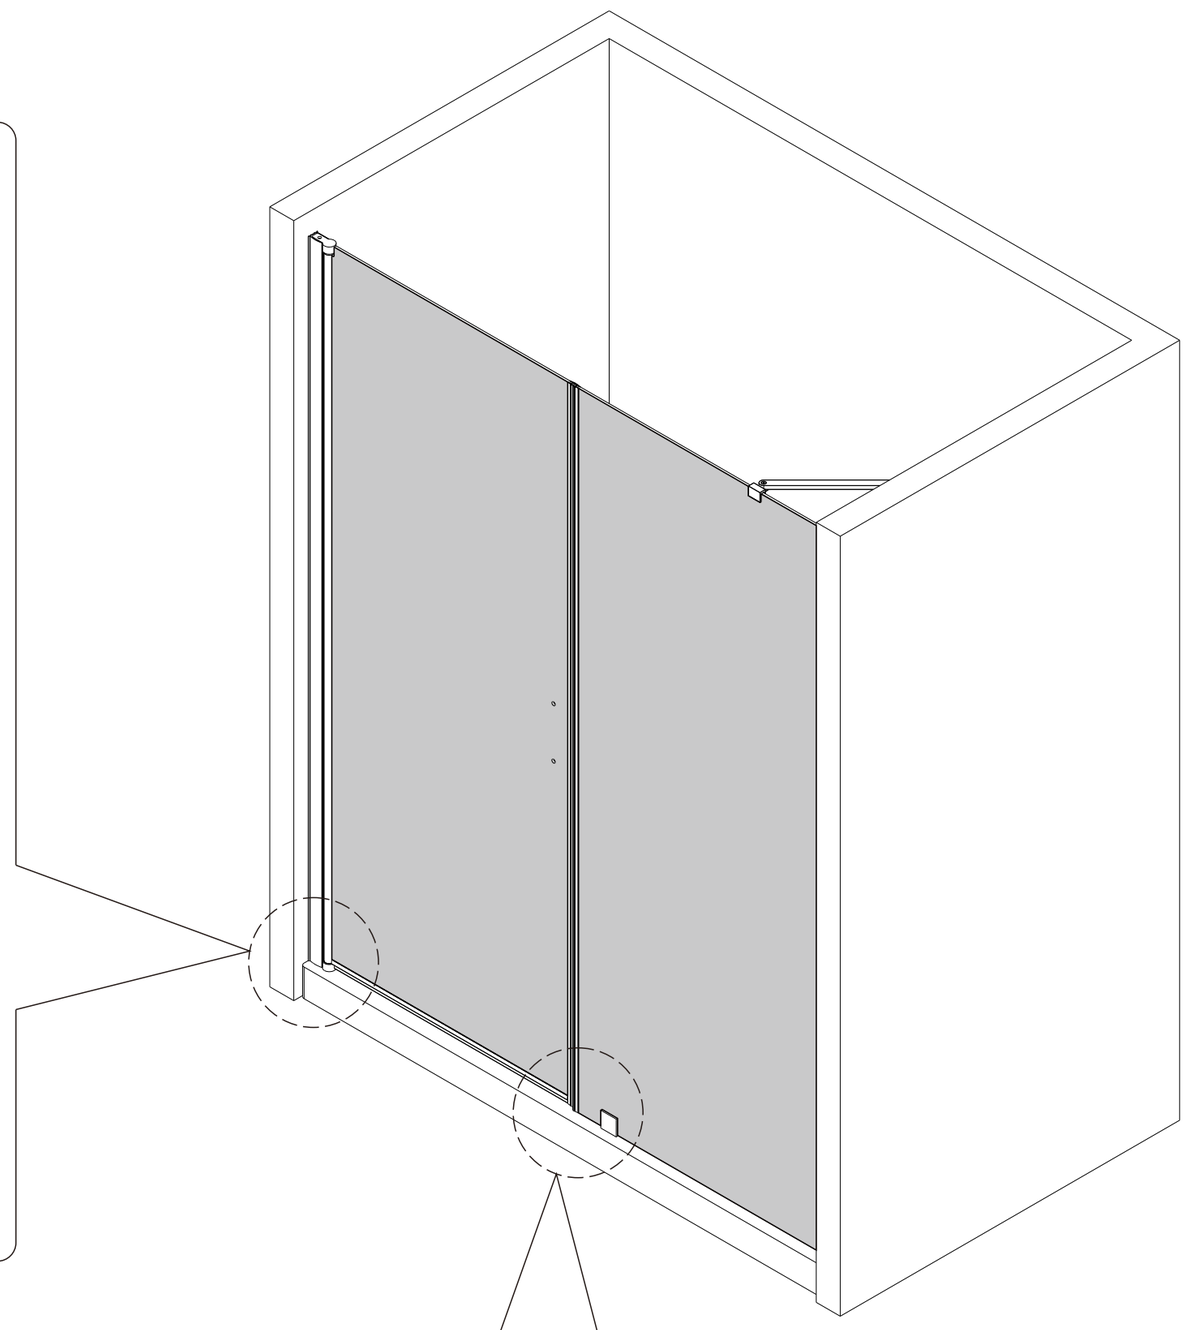


Fig.a

Fig.b



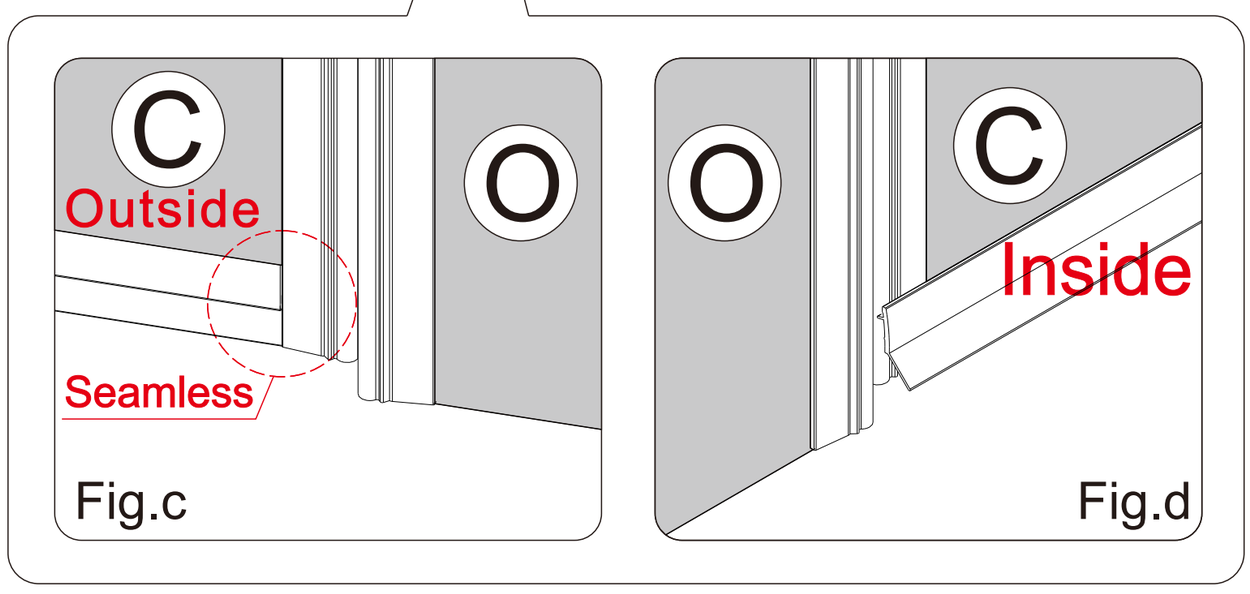


Fig.c

Fig.d

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

18 Install the **Alu. Threshold(N)** and **Connector(L&M)**

NOTE

1.Apply glass glue to the bottom of the **Alu.Threshold(N)** to prevent water seepage as Fig.a
2.Install the **Alu. Threshold(N)** and **Connector(L&M)** as Fig.b

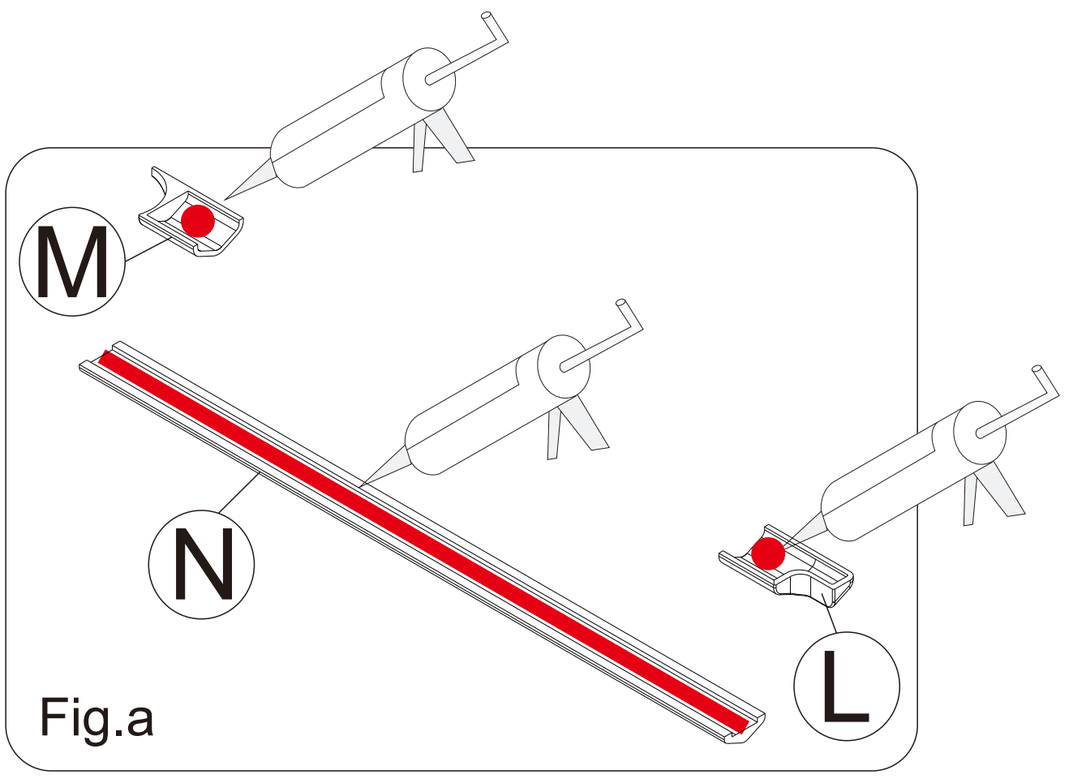
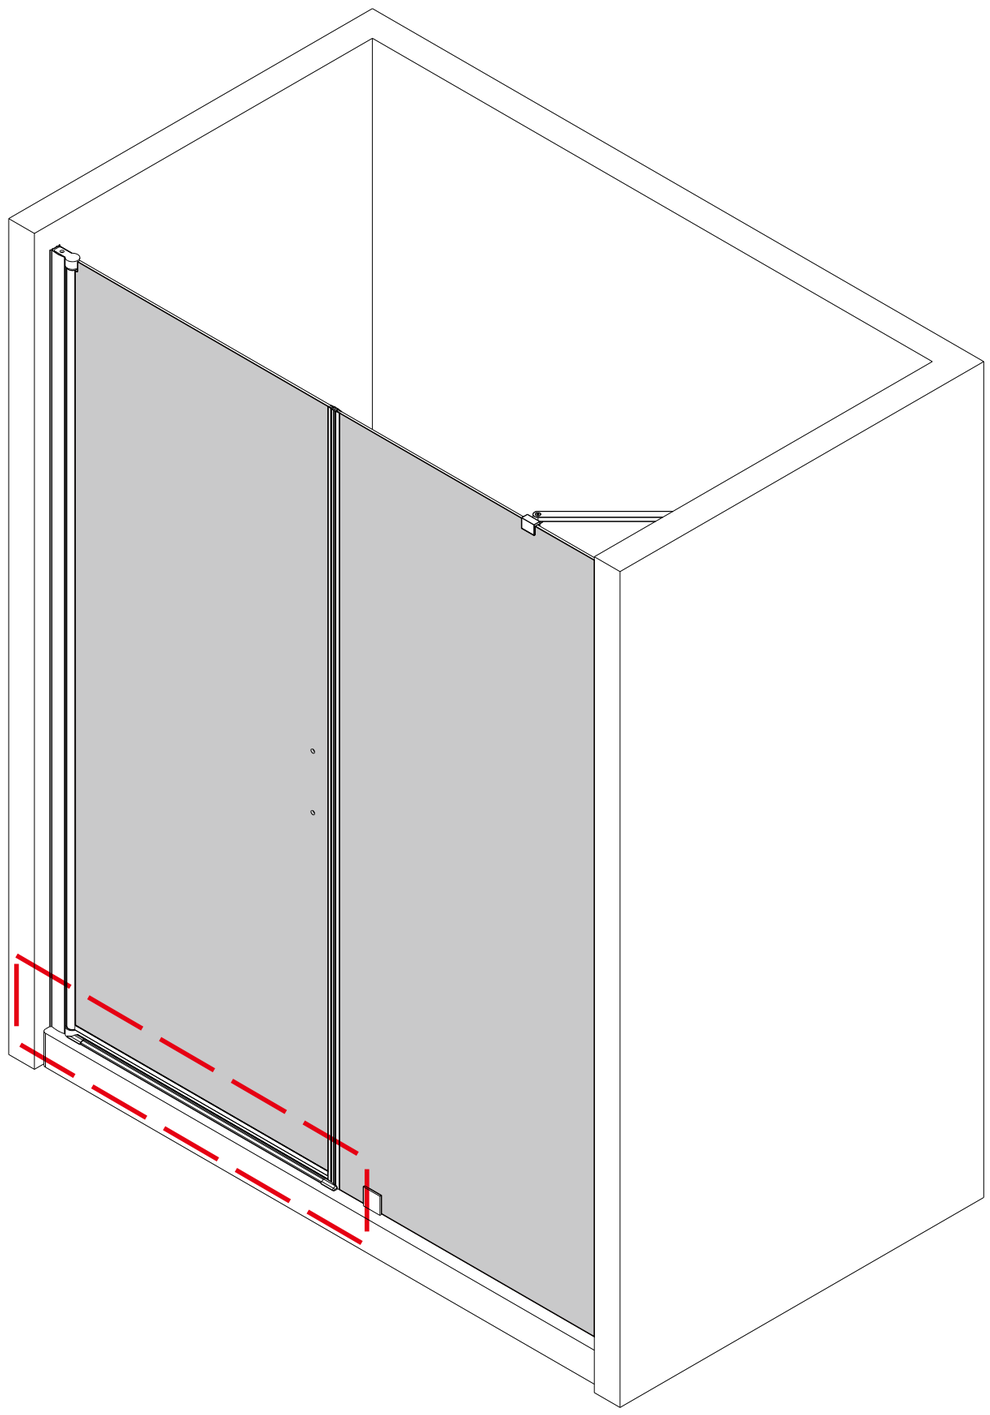


Fig.a



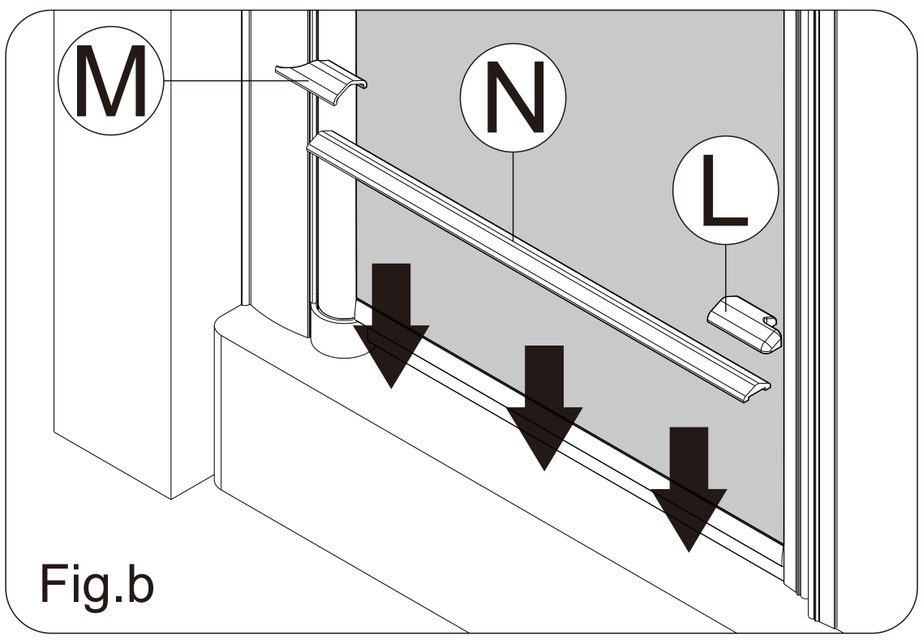


Fig.b

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

19 Install **Handle(J)**

NOTE 1.Install the **Handle(J)** on the **Glass Door(C)** as Fig.a .


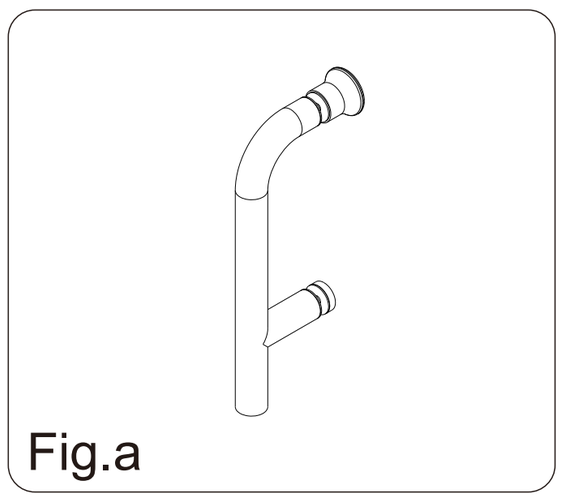


Fig.a

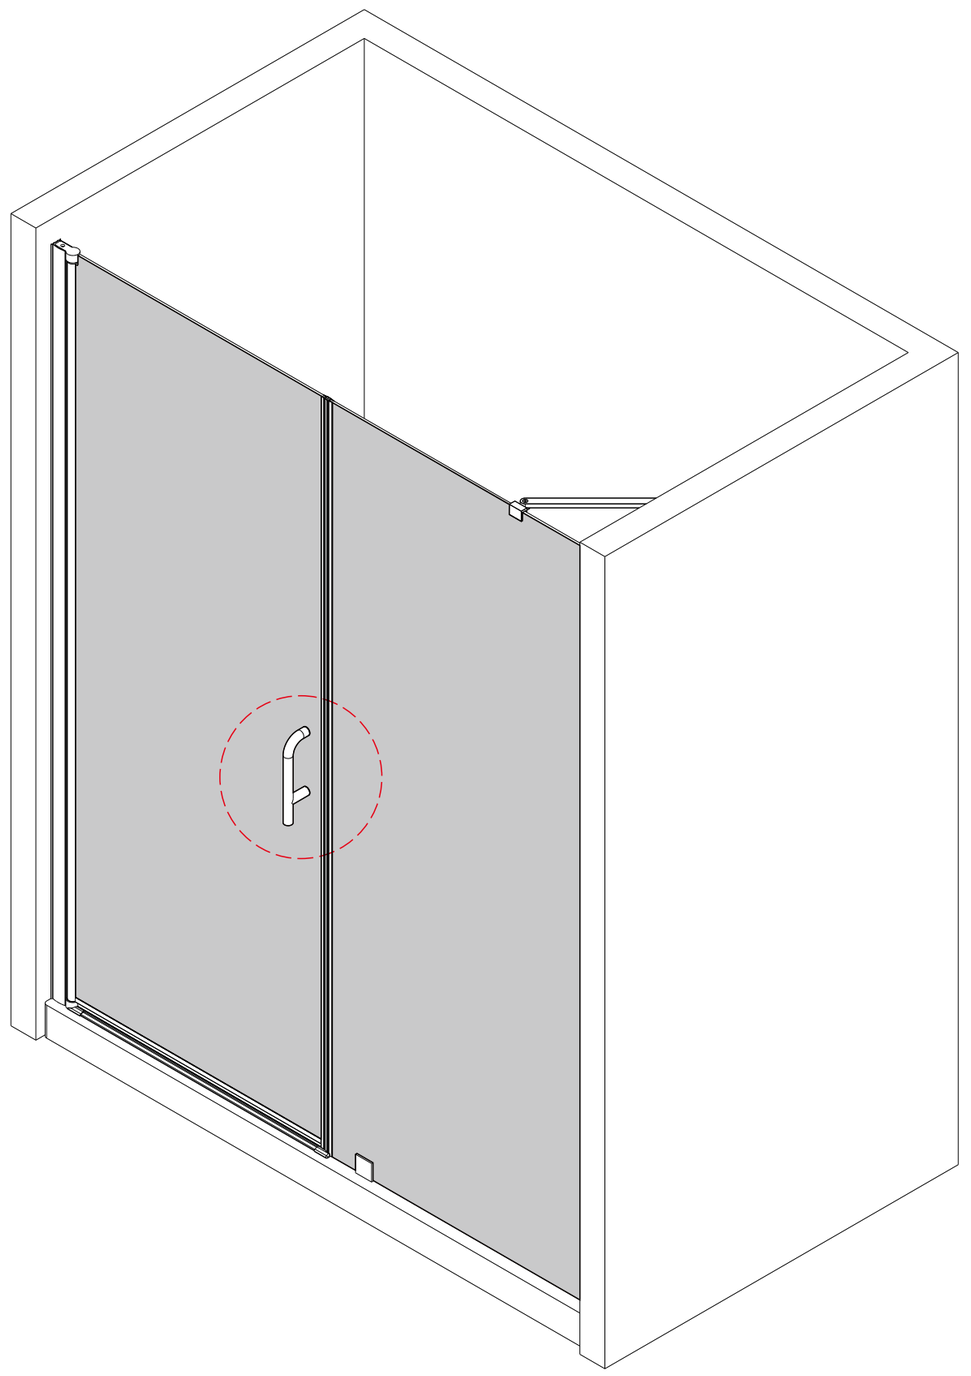

Note: The shower door can be installed left or right, according to the need to determine the installation direction.

20 SEALING


NOTE


The surfaces need to be clean and free of debris before applying silicone.

NOTE

Make sure that the Shower door closes tightly and opens smoothly.
Apply a good quality silicone sealant along the **Wall Jamb(A&H)** and **Alu. Threshold(N)**.

Allow 24 hours for the silicone to cure before using the shower.

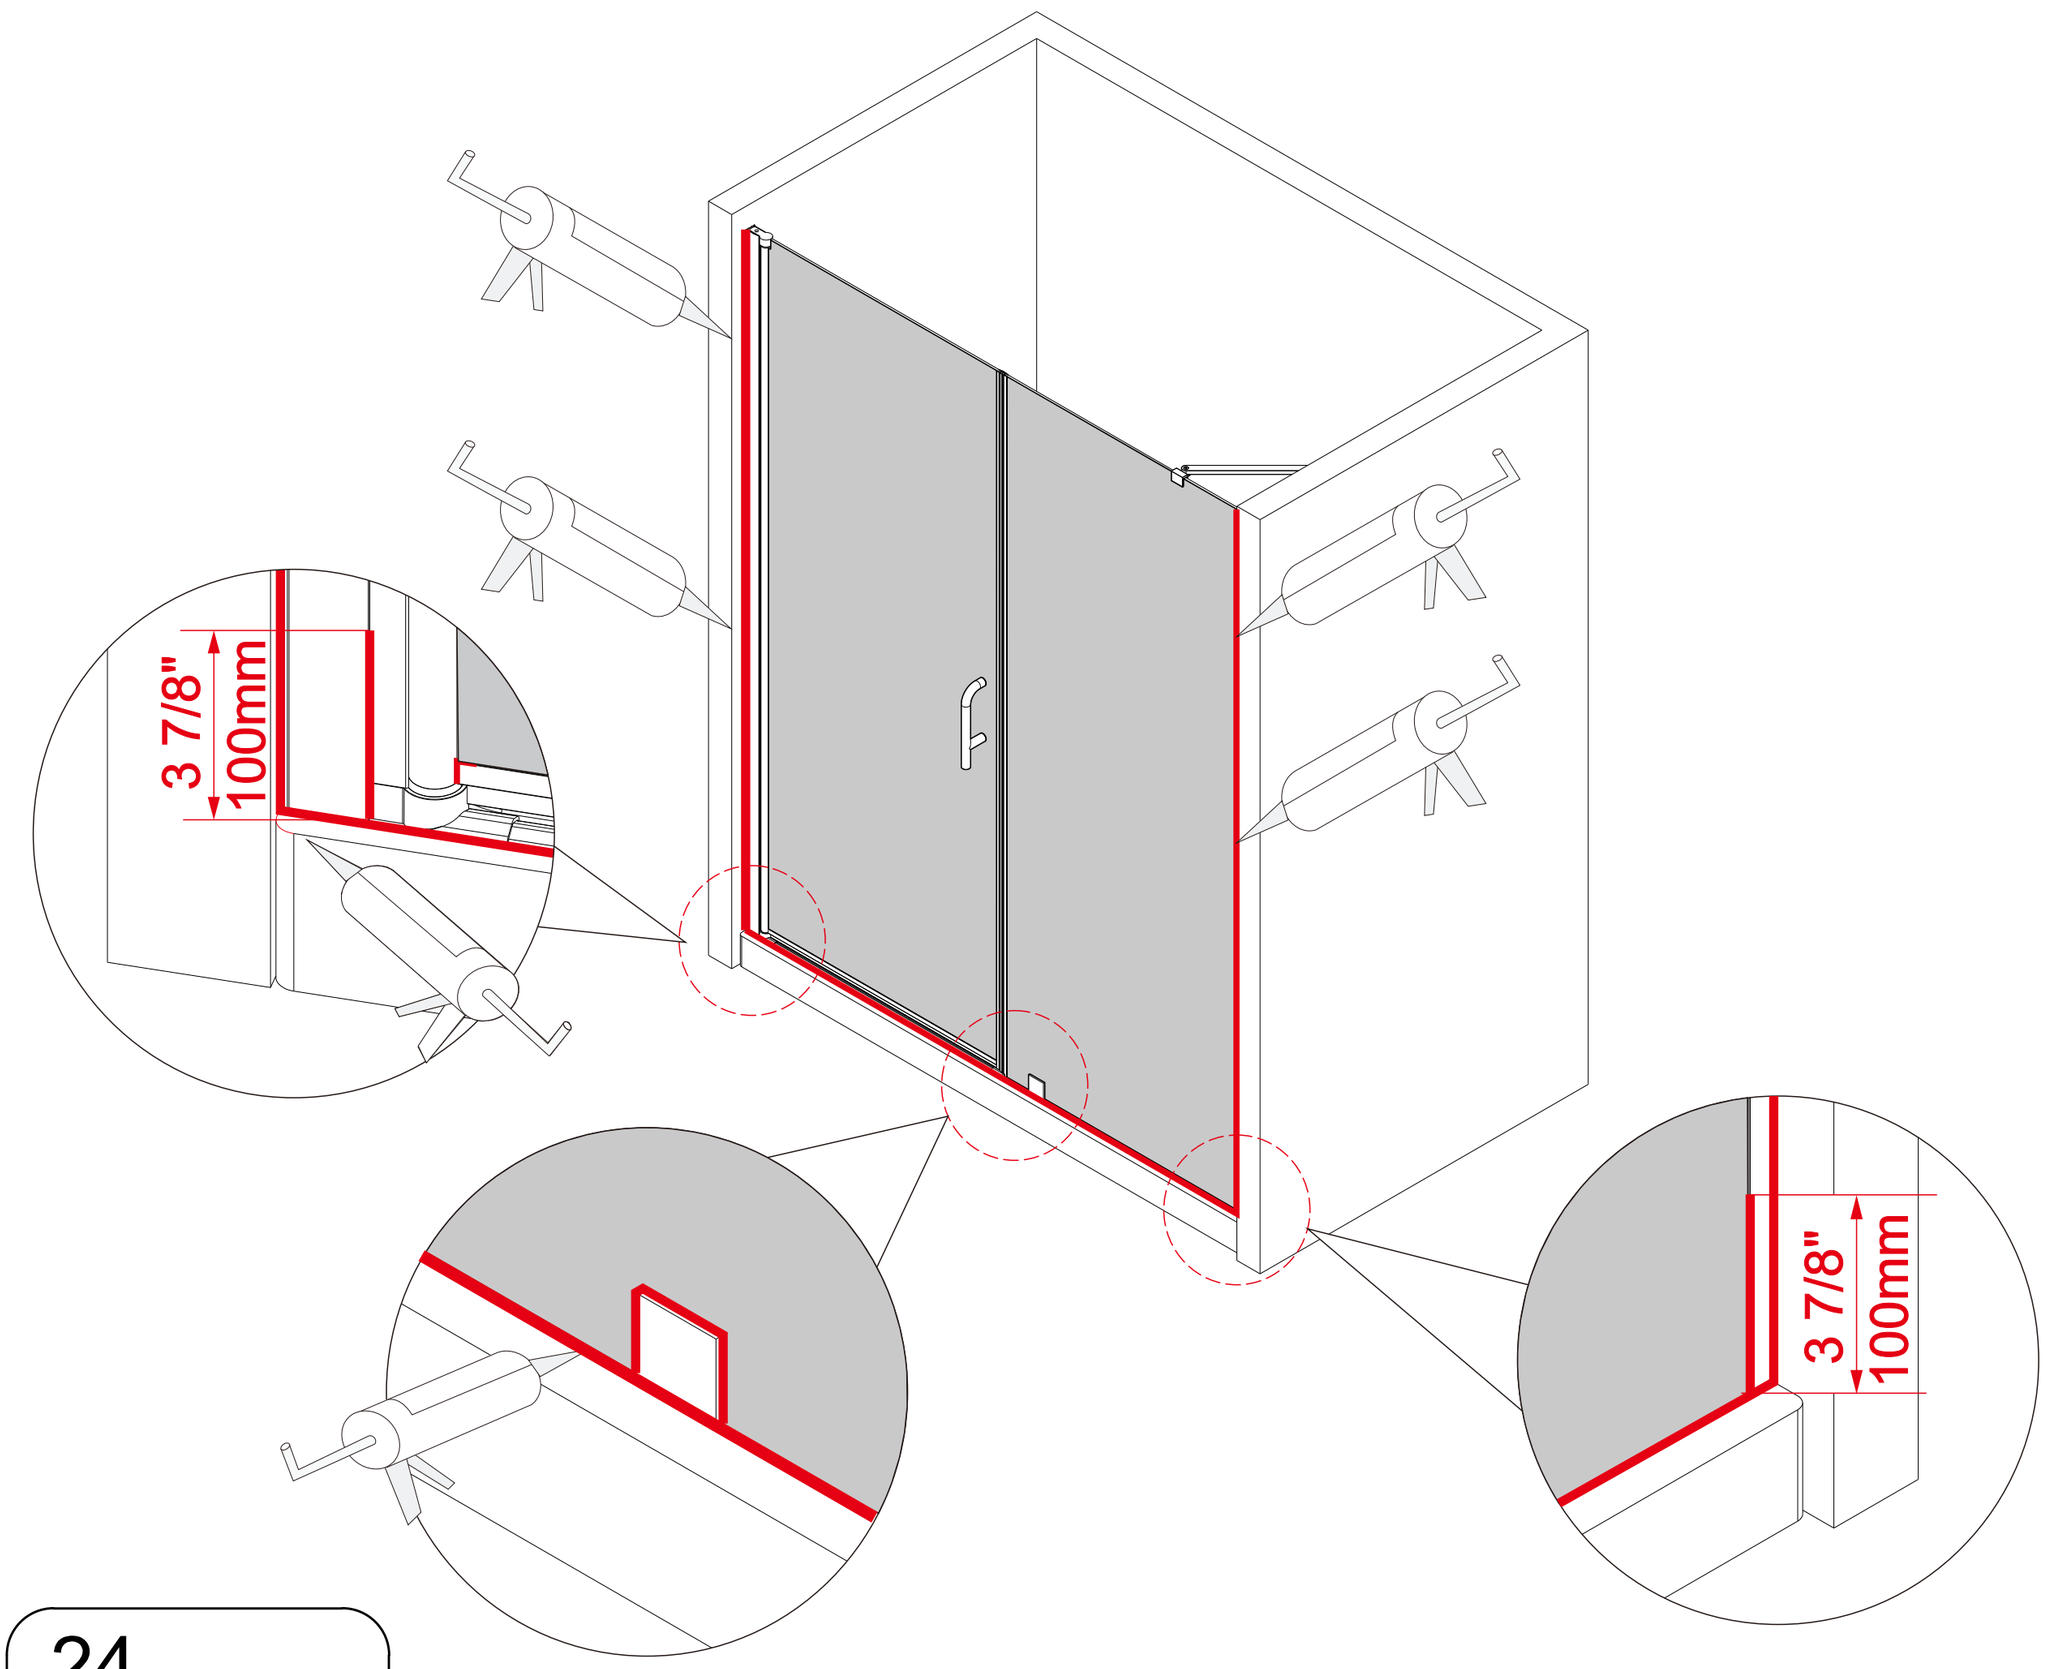

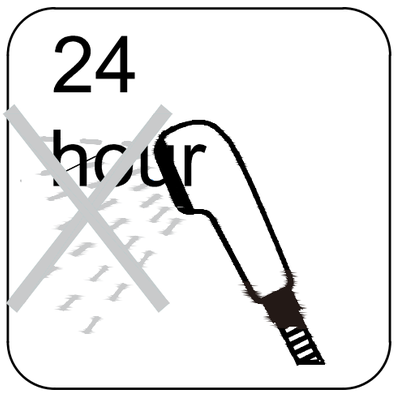

! Apply Silicone Sealant,(not supplied).

The shower room needs to be sealed inside and out

21 SEALING


NOTE

The surfaces need to be clean and free of debris before applying silicone.

NOTE

Make sure that the Shower door closes tightly and opens smoothly.
Apply a good quality silicone sealant along the **Wall Jamb(A&H)**

Allow 24 hours for the silicone to cure before using the shower.

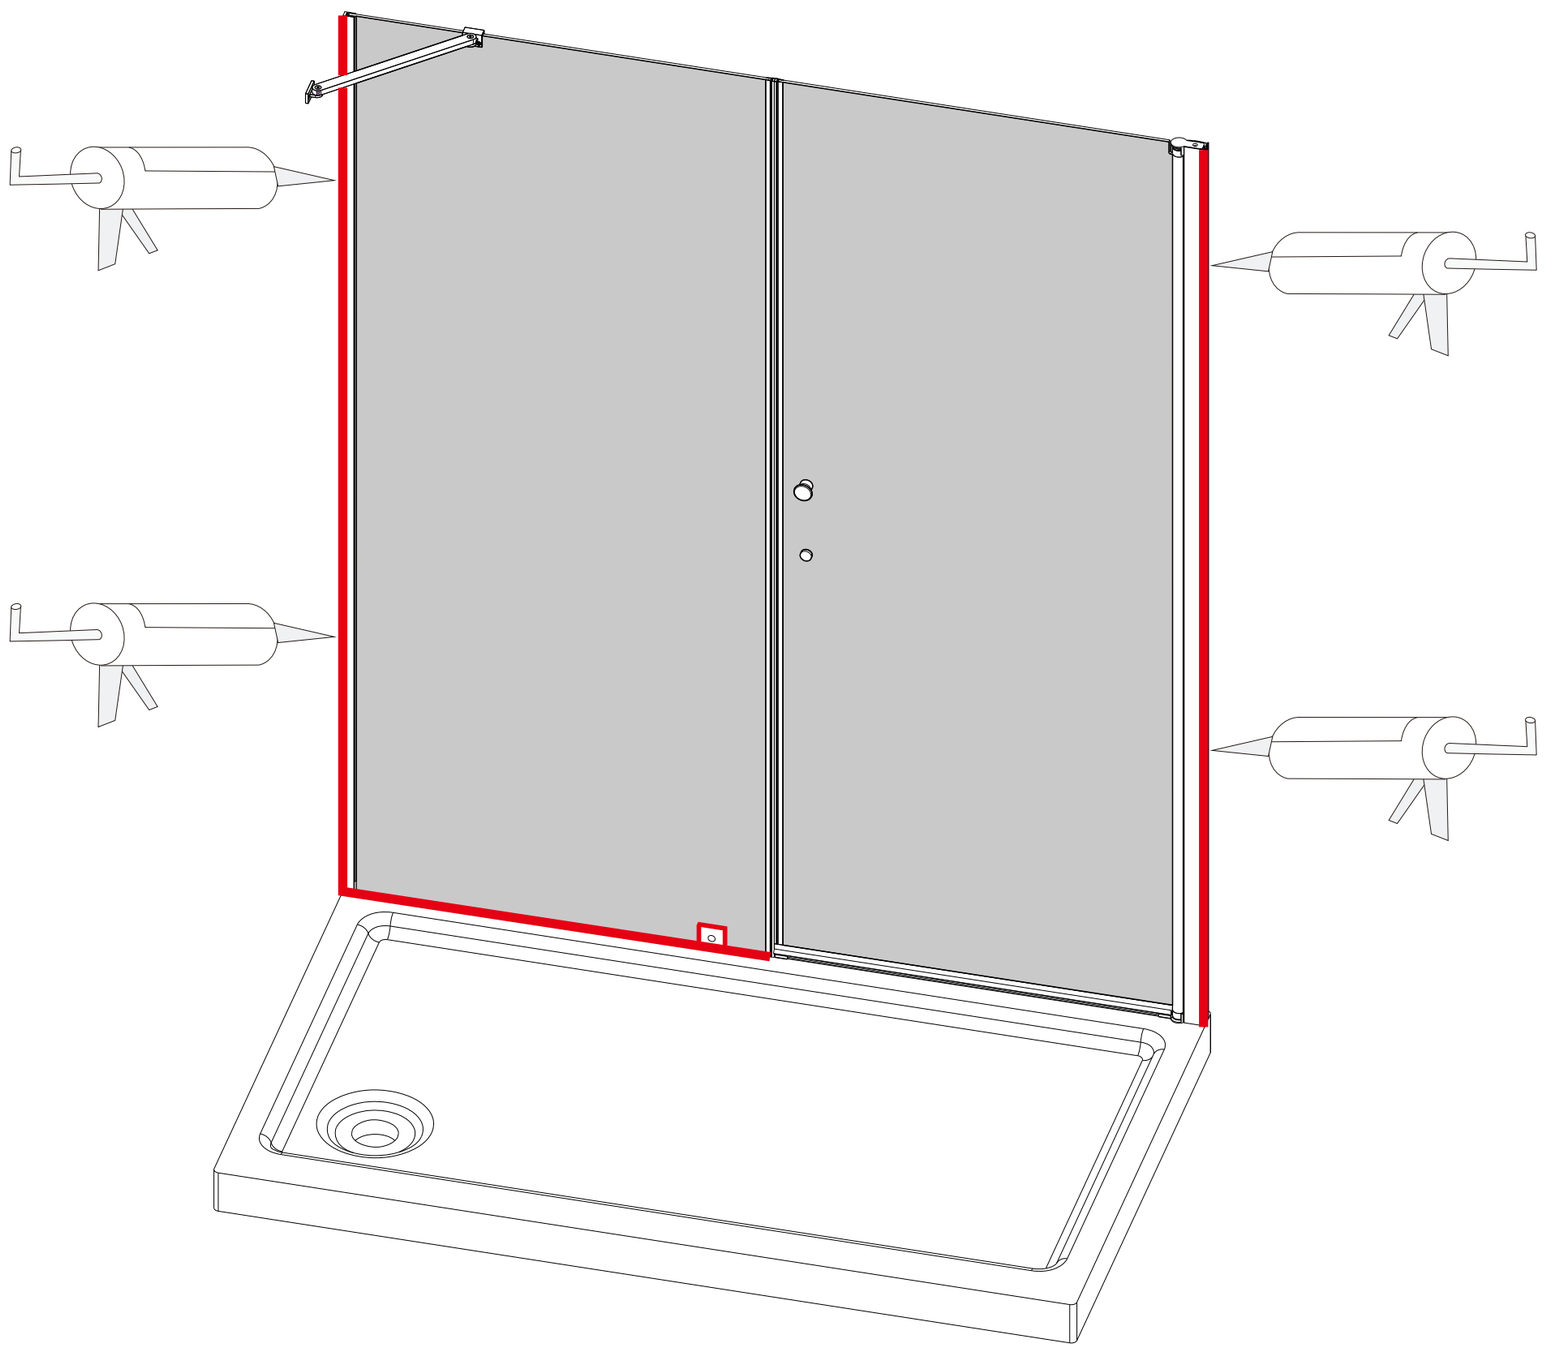



Apply Silicone Sealant,(not supplied).

The shower room needs to be sealed inside and out