


ASSEMBLY INSTRUCTION

N710P510678

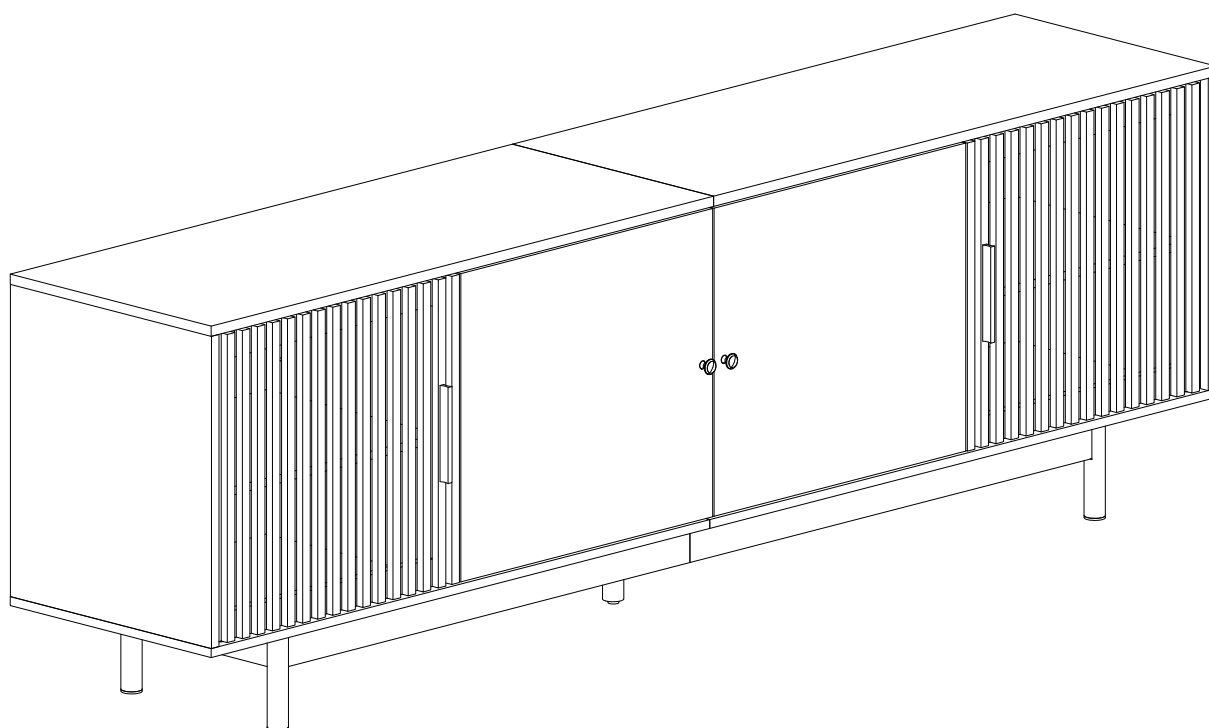











Before Installation

Important-Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.





















Cam Lock Assembly Instructions

		Insert Cam Bolt into hole as shown in diagram A.
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
		Connect the panels together.
		Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
		To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. *Do not use an automatic screwdriver as it may bend or break if too much power is imposed.



Parts list

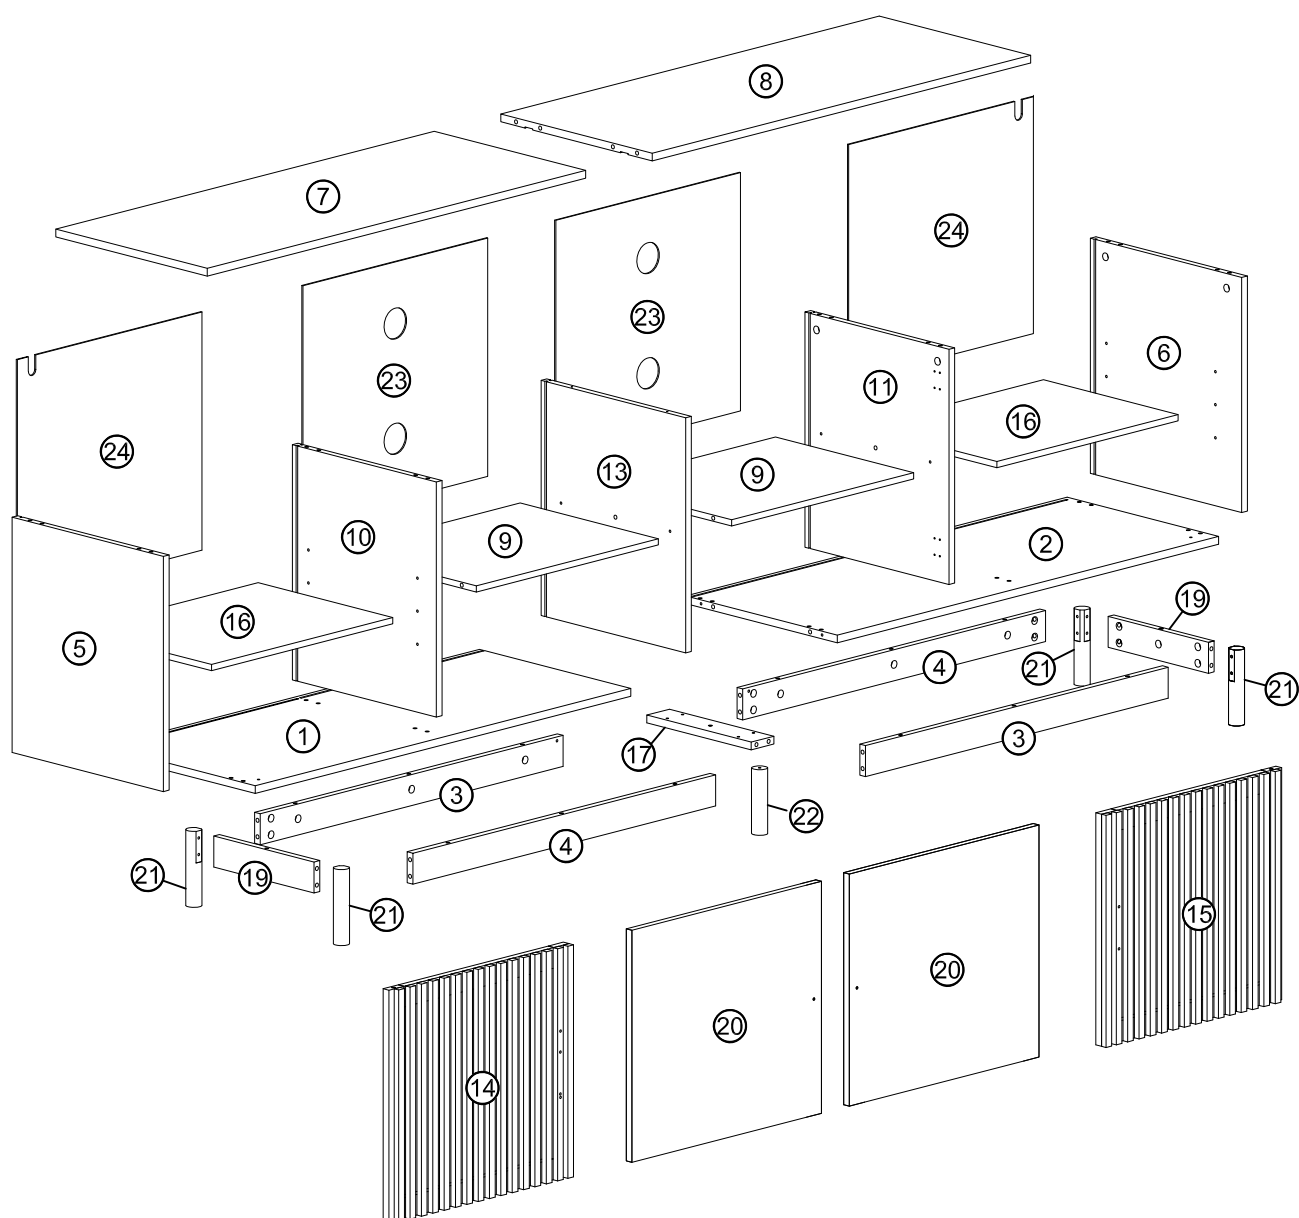

N710P510678

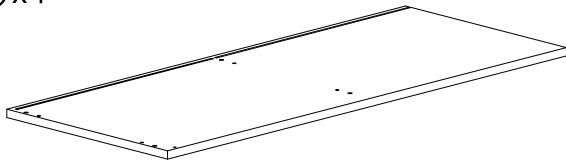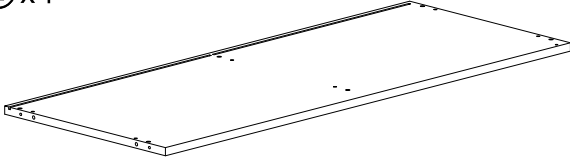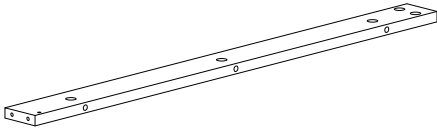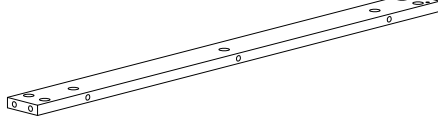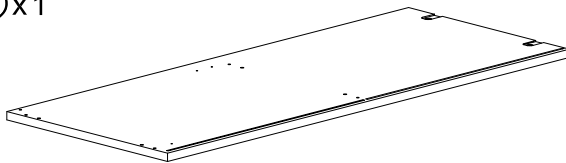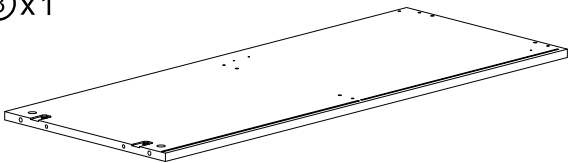①x1 	②x1 	
③x2 	④x2 	
⑤x1 	⑥x1 	
⑦x1 	⑧x1 	
⑨x2 	⑩x1 	⑪x1 
⑬x1 	⑭x1 	⑮x1 
⑯x2 	⑰x1 	⑲x2 
⑳x2 	㉑x4 	㉒x1 
㉓x2 	㉔x2 	

Hardware N710P510678

A	x58	B	x58	C	x24	D	x11	E	x4	F	x44
											
Φ6x36mm		Φ15mm		Φ6x30mm		Φ7x48mm		M6x10mm		Φ3.5x12mm	
G	x4	H	x2	J	x2	K	x16	L	x1	M	x2
				J1x1 J2x1 Φ4x14mm						M1x1 M2x2 M4x30mm	
Φ4x25mm		Φ4x35mm				15x10mm		4mm		140mm	
N	x2	P	x2	Q	x1	R	x2	S	x8	T	x4
N1x1 N2x1 M4x18mm		P1x1 P2x1 Φ4x45mm Φ8x35mm				R1x1 R2x1 R3x2 Φ3x15mm					
				Φ19mm				Φ5mm			
U	x4	V	x1	W	x2	X	x4	Y	x18		
											
		Φ6x60mm						Φ20mm			

G	x4	H	x2
			
Φ4x25mm		Φ4x35mm	

(DE) Bitte beachten Sie, dass die Formen der Schrauben G und H ähnlich sind. Bitte installieren Sie entsprechend der Anleitung und unterscheiden Sie sie

(UK) Please note that the shapes of screws G and H are similar. Please install according to the instructions and distinguish them!

(FR) Notez que les vis G et H ont des formes similaires. Veuillez les installer en suivant les instructions pour les séparer!




(IT) Si prega di notare che le forme delle viti G e H sono simili. Si prega di installarle seguendo le istruzioni e di distinguerle!

(ES) Por favor, tenga en cuenta que las formas de los tornillos G y H son similares. Por favor, instálelos de acuerdo con las instrucciones y distíngalos.


(NL) Let op, de vormen van schroeven G en H zijn vergelijkbaar. Installeer volgens de instructies en maak onderscheid tussen ze!

(SE) Observera att formerna på skruvarna G och H är lika. Installera enligt anvisningarna och särskilj dem!

(PL) Zauważ, że kształty śrub G i H są podobne. Zainstaluj zgodnie z instrukcjami i rozróżnij je!

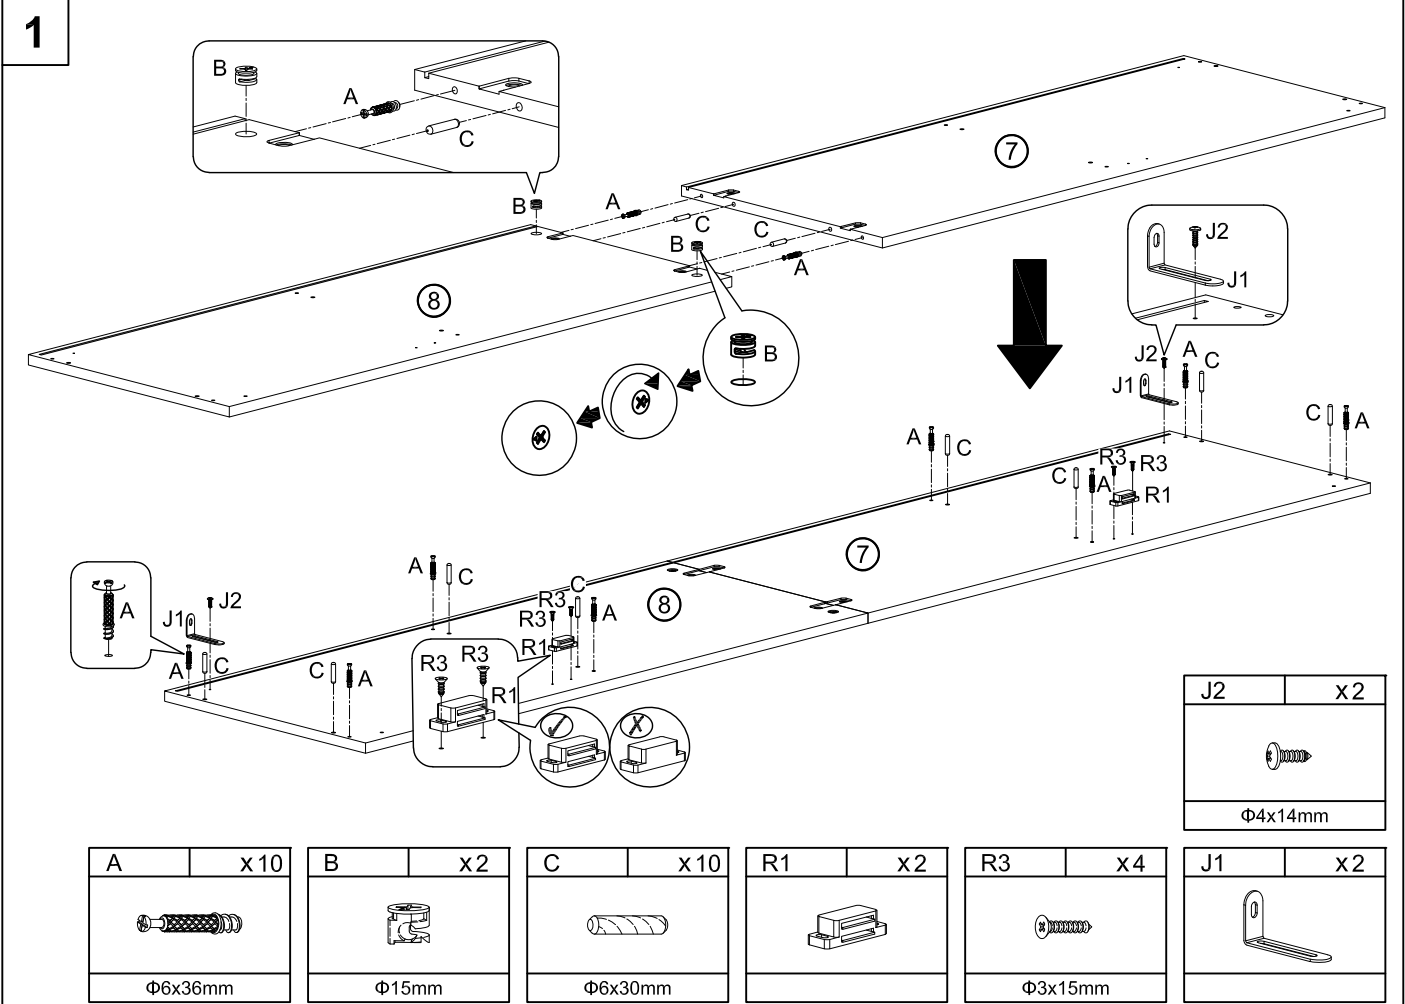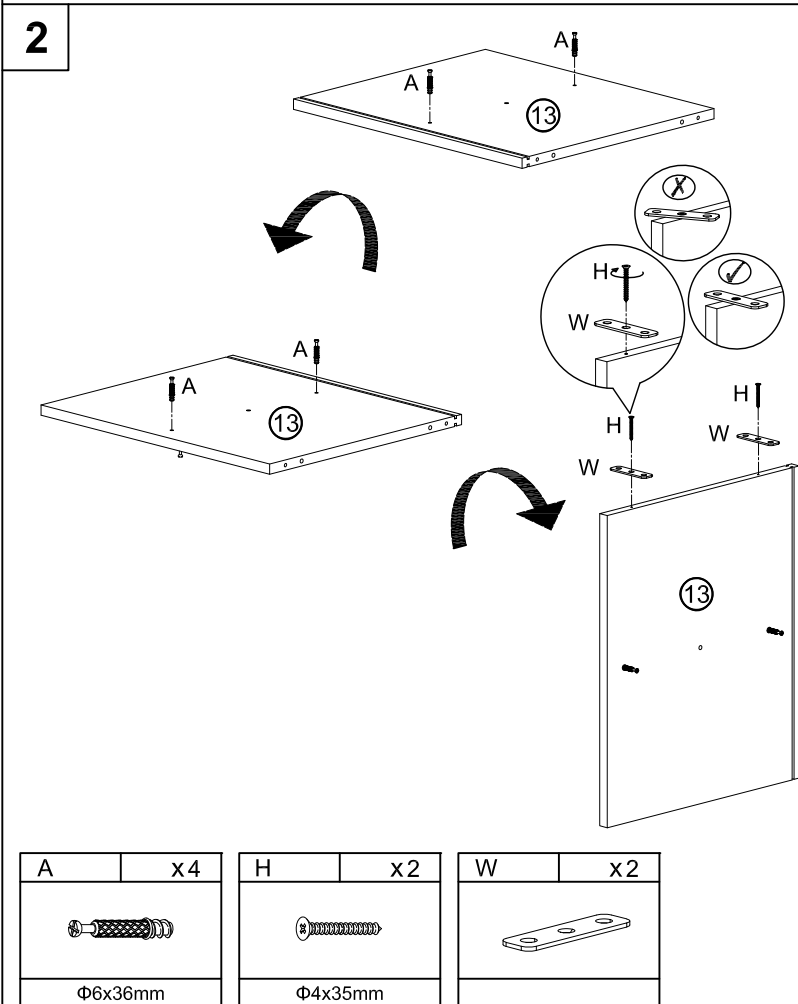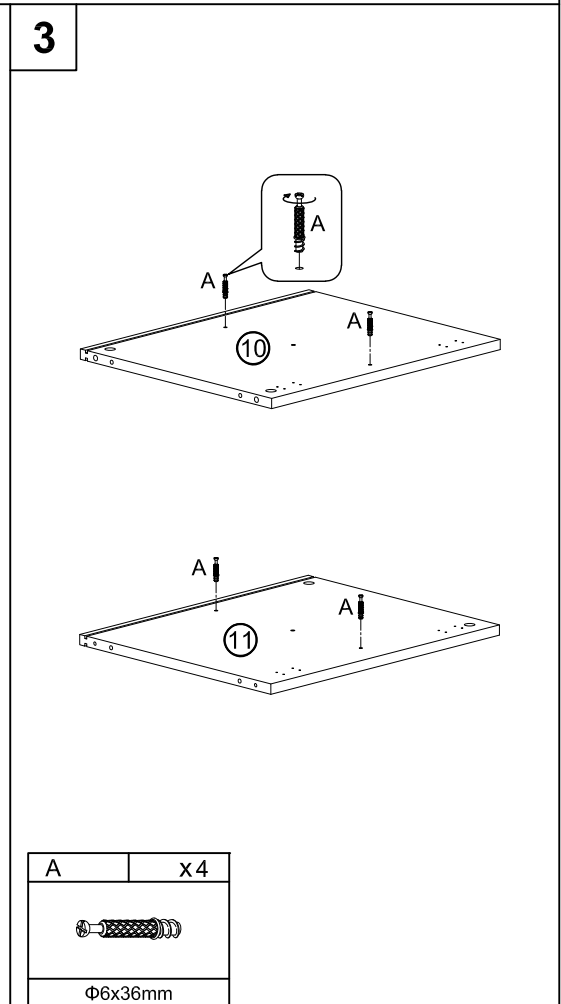

4

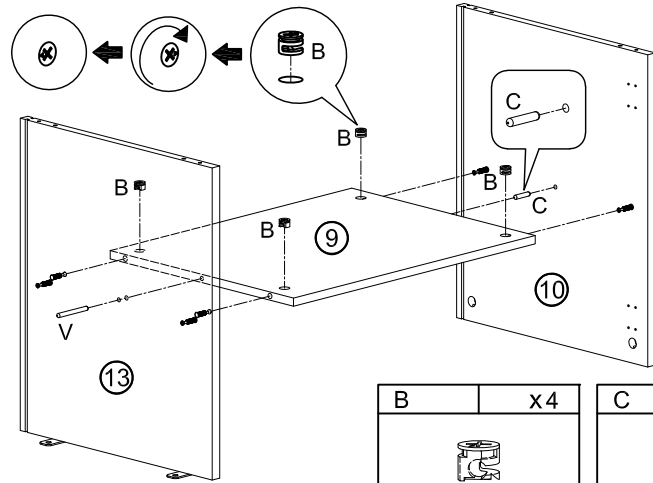


B	x4
Φ15mm	

C	x1
Φ6x30mm	

V	x1
Φ6x60mm	


5

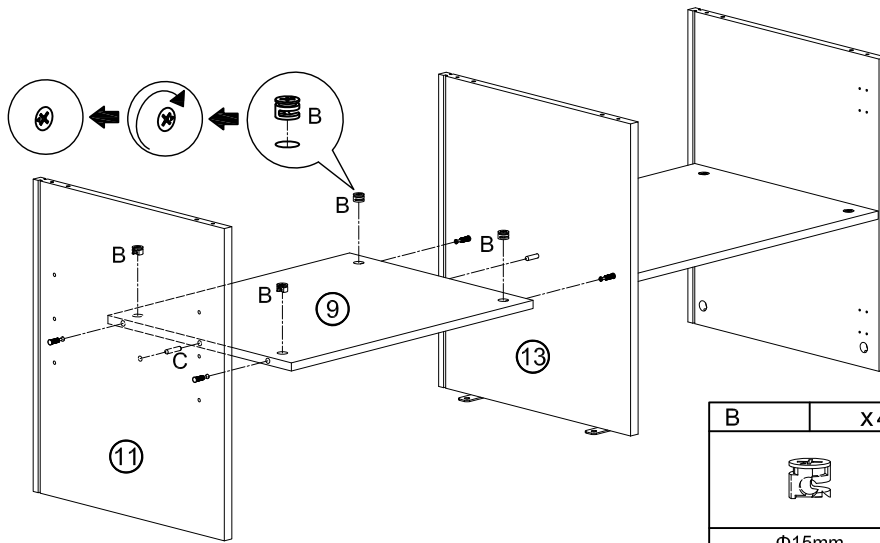

B	x4
Φ15mm	

C	x1
Φ6x30mm	

6

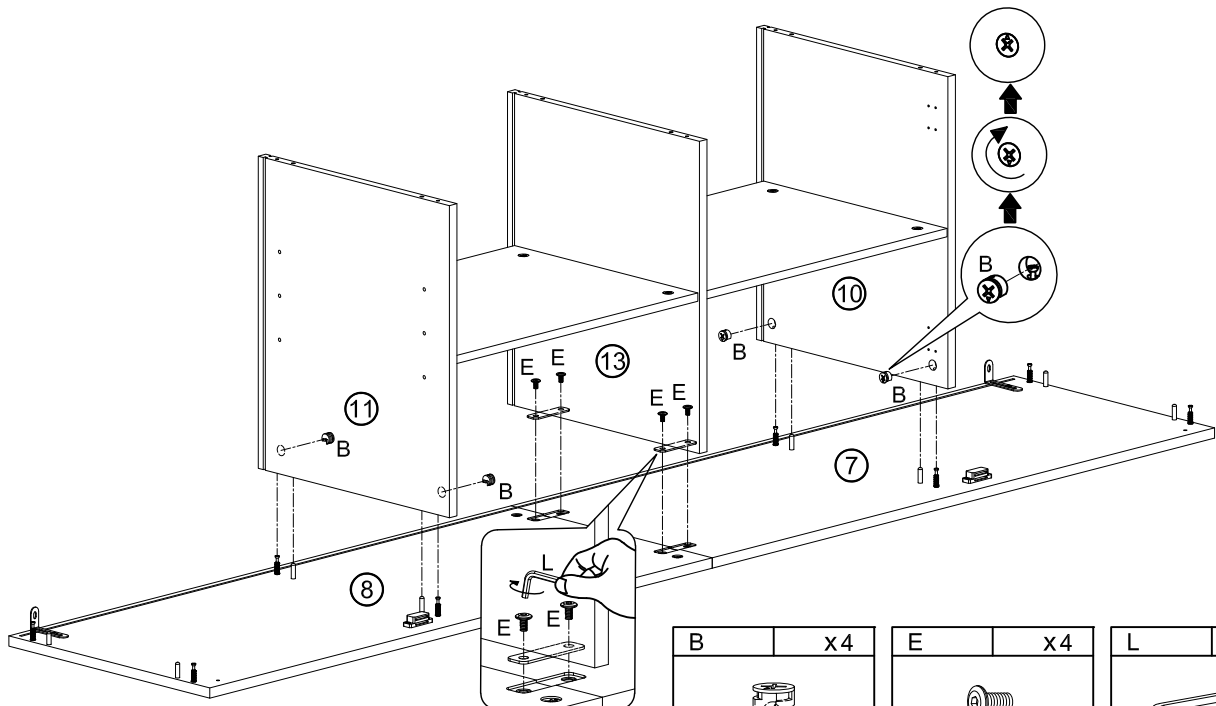


B	x4
Φ15mm	

E	x4
M6x10mm	


L	x1
4mm	

7

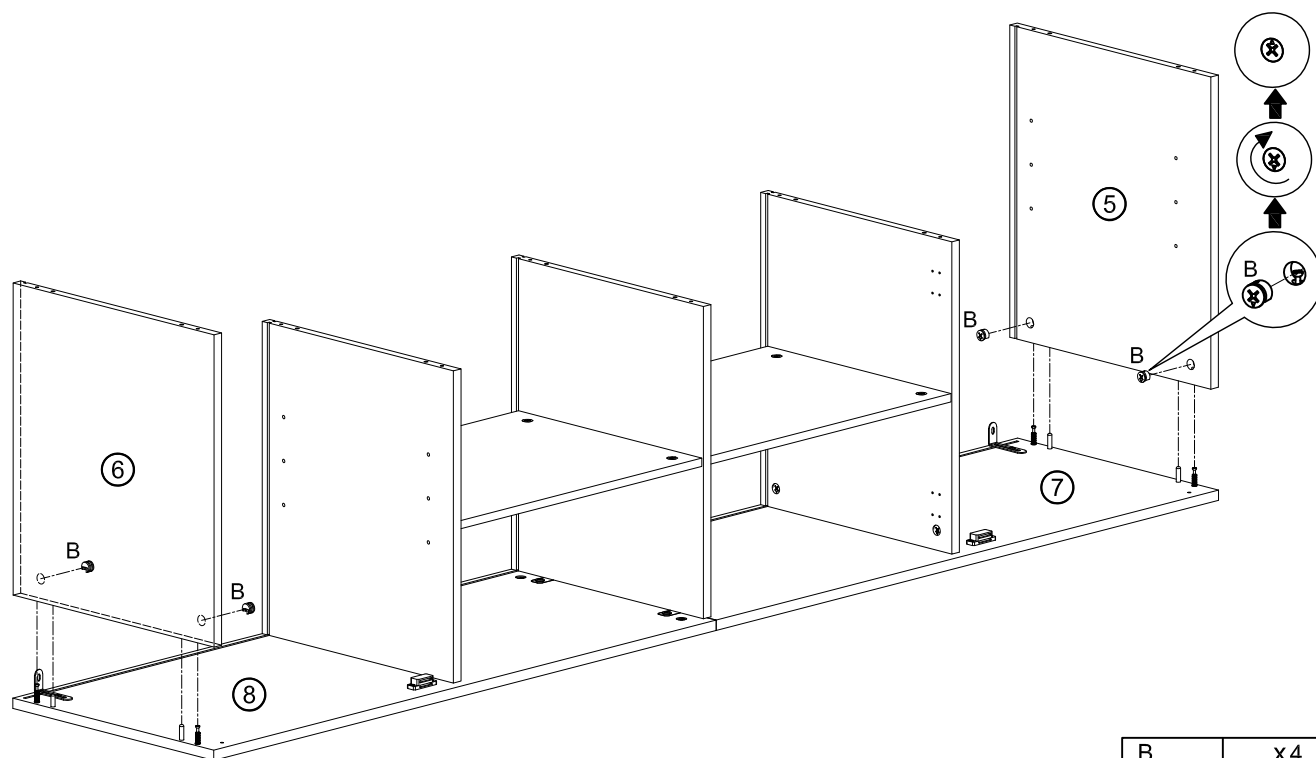


B	x4
	
Φ15mm	

8

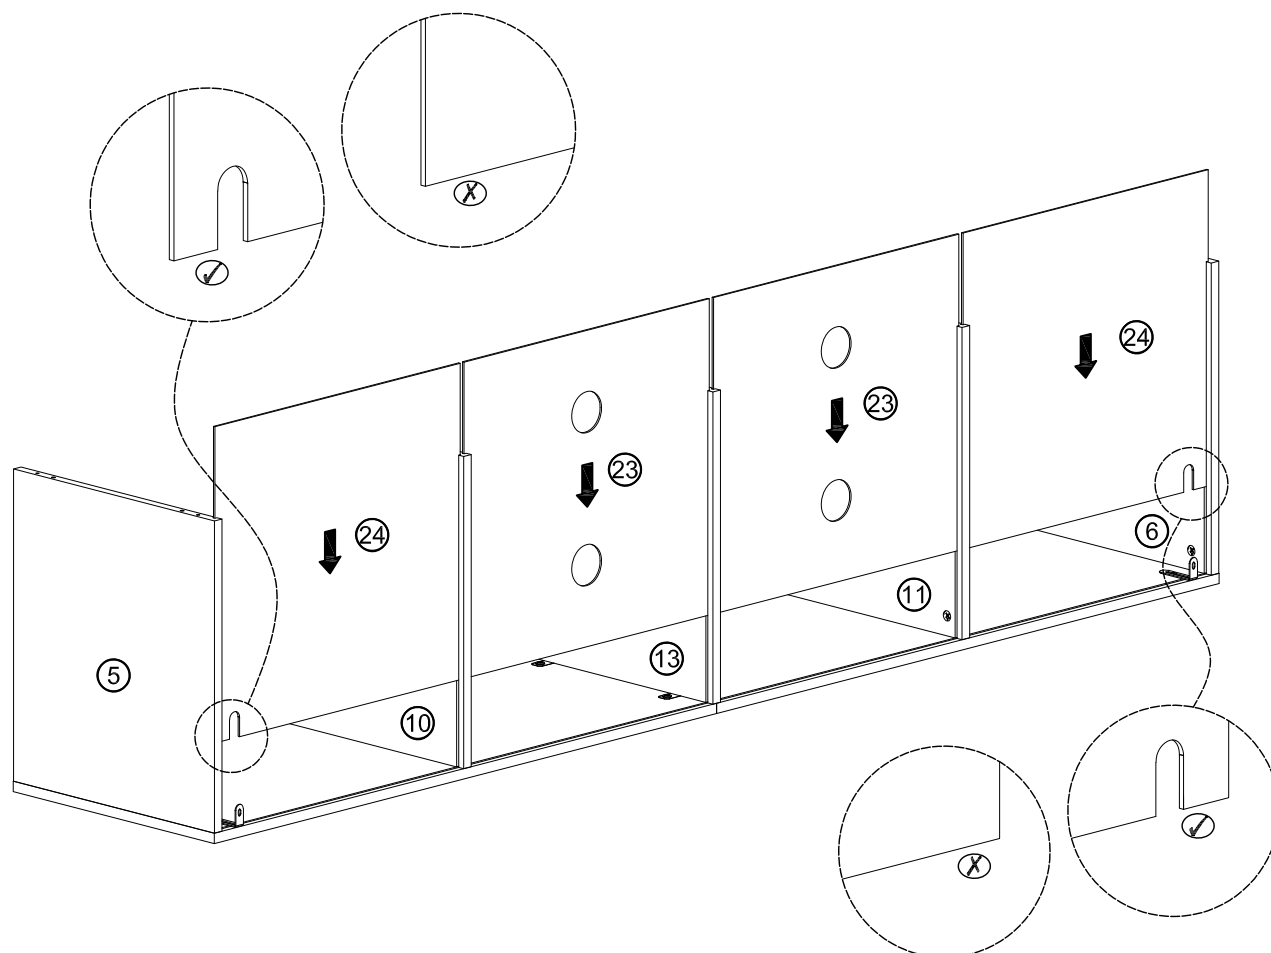


9

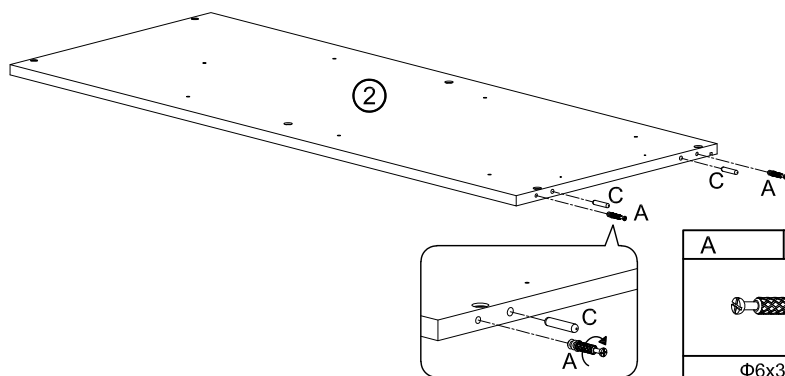

A	x2
	
Φ6x36mm	


C	x2
	
Φ6x30mm	

10

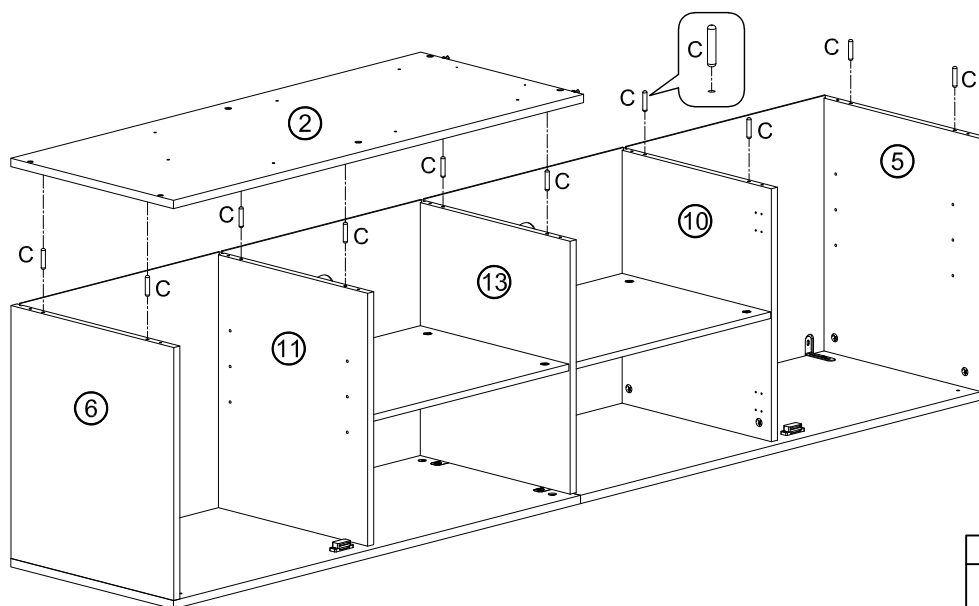


C	x10
	
Φ6x30mm	

11

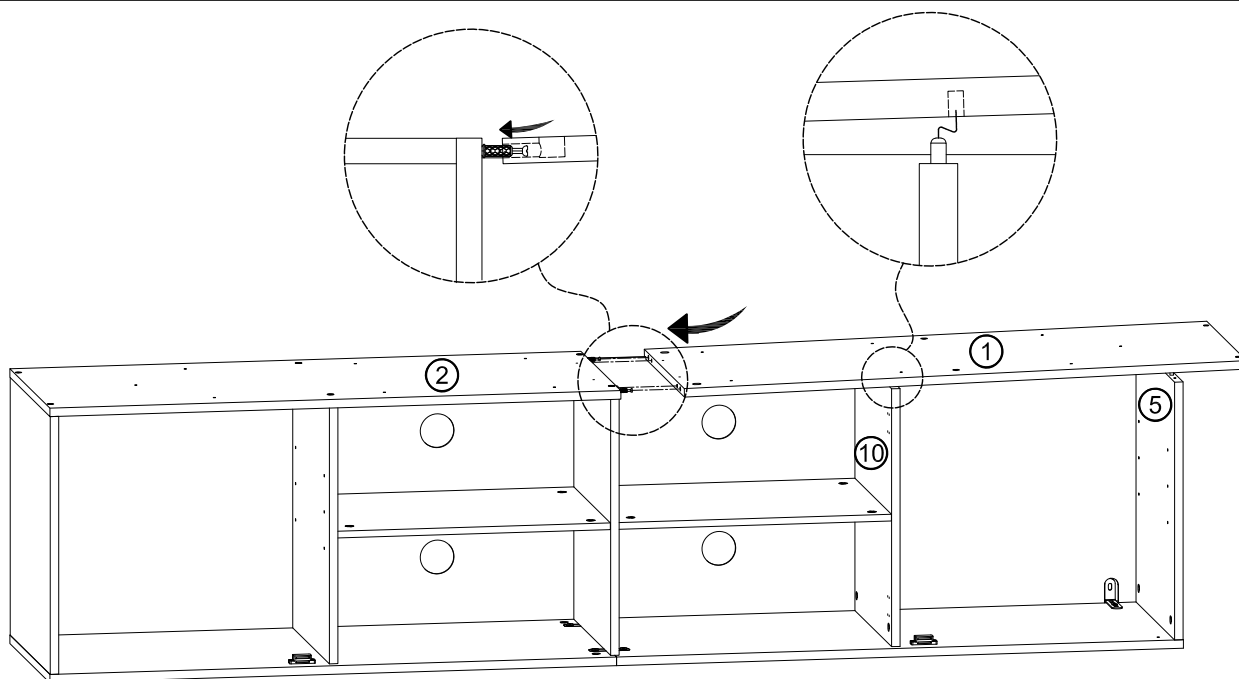


12

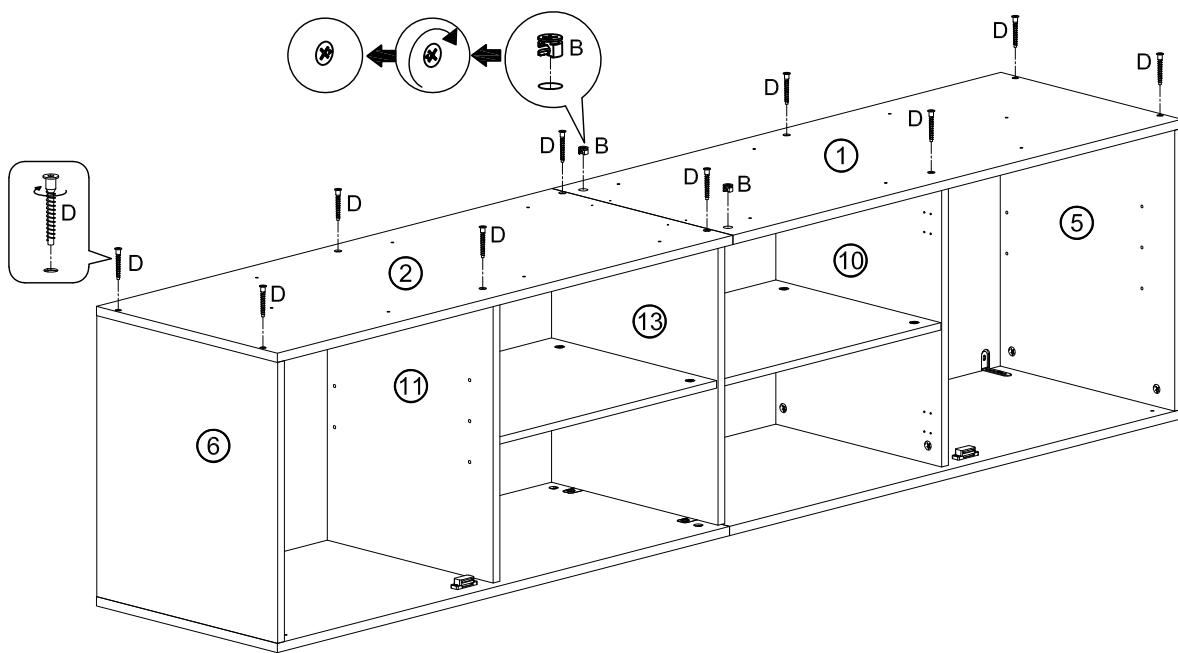


D	x 10	B	x 2
			
Φ7x48mm		Φ15mm	

13

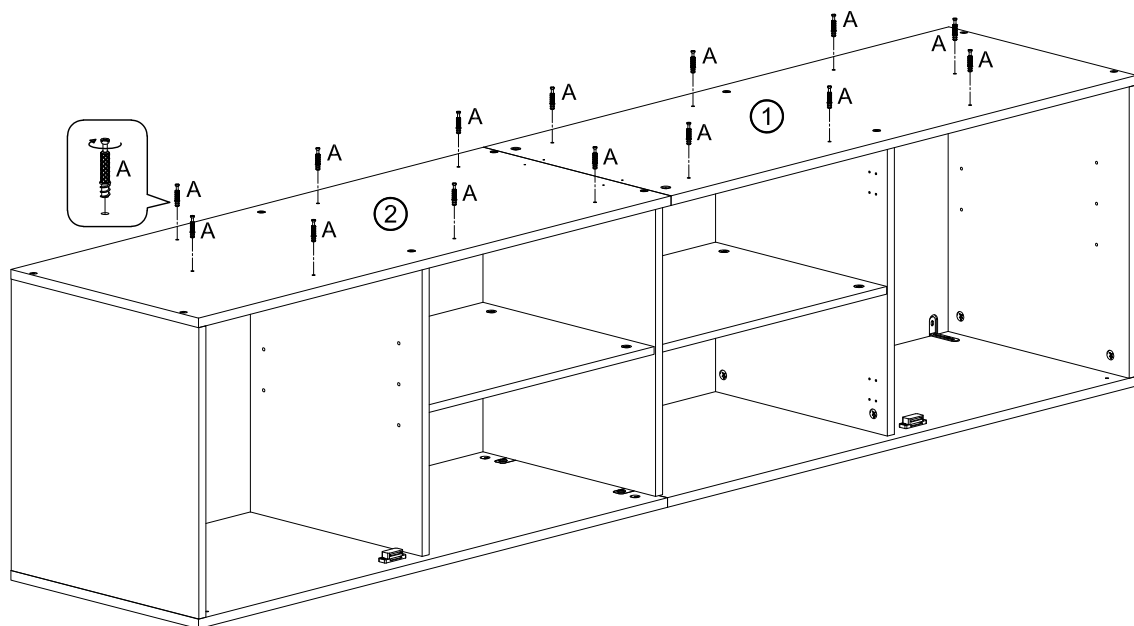


A	x 14
	
Φ6x36mm	


14

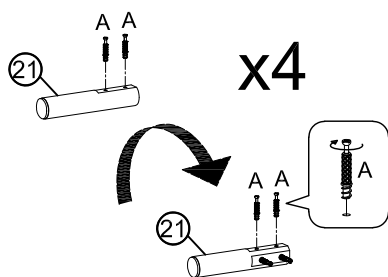


A	x16
	
Φ6x36mm	

15

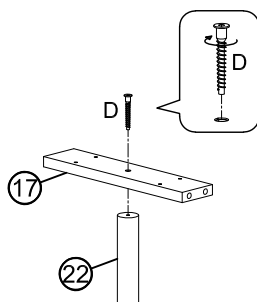


D	x1
	
Φ7x48mm	

16

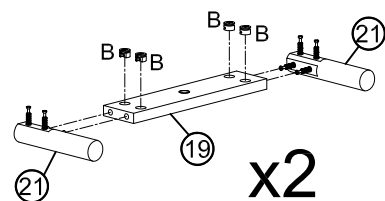


B	x8
	
Φ15mm	

17

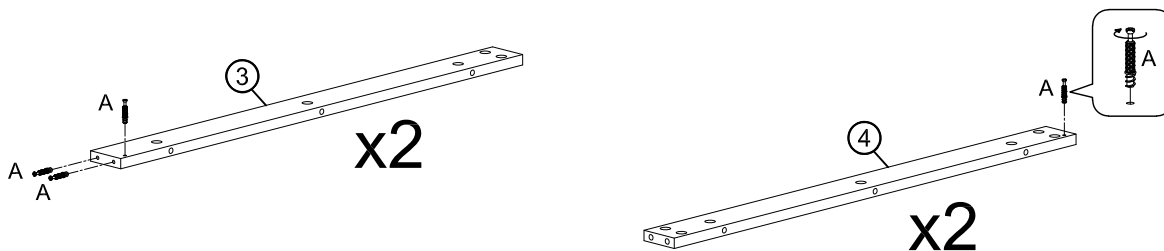


A	x8
	
Φ6x36mm	

18

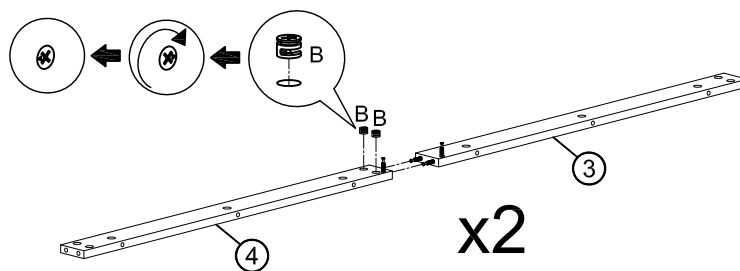

B	x4
	
Φ15mm	


19

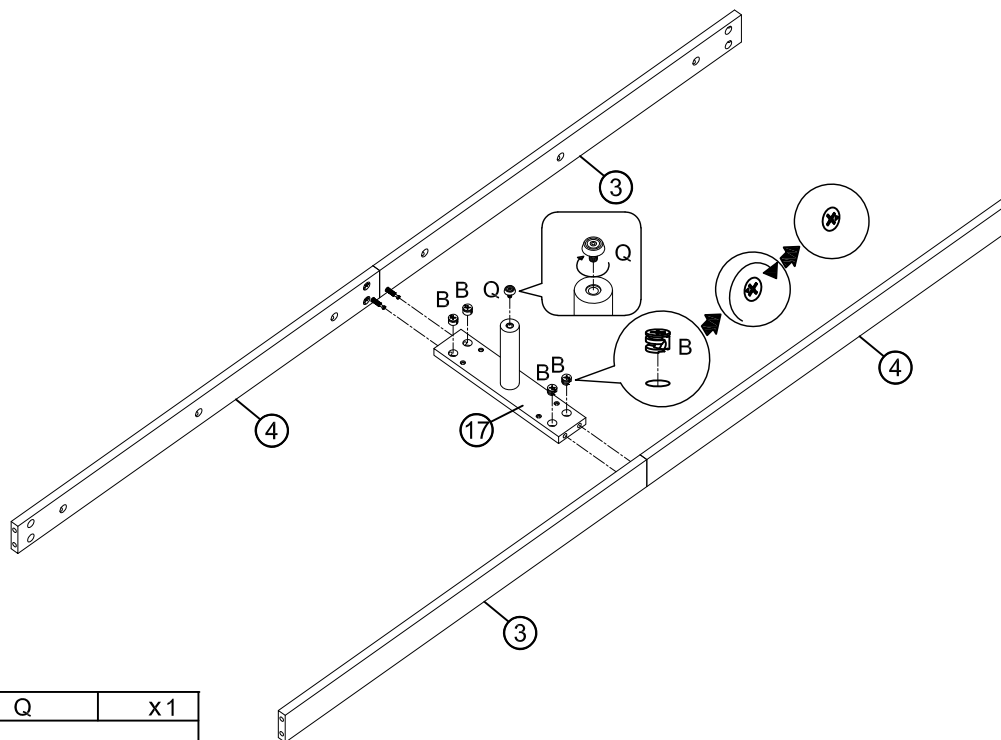

B	x4
	
Φ15mm	


Q	x1
	
Φ19mm	

20

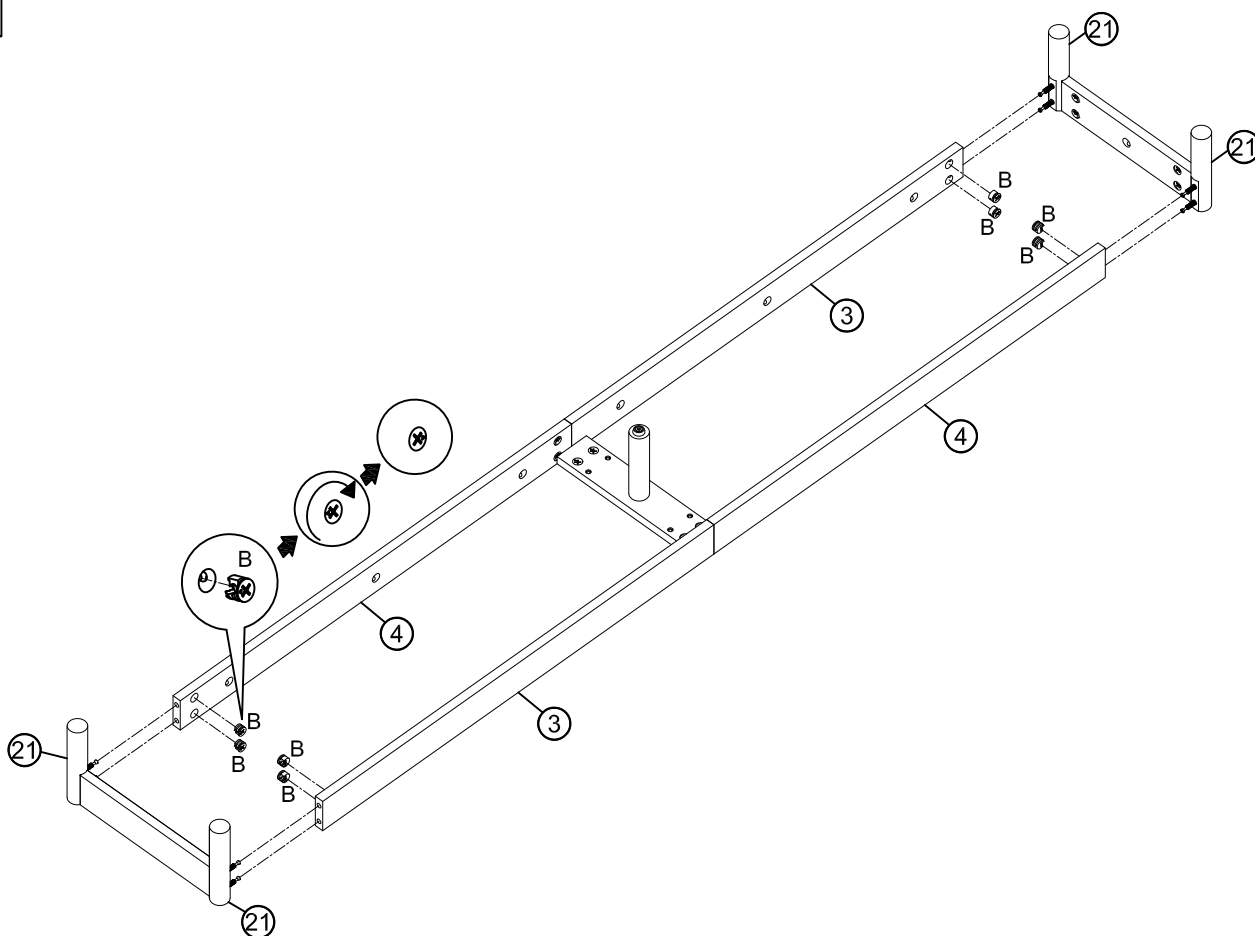


B	x8
	
Φ15mm	

21

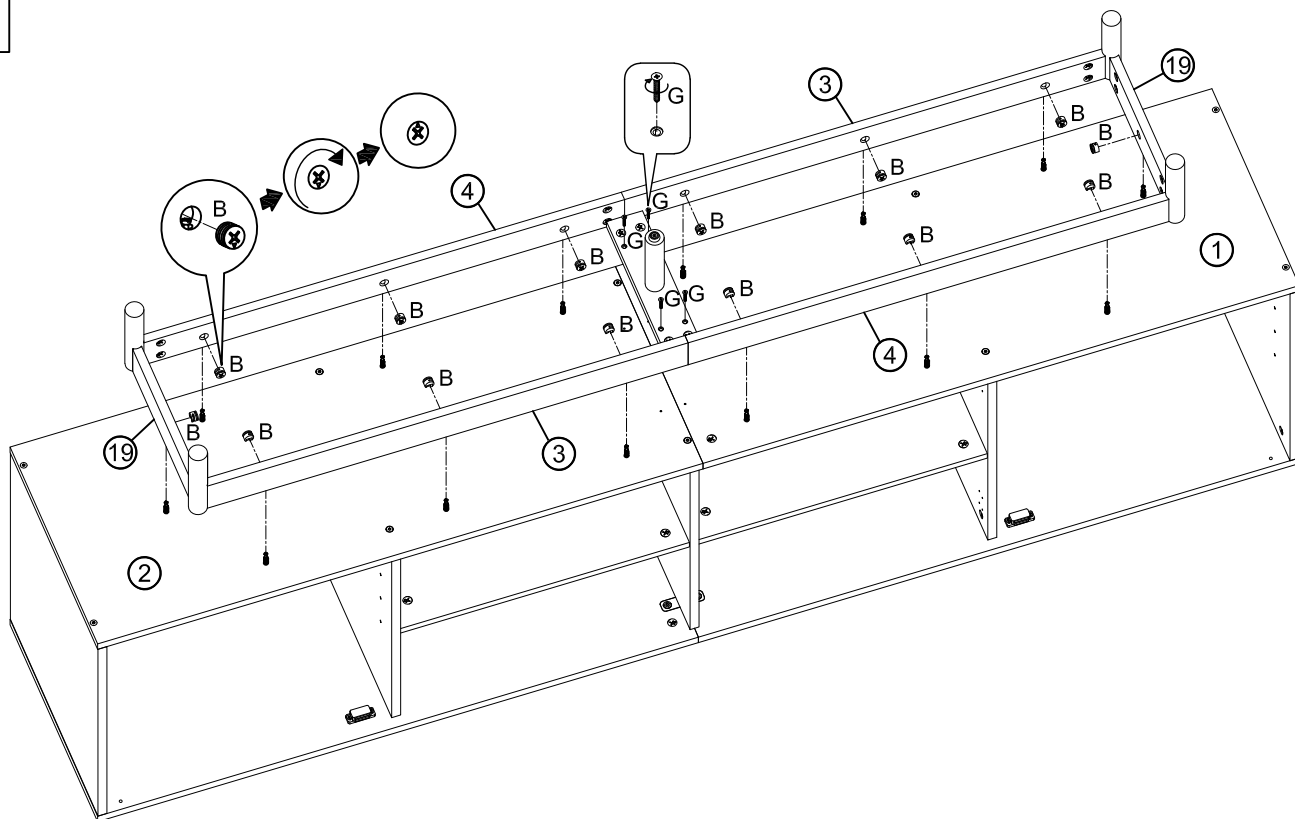


B	x14	G	x4
			
Φ15mm		Φ4x25mm	

22

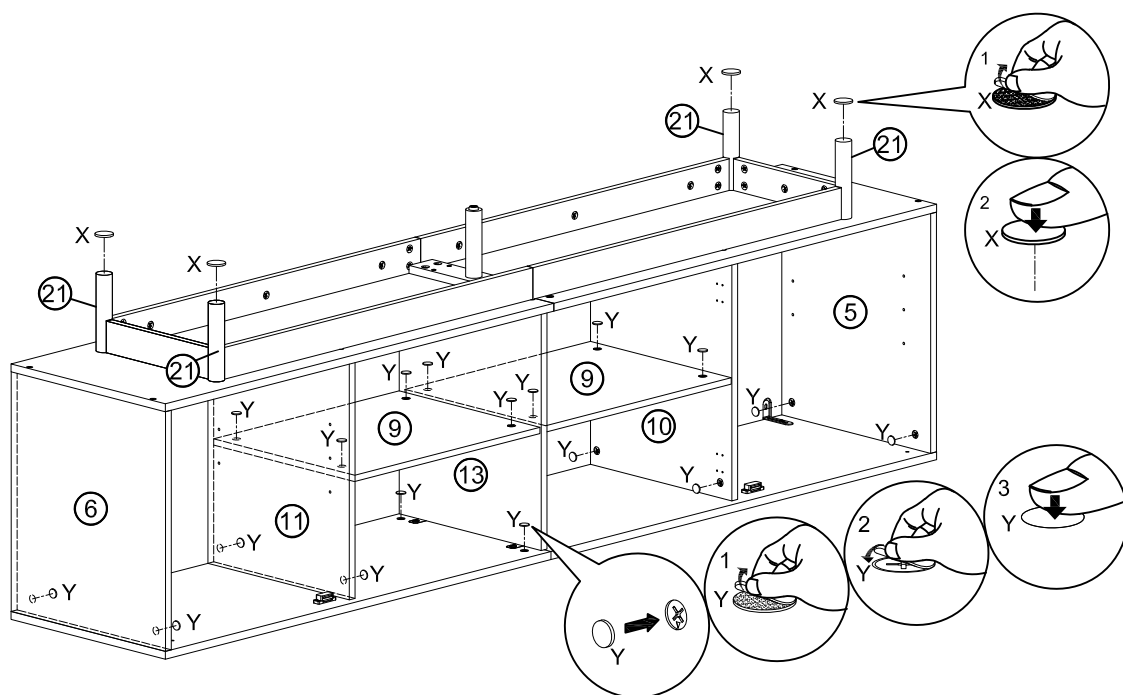


X	x4	Y	x18
			
		Φ20mm	

23

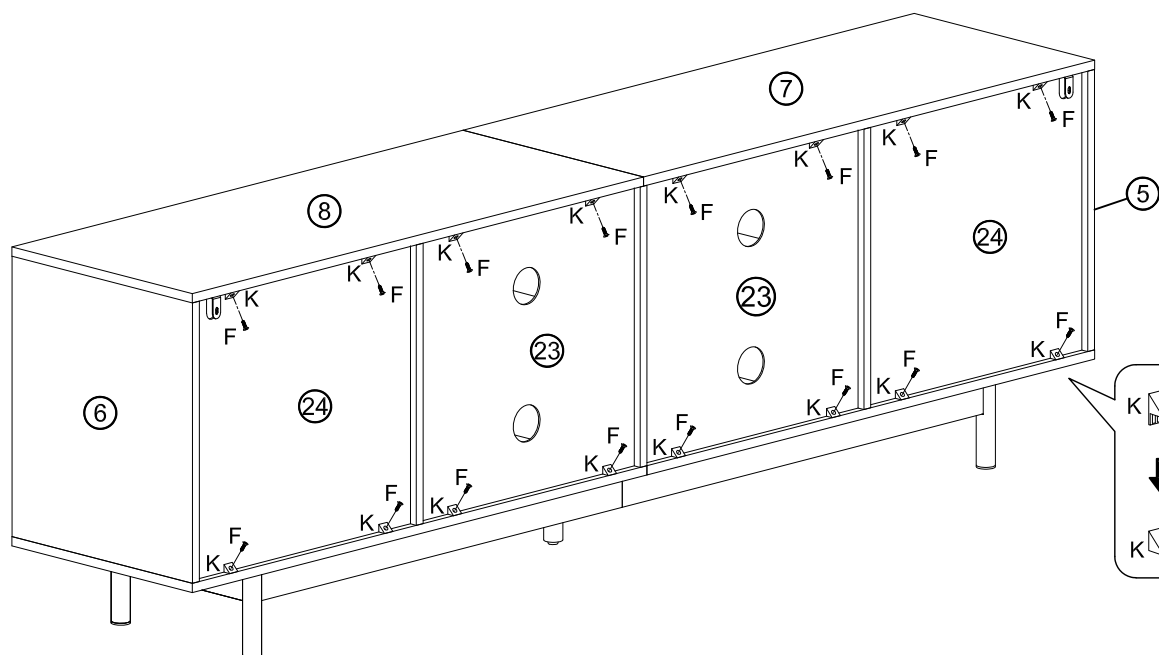


F	x16	K	x16
			
Φ3.5x12mm		15x10mm	

24

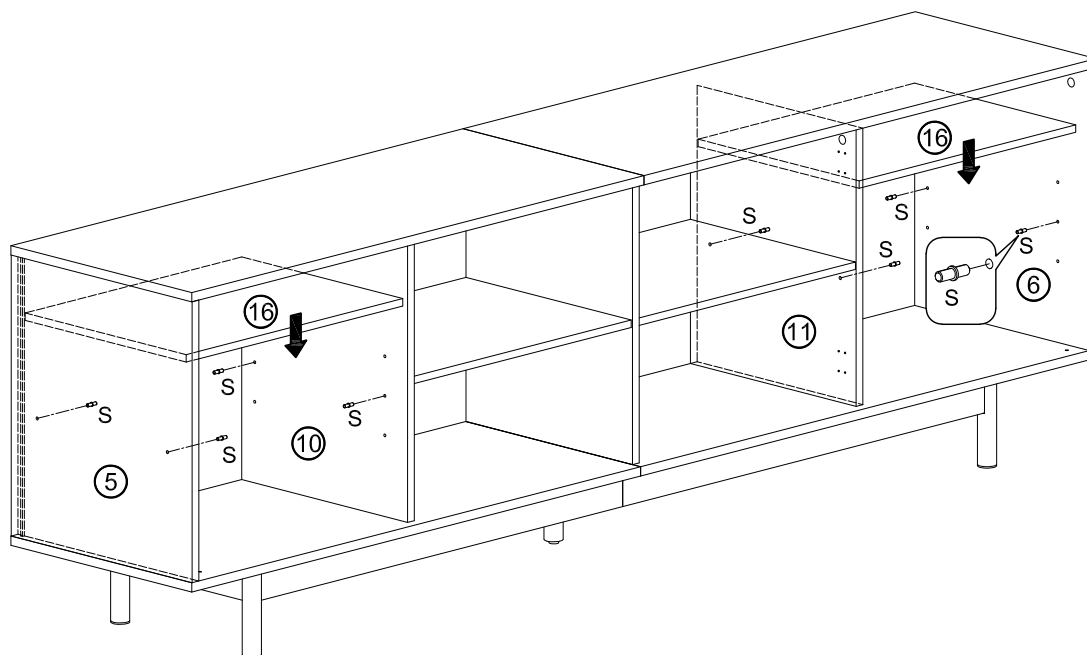


S	x8
	
Φ5mm	

25

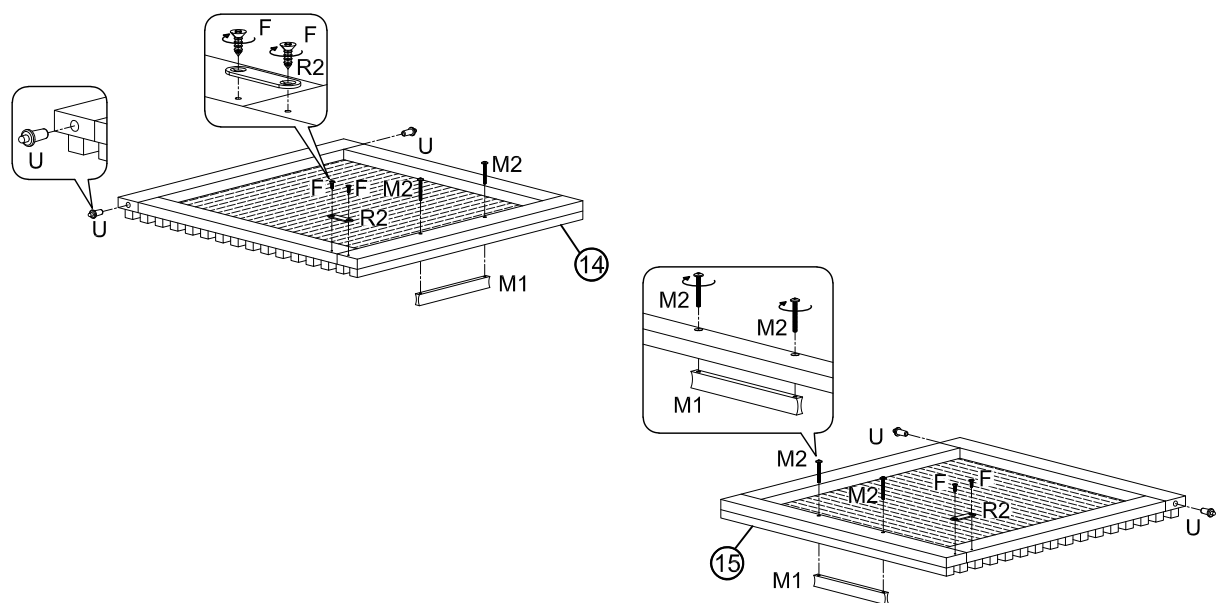



F	x4	M1	x2	M2	x4	R2	x2	U	x4
									
Φ3.5x12mm		140mm		M4x30mm					

26

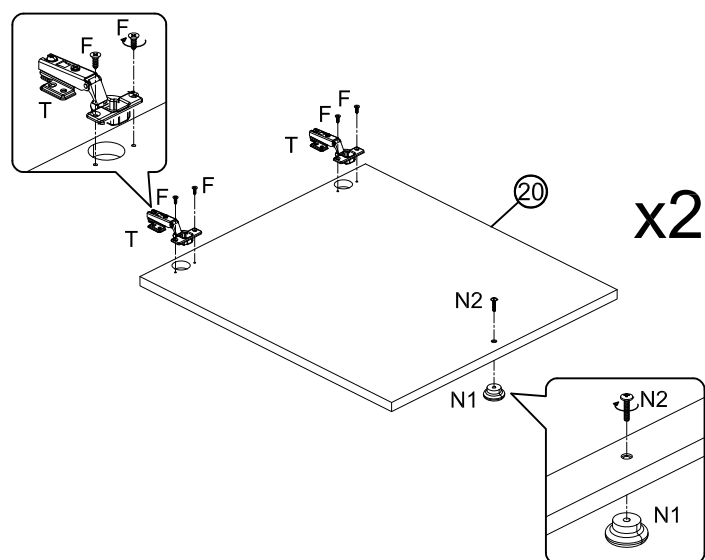



F	x8	T	x4	N1	x2	N2	x2
							
Φ3.5x12mm						M4x18mm	

28

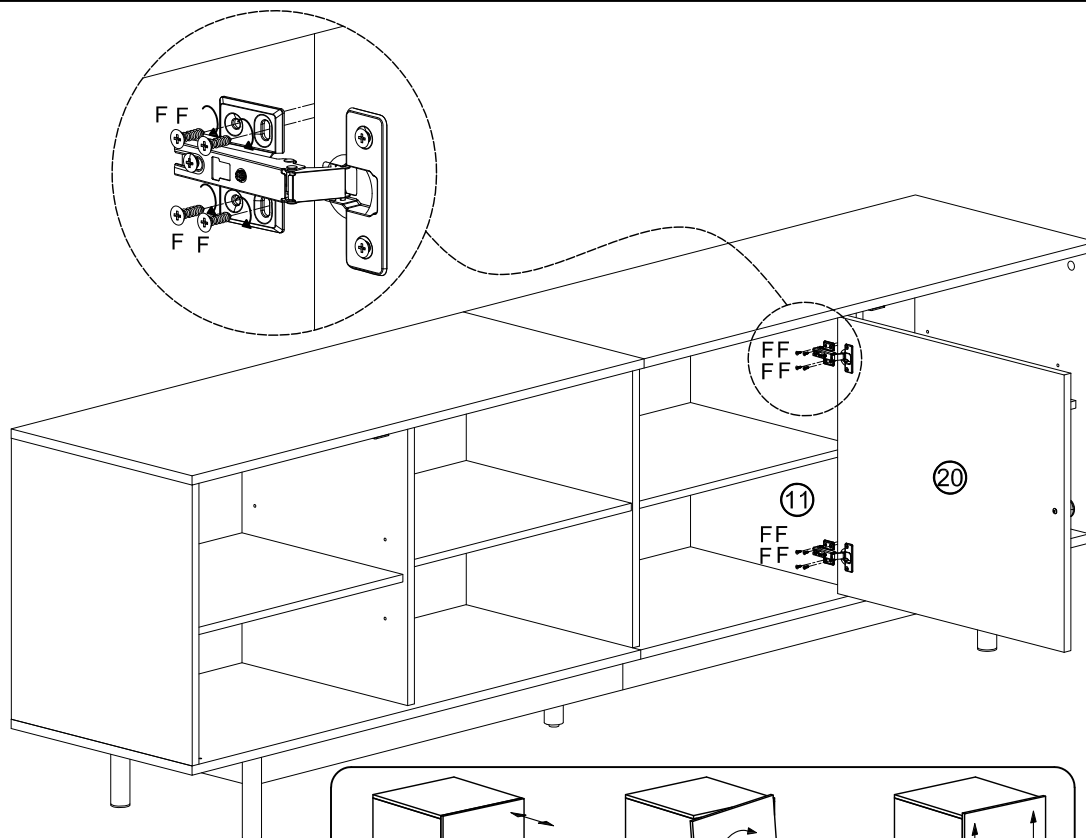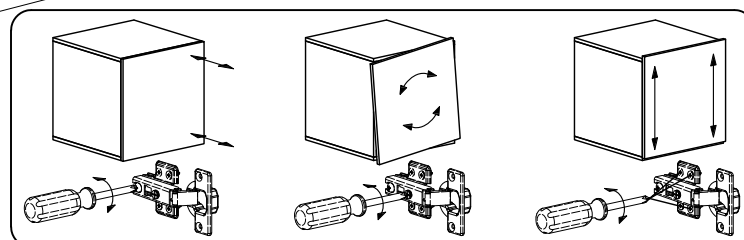


F	x8
Φ3.5x12mm	

29

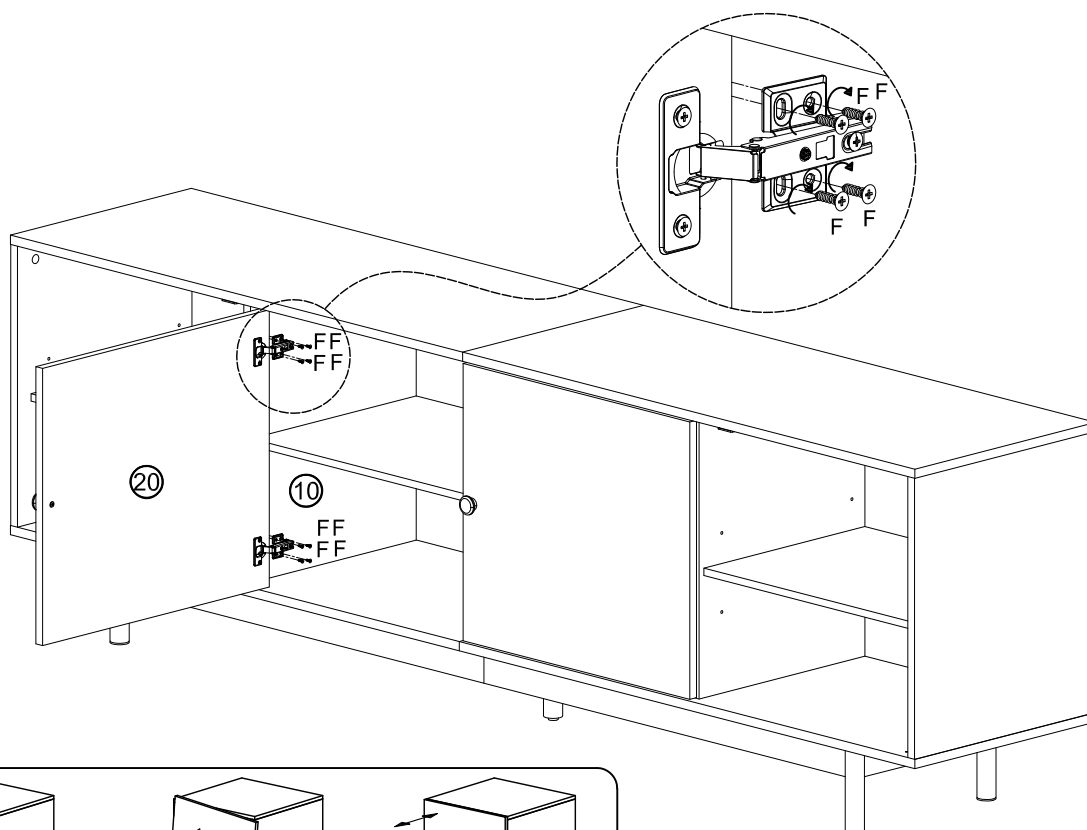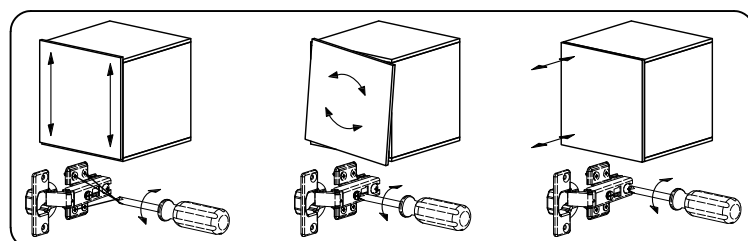


F	x8
Φ3.5x12mm	

30

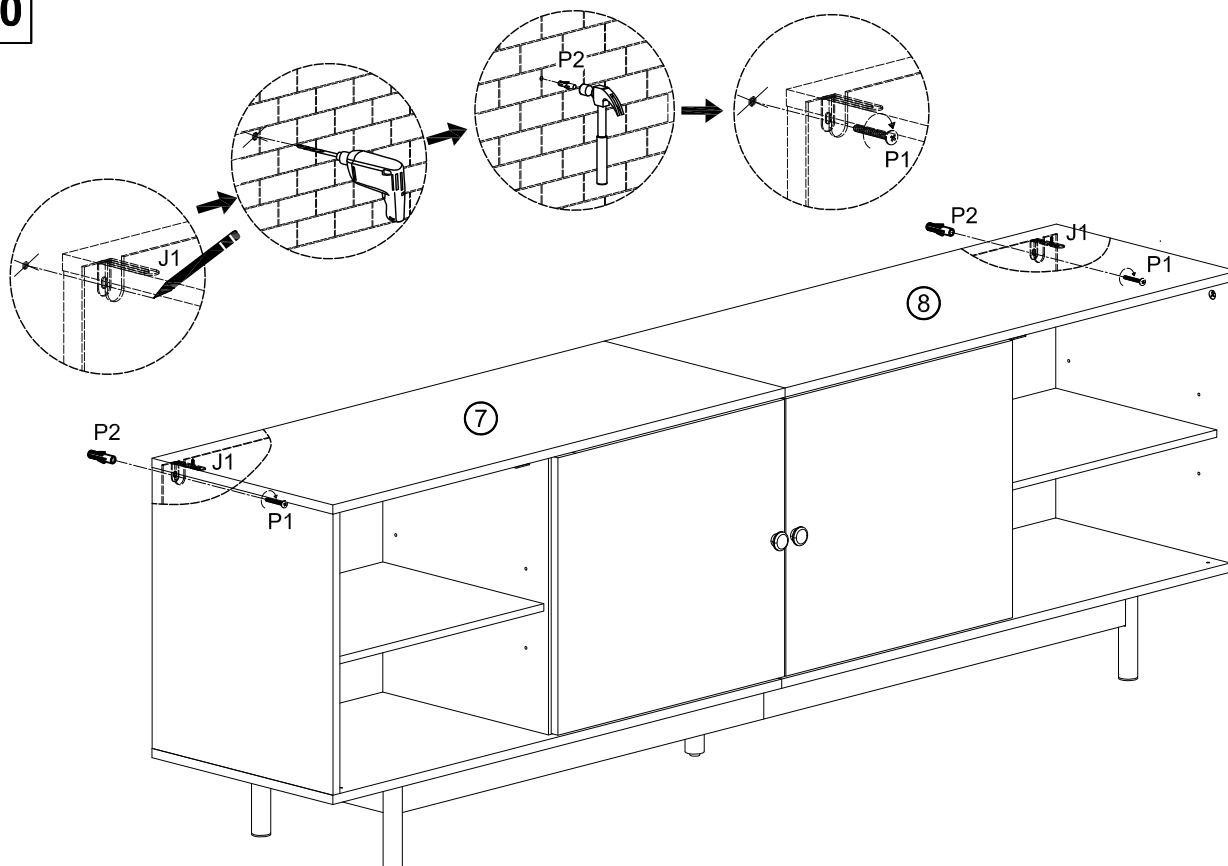


P1	x2	P2	x2
			
Φ4x45mm		Φ8x35mm	

31

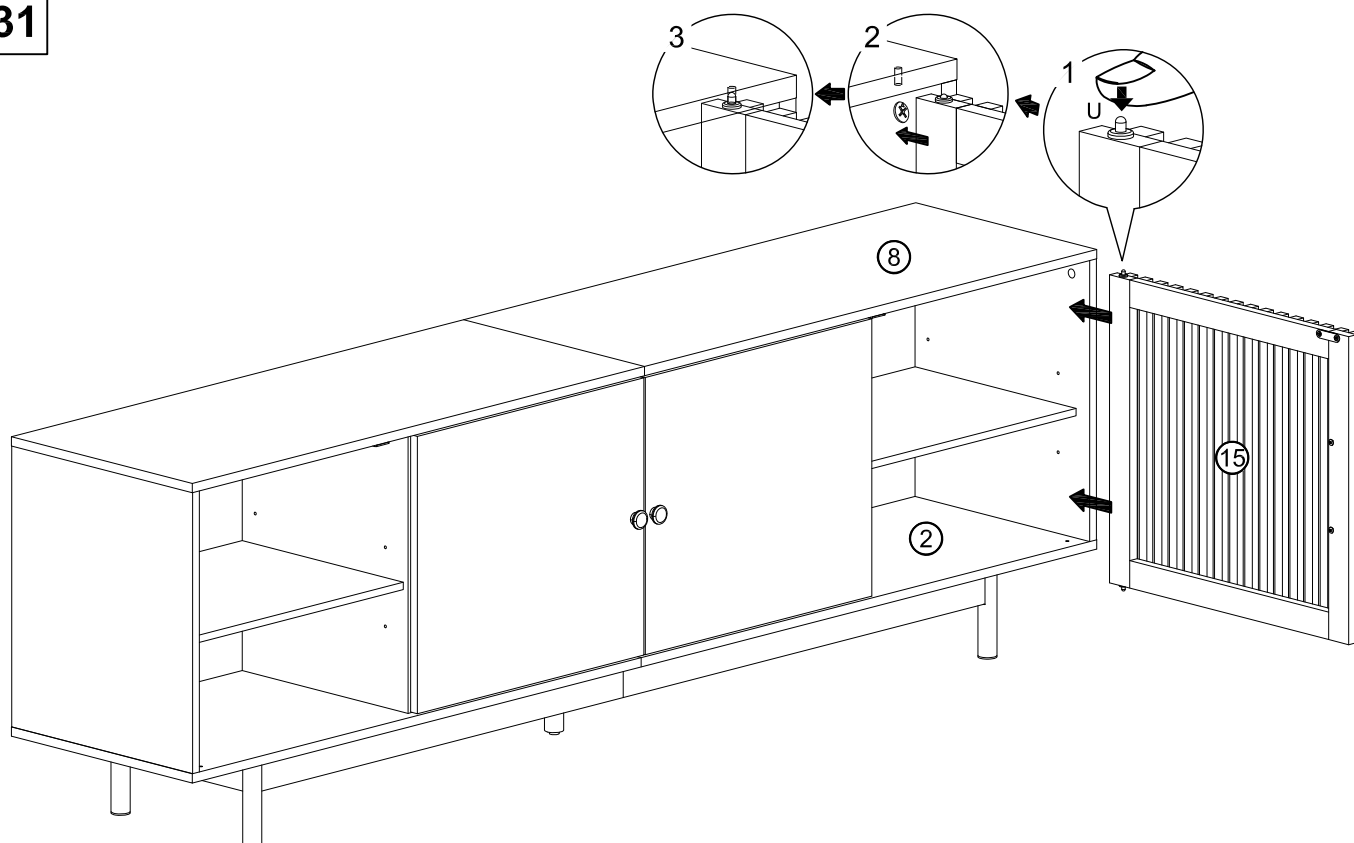

32

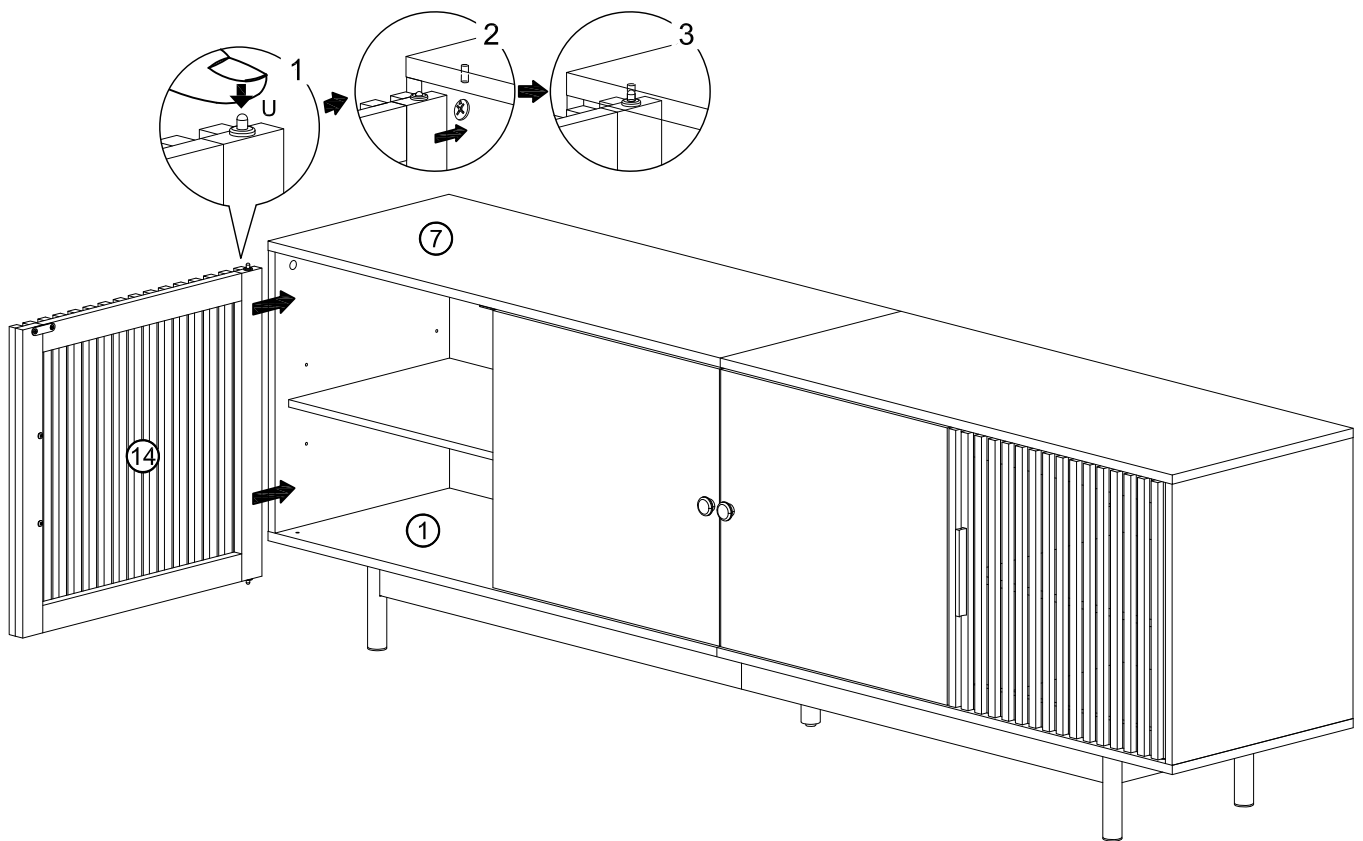

33

