

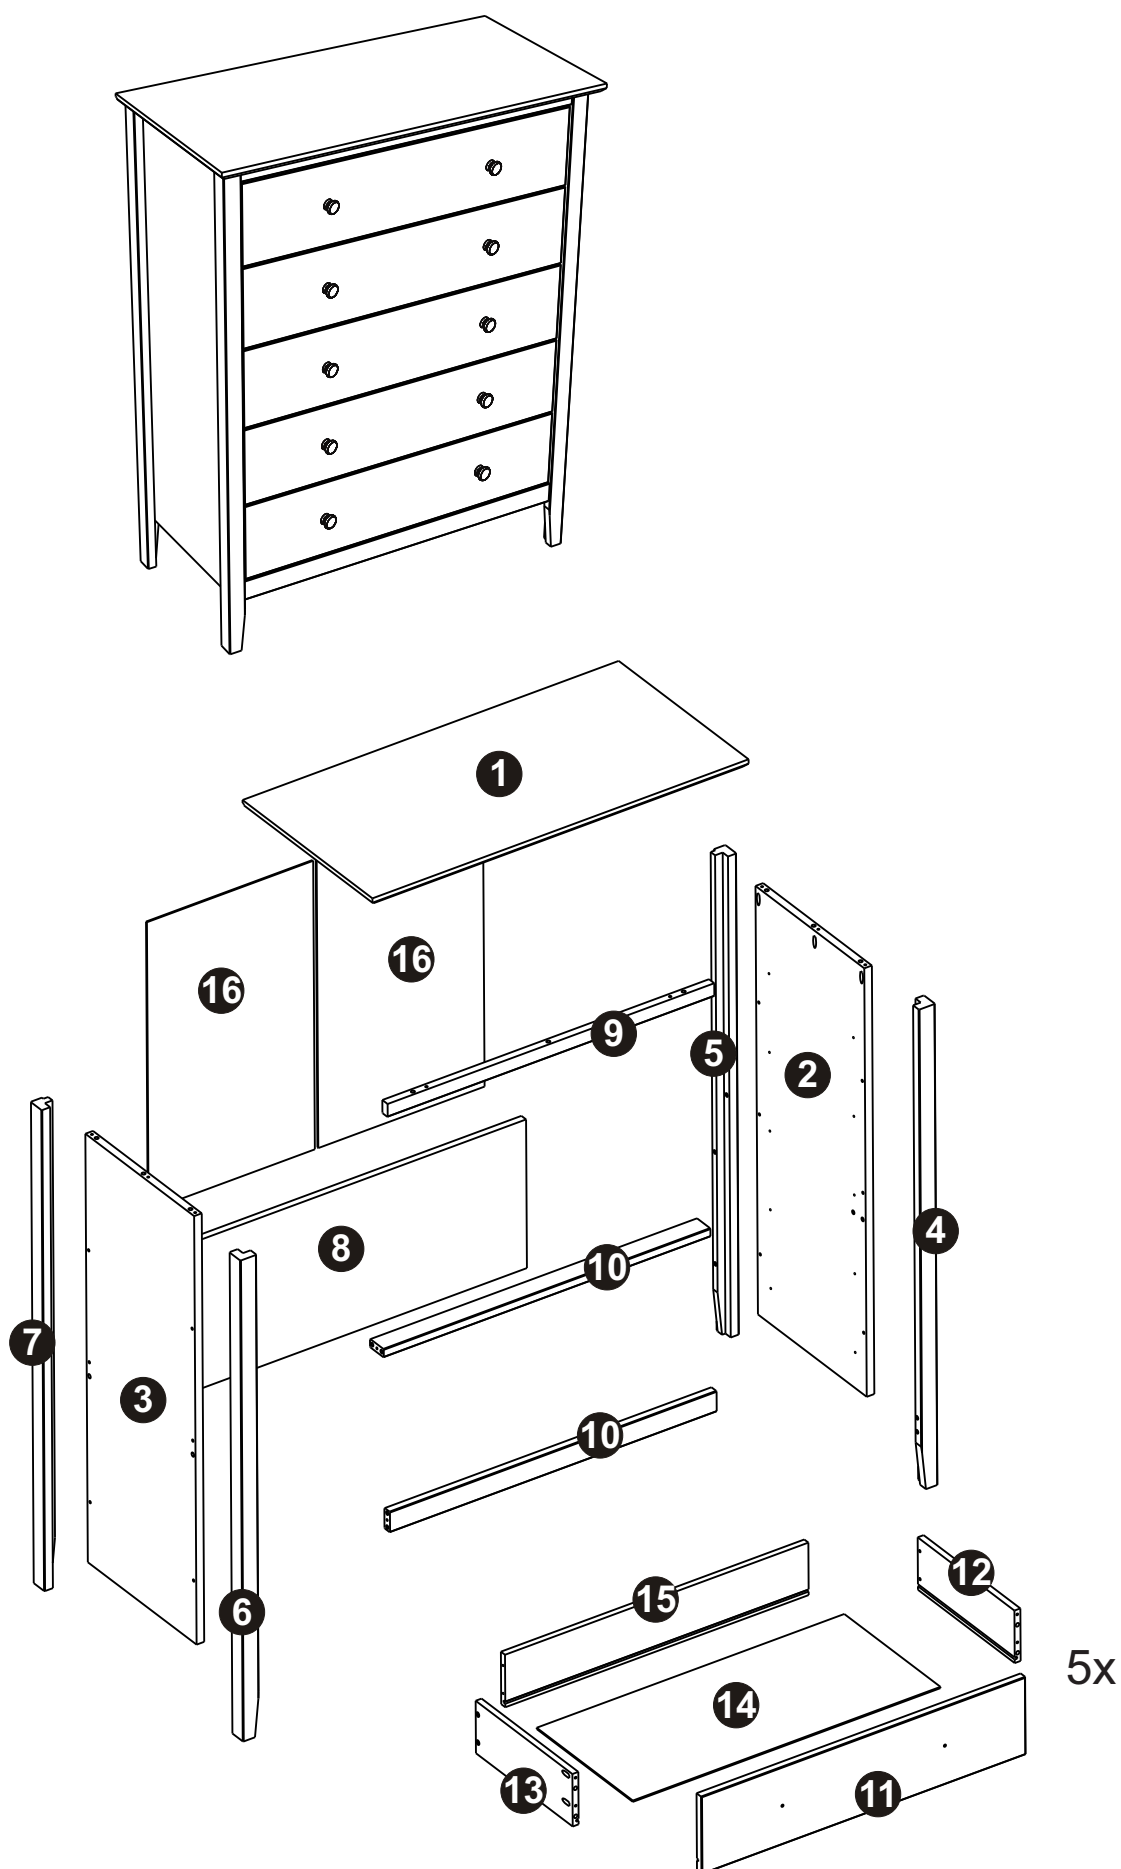











ASSEMBLY INSTRUCTIONS 5 DRAWER CHEST



A	 Ø8x30mm	41
B	 Ø8x20mm	04
C	 Ø4x35mm	10
D	 Ø4x30mm	59
E	 Ø4,0x30mm	16
F		10
G	 Ø4x16mm	20
H	 Ø1 x 19mm	24
I	  	01
J	 330D	05
K	 330E	05
L	 635mm	01
M	 Ø6x10mm	20
N	 Ø3,0x25mm	02

Tools Required




Phillips Tool



Hammer


* These tools are not supplied by the manufacturer

01

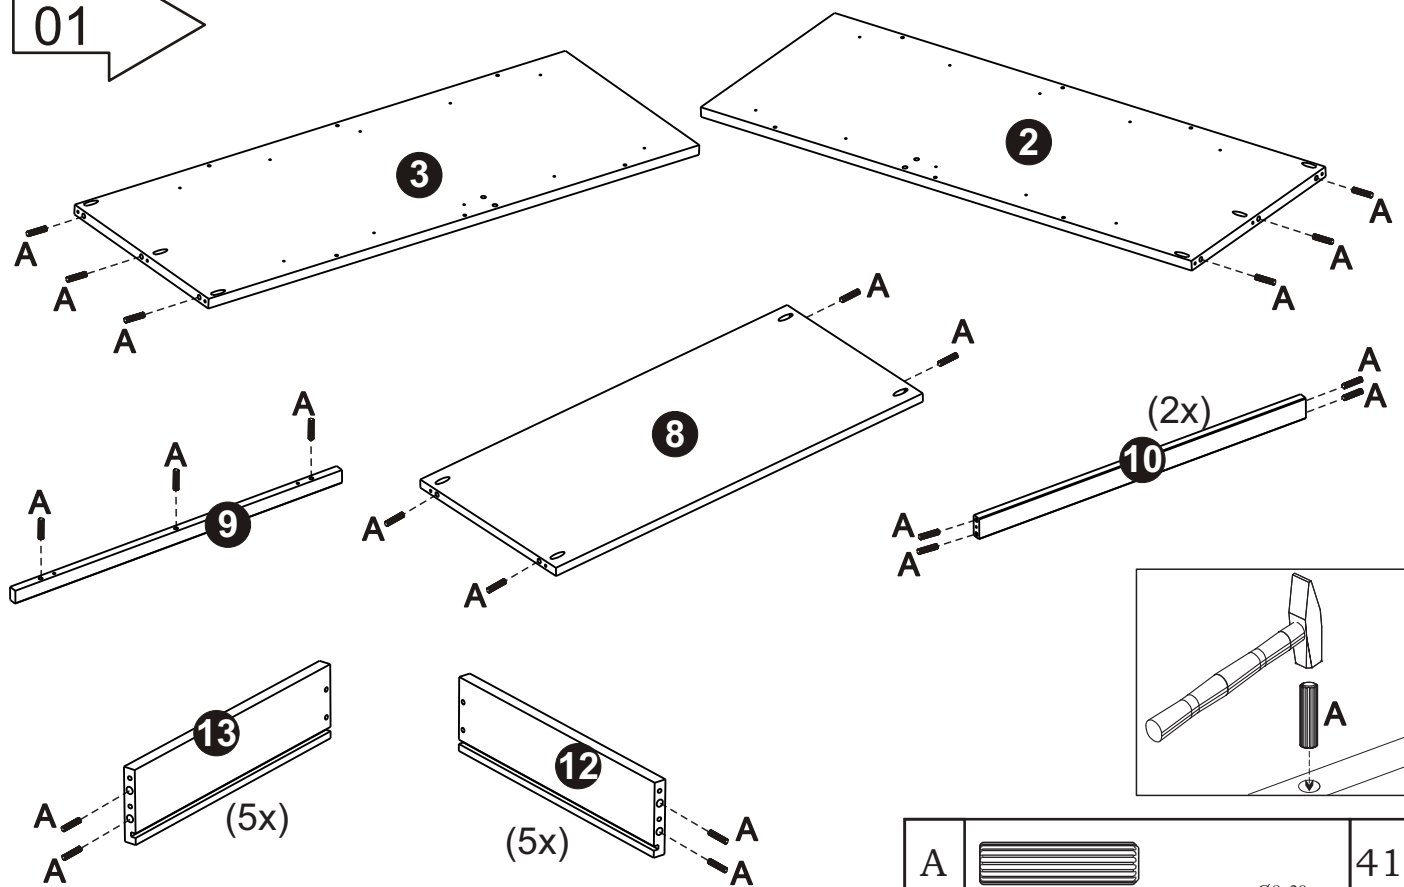


A		Ø8x30mm	41
---	--	---------	----

02

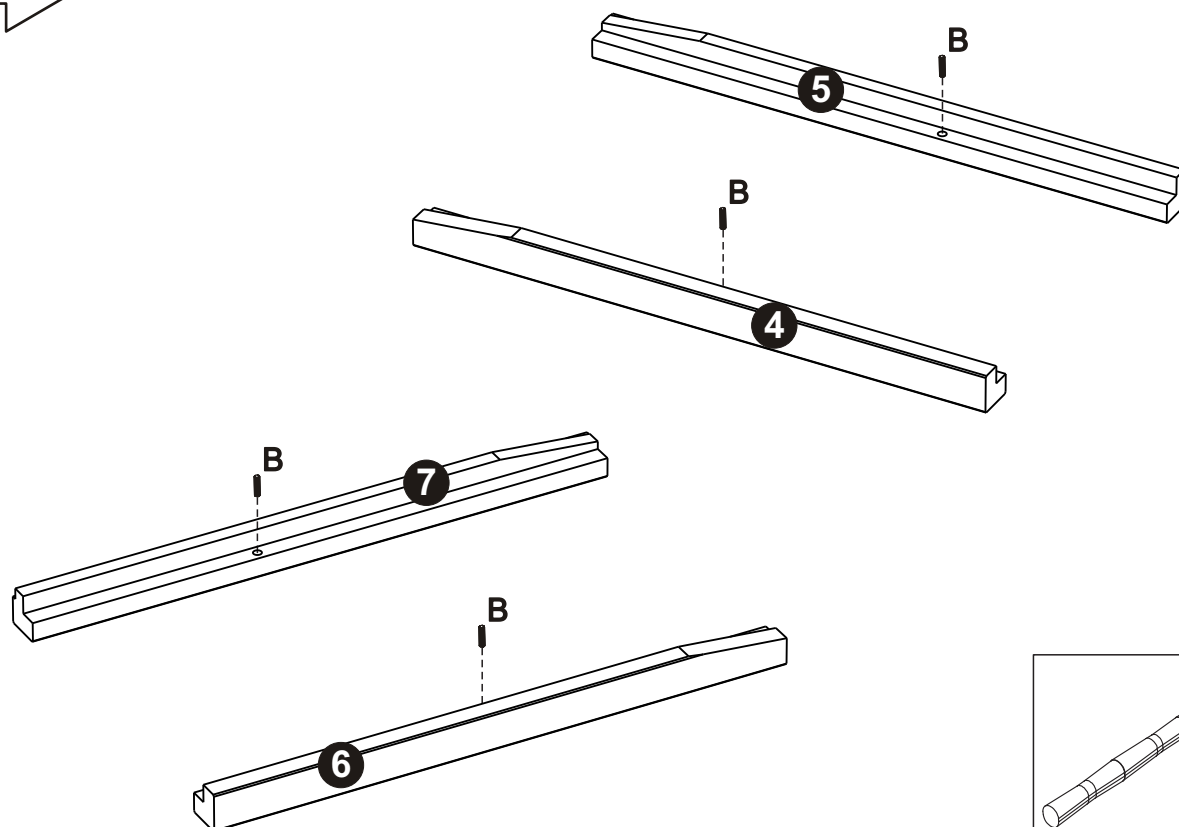


B		Ø8x20mm	04
---	---	---------	----



03

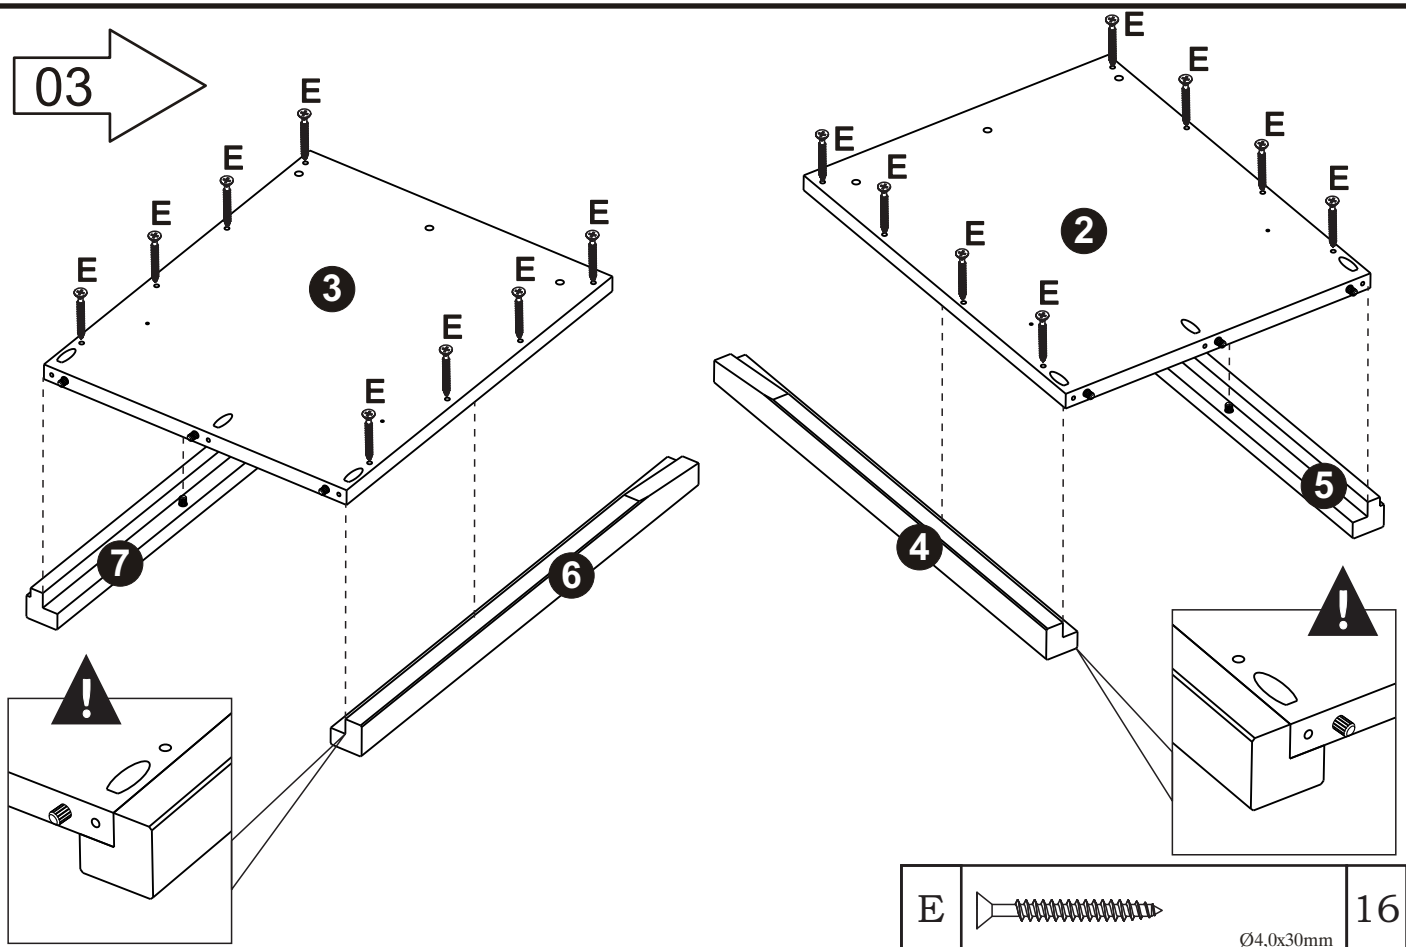

E		16
Ø4,0x30mm		



04

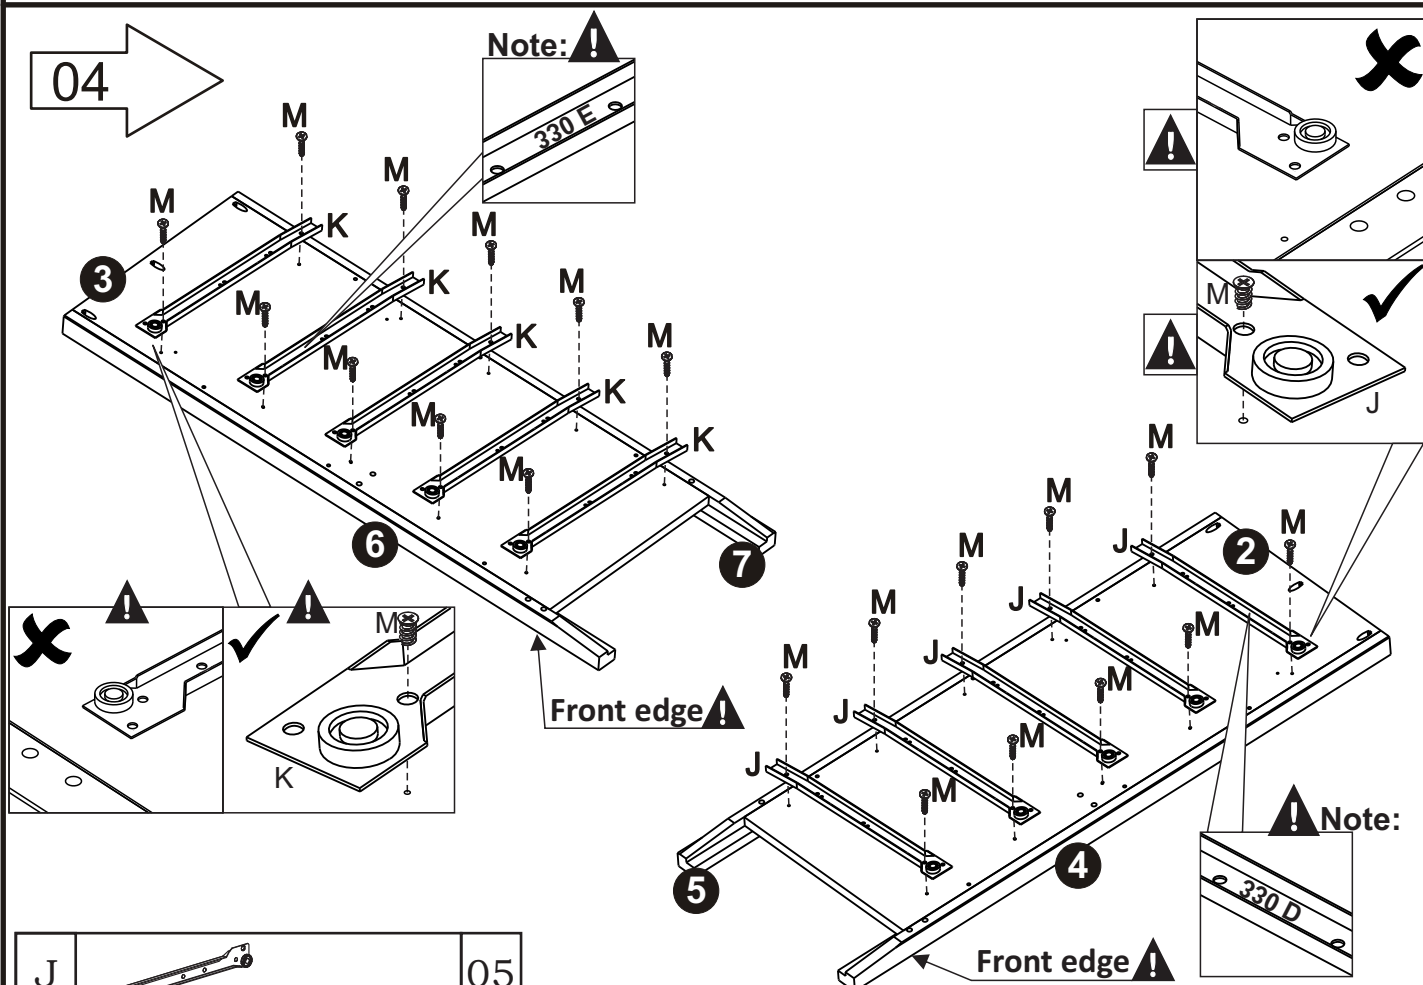



J		05
330D		
K		05
330E		

M		20
Ø6x10mm		


05

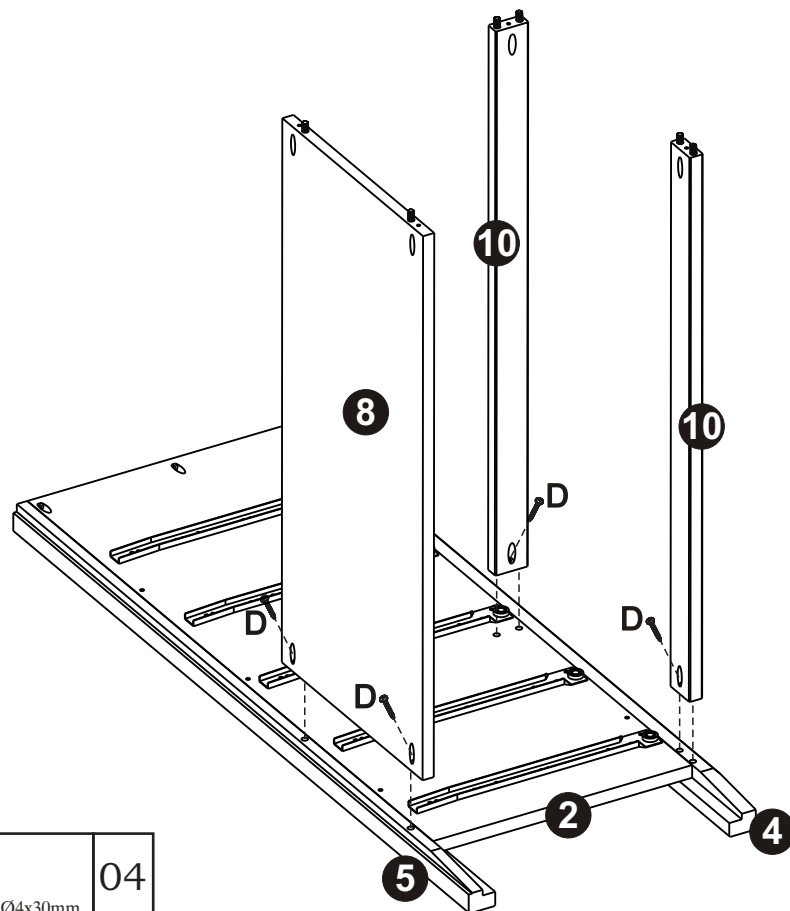

06

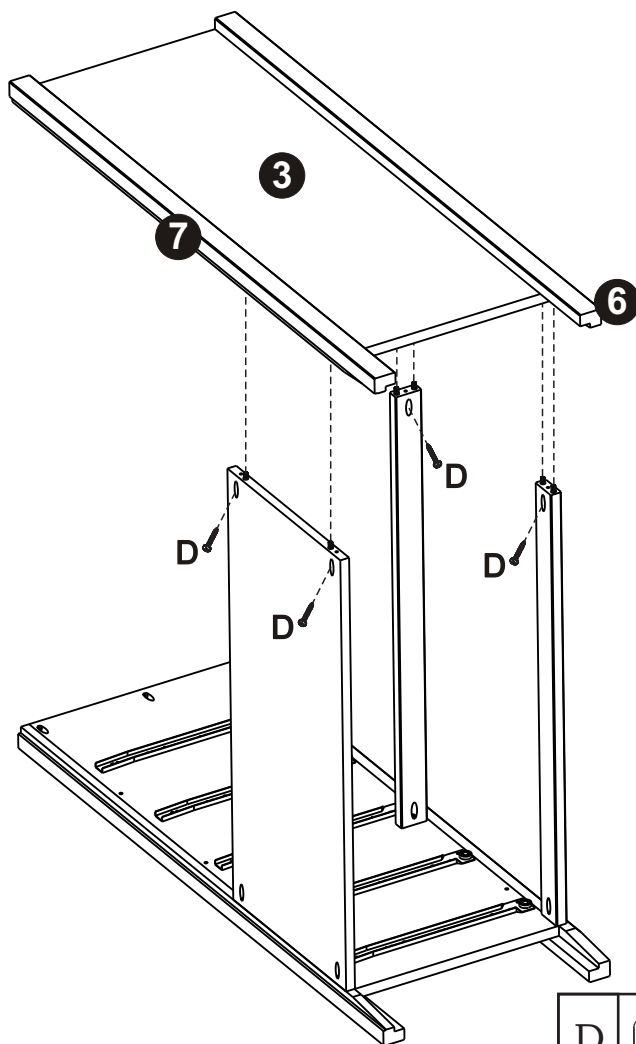



07

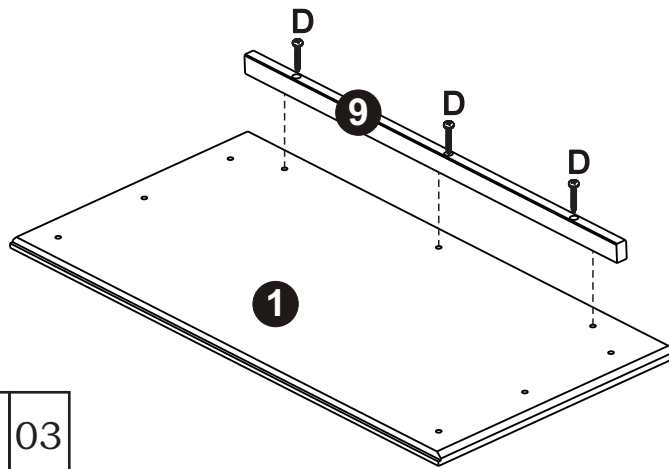



D		03
Ø4x30mm		

08



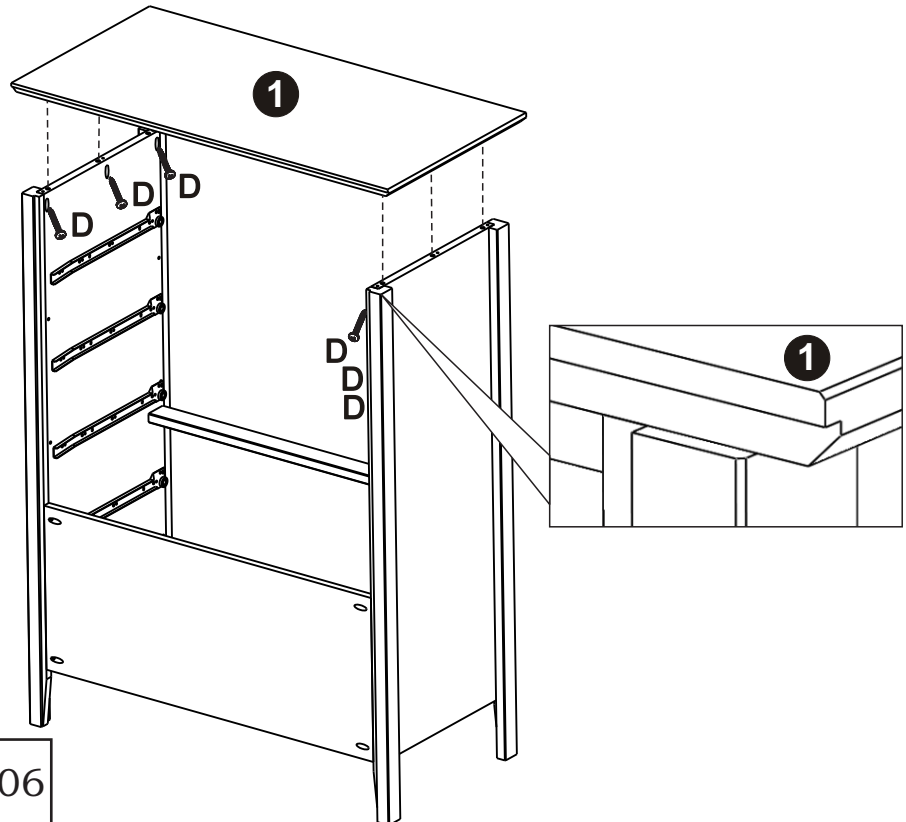



D		06
Ø4x30mm		

09



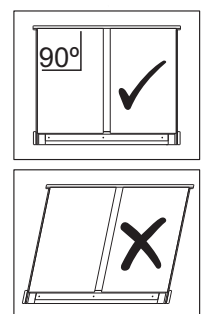
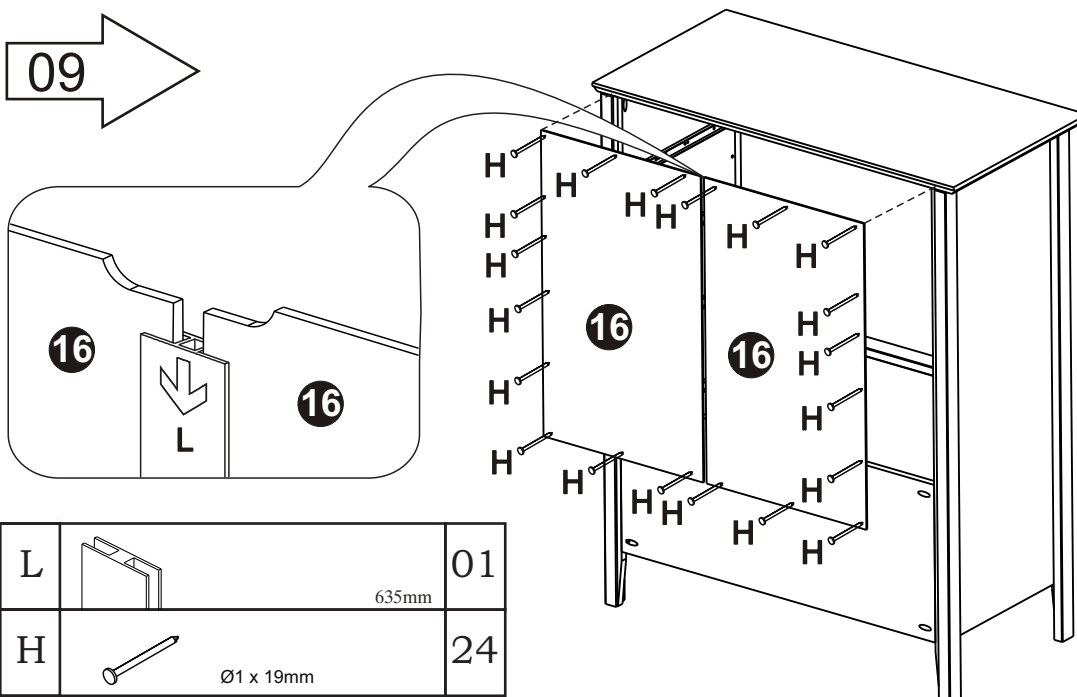


L		01
635mm		
H		24
Ø1 x 19mm		

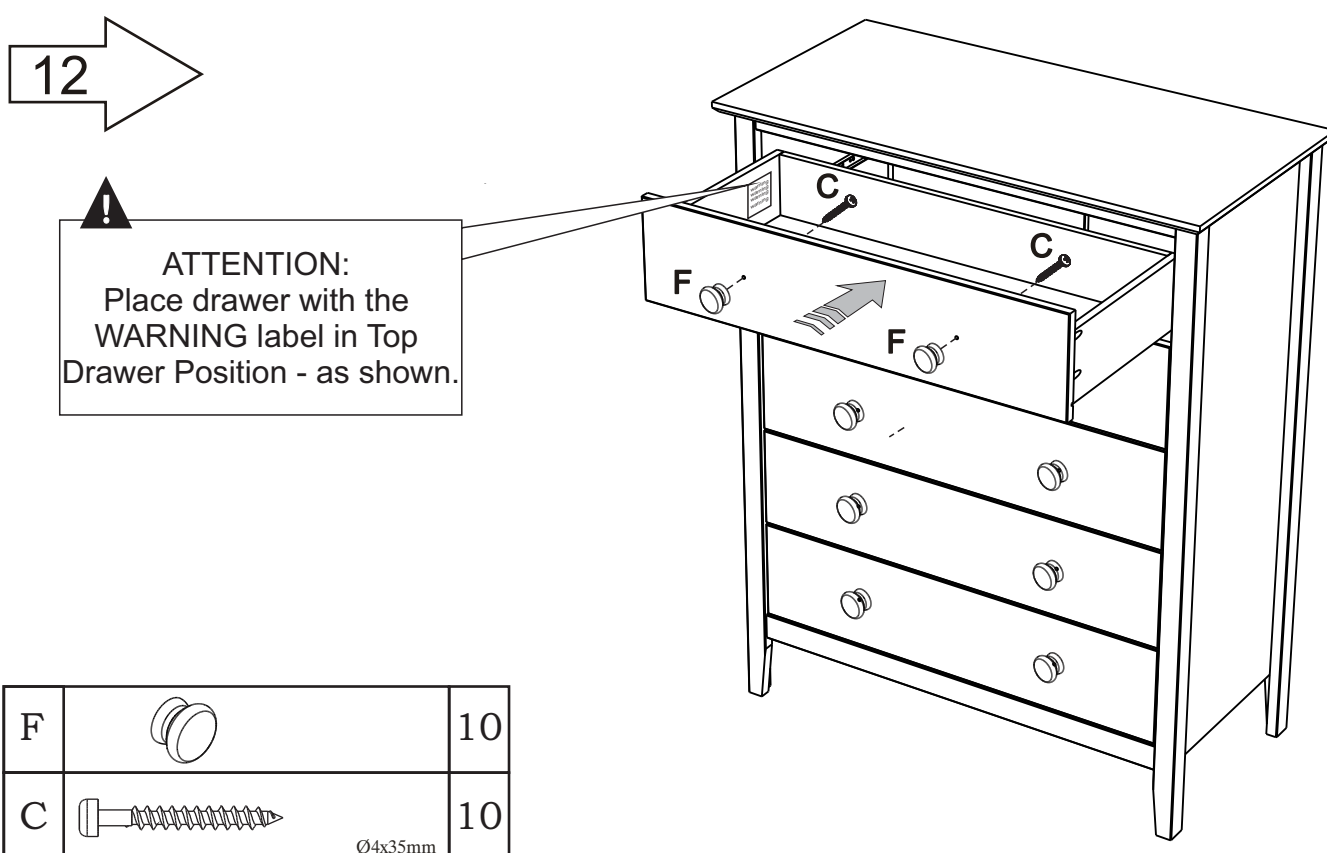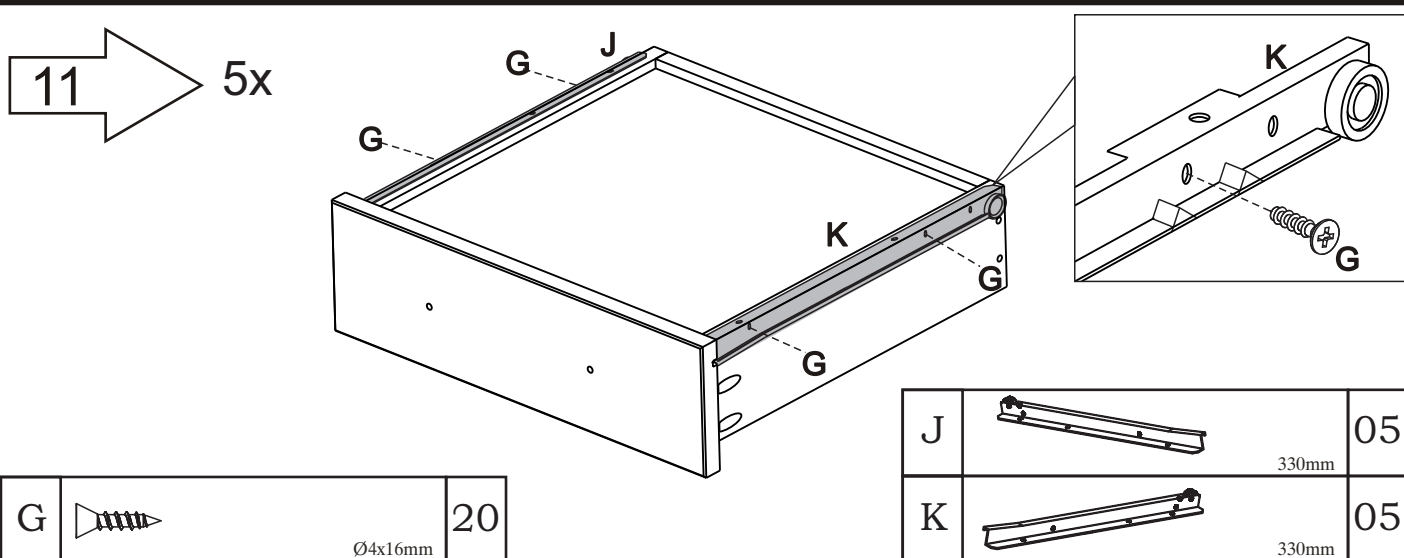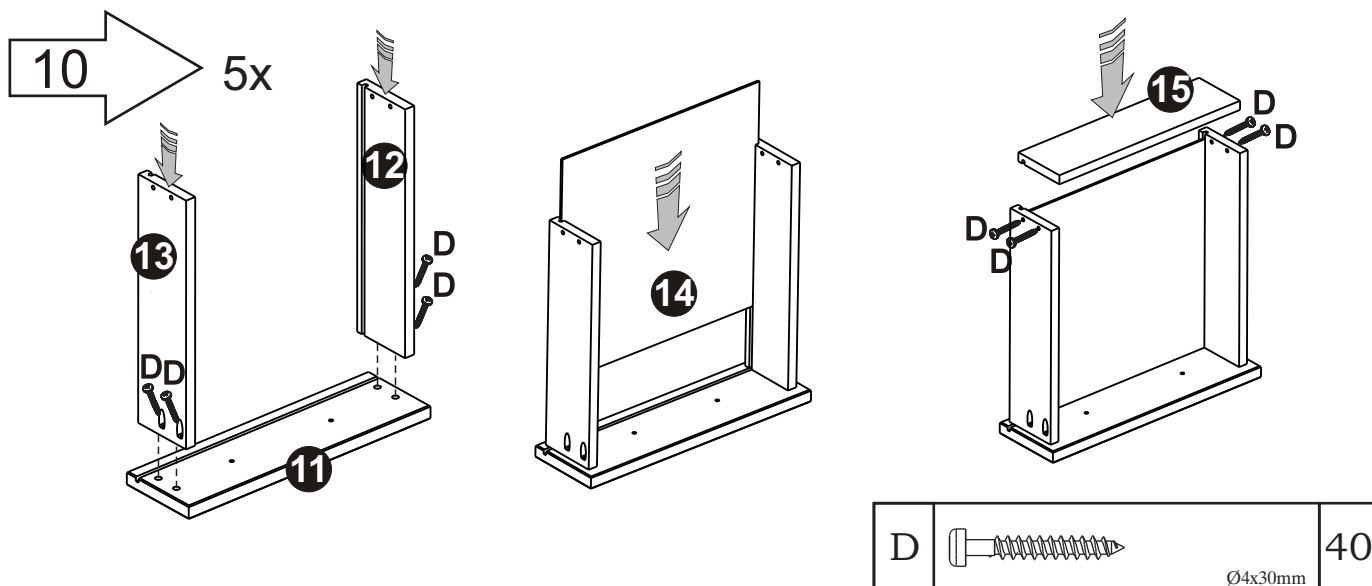

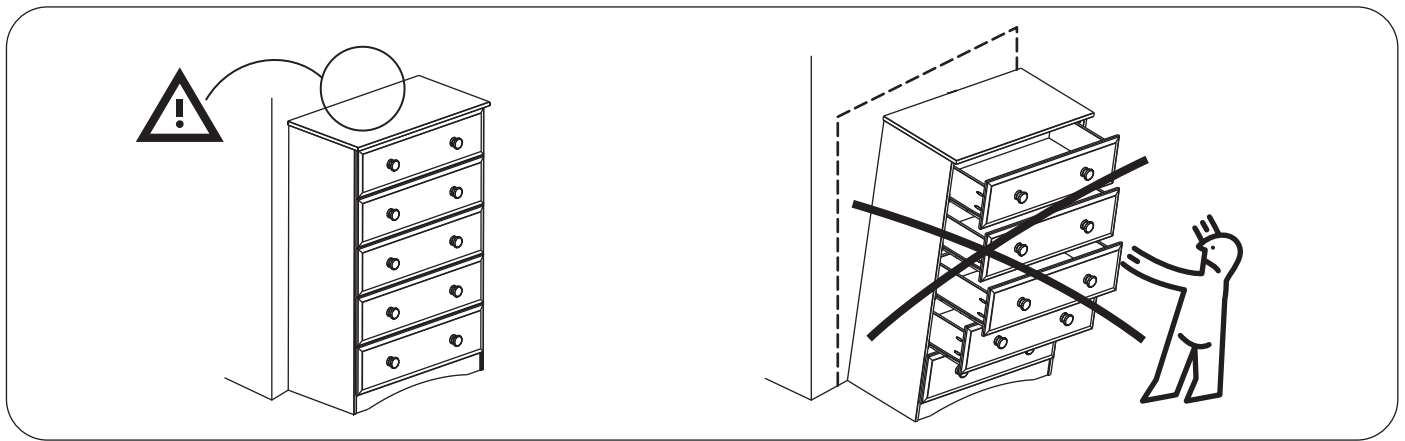

Secure to Stud behind Wallboard.

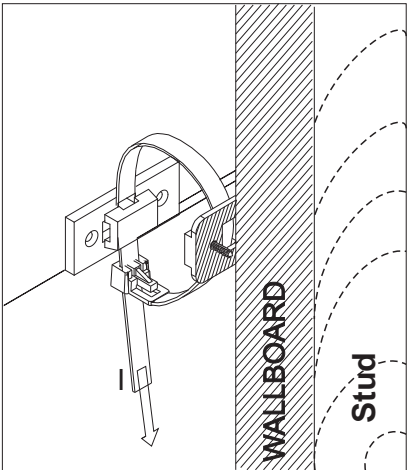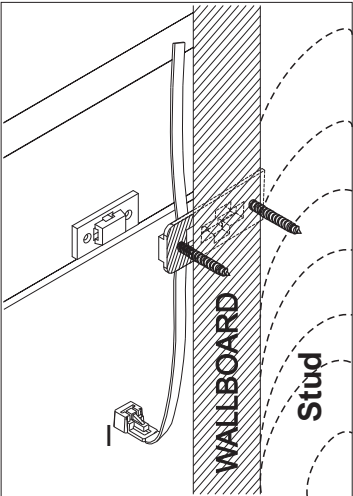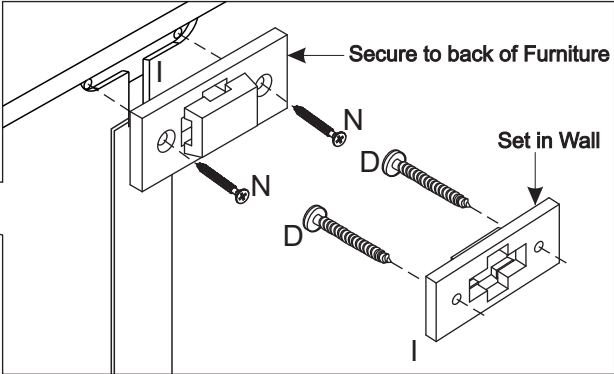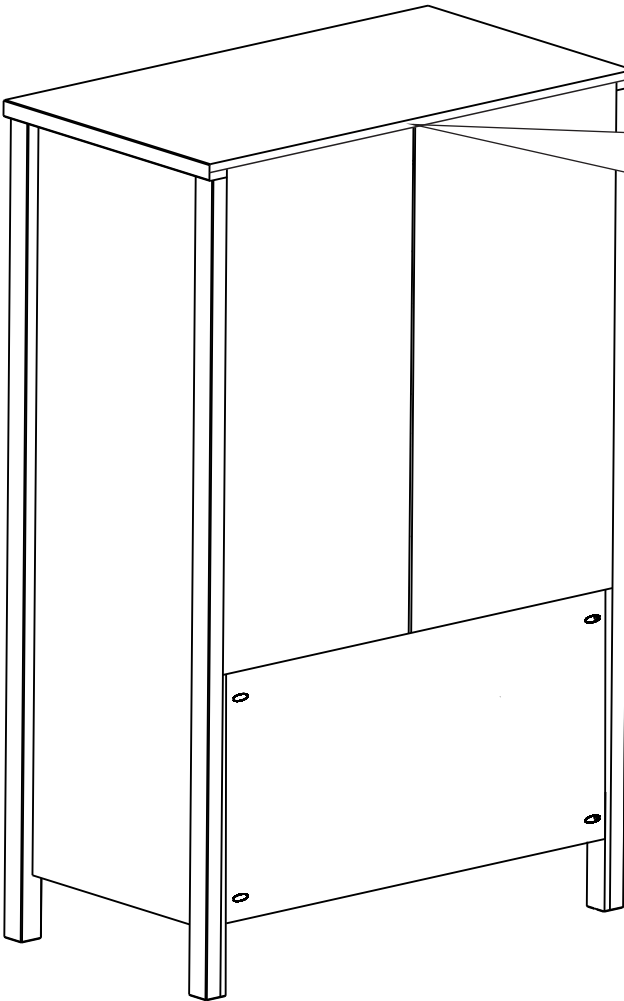

Secure to Stud behind Wallboard!

D - 4,0x30 Screw
Qty. 02

I - Plastic wall bracket
Qty. 02

N - 3,0x25 Screw
Qty. 02

I - Nylon strap 140mm
Qty. 01