

# Model: 203139B

## Tools List (Tools not included)



Screwdriver



Silicone

## Parts List (Parts included)



Screw




Metal Feet



Foam pad

Flip the vanity with the back side down on a soft surface. Align and fasten the 4 metal legs with screws to the pre-drilled holes on the bottom of the cabinet.

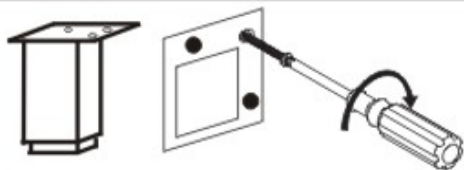


### Step 1

Put the integrated ceramic sink on the top of vanity, and check if it stay firm on the vanity.



### Step 2

If the ceramic sink is not staying firm on the vanity, please use the foam pad to fill the gap.

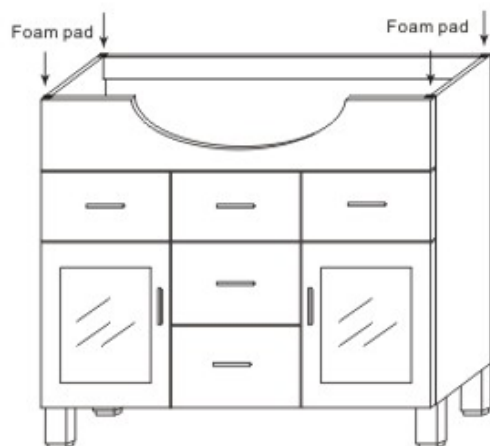

### Step 3

Finally, place the ceramic sink again to check the stability.



### Step 4

**NOTE: SINK STYLE, SHAPE, FAUCET HOLES, CUTOUT ON TOP, VANITY MAY VARY FROM THE PICTURE ABOVE. INSTRUCTIONAL PURPOSE ONLY.**