




Assembly Instruction













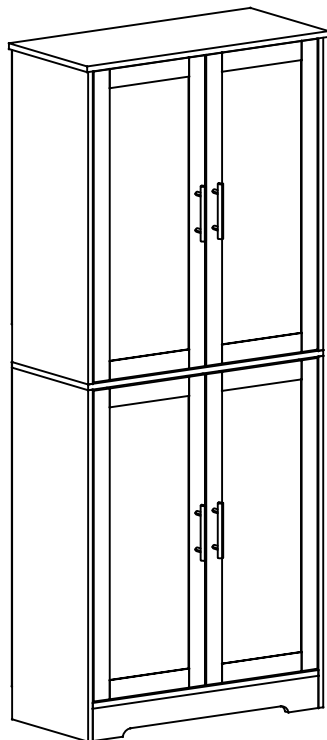


COMPONENTS ID Nr.

Part Nr.	Qty	Part Nr.	Qty	Part Nr.	Qty
A	1pcs	B	1pcs	C	1pcs
D	1pcs	E	1pcs	F	1pcs
G	1pcs	H	3pcs	J	1pcs
K	1pcs	L	4pcs	M	1pcs
N	1pcs				

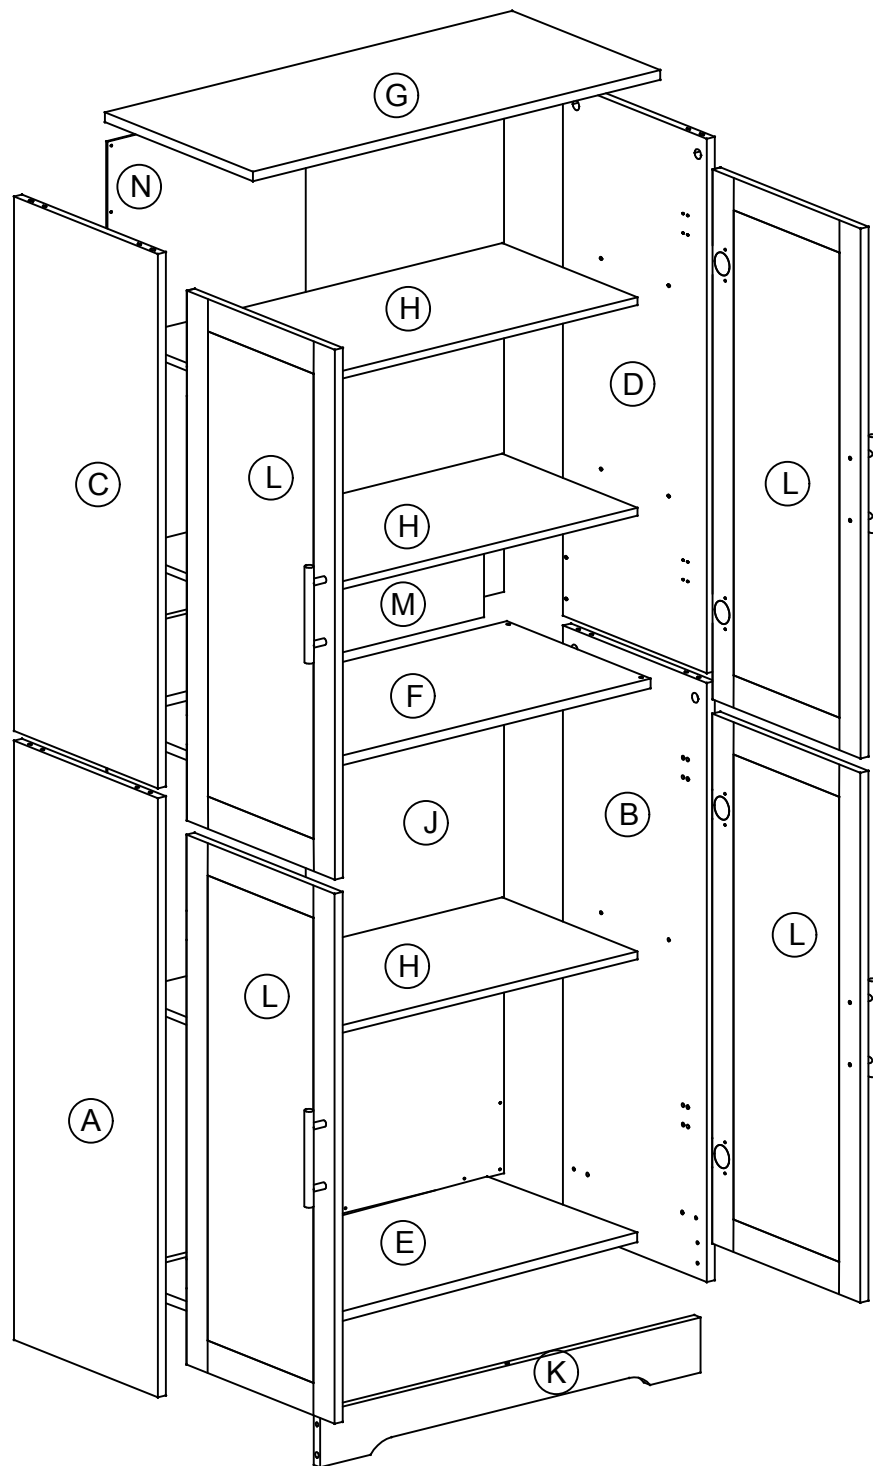


HARDWARE LIST

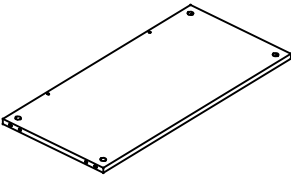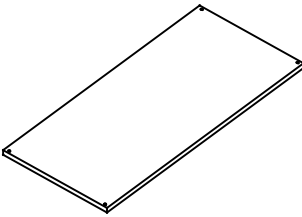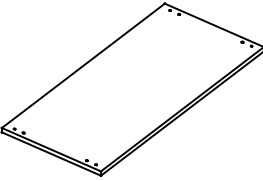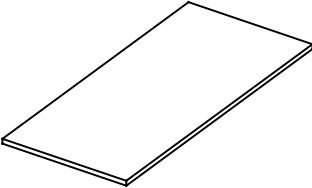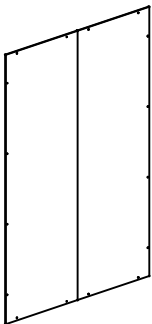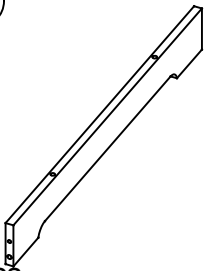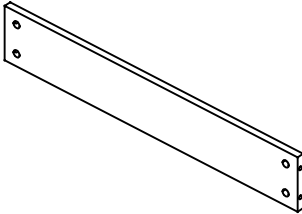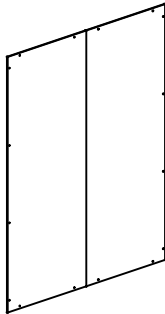(A)  1pcs	(B)  1pcs	(C)  1pcs	(D)  1pcs
(E)  1pcs	(F)  1pcs	(G)  1pcs	(H)  3pcs
(J)  1pcs	(K)  1pcs	(L)  4pcs	(M)  1pcs
(N)  1pcs			


HARDWARE LIST

① x 7

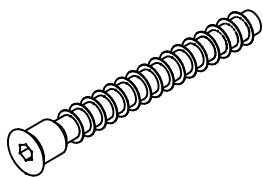


D5*40mm

② x 12




③ x 80

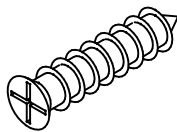


D3*12mm

④ x 8

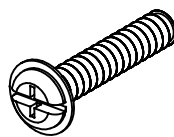

M4X18mm

⑤ x 14

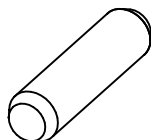

6X30mm


⑥ x 20




⑦ x 20




⑧ x 4

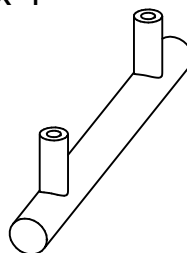


⑨ x 8

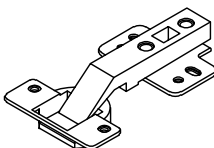

⑩ x 2

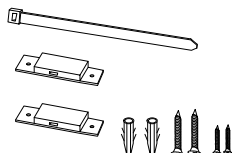


⑪ x 1

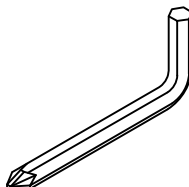

4#

⑫ x 1

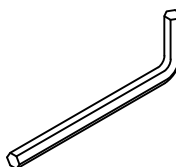


3#

1




⑥ x 2

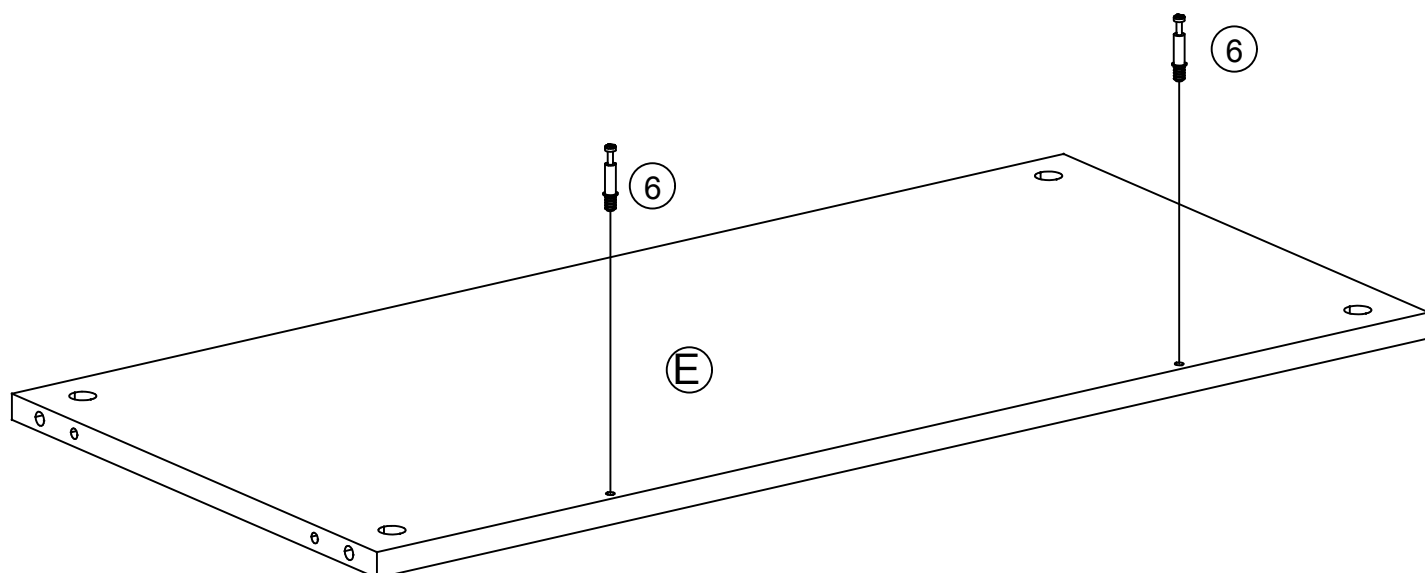

2



⑦ x 2

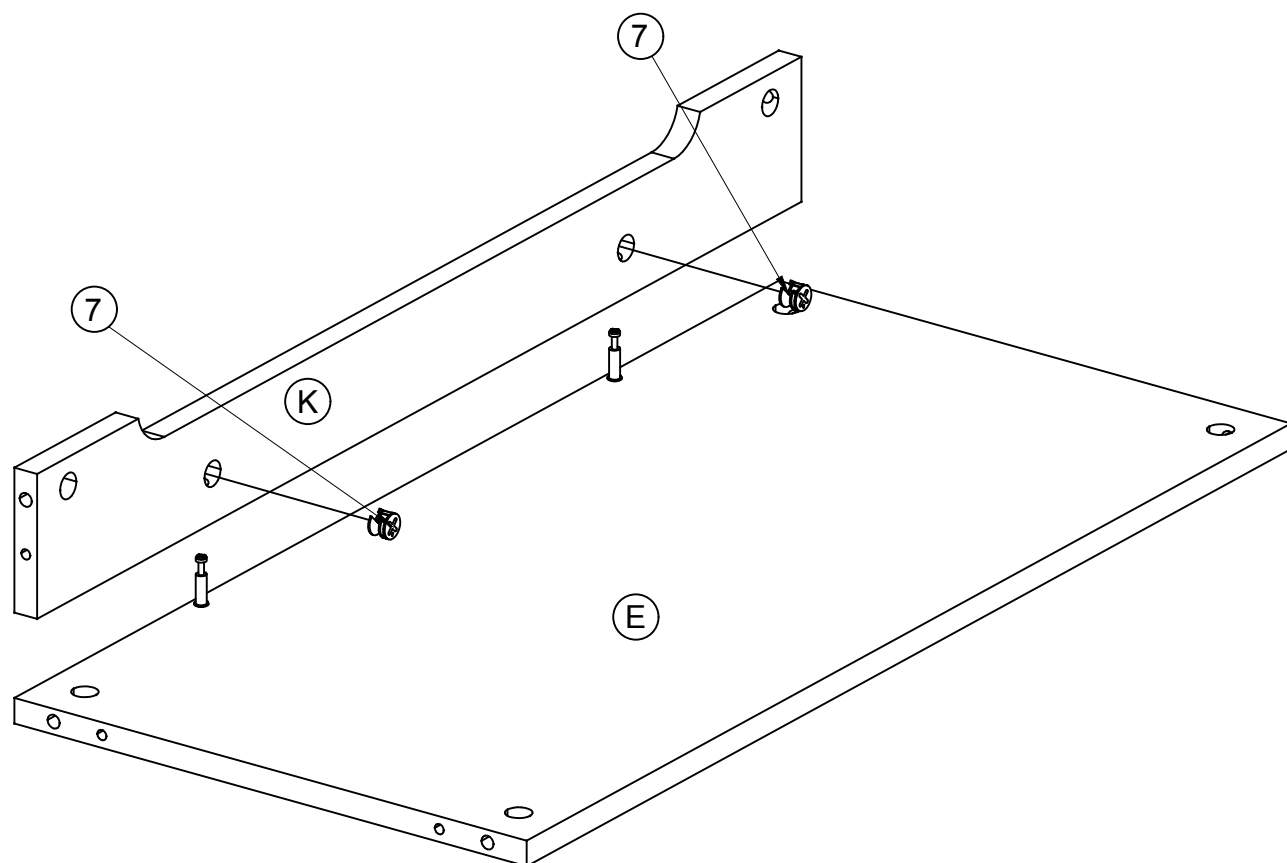



3



(6) x 6





(5) x 6

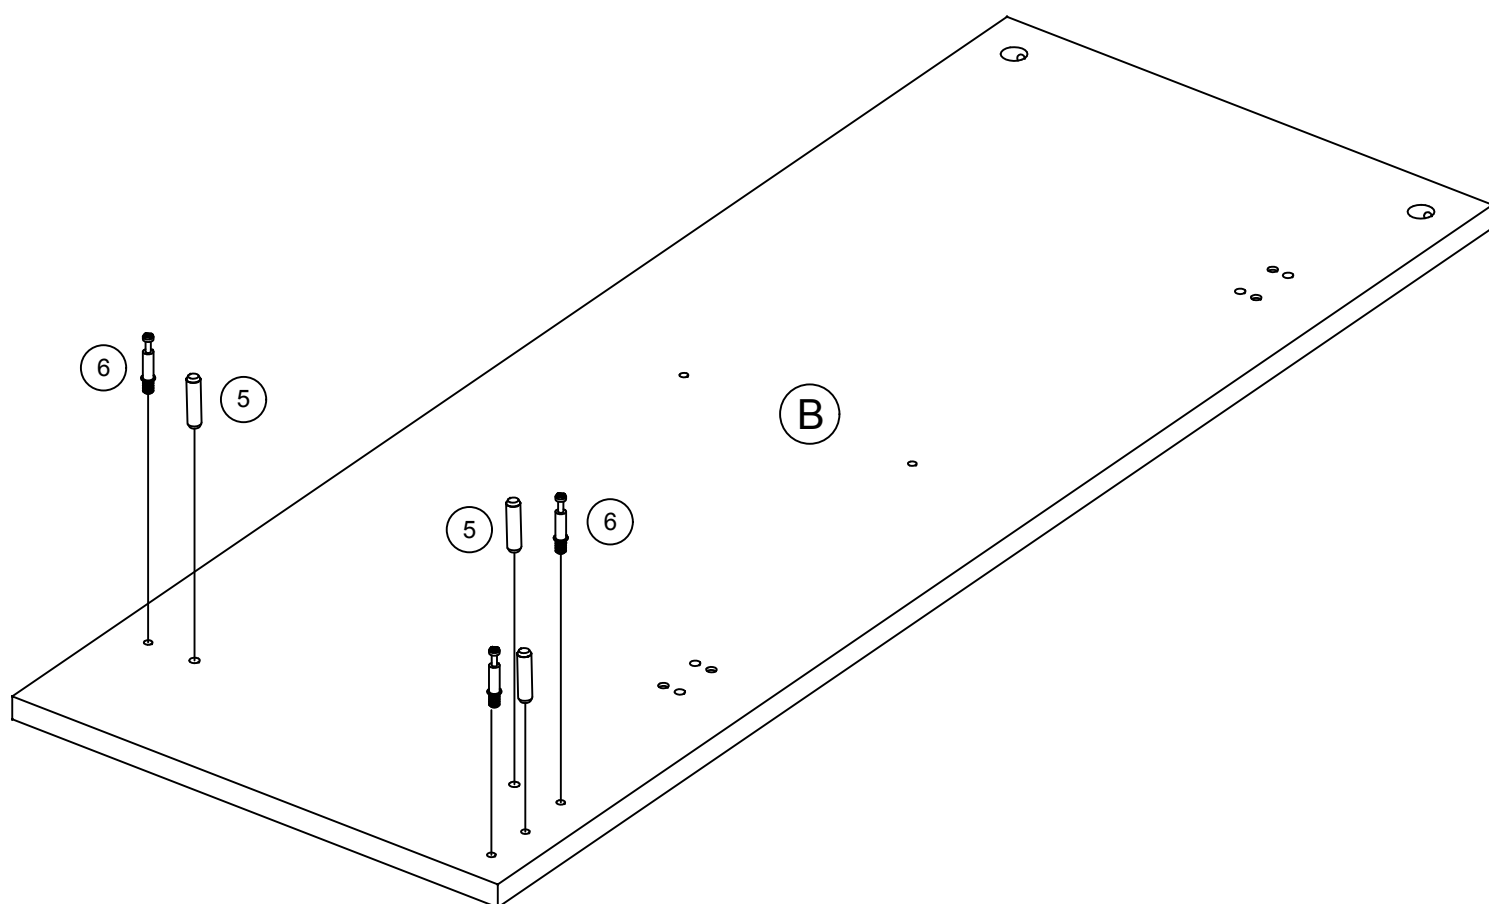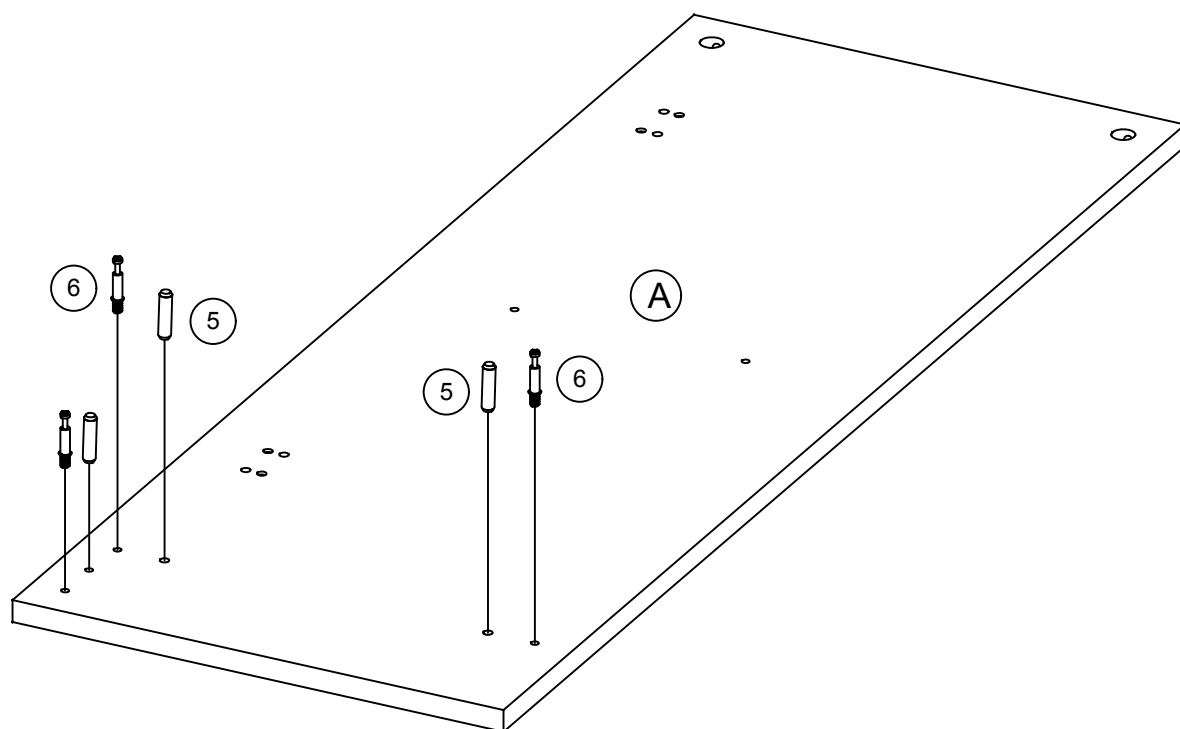

4




⑥ x 4

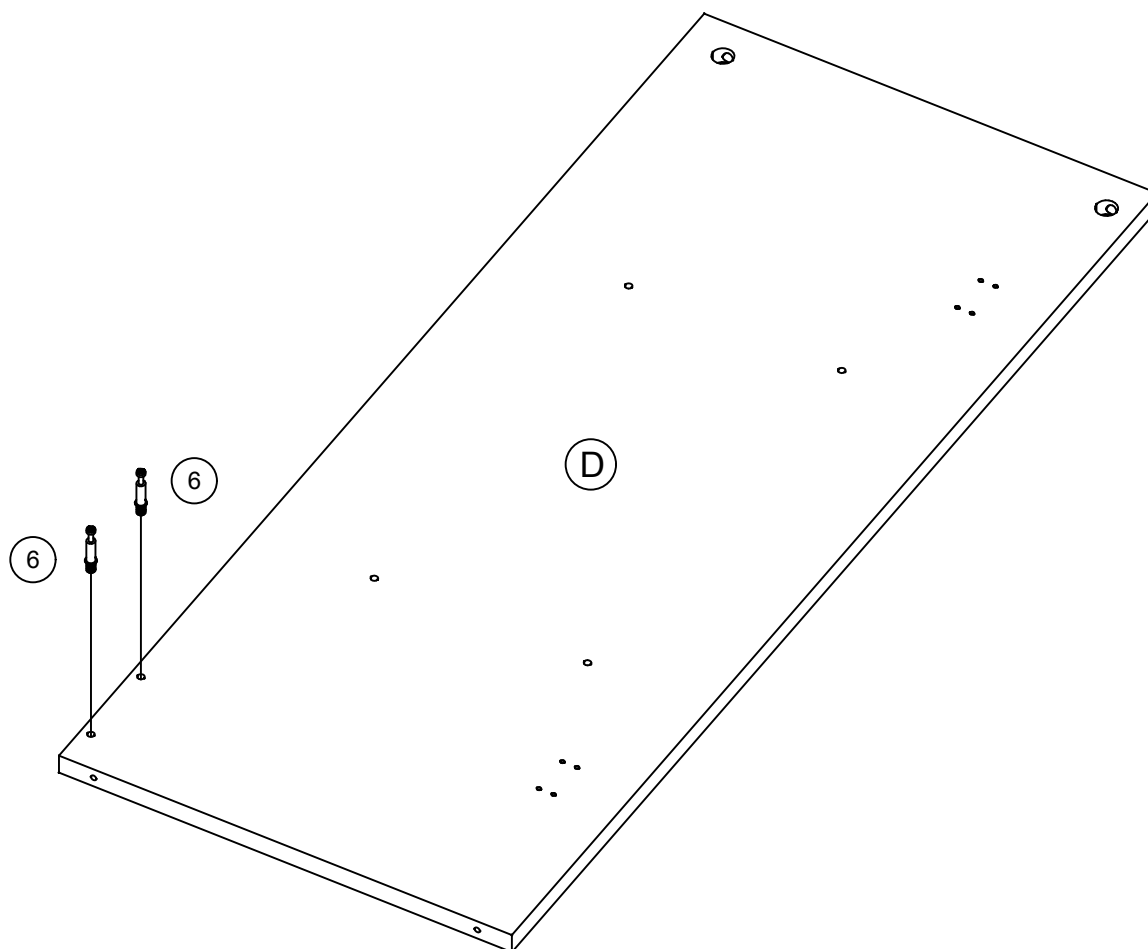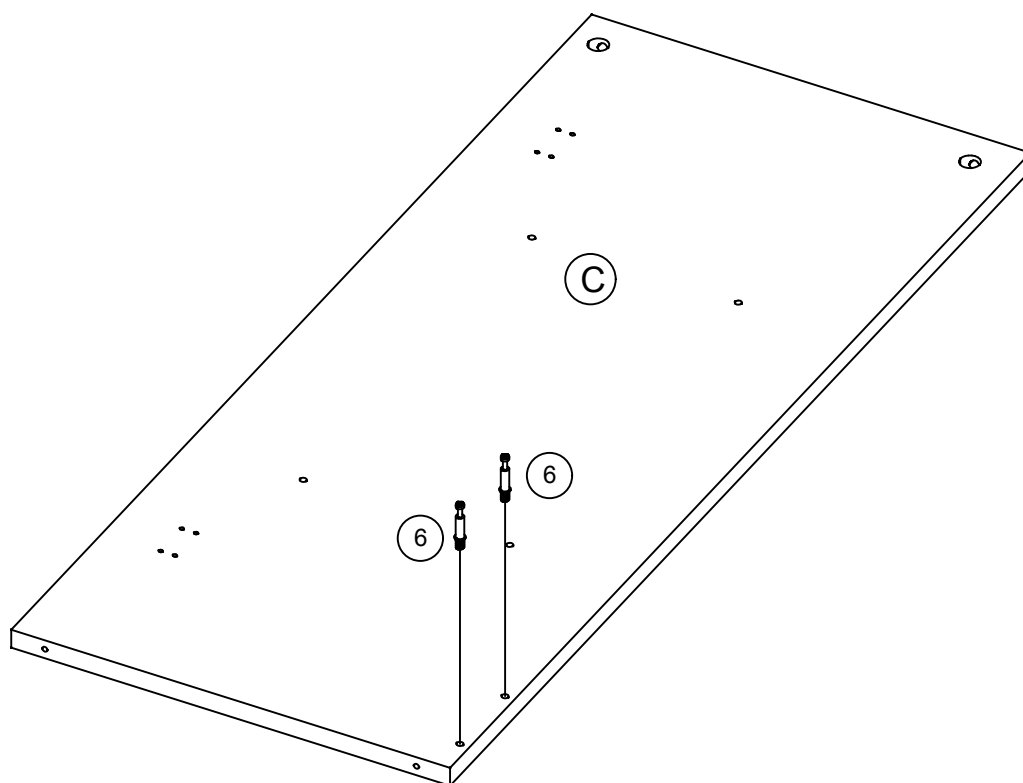

5




7 x 6

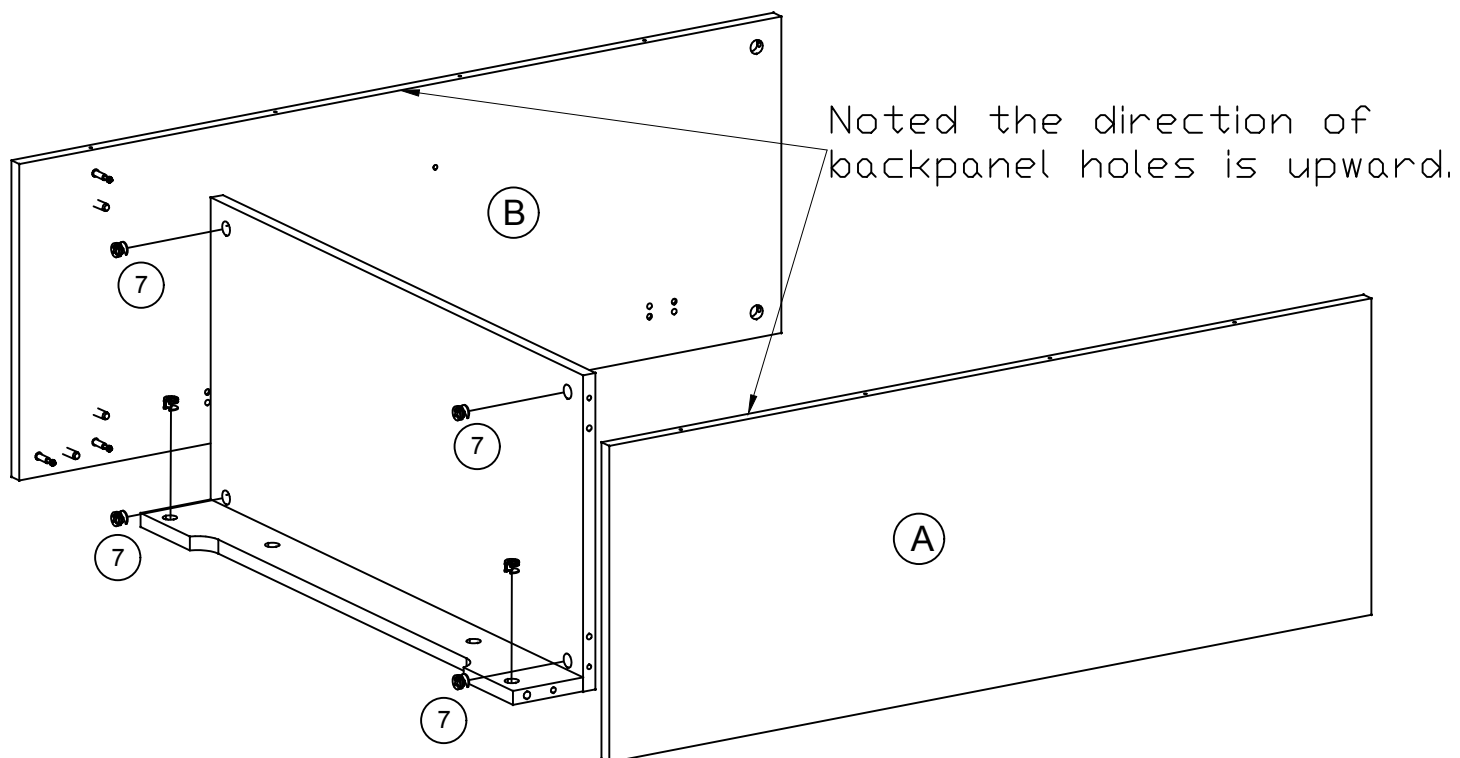

6



7 x 4

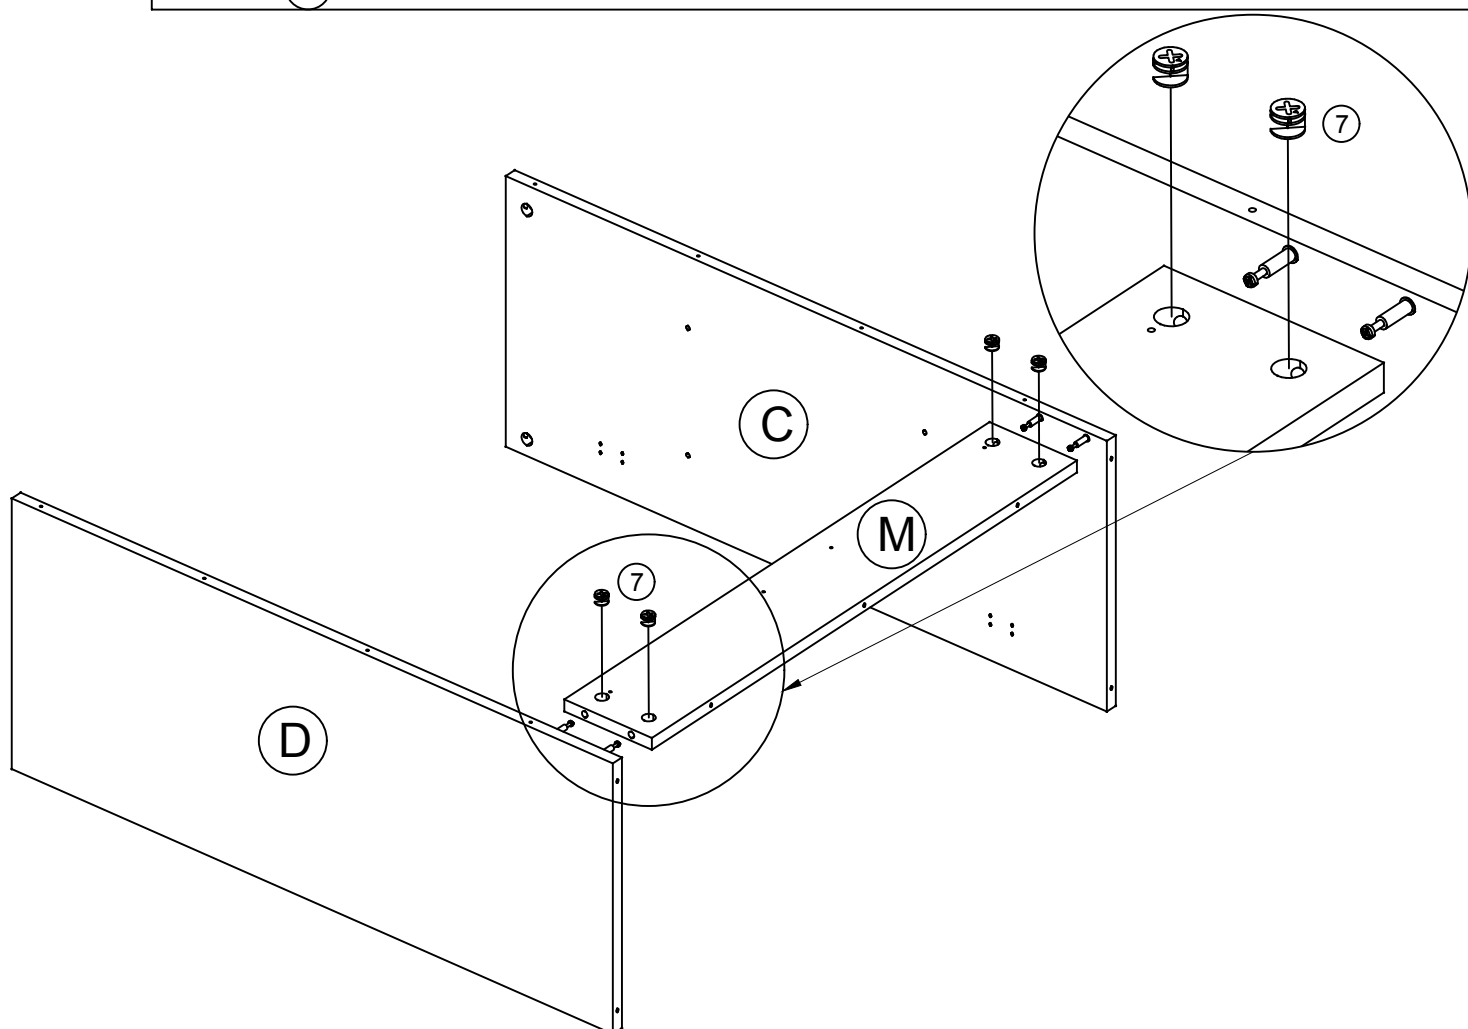


7

D5X40MM



① x 7

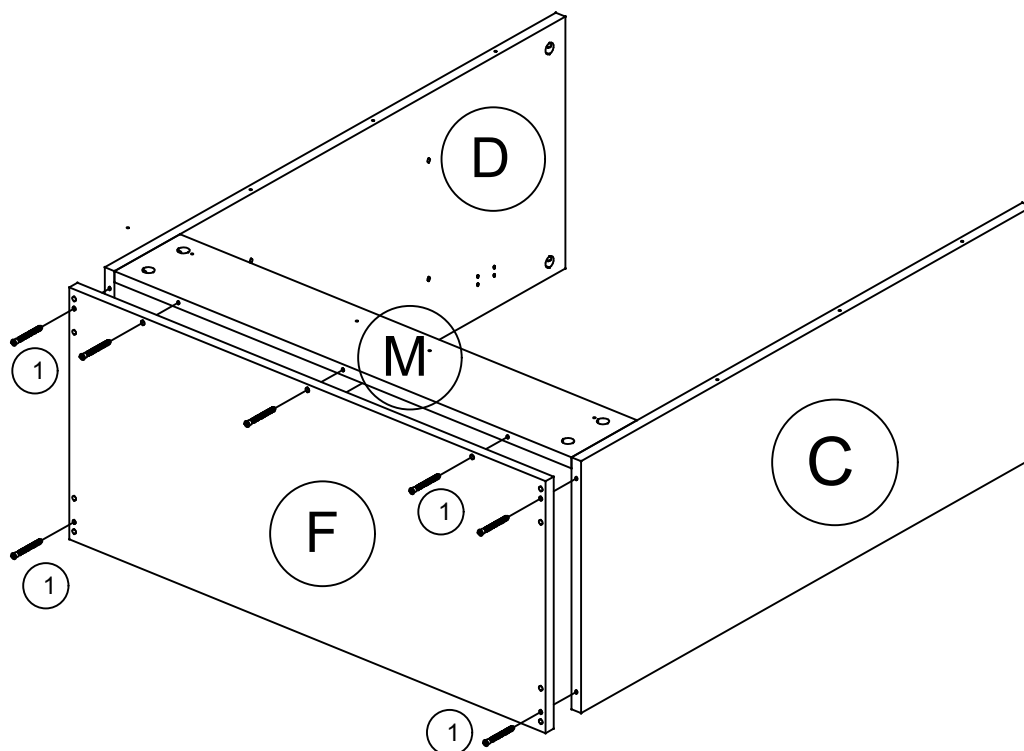


8




⑤ x 4





⑥ x 4

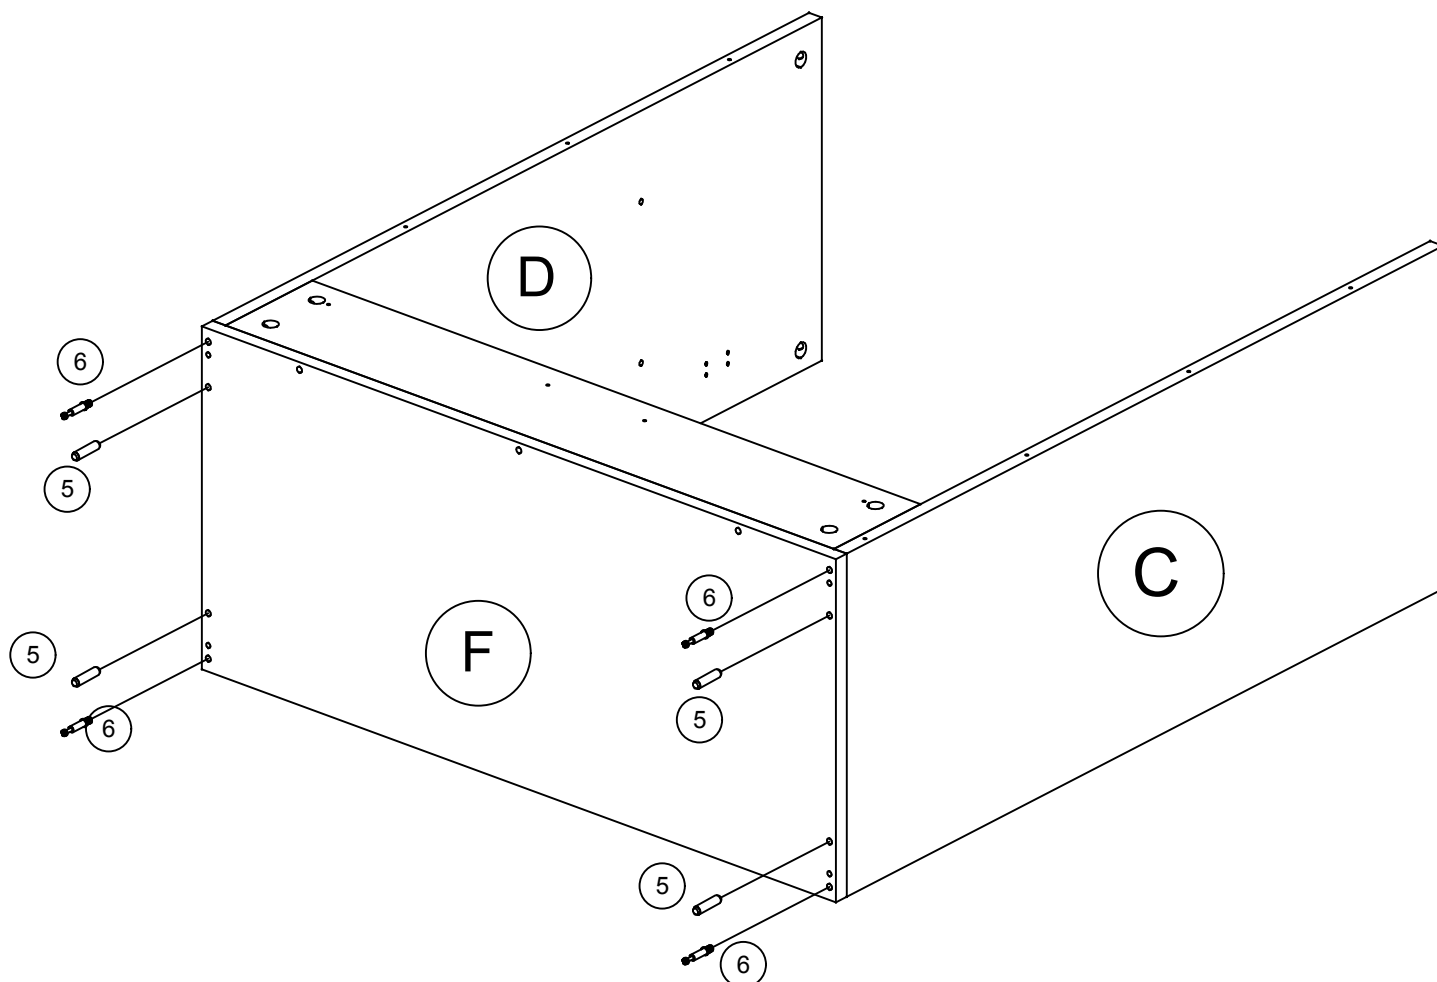

9

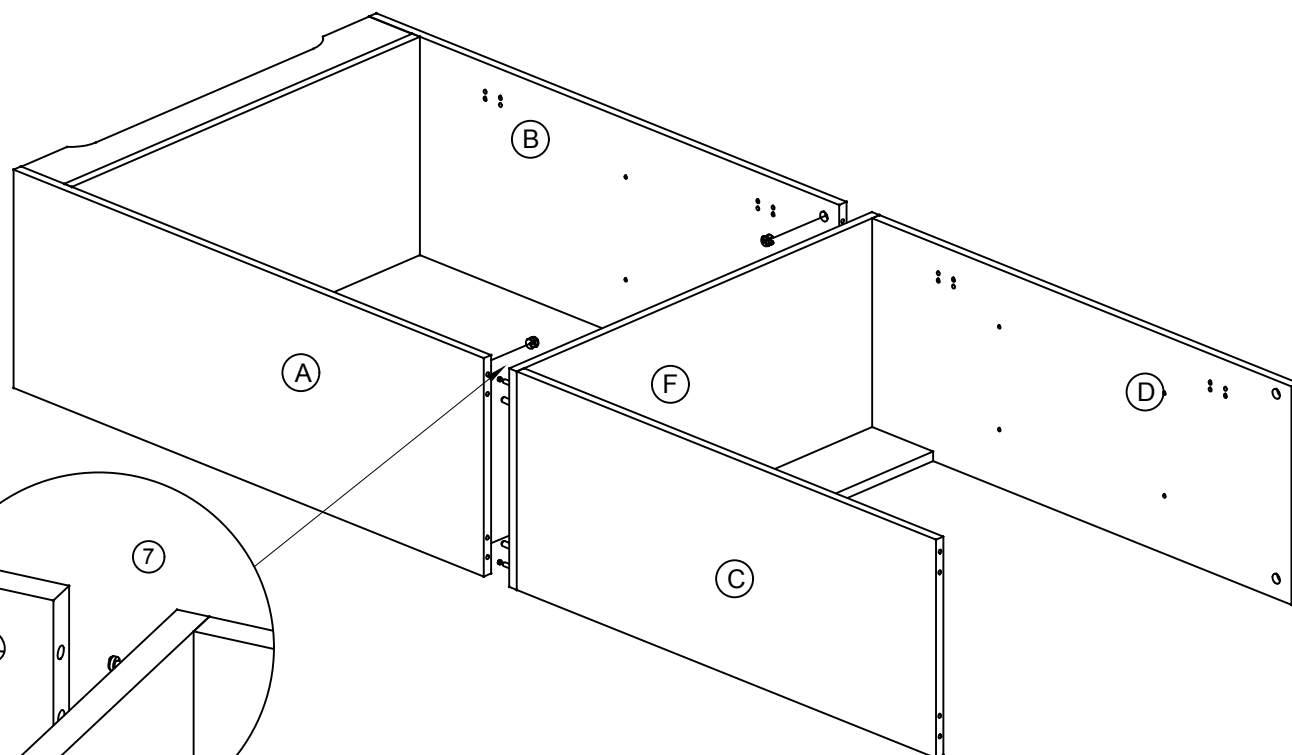


10

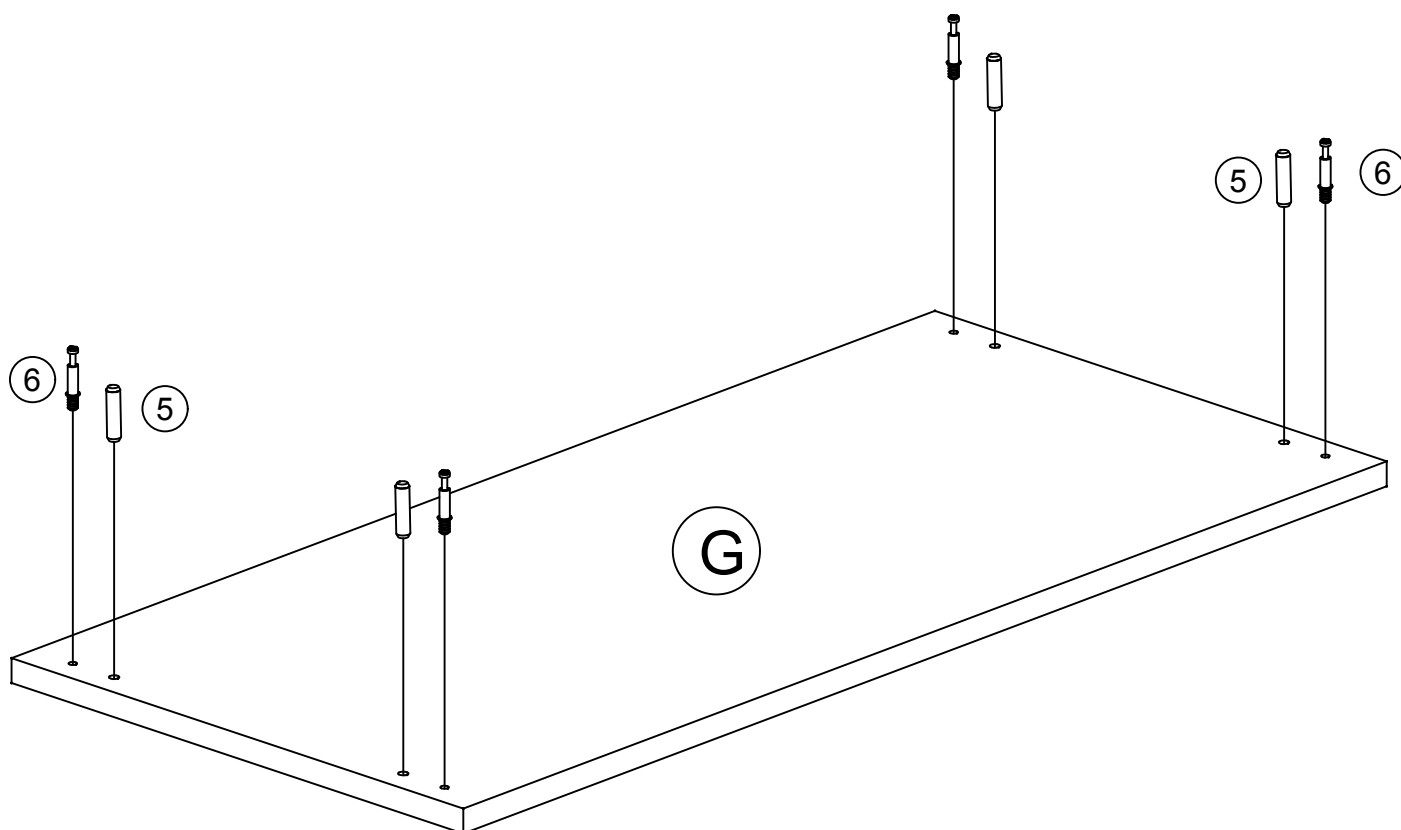

11






⑦ x 4

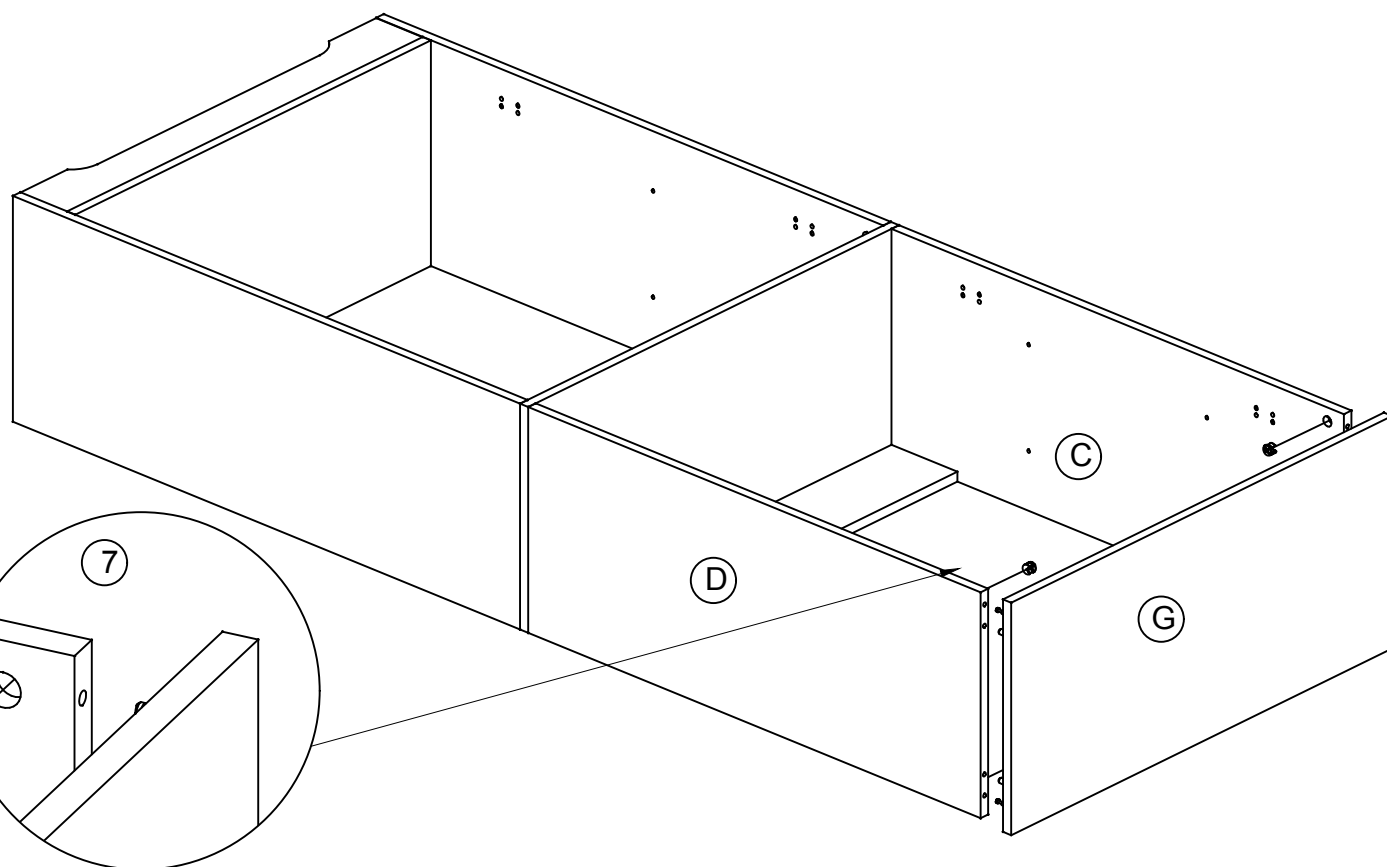

12


Pls careful to stand up the product.

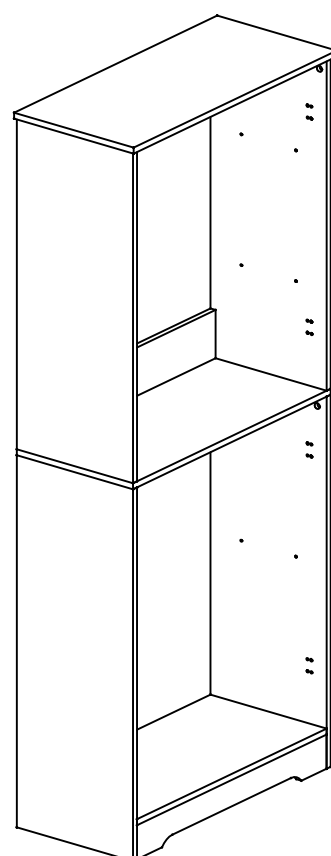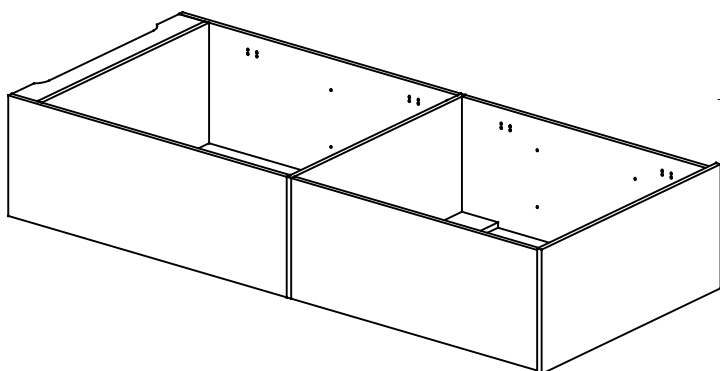

13





③ x 32

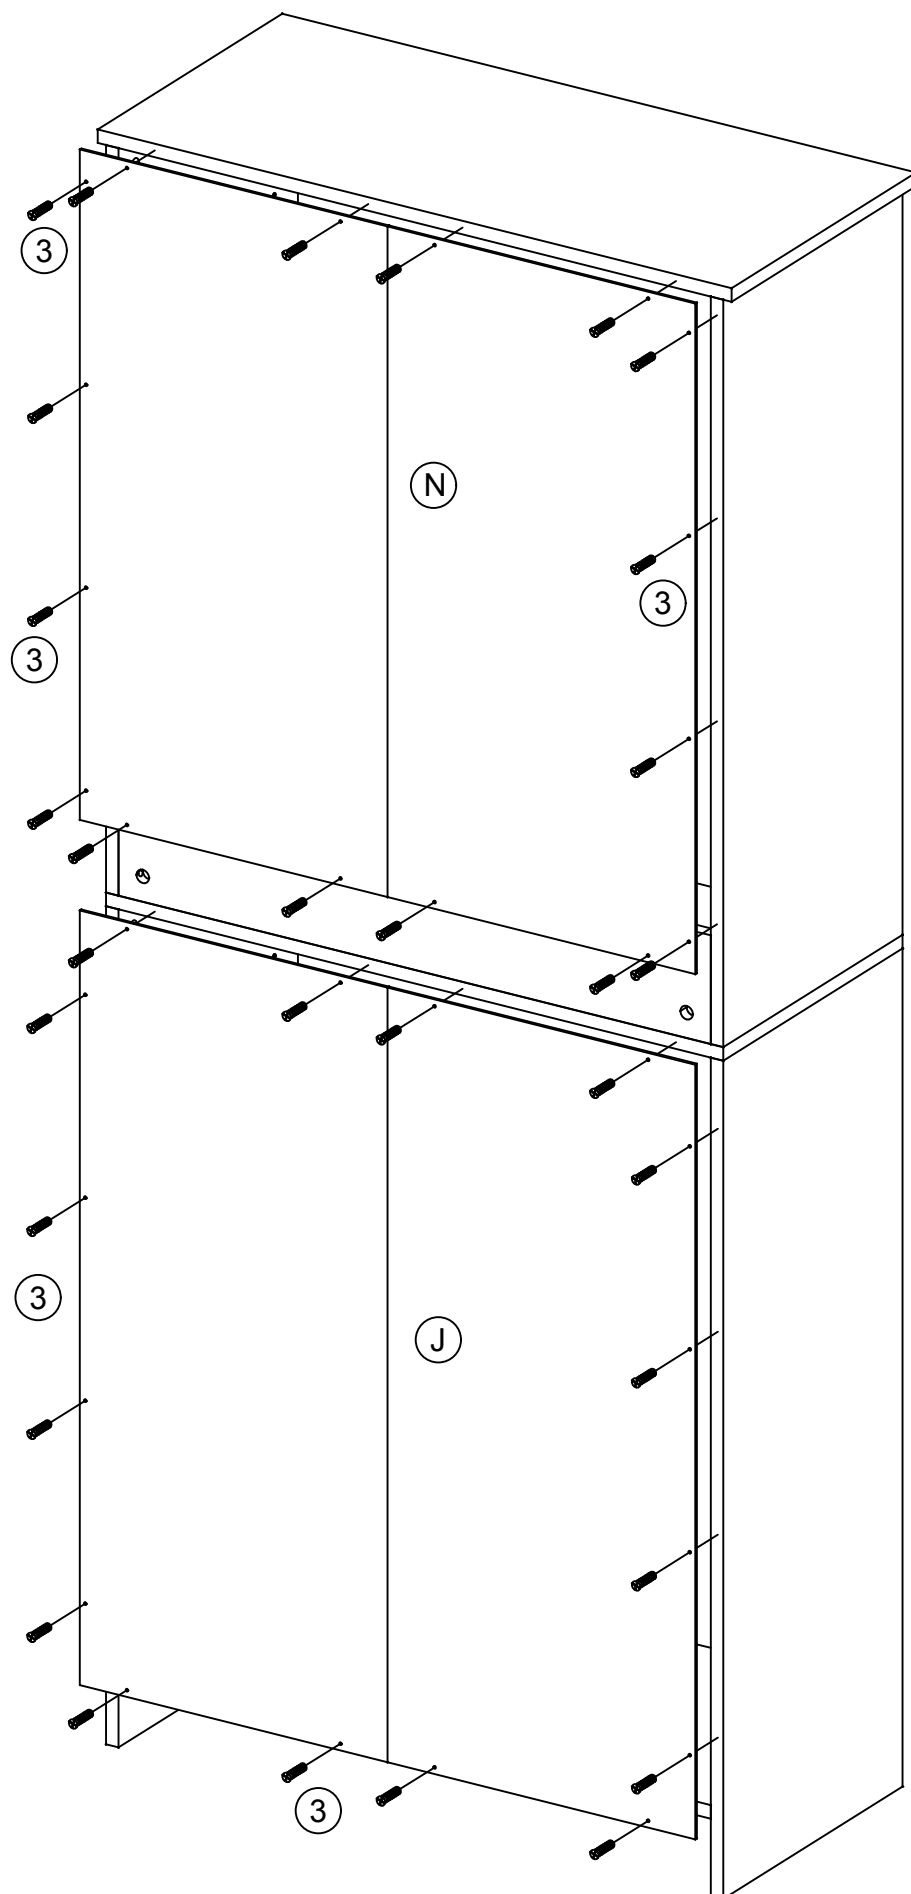

14



② x 12

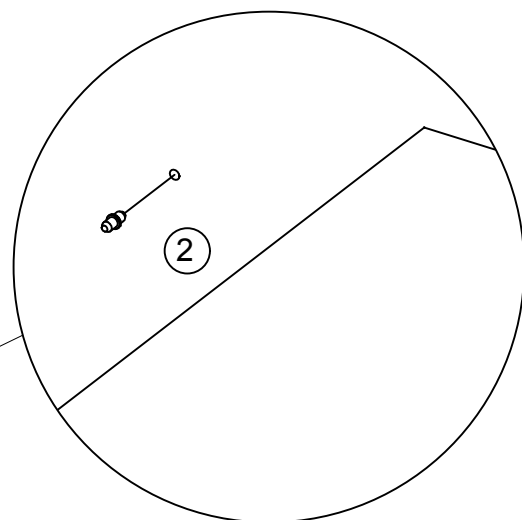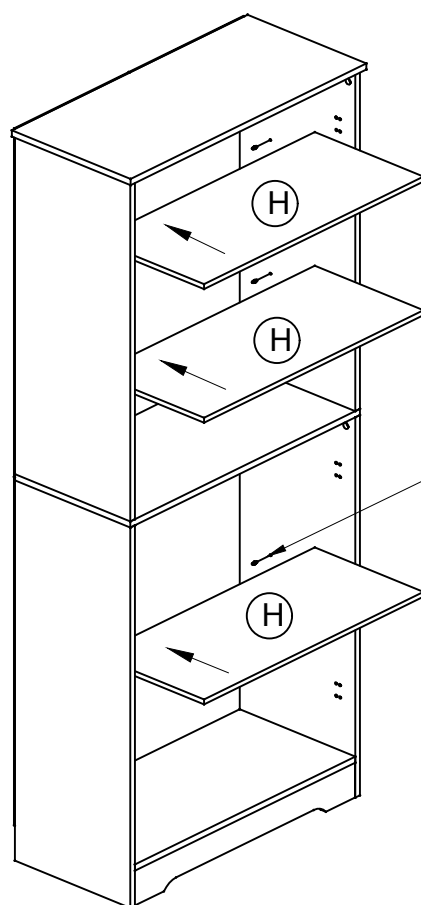

15

D3X12MM


M4*18MM



③ x 16




④ x 8



⑧ x 4




⑨ x 8

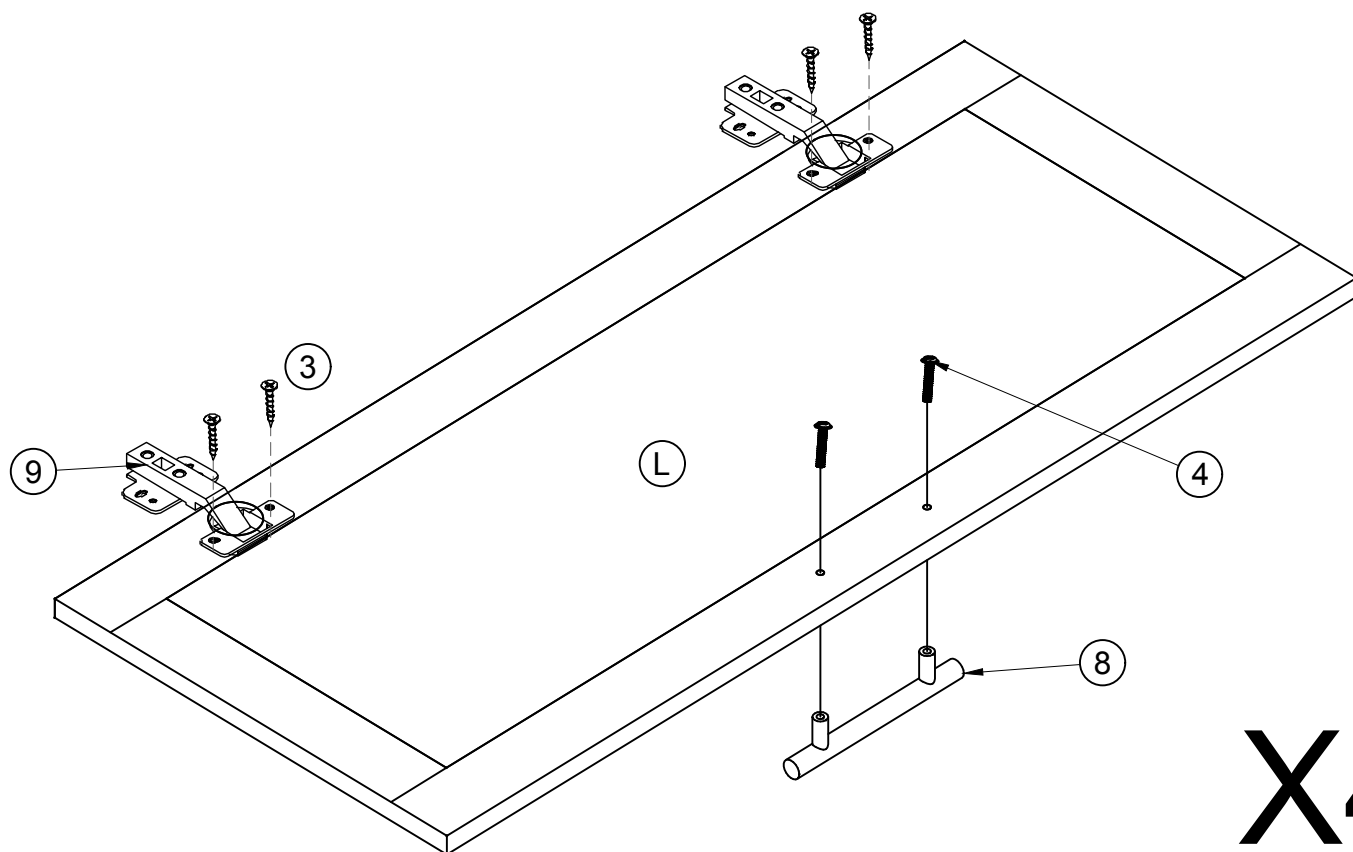

X4






16

D3X12MM




③ x 32


If the door gaps are uneven, Pls adjust as below

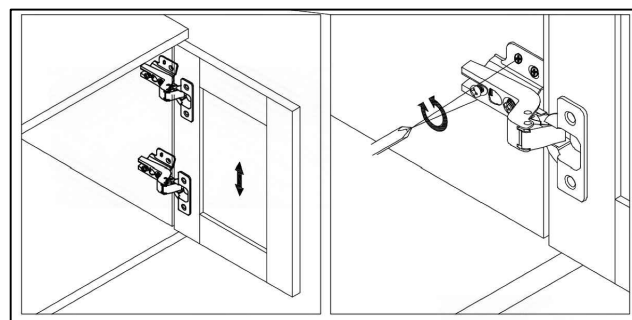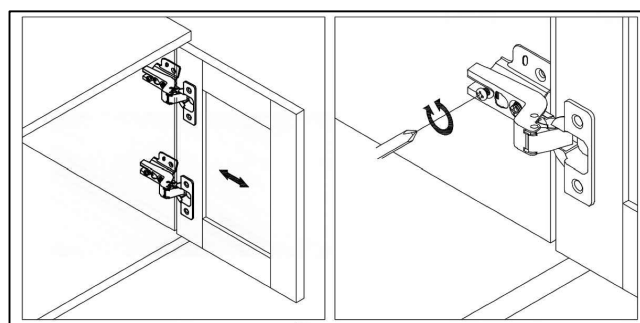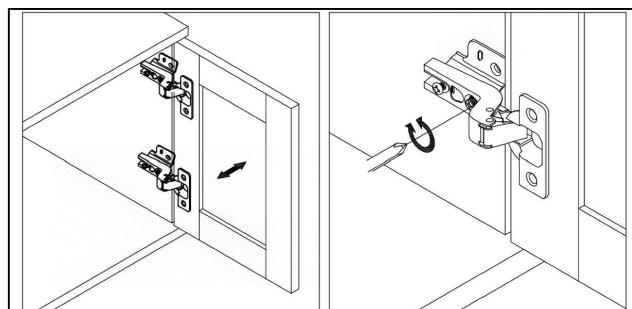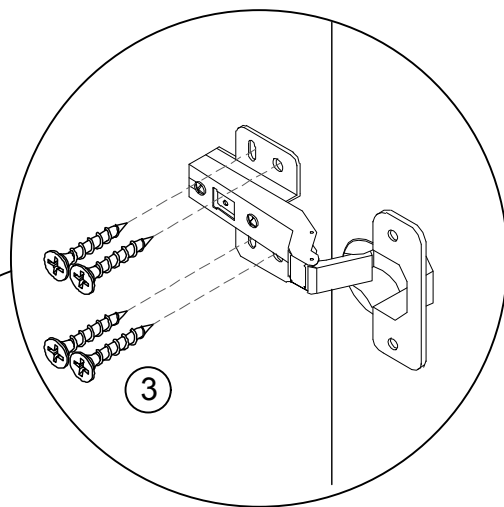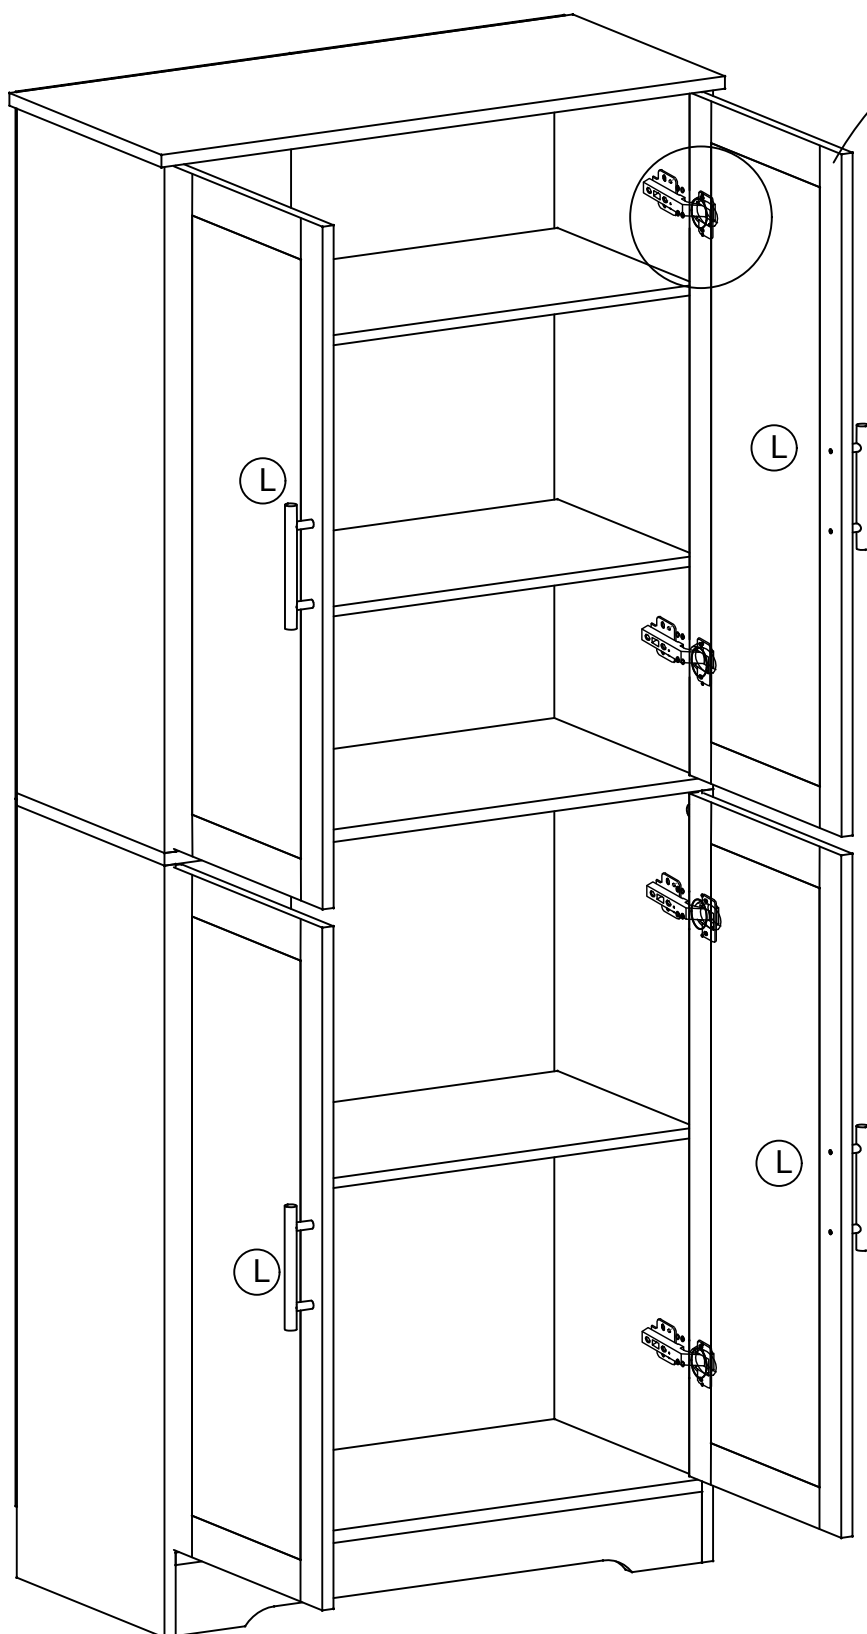



17




WALL

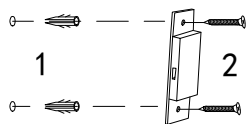

BOARD

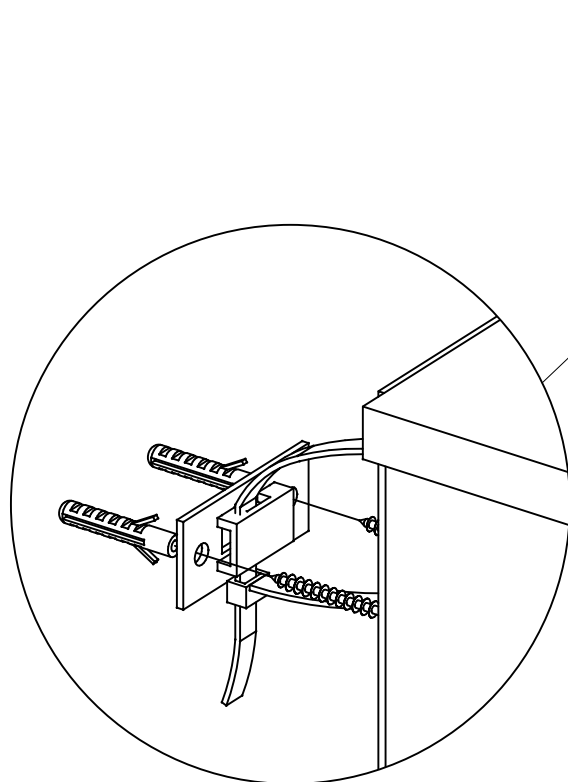


1. Drive the expansion screw into the appropriate position on the wall
2. Use long screws to install one of the plastic buckle seats in the appropriate position on the wall.
3. Use short screws to install the other plastic buckle in the appropriate position on the cabinet.
4. Push the cable tie through the two plastic buckle seats and pull tight. As shown in the figure.

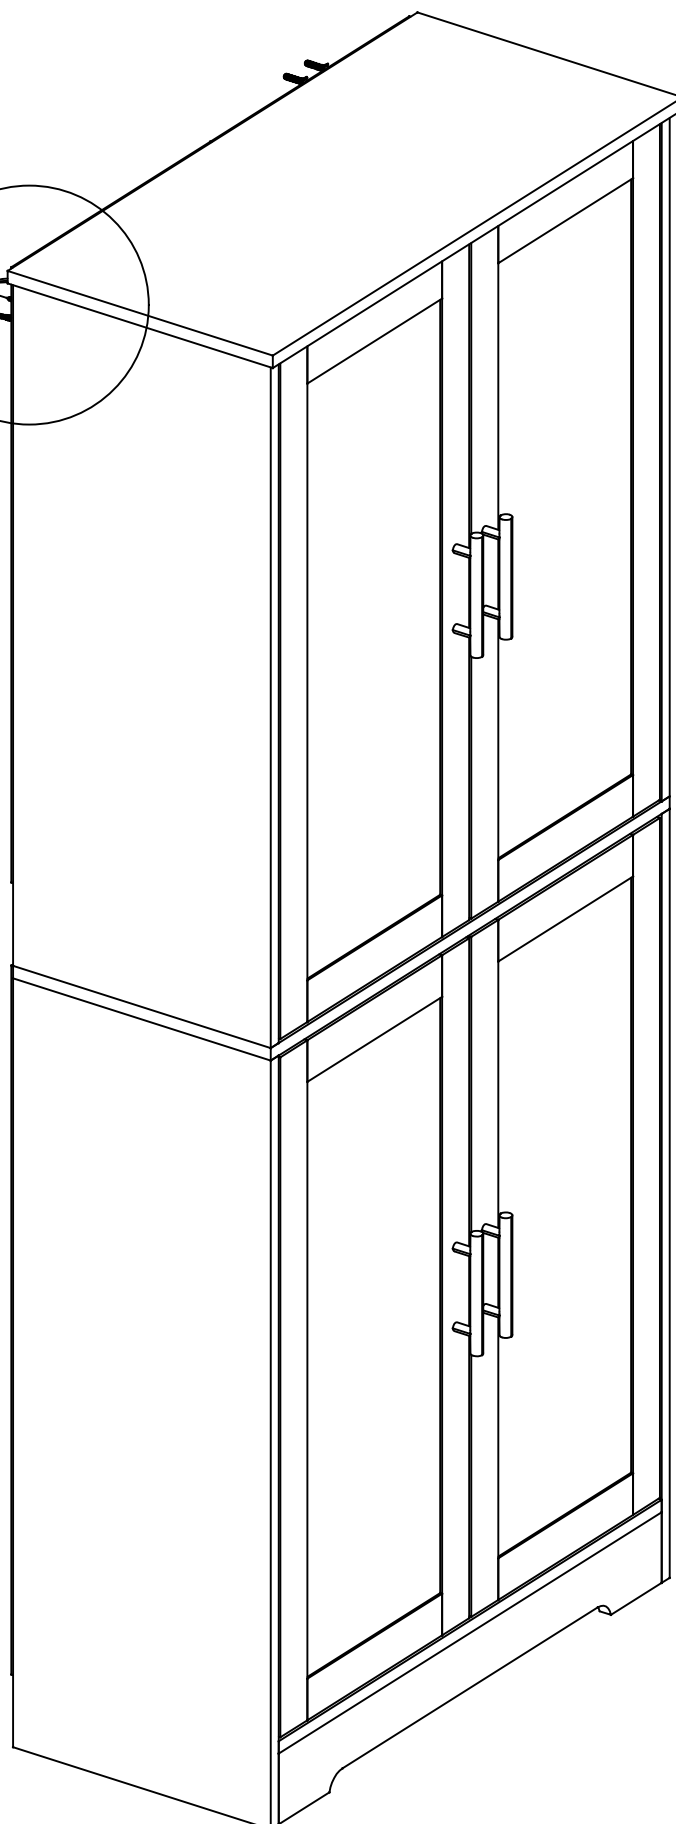

18

Finished assembly

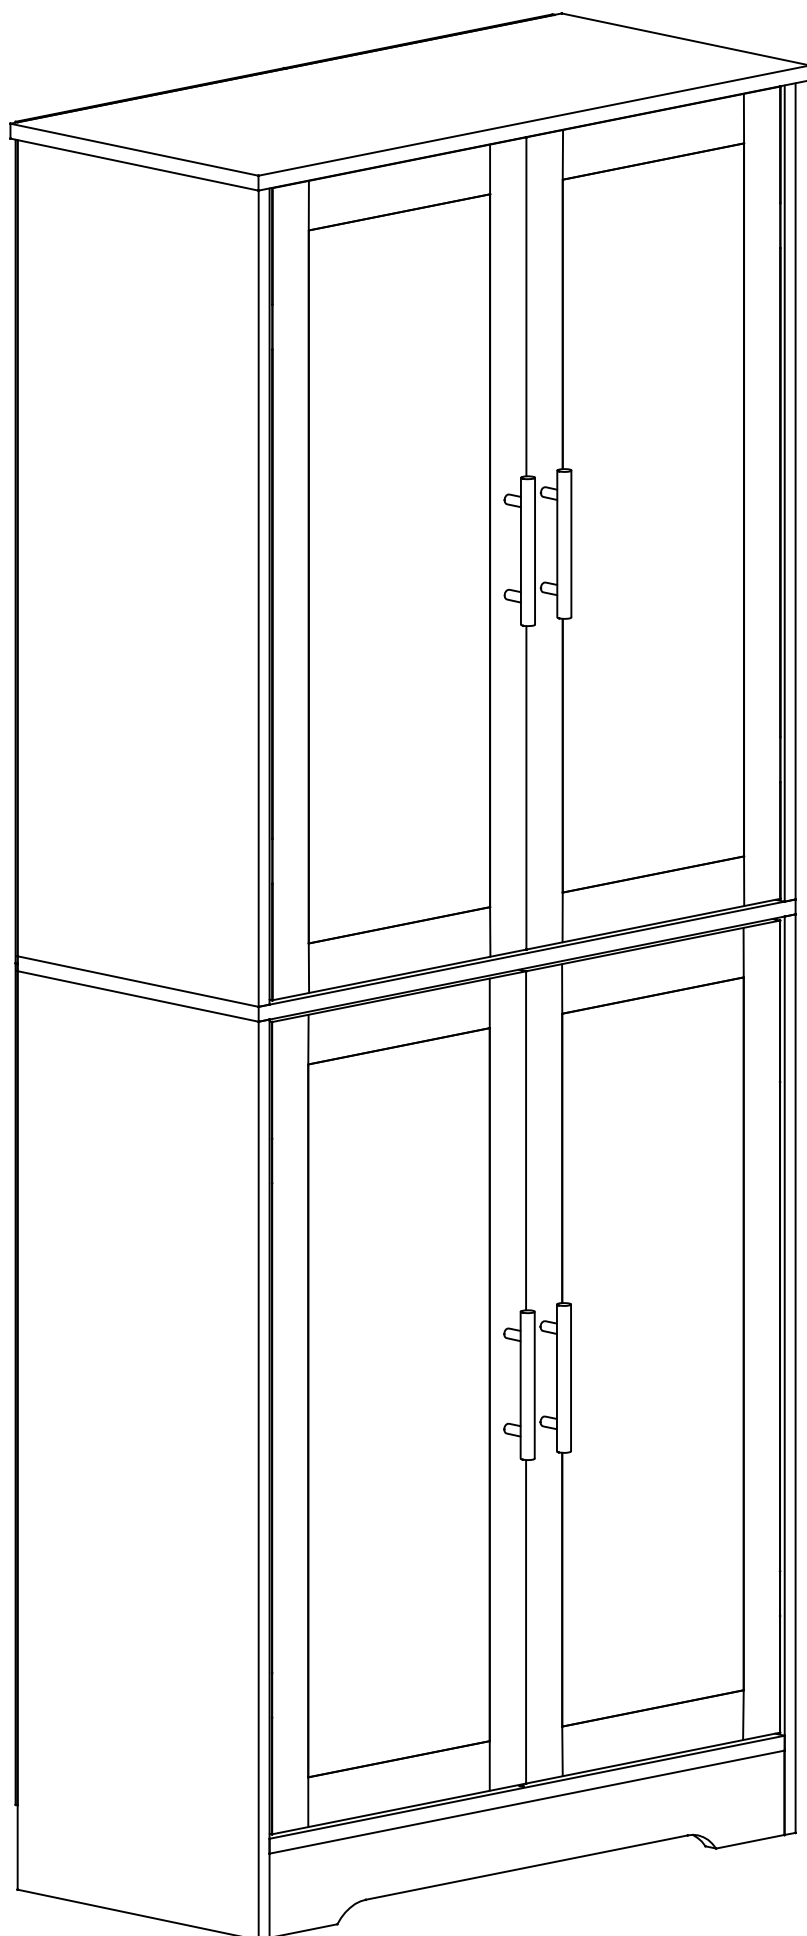

Dear customer, thank you for purchasing Idealhouse products! We are proud to present our customers with high quality products!



If you have any product quality or use problems, please contact our customer service by email, we will ensure your satisfaction.



If you are satisfied with our products, please share your amazing experience with us and other customers! It would be our honor to hear from you!