


Cat Tree

Instruction Manual

CW-MPJ-54IN

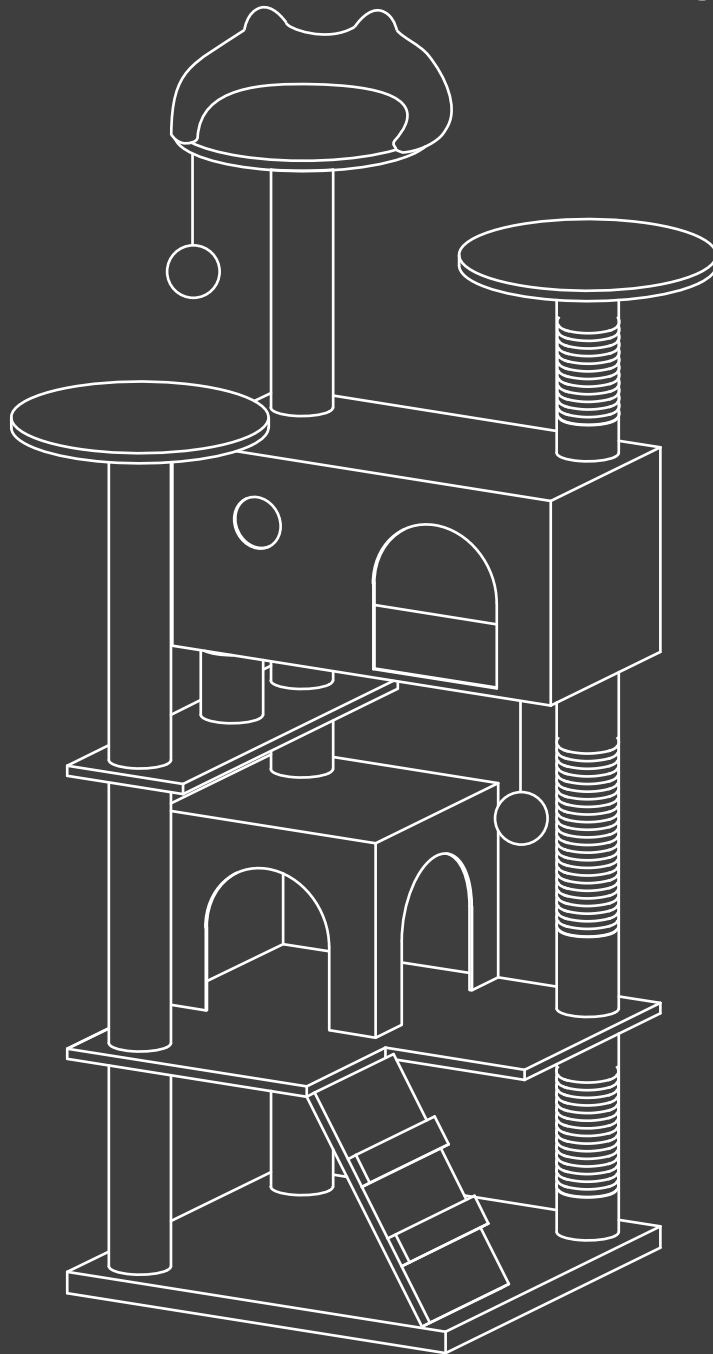


🕒 EST 9:00AM--17:00PM

✉ HJ-Customer-Service@outlook.com


☎ 6269443420 | 6267435564

A X1




Baseboard

B X1

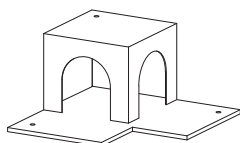


Cat Condo

C X1

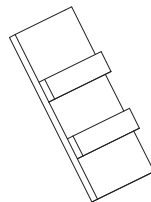


Stair

D X1



Board

E X1

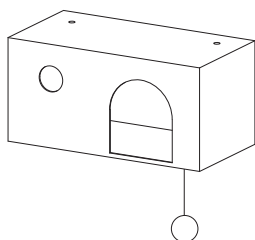


Cat Condo

F X2



Round Perch

G X1

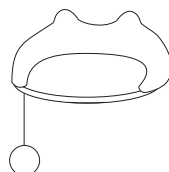

Round Perch

P1 X2



Pillar
250mm

P2 X1



Pillar
250mm

P3 X1



Pillar
320mm

P4 X1



Pillar
92mm

P5 X1



Pillar
412mm

P6 X2




Pillar
80mm

P7 X1



Pillar
390mm

P8 X1



Pillar
220mm

P9 X1



Pillar
320mm

P10 X8



Pillar
210mm


2

1 X4



Screws
M8x15mm

2 X2

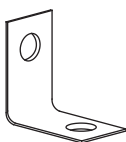

Angle Bracket

3 X27




Screws
M8x35mm

4 X4



Screws
M8x65mm

5 X1

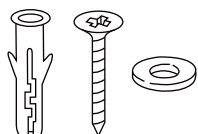

Anti-tip Kit

6 X1





Wrench

7 X2





Washer

Step 1

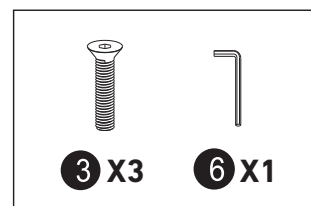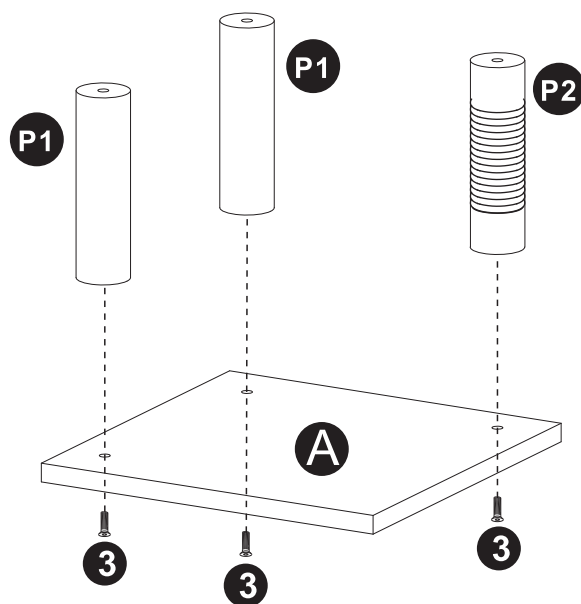



Install pillars into the corresponding holes in baseboard **A**.

Step 2

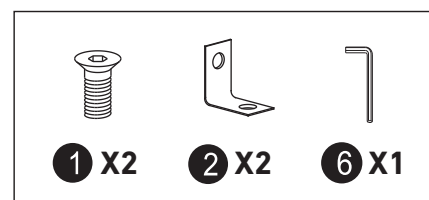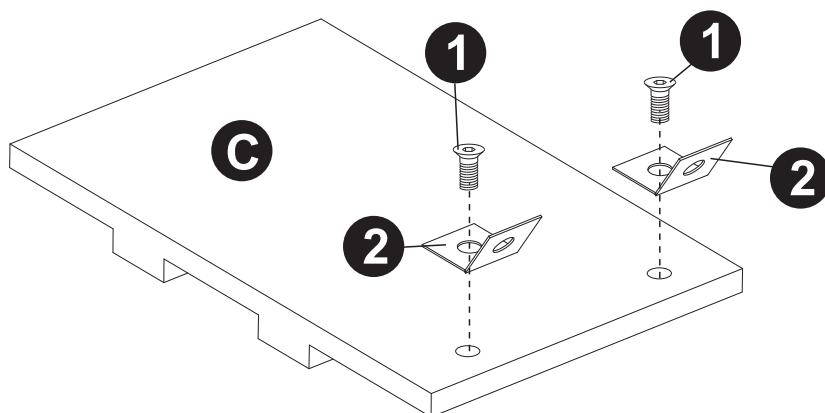

Secure angle bracket **2** to the back of the stair **C**.

Step 3

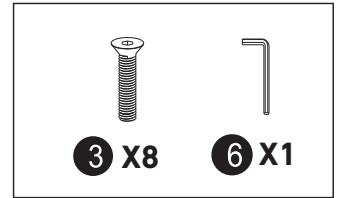
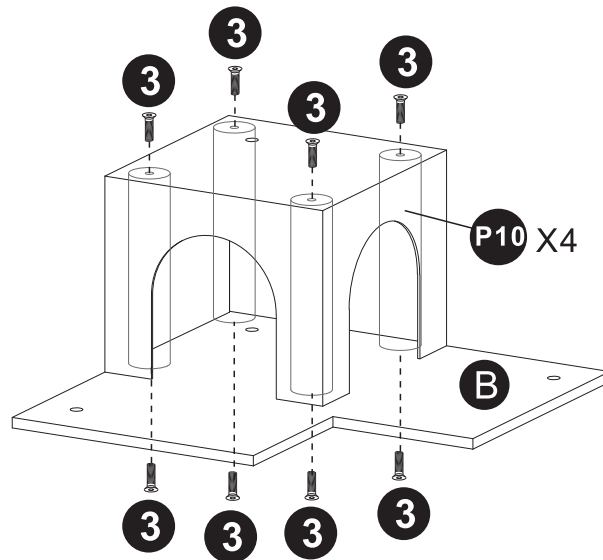


Install pillars into cat condo **B**.

NOTE:


Align the pillars with the outer holes as shown.

Step 4

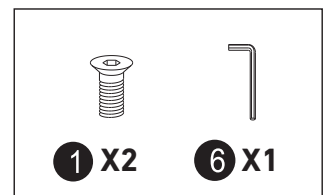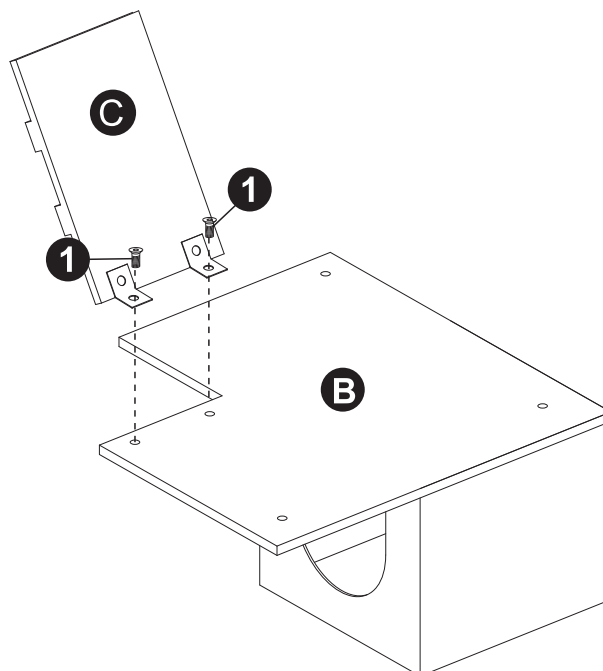

Install stair **C** onto the back of the cat condo **B**.


Step 5

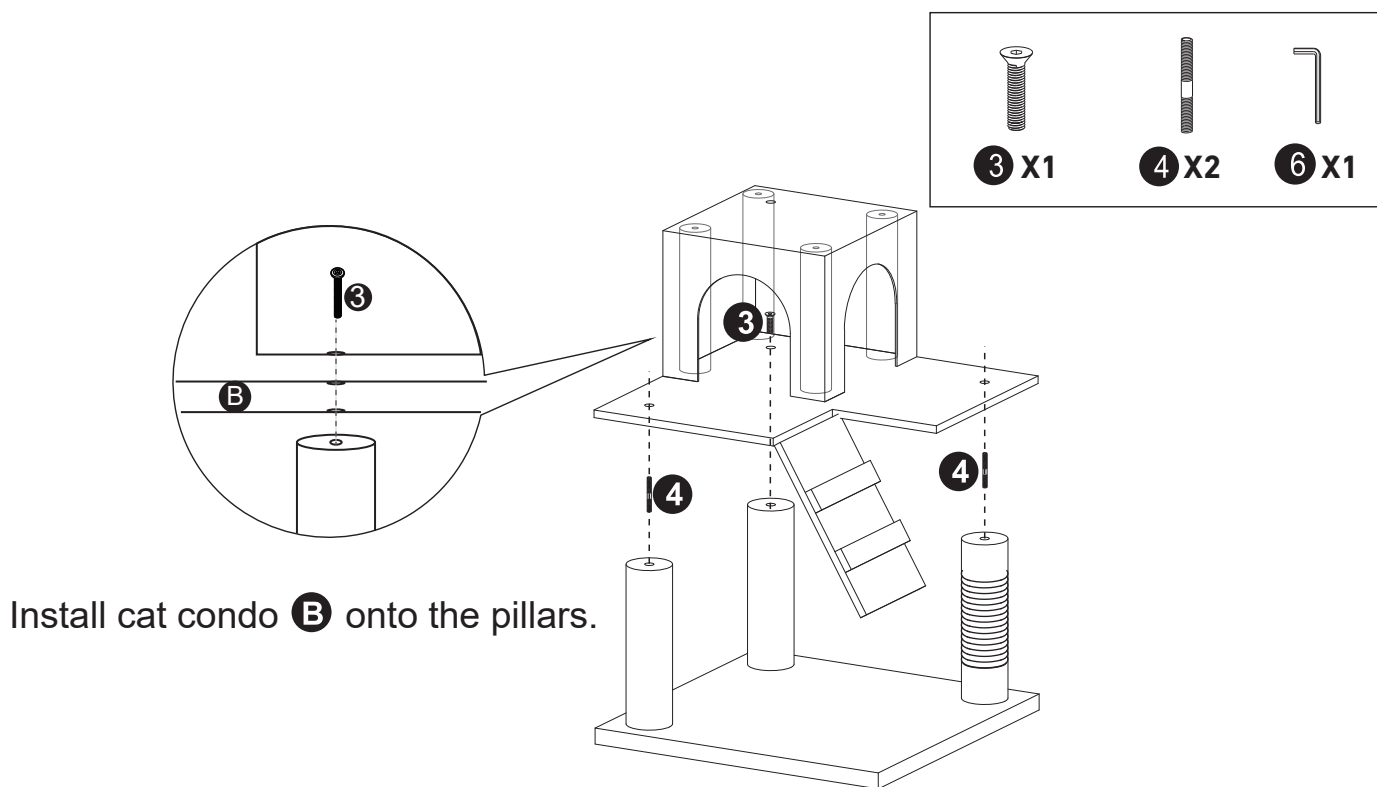

NOTE:





After tightening, adjust the stair slope as needed.

Step 6

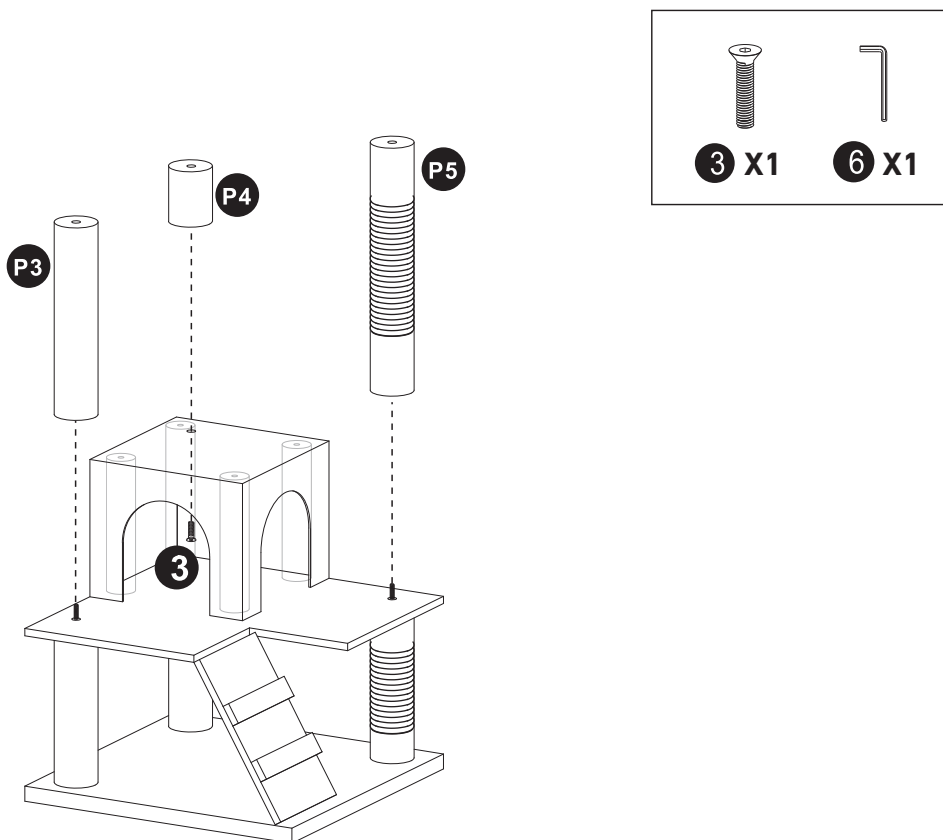

Install pillar **P4** onto the top of the cat condo and pillars **P3** & **P5** onto the L-shaped board.


Step 7

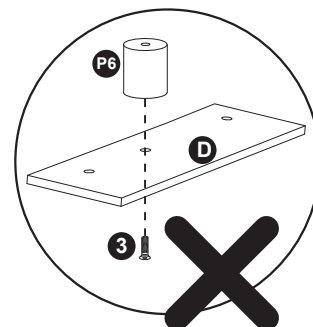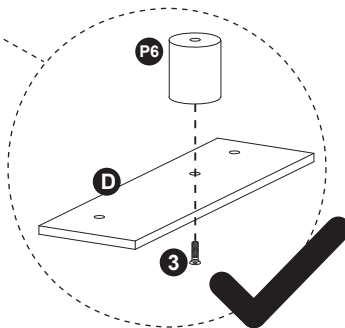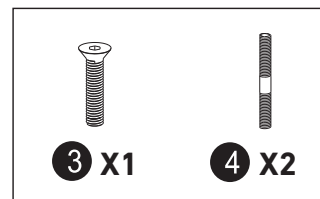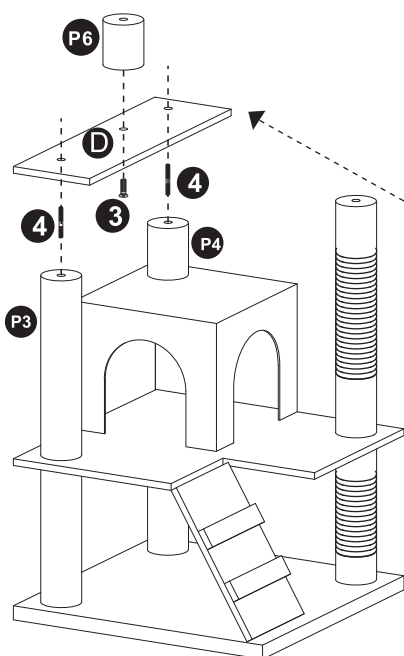


Install board **D** and pillar **P6**.

NOTE:

Install the pillars correctly as shown.


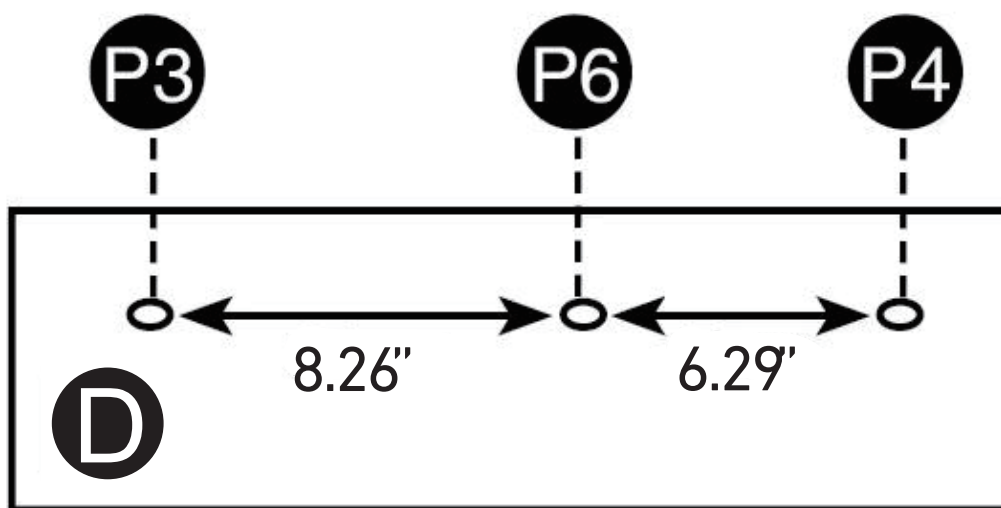


Step 8

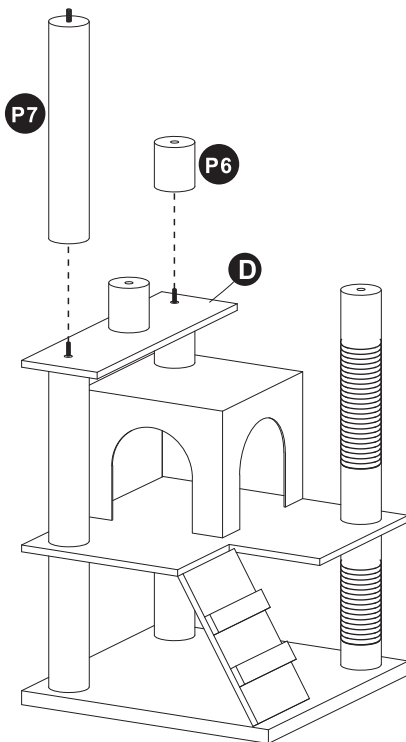

Install pillars onto the main body.

Step 9

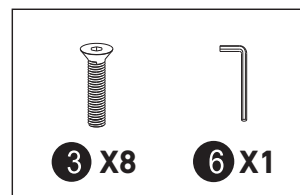
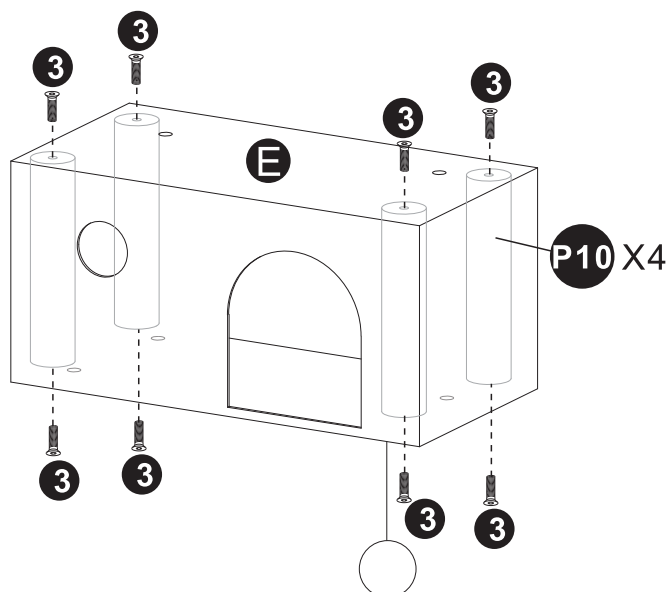


Install pillars into cat condo **E**.

NOTE:



Align the pillars with the outer holes as shown.

Step 10

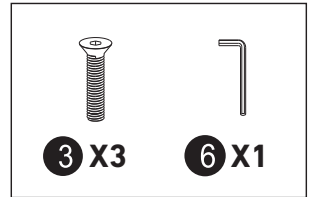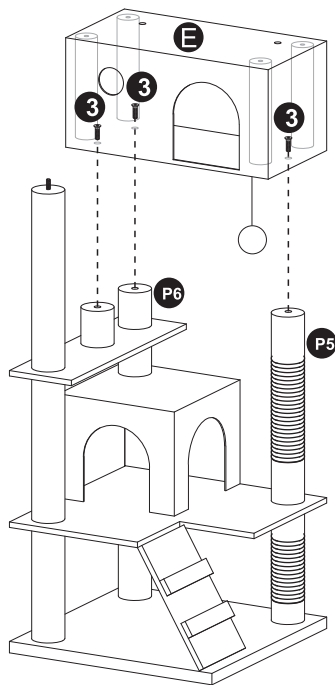


Step 11

Secure the bottom of the cat condo **E** to the pillars.

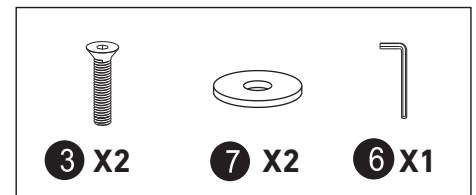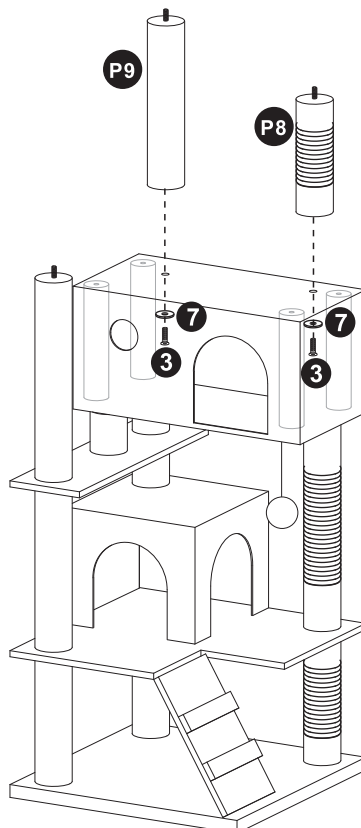



Install pillars onto the top of the cat condo.

Step 12

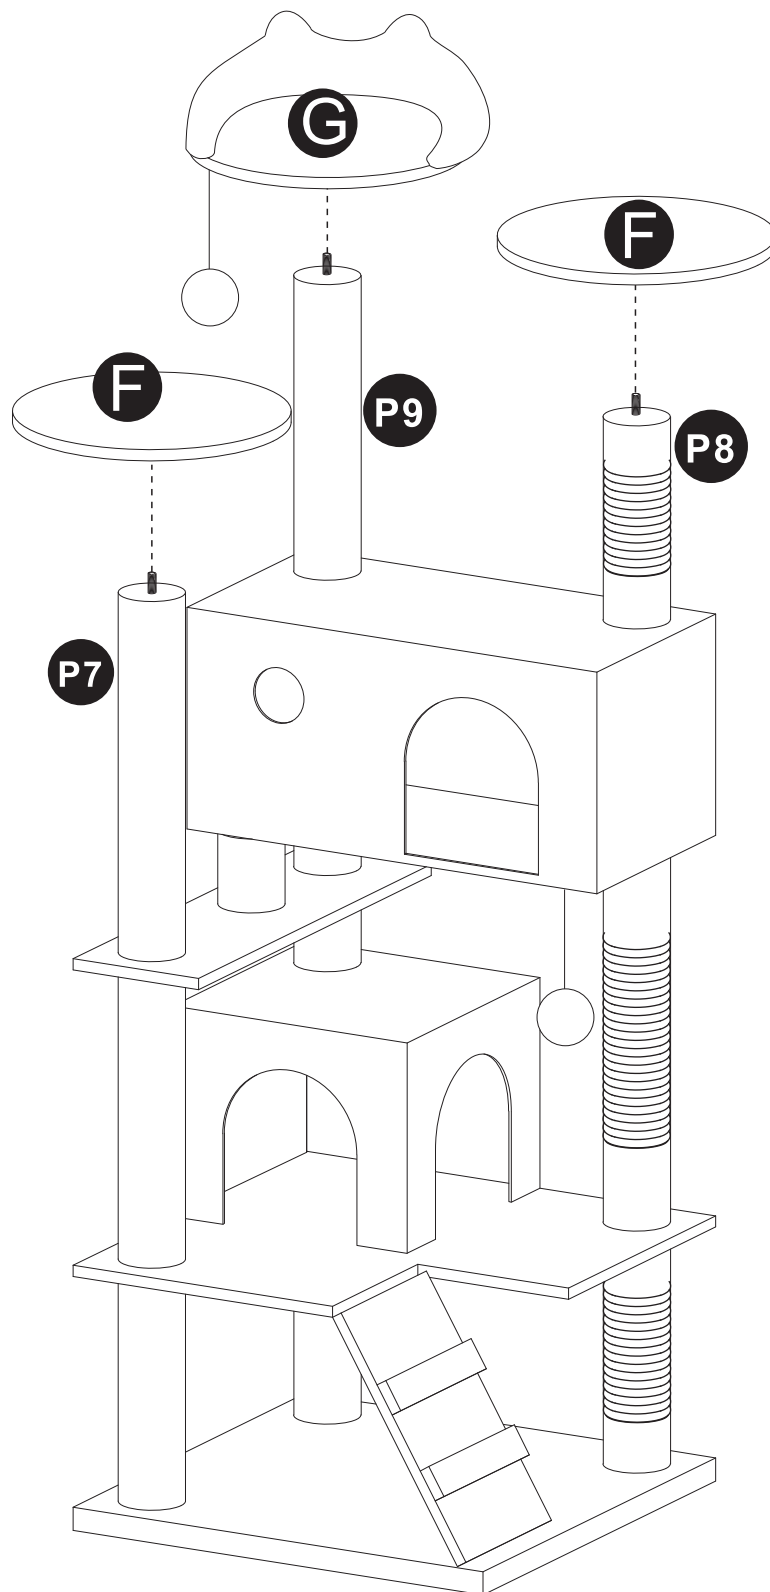


Install three cat perches onto the pillars.

Step 13

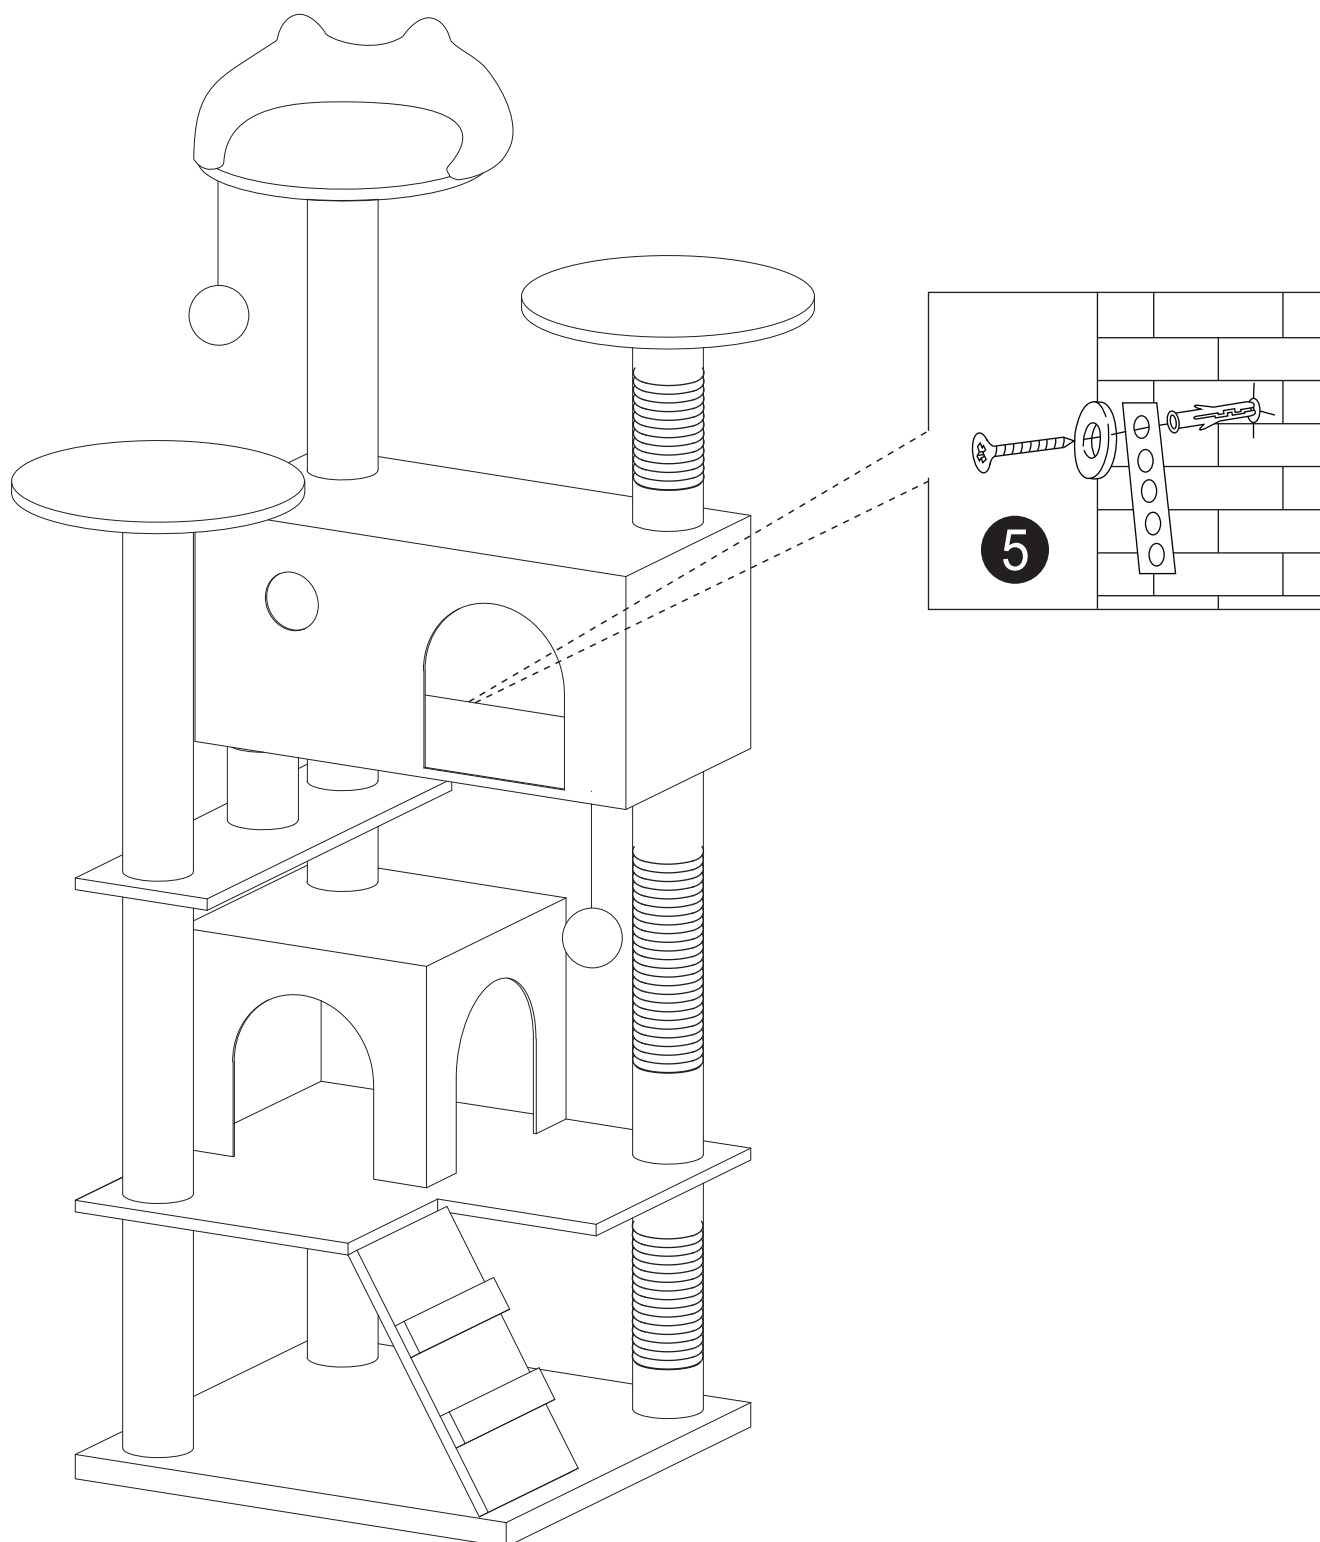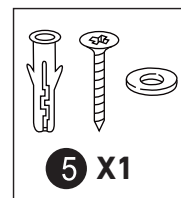

Install the anti-tip kit to the wall through the strap on the back of the product.

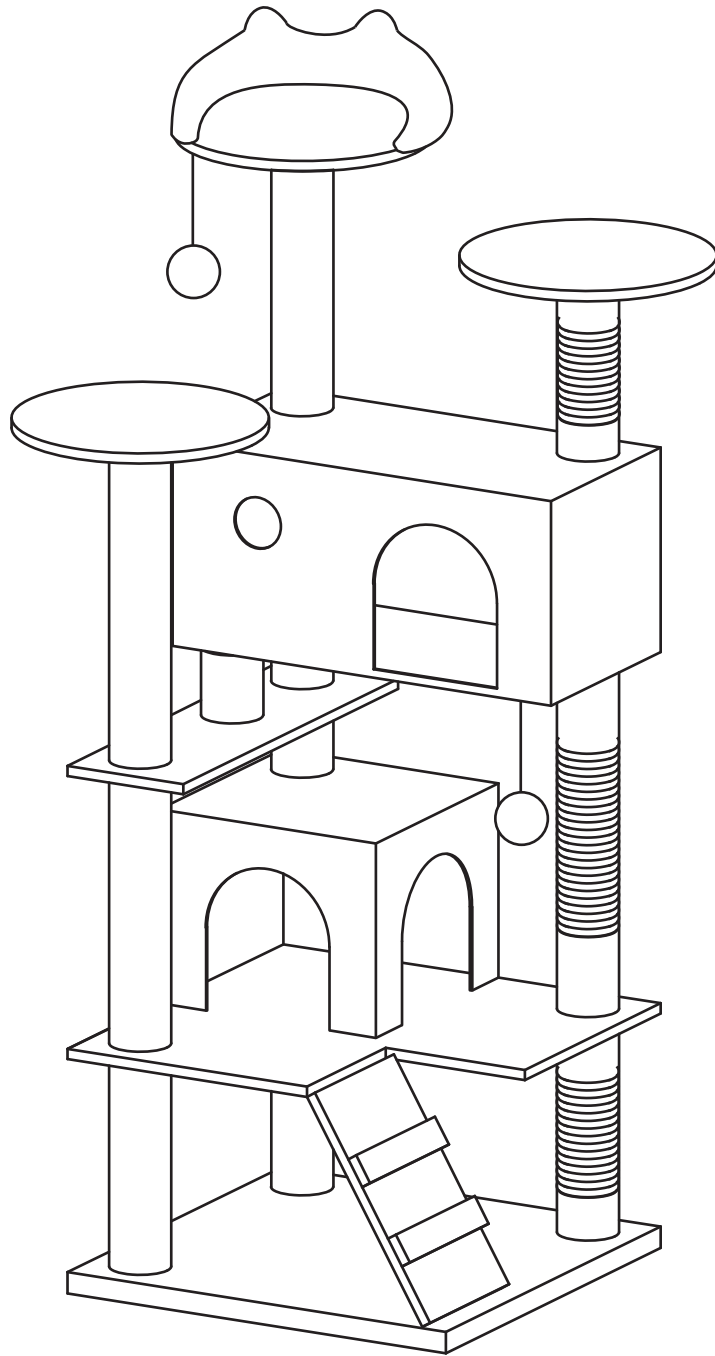

Technical Support

6269443420 | 6267435564

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us.