




Convertible Sofa Sleeper

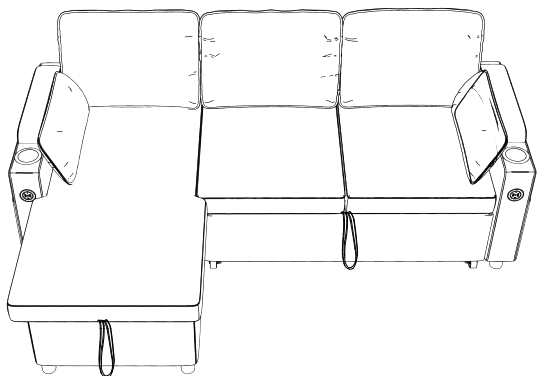


**L shaped sofa
(Left Facing)**

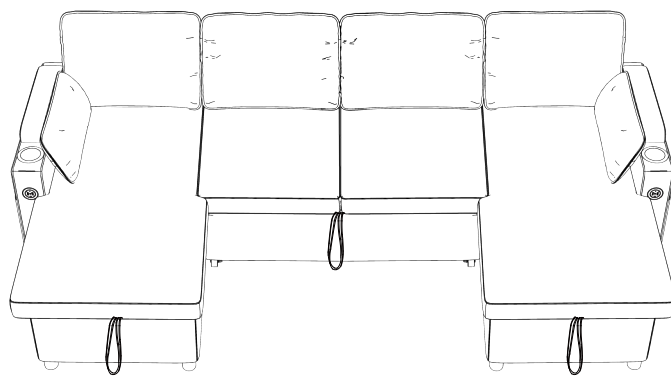

U shaped sofa

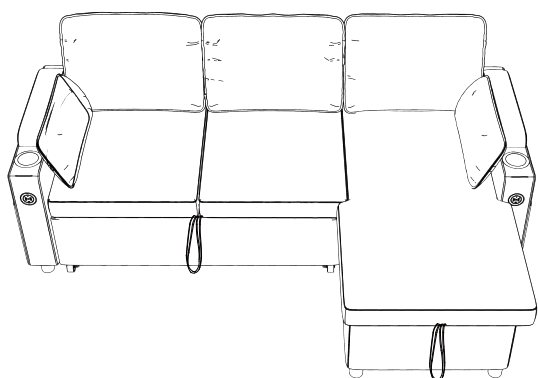

**L shaped sofa
(Right Facing)**

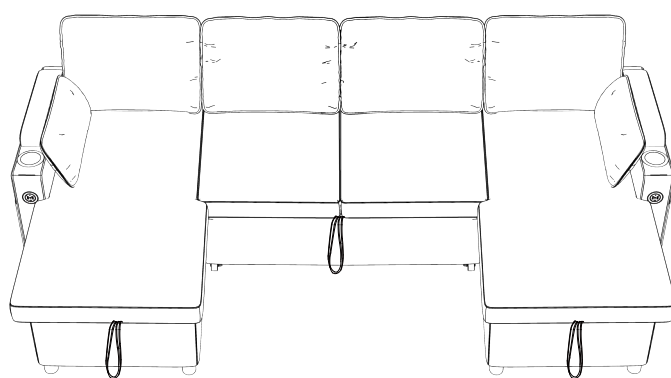

U shaped sofa

PRE-ASSEMBLY INFORMATION



TWO PERSON ASSEMBLY



UP TO 30 MINUTES FOR ASSEMBLY



LBS

ONE SEAT WEIGHT LIMITATION:300LB



VACUUM COMPRESSION

Thank you for choosing our product. To ensure safe and satisfactory use of this product, please carefully read the below instructions before assembly.

HOW MANY PACKAGES INCLUDED?

L shaped sofa: 2 Boxes (A/B)

U shaped sofa: 3 Boxes (A/B/C)

ASSEMBLY REQUIREMENT

2 PERSON ASSEMBLY | 20-30 MINUTES ASSEMBLY TIME (APPROXIMATE)












ASSEMBLY PREPARATION

1. Remove all packaging materials, hardware and parts from the carton.
2. Refer to Parts List and ensure they are complete before you start assembling.
3. Place all components on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.




Catalogue

Part List.	3
Install the Sofa Legs & Swift-loks	5
Connect Sofa Chaise with Armrests.	8
Connect Backrest Frame and Cover it	12
Insert Backrest Into Armrests.	14
Footrest Assembly	15
Install the Board and Place Cushions	16
How to replace USB.	21







Box A Parts List

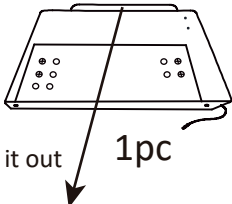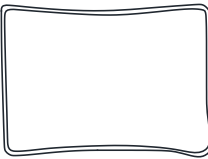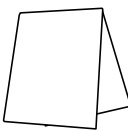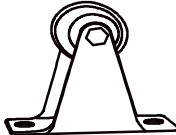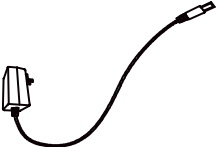A Sofa Base  1pc	D Armrest(D)  1pc	I1 Chaise Base  1pc	J1 Footrest Base  1pc
A-PLUS Board(A-PLUS)  2pcs	F1 Plastic Stopper  52pcs	I1-PLUS Board(I1-PLUS)  4pcs	J1-PLUS Board(J1-PLUS)  2pcs
E Seat Cushion  2pcs	G Backrest Pillow  1pc	K Backrest Cover(K)  1pc	L Footrest  1pc
R Screw M6*40mm  4pcs M6*40mm	S Screw M6*16mm  32pcs M6*16mm	T Screw M6*25mm  4pcs M6*25mm	U Allen Key  1pc
A1 Footrest cushion  1pc	E1 Connection rods(E1)  1pc	H1 Metal Washer  4pcs	
Parts Contained in the Accessory Box			
N Swyft-loks(N)  2pcs big	O Swyft-loks(O)  2pcs small	P Leg and Plastic Washer  8pcs	Q Plastic Plug  2pcs
V Wheel  4pcs	W Power  2pcs	D1 Swyft-loks(D1)  2pcs big	G1 Angle iron  2pcs

Box B Parts List

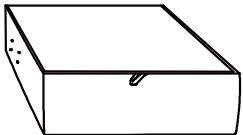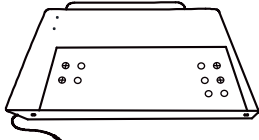B Chaise  1pc	C Armrest(C)  1pc	F Chaise Cushion  1pc	G Backrest Pillow  2pcs
H Throw Pillow  2pcs	I Iron Frame(I)  1pc	J Iron Frame(J)  1pc	B1 Front bezel  1pc
K1 Connection Rod(K1)  2pcs			


Box C Parts List

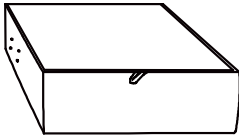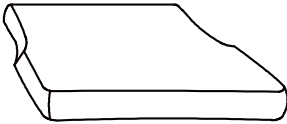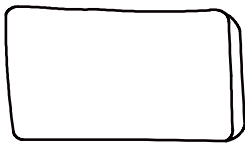B Chaise  1pc	F Chaise Cushion  1pc	G Backrest Pillow  1pc	N Swyft-loks(N)  2pcs big
O Swyf-loks(O)  2pcs small	P Leg and Plastic Washer  4pcs	R Screw M6*40mm  2pcs M6*40mm	S Screw M6*16mm  8pcs M6*16mm
XY Iron Frame with Backrest Cover  1pc	F1 Plastic Stopper  18pcs	I1 Chaise Base  1pc	I1-PLUS Board(I1-PLUS)  4pcs

Installation Procedure


Step1 Installation of sofa legs

B		2	C		1	D		1	P		12
---	---	---	---	---	---	---	---	---	---	---	----

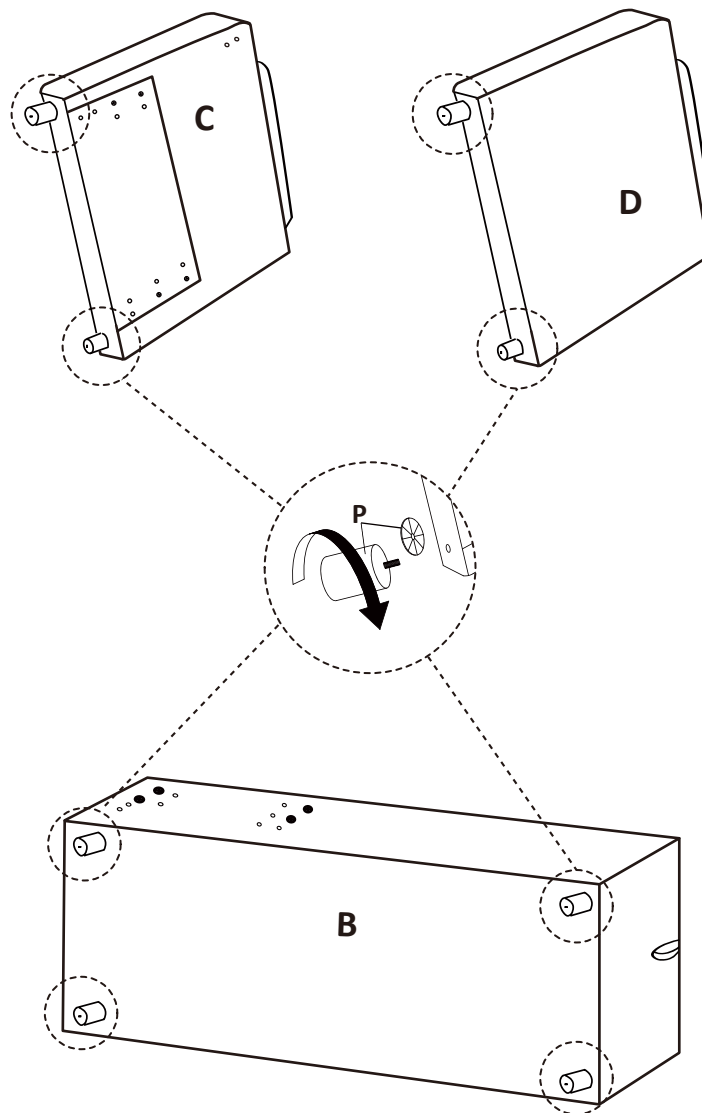

Step2 Fix the swyft-locks (D1) to the armrests with M6*16mm screws (S)

D1		2	S		4	U		1
----	---	---	---	---	---	---	---	---

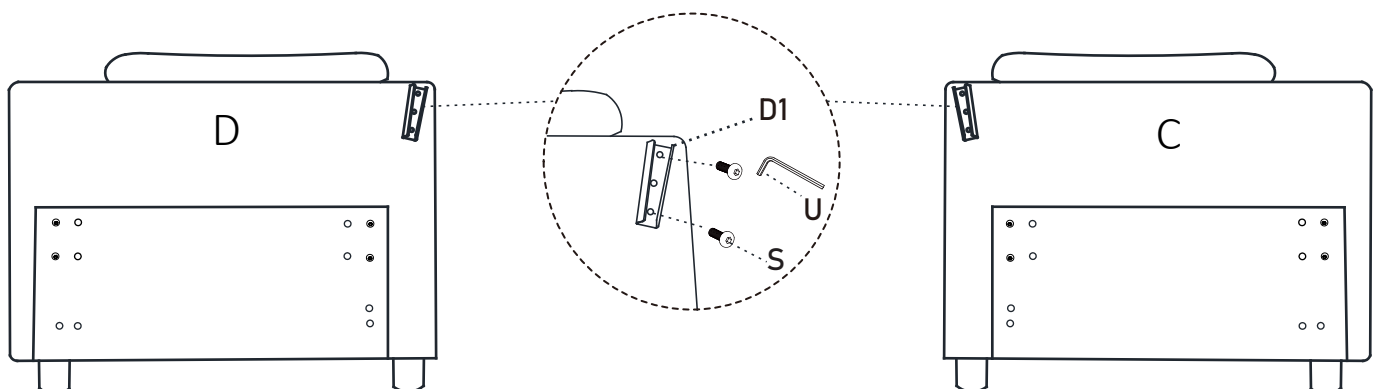


Please decide the direction of the sofa chaise before your start installtion


Step3 Fix the swyft-locks(N) to the armrests with M6*16mm screws (S).

L shape





N		2	S		4	U		1
---	---	---	---	---	---	---	---	---

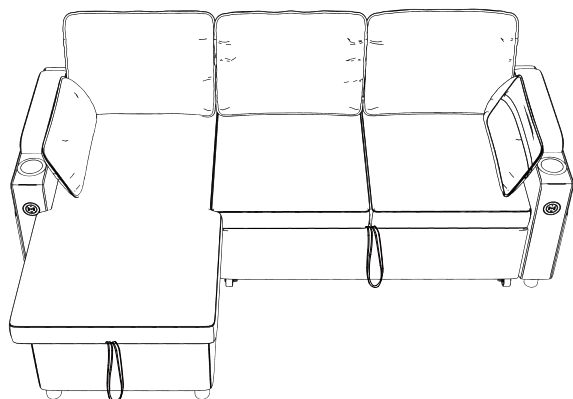

L shaped sofa (Left Facing)

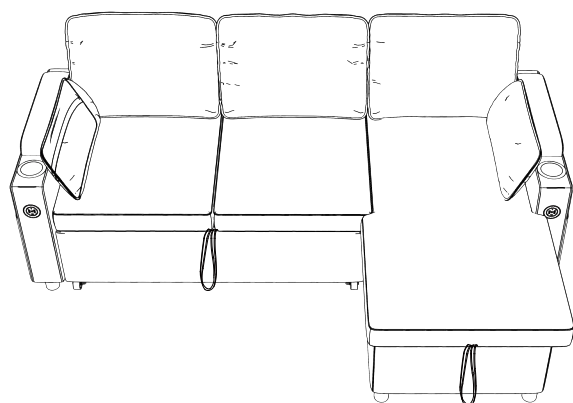


L shaped sofa (Right Facing)

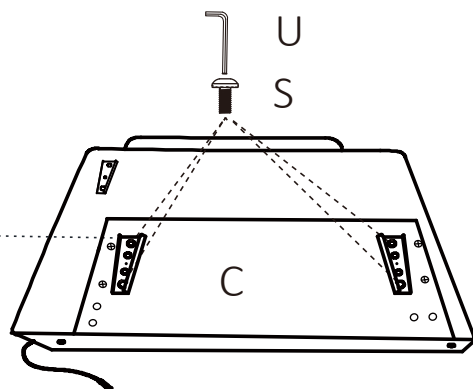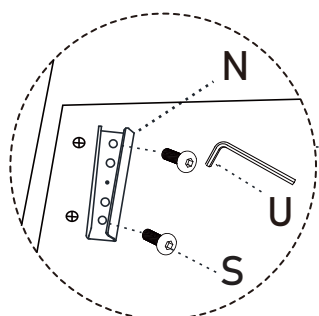
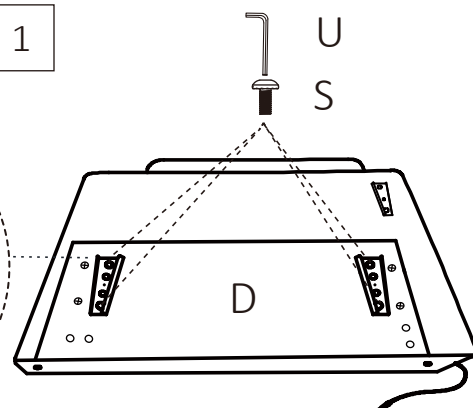
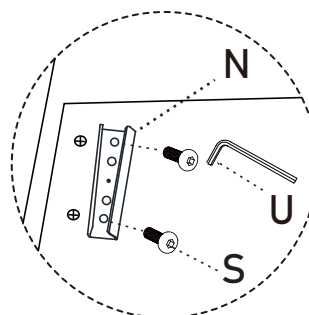


U shape

N		4	S		8	U		1
---	---	---	---	---	---	---	---	---

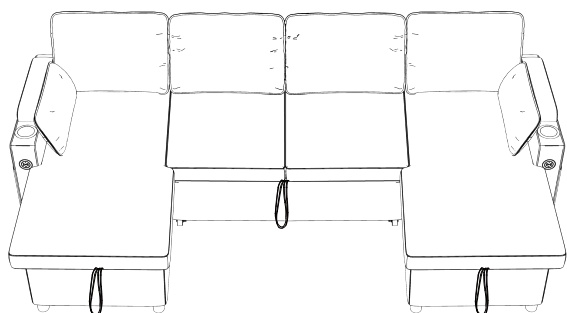


U shaped sofa

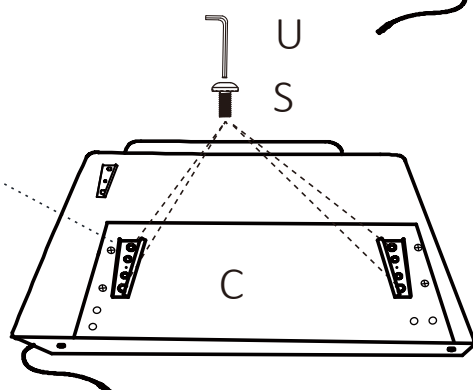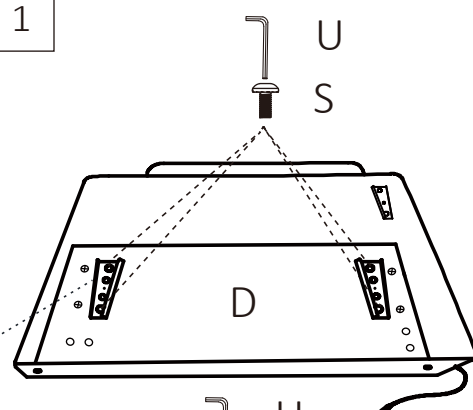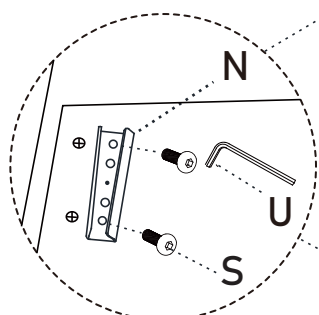


Step4 Fix the swyft-locks (O) to the chaise with M6*16mm screws (S).



L shape	O		2	S		4	U		1
---------	---	---	---	---	---	---	---	---	---

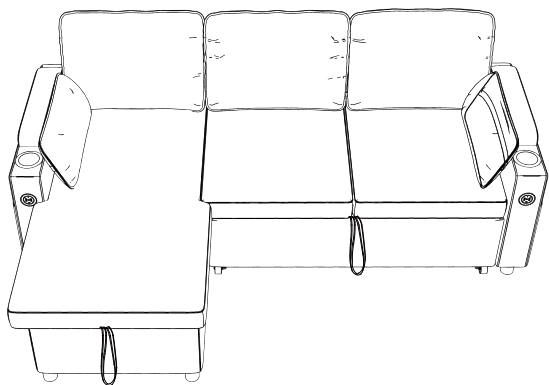


L shaped sofa (Left Facing)

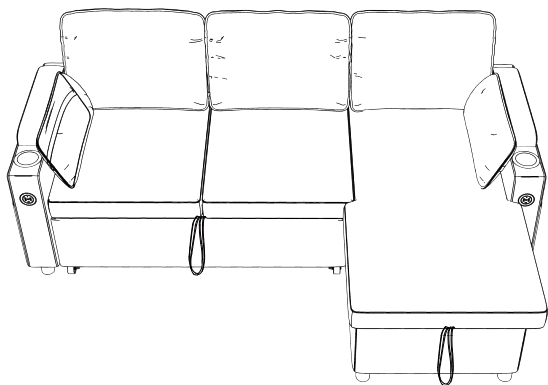



L shaped sofa (Right Facing)

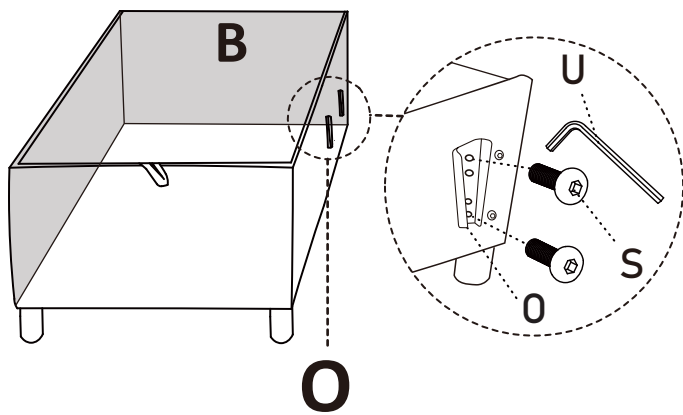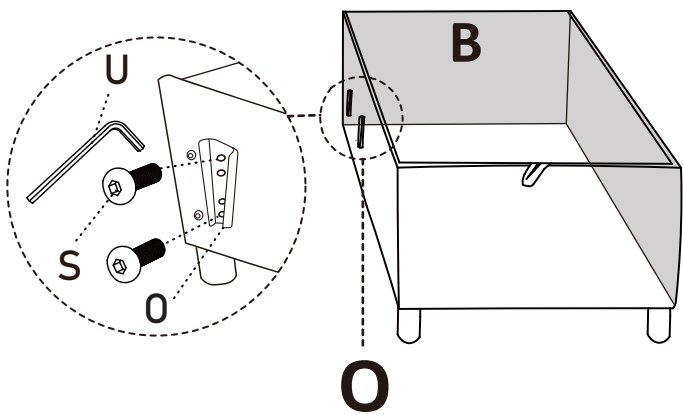

U shape	O		4	S		8	U		1
---------	---	---	---	---	---	---	---	---	---

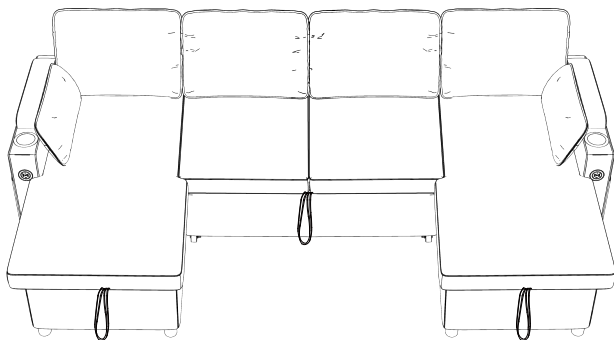


U shaped sofa

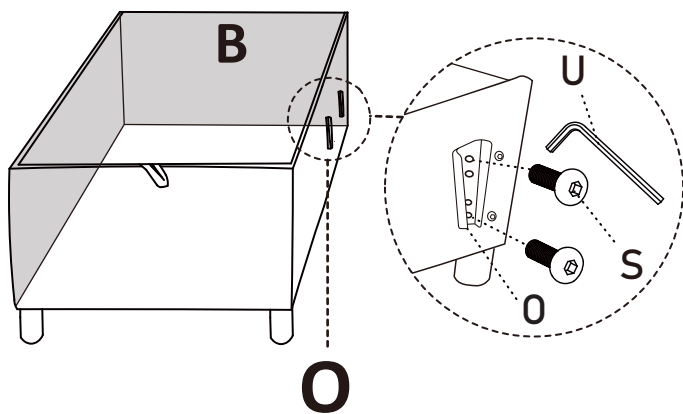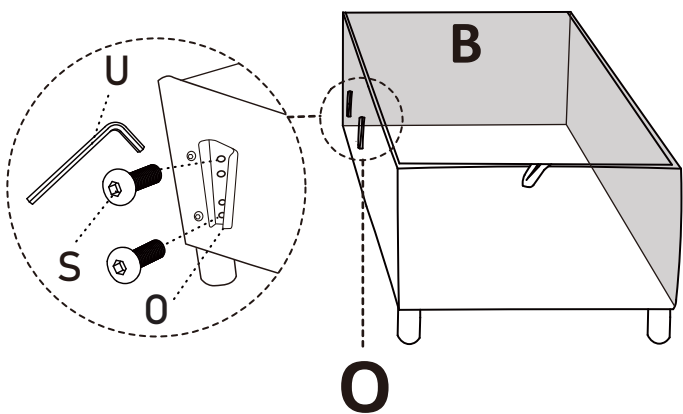


Step5 Connect armrest to sofa chaise



L shape

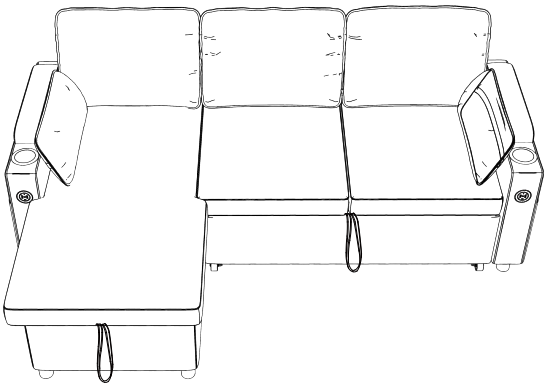


L shaped sofa (Left Facing)

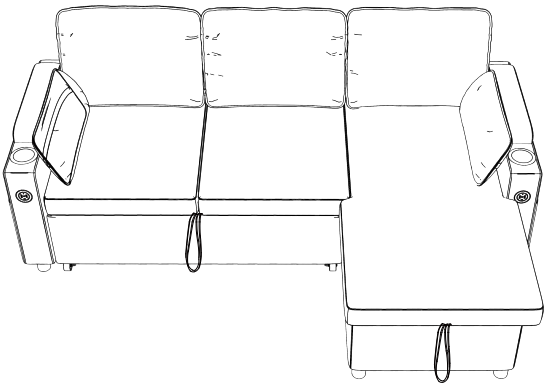


L shaped sofa (Right Facing)

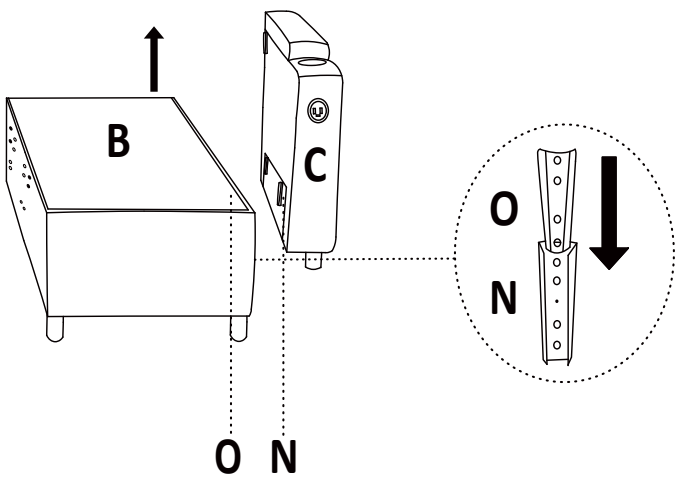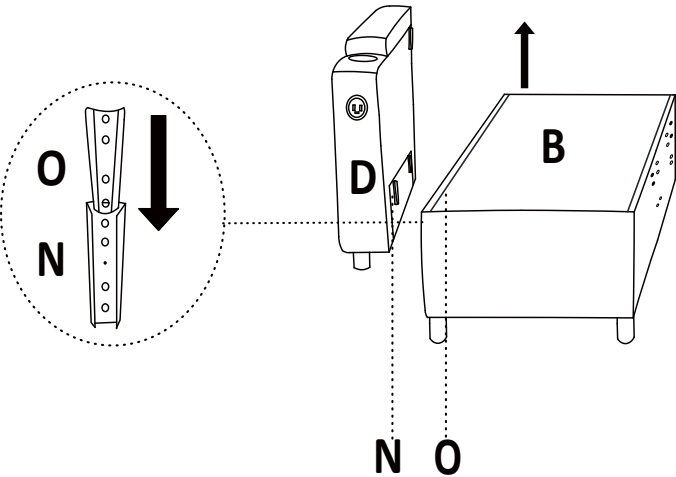

U shape

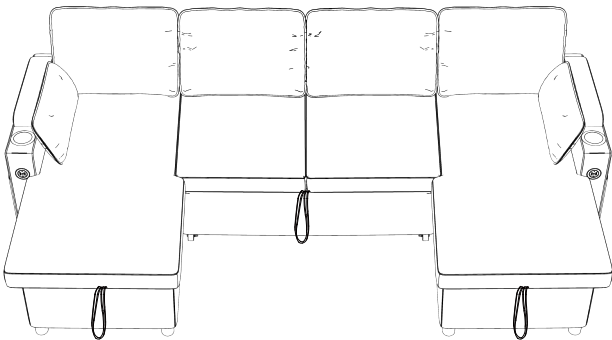


U shaped sofa


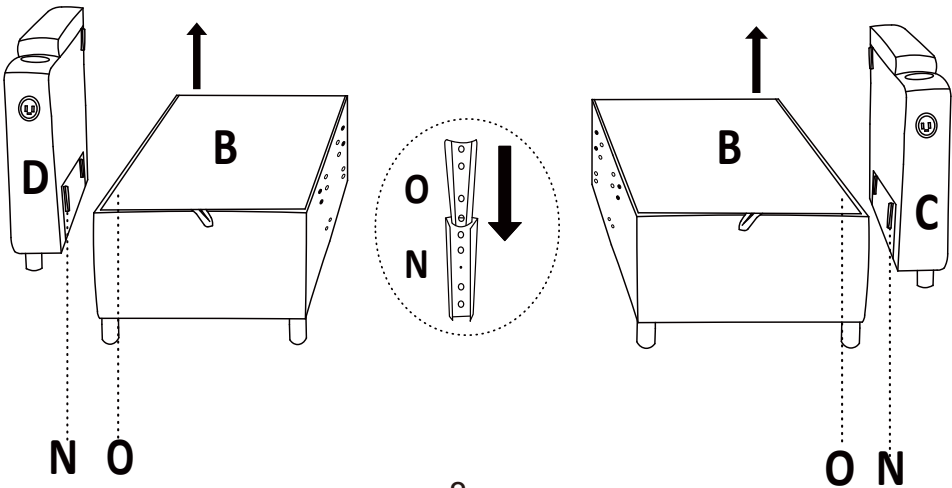


Step6 Install the connection rod (E1)



E1		1	S		4	U		1
----	---	---	---	---	---	---	---	---

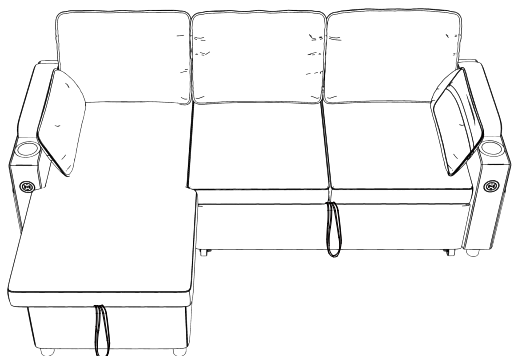


L shaped sofa (Left Facing)

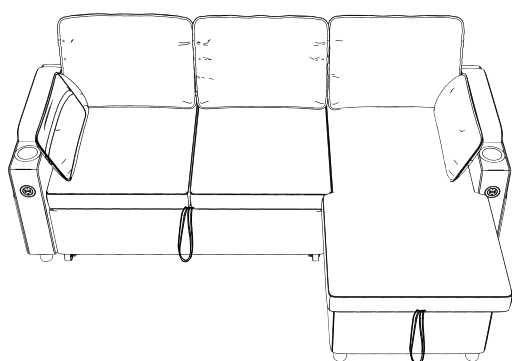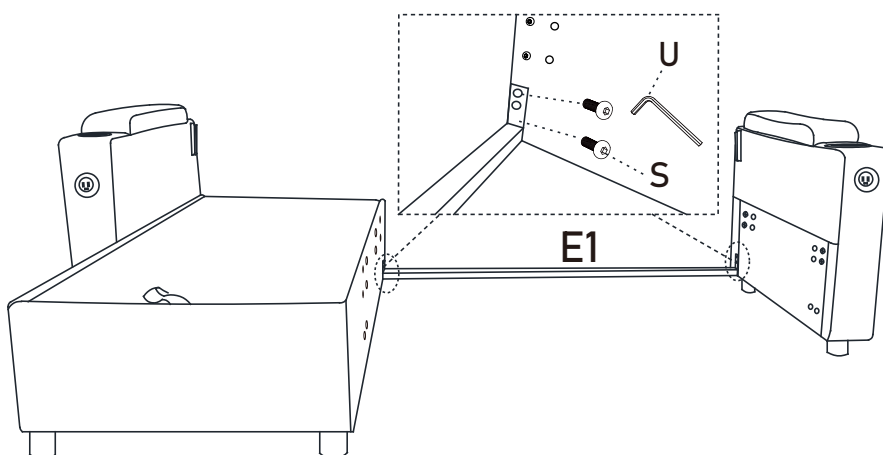

L shaped sofa (Right Facing)

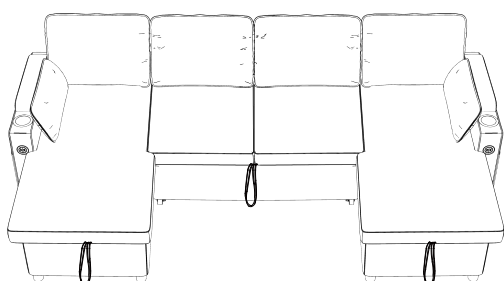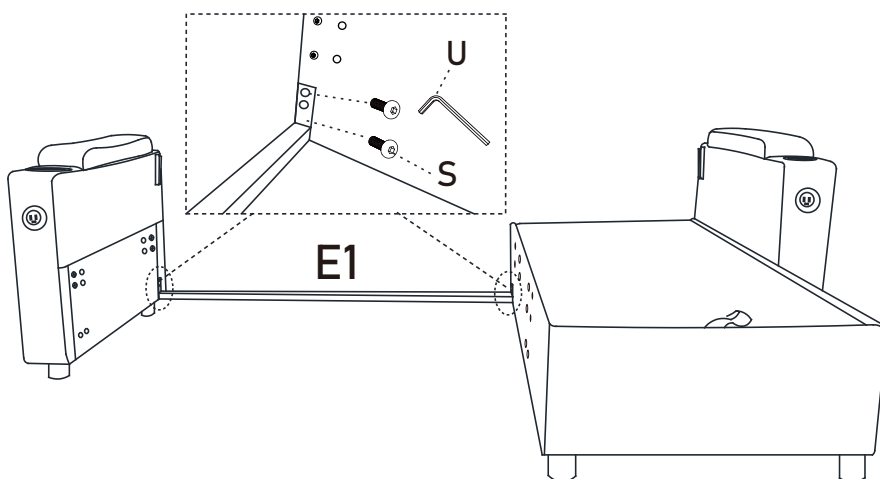


U shaped sofa

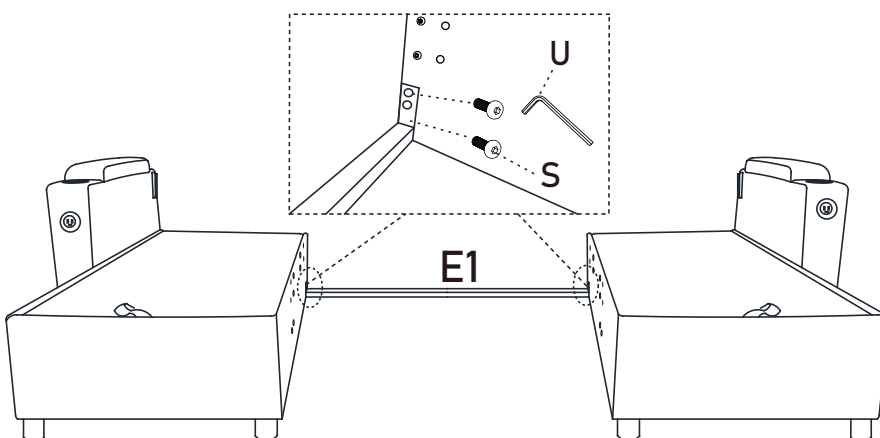



**NOTE: The Velcro side of Rod (E1) is on the BACK of the couch.
Iron plates with screw holes are on the UPPER side.**

Step7 Install two angle irons(G1)



G1		2	S		4	U		1
----	---	---	---	---	---	---	---	---

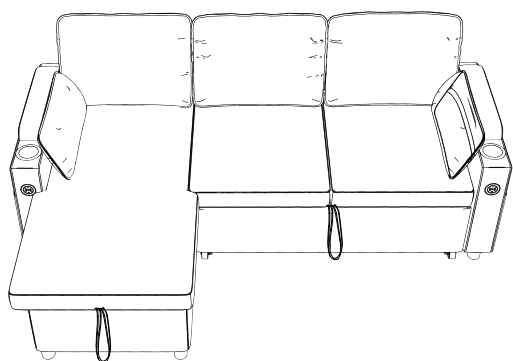


L shaped sofa (Left Facing)

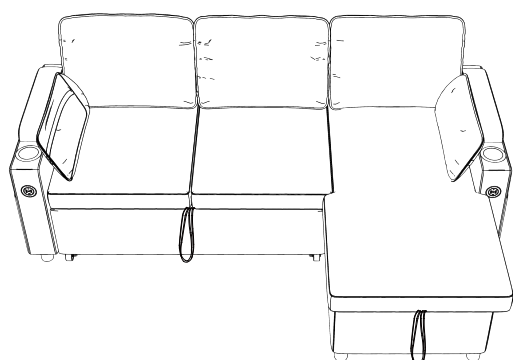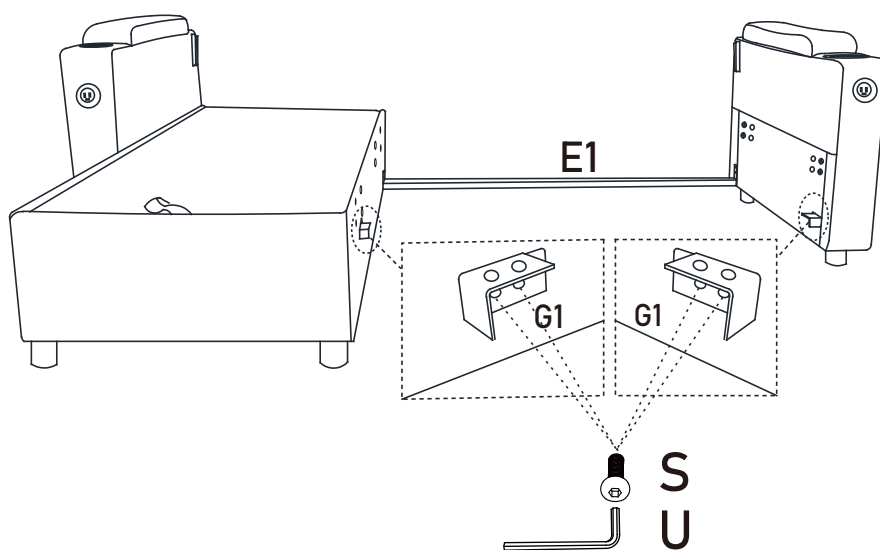

L shaped sofa (Right Facing)

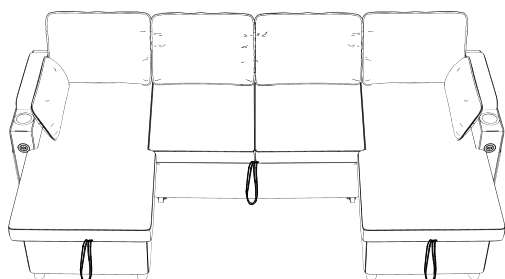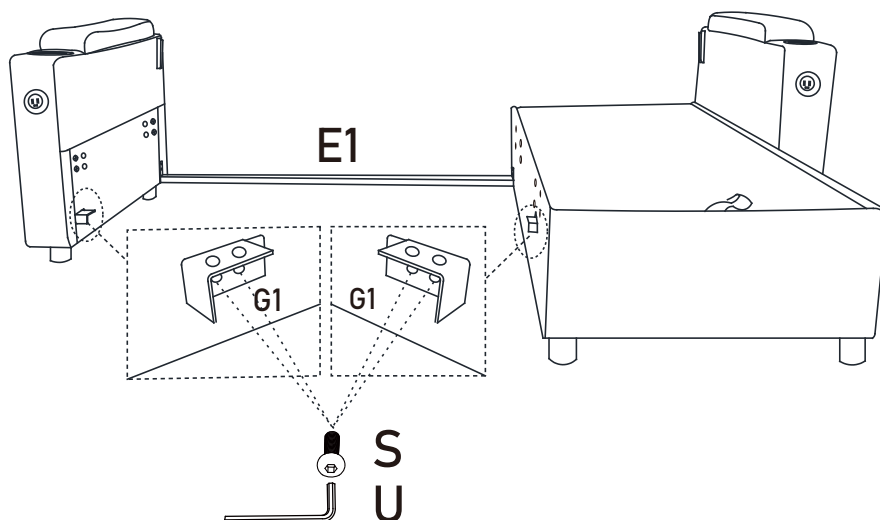


U shaped sofa

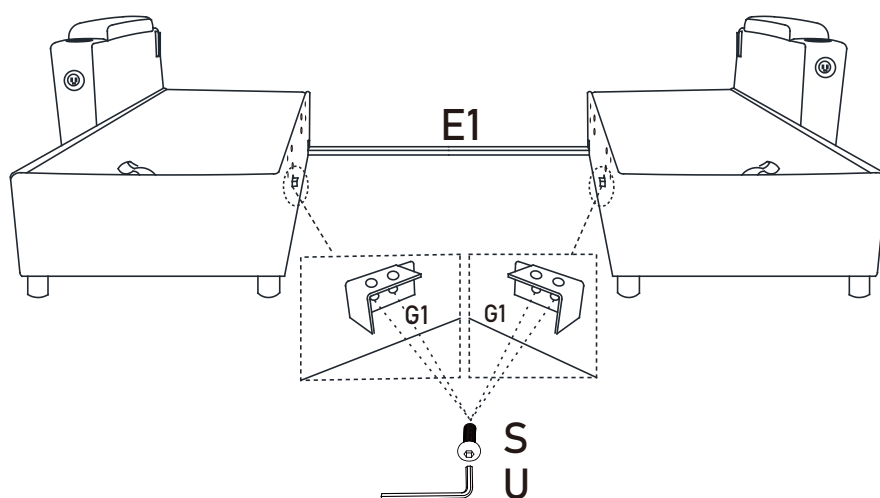



NOTE: Please carefully check the direction of angle iron before installation.

Step8 First loosen the pre-installed screws, fix the 2 connecting rod (K1), and then lock the screws.



K1		2	U		1
----	---	---	---	---	---

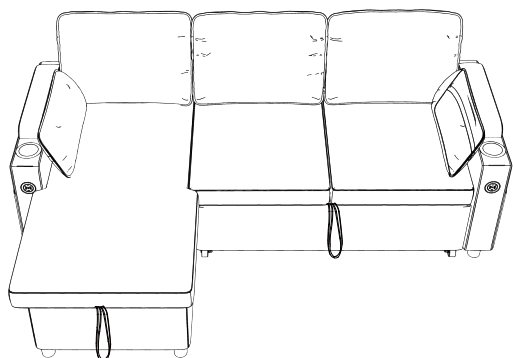


L shaped sofa (Left Facing)

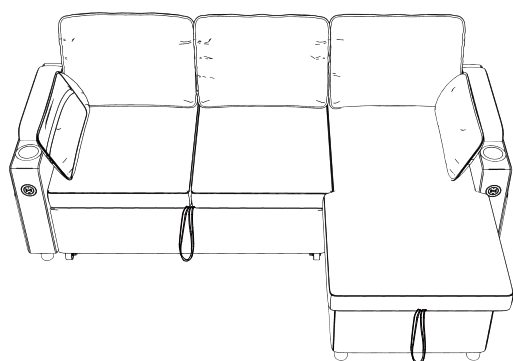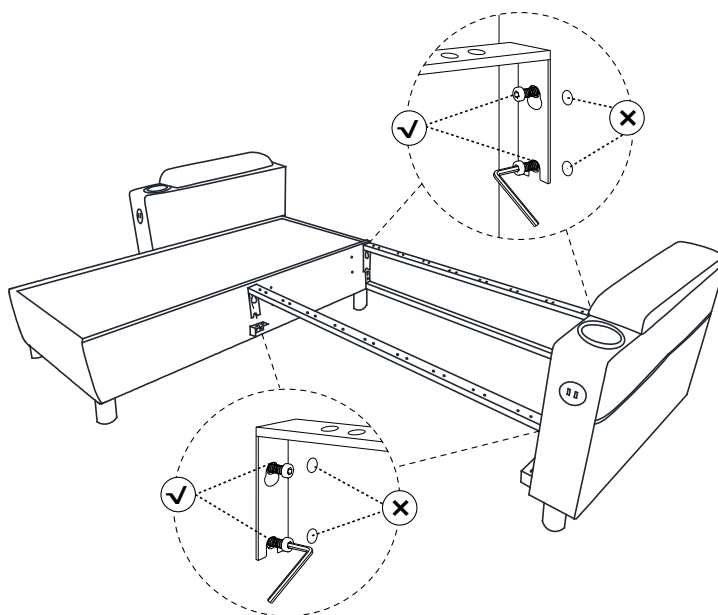

L shaped sofa (Right Facing)

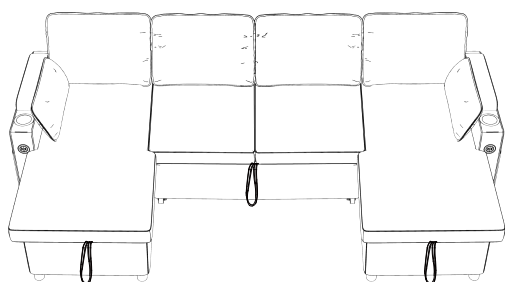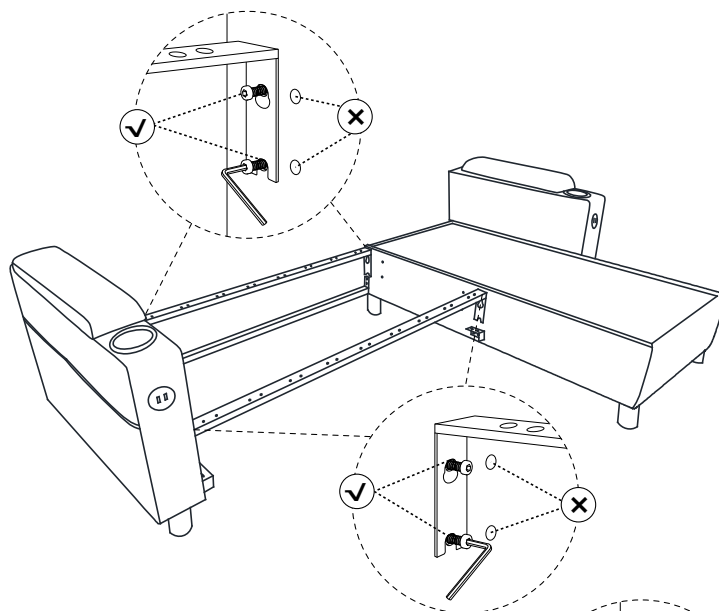

U shaped sofa

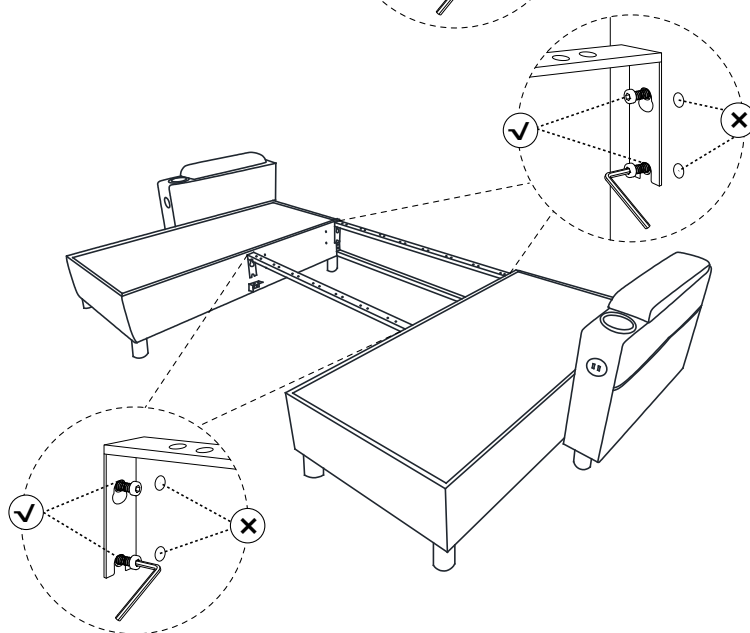




NOTE: Please check the holes carefully before installing the connection rods (K1)

Step9 Fasten part I &J fittings with the screws R and washers H1, then fix cover K on frames I and J.





L Shaped Sofa & U Shaped Sofa

L shape

I		1	J		1	K		1	R		4	U		1
H1		4												

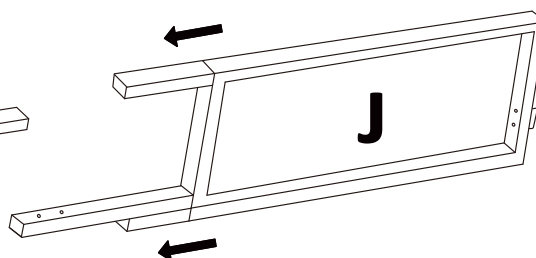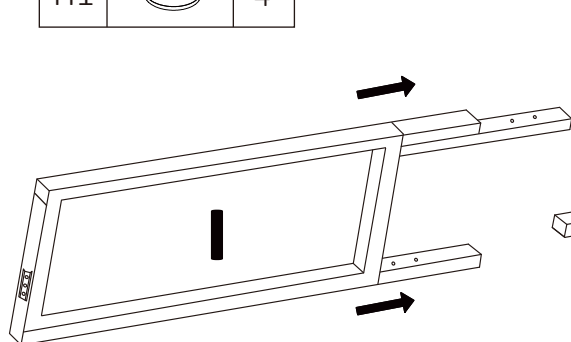

NOTE: If you accidentally receive 2 Part I or 2 Part J, please reverse the installation of the Swyft-lok of the wrong iron frame.

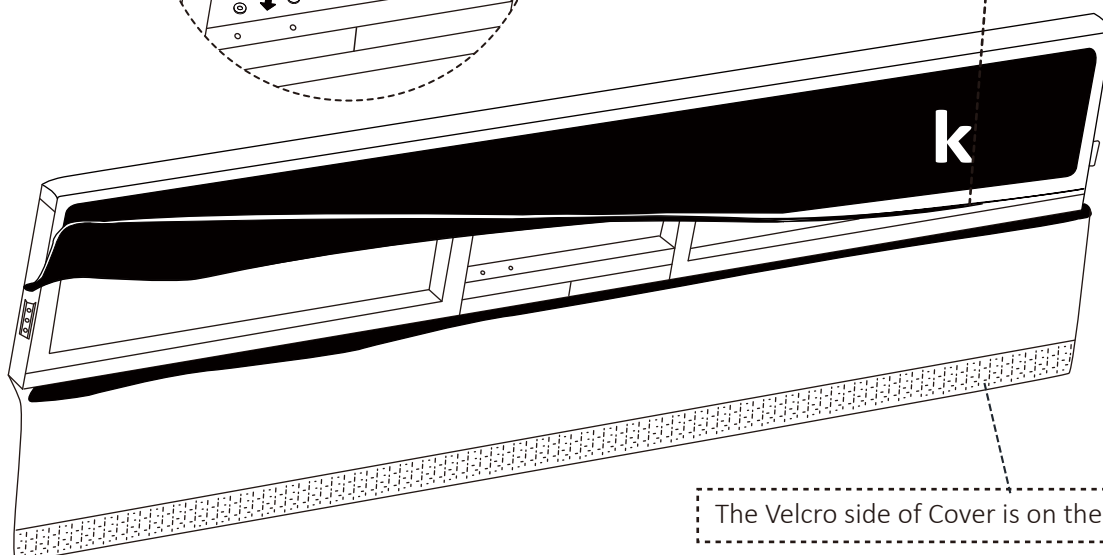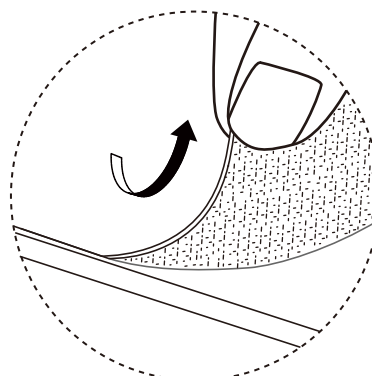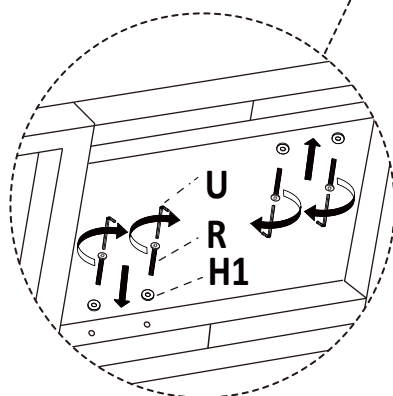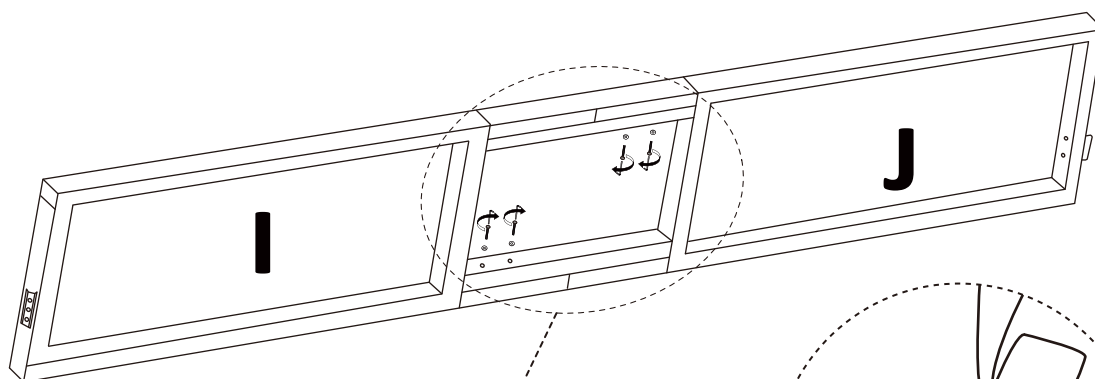

The Velcro side of Cover is on the **UPPER** side

U Shaped Sofa ONLY

U shape

R




2

U



1

XY




1



H1




2

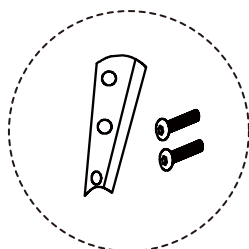



Remove Swyft-loks on the left side of part I

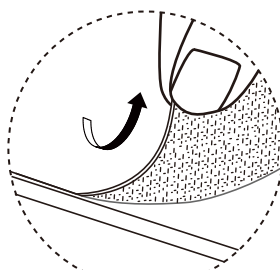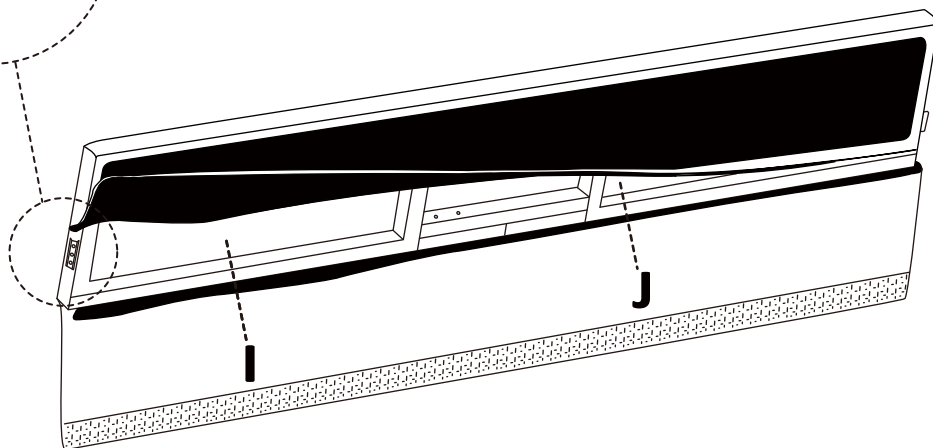

Open the velcro of part XY

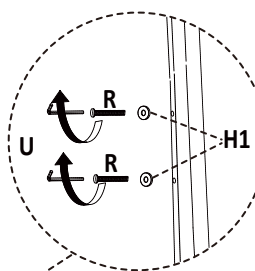

Fasten part XY and part I with the screws R and washers H1, then stick the cover to part XY.

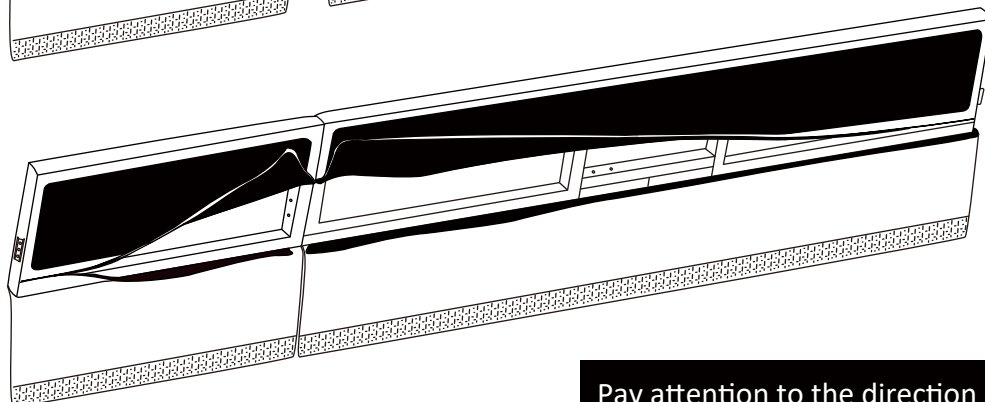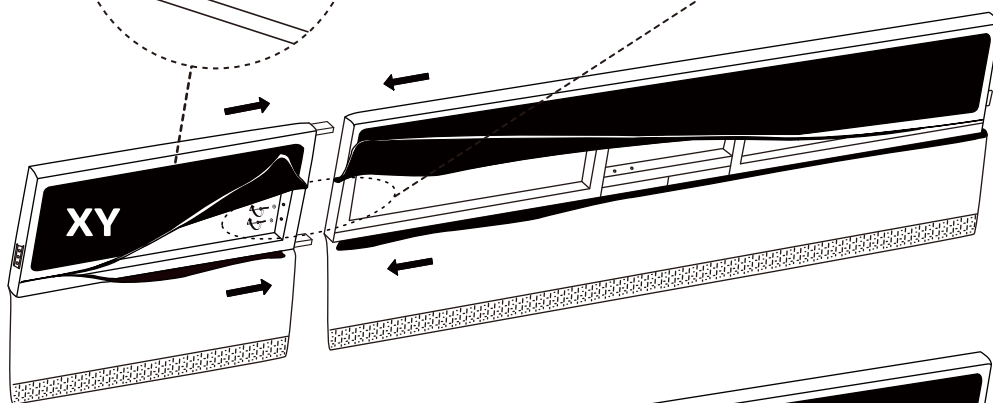


Pay attention to the direction of insertion of the screws, it is necessary to insert part I fittings from part XY.

Step10 Insert the backrest into the sofa and attach the fabric cover to the connecting rod (E1).

L shape

U shape

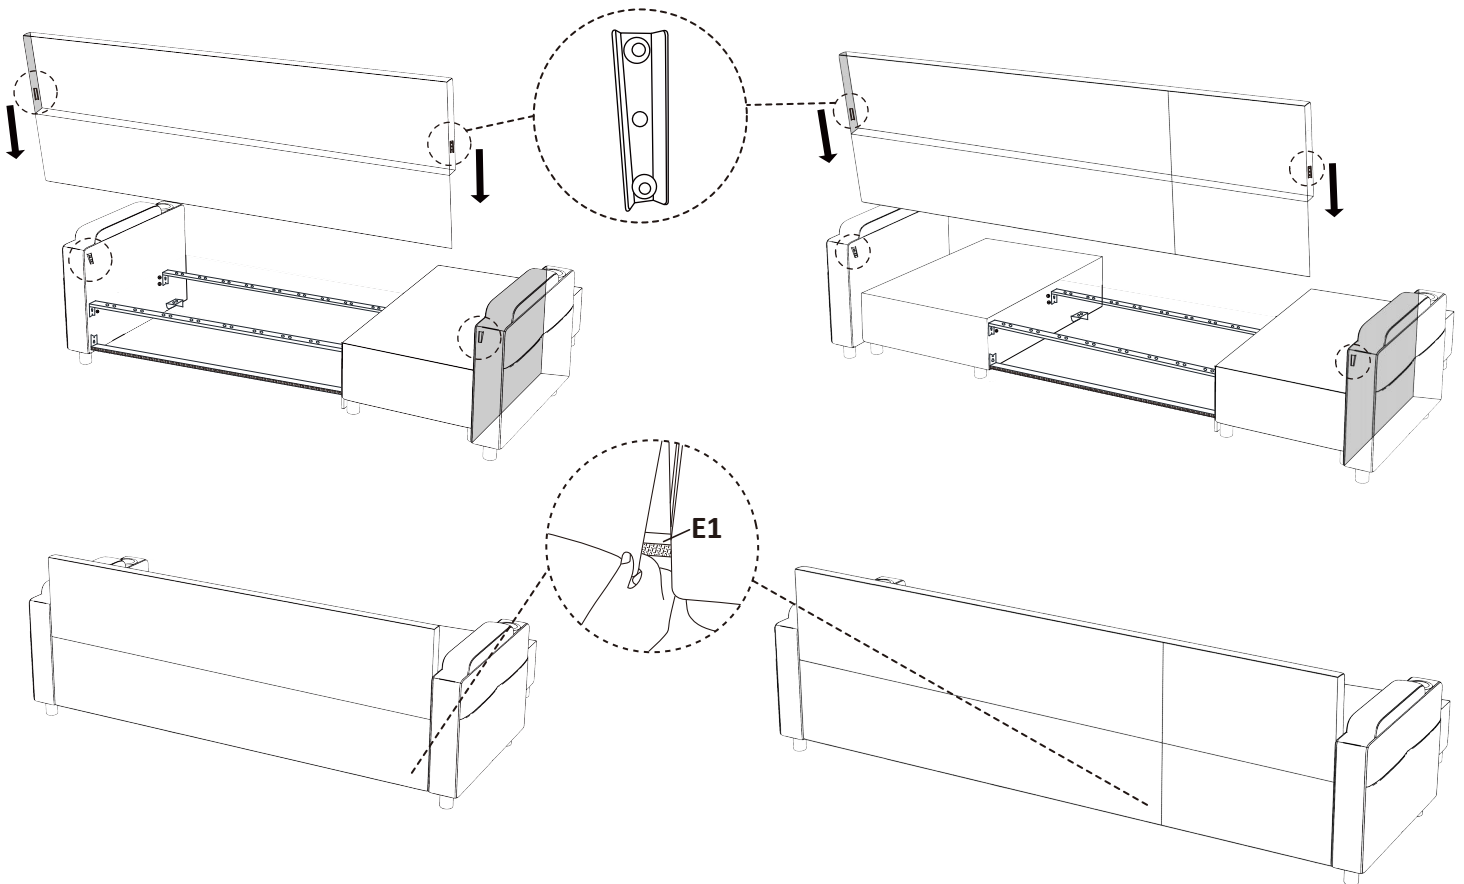

Step11 Insert Plastic PART Q into backrest Side

L shape

Q




2

U shape

Q




2

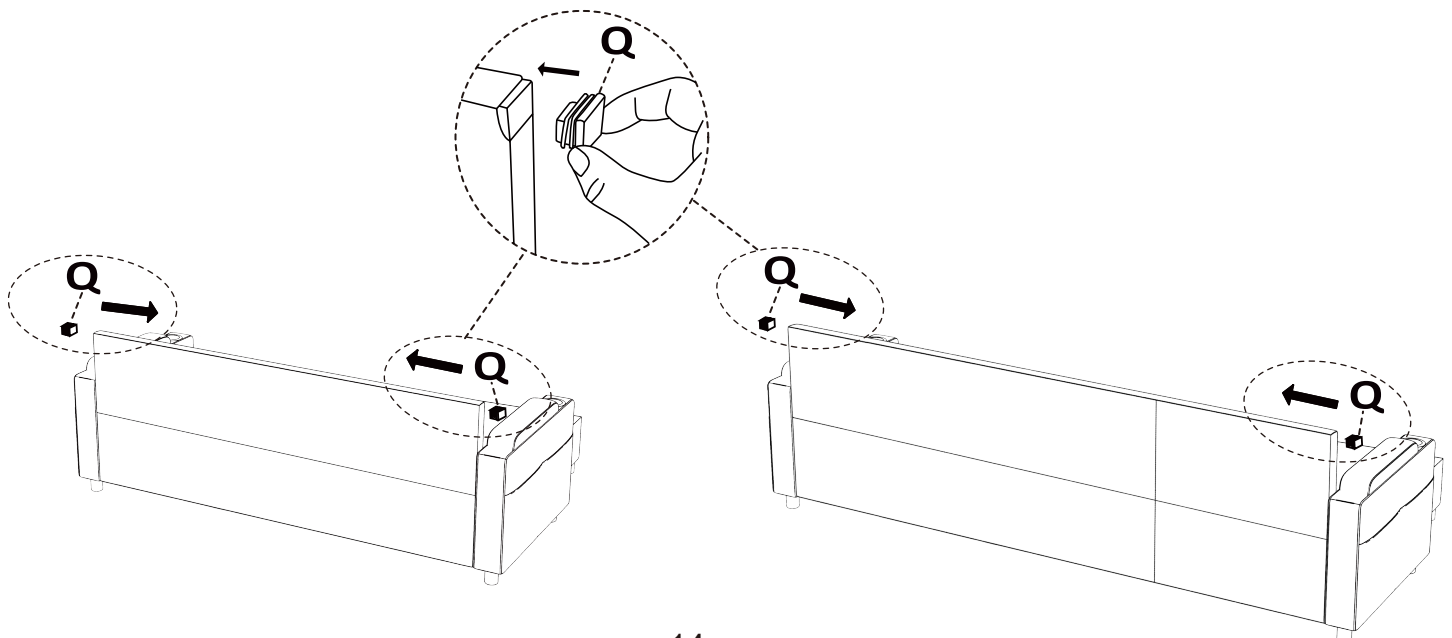


Step12 Fasten the 4 wheels (V) to the footrest (L) with screws M6*16mm (S)

L		1	V		4	S		8	U		1
---	---	---	---	---	---	---	---	---	---	---	---

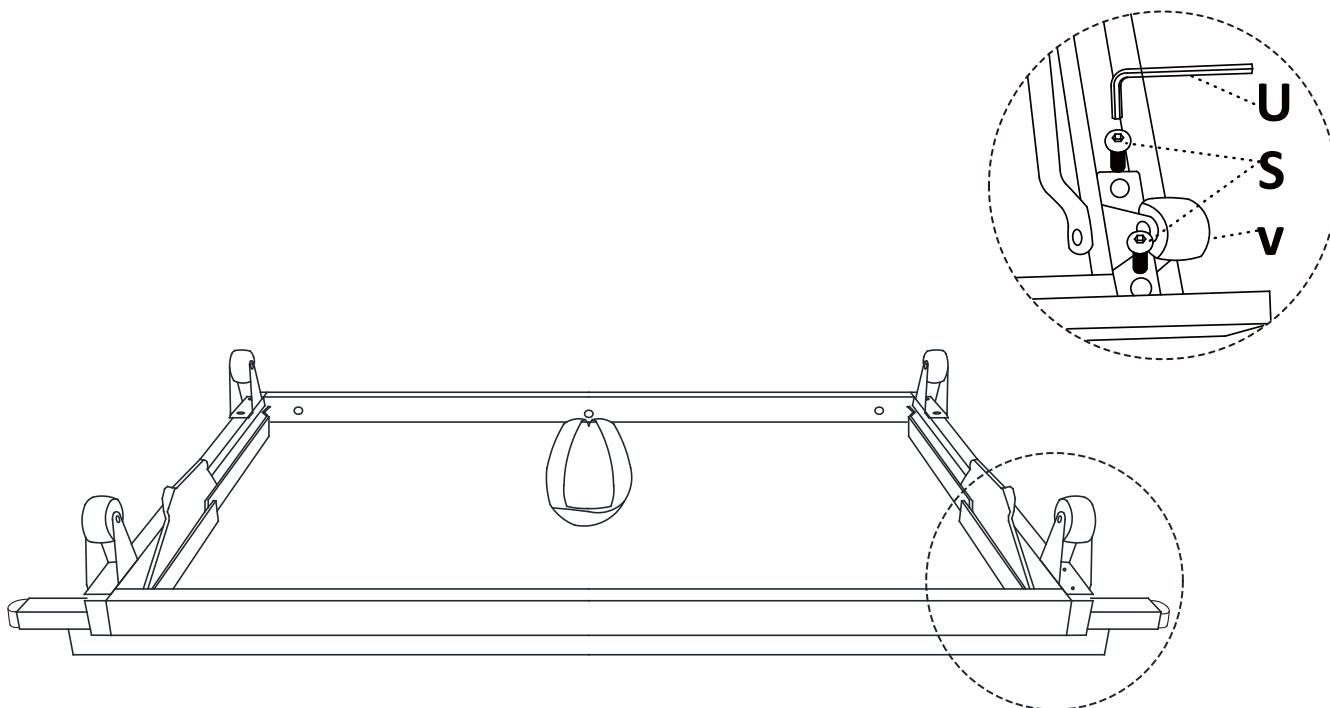


Step13 Raise the footrest upright, extend the support frames, then install the front bezel(B1) with screws M6*25mm (T)

T		4	U		1	B1		1
---	---	---	---	---	---	----	---	---

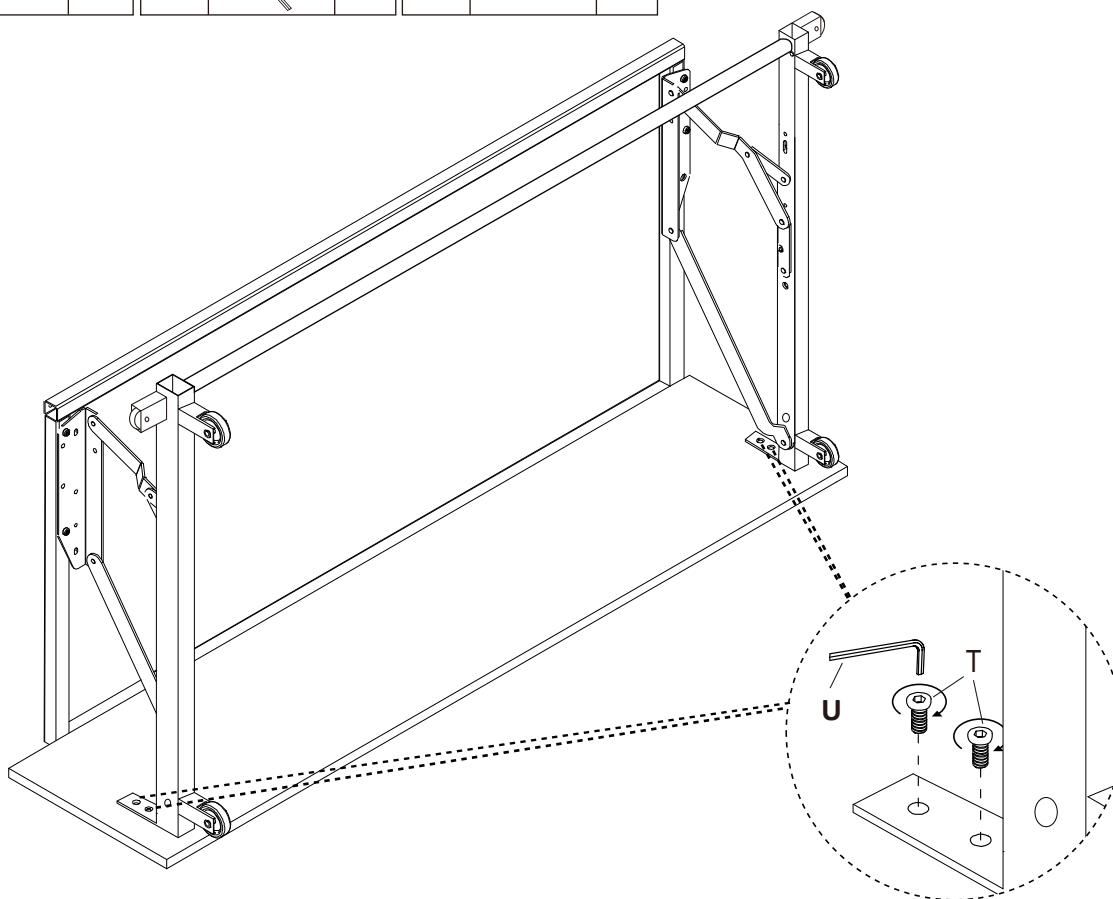


Board Classification

J1-Footrest

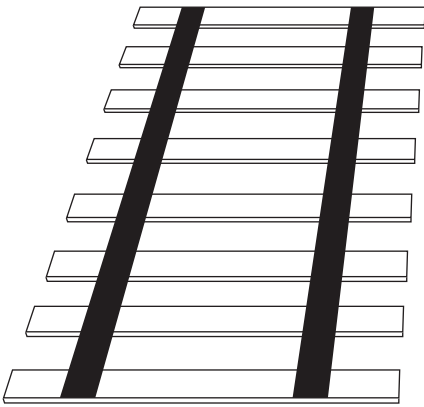


(8 wood boards)

I1-Chaise

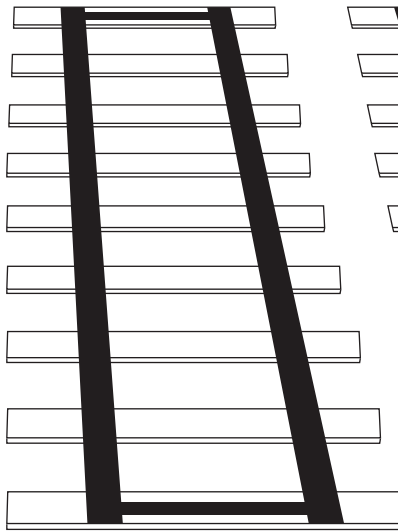

(9 wood boards
with 1,9 Velcro)


A-Loveseat

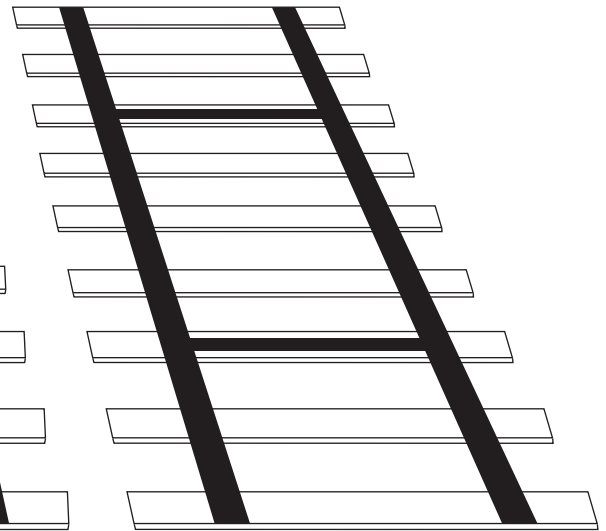

(9 wood boards
with 3,7 Velcro)

Step14 Fix the board(J1) on footrest and note that the cloth strip is facing up.

F1		16	J1		1
----	---	----	----	---	---

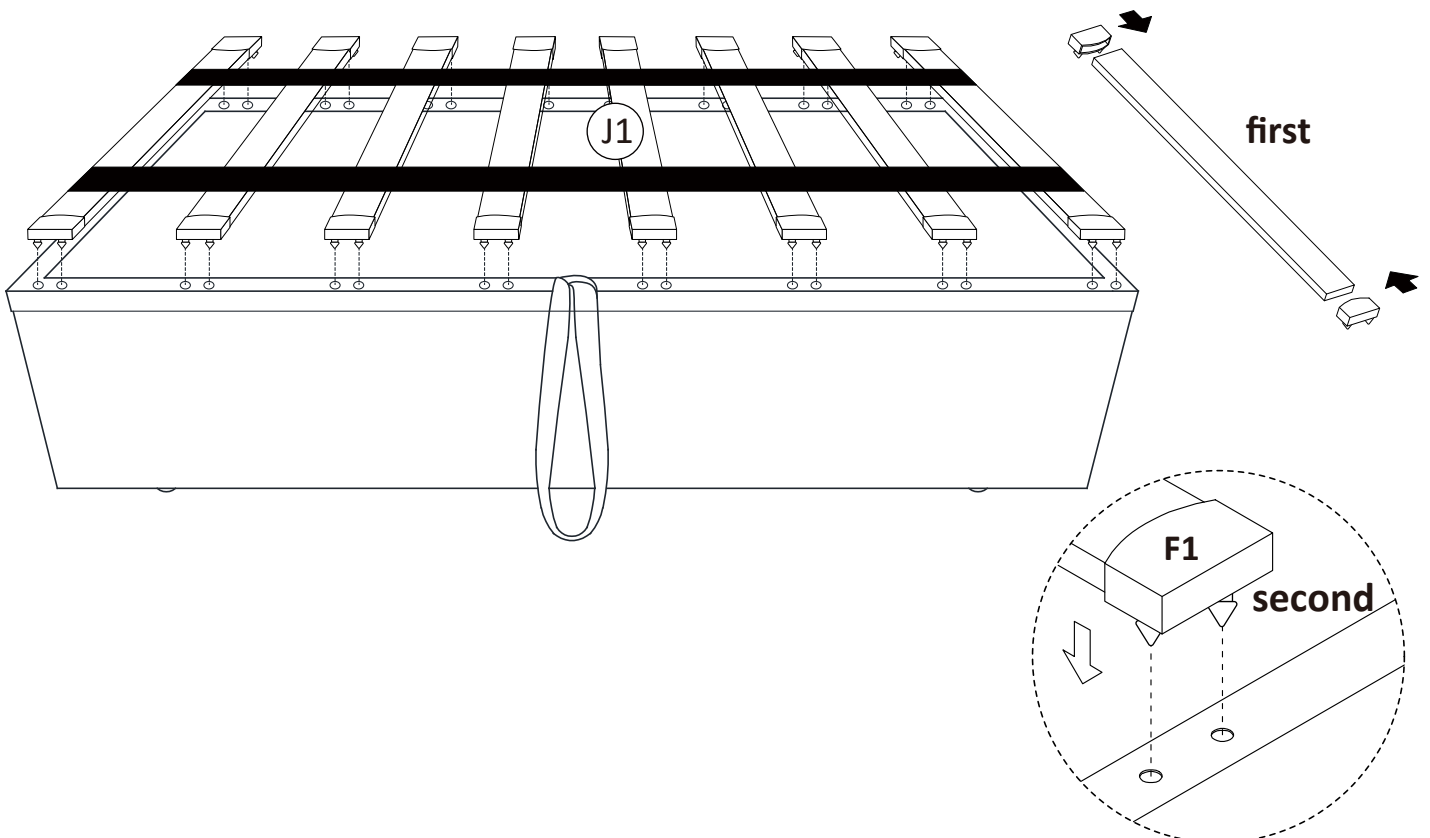


Step15 Fix the board(I1) on chaise and board(A) on sofa base.



Please note that the cloth strip is facing up.

L shape


A		1	F1		36	I1		1
---	---	---	----	---	----	----	--	---

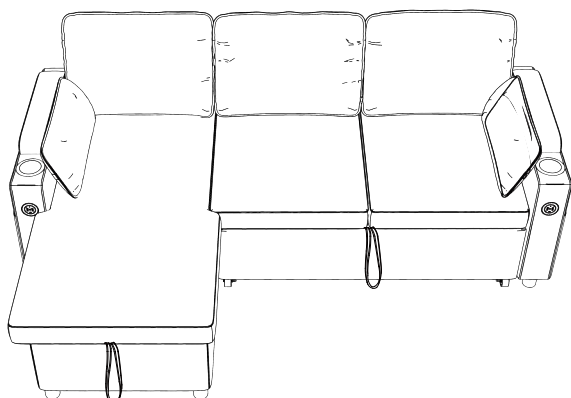

L shaped sofa (Left Facing)

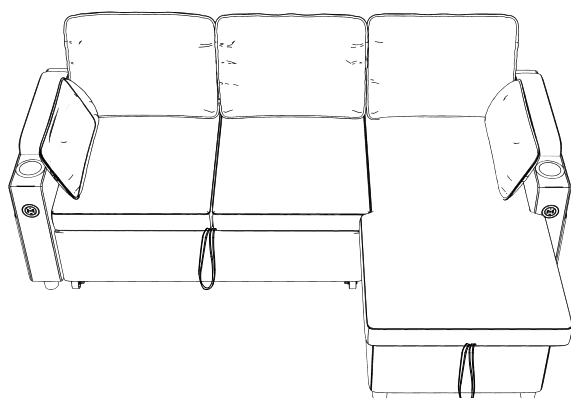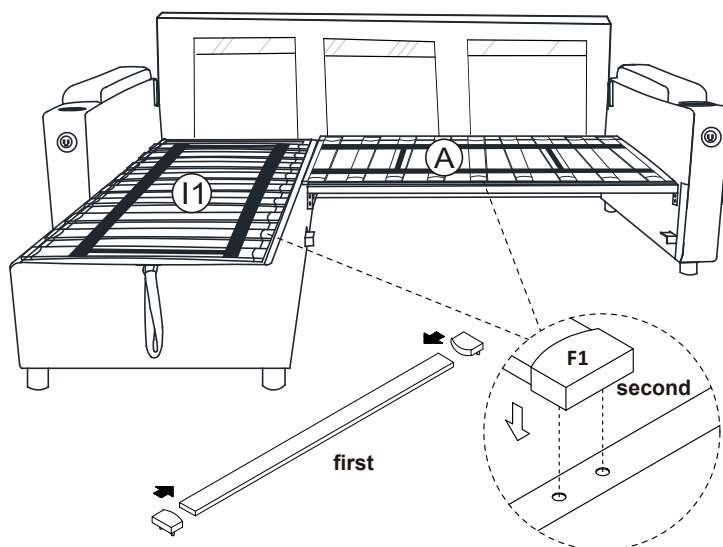


L shaped sofa (Right Facing)

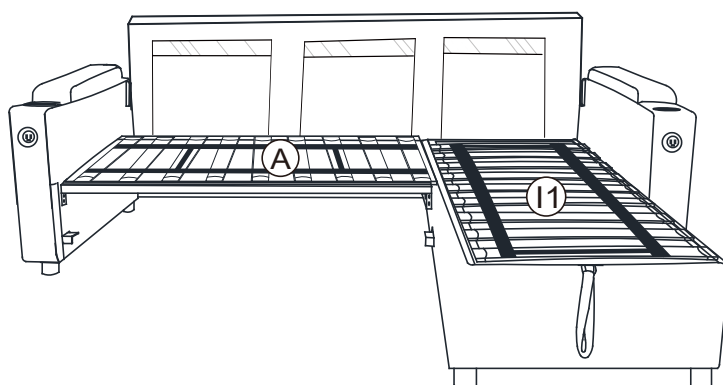


U shape

A		1	F1		54	I1		2
---	---	---	----	---	----	----	--	---

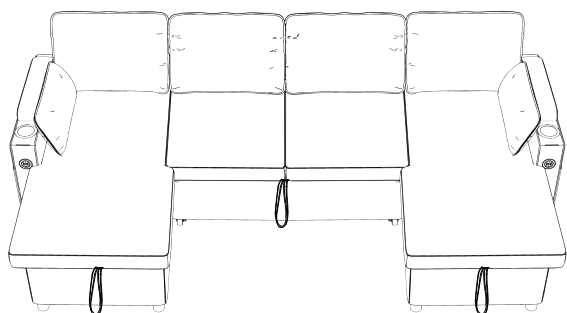


U shaped sofa

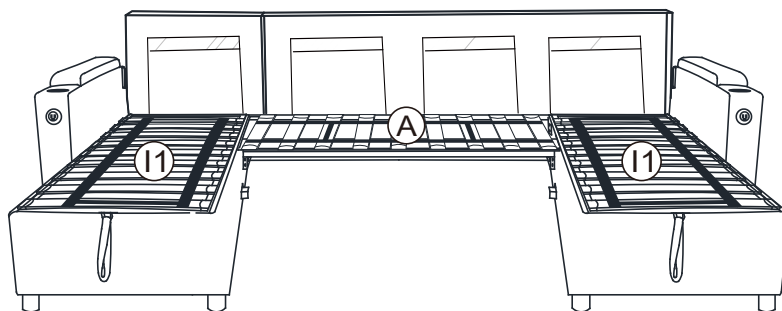


Step16 Please lift up the footrest L so that the wheels are above the iron frame before sliding into the sofa.

L shape

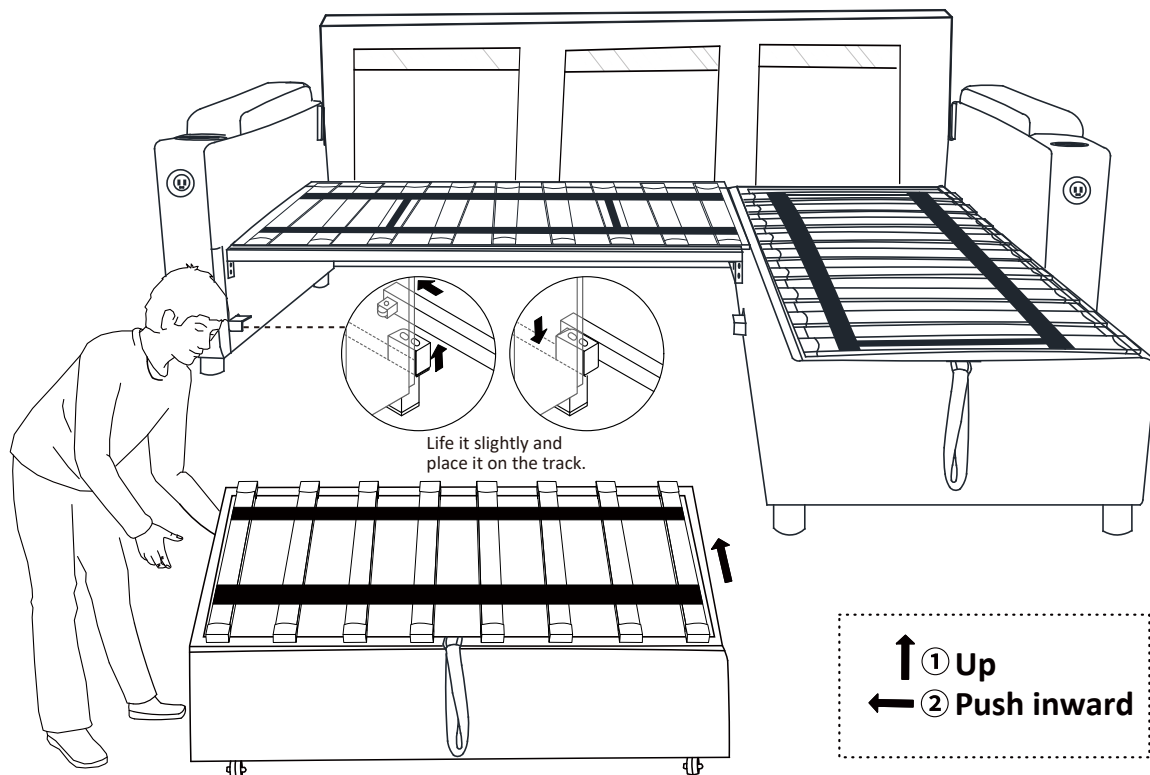

U shape

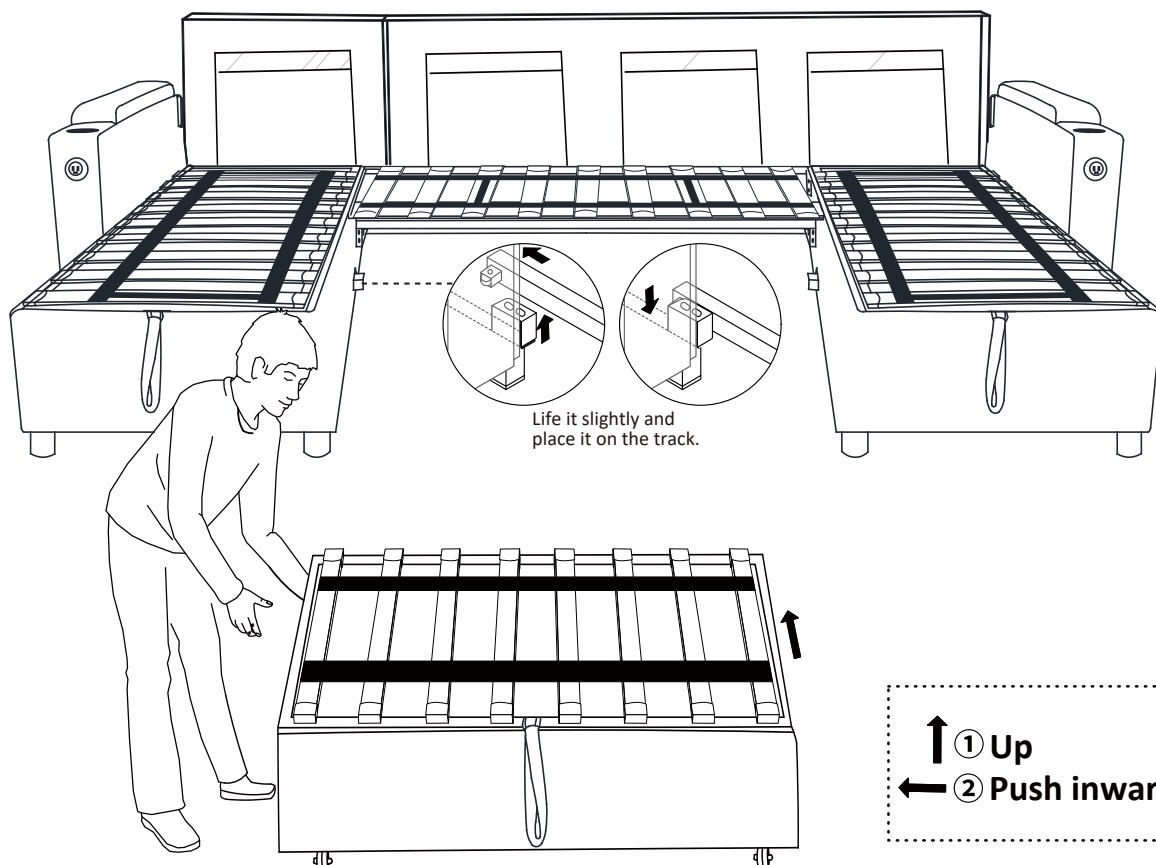

Step17 Reinforce the seat with additional separate boards. You can install these boards on our recommended locations or other locations according to your seating preferences.

Recommended Locations:
Chaise: 3-4, 4-5, 6-7, 7-8
Loveseat: 2-3, 7-8
Footrest: 2-3, 6-7

L shape

A-PLUS



2

I1-PLUS




4


J1-PLUS



2

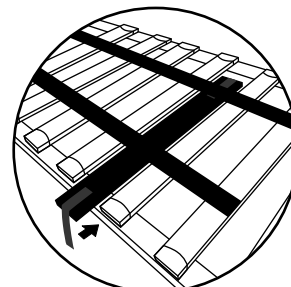

1. Pass through the bottom of cloth strip

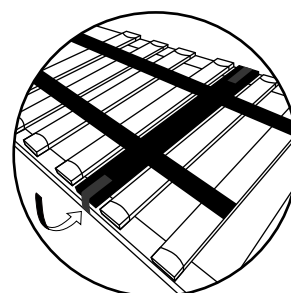

2. Attach velcro fastener to the reverse side of the board

U shape

A-PLUS



2

I1-PLUS




8

J1-PLUS




2

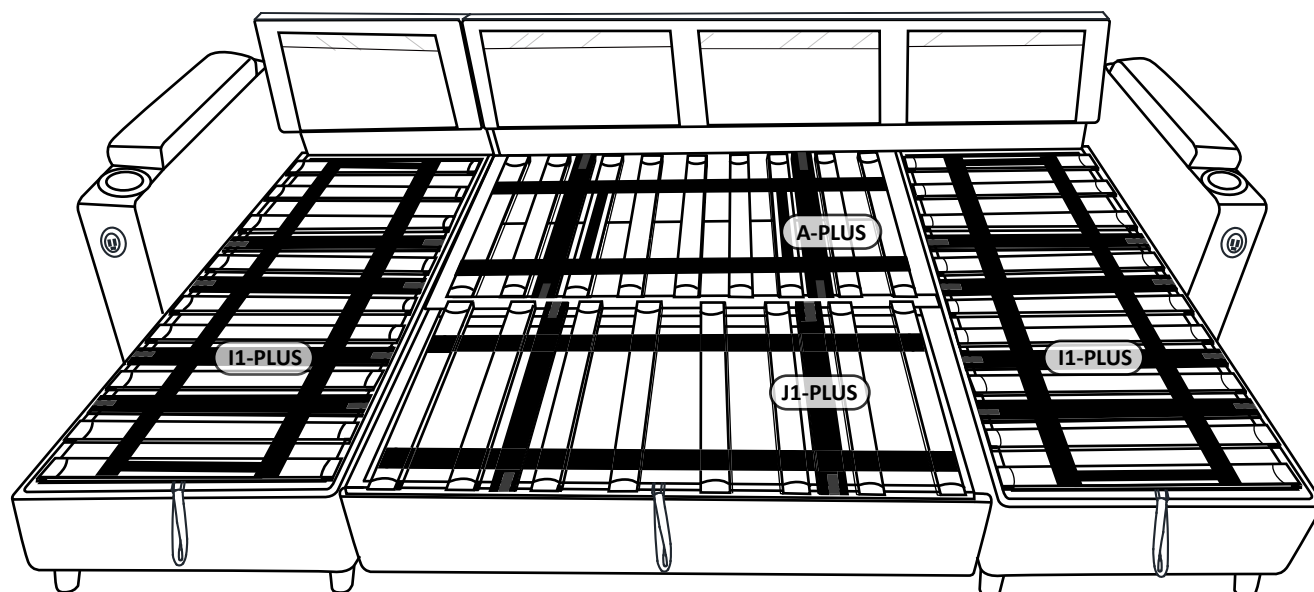

NOTE: If any board in the original long board is broken, it can be directly replaced with corresponding separate board.



Step18 Fix the cushion (A1) on the footrest (L)


A1		1
----	---	---


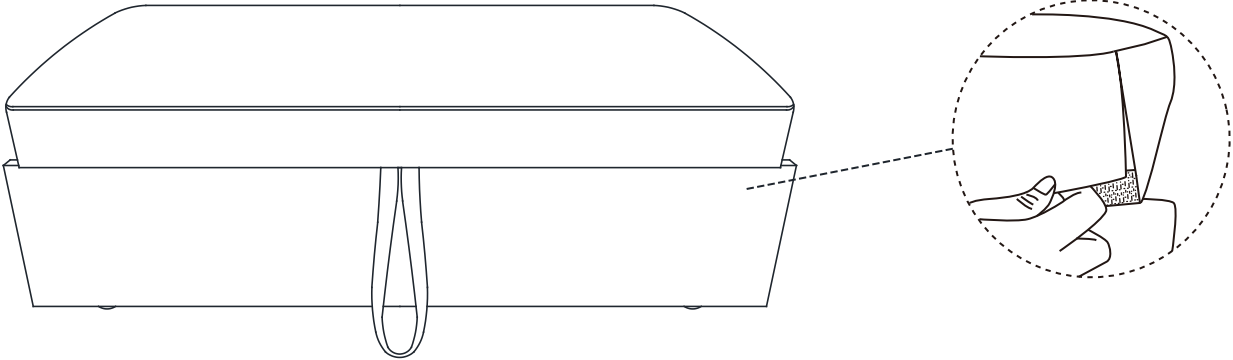



Note: Please completely cover the footrest frame with fabric and attach Velcro around the frame.

Step19 Put cushions and pillows on the sofa







L shape	E		2	F		1	G		3	H		2
---------	---	---	---	---	---	---	---	---	---	---	---	---

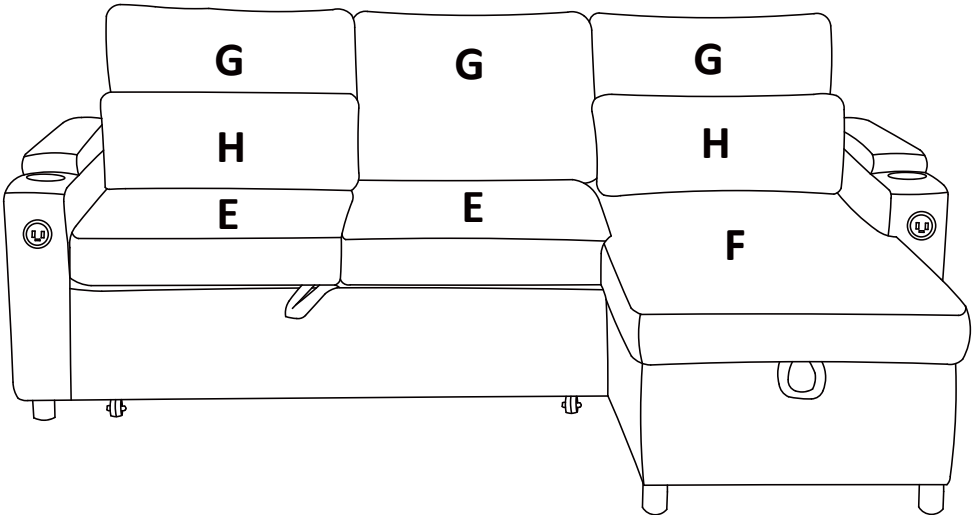



U shape	E		2	F		2	G		4	H		2
---------	---	---	---	---	---	---	---	---	---	---	---	---

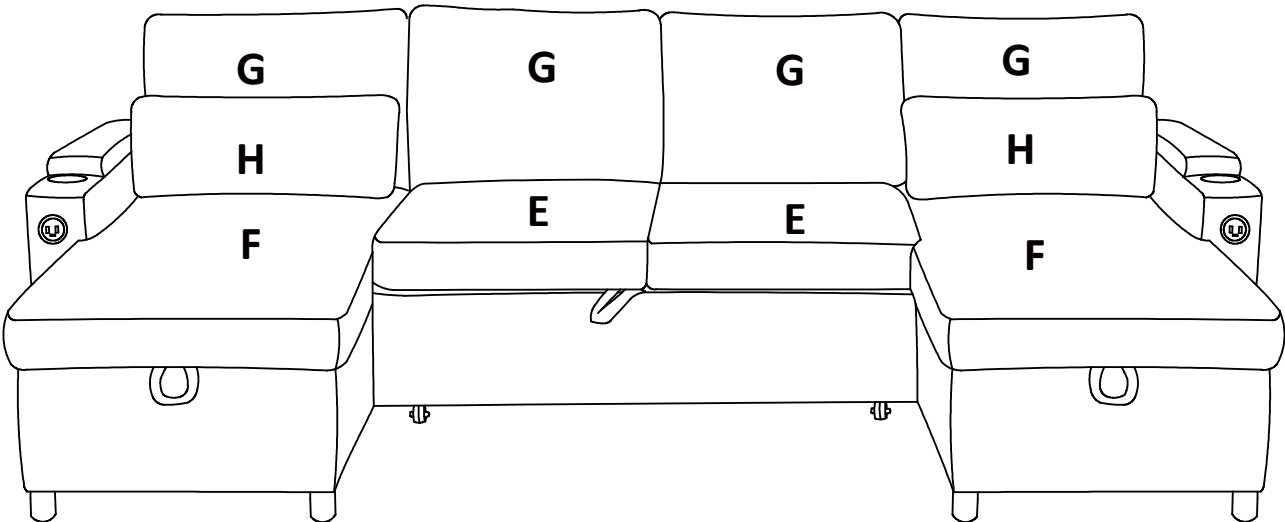



How To Replace USB?

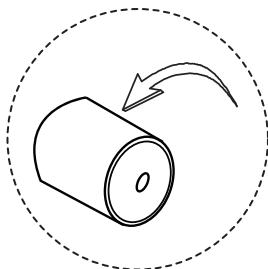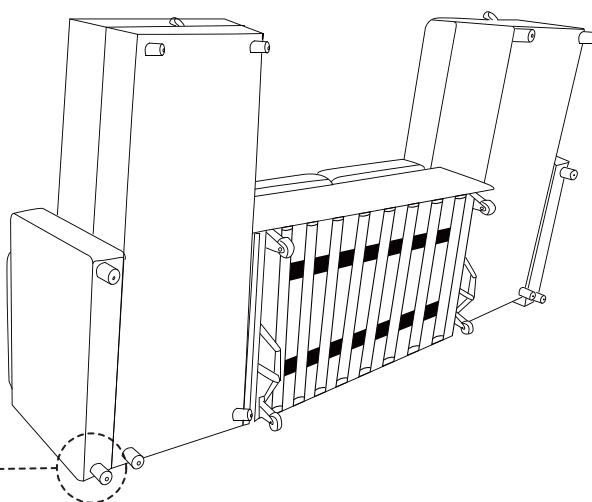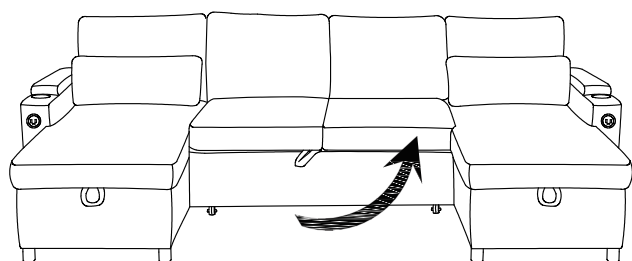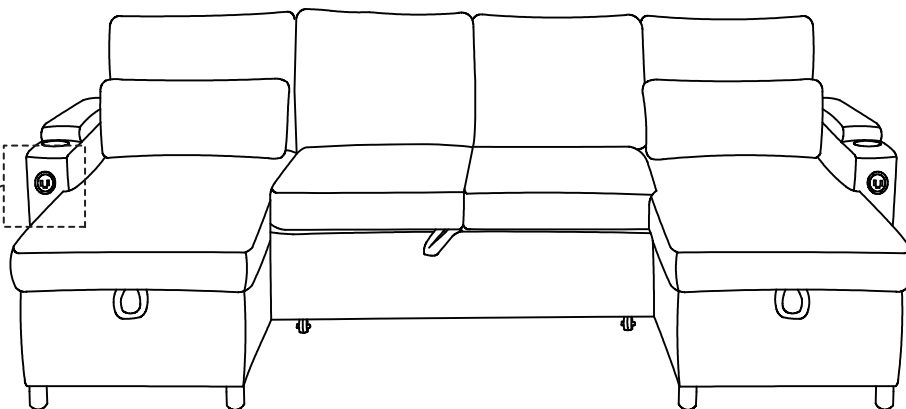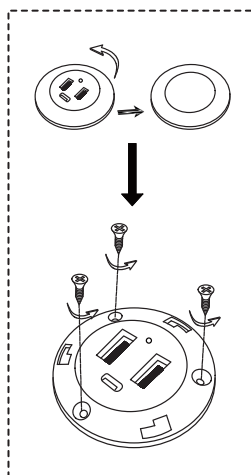




Pull out the old USB

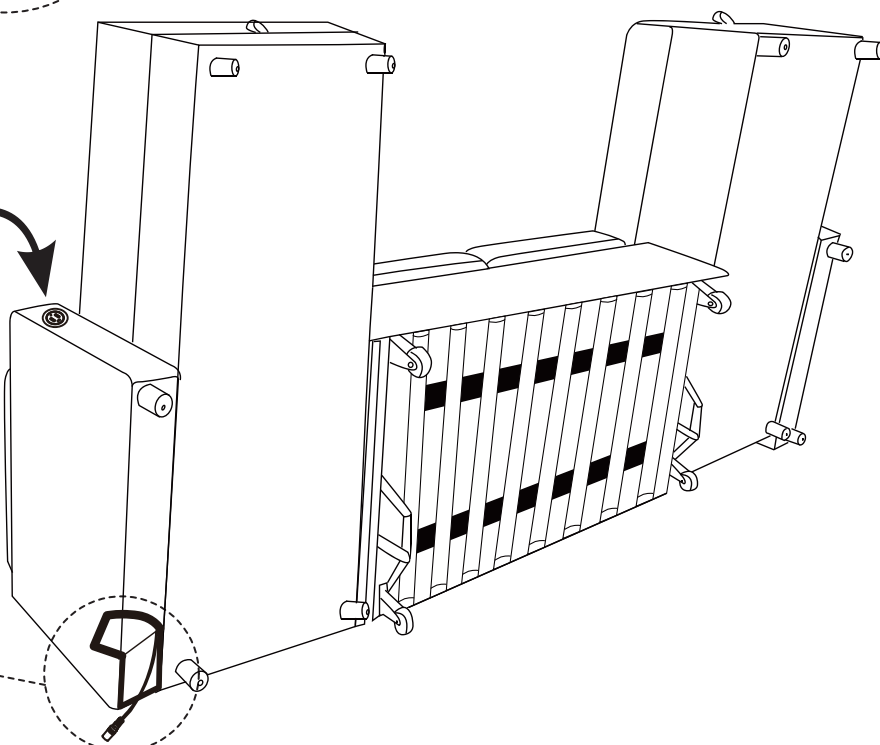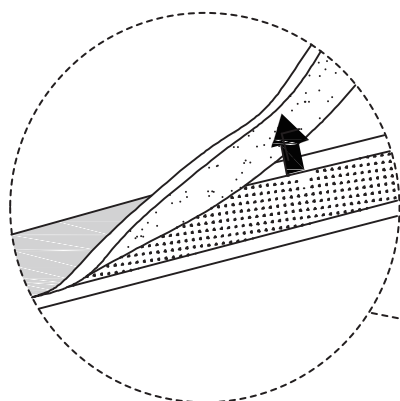

Pull in the new USB and tighten the screws.


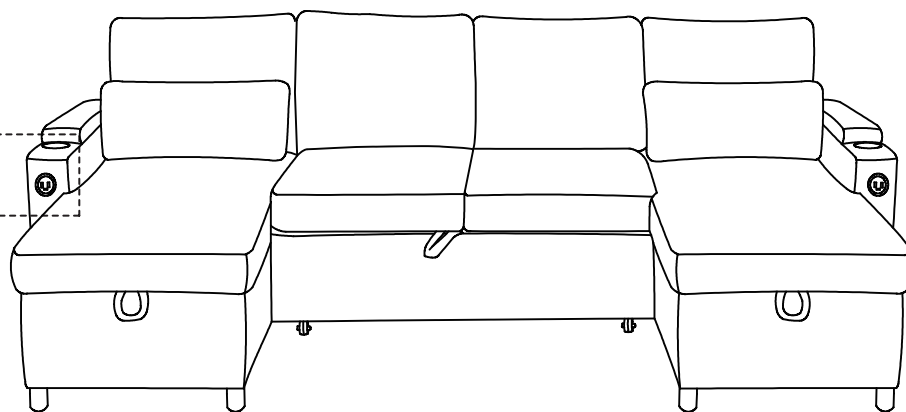
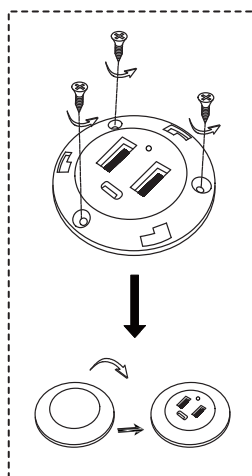


Find the USB cable and pull it out.

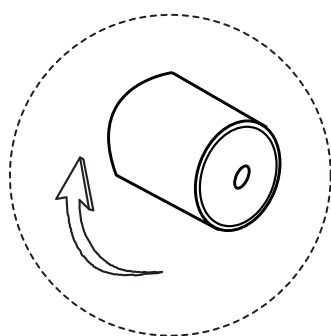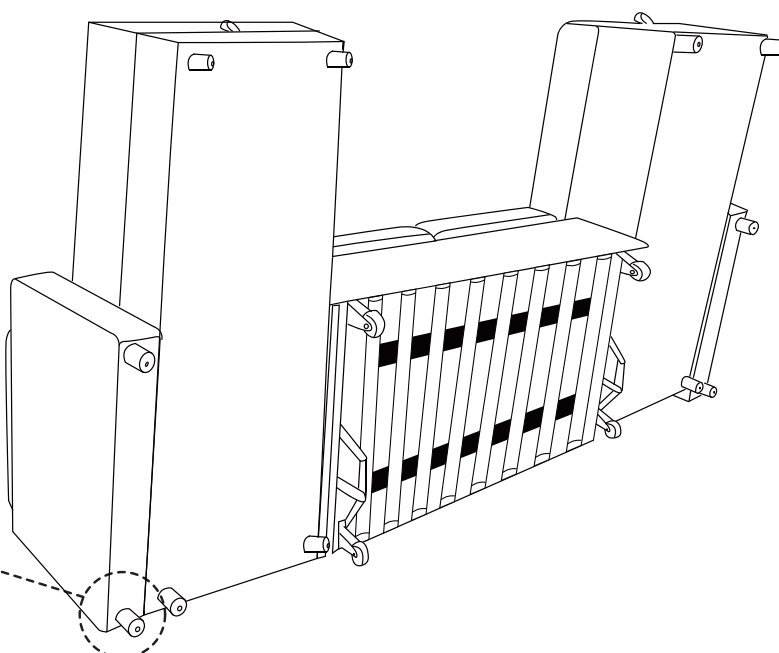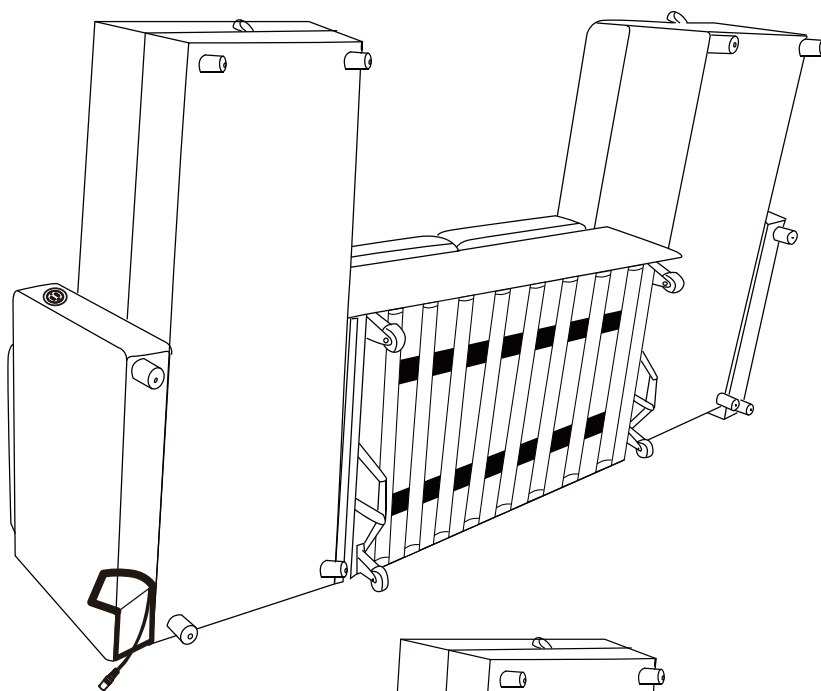

Your cushions come vacuum packed and sealed for shipping. To restore the cushion's original shape, follow the steps below.

After packing up, place them somewhere dry and ventilated. After about 72 hours it can be restored to its best-use condition.

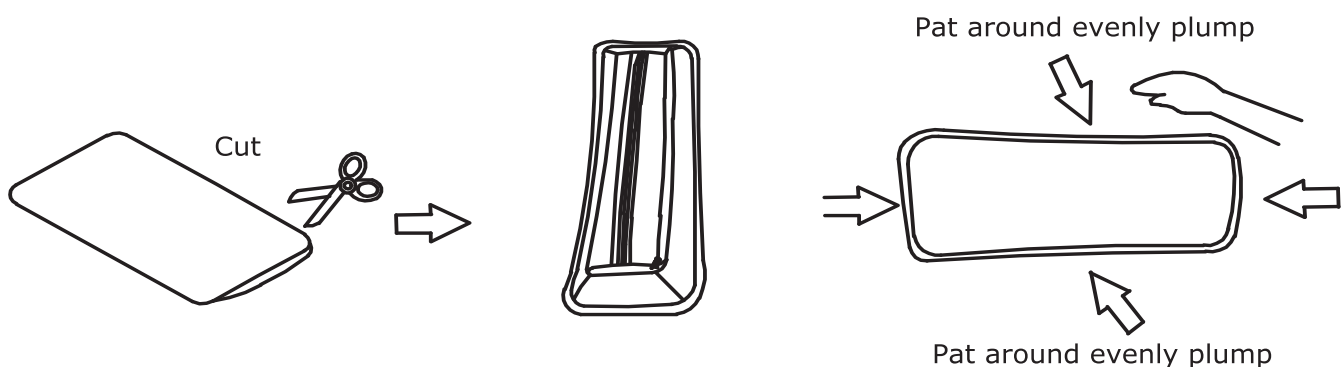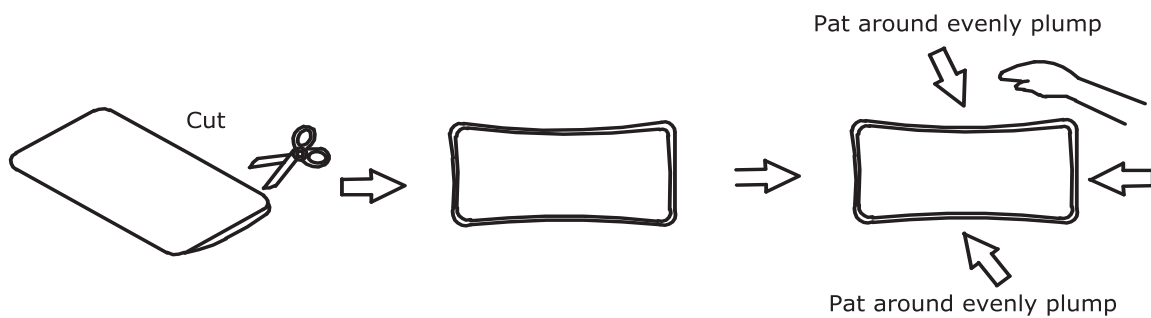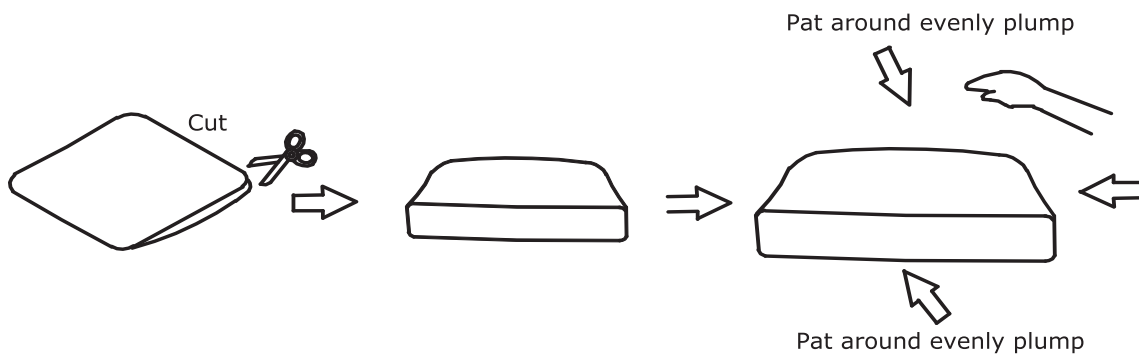

Uneven Fabric is a normal phenomenon that the first time you open it, the fabric is uneven. Because the fabric is easy to crease after long time transport in vacuum compression. You can use an iron to smooth it out, have a try!