



**STEP 5**

Attach Panel (C&D) to Panel (B&G) using Screw (1), as shown.

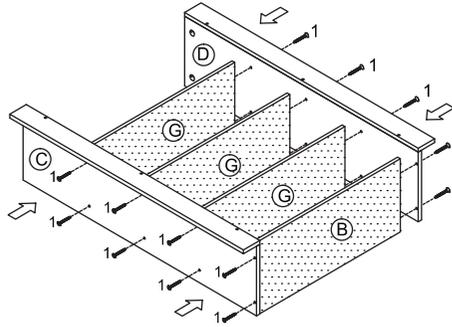


**STEP 6**

Attach Panel (A) to assembled unit and tighten Mini Fix Cam (5) using screwdriver.

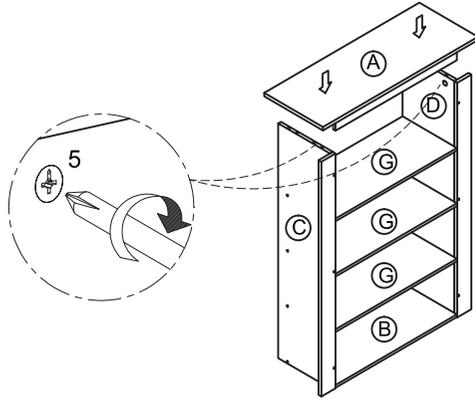


**STEP 7**

Attach Panel (H&I) to the back of the storage with Power Pin (7).

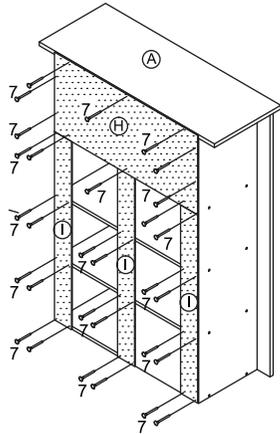


**STEP 8**

Unfold Bin (9&10) and slide into the storage.

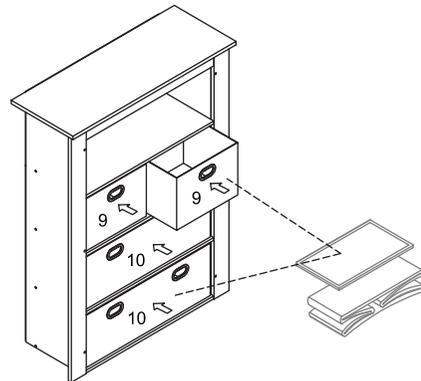

**Recommended Maximum Weight**

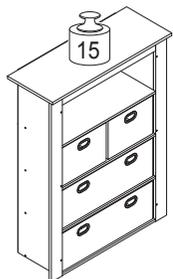

\*Unit in Pound(lbs)

**WARNING:**

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.


**Assembly Instruction**

Hallway Console Table with 4-Foldable Bins


DIMENSION : 23.6"(W) x 31.5"(H) x 9.1"(D)

00:20


Approx. 20 minutes

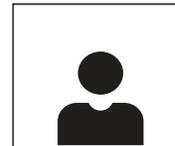

Recomm. 1 Person

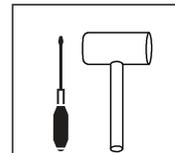


Tool Required

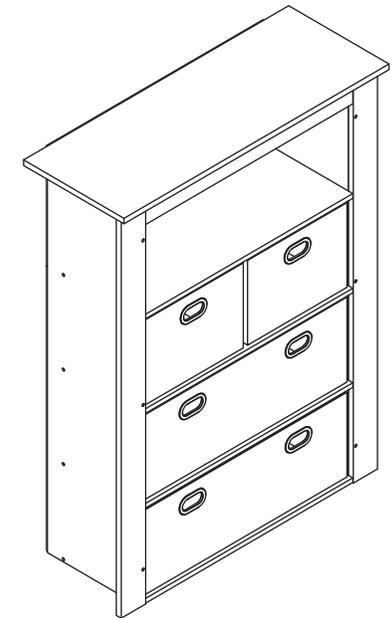

No	Hardware List	Qty
1	Screw M3.5x32mm 	22pcs
2	Screw M3.5x10mm 	4pcs
3	Dowel M6x20mm 	8pcs
4	Mini Fix Bolt 	4pcs
5	Mini Fix Cam (12mm) 	4pcs
6	L-Bracket 	2pcs
7	Power Pin 	30pcs
8	Nail Leg 10mm 	4pcs
9	Small Bin 	2pcs
10	Large Bin 	2pcs

No	Parts List	Qty
A	Top Panel 	1pcs
B	Bottom Panel 	1pcs
C	Left Side Panel 	1pcs
D	Right Side Panel 	1pcs
E	Side Support Bar 	2pcs
F	Top Bar 	1pcs
G	Shelf Panel 	4pcs
H	Top Back Panel 	1pcs
I	Bottom Back Panel 	3pcs

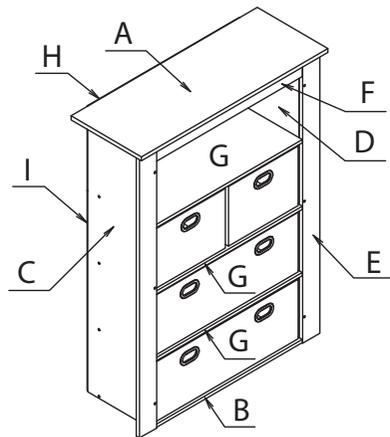


#### USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damp cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.


#### STEP 1

- 1.1 Install Dowel (3) and Nail Leg (8) into Panel (C&D).
- 1.2 Insert Mini Fix Cam (5) into the pre-drilled holes on Panel (C&D).
- 1.3 Tighten Mini Fix Bolt (4) on Panel (A).

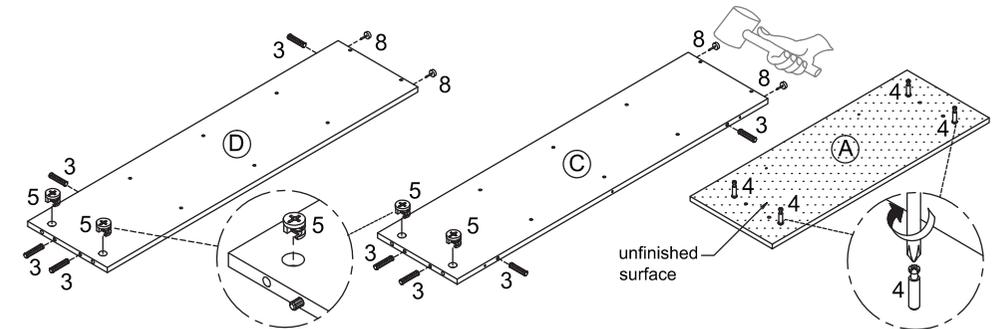


#### STEP 2

Tighten Bracket (6) to Panel (F) with Screw (2).

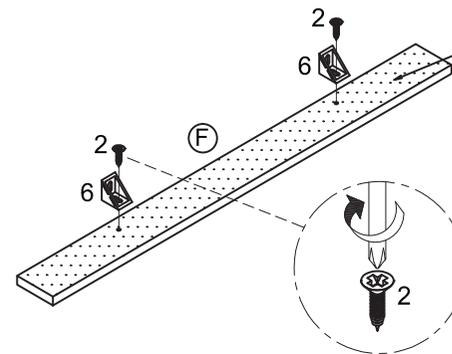

#### STEP 3

Attach Panel (F) to Panel (A) using Screw (2).

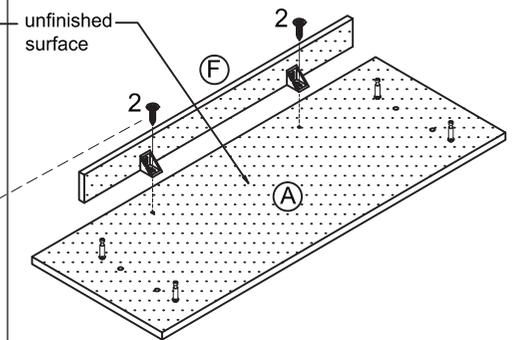

#### STEP 4

Attach Panel (E) to Panel (C&D) with Screw (1), as shown.

