

# *ASSEMBLY INSTRUCTIONS*



## **FIREPLACE**

# ASSEMBLY INSTRUCTIONS


## ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



### WARNING!


- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

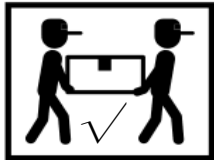

ASSEMBLY TIME 10 MINUTES


## PARTS IDENTIFICATION

A FIREPLACE

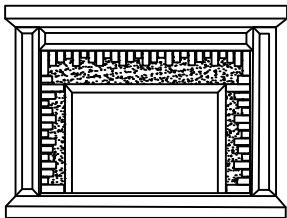

1PC

B FURNACE CORE

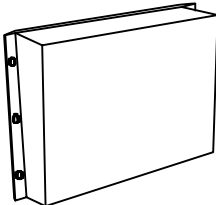

1PC

## Z HARDWARE IDENTIFICATION

1 SCREW M3.5\*12 MM



6PCS


2 SCREWDRIVER





1PC

ASSEMBLY INSTRUCTIONS


STEP 1

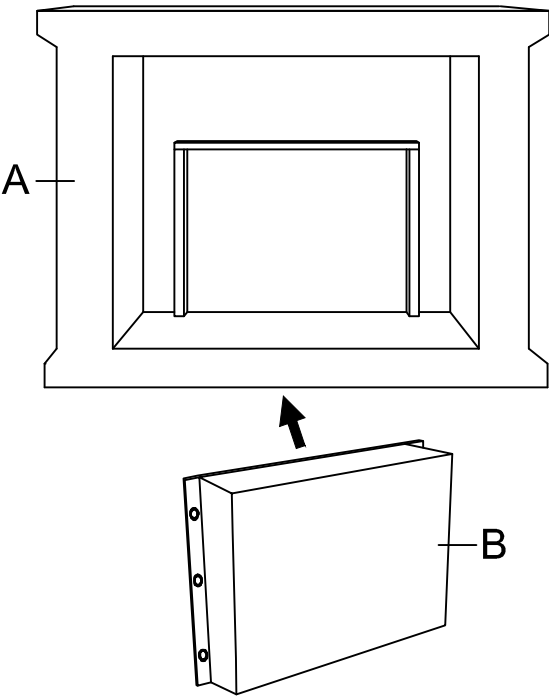



STEP 2

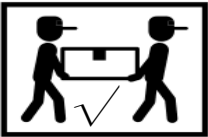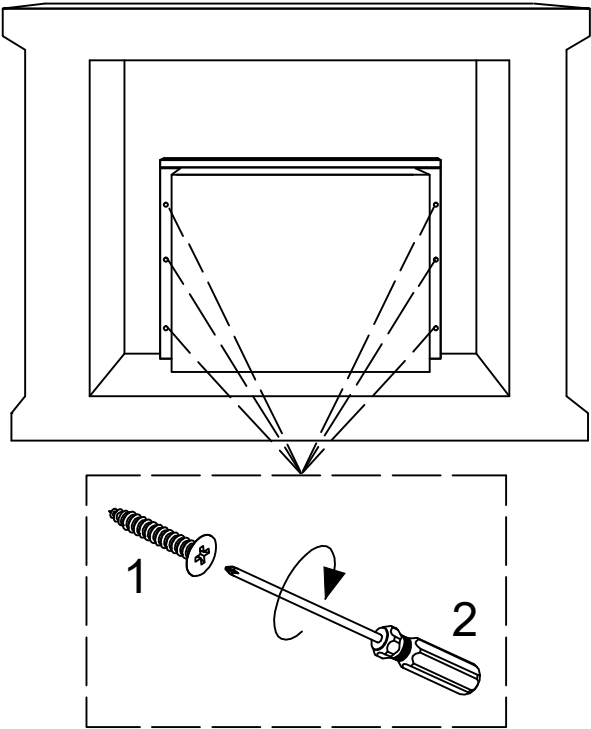

STEP 3

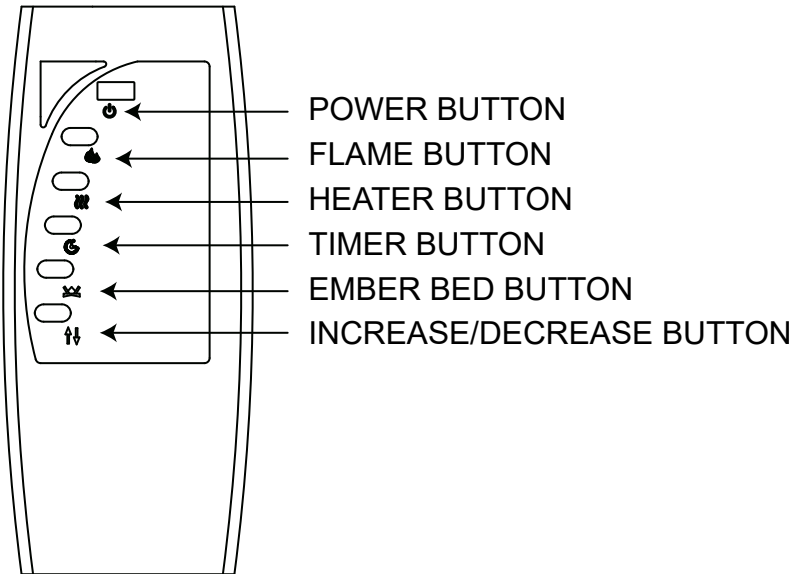

FA26V60L-C8

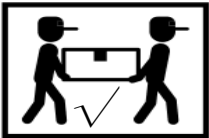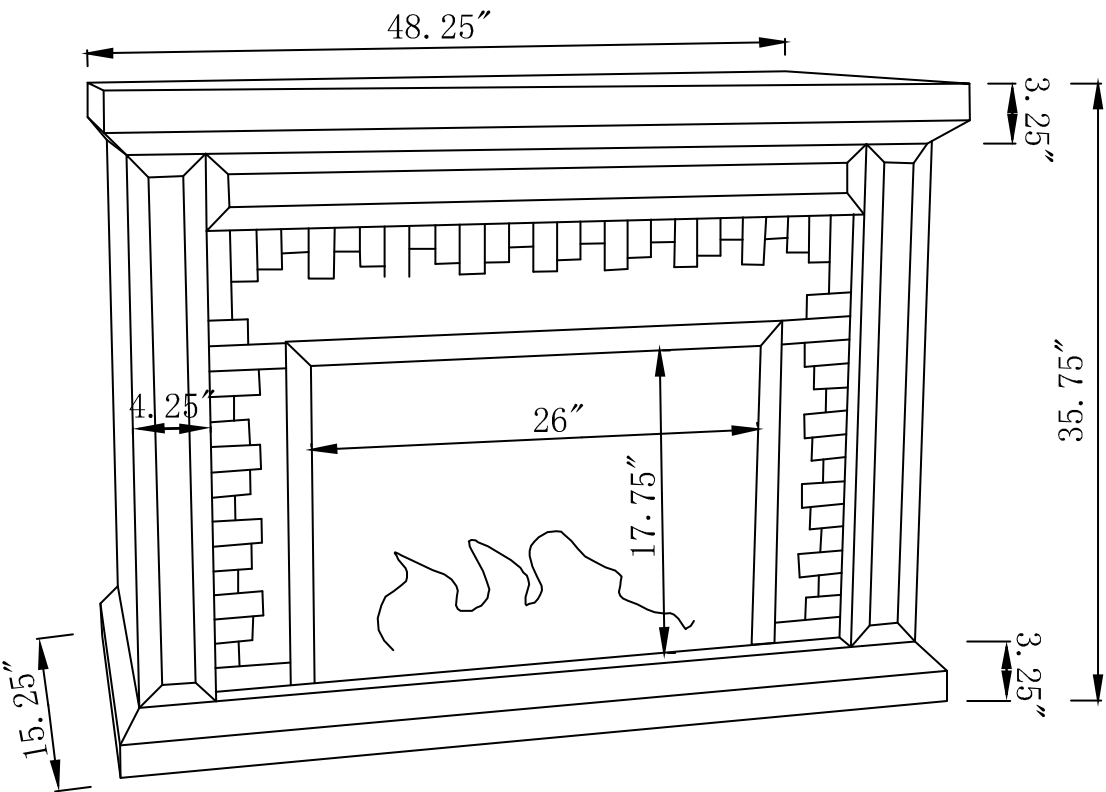

Note: Dimension tolerance  $\pm 5\%$