




Installation Instruction




Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.




HARDWARE LIST

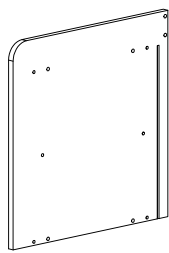


① 1PC

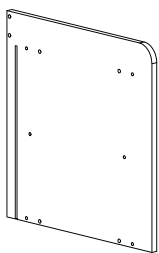


② 1PC

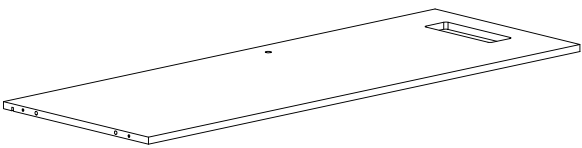


③ 1PC

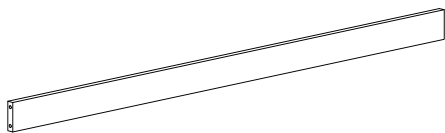


④ 1PC

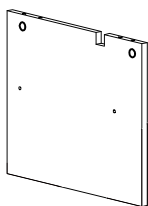


⑤ 1PC

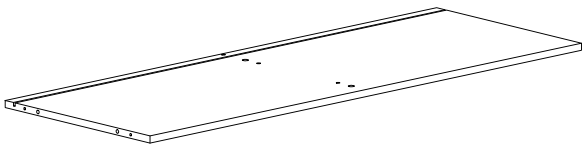


⑥ 1PC

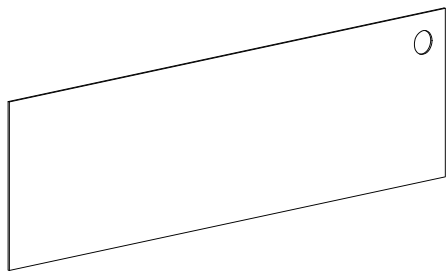


⑦ 1PC

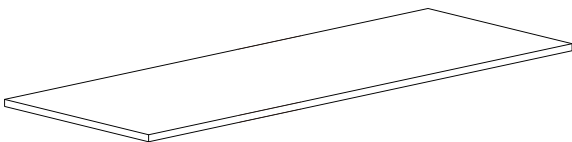


⑧ 1PC

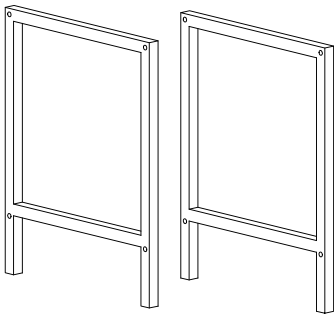

⑨ 2PCS

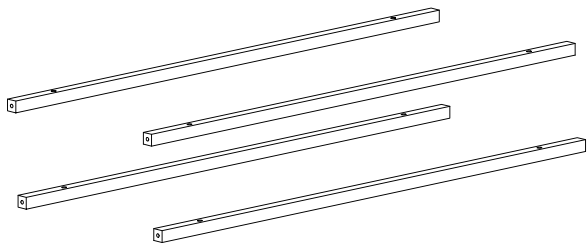

⑩ 4PCS

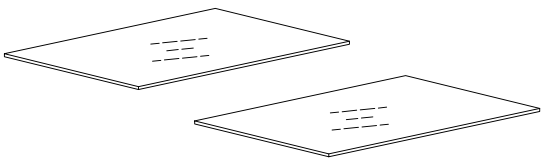


⑪ 2PCS

PARTA LIST



A x2PCS




B x12PCS



C x2PCS




D x15PCS



E x8PCS




F x8PCS




G x8PCS




H x2PCS

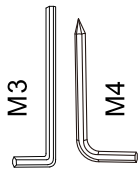

I x1PC

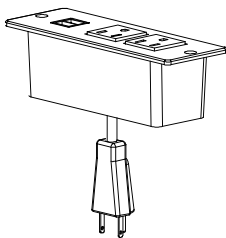


J x1PC

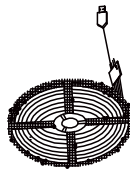

K x1PC




L x4PCS

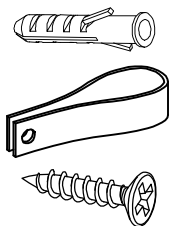


M x2PCS

1



Ø6.5x36mm


A x2PCS




Ø6x30mm

B x2PCS

③ x1PC

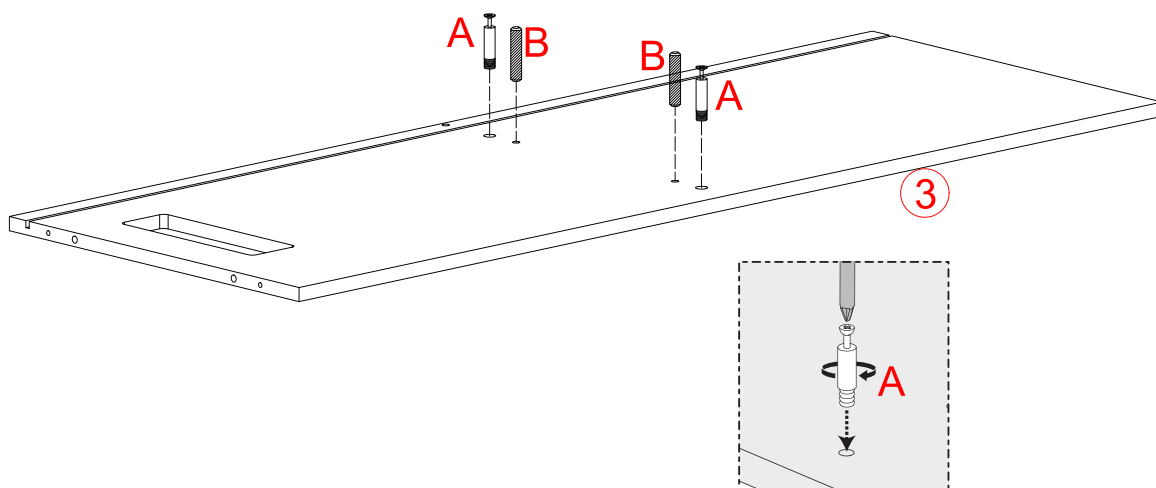

2



Ø6x30mm

B x2PCS



Ø15x9.8mm

C x2PCS





M5x48mm

D x1PC

④ x1PC

⑤ x1PC

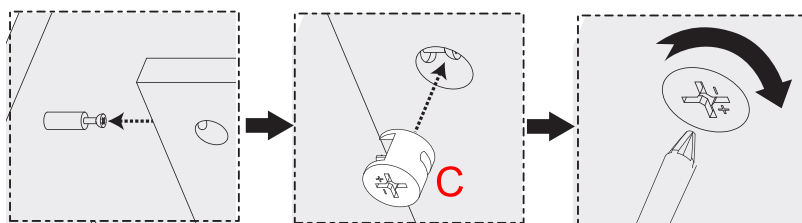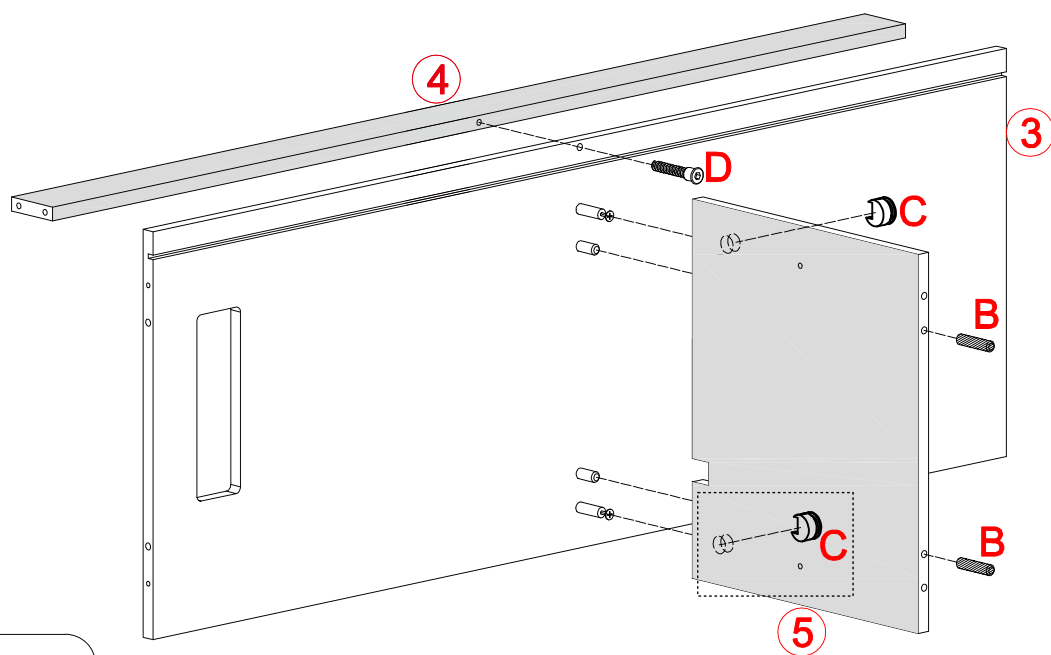


3



M5x48mm


D x2PC

6 x1PC

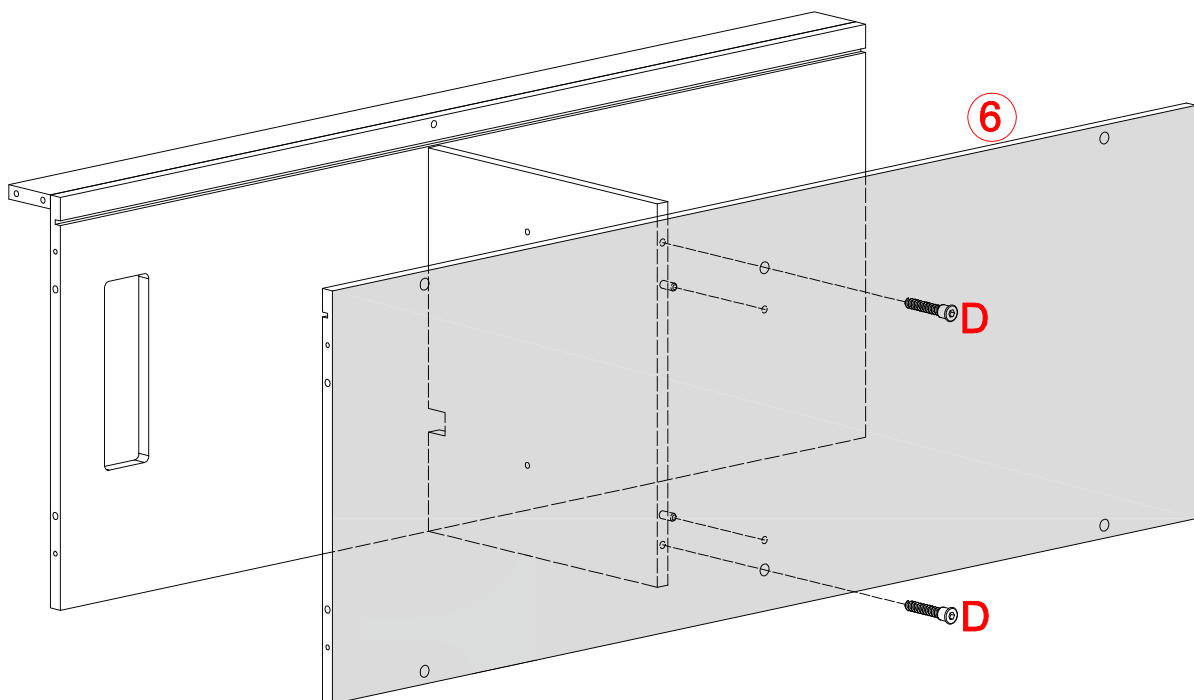


4

7 x1PC

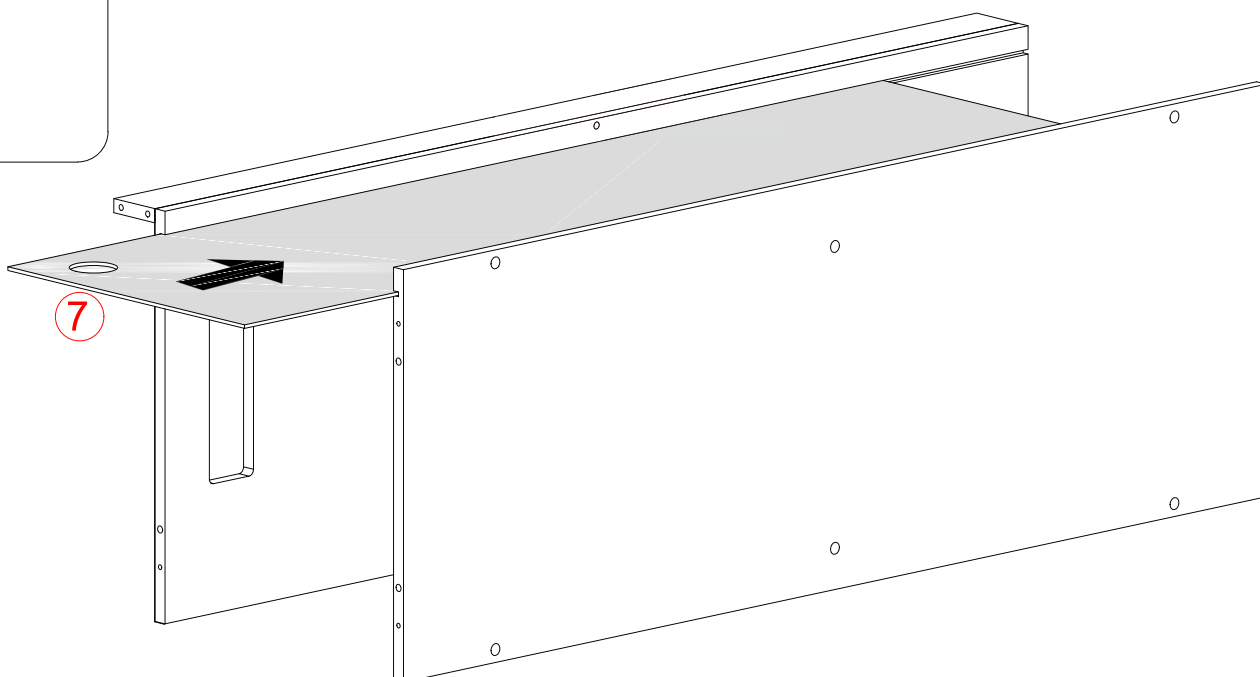

5



Ø6x30mm


B x4PCS




M5x48mm

D x6PCs

(2) x1PC

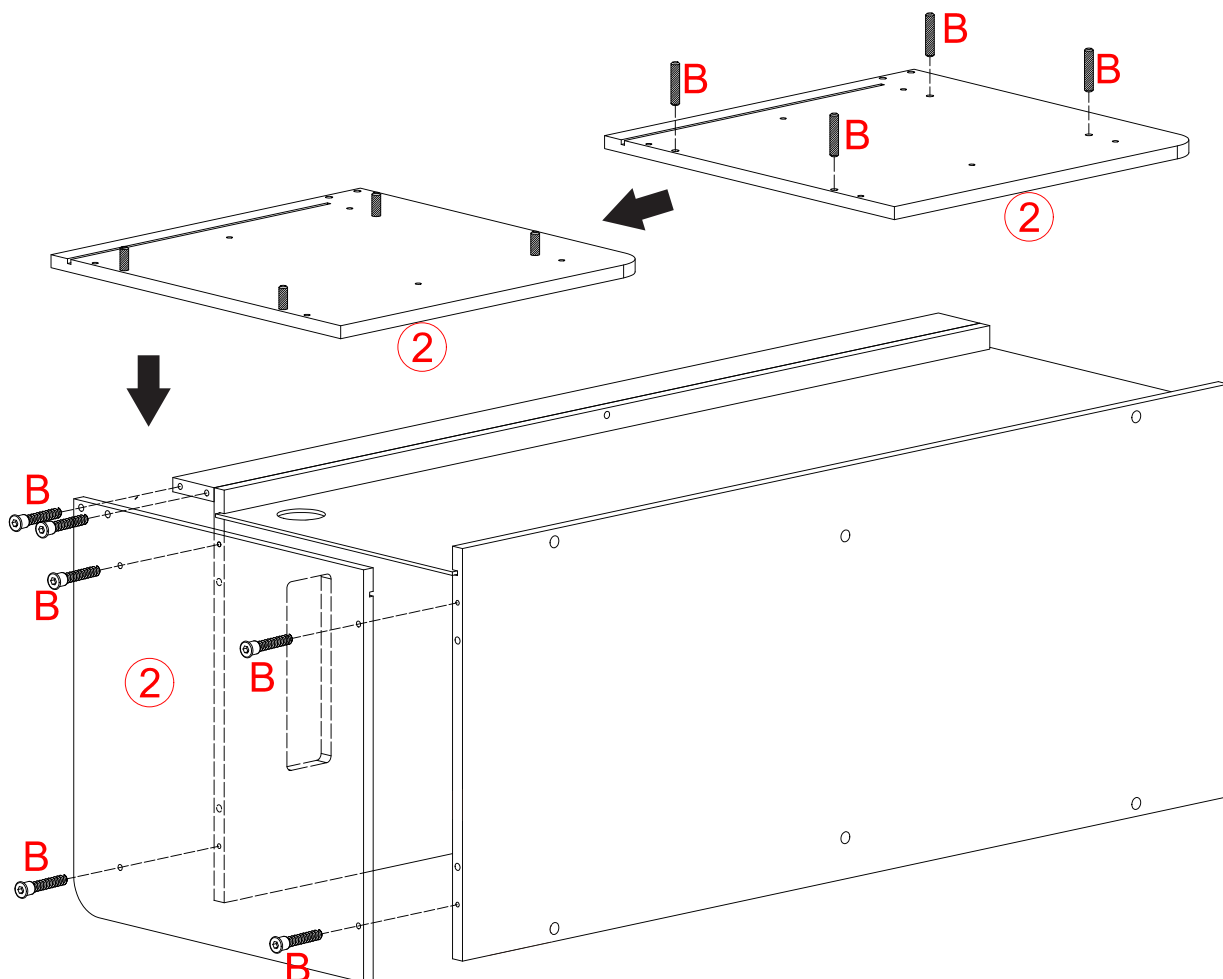

6



Ø6x30mm


B x4PCS



M5x48mm

D x6PCs

(1) x1PC

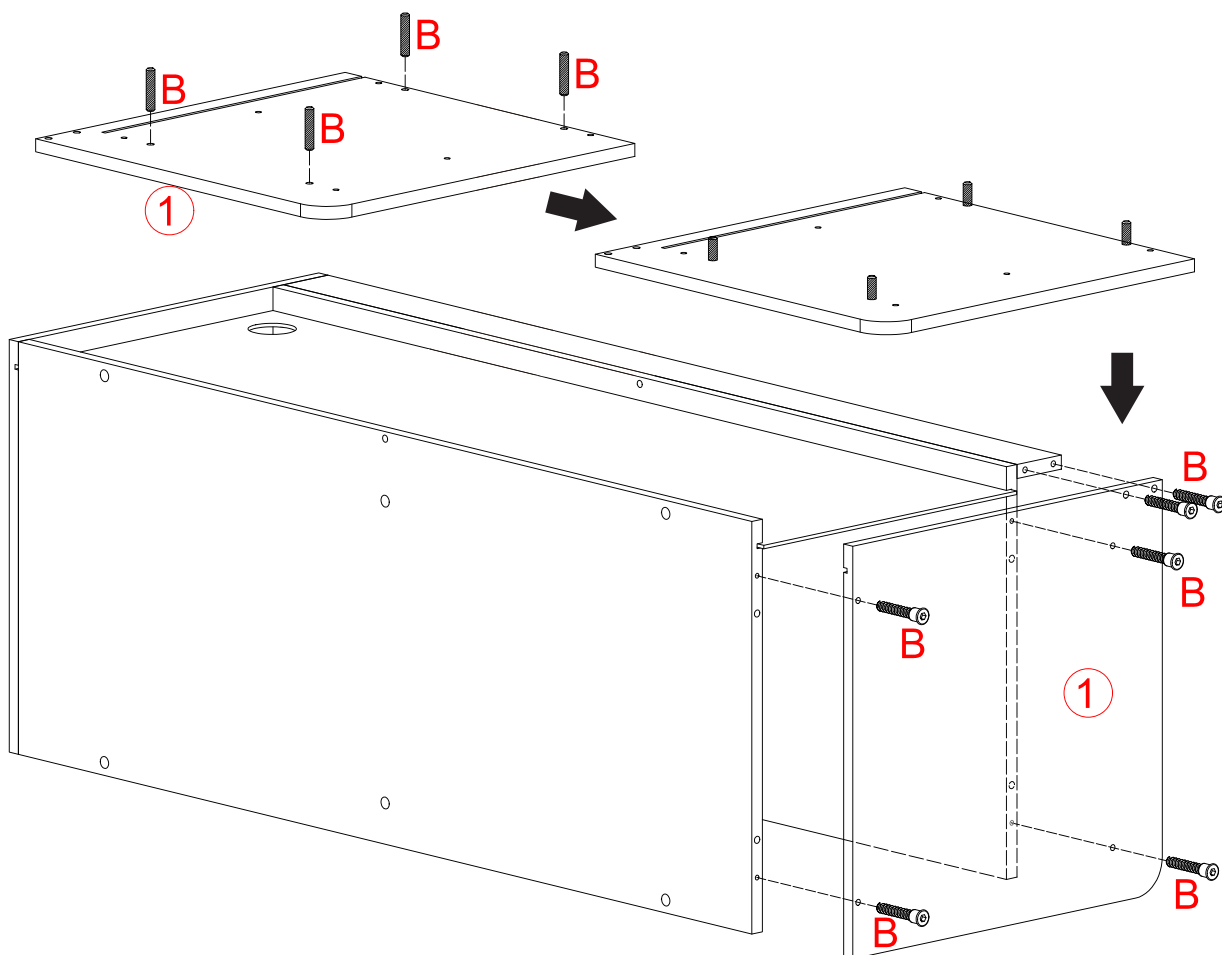

7




M6x28mm

F x4PCS

8 x1PC

10 x2PCS

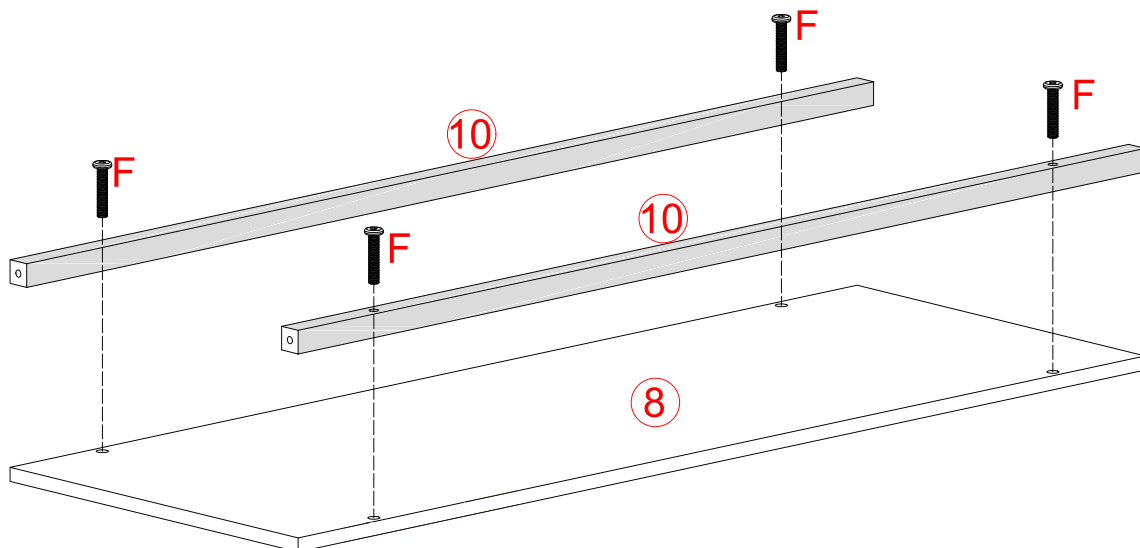

8



M6x40mm


G x8PCS





L x4PCS

9 x2PCS

10 x2PCS

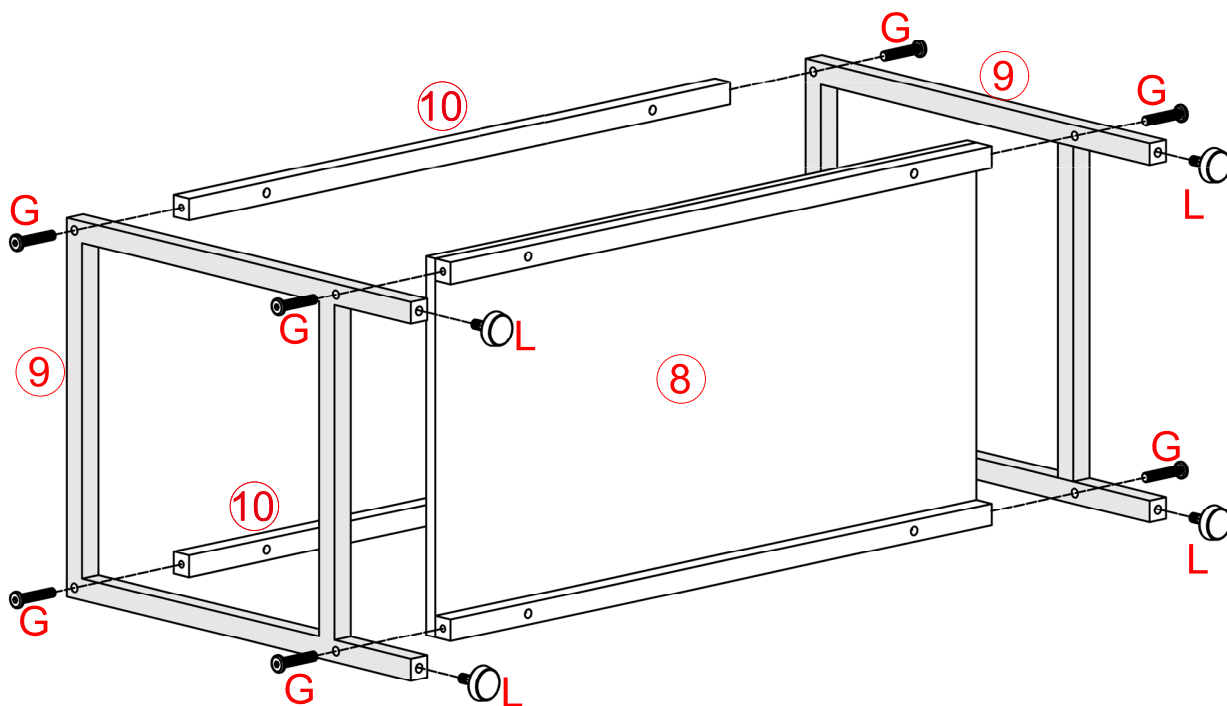

9

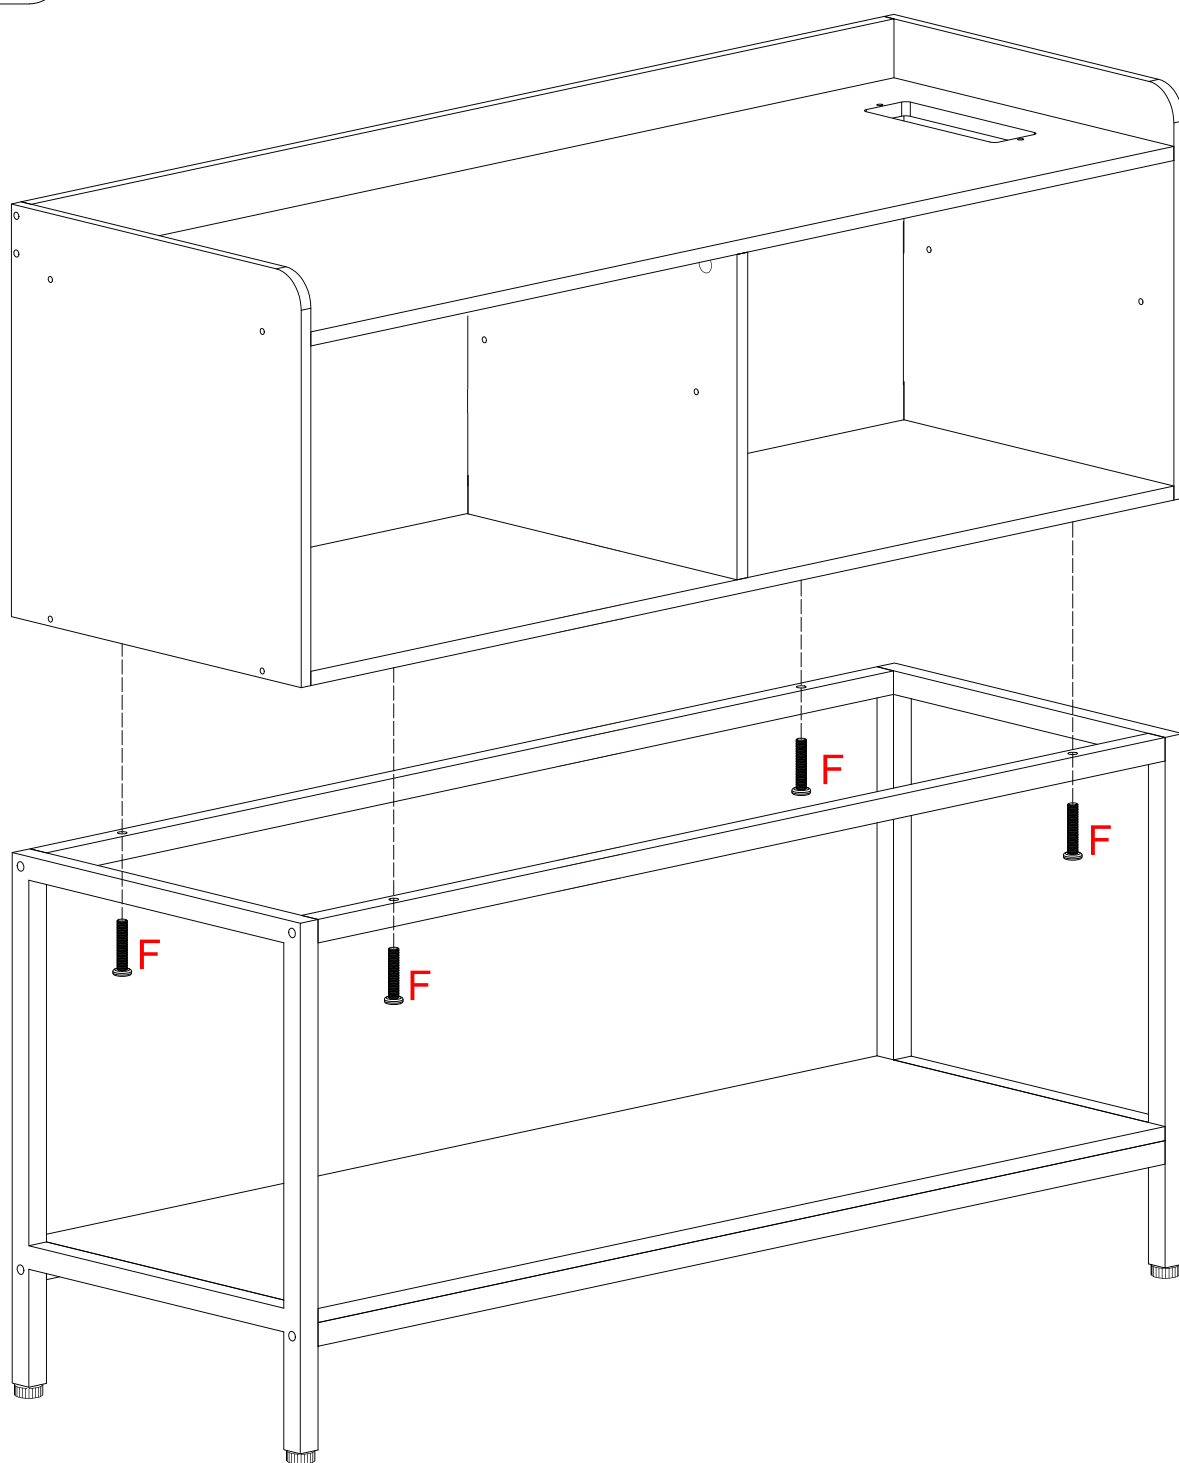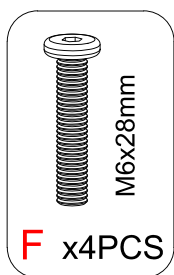


10




Ø3.5*11mm





H x2PCS

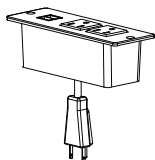



J x1PC

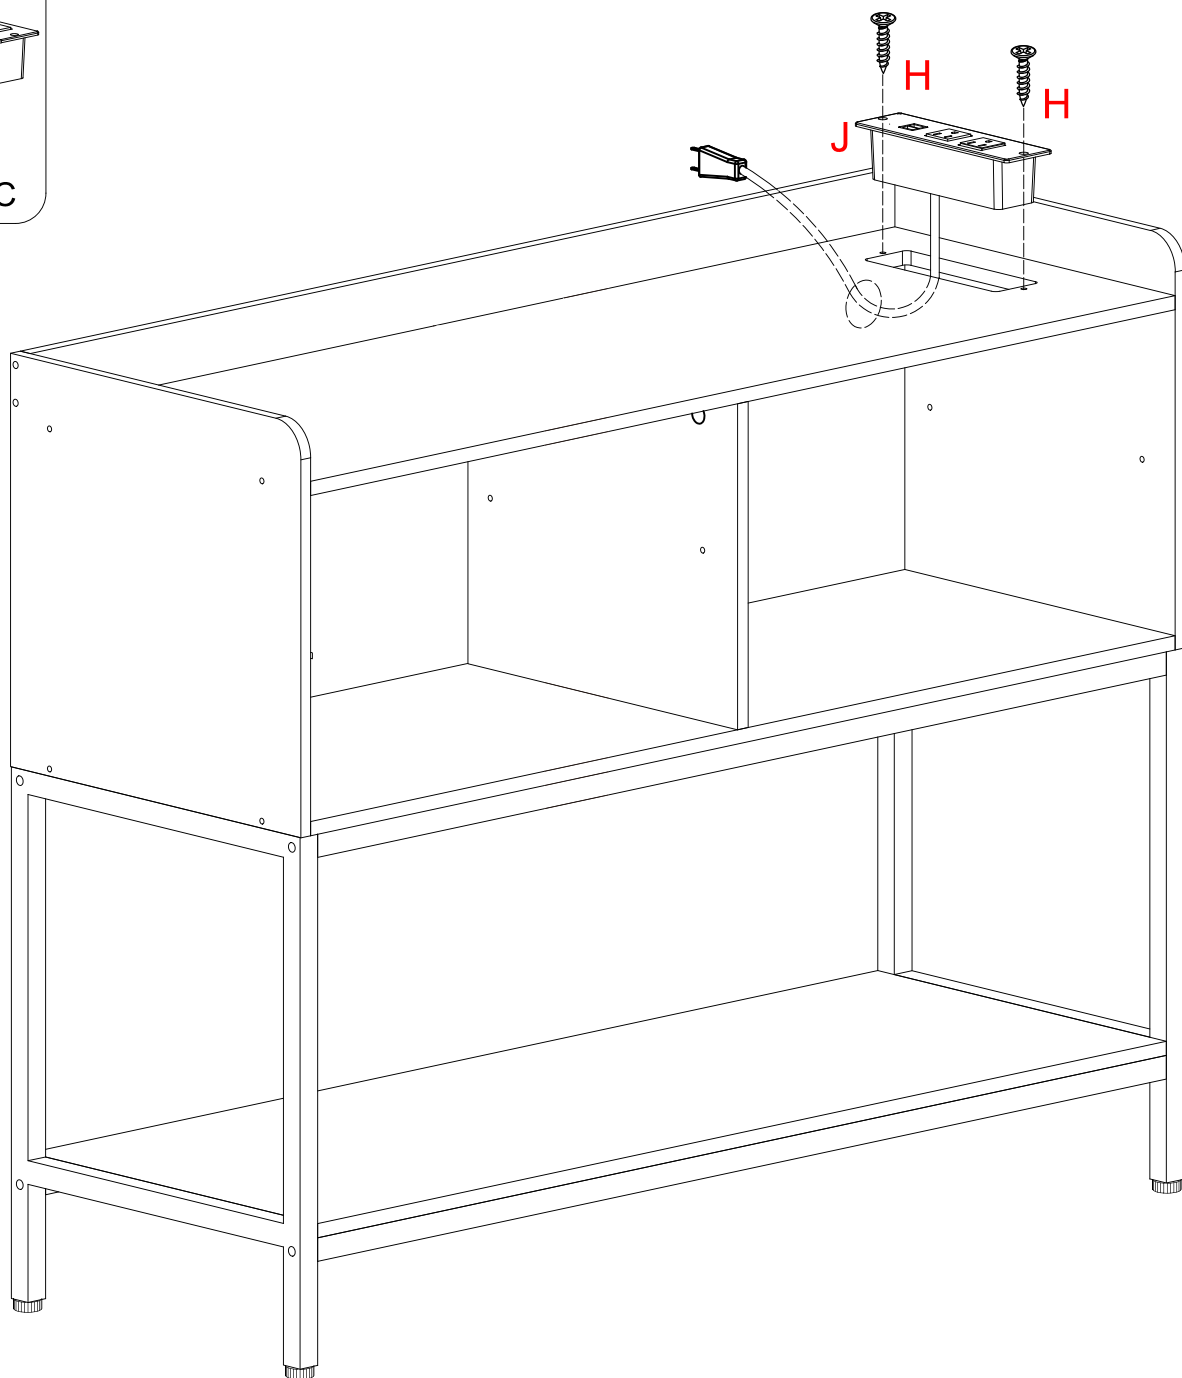

11

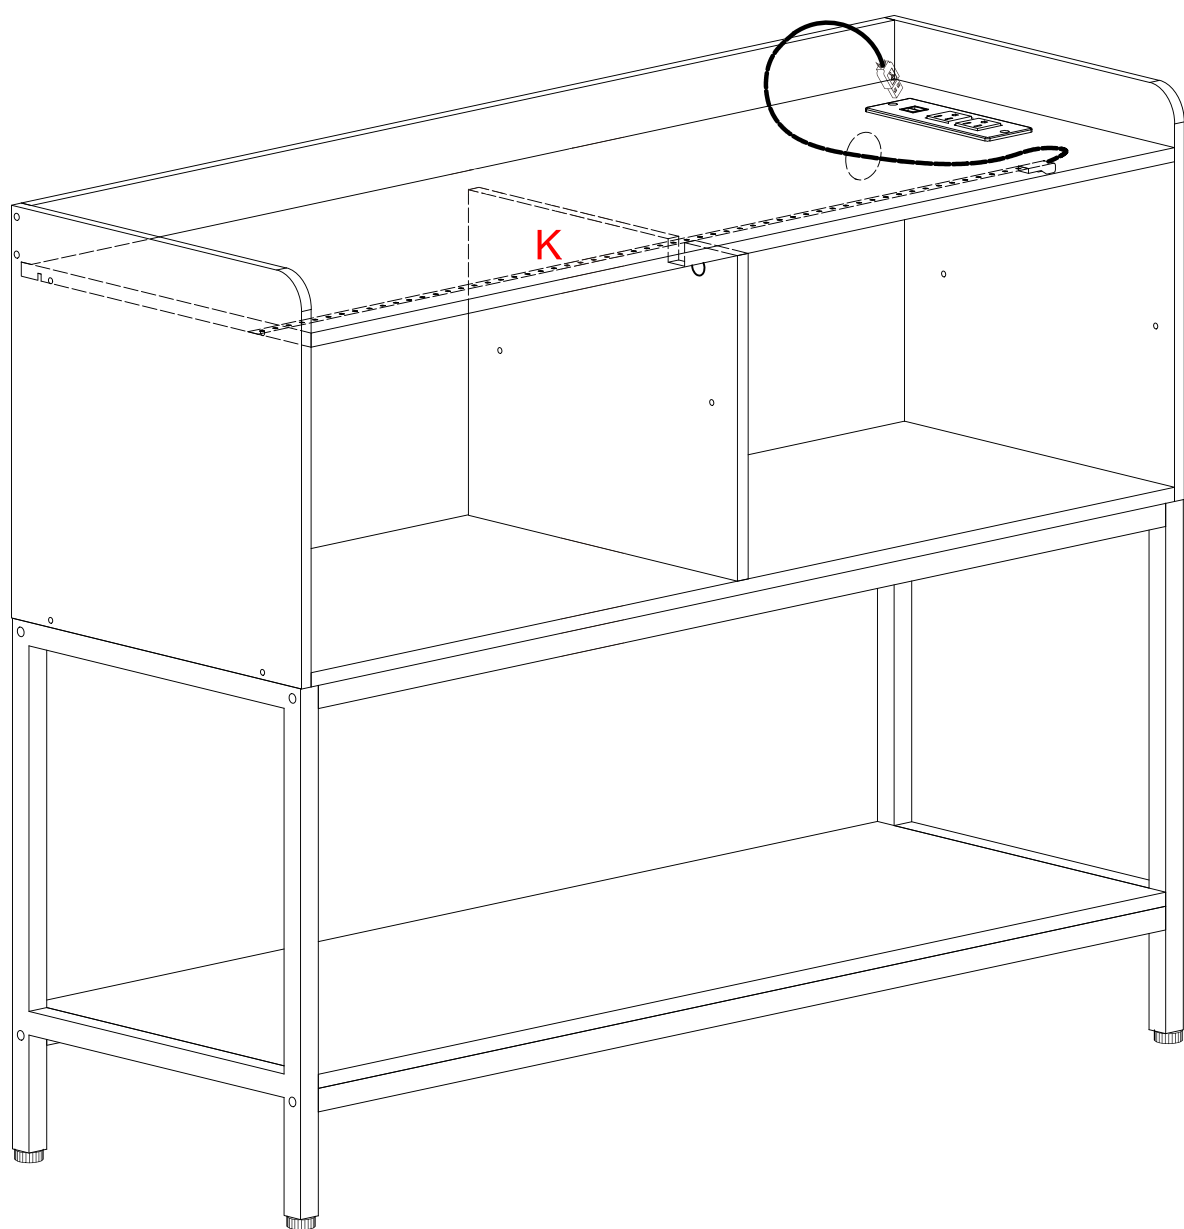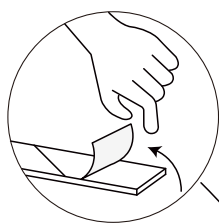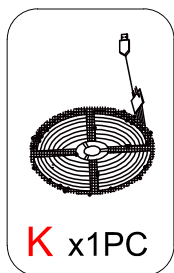

12

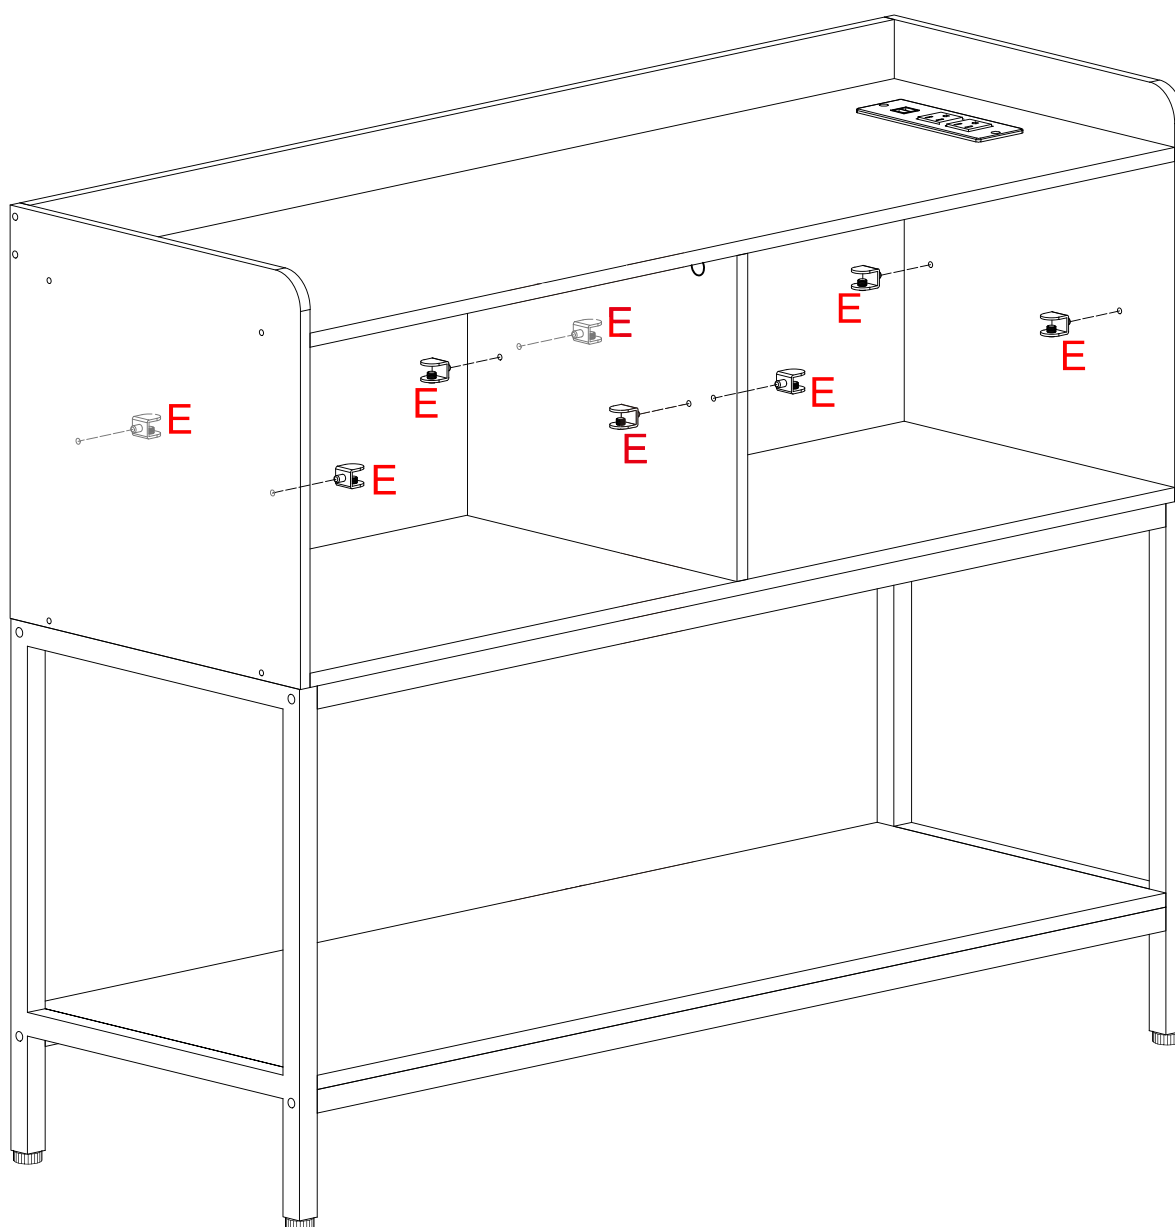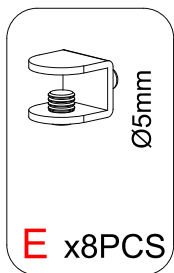

13

