


Dresser

Assembly Instructions - Please keep for future reference

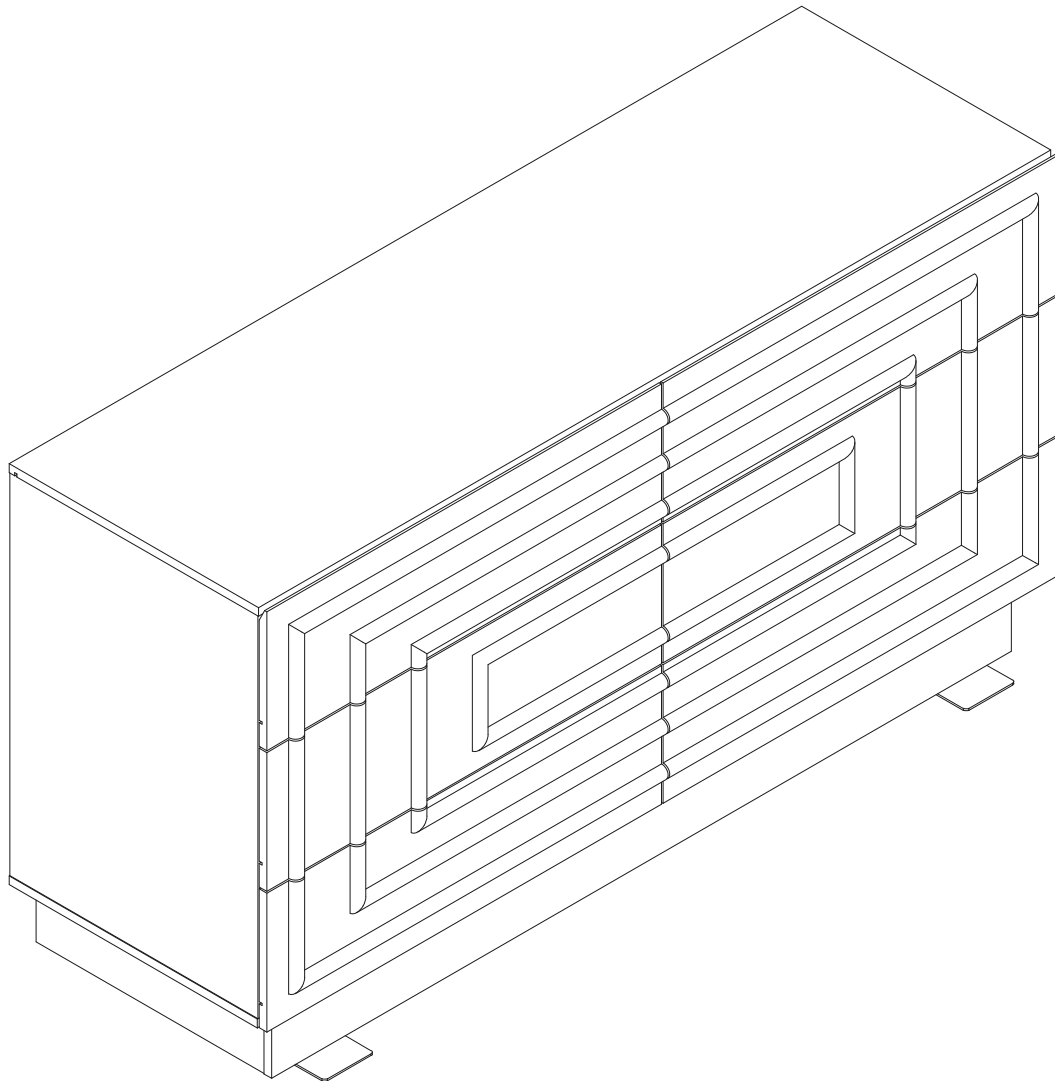

Dimensions

Width-57.09inch

Depth-18.98inch

Height-30.79inch

Important-Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

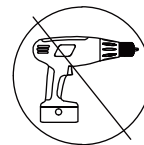

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

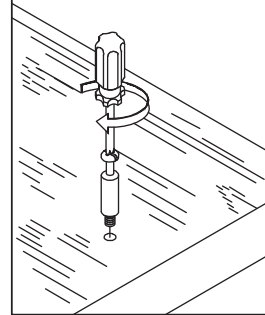

Step 2

Push the male camlock into the entry hole.

2

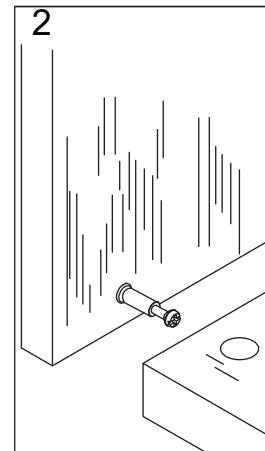


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

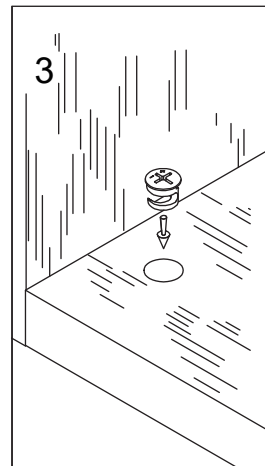


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

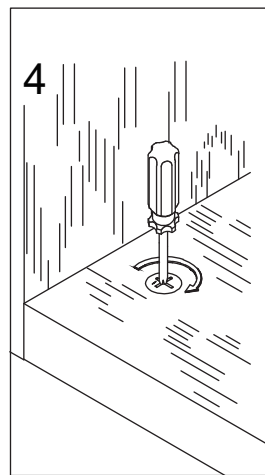
















Assembly Instructions

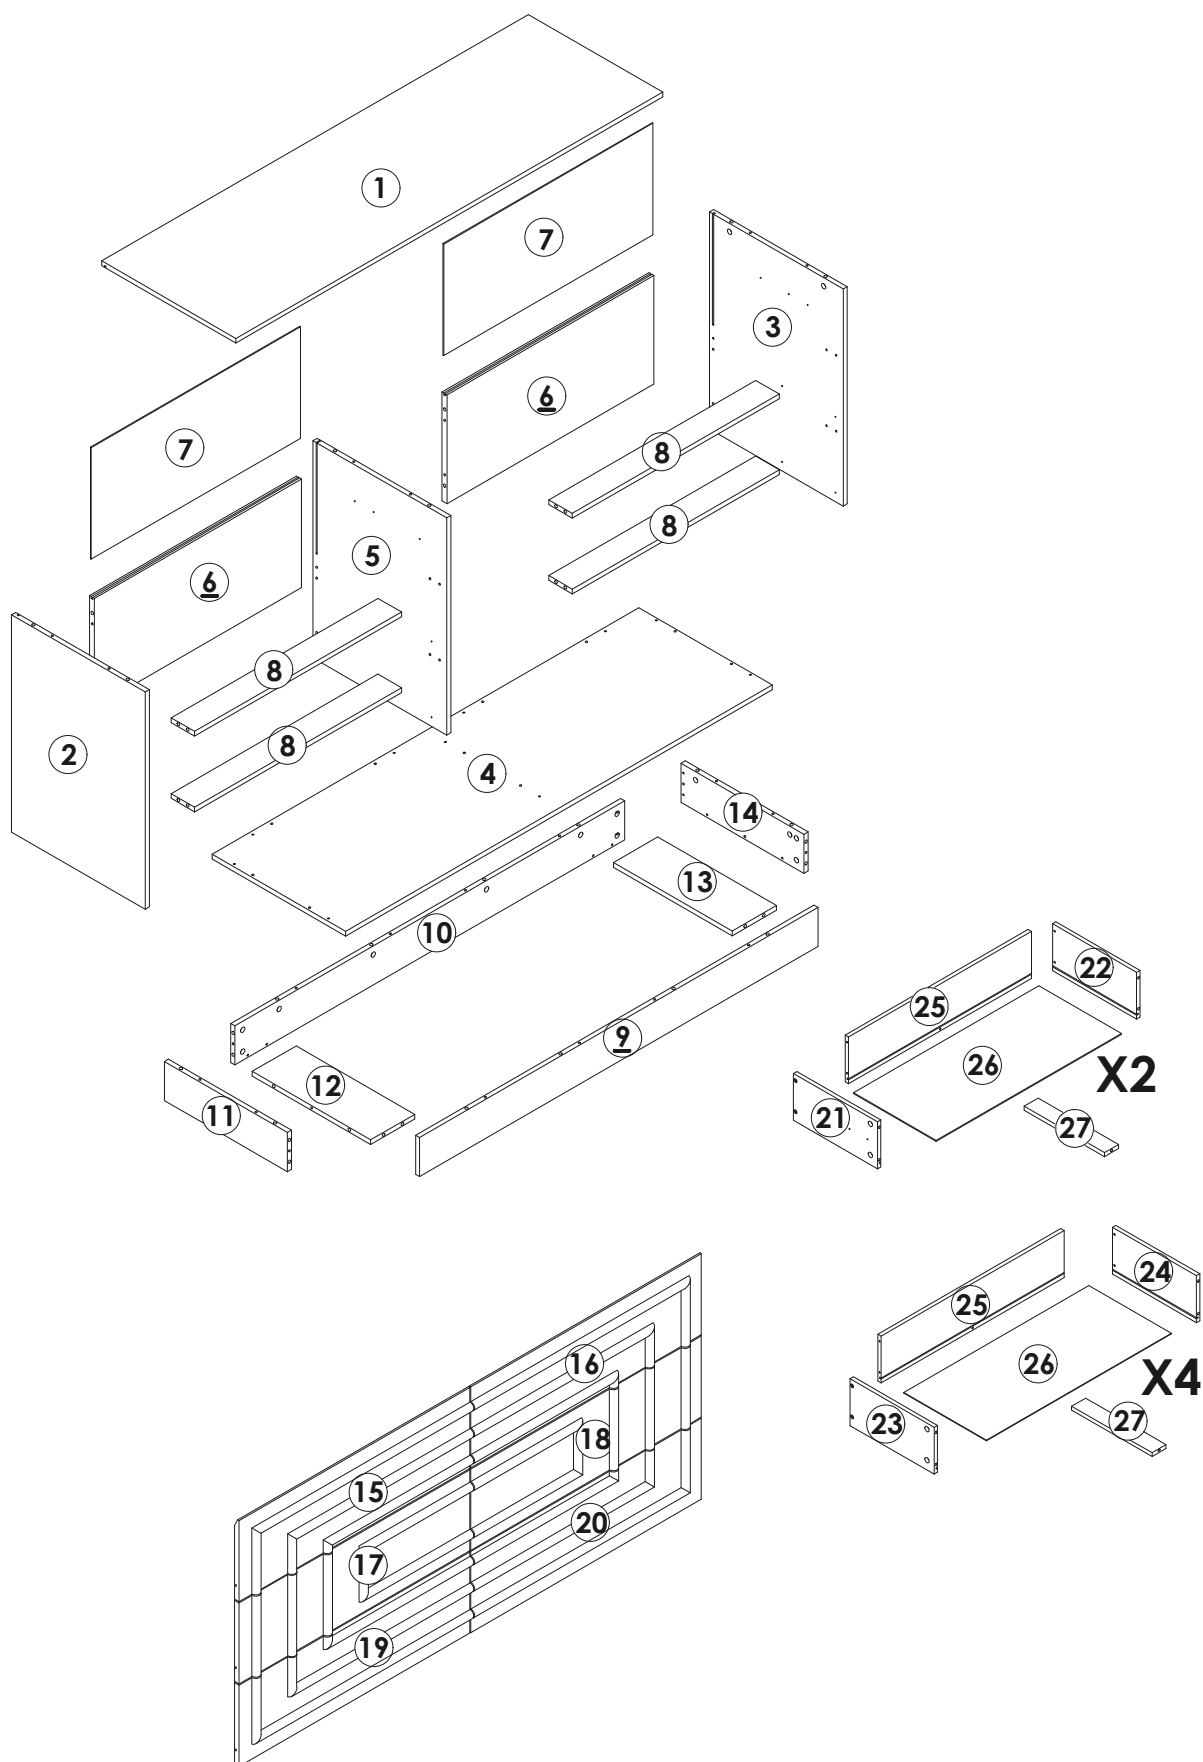

Assembly Instructions

There are 2 boxes of this product











BOX-1: N739P514069

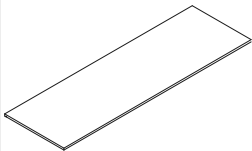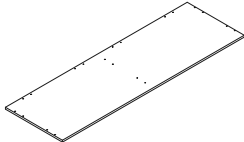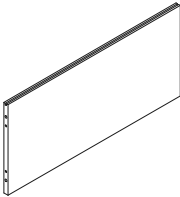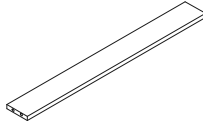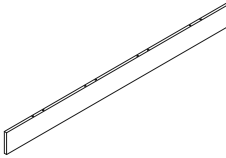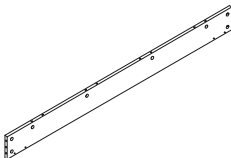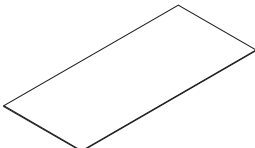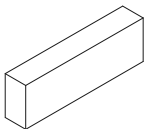 1450x456x14mm ① x 1	 639x454x14mm ② x 1	 639x454x14mm ③ x 1	 1450x454x14mm ④ x 1	 639x454x14mm ⑤ x 1
 703x320x17mm ⑥ x 2	 703x80x14mm ⑧ x 4	 1354x115x14mm ⑨ x 1	 1324x115x14mm ⑩ x 1	 418x115x14mm ⑪ x 1
 403x150x14mm ⑫ x 1	 403x150x14mm ⑬ x 1	 418x115x14mm ⑭ x 1	 661x295x2.5mm ⑫⑥ x 6	 287x50x12mm ⑫⑦ x 6
 Hardware Pack				

Assembly Instructions

There are 2 boxes of this product













BOX-2: N739P514070

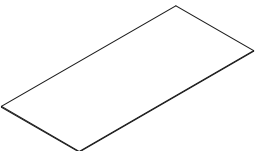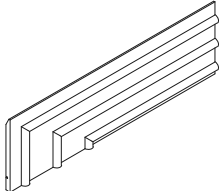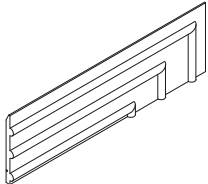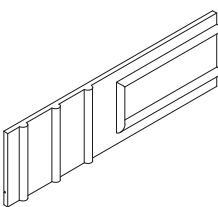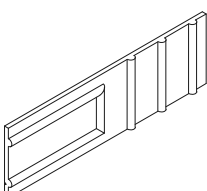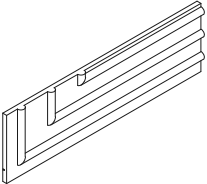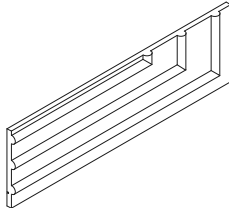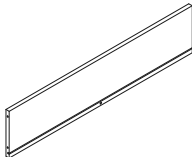				
711x328x2.5mm ⑦ x 2	722x220x26mm ⑮ x 1	722x220x26mm ⑯ x 1	722x220x26mm ⑰ x 1	722x220x26mm ⑱ x 1
				
722x220x26mm ⑲ x 1	722x220x26mm ⑳ x 1	300x145x12mm ㉑ x 2	300x145x12mm ㉒ x 2	300x145x12mm ㉓ x 4
				
300x145x12mm ㉔ x 4	653x145x12mm ㉕ x 6			


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required,(N739P514069).

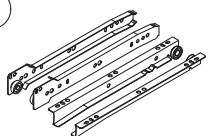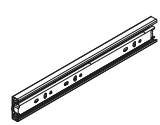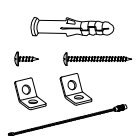(A)  Ø6*34mm Cam Bolt x 80+2	(B)  Ø15*9mm Cam lock x 92+2	(C)  6*30mm Dowel x 38+2	(D)  Ø6*64mm Cam Bolt x 6+1	(E)  6*50mm Dowel x 2
(F)  4*50mm Screw x 10+1	(G)  4*35mm Screw x 30+2	(H)  3*12mm Screw x 48+2	(I)  250mm Drawer slides x 4	(J)  Magnet touch latch x 4
(K)  3.5*12mm Screw x 24+2	(L)  250mm Drawer slides x 4	(M)  Anti-tip bracket x 2	(N)  3.5*15mm Screw x 12+1	(O)  3*15mm Back panel buckle x12+1
(P)  Wall Fixing Pack x 2	(Q)  Foam sheet x 6			



Tools required

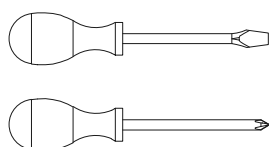

Phillips screwdriver
(medium large)

Assembly Instructions







Step 1

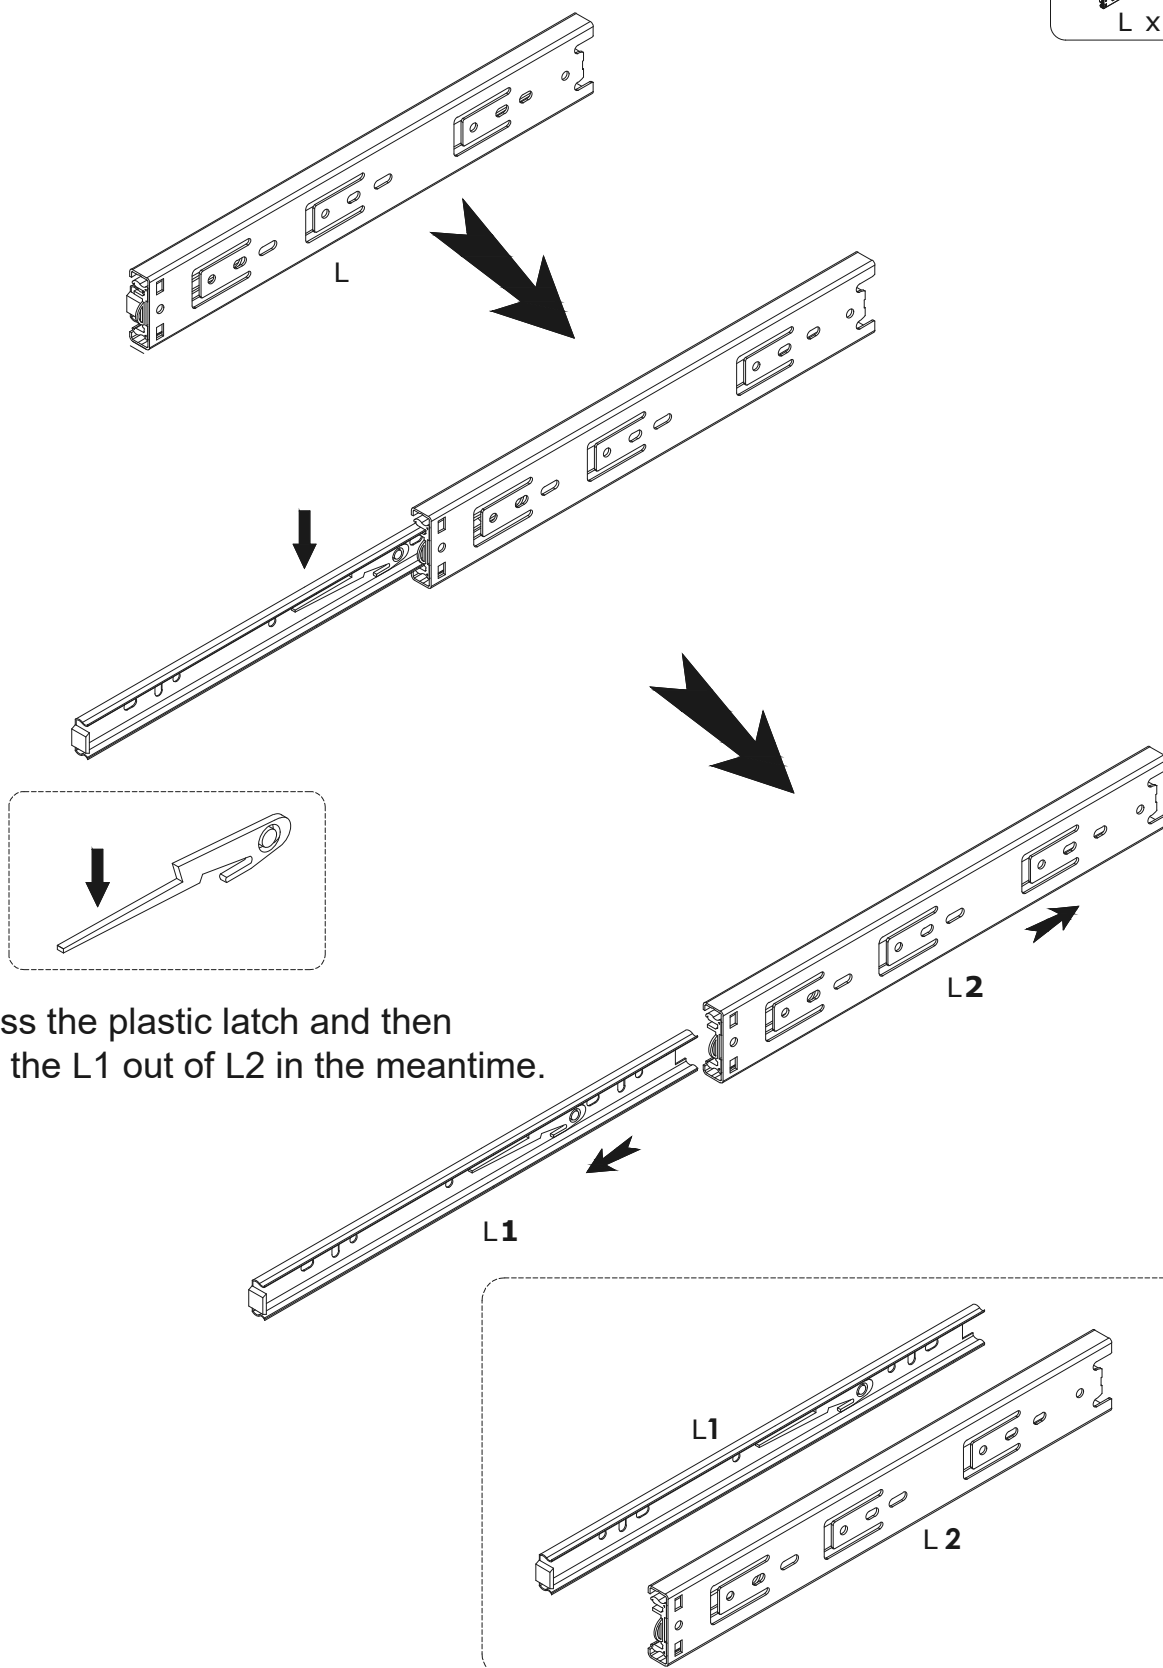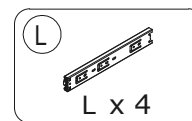

Press the plastic latch and then pull the L1 out of L2 in the meantime.










Assembly Instructions

Step 2

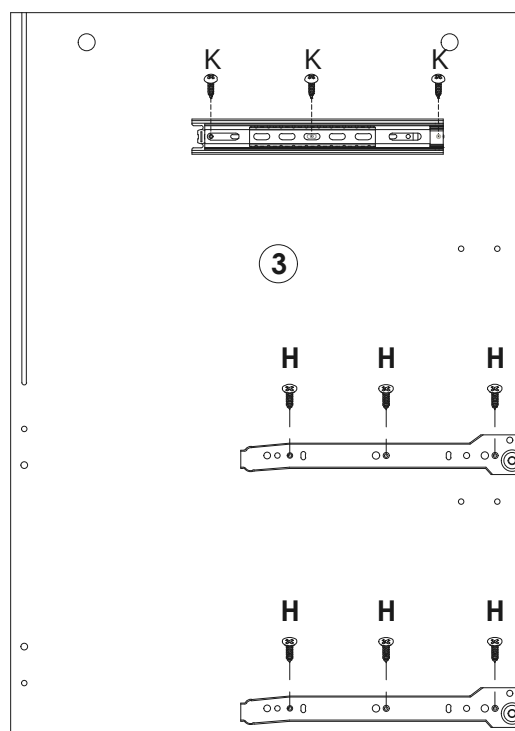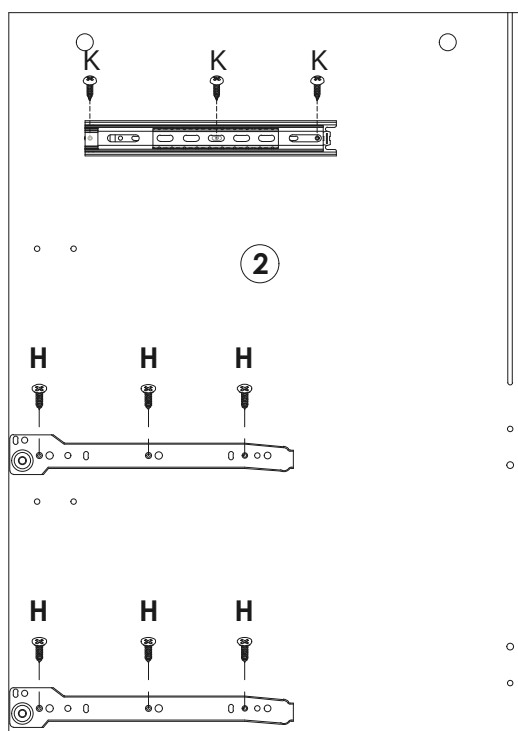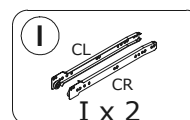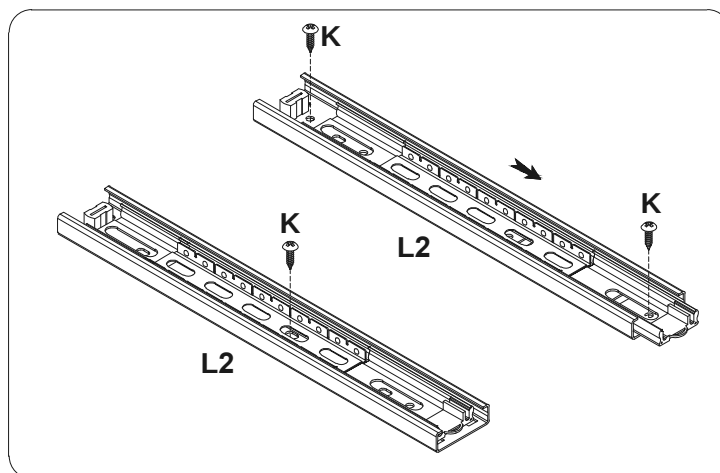

Assembly Instructions




Step 3

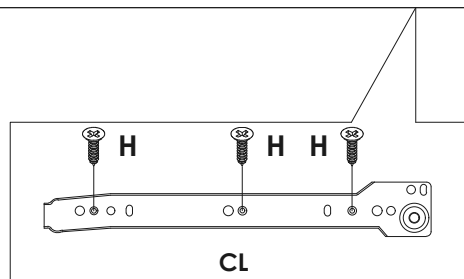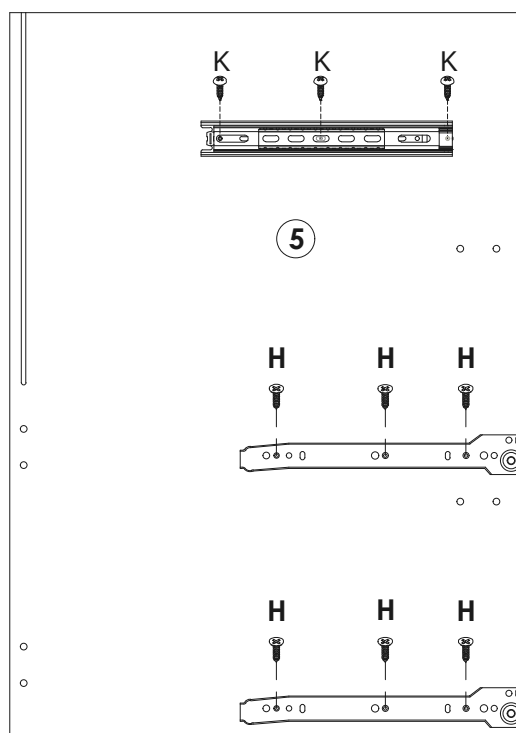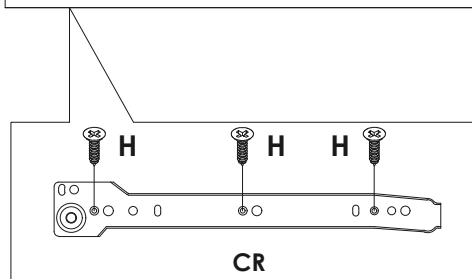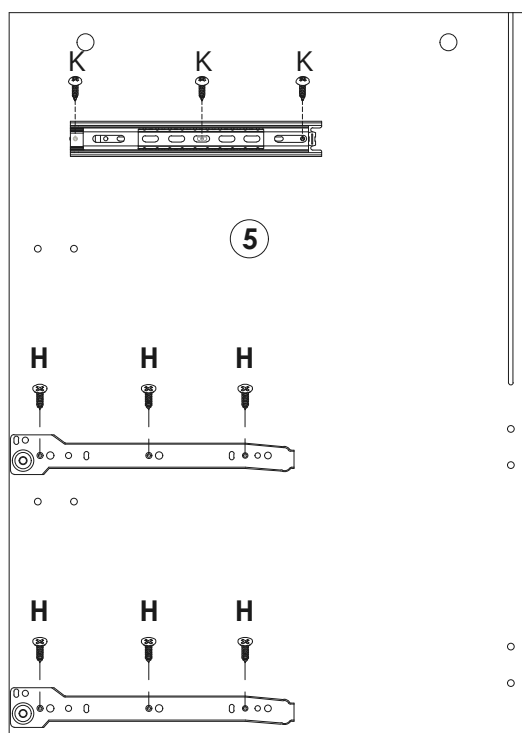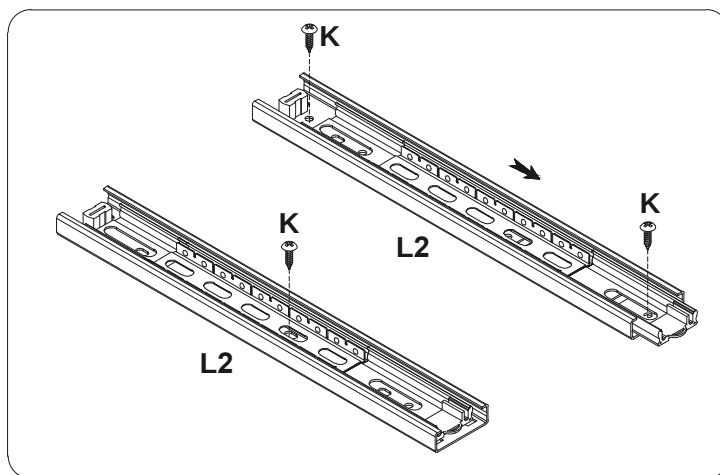

Turn over part ⑤ to install on the both sides,
Install the drawer slides on both sides of the center panel.





Assembly Instructions

Step 4

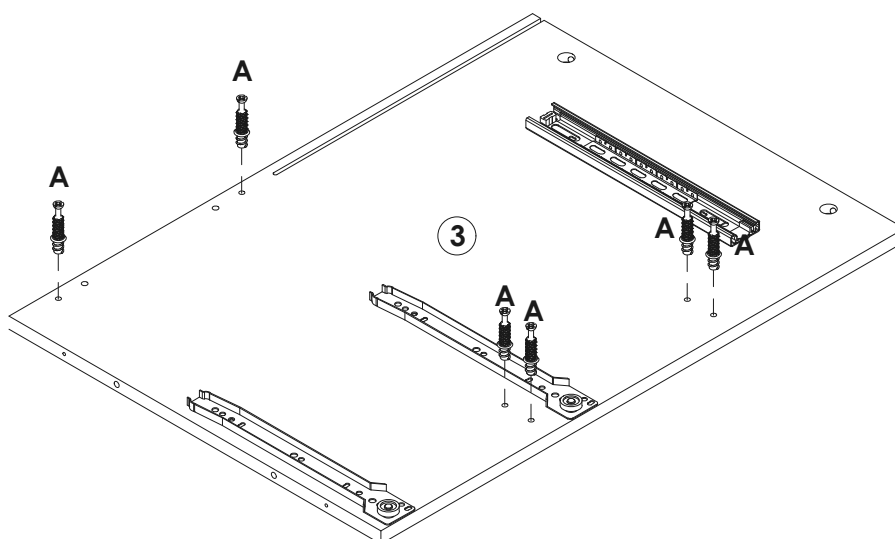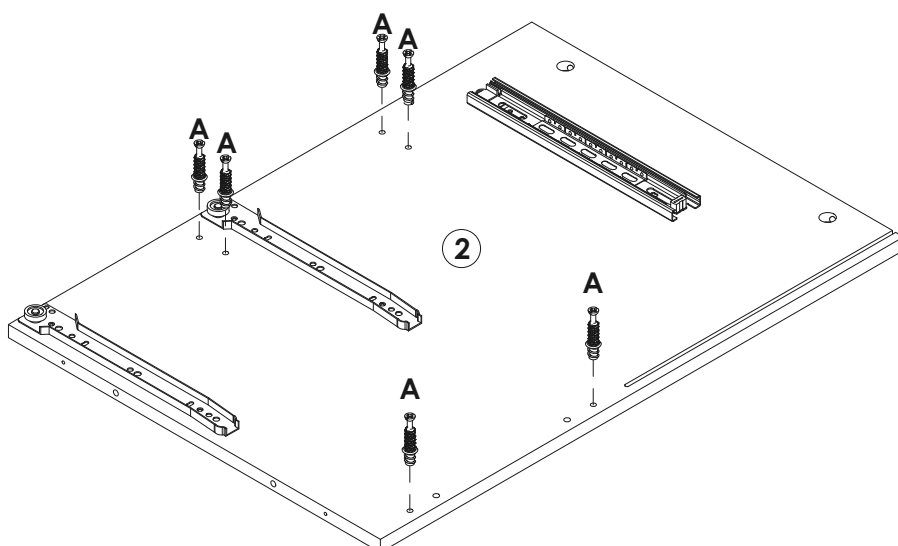


Assembly Instructions

Step 5

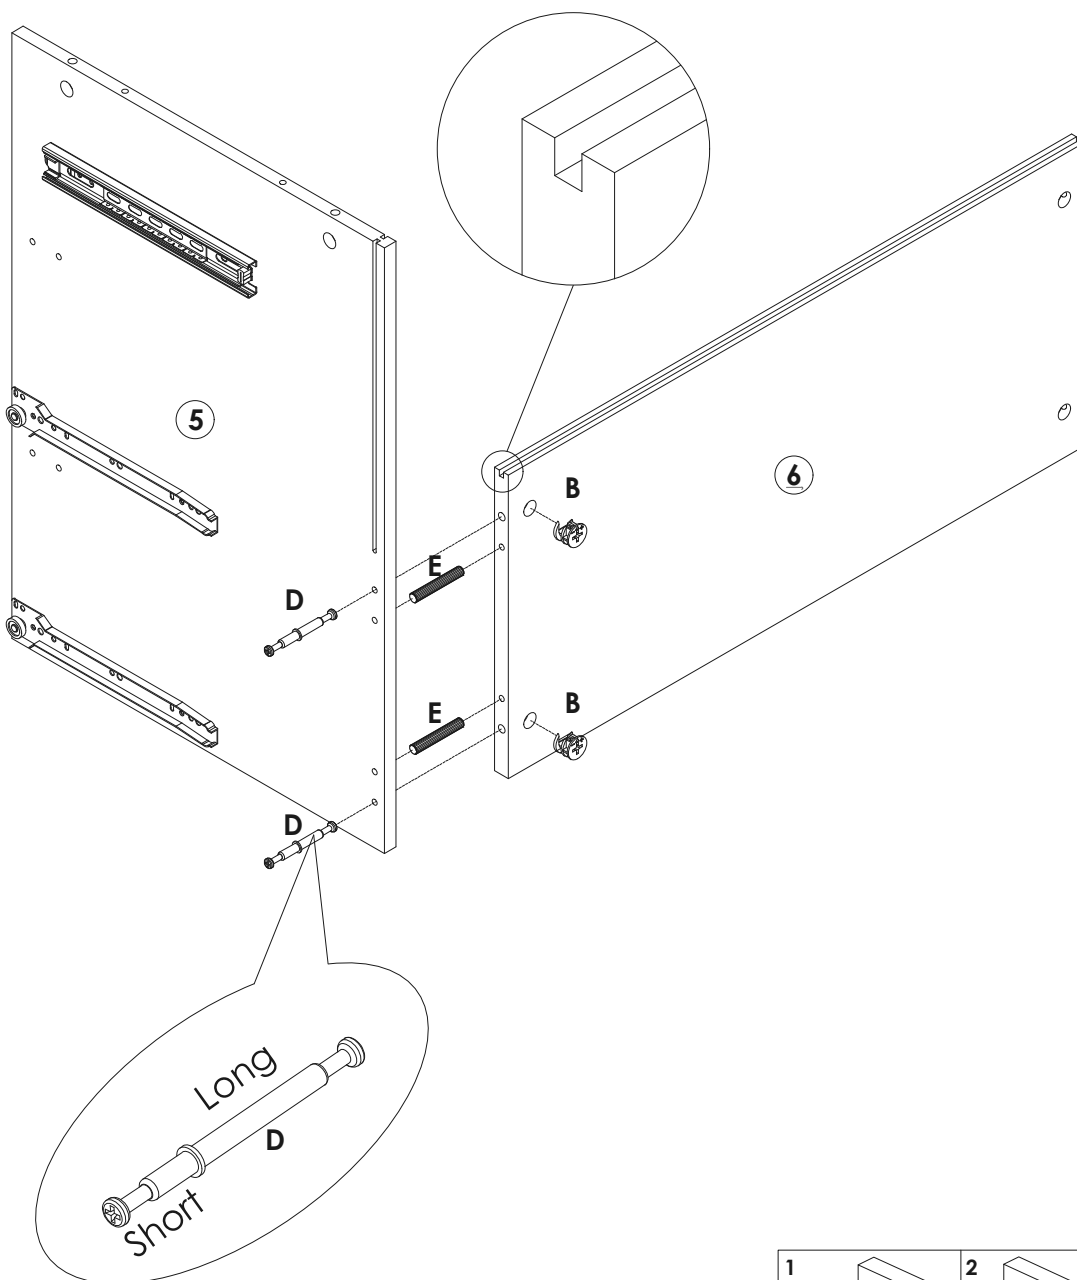




Screw the long end of "D" into the panel.

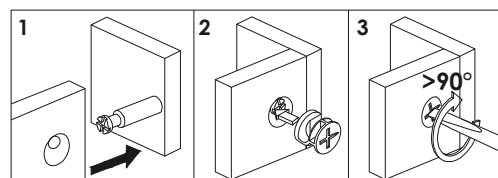





Assembly Instructions

Step 6

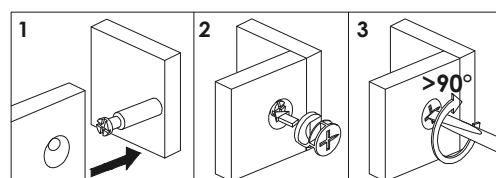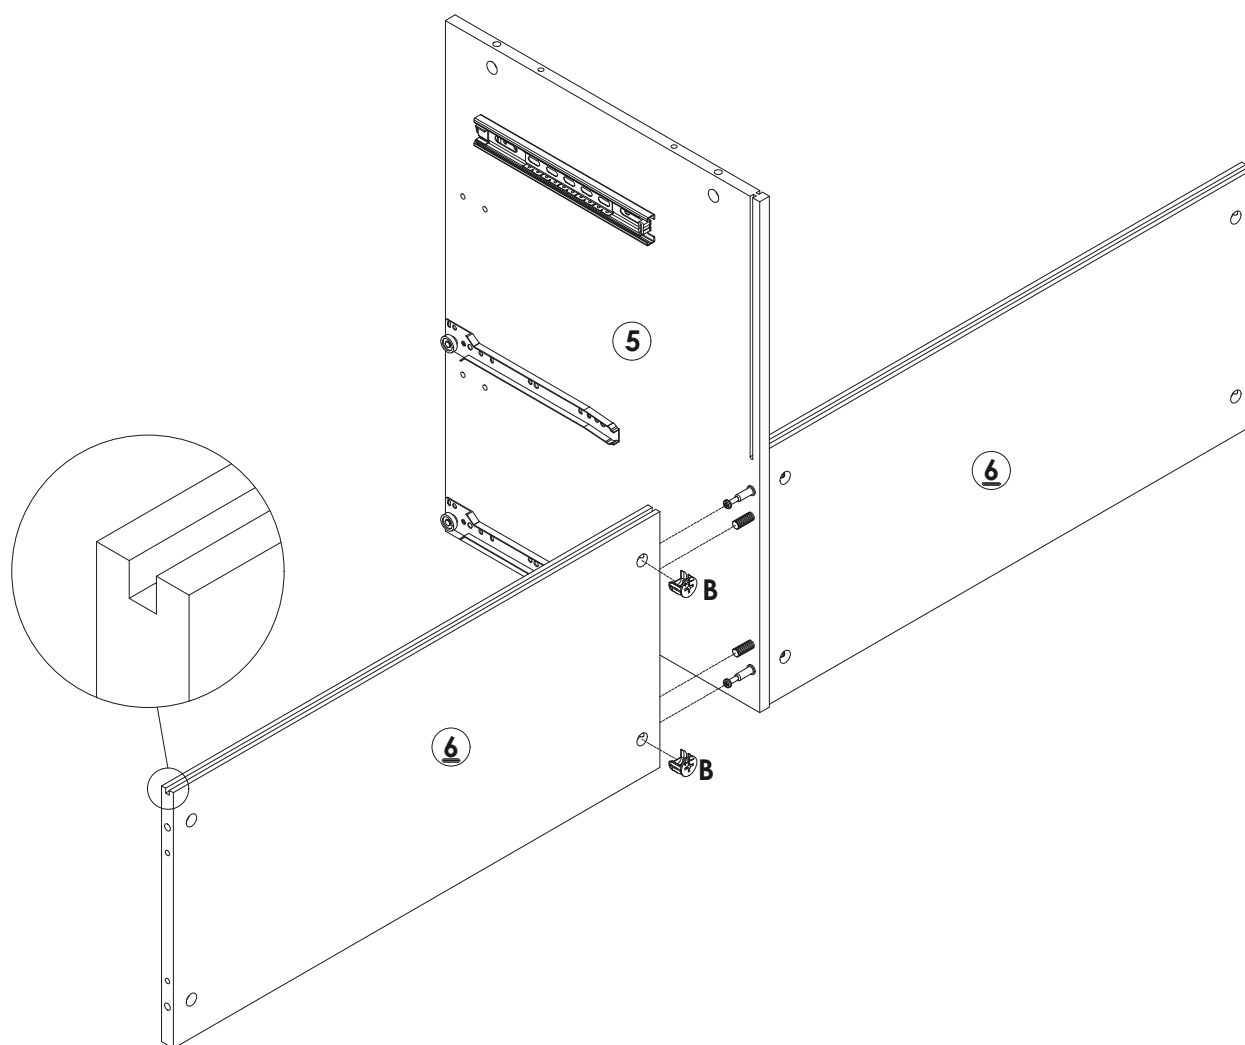
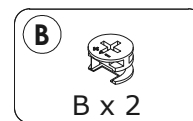


Assembly Instructions


Step 7

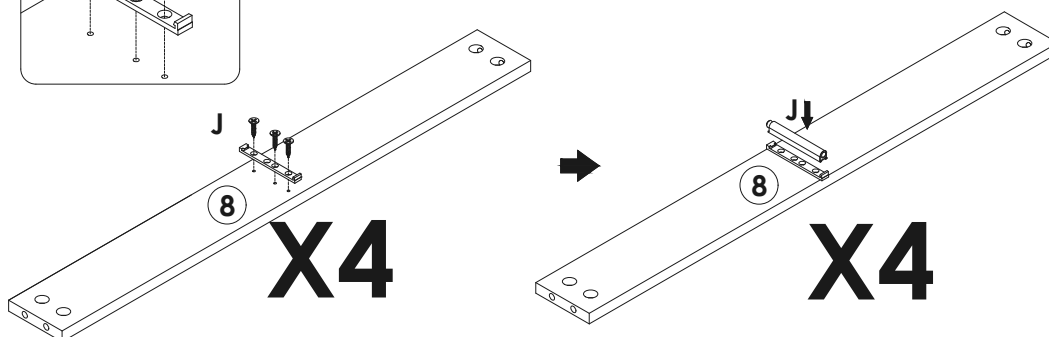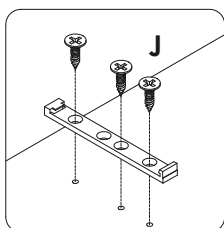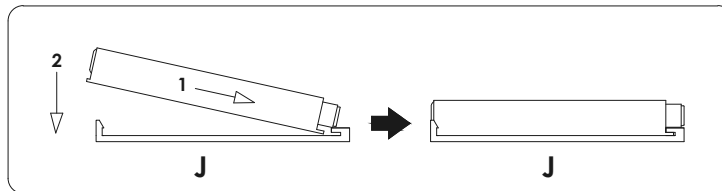

Step 8


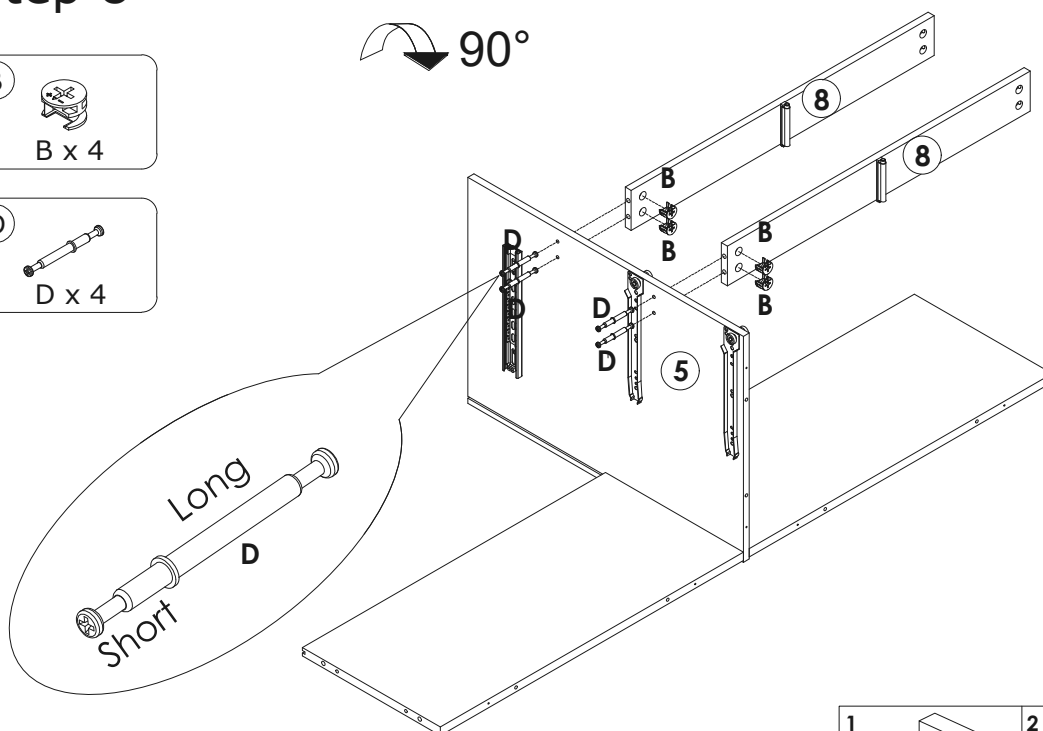
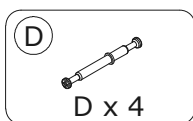


Screw the long end of "D" into the panel.

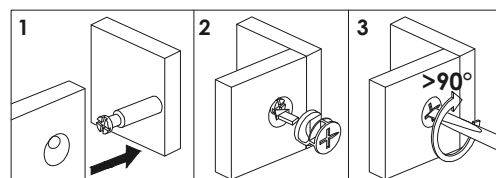




Assembly Instructions

Step 9

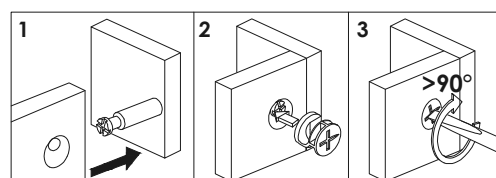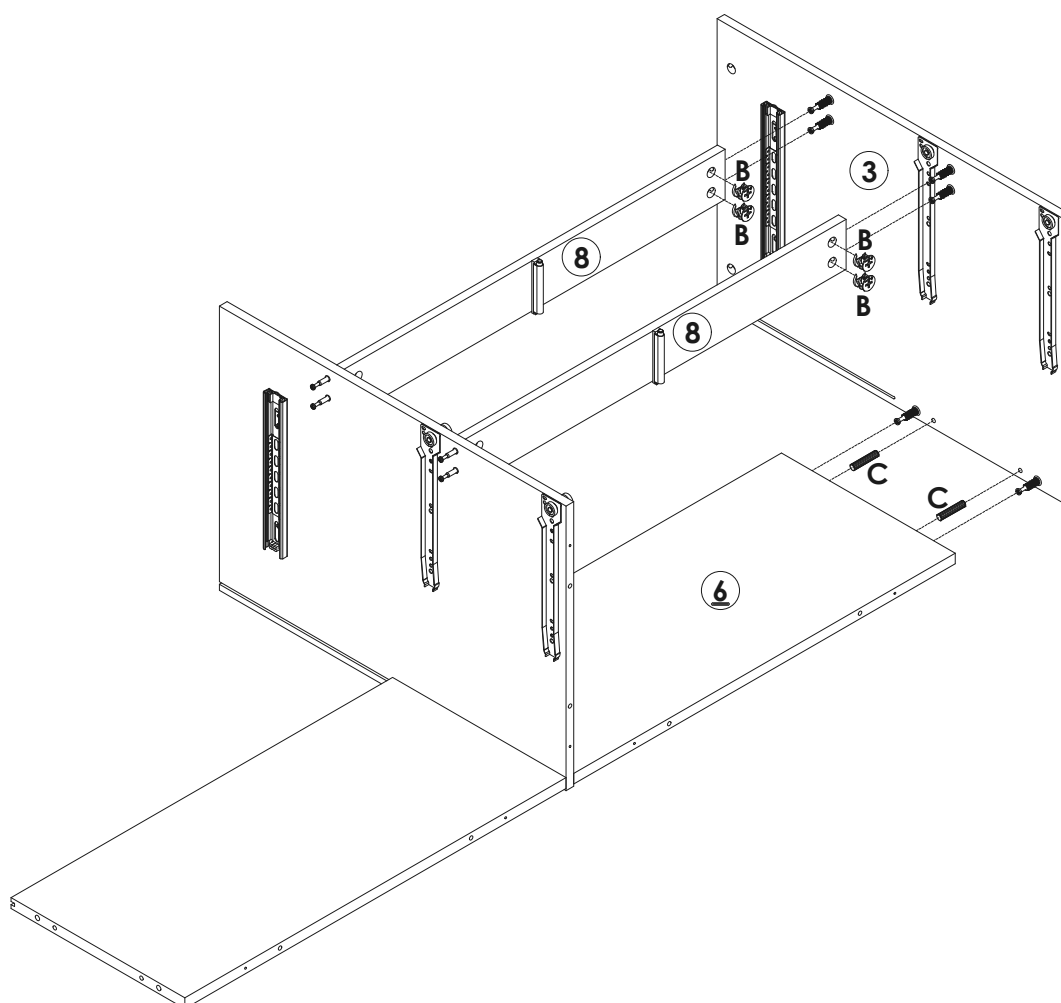





Assembly Instructions

Step 10

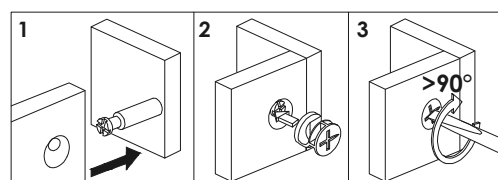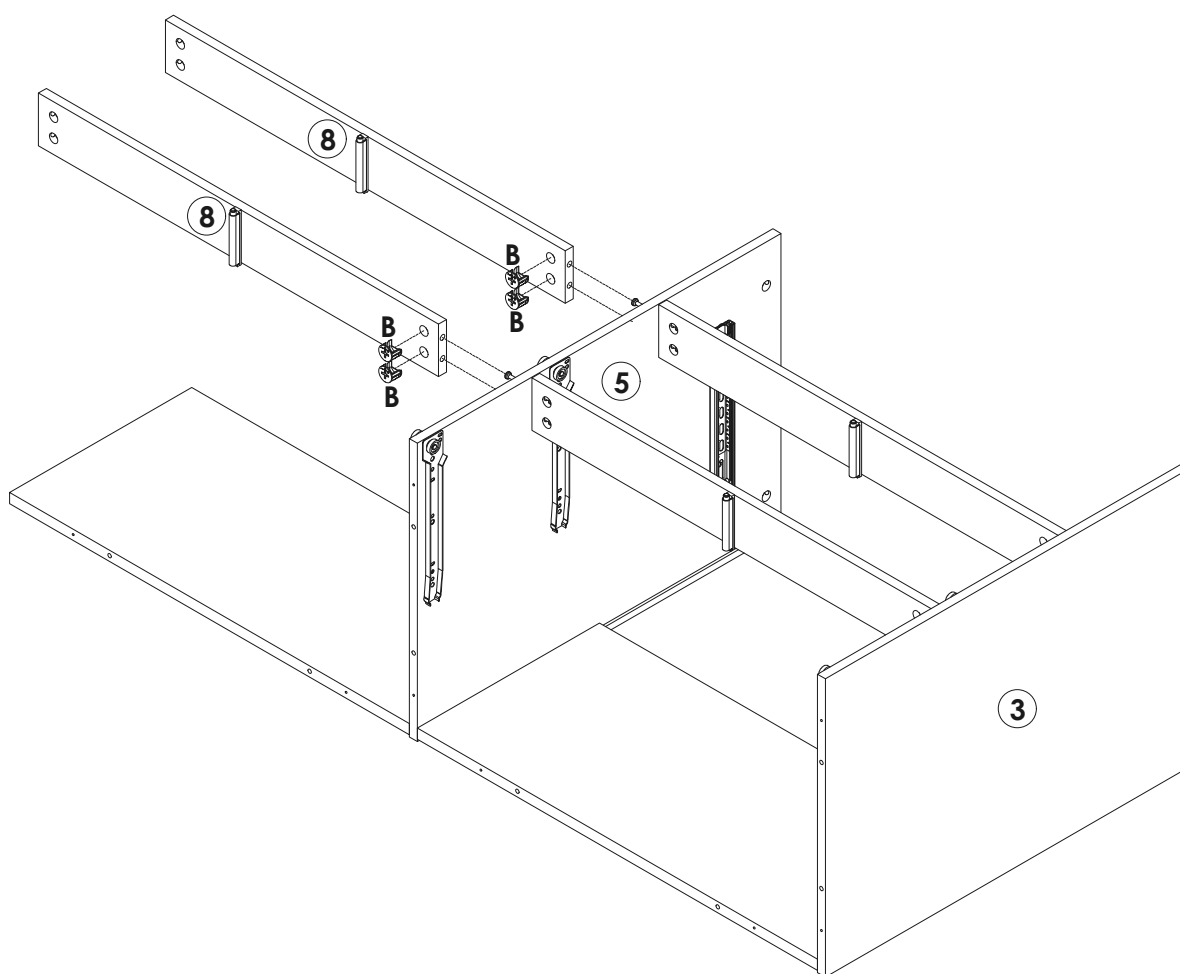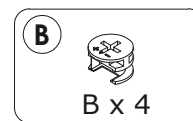


Assembly Instructions

Step 11

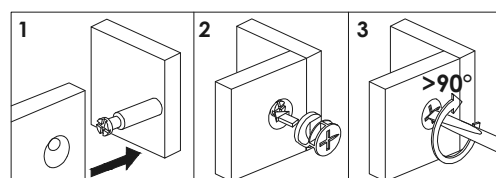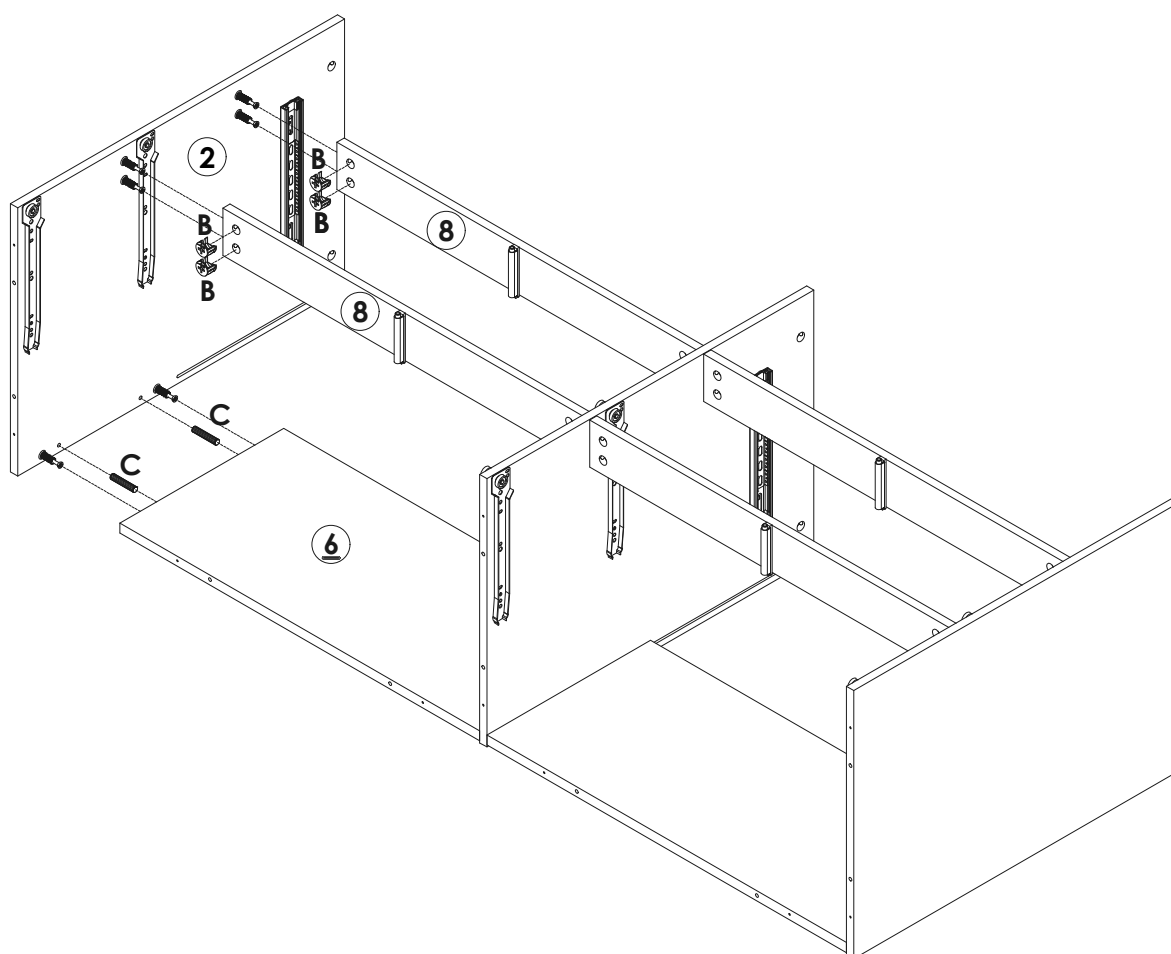



Assembly Instructions

Step 12





"Requires 2 people to assemble,
Please flip carefully."

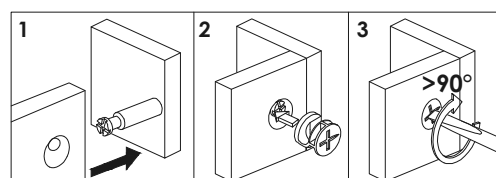
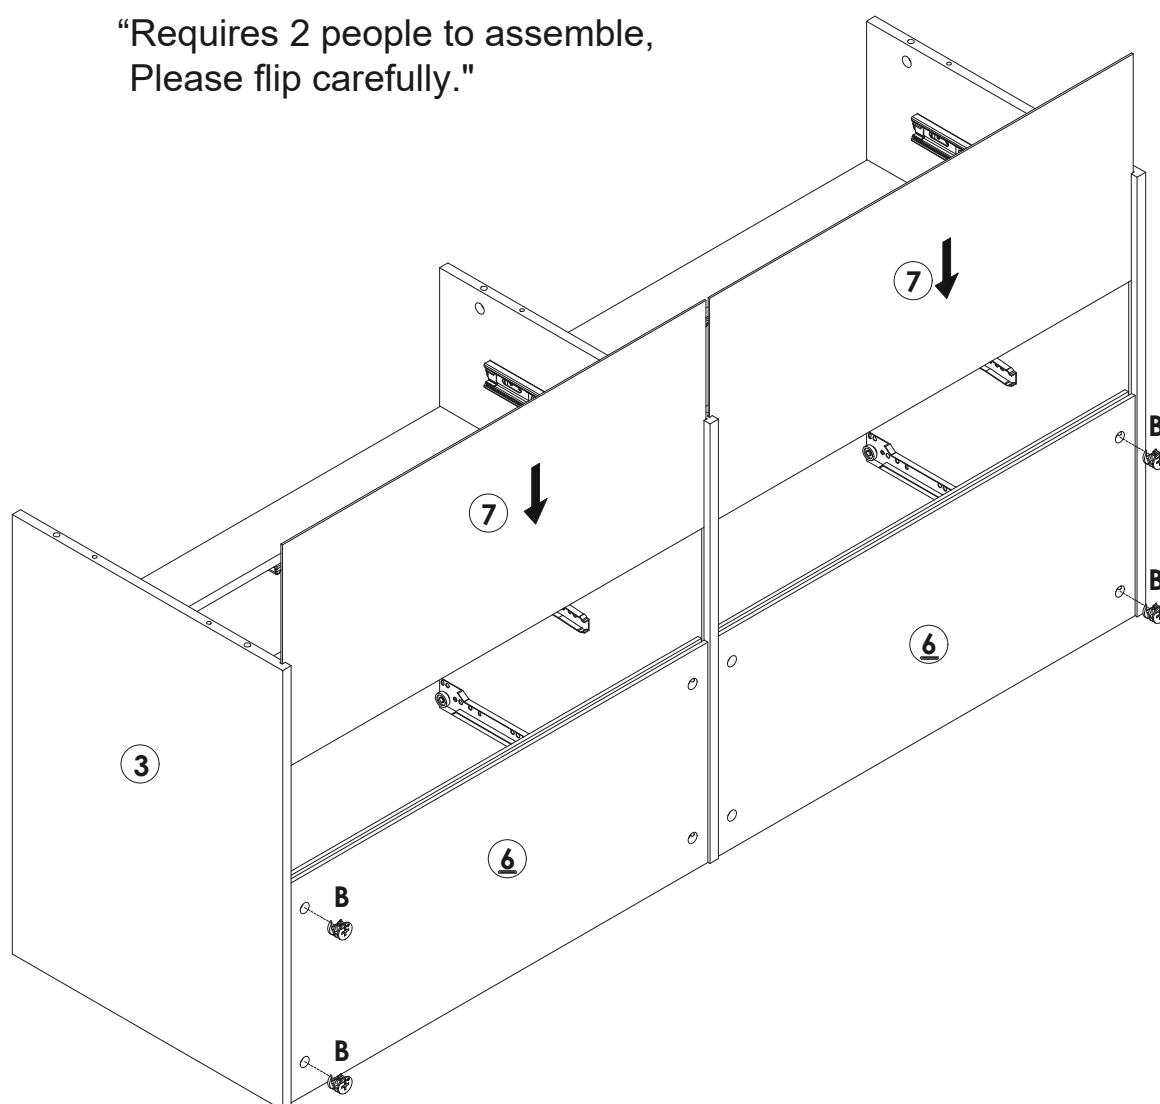


Assembly Instructions

Step 13



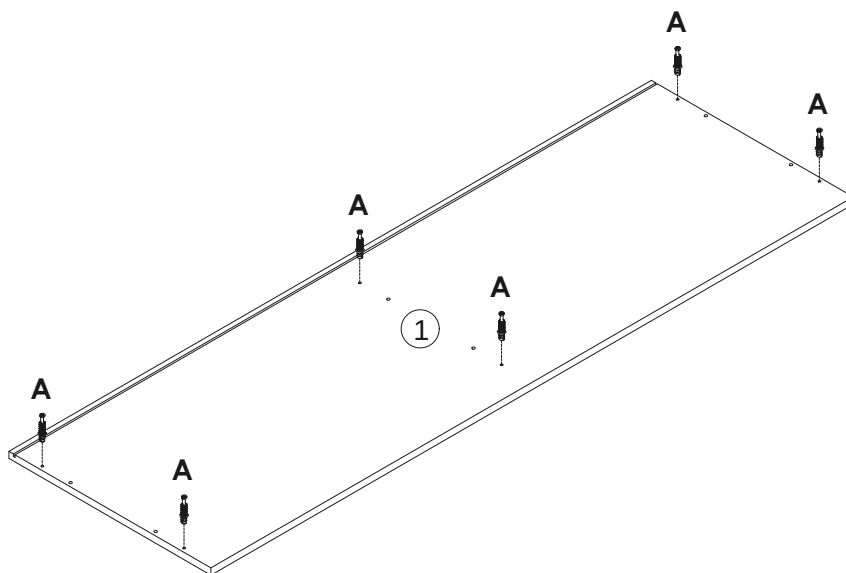



Step 14

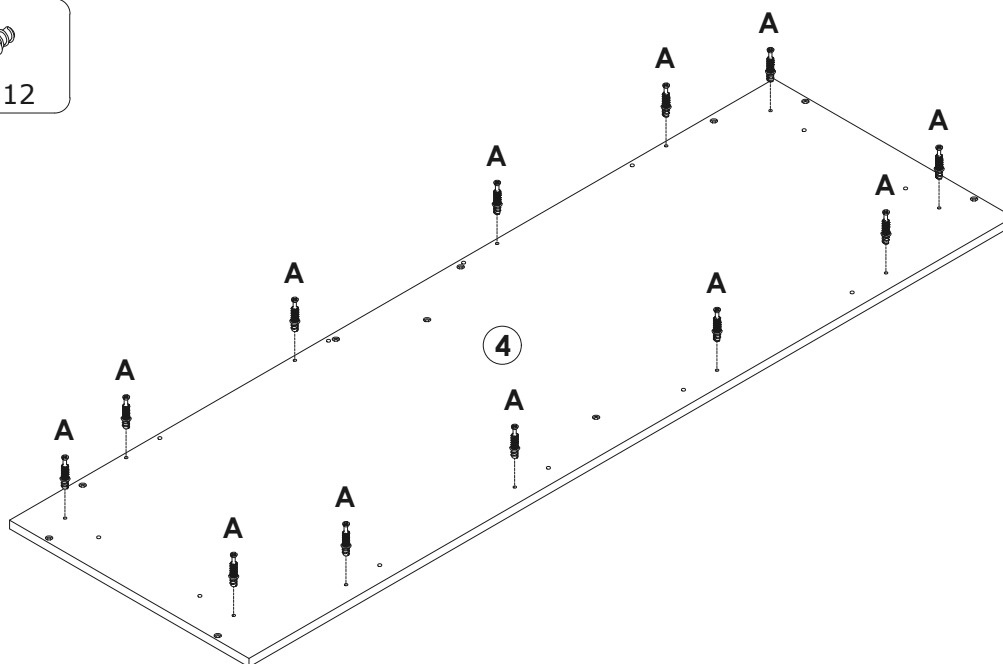

Assembly Instructions




Step 15

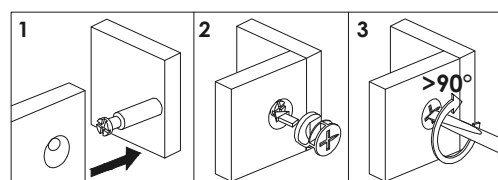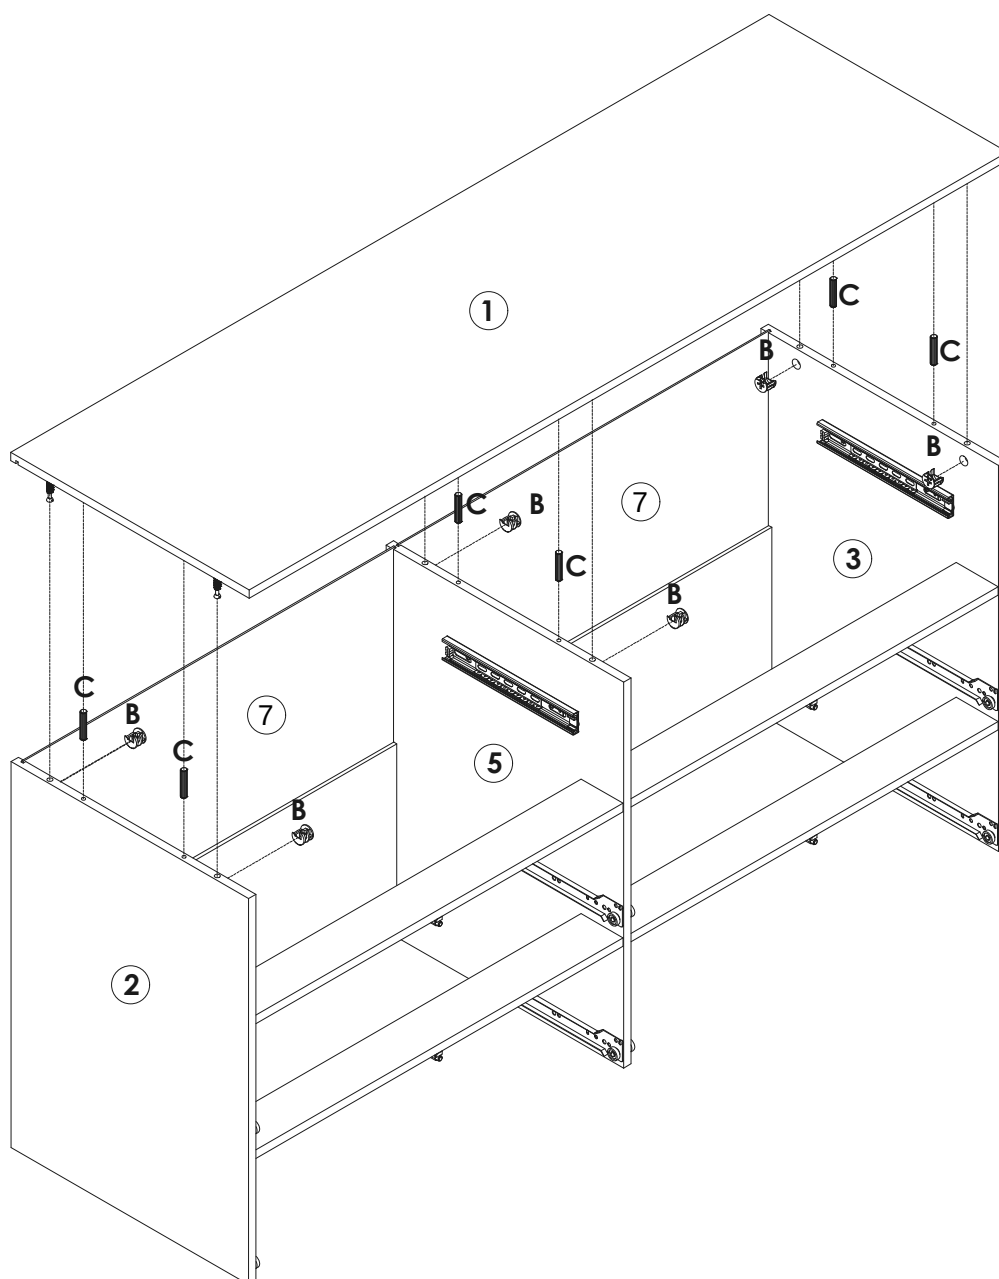

Assembly Instructions


Step 16

 180°
"Requires 2 people to assemble,
Please flip carefully."



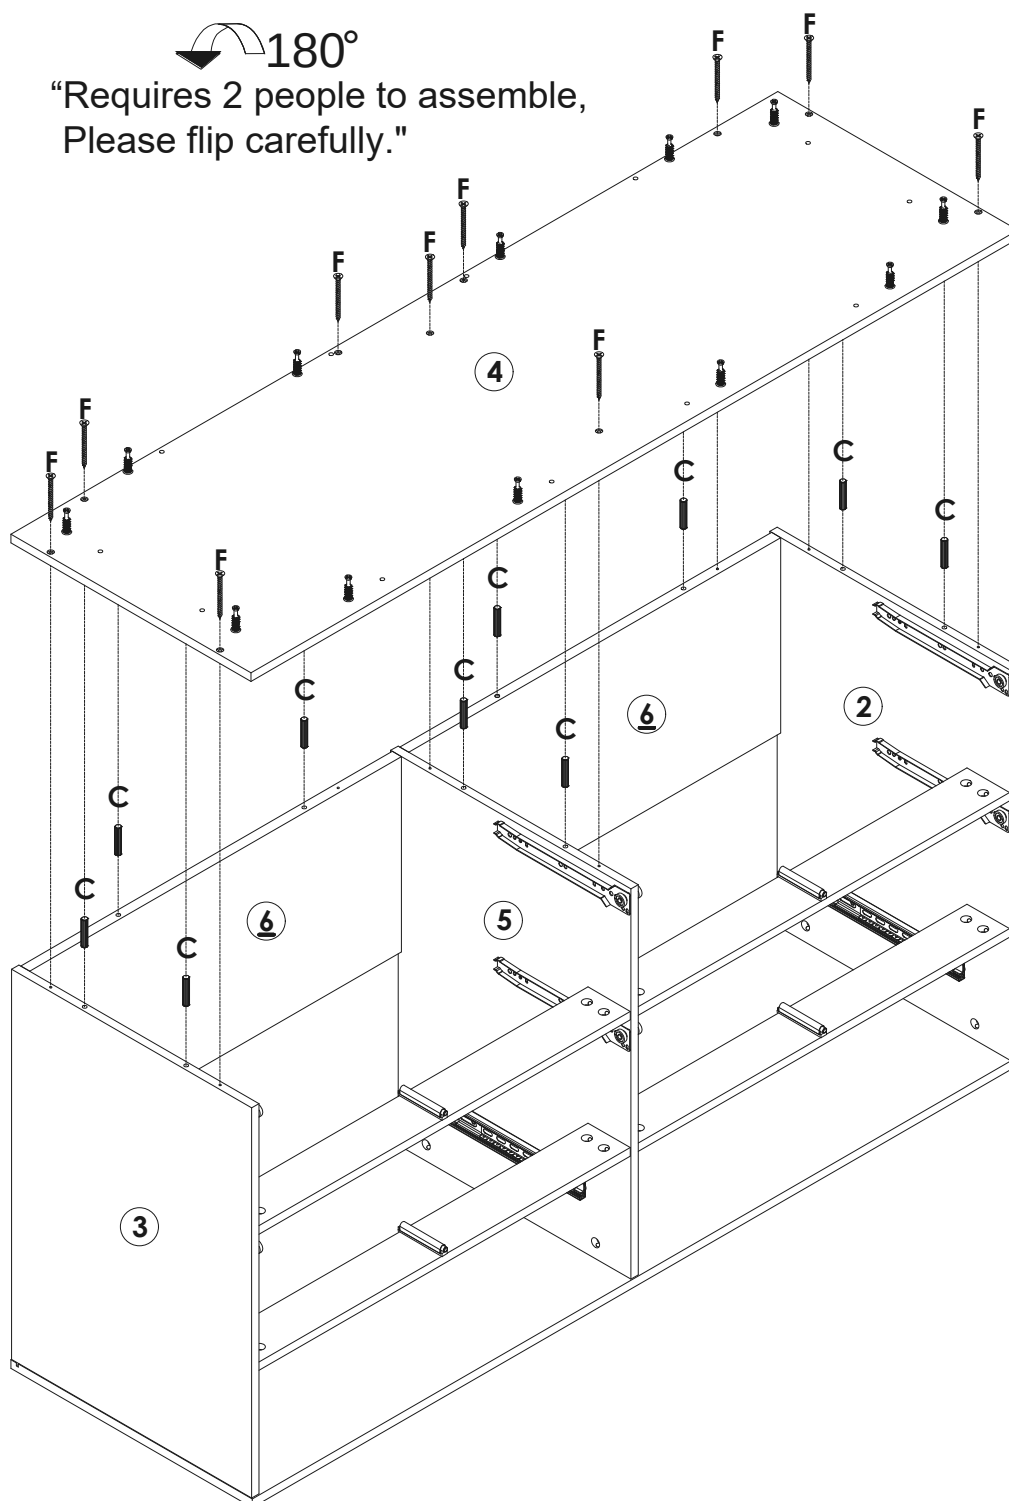


Assembly Instructions

Step 17




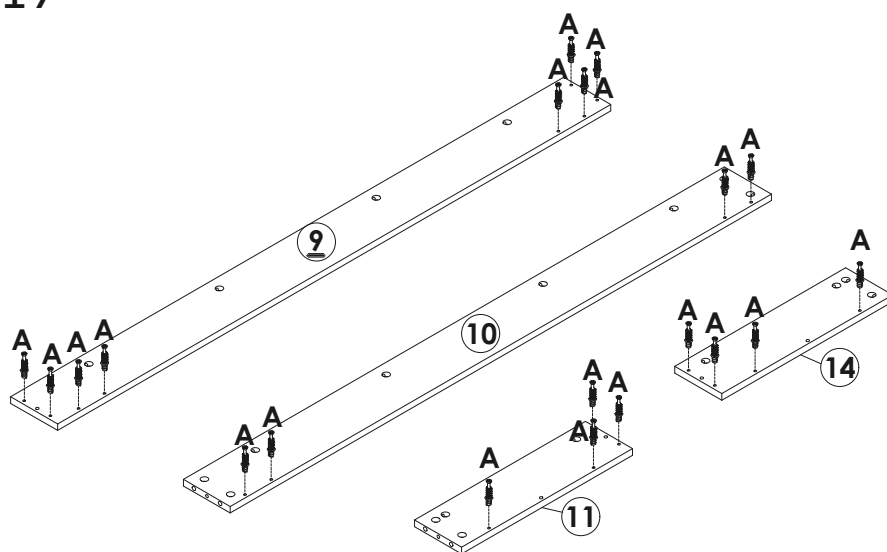


Step 18

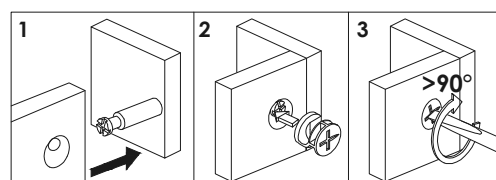
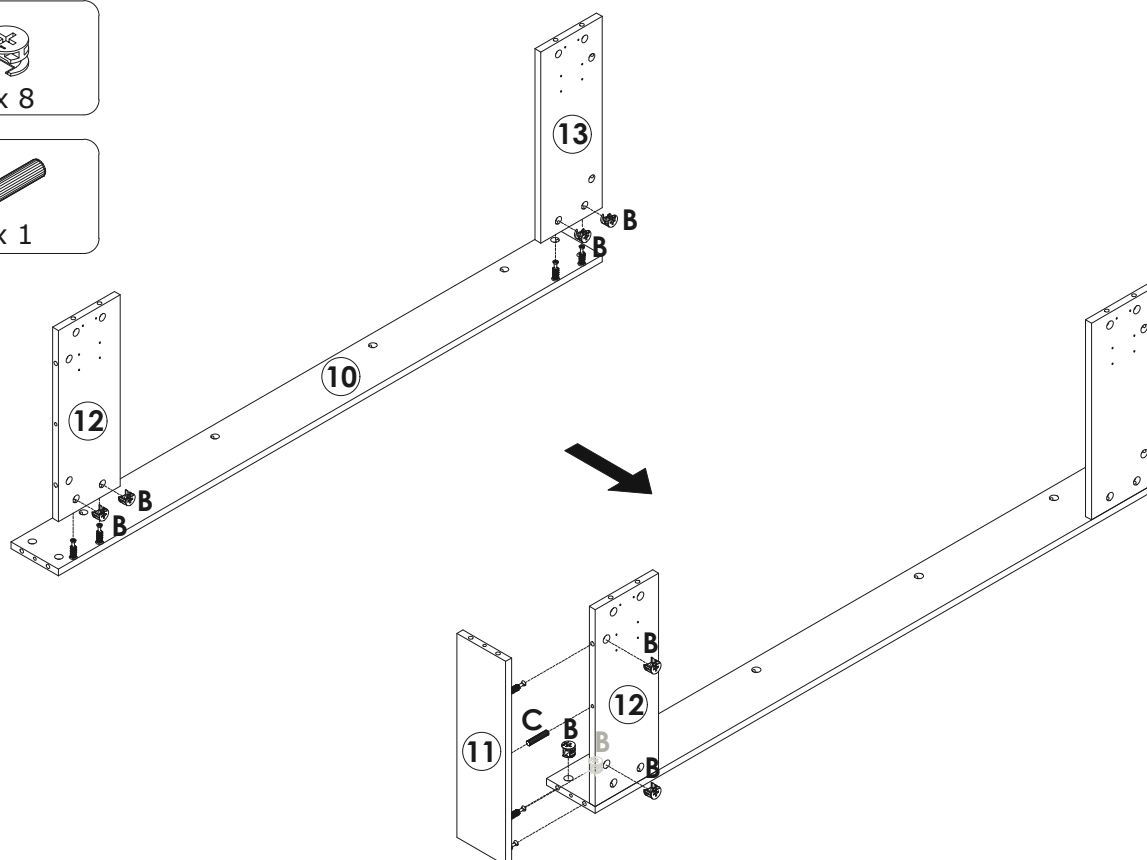



Assembly Instructions

Step 19

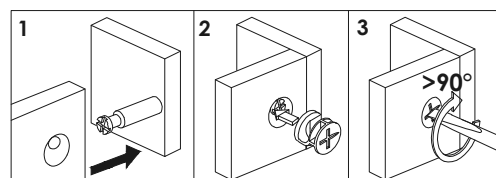


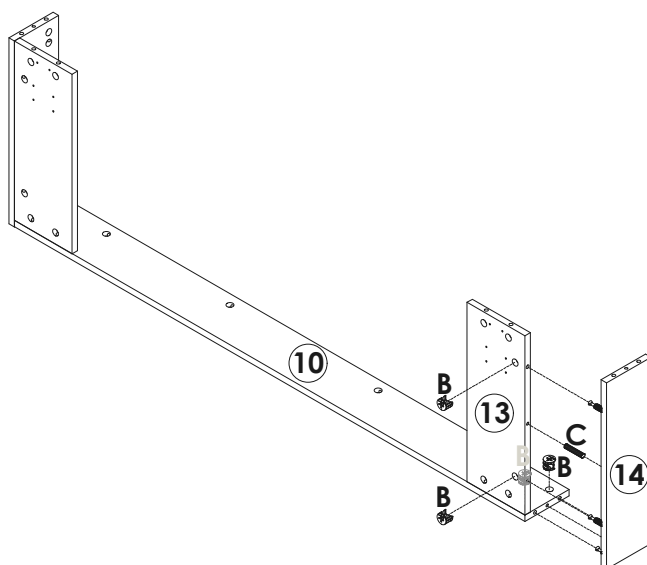


Step 20

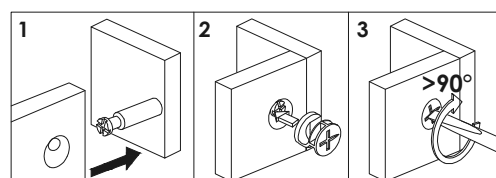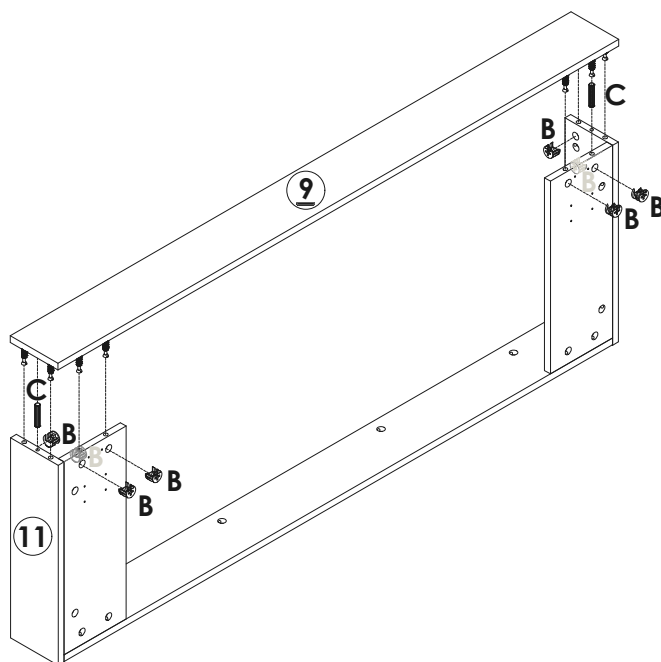





Assembly Instructions

Step 21

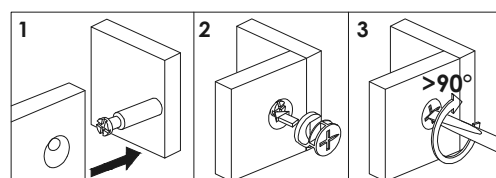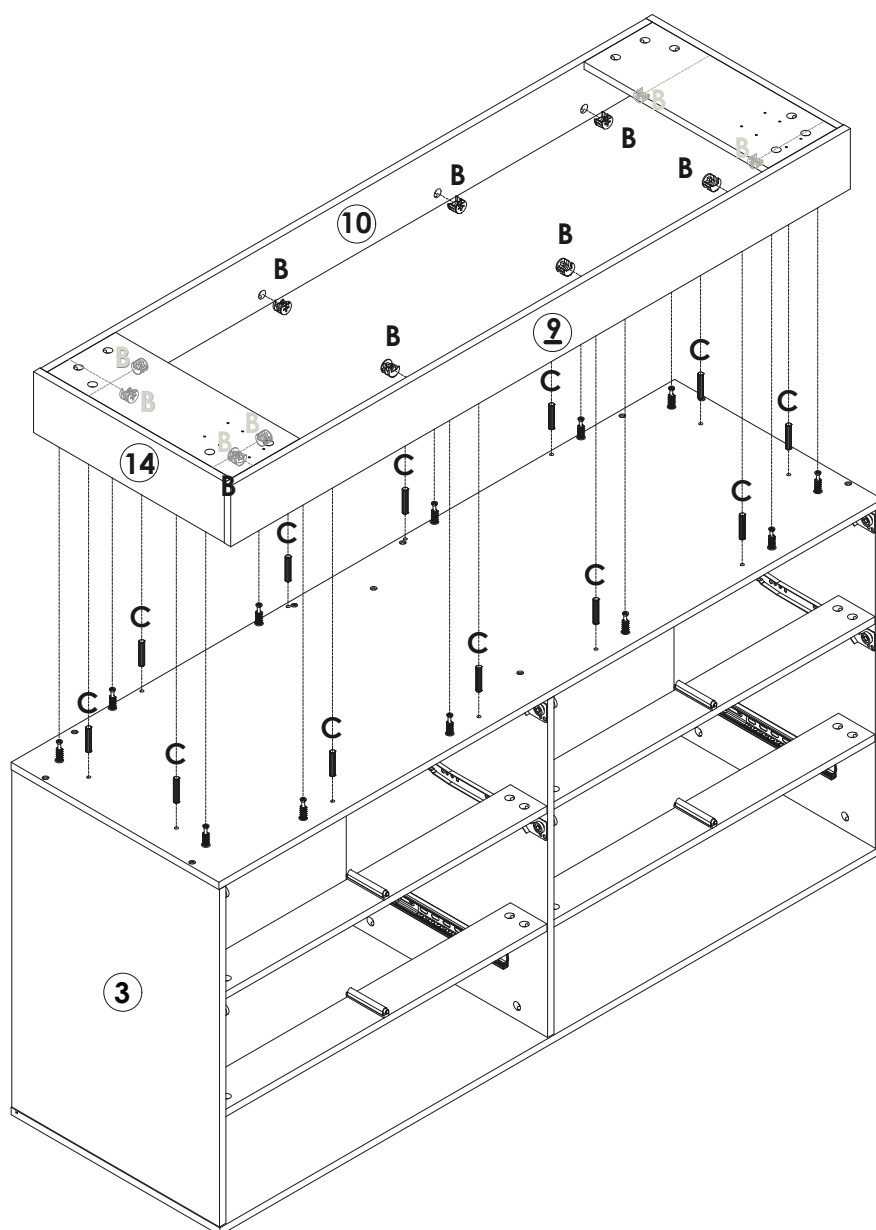



Assembly Instructions

Step 22

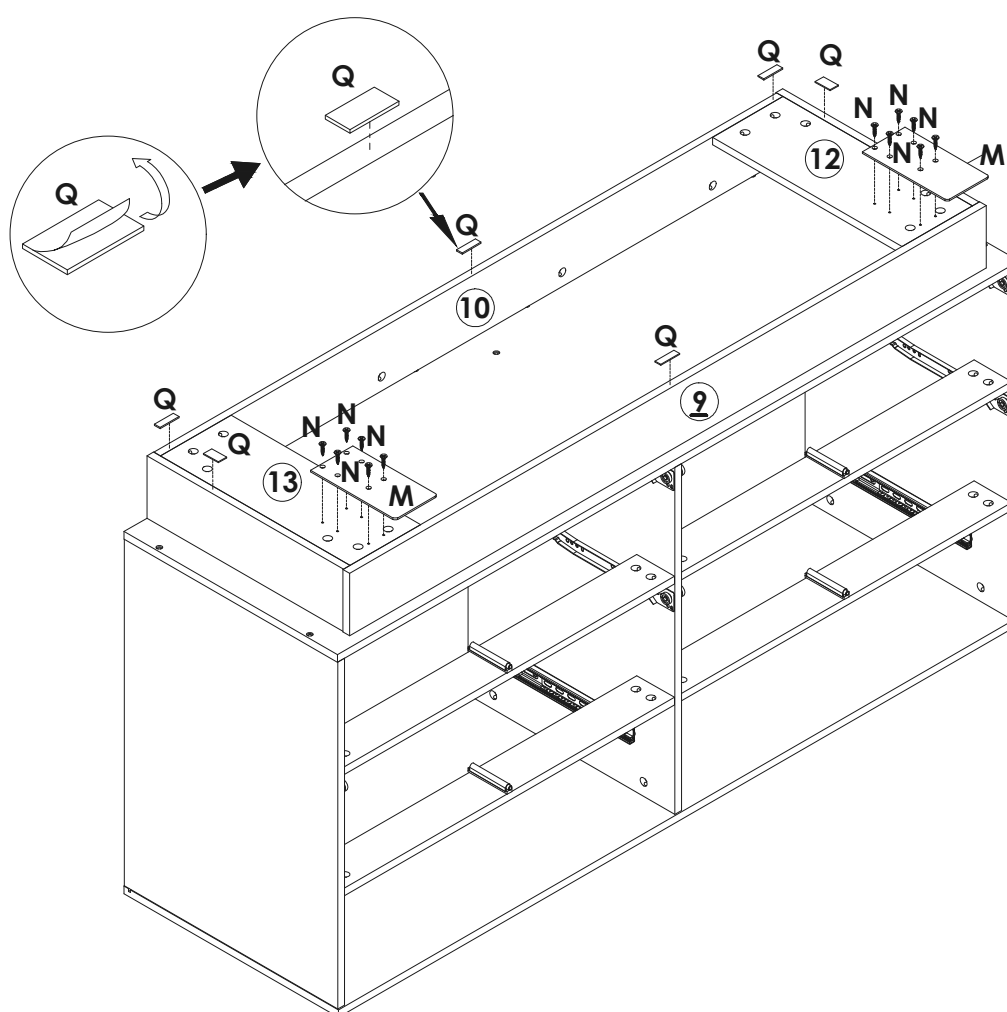


Assembly Instructions

Step 23

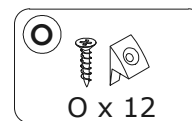






"Requires 2 people to assemble,
Please flip carefully."

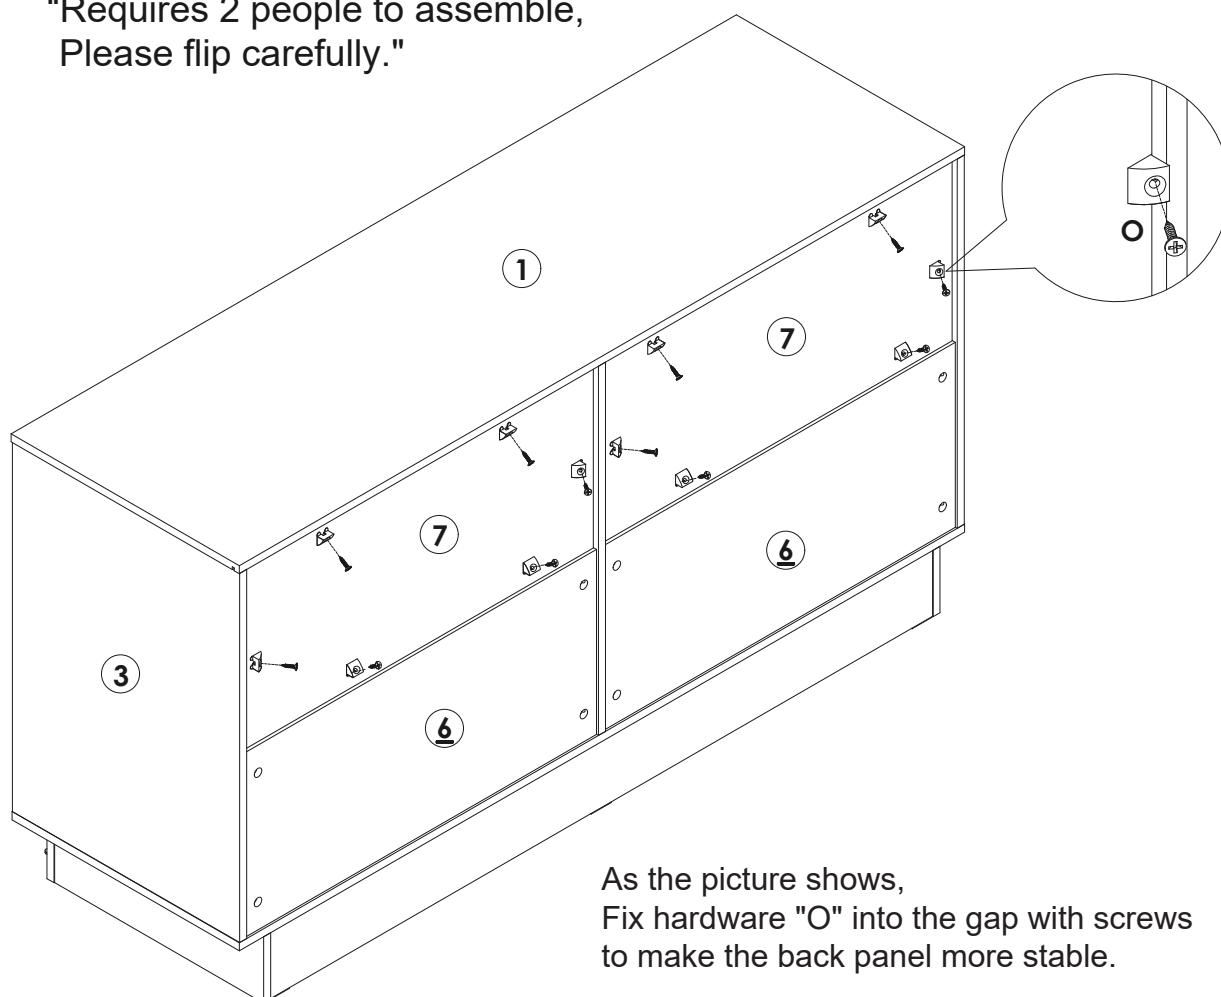



As the picture shows,
Fix hardware "O" into the gap with screws
to make the back panel more stable.

Assembly Instructions

Step 24

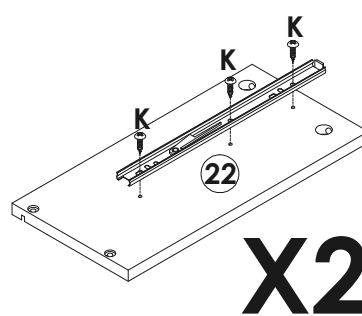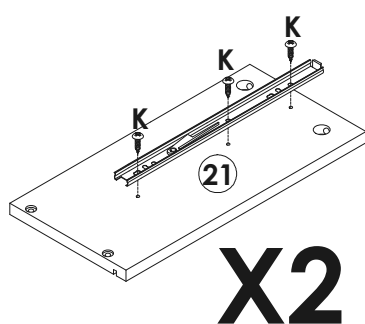
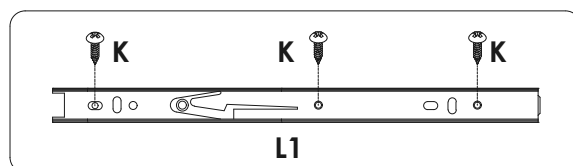


Step 25







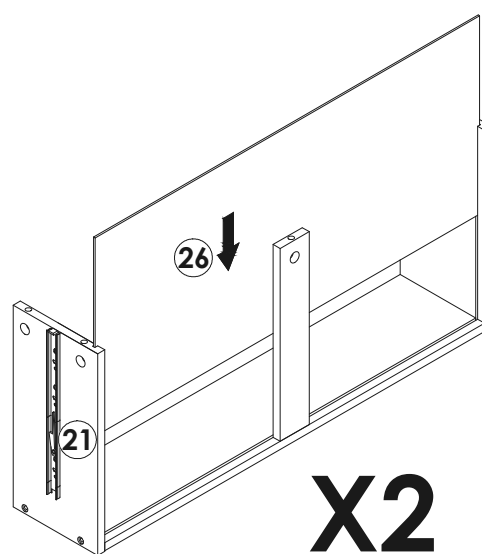
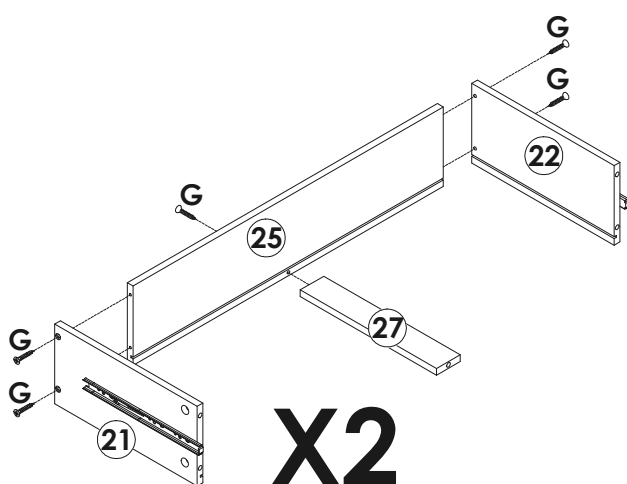


Assembly Instructions

Step 26



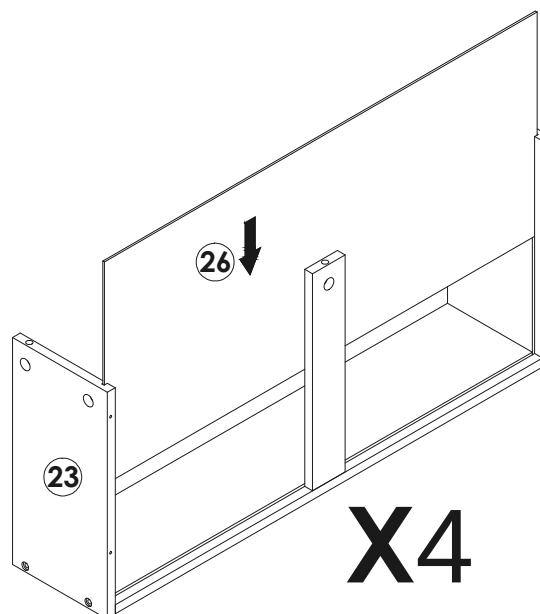
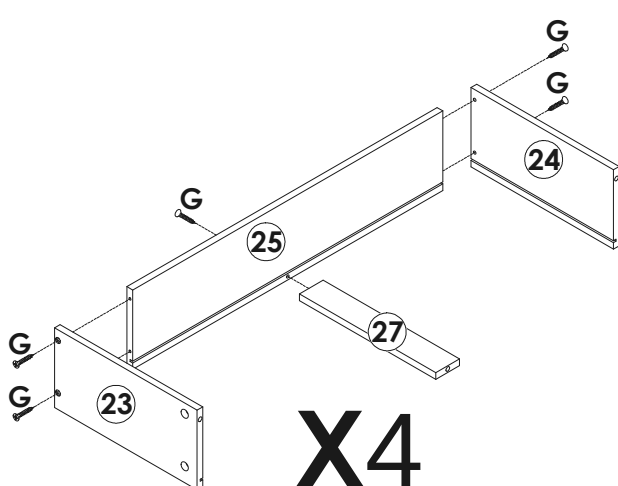


Step 27

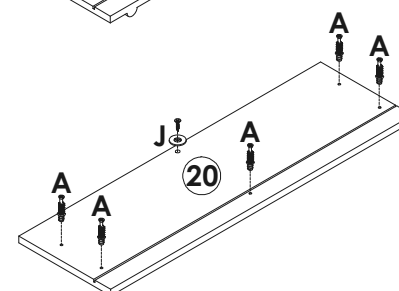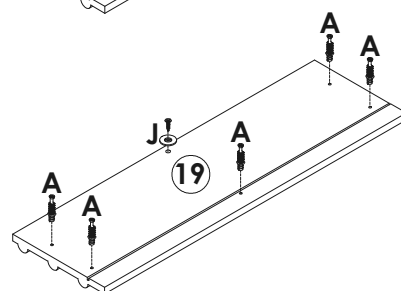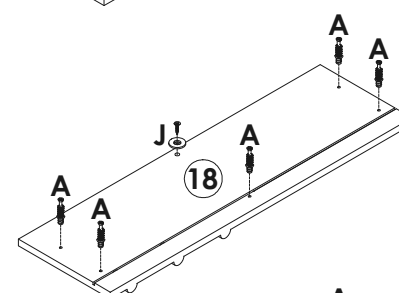
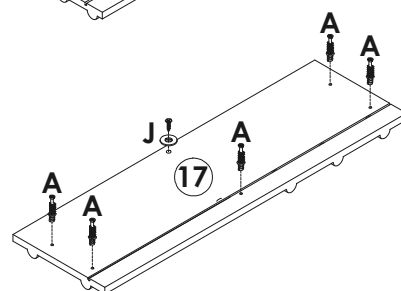
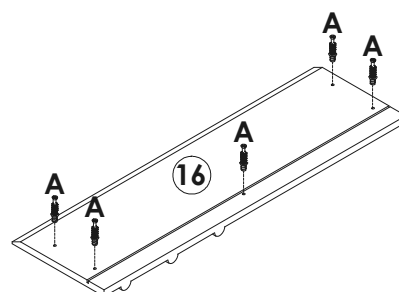
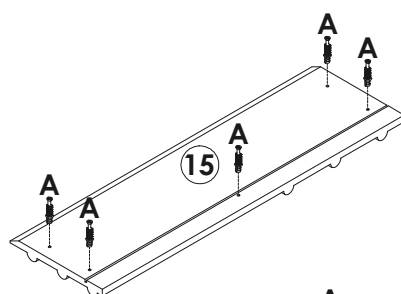

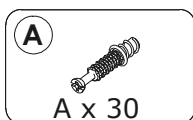


Assembly Instructions

Step 28





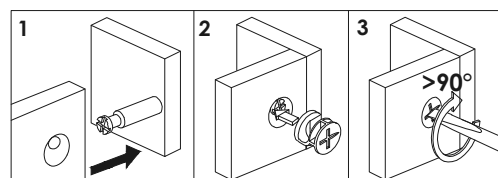
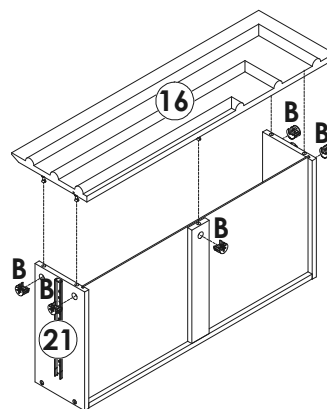
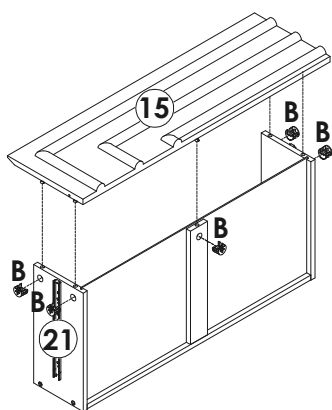
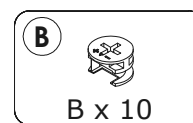


Step 29

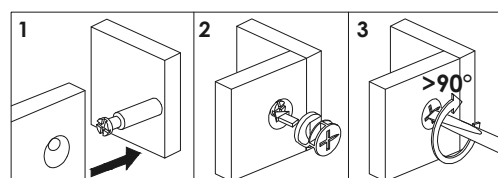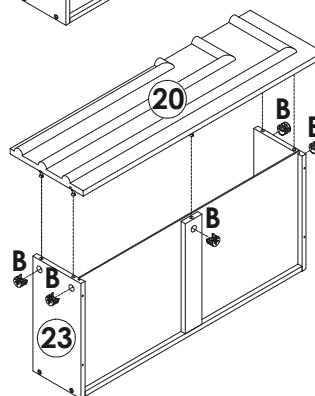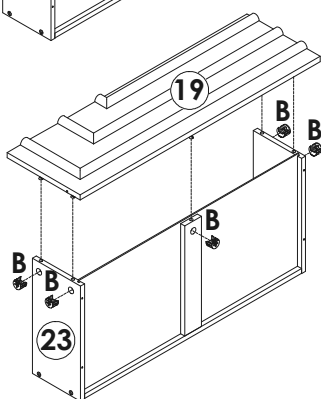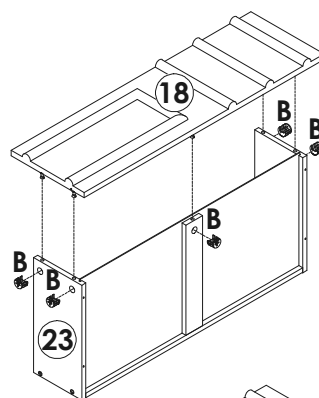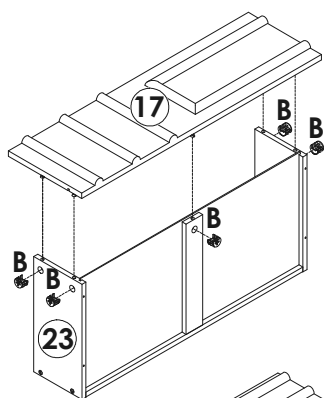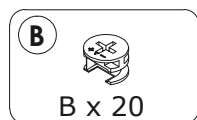


Assembly Instructions

Step 30

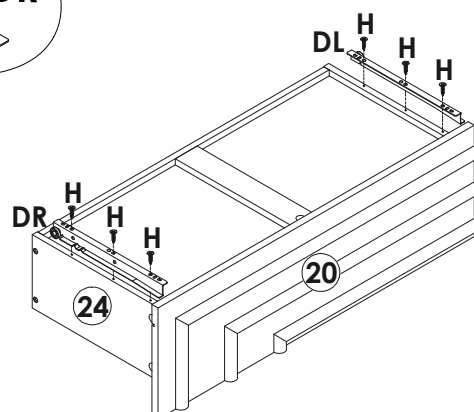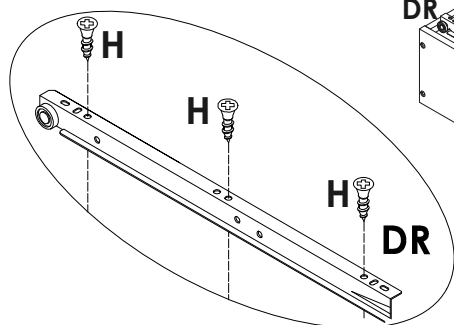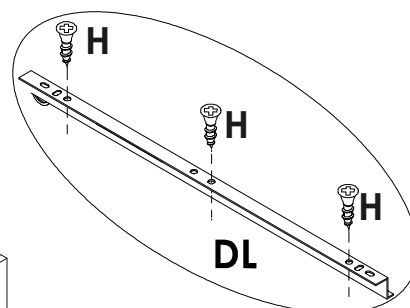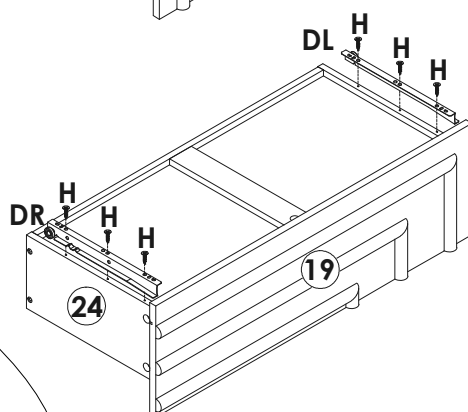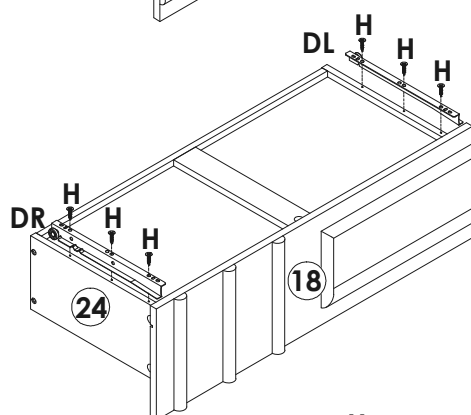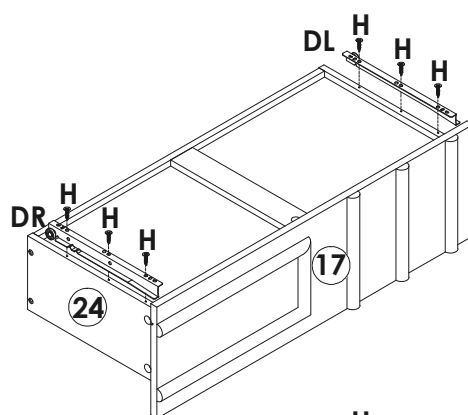


Assembly Instructions

Step 31

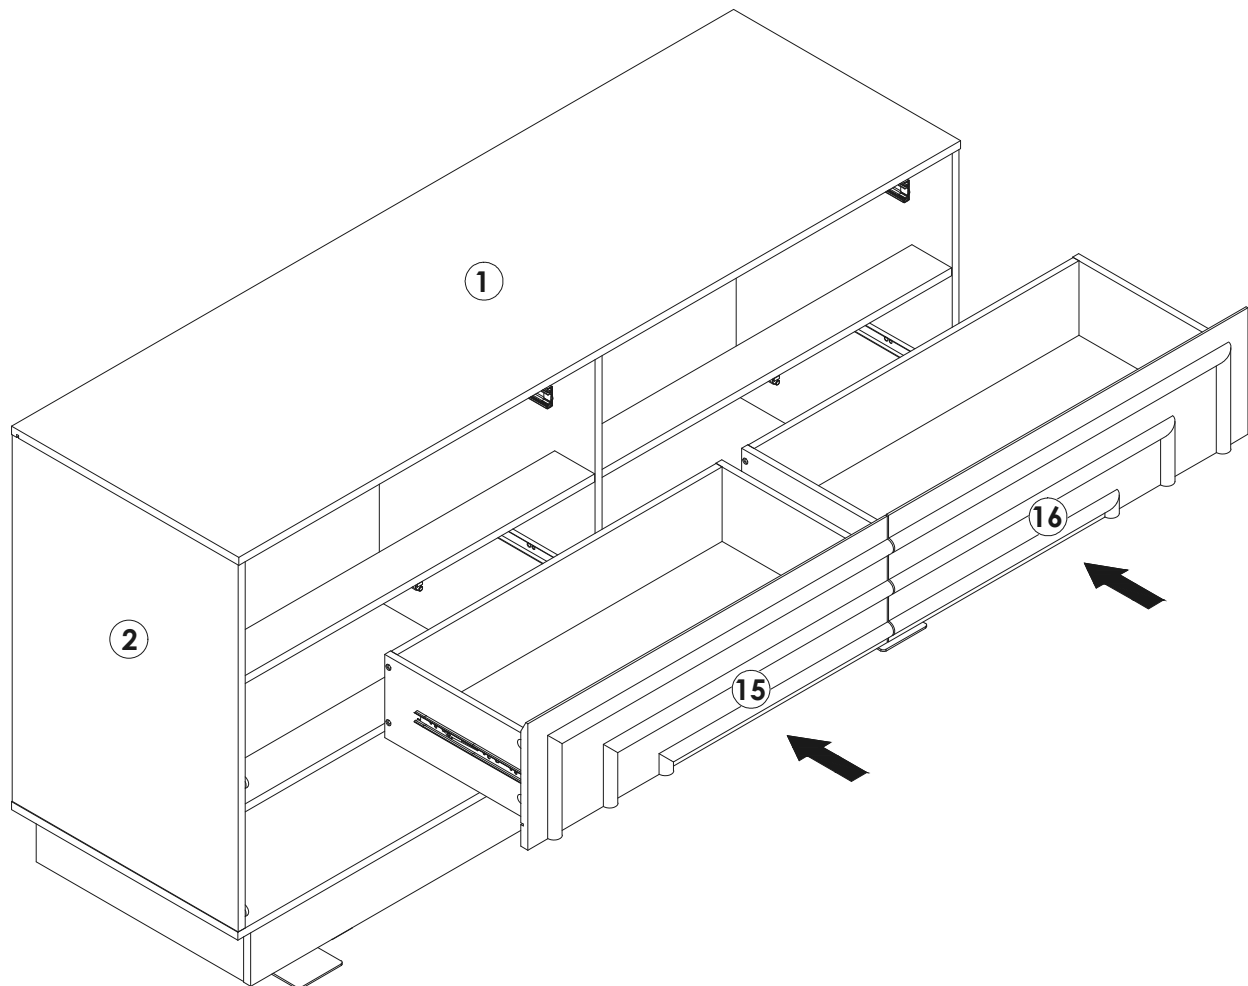


- 1, Drawers must be **horizontally put into** the cabinet
- 2, Make sure both side sliders **match well** to avoid damage

Wrong: L1 and L2 are not be horizontally placed and pushed


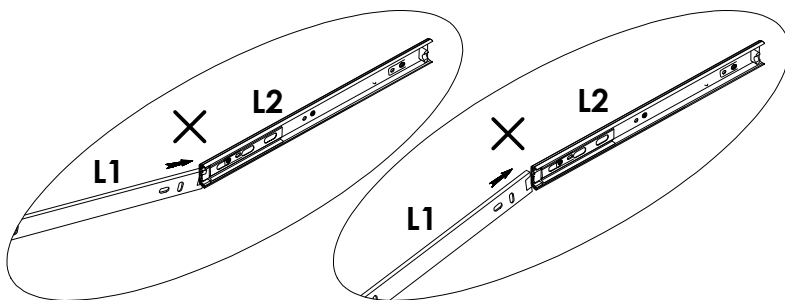


Right: Push L1 and L2 horizontally until you hear a "click"

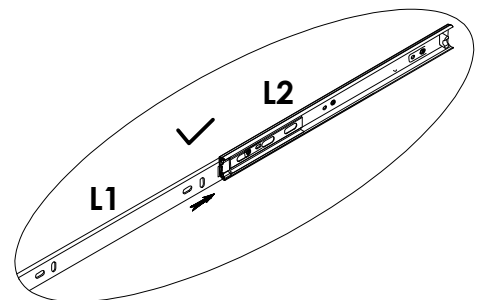



Assembly Instructions

Step 32

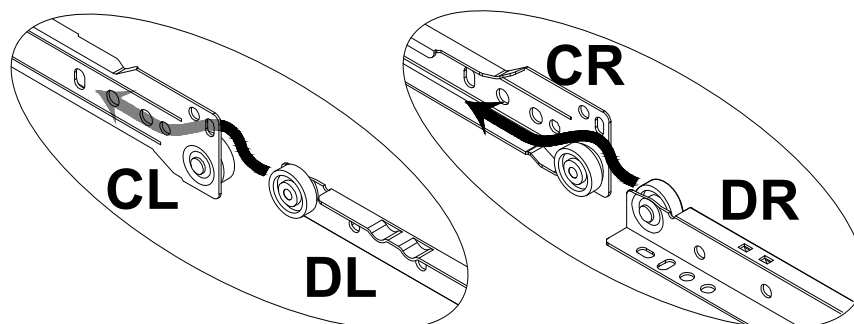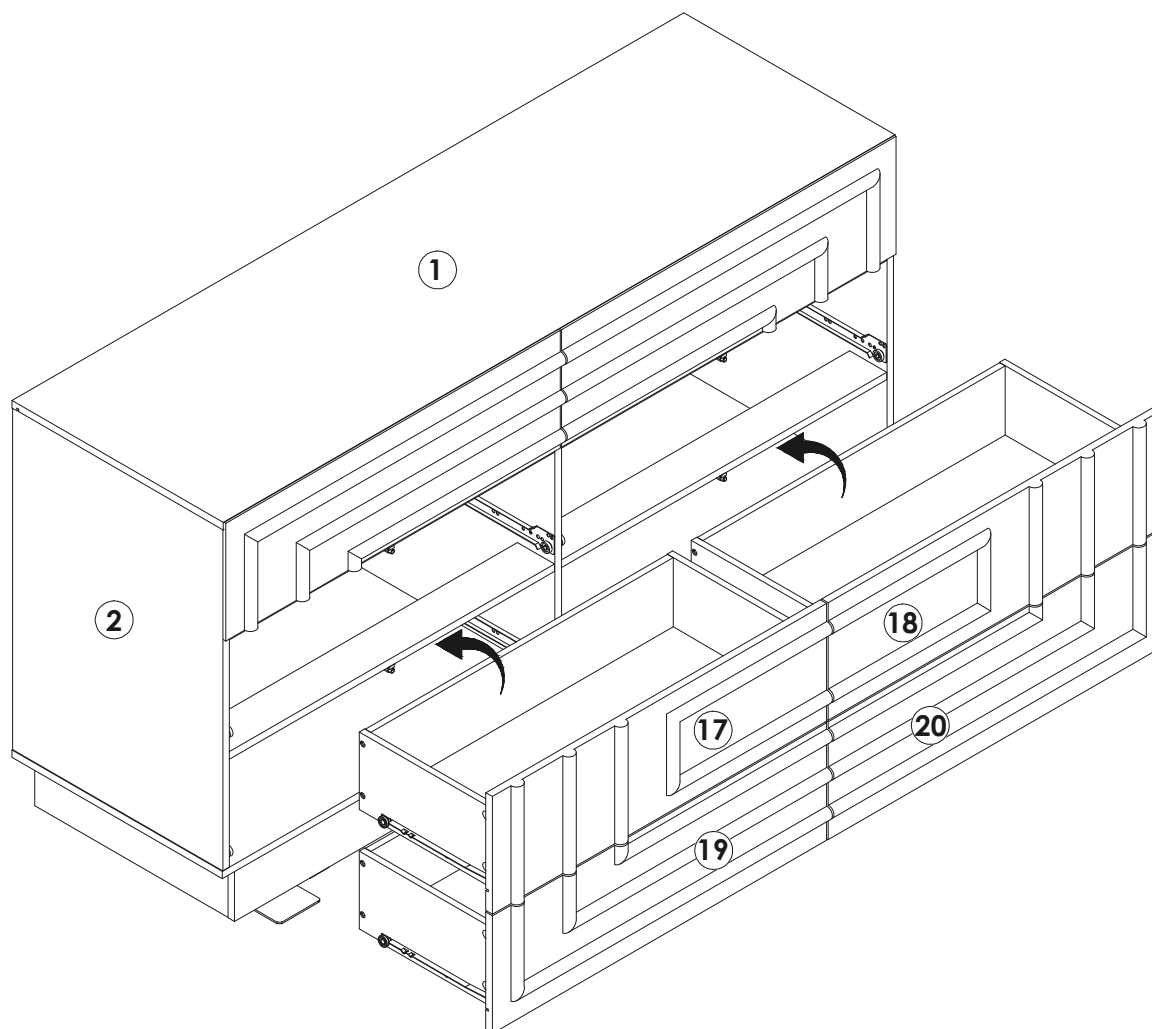

Assembly Instructions

Step 33

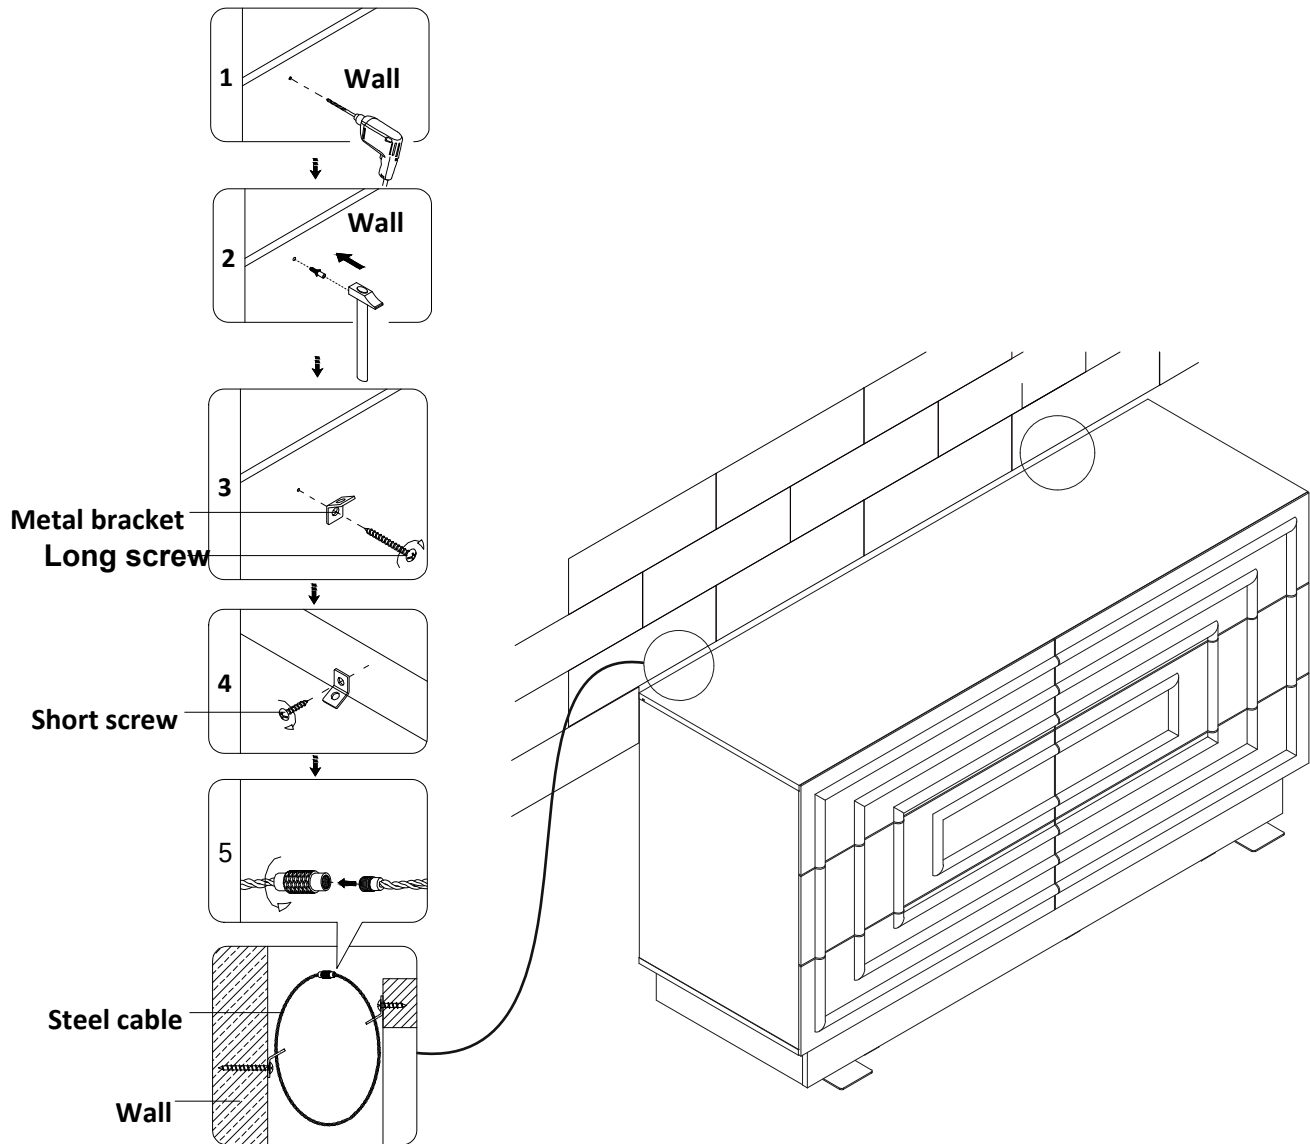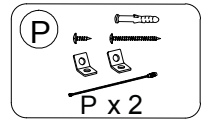

Follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to attach the tip-over restraints to the unit and the wall.

Assembly is complete.