

6-Drawer Horizontal Dresser



ASSEMBLY INSTRUCTIONS



60 min. assembly
2 person

*The estimated assembly time may vary depending on the individual.

Hey, there

Now is assembly time!

Deeeeeeep breathe.... and again....
Tools ready,
Easy peasy!

Estimated



60 min. assembly
2 person

Tools Required

- Allen Wrench (included)
- Phillips screwdriver (not included)
- Power Drill (not included)

important: *Cautious when you use power tools*

Thank you for purchasing

This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY.

Un pack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Lay out all the parts on a clean, flat, and soft surface to prevent scratches. Refer to the steps provided as assembling guide.

Do not attempt to assemble or use the product if any parts are missing or damaged.

REMINDERS

SAFE USAGE IS KEY

Your well-being is our top priority when you use our product. Please prioritize your safety by diligently following the assembly guidelines and inspecting the product carefully both when it arrives and before each use.


Please be aware that the manufacturer cannot be held liable for any injuries or fatalities that occur due to failure to follow the provided instructions or misuse of the product.

DO NOT MODIFY

Our products undergo rigorous testing to ensure they meet established safety standards before being released for sale. Altering the product in any way can lead to serious safety concerns, for which the manufacturer cannot assume responsibility.


What's in the box

Parts



1 X 1

Middle support panel




2 X 2

Back support bar




3 X 1

Middle support bar

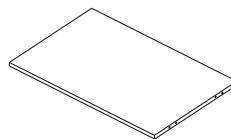


4 X 1

Left side panel

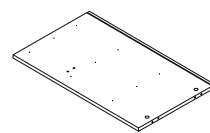


5 X 1

Right side panel

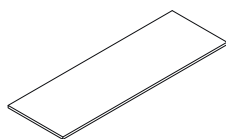


6 X 1

Top panel

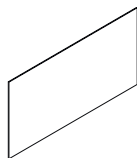

7 X 2

Back panel



8 X 1

Bottom panel




9 X 4

Metal leg




10 X 1

Middle adjustable leg

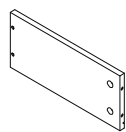


11 X 6

Left drawer sidepanel




12 X 6

Right drawer sidepanel

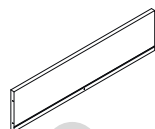


13 X 6

Drawer back panel




14 X 6

Drawer bottom support bar




15 X 6

Drawer bottom panel

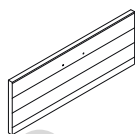


16 X 3

Left drawer front panel

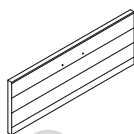

17 X 3

Right drawer front panel



18 X 2

Back panel

What's in the box

Hardware & Accessory



A X 48+3
M6 x 36mm



B X 48+3
M15 x 9mm



C X 16+2
M5.8 x 30mm




D X 16+2
M4 x 18mm



E X 72+3
M3.5 x 12mm




F X 20+3
M6 x 12mm




G X 1



H X 24+3
M3 x 16mm



I X 24+3




J X 2




K X 2
M4 x 14mm




L X 2




M X 8
M4 x 35mm




N X 30+3
M4 x 30mm



O X 6



DL X 6



DR X 6




CL X 6




CR X 6

Assembly

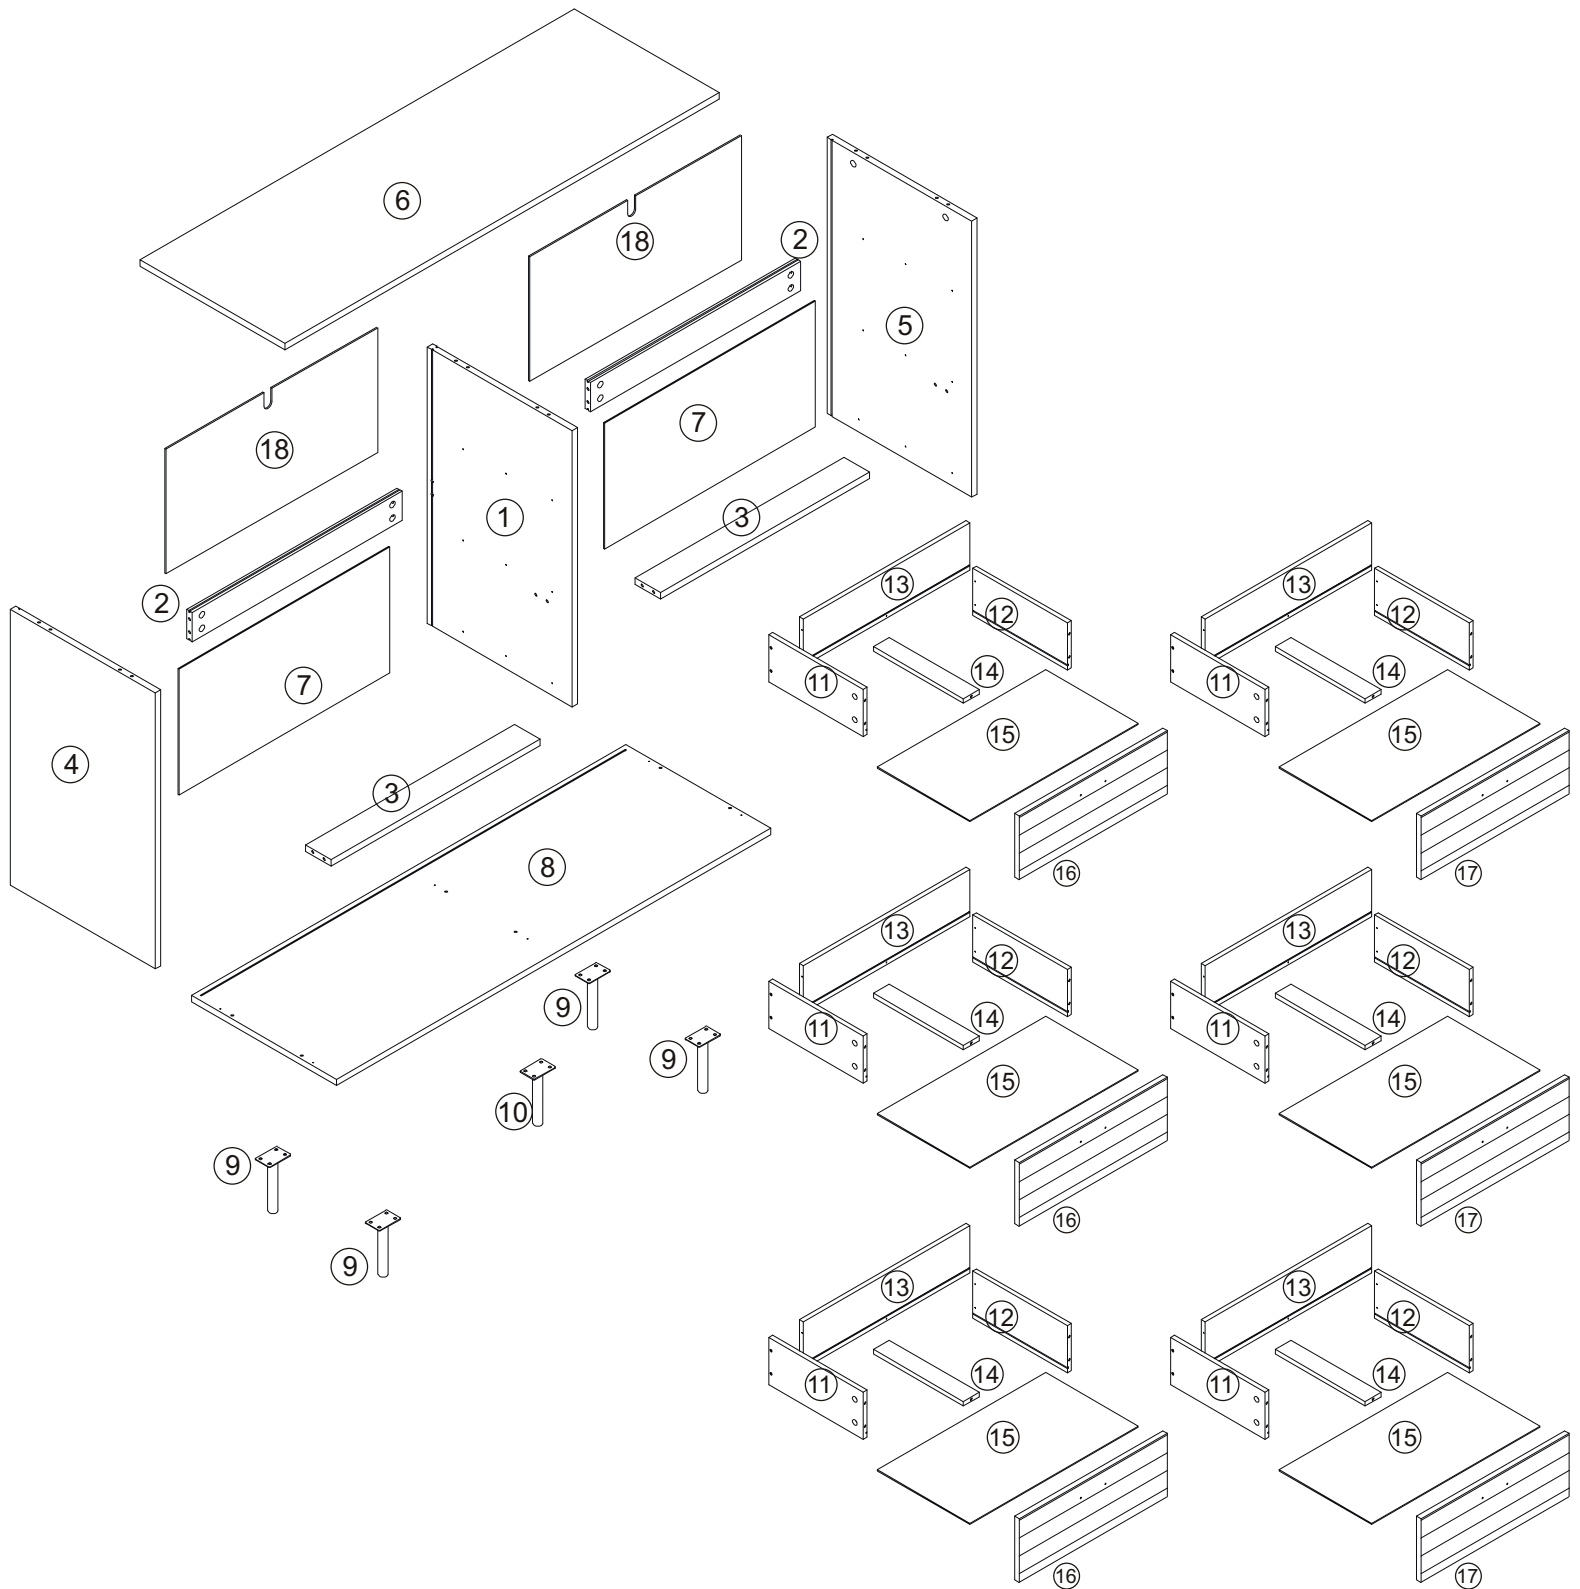

Step 1

Fix left outer drawer runners (CL) and right outer drawer runners (DR) to part 1 using screws (E), as shown.

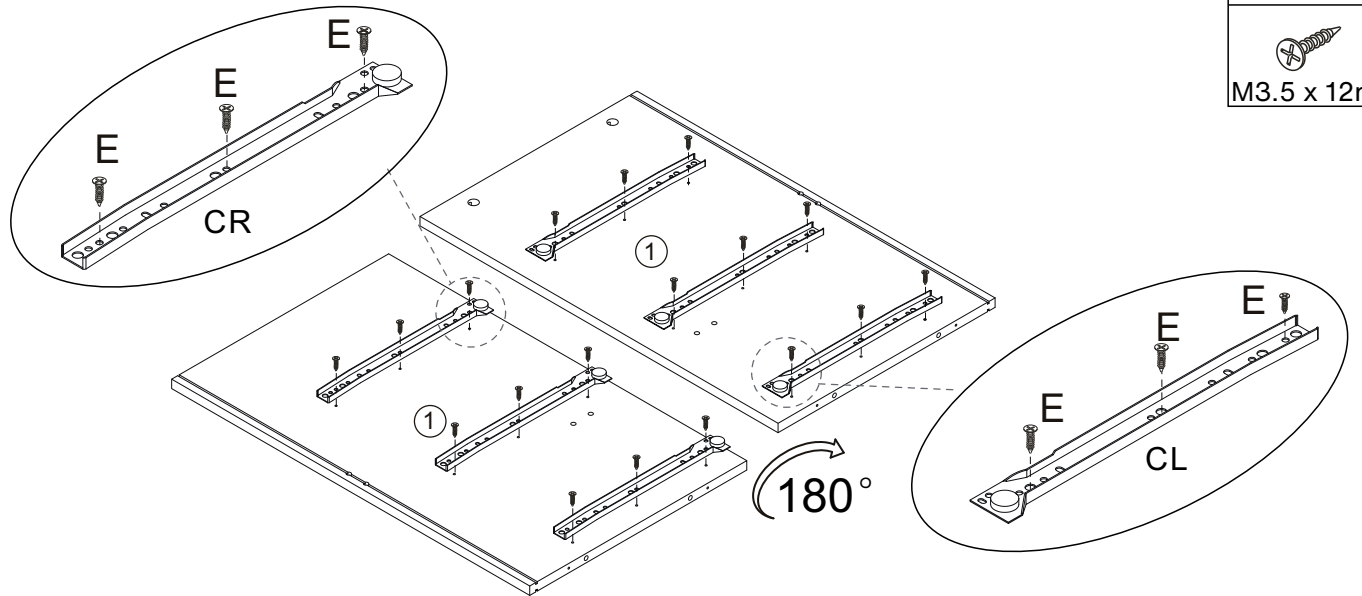


Step 2

Insert quickfit screws (A) into part 1, as shown.


Insert cam locks (B) and wooden dowels (C) into parts 2 and 3, as shown.

Fit parts 2 and 3 to part 1.

Turn cam lock clockwise to tighten.

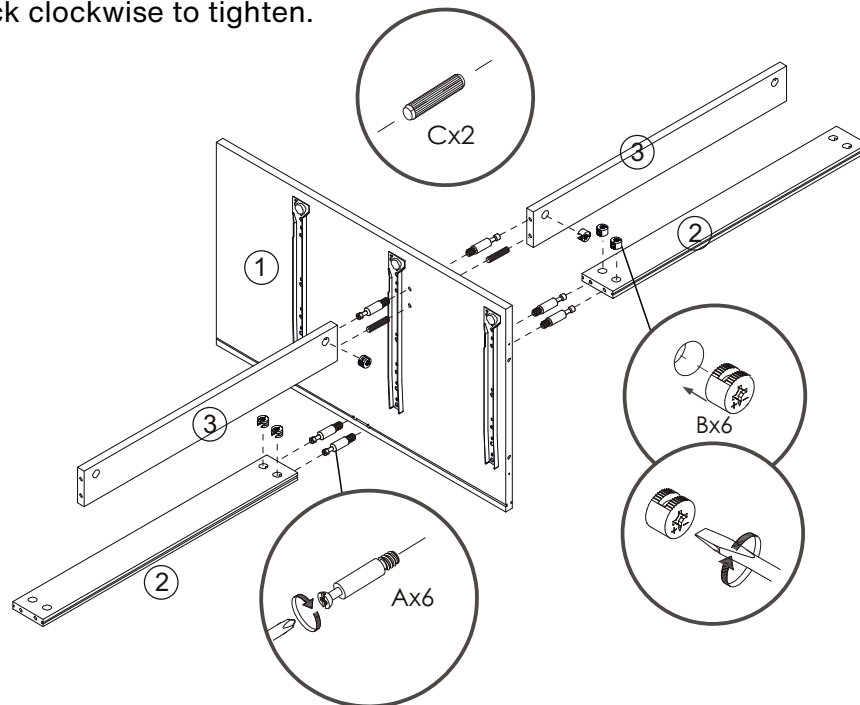


NOTE: THIS STEP TO BE ACCOMPLISHED BY TWO PERSONS

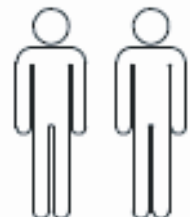


Step 3

Insert quickfit screws (A) into parts 4 and 5, as shown.
Fix left outer drawer runners (CL) and right outer drawer runners (CR) to parts 4 and 5 using screws (E), as shown.

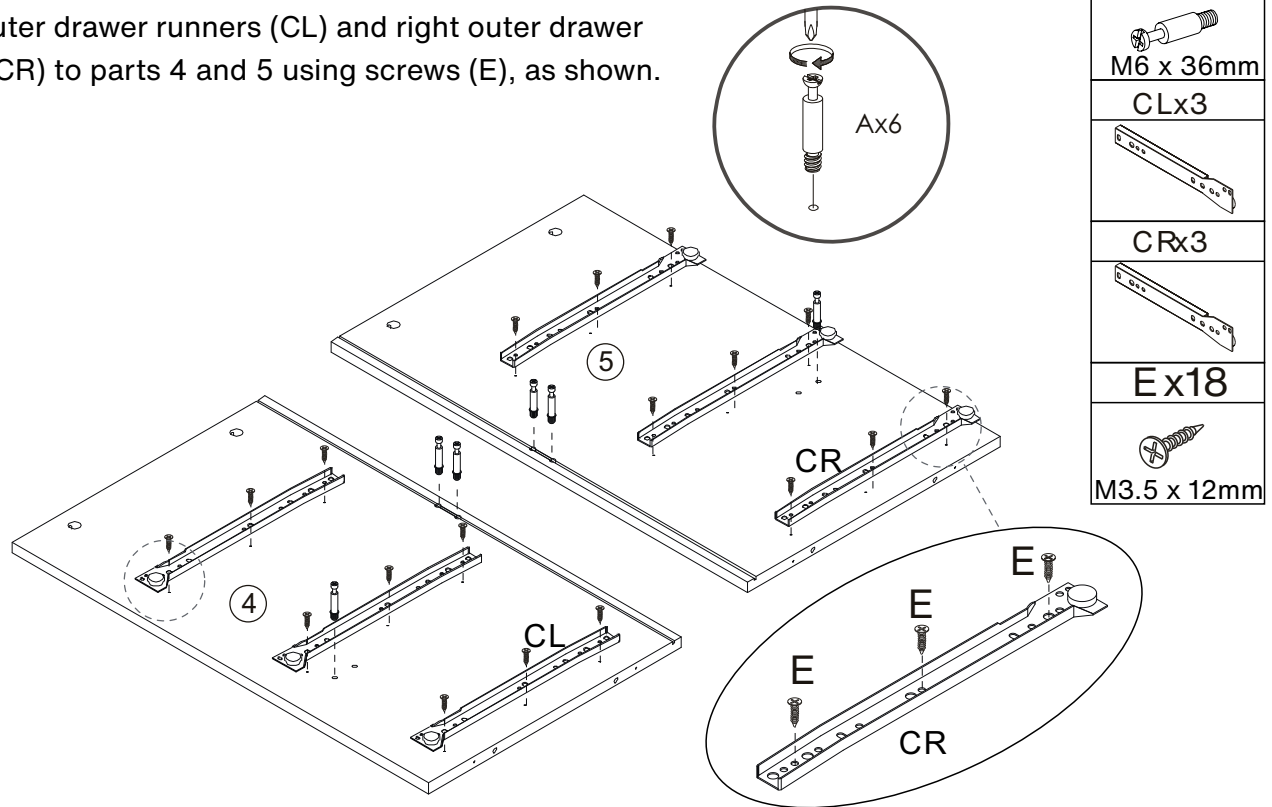

Step 4


Insert cam locks (B) and wooden dowels (C) into parts 2 and 3, as shown.
Attach parts 4 and 5 to parts 2 and 3.
Turn cam locks clockwise to tighten.

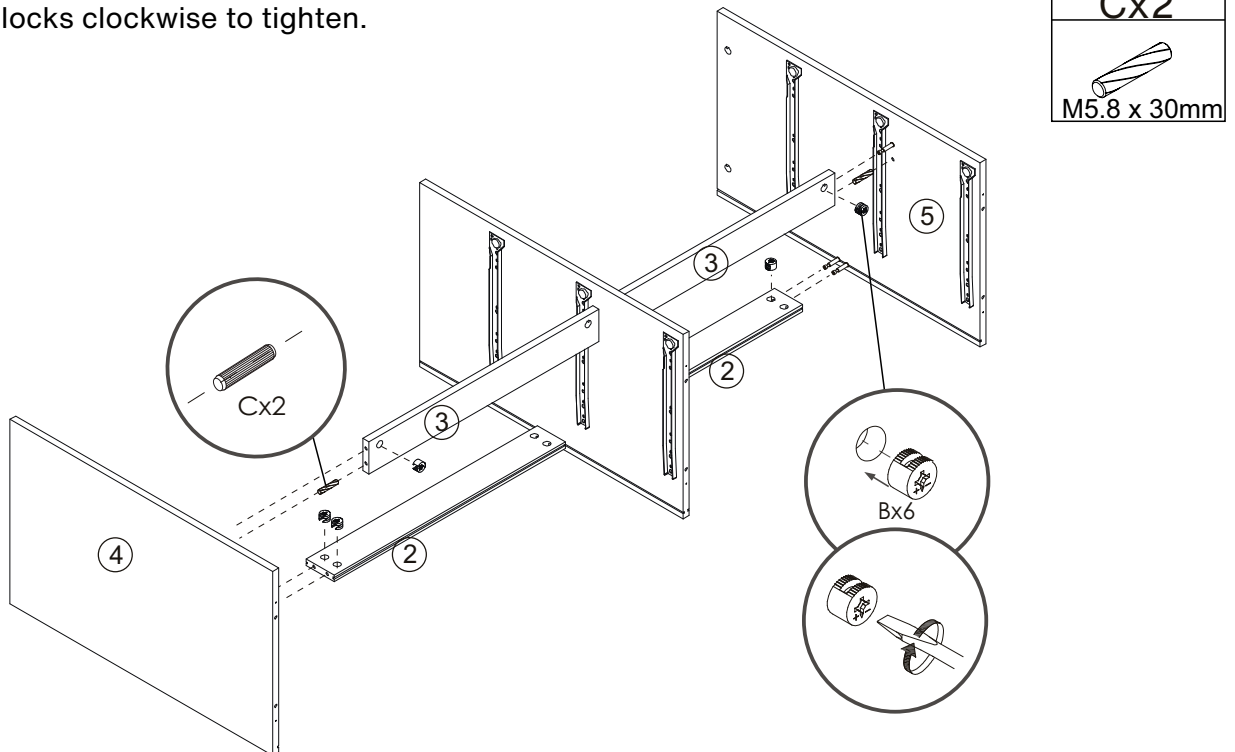

Step 5


Insert quickfit screws (A) into part 6, as shown.

Fix wall brackets (J) to part 6 using screws (K), as shown.

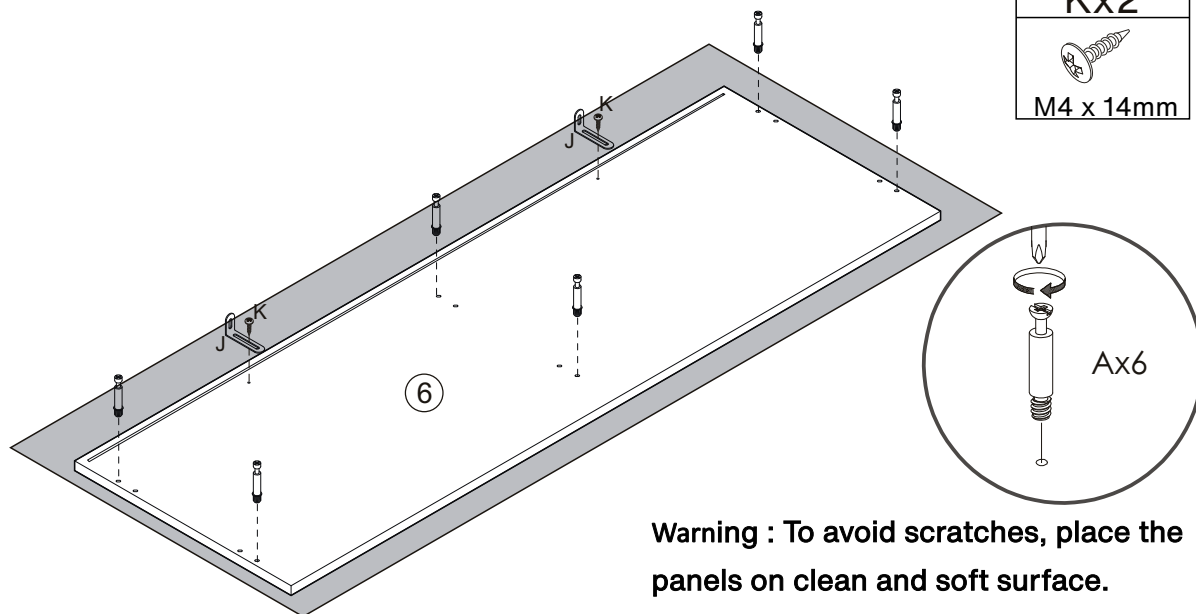

Step 6

Slide parts 18 into grooves between 1, 2, 4 and 5, as shown.

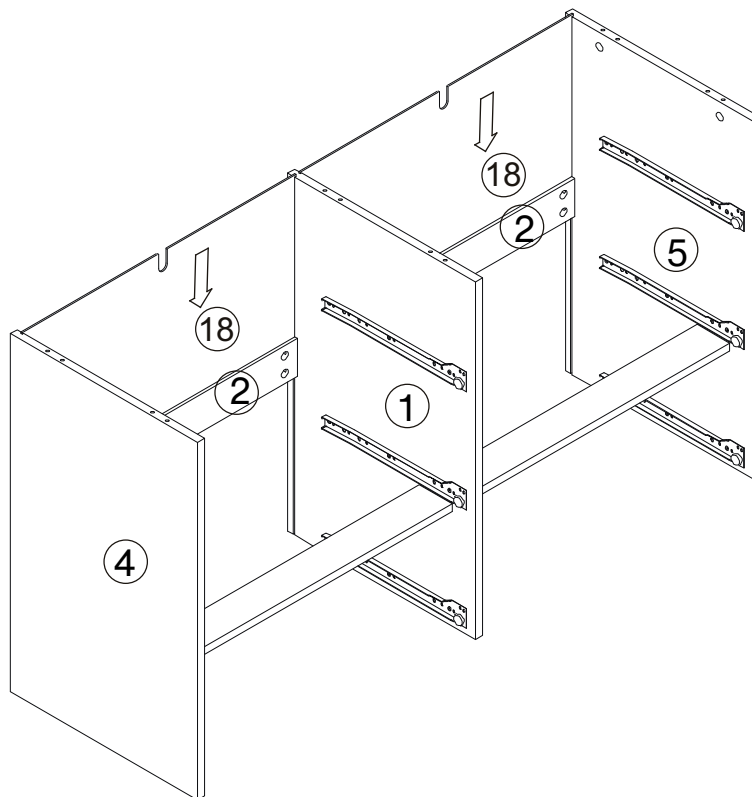


Step 7

Insert cam locks (B) and wooden dowels (C) into parts 1, 4 and 5, as shown.

Fit part 6 to parts 1, 4 and 5.

Turn cam locks clockwise to tighten.

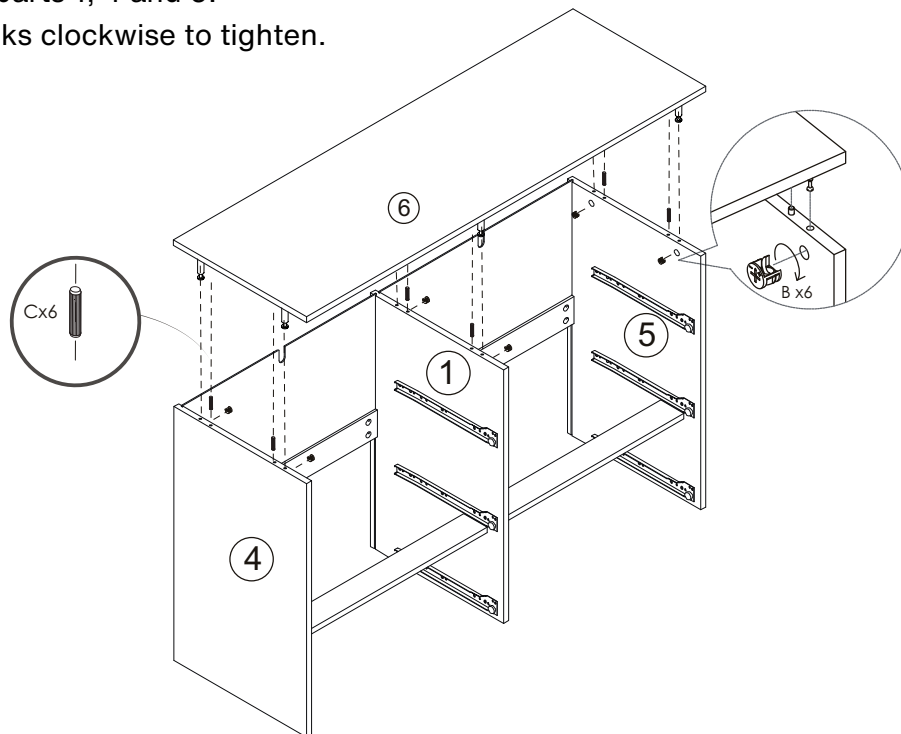


Bx6

M15 x 9mm
Cx6

M5.8 x 30mm


Step 8


Slide parts 7 into grooves between parts 1, 2, 4 and 5, as shown.

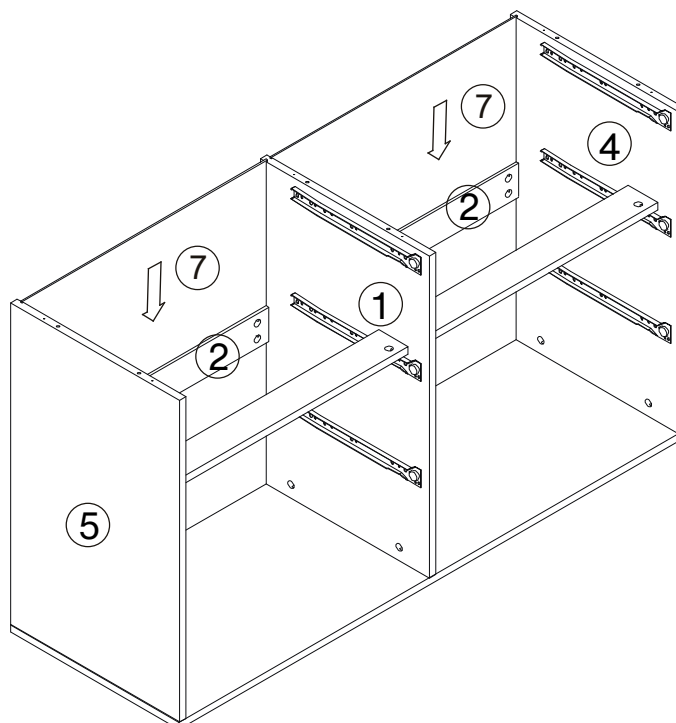

Step 9


Insert wooden dowels (C) into parts 1, 4 and 5, as shown.
Fix part 8 to parts 1, 4 and 5 using screws (M), as shown.

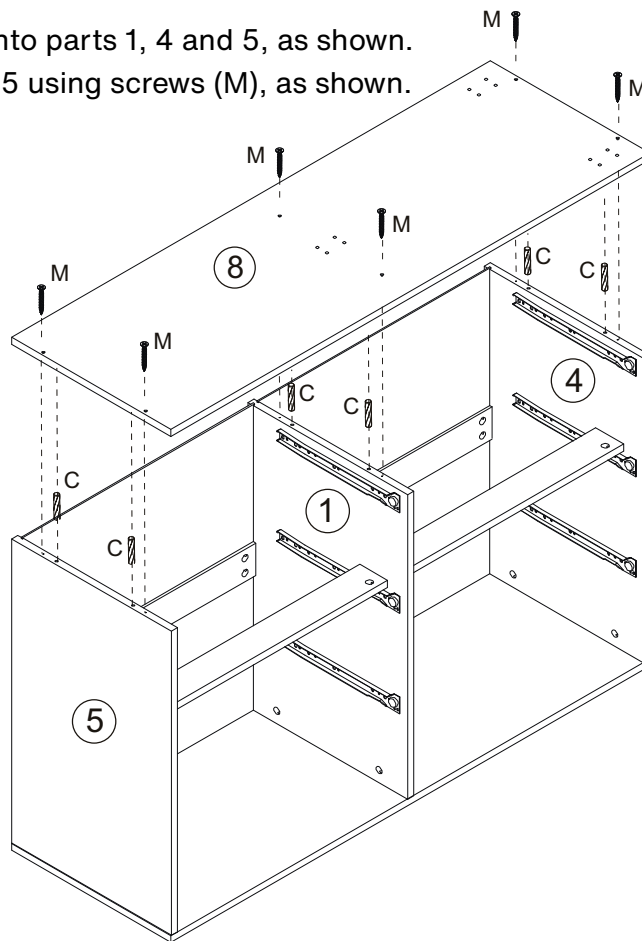

Cx6
 M5.8 x 30mm
Mx6
 M4 x 35mm

Step 10

Fix legs 9 and 10 to part 8 using screws (F) and allen key (G), as shown.

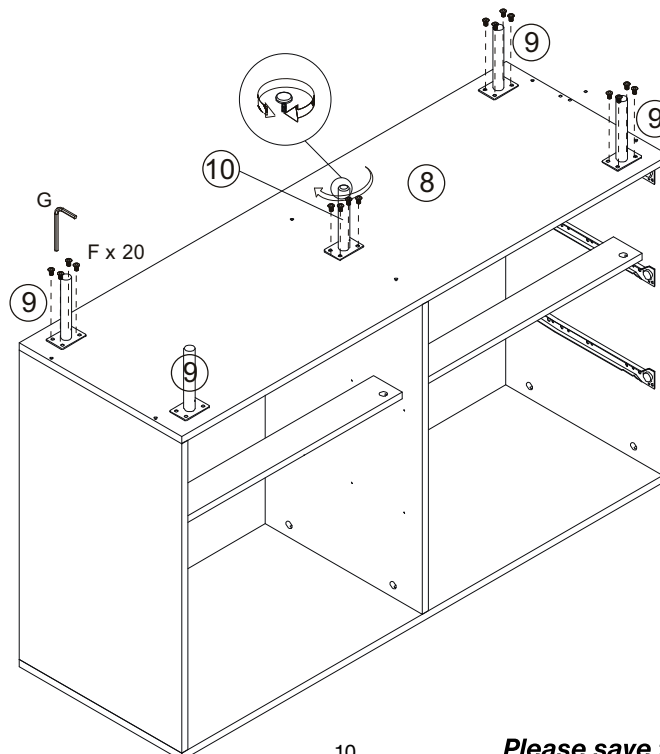

Fx20
 M6 x 12mm
Gx1


Step 11

Secure backing panels 7 and 18 by fixing wedges (I) using screws (H), as shown.




ATTENTION PLEASE

Please ensure the structure is straight and level and all panels are at right angles before installing hardware (I).

MUST install hardware (I) to strengthen product stability.

Hx24

M3 x 16mm
Ix24

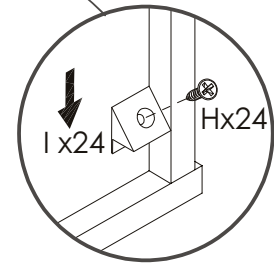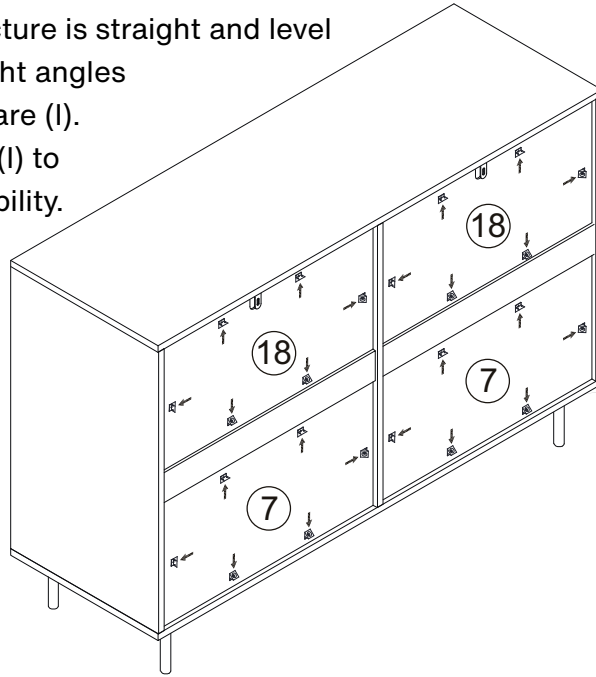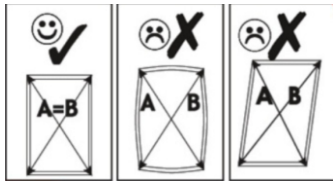
Step 12


For extra stability, it is recommended that you fix your Chest of drawers to the wall using hardware (L and M), as shown.

Screws (M) are fixed through wall brackets and into the wall plugs (L).

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

Lx2


Mx2

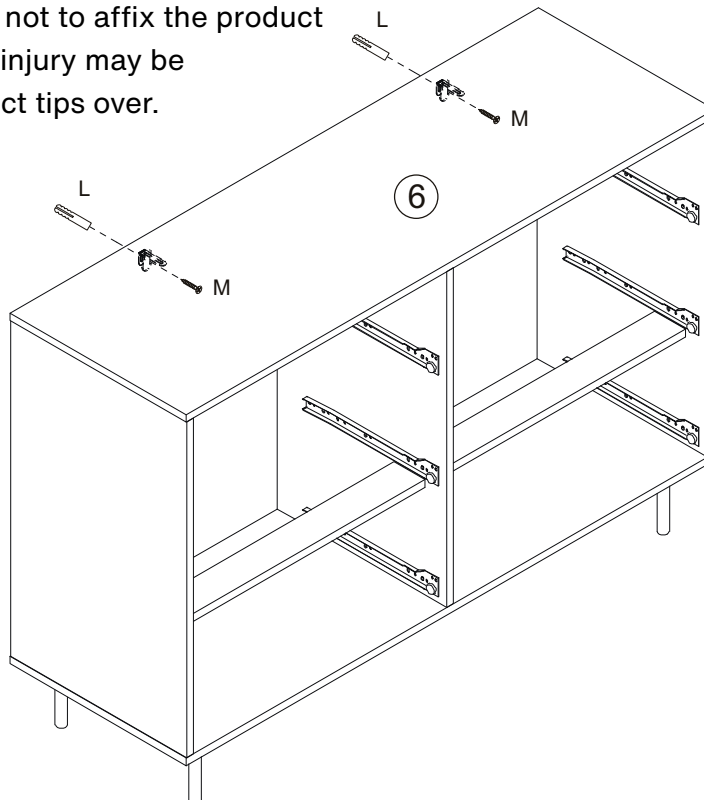M4 x 35mm



Step 13

Insert quickfit screws (A) into parts 16 and 17, as shown.

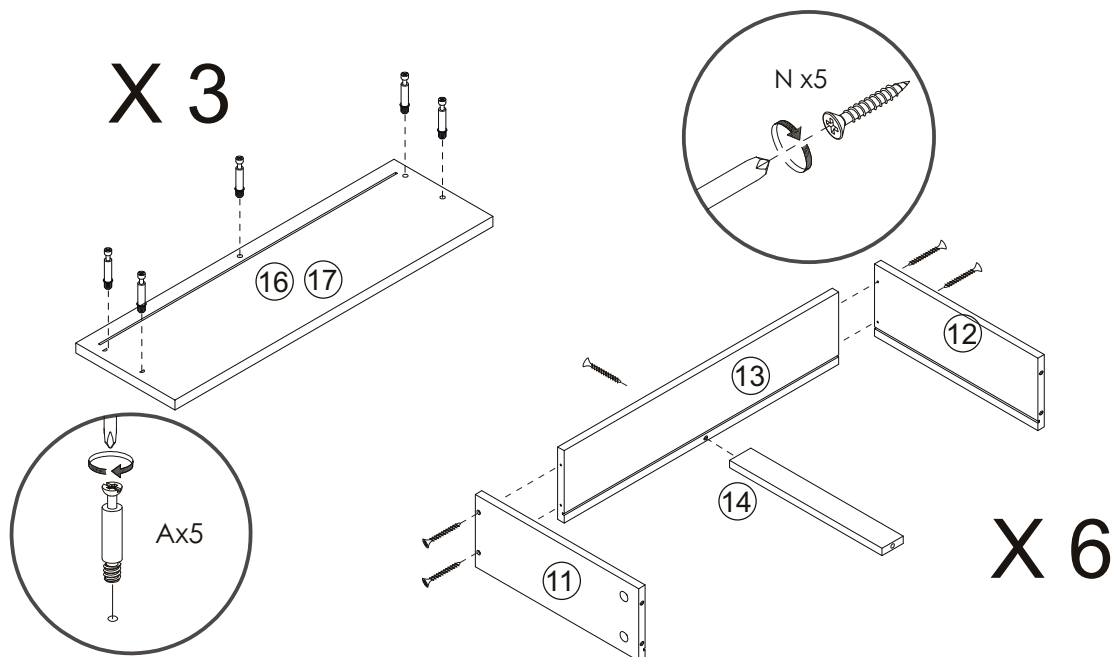Fix parts 11, 12 and 14 to parts 13 using screws (N), as shown.



Ax15

M6 x 36mm
Nx30

M4 x 30mm

Step 14

Fix handles (O) to parts 16 and 17 using screws (D).


Insert part 15 into grooves between parts 11, 12 and 13, as shown.

Fix handles (O) to parts 16 and 17 using screws (D).

Insert cam locks into parts 11, 12 and 14, as shown.


Fit parts 16 and 17 to parts 11, 12 and 14.

Turn cam locks clockwise to tighten.

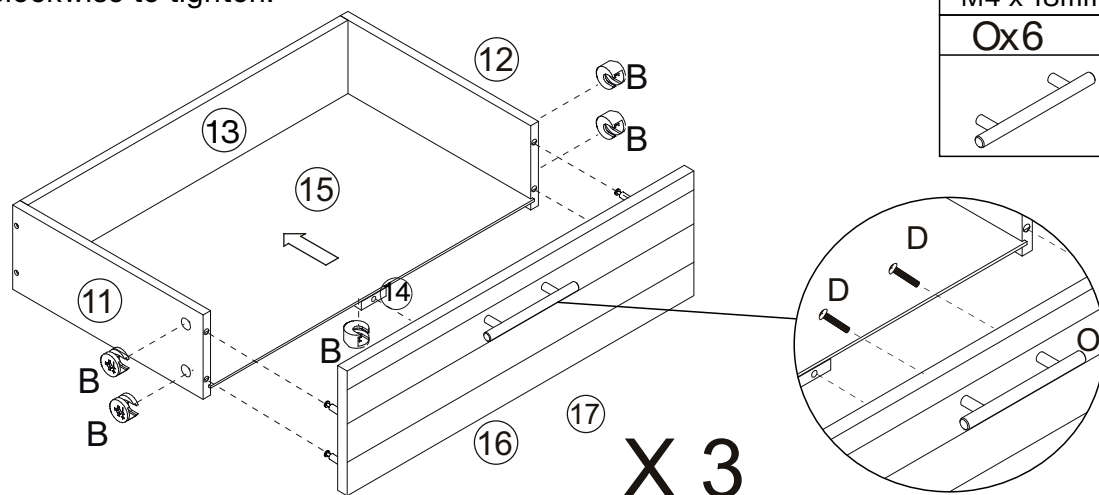



Bx30

M15 x 9mm
Dx12


M4 x 18mm
Ox6


Step 15

Fix left inner drawer runners (DL) and right inner drawer runners (DR) to parts 11 and 12 using screws (E), as shown.

DRx6

DLx6

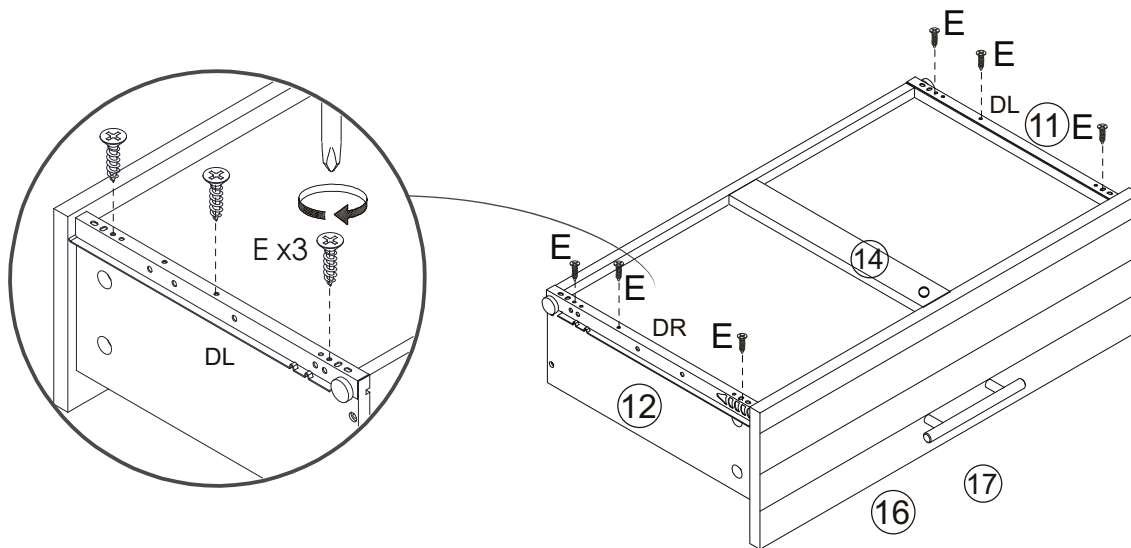Ex36

M3.5 x 12mm





X 3

Step 16

Insert drawers into the assembled unit, as shown.

Please to be noted the wheels on the drawer runners should be fit into place.

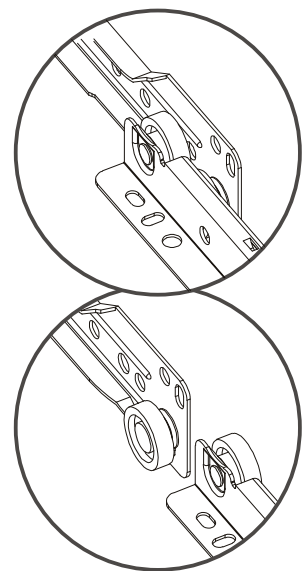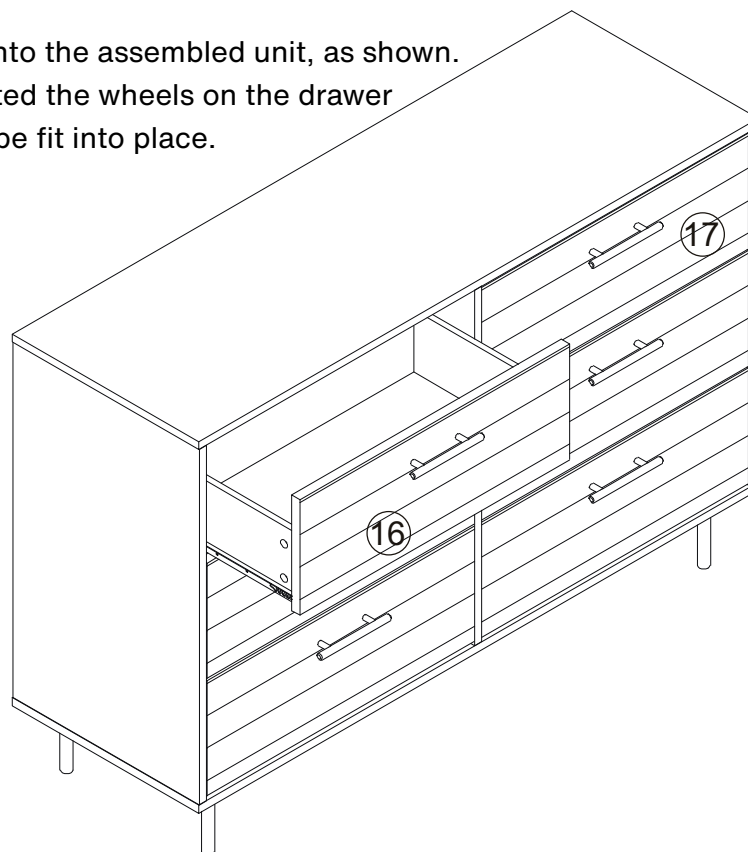

VOILA!

Now enjoy.



Warning

Do NOT sit, stand, or climb on the dresser as this may damage the product and cause serious bodily injury