



Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

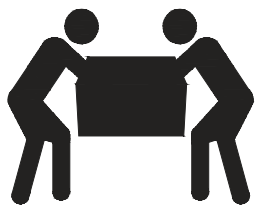

Recommended installers:2

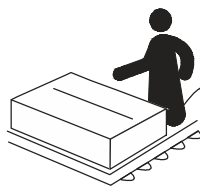


Put a carpet on the floor
before unpacking


















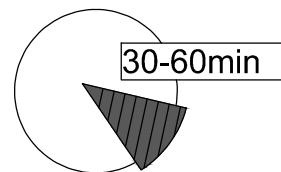


Estimate installation time:
60 minutes











ASSEMBLY INSTRUCTION

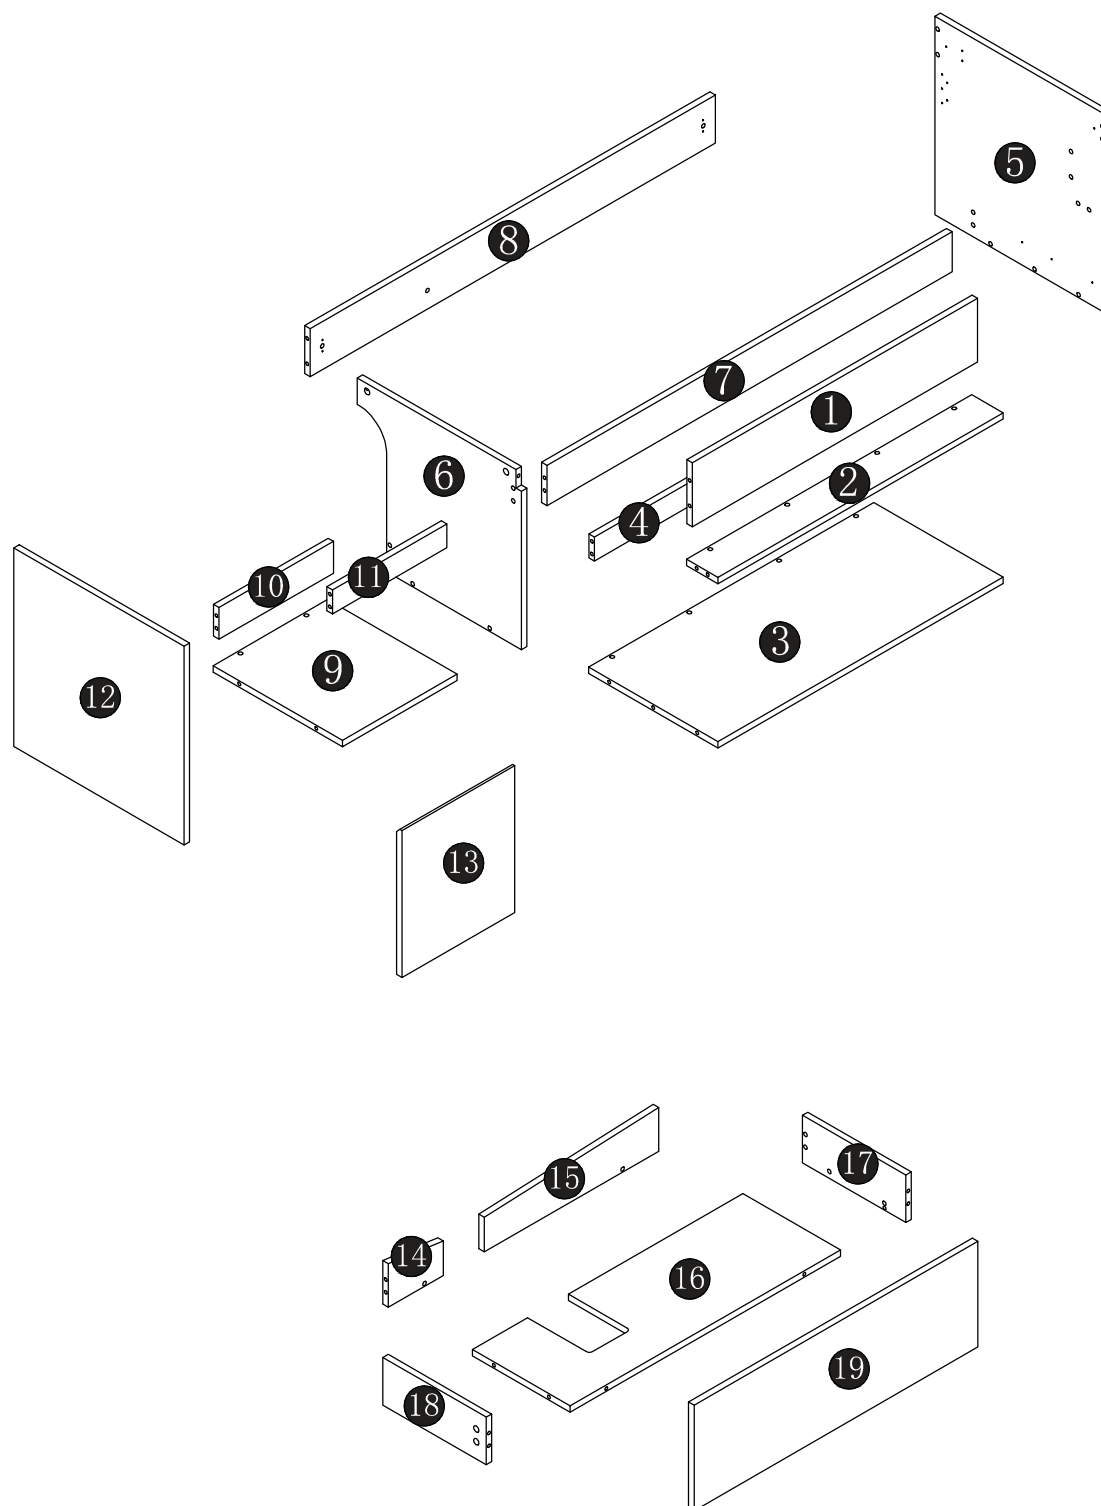

ASSEMBLY INSTRUCTION

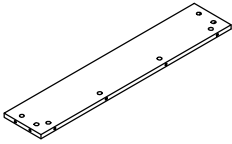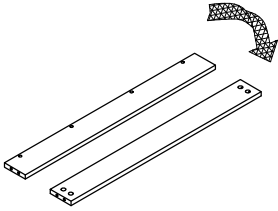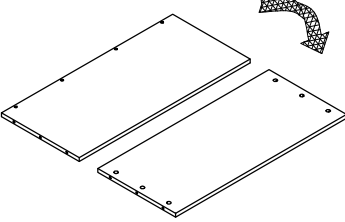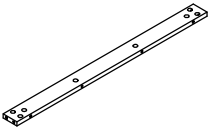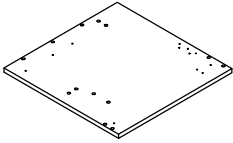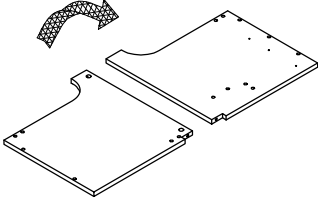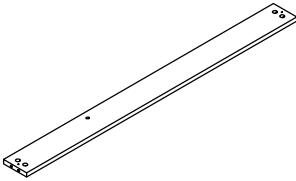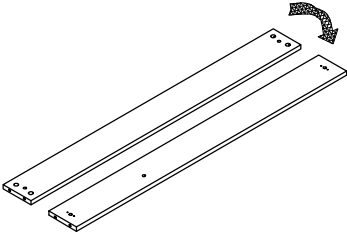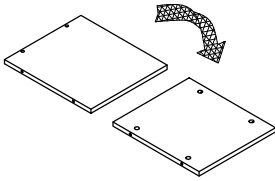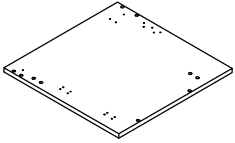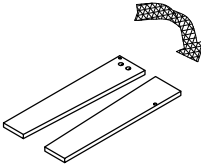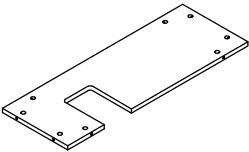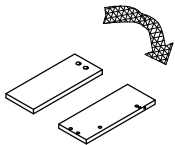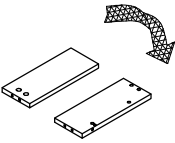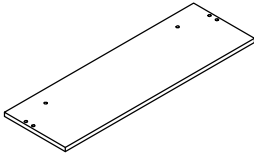1 1PC 	2 1PC 	3 1PC 	4 1PC 
5 1PC 	6 1PC 	7 1PC 	8 1PC 
9 1PC 	10 1PC 	11 1PC 	12 1PC 
13 1PC 	14 1PC 	15 1PC 	16 1PC 
17 1PC 	18 1PC 	19 1PC 	


ASSEMBLY INSTRUCTION

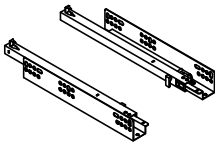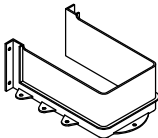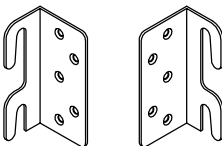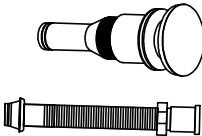A 66PCS  M6*40	B 66PCS  ∅15*10	C 1set 	D 1PC 
E 53PCS  ∅3.5*14	F 2PCS 	G 2PCS 	H 2PCS 
I 4PCS 	J 4PCS 	K 4PCS 	L 2PCS 
M 66PCS 	N 8PCS 	O 1set 	


ASSEMBLY INSTRUCTION

Use the Cam Lock and Eccentric Wheel ECCENTRIC WHEEL

Tighten the bolt until the shoulder is aligned with the panel.
Be suer not to tighten too much or too little.

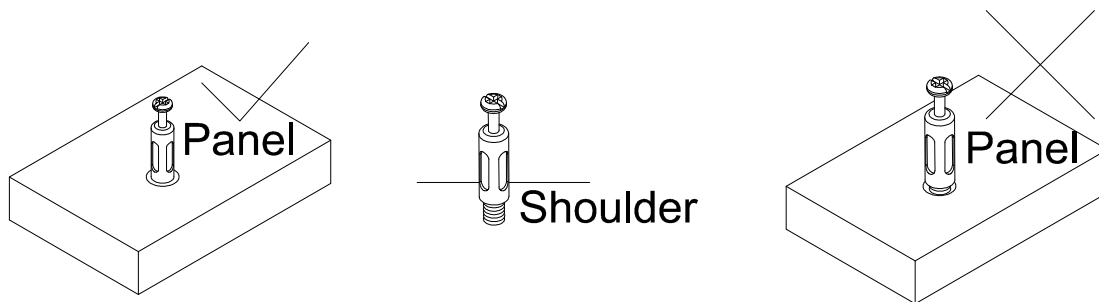

The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

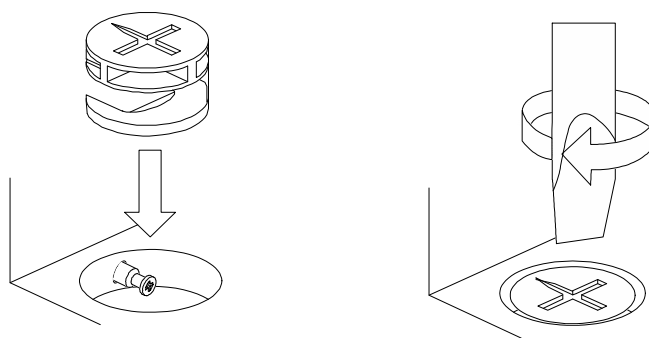

Turn the cam lock clockwise to tighten














ASSEMBLY INSTRUCTION

Step 1

A 66PCS





M6*40

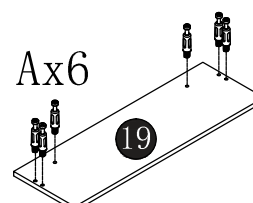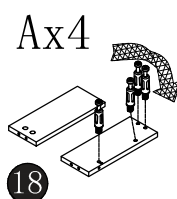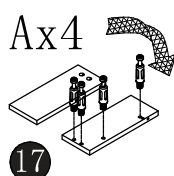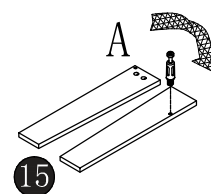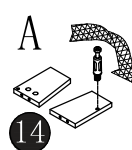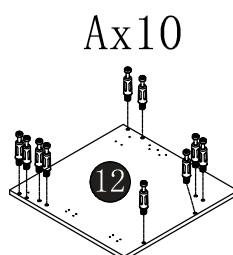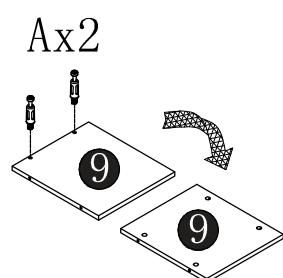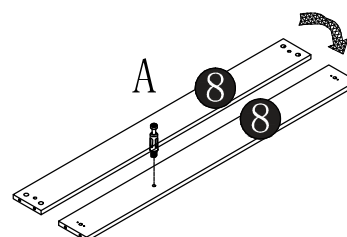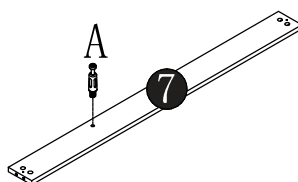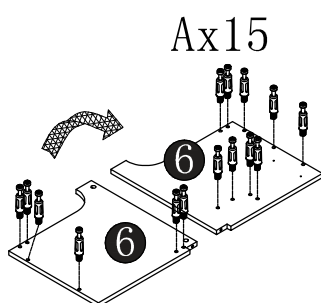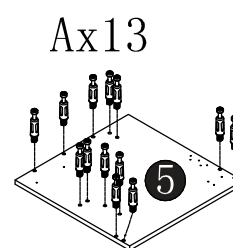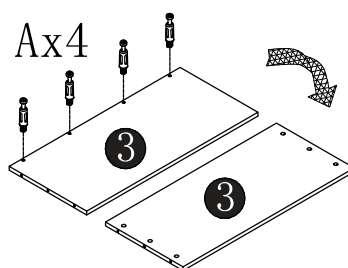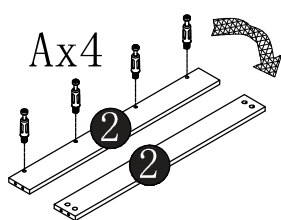


ASSEMBLY INSTRUCTION

Step 2

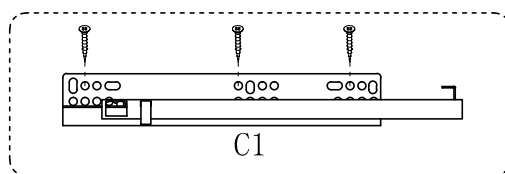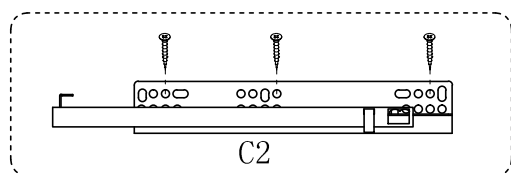



C 1set



D 6PCS



Ø3.5*14

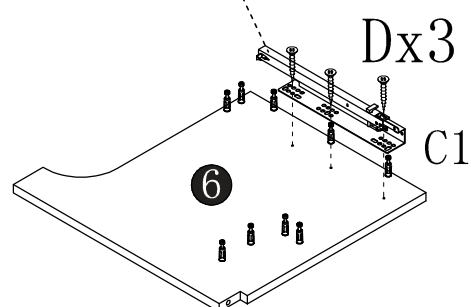
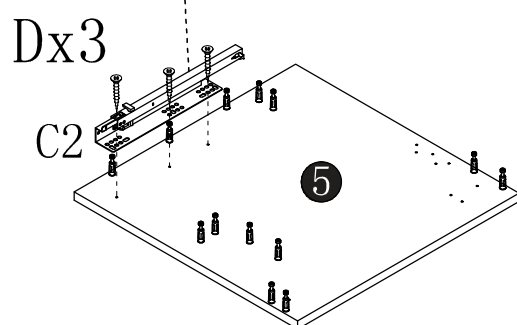


Step 3

B 8PCS



Ø15*10mm

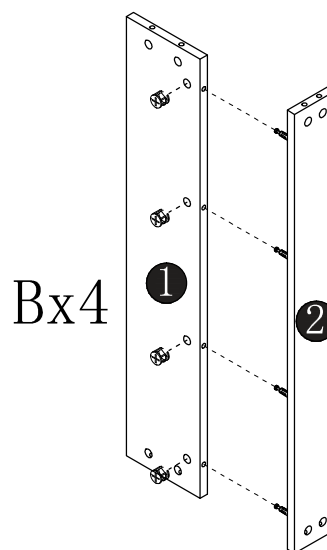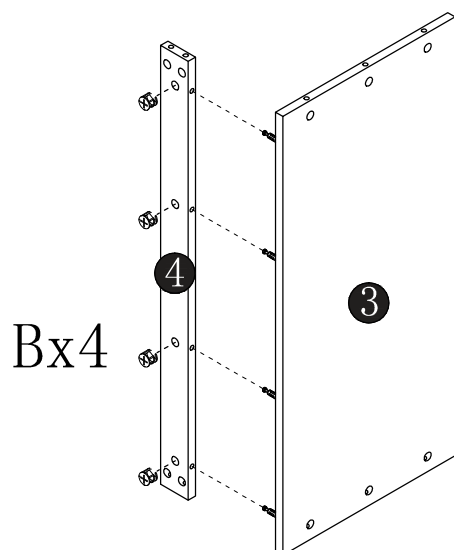


ASSEMBLY INSTRUCTION

Step 4

B 9PCS



Ø15*10mm

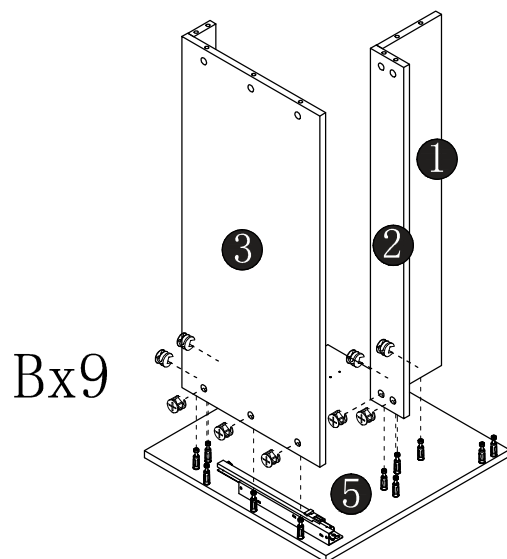


Step 5

B 15PCS



Ø15*10mm

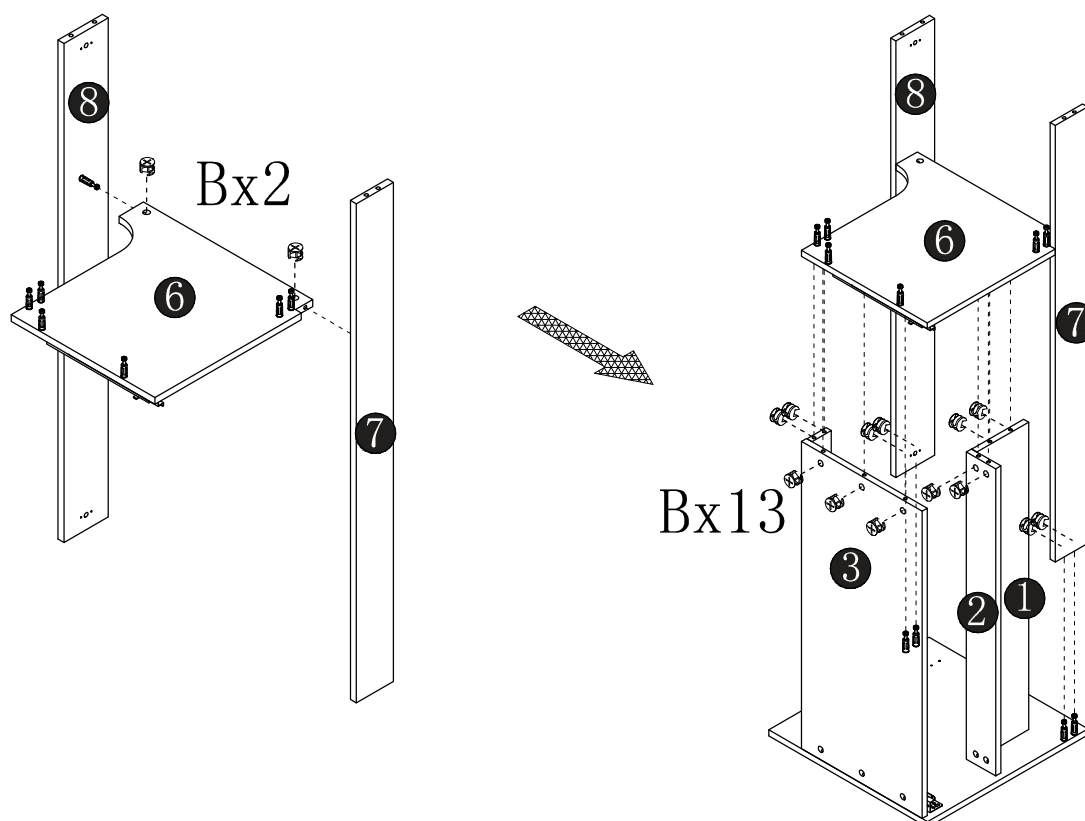


ASSEMBLY INSTRUCTION

Step 6

B 8PCS



Ø15*10mm

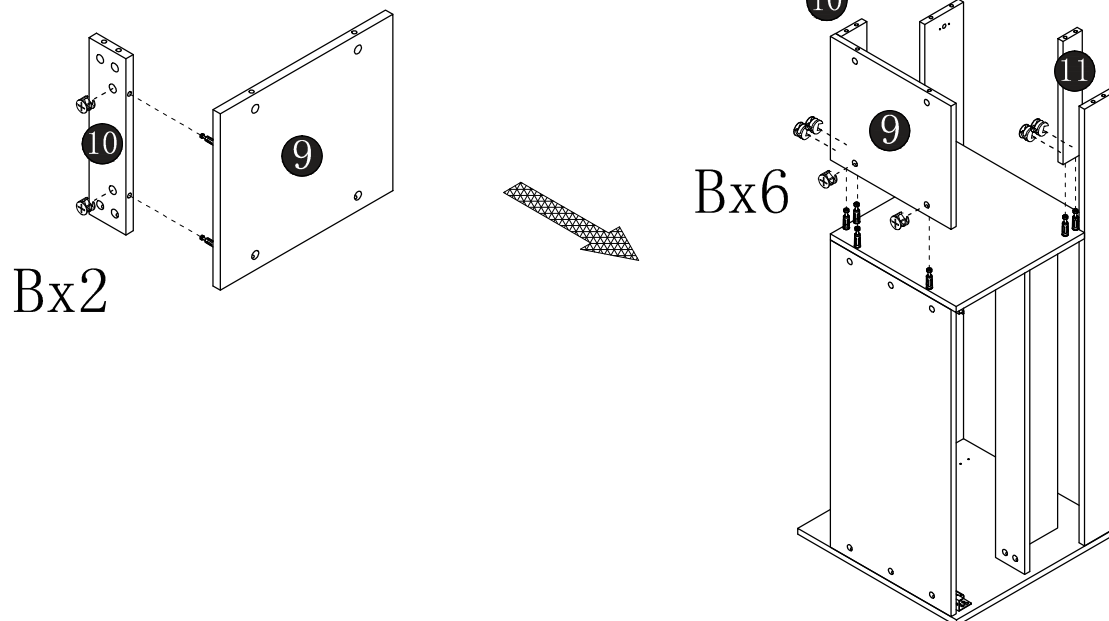


Step 7

B 10PCS




Ø15*10mm

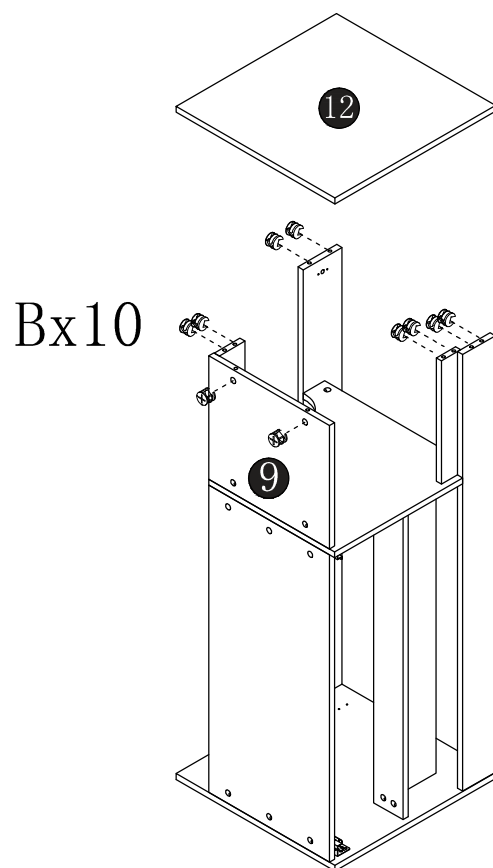

ASSEMBLY INSTRUCTION

Step 8

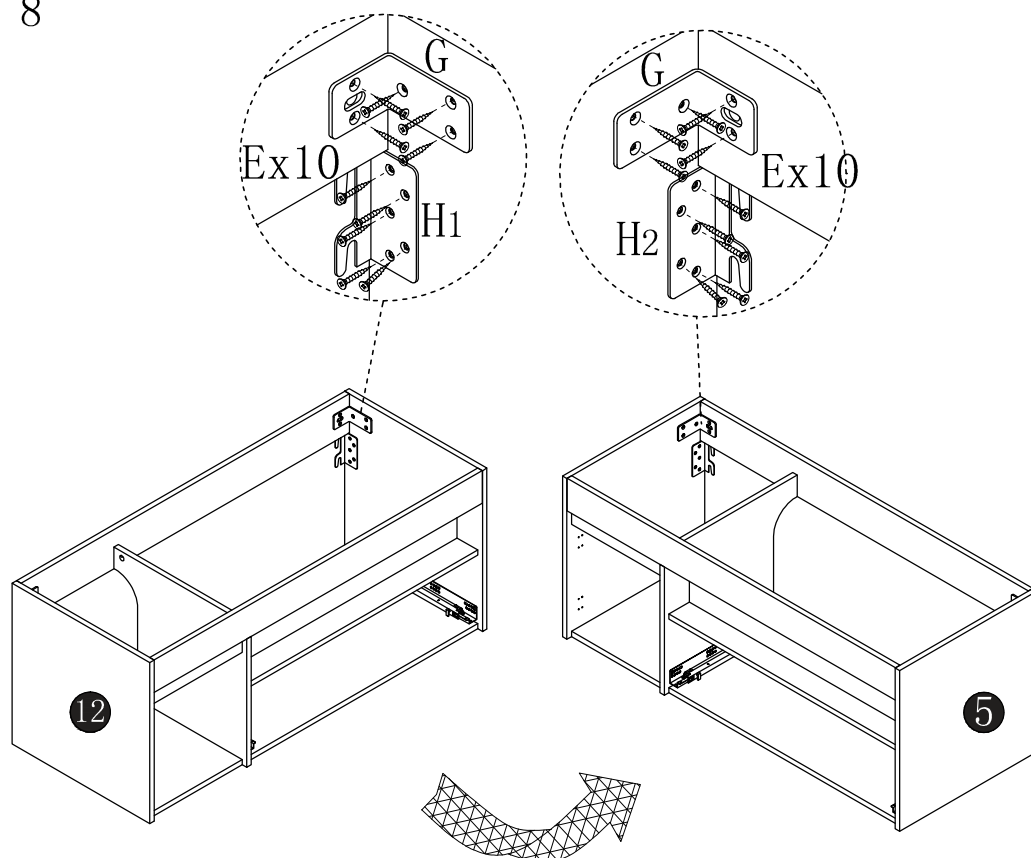

E 20PCS




Ø3.5*14


G 2PCS



H 2PCS



Step 9

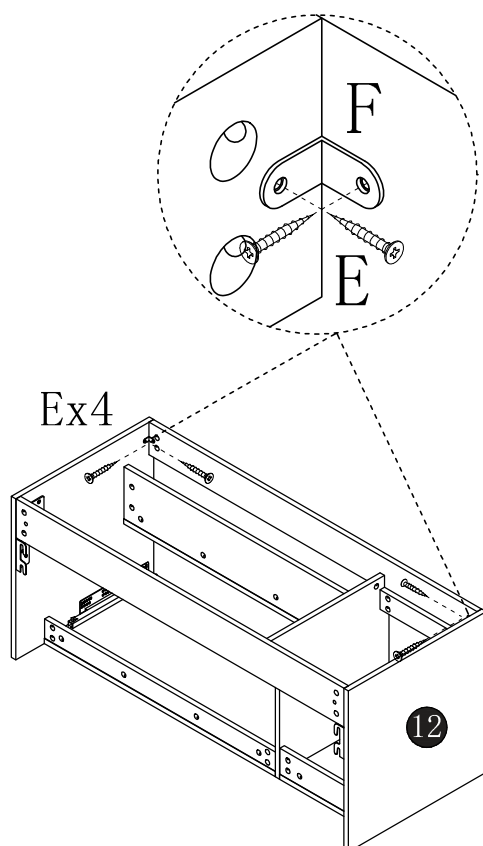

E 4PCS




Ø3.5*14

F 2PCS




ASSEMBLY INSTRUCTION


Step 10

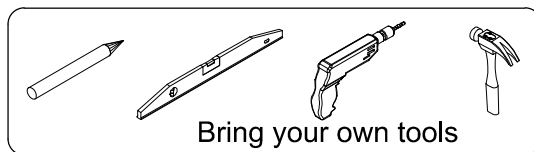

I 4PCS

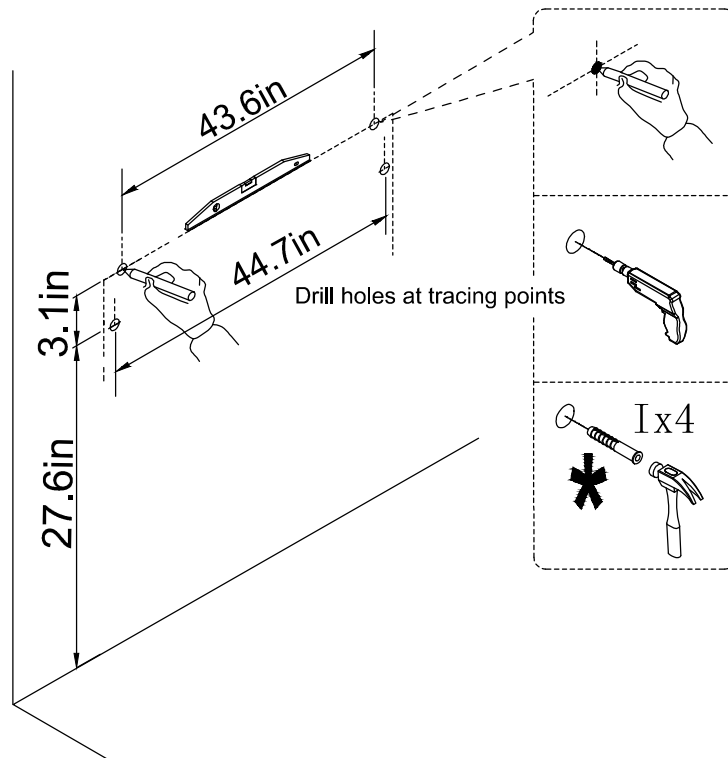



Step 11

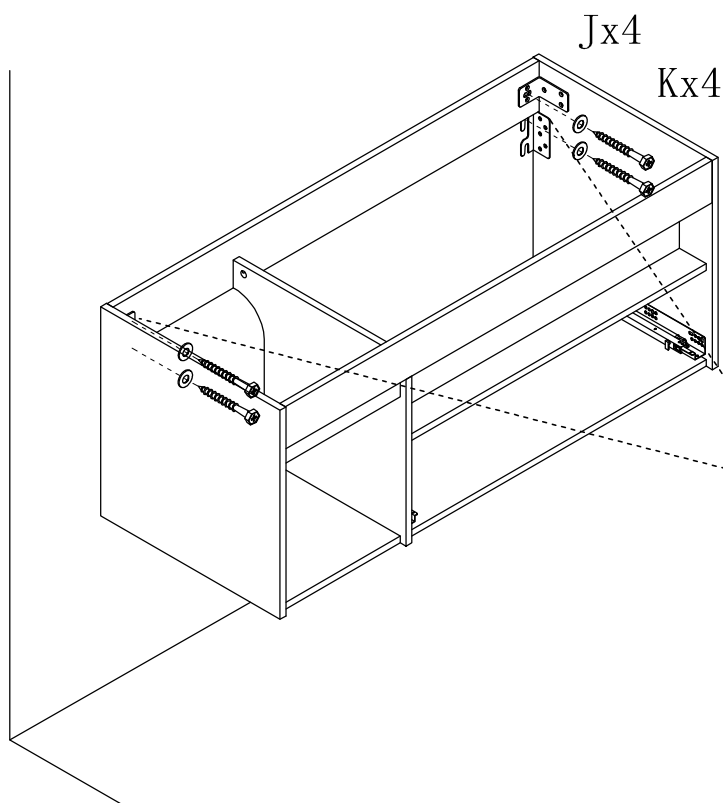

J 4PCS



K 4PCS

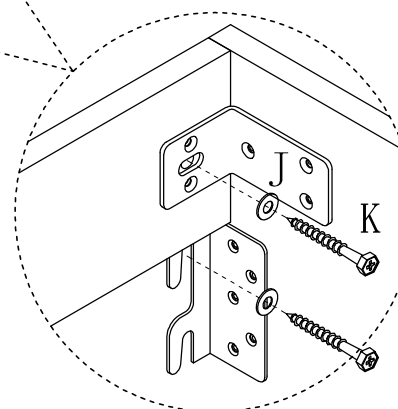


ASSEMBLY INSTRUCTION

Step 12

Cabinet Door Adjustment Instructions


Height adjustment:

- Locate the height adjustment screws on the hinge.
- Use the Phillips screwdriver to either tighten or loosen the screws to raise or lower the cabinet door as desired.

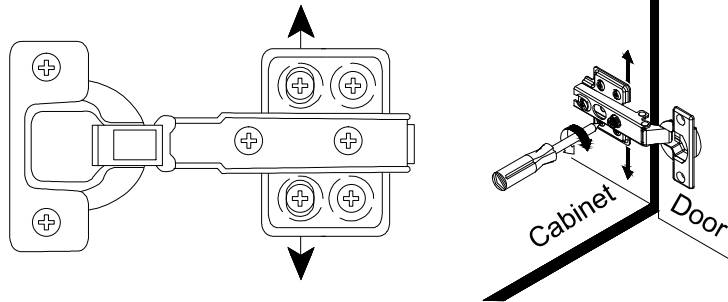


Side-to-side adjustment:

- If the cabinet door needs to be moved closer to or away from the cabinet frame, locate the side-to-side adjustment screws on the hinge.
- Use the Phillips screwdriver to adjust these screws and gradually move the door in the desired direction.

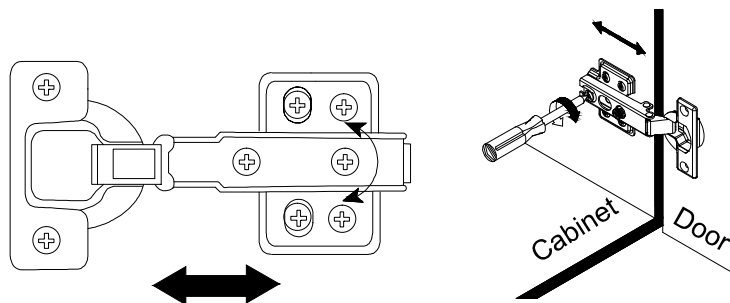


Depth adjustment (if applicable):

- Check if the cabinet door needs to be brought closer to or further away from the cabinet frame.
- For-depth adjustment, locate the depth adjustment screws on the hinge.
- Use the Phillips screwdriver to turn these screws clockwise or counterclockwise accordingly.

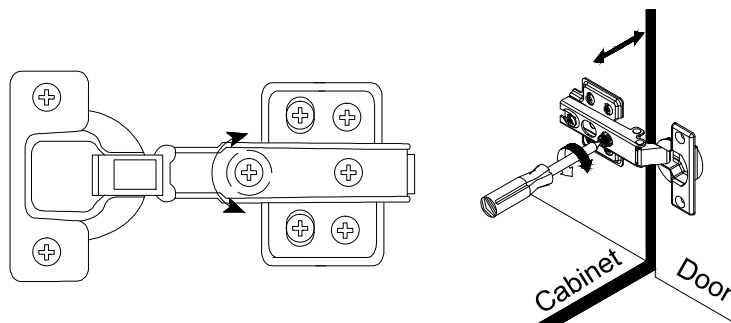

ASSEMBLY INSTRUCTION

Step 13

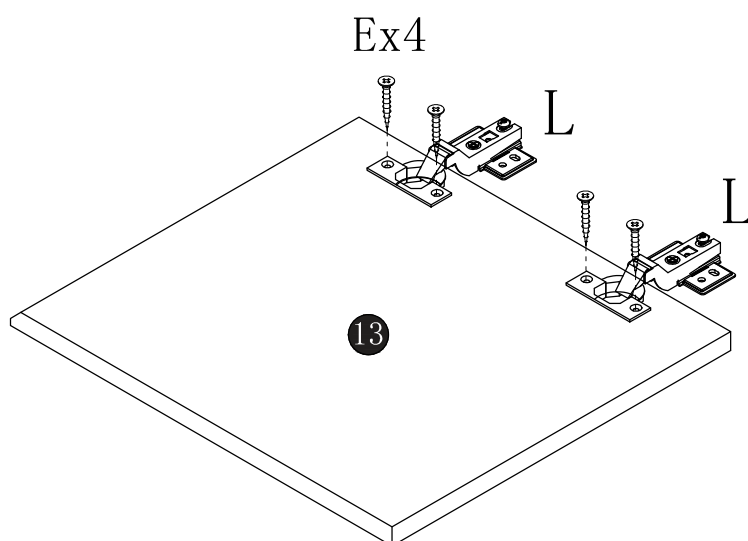


E 4PCS




Ø3.5*14

L 2PCS



Step 14

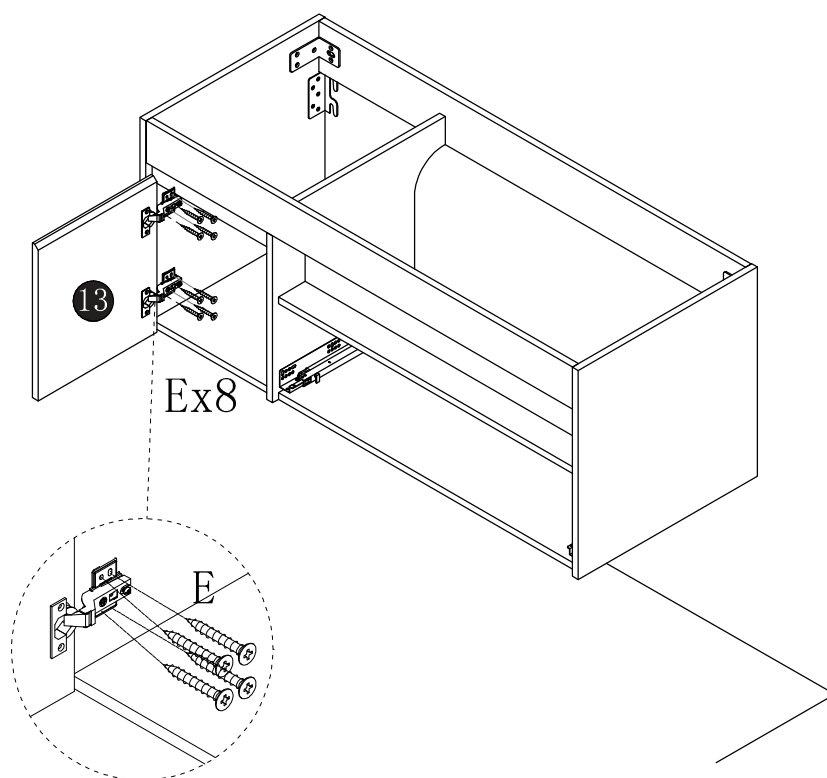



E 8PCS



Ø3.5*14

ASSEMBLY INSTRUCTION

Step 15

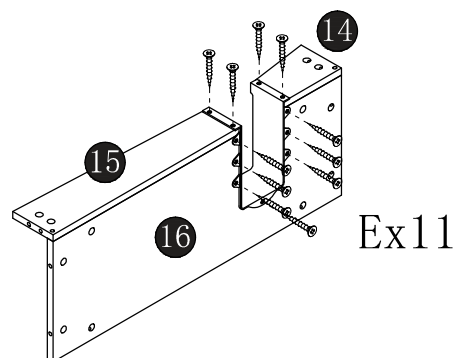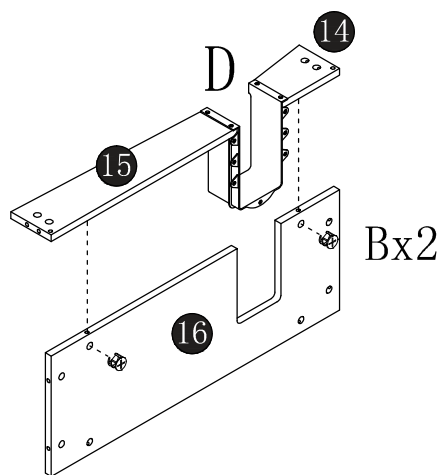


B 16PCS



Ø15*10mm



D 1PC



E 11PCS




Ø3.5*14

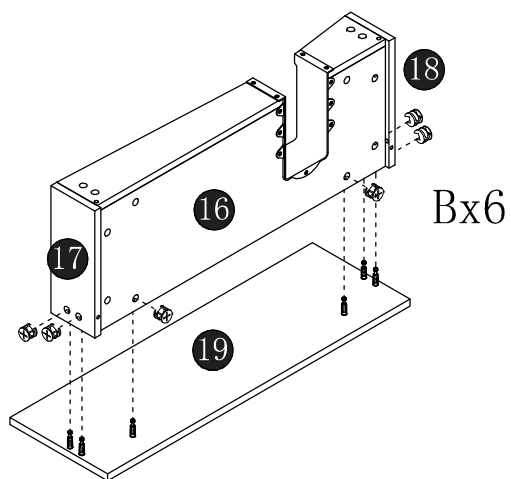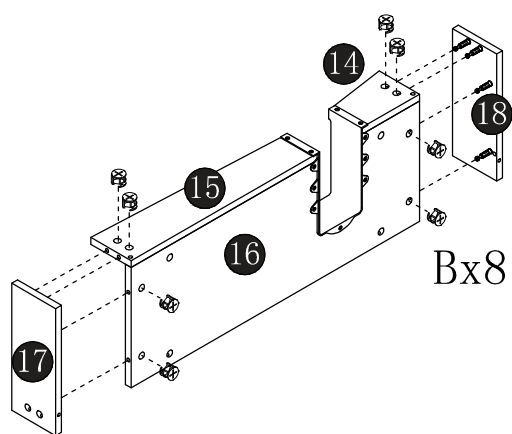


ASSEMBLY INSTRUCTION

Step 16

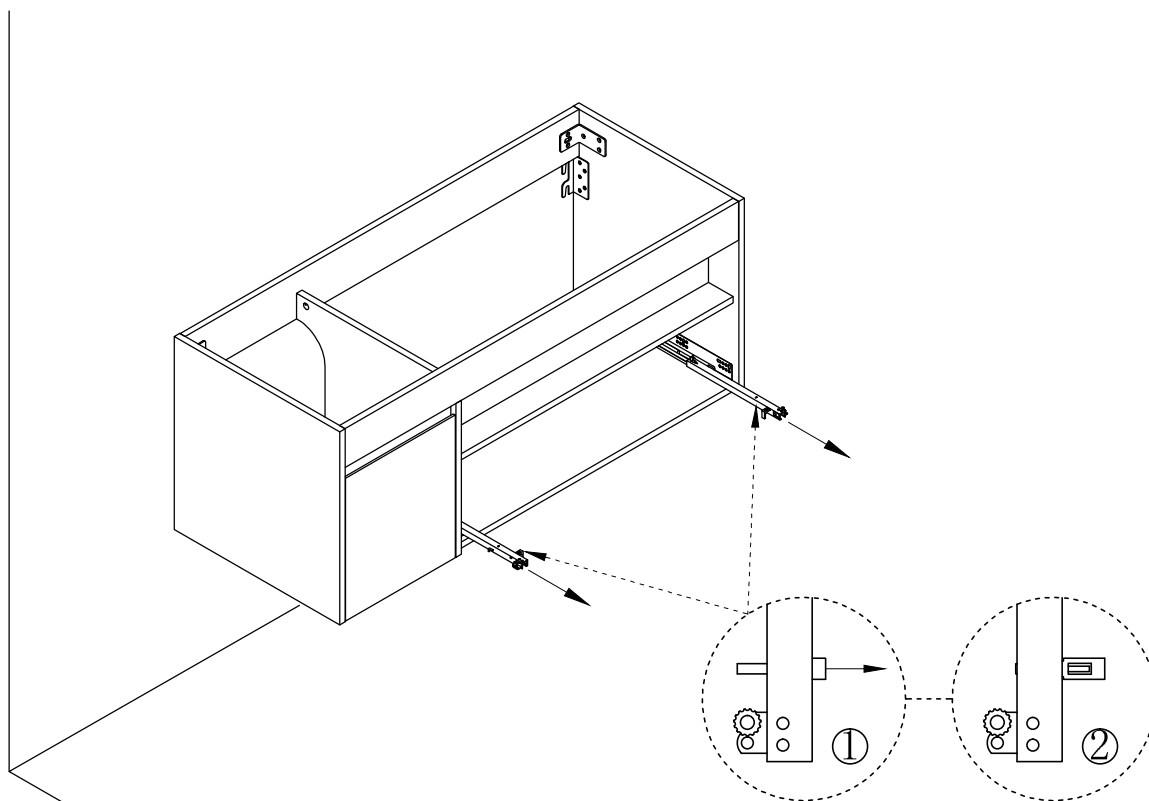


Step 17

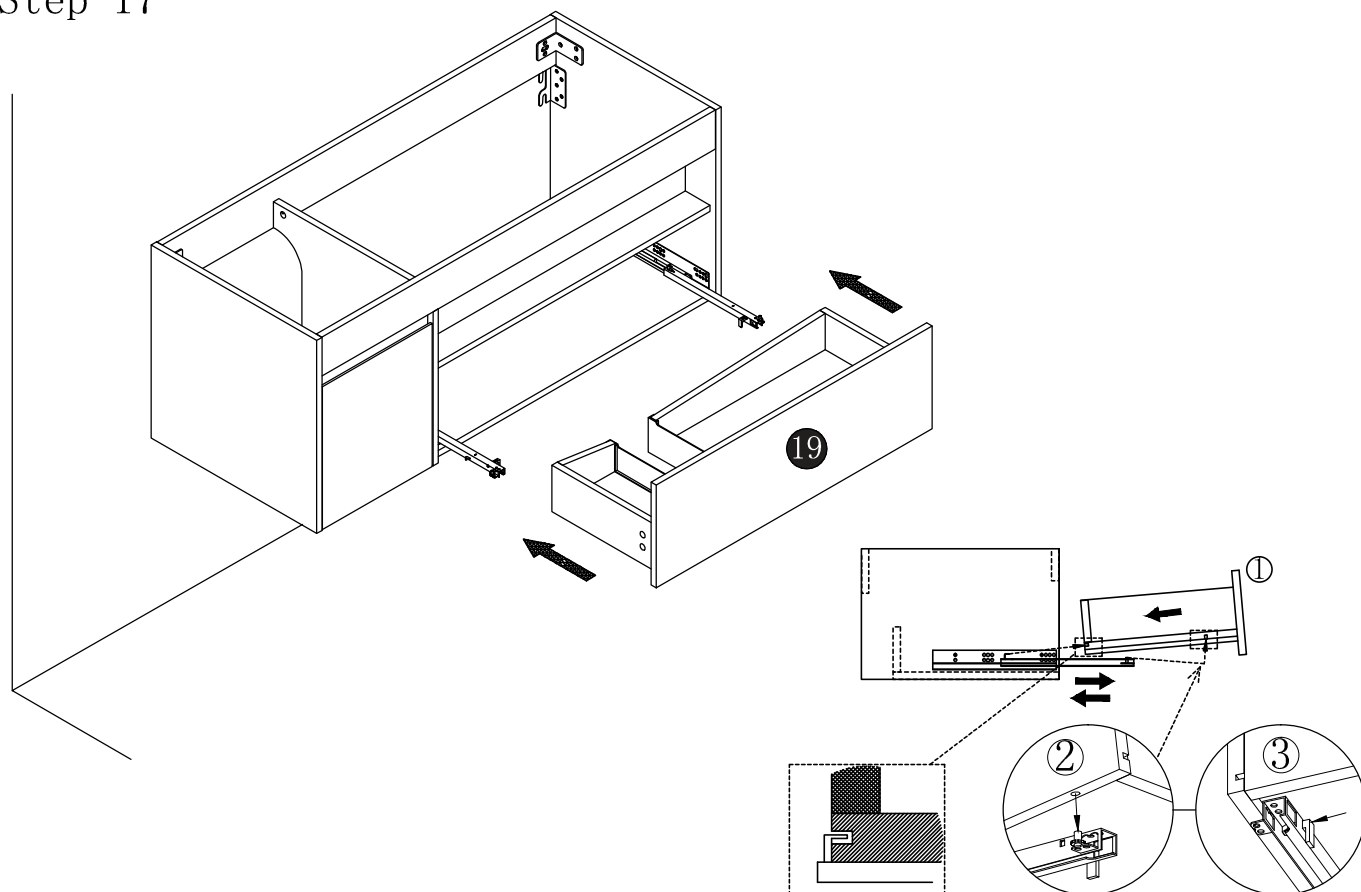


ASSEMBLY INSTRUCTION

Step 18

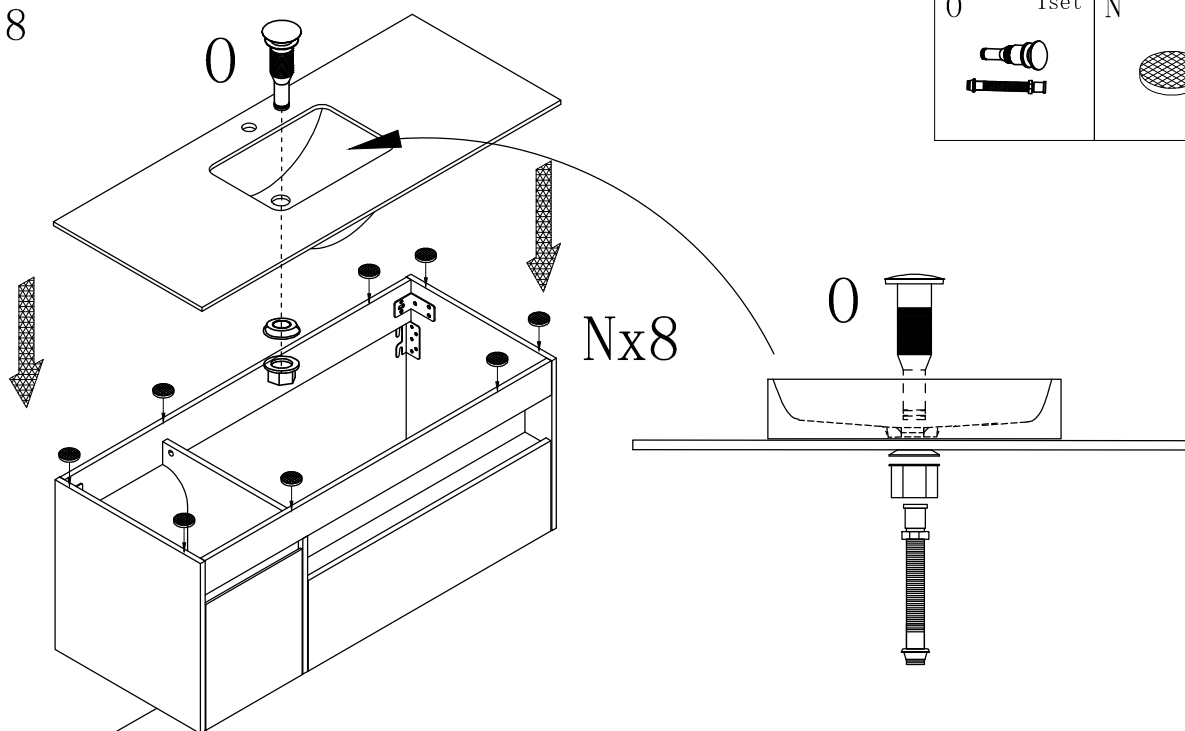

Step 19

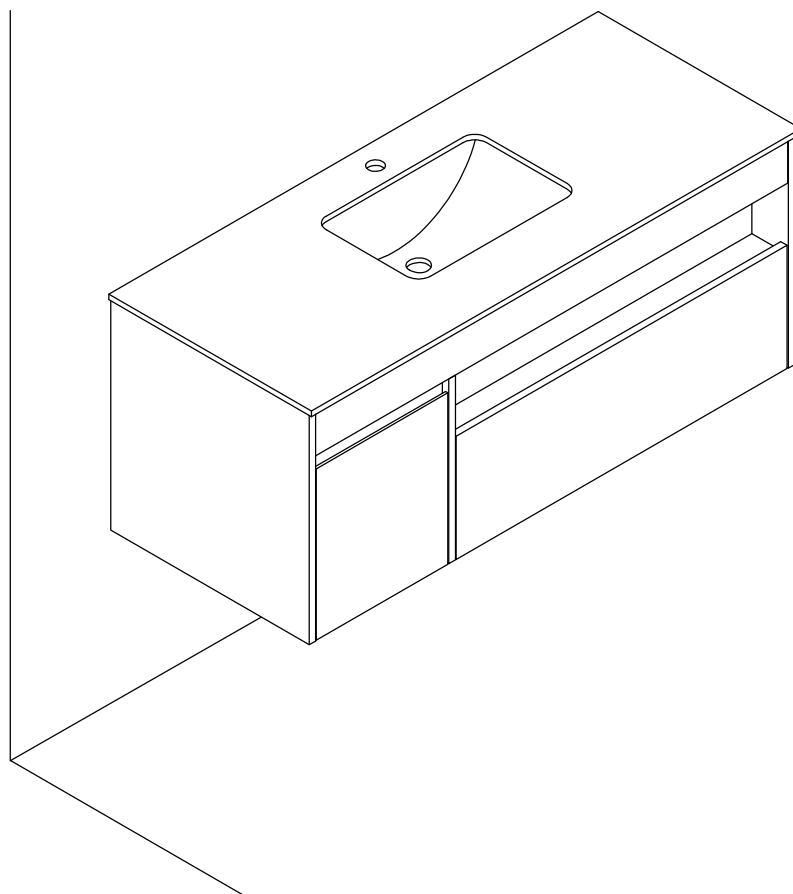

OK