


Storage Cabinet

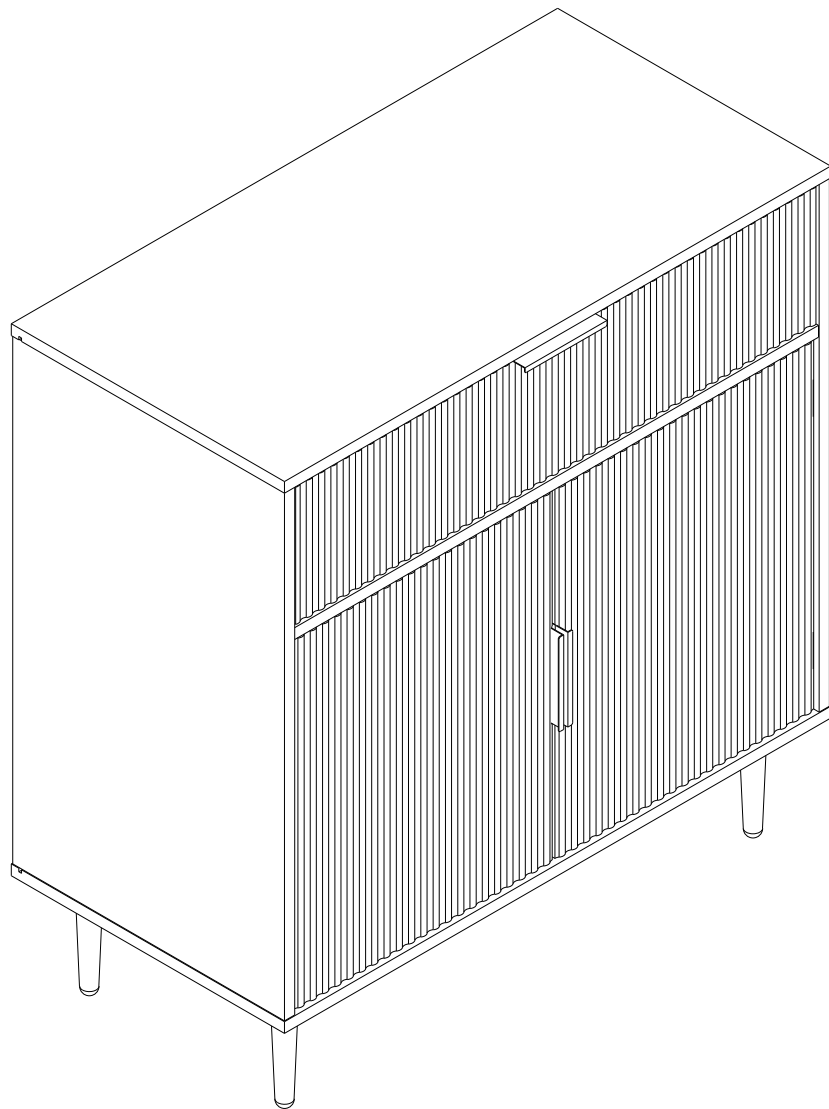

Made in China

For a Hassle-Free Installation


- 1.Ensure you have received all cartons and familiarize yourself with the workload. Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.
 2. Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.
 3. Read instructions carefully and check no parts are missing.
 4. Lay out all hardware on a soft surface so you can easily identify them.
 5. Carefully identify all components according to the labeled alphabet to ensure that the parts are in the correct place.
 6. Install your new product carefully following the instructions. Don't skip ahead!
- * If any parts are missing or damaged, we will gladly ship you replacement parts free of charge. Please contact us order ID and the Store Name of your purchase, we're always here to help :)

WARNING













Serious or fatal injury may occur from unexpected assembly or use.

- 1.During the assembly process, keep all parts away from babies or children.
- 2.Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
- 3.Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
- 4.Unless specially designed to accommodate, do not set heavy objects on top of this product.
- 5.Place the heaviest items on the lowest shelf.
- 6.Never allow children to climb or bang on drawers, doors or shelves.






Parts List

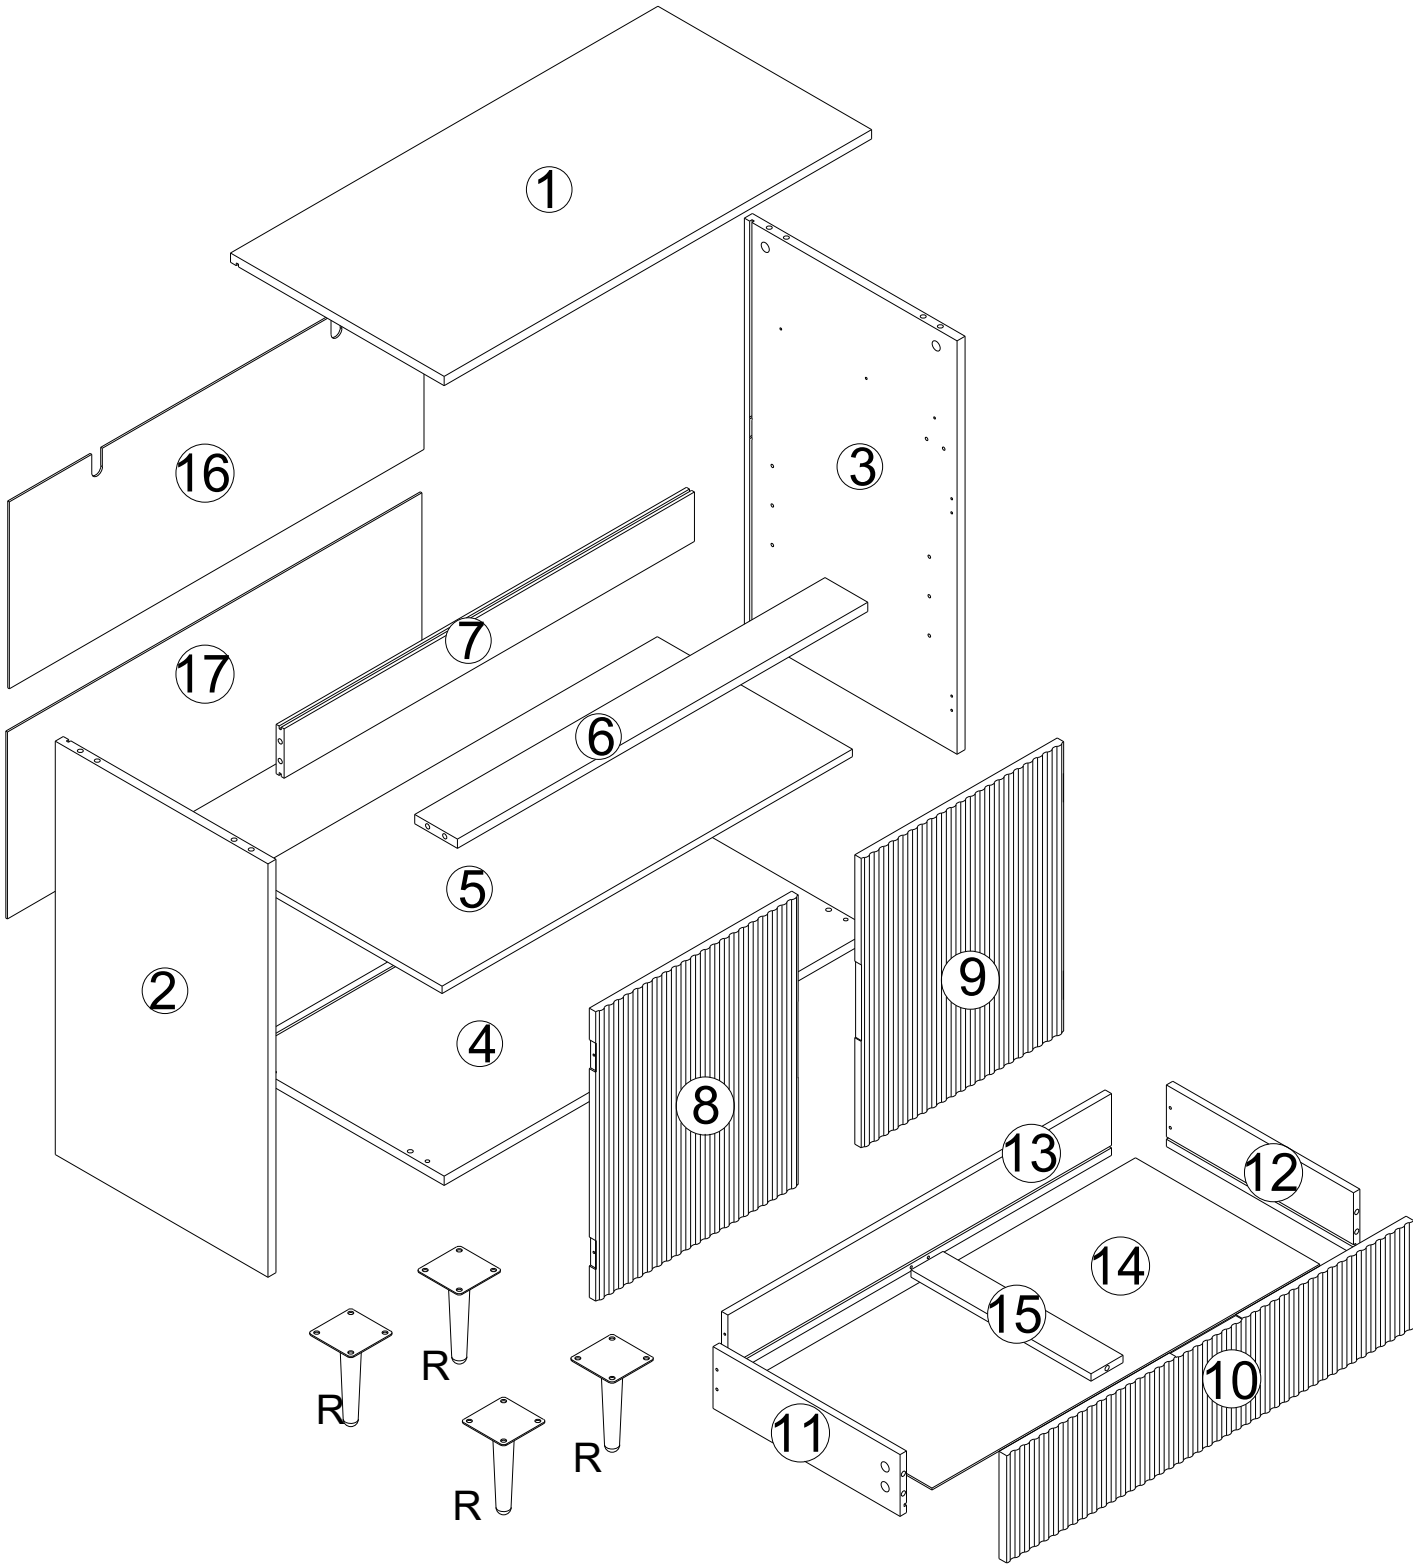





Parts List








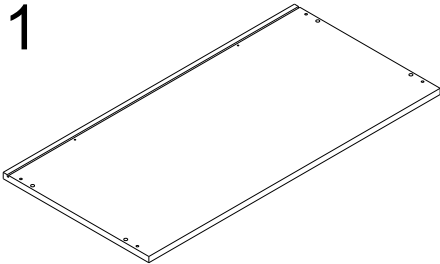
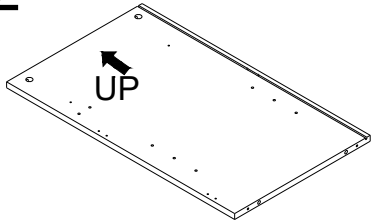
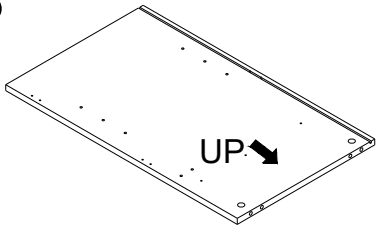
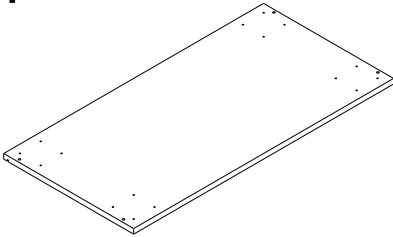
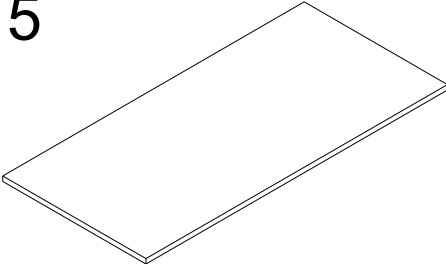
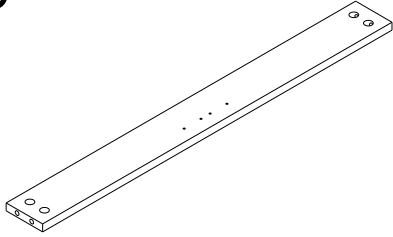
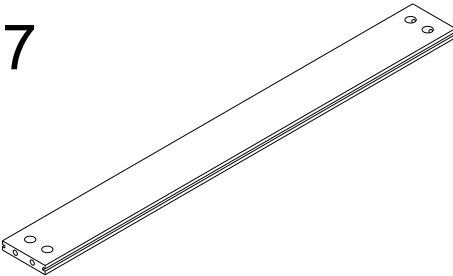
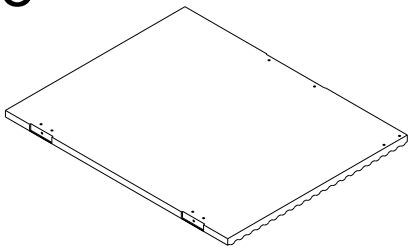
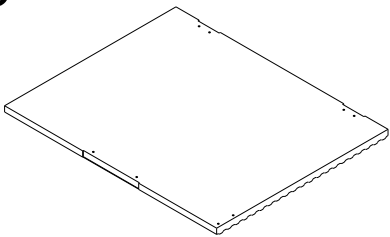
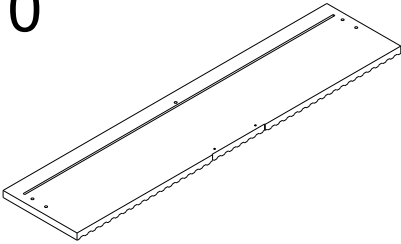
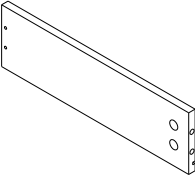
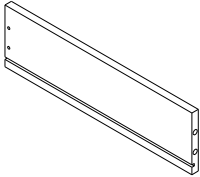
1  800*400*15mm 1 PC	2  670*398*15mm 1 PC	3  670*398*15mm 1 PC
4  800*400*15mm 1 PC	5  768*365*12mm 1 PC	6  768*80*15mm 1 PC
7  768*80*15mm 1 PC	8  469*379*15mm 1 PC	9  469*379*15mm 1 PCS
10  762*174*15mm 1 PC	11  350*100*12mm 1 PC	12  350*100*12mm 1 PC

Parts List

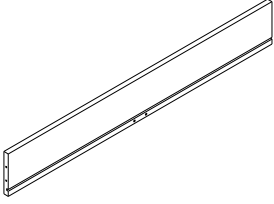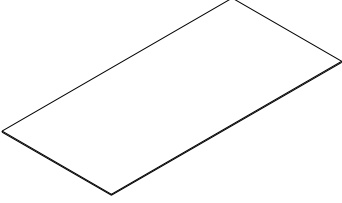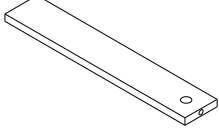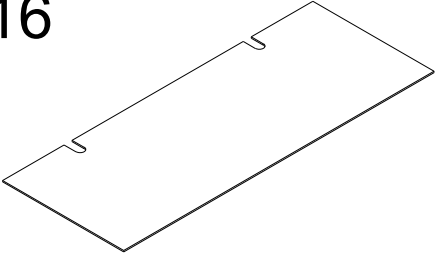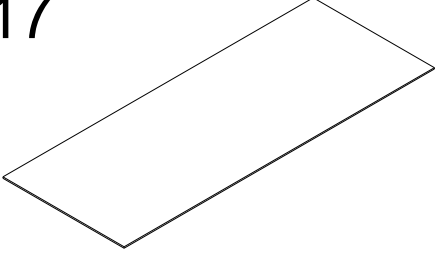13  718*100*12mm1 PC	14  726*345*3mm1 PC	15  337*60*12mm1 PC
16  776*303*3mm1 PC	17  776*303*3mm1 PC	





Hardware List

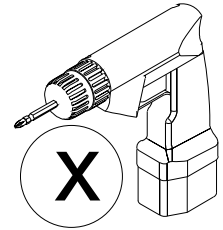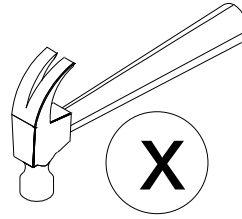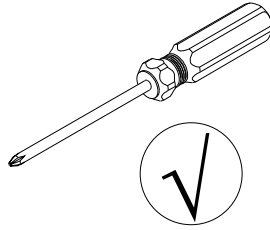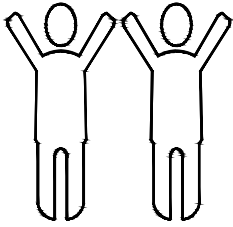

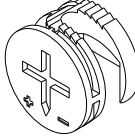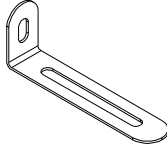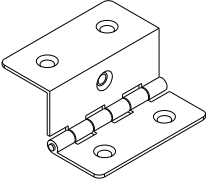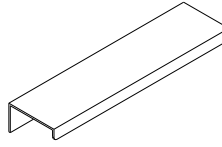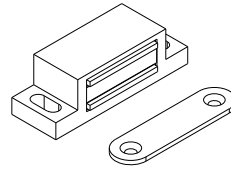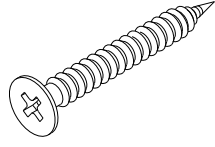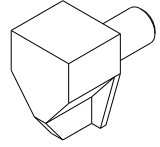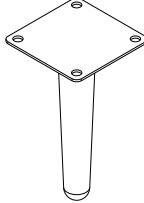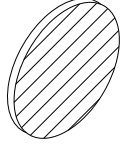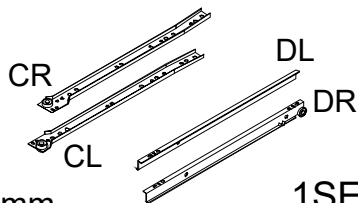A  Ø6x36mm 17PCS	B  Ø15x9.2mm 17PCS	C  Ø8*30mm 8PCS
D  M5x38mm 2PCS	E  Ø8x40mm 2PCS	F  65x32x15 2 PCS
G  M3x12mm 2PCS	H  M3x16mm 12PCS	I  12.5x14x9.5 8 PSC
J  42*20*1mm (23) 4PCS	K  120*31*16mm (96) 3PCS	L  45*15*14mm 2PCS
M  M3.5x12mm 40PCS	N  M4x14mm 16PCS	O  M3.5x40mm 6PCS
P  16*10.5*15.5(Ø5) 4PCS	R  150H 4PCS	S  Ø20mm 8PCS
T  350mm 1SET	Q  M5*40 4PCS	W  M4 1PC

Assembly Steps


CAM BOLT INSTALLATION AS BELOW:

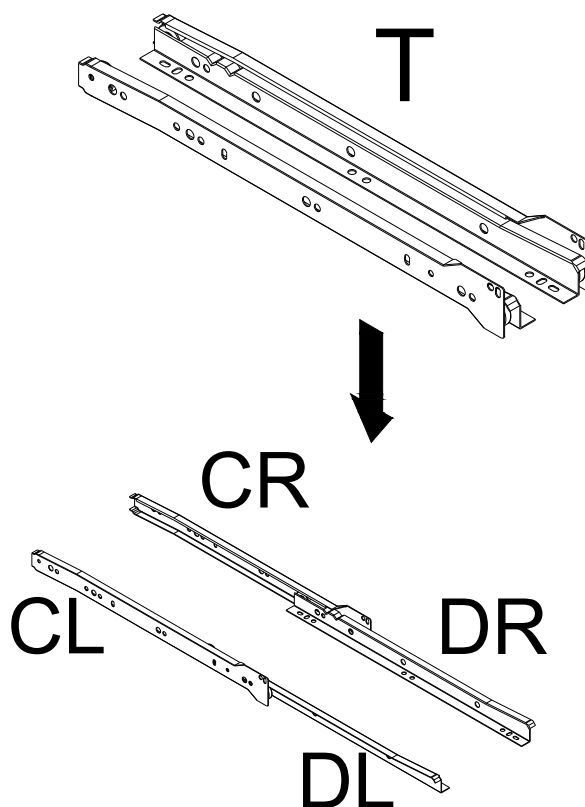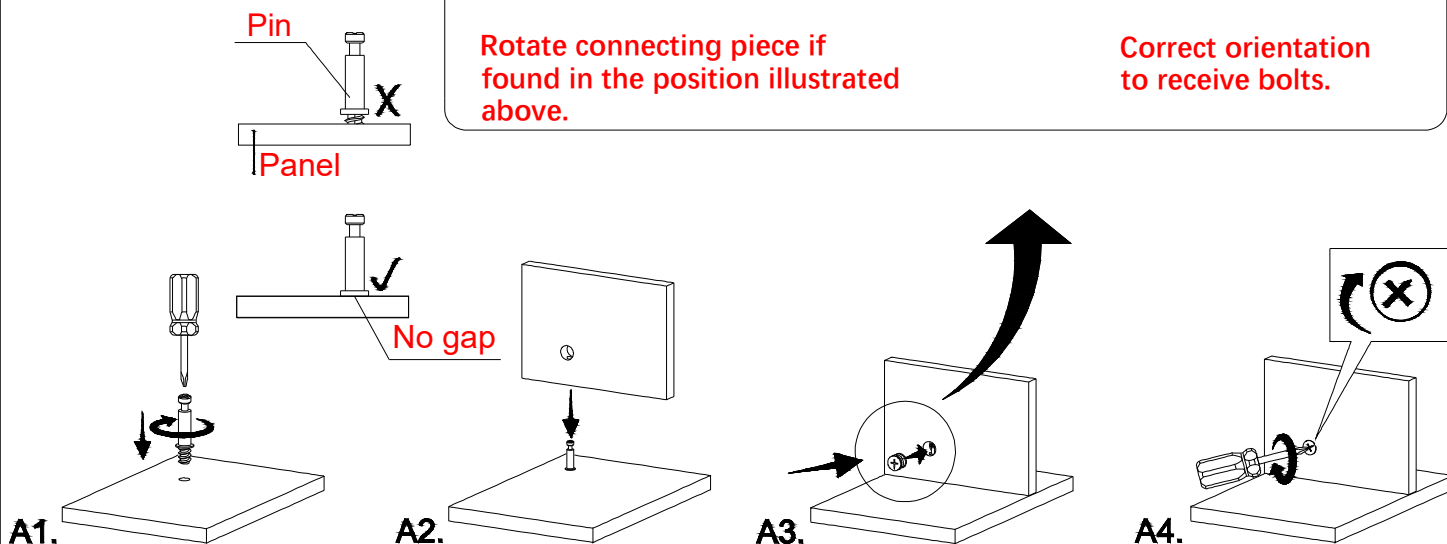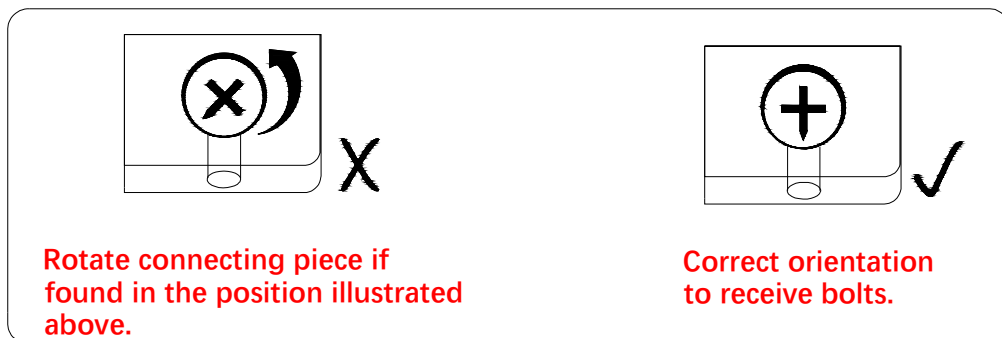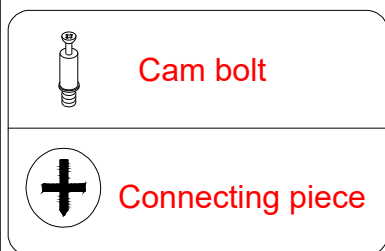


T*1SET

Assembly Steps

STEP 1

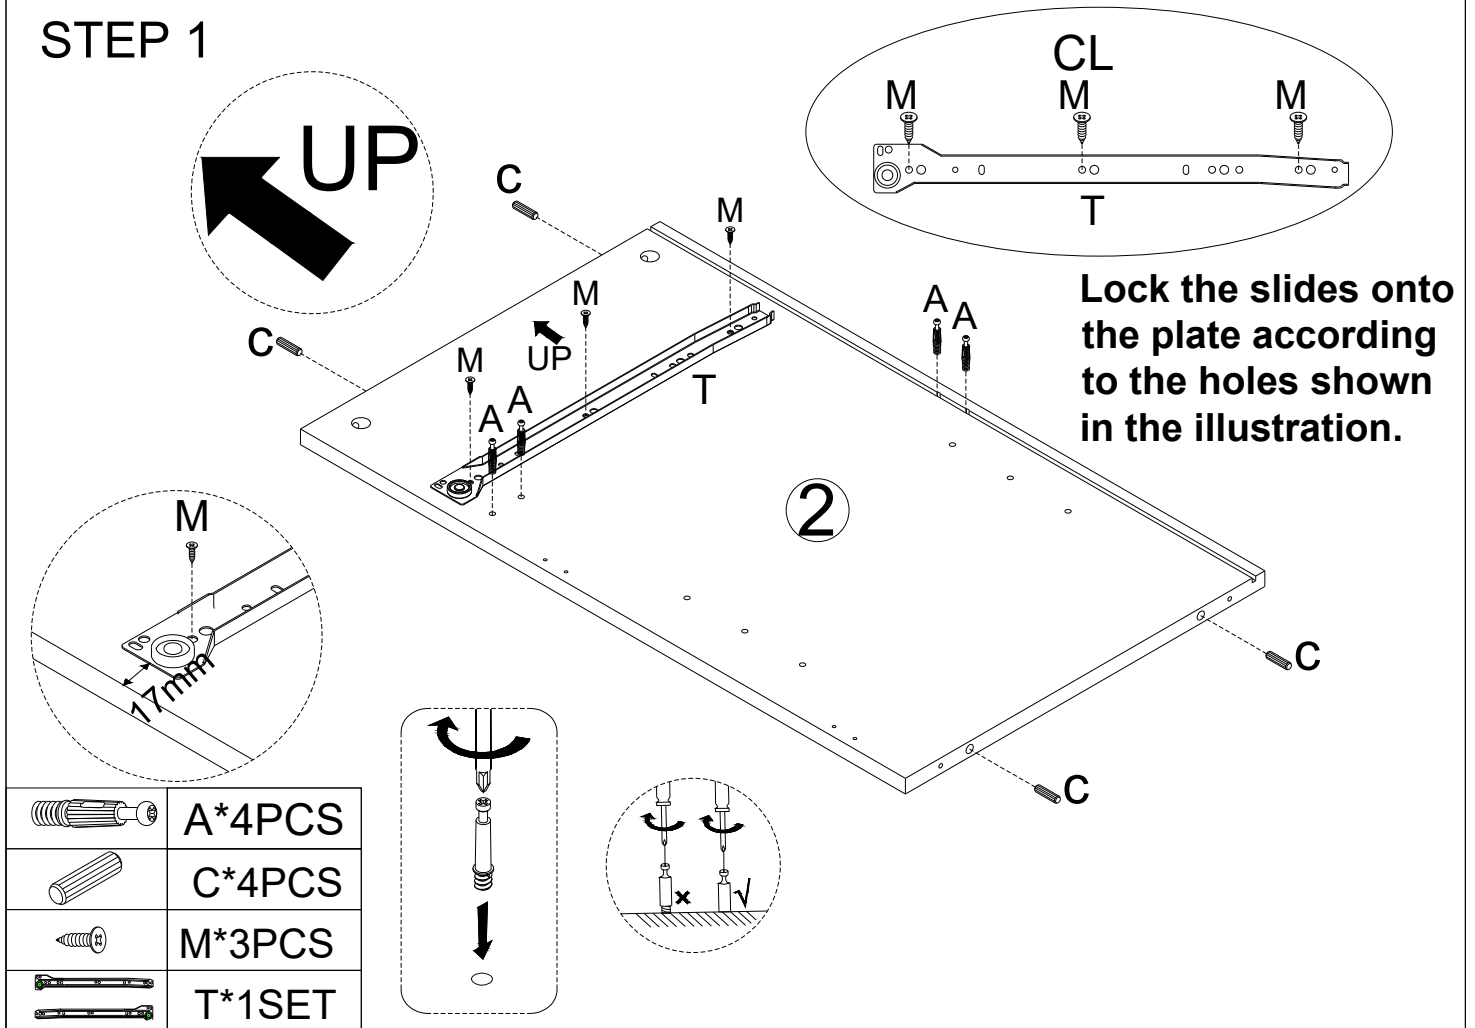


STEP 2

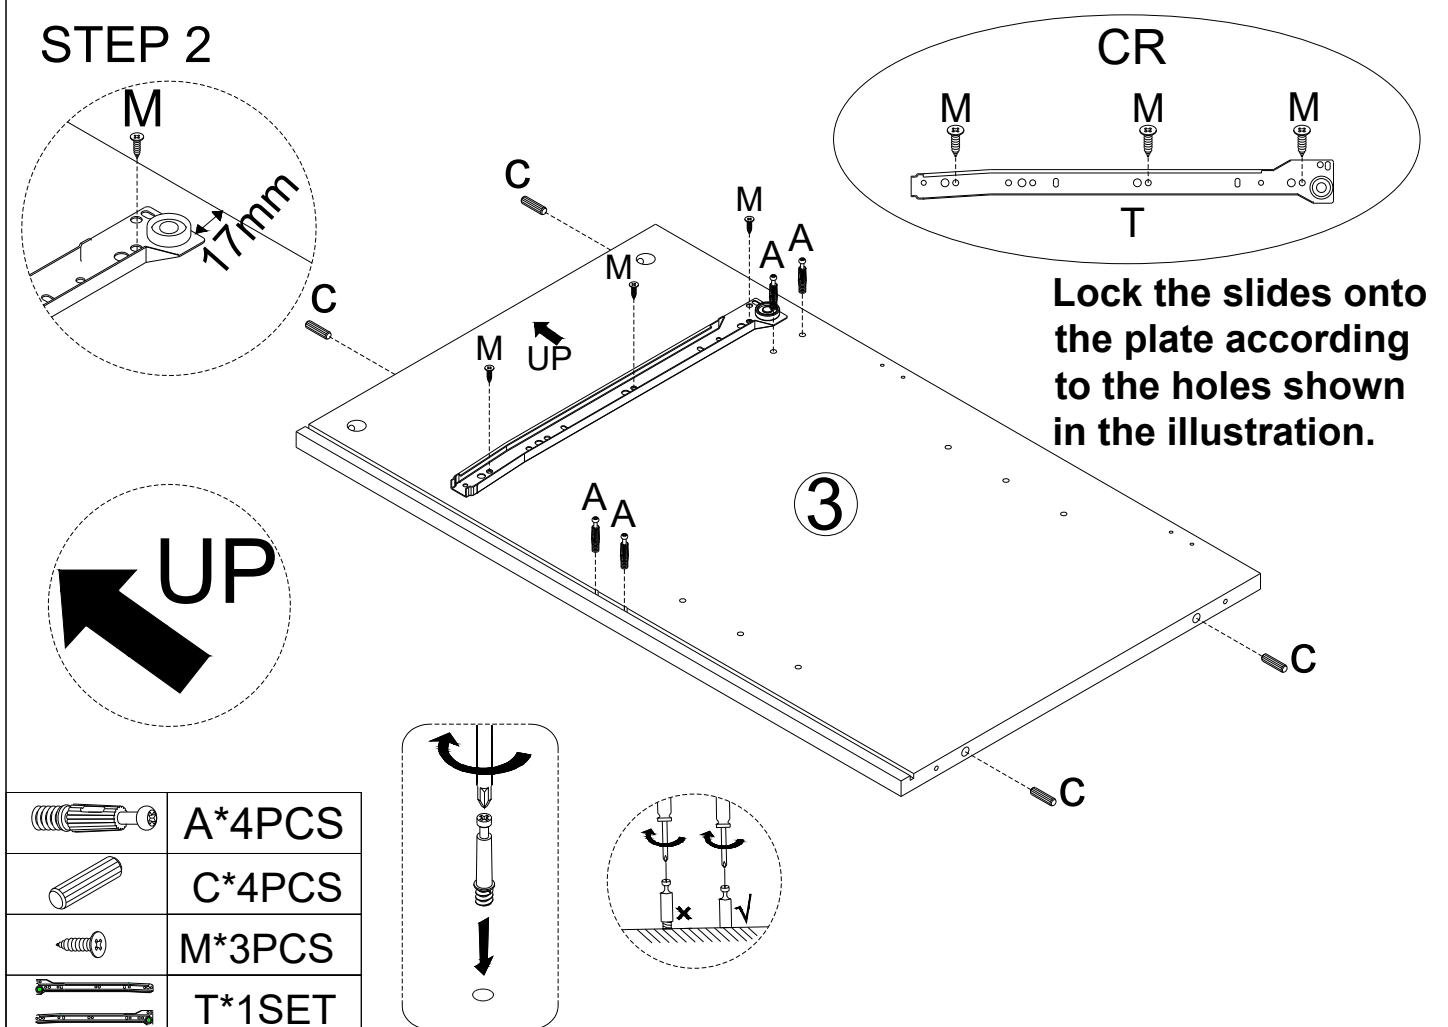


Assembly Steps

STEP 3

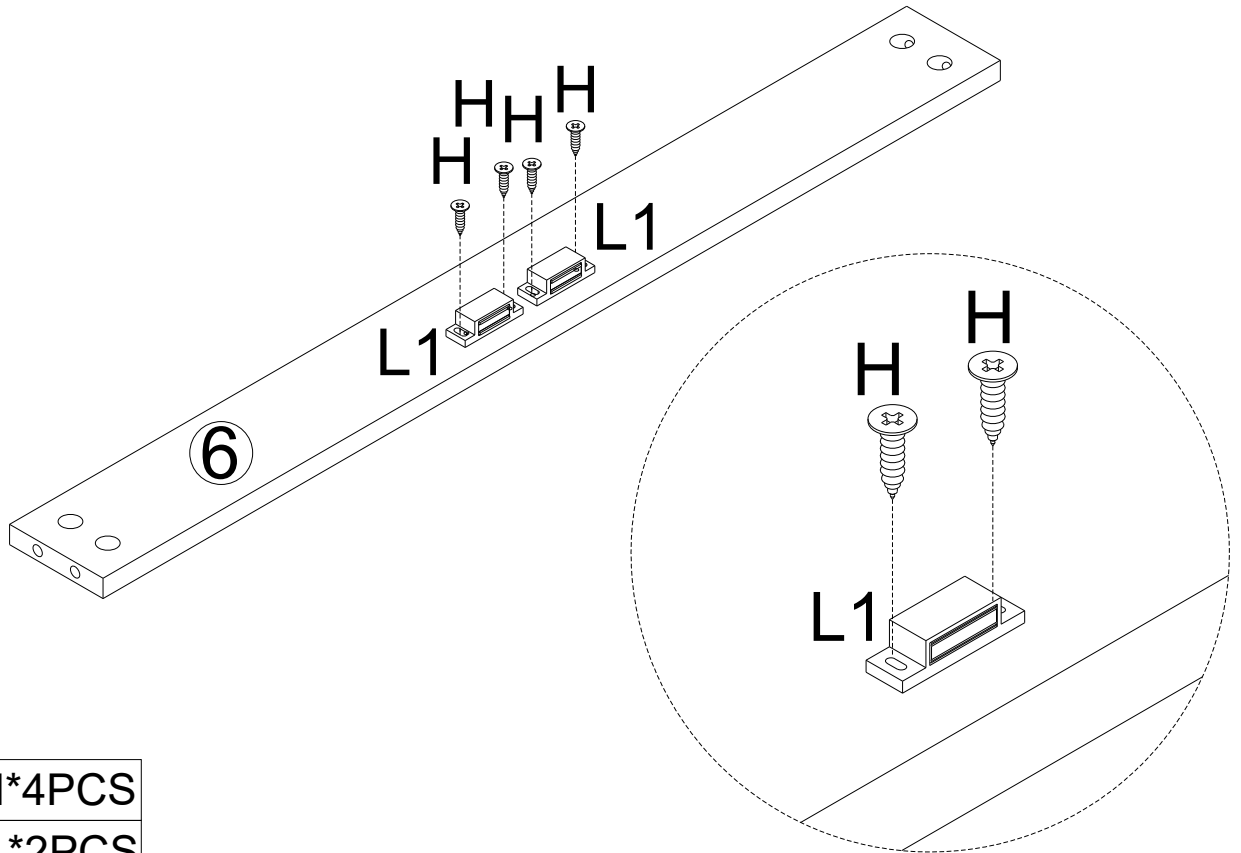

	H*4PCS
	L1*2PCS


STEP 4

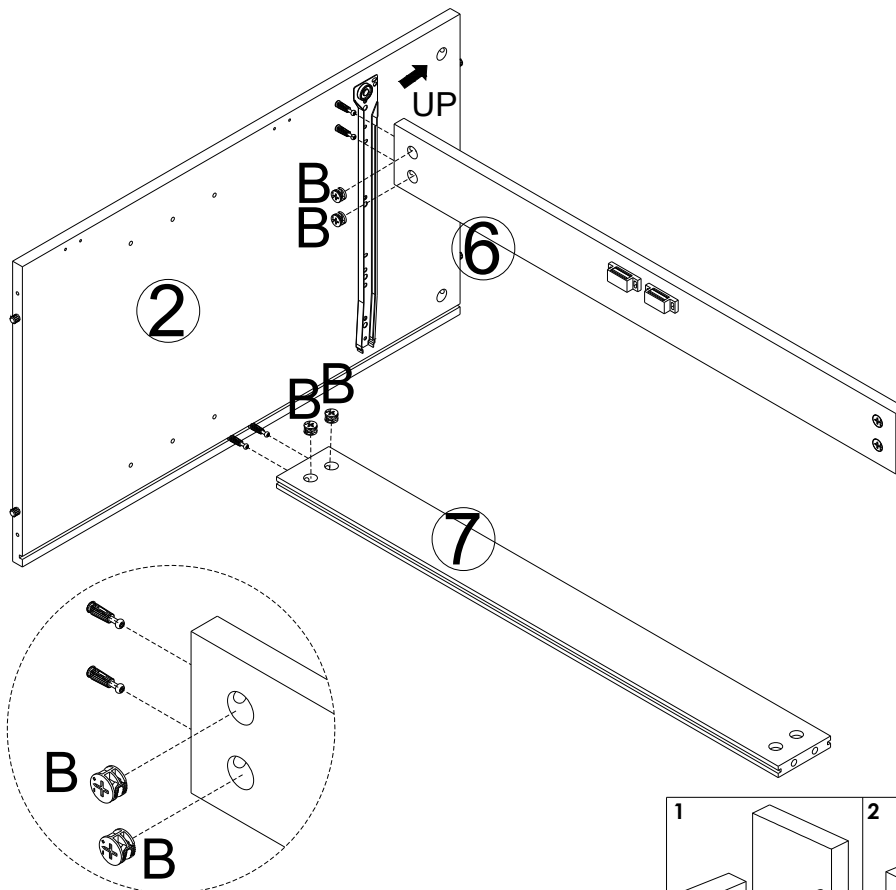

	B*4PCS
---	--------


Assembly Steps

STEP 5

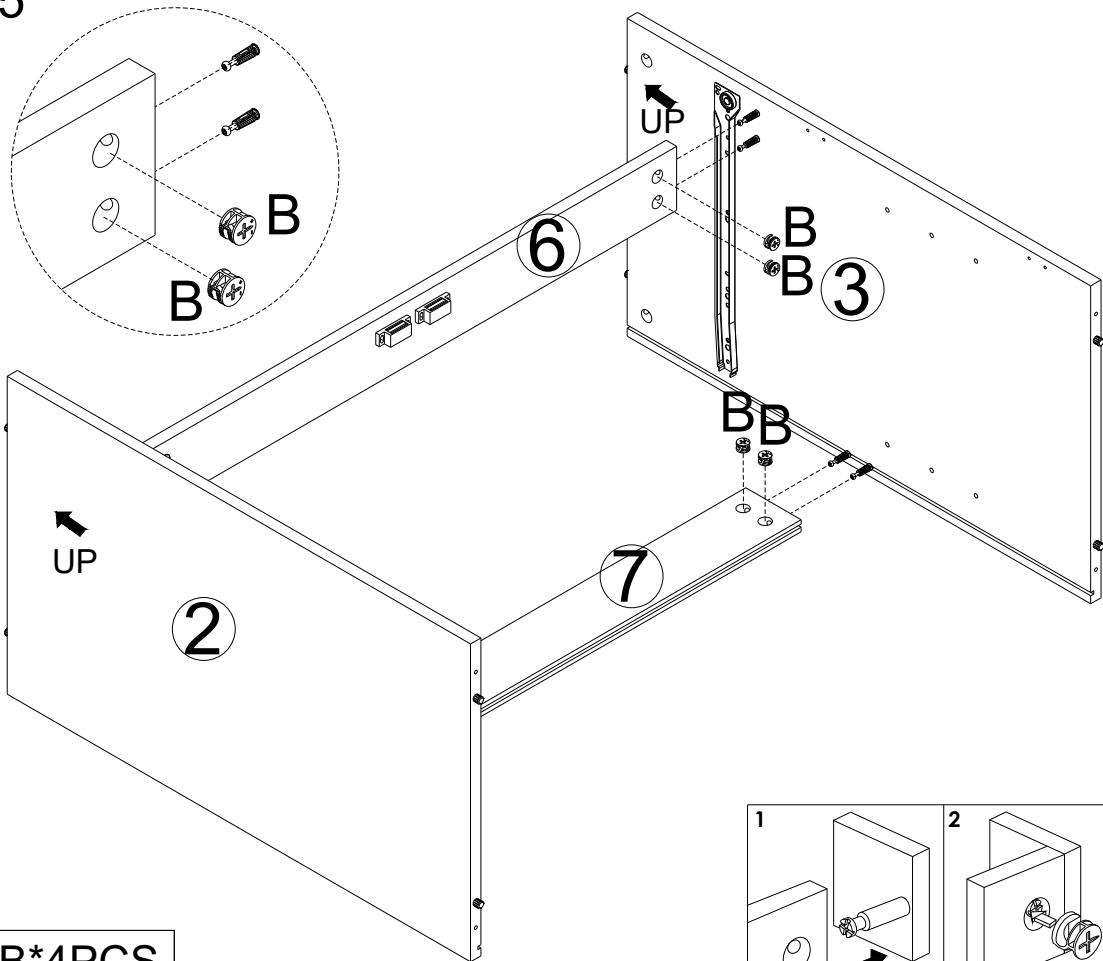

B*4PCS


STEP 6

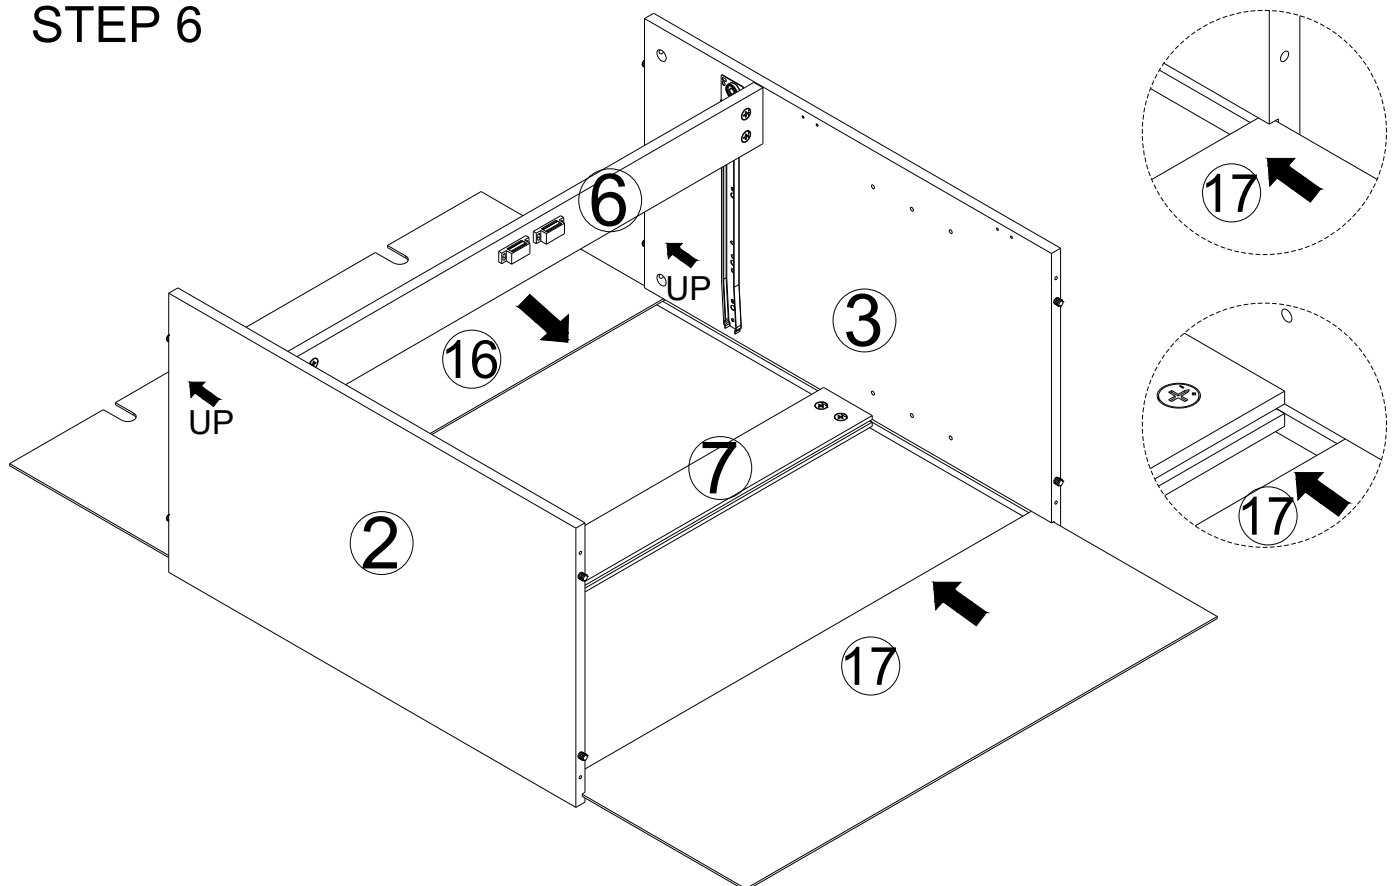

**Thin back board needs to be in side the slot,
other wise blocks the opposite plate montage.**


Assembly Steps

STEP 7

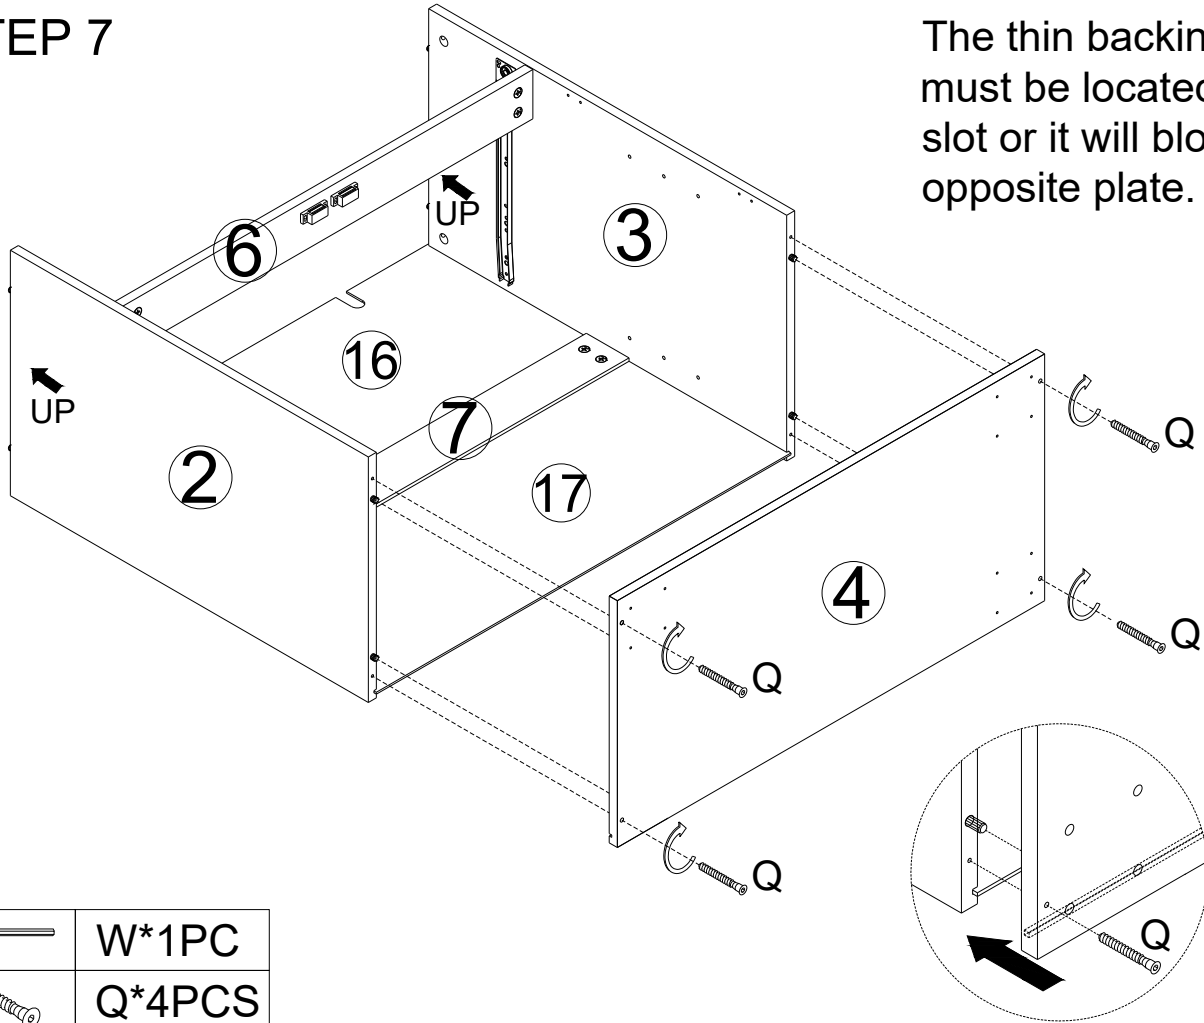

	W*1PC
	Q*4PCS


STEP 8

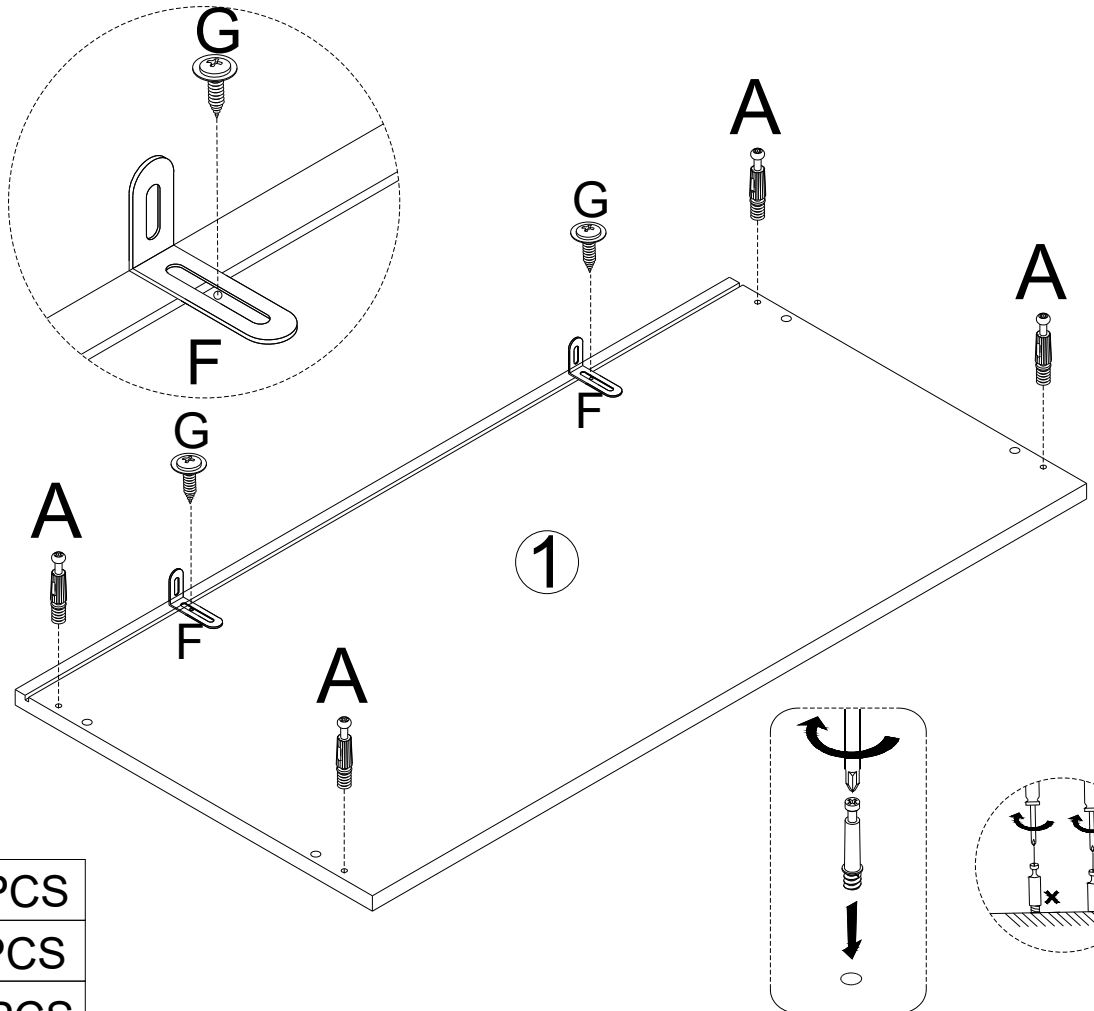



	A*4PCS
	F*2PCS
	G*2PCS

Assembly Steps

STEP 9

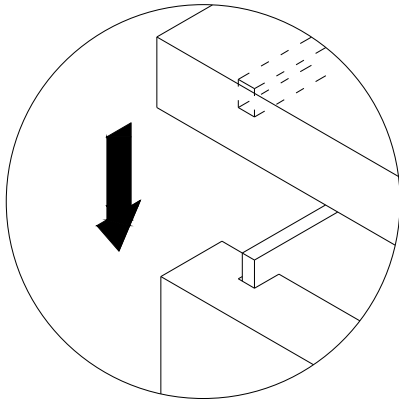


The thin backing plate must be located in the slot or it will block the opposite plate.

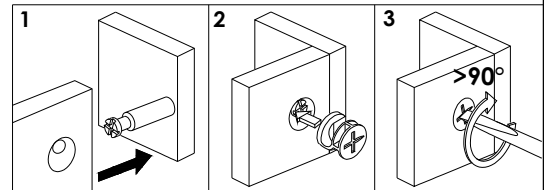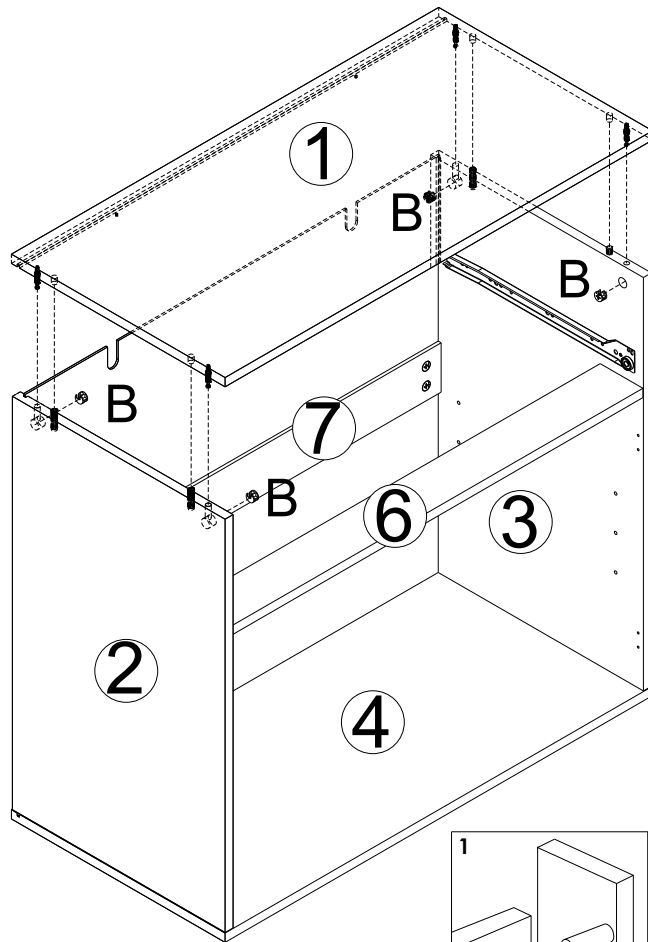

B*8PCS

STEP 10

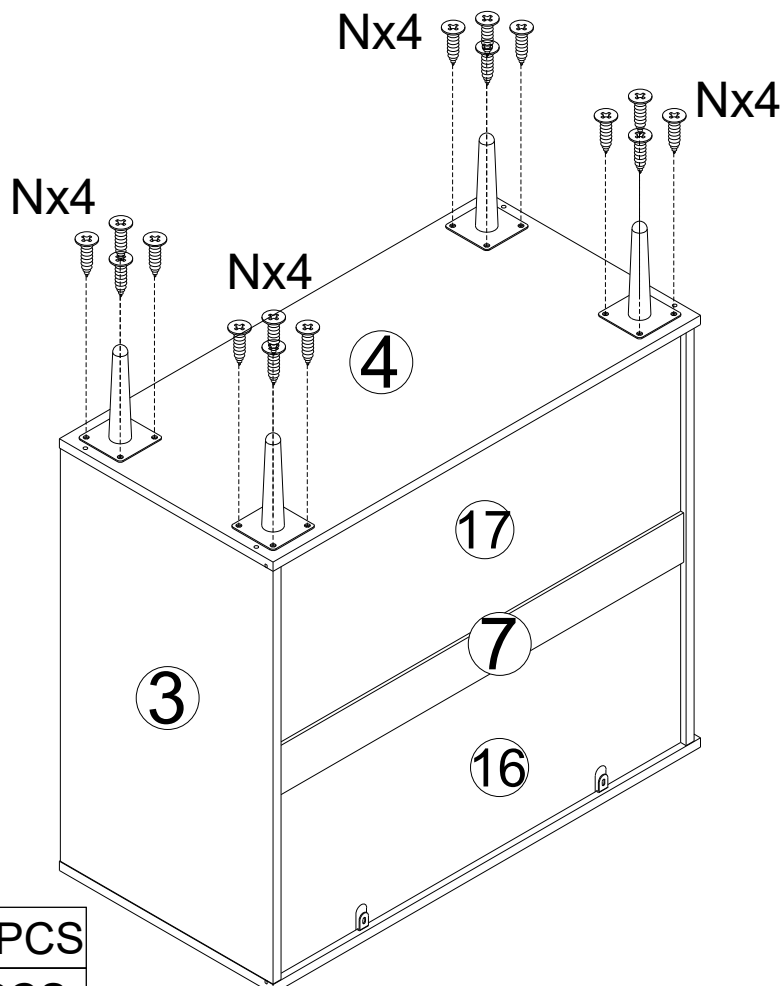


N*16PCS



R*4PCS



Assembly Steps

STEP 11

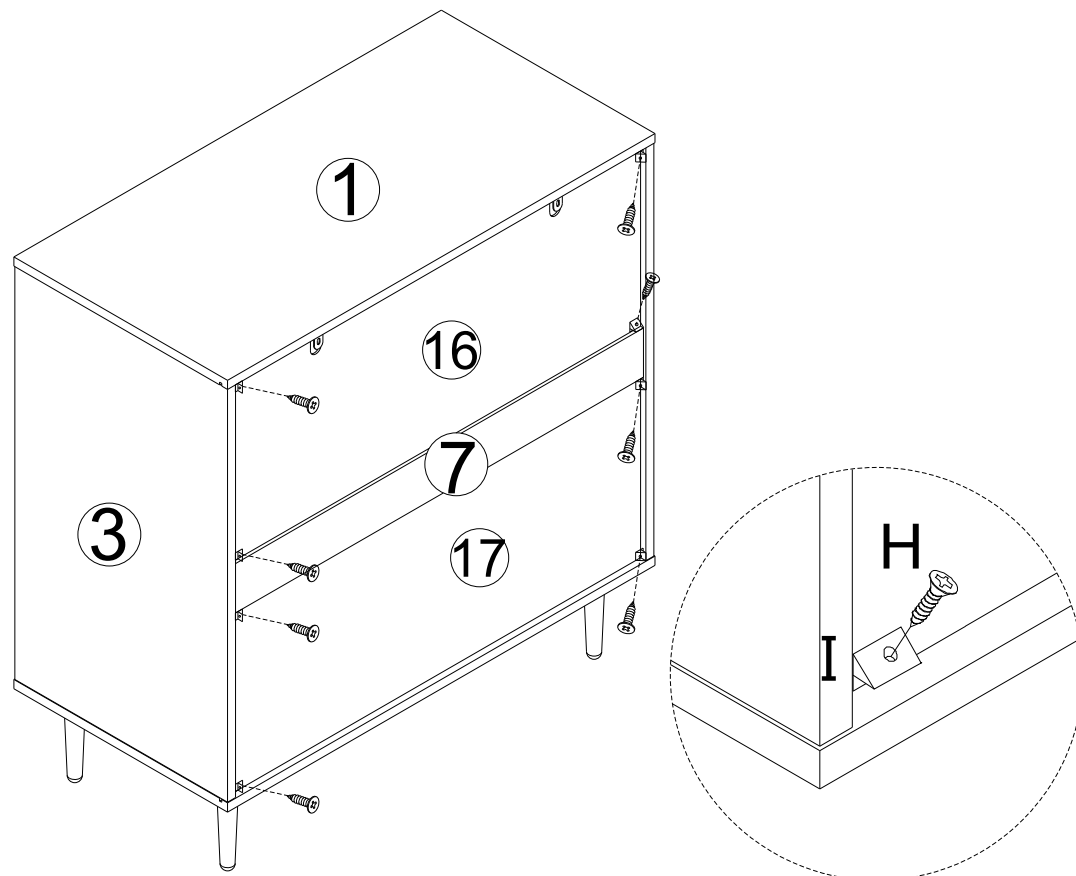

	H*8PCS
	I*8PCS


STEP 12

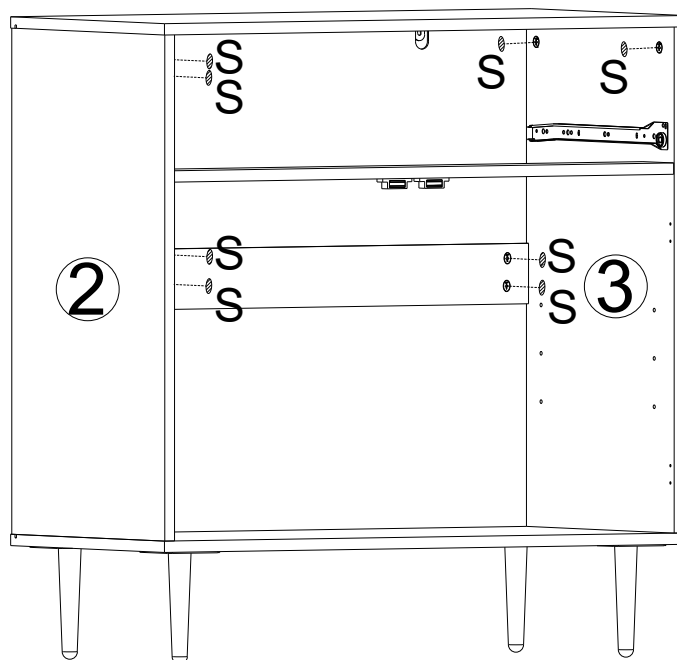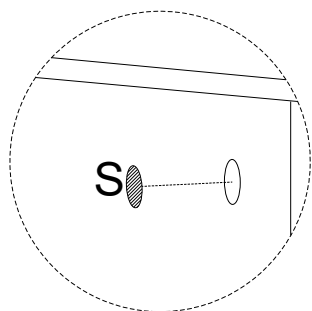


	S*8PCS
---	--------

Assembly Steps

STEP 13

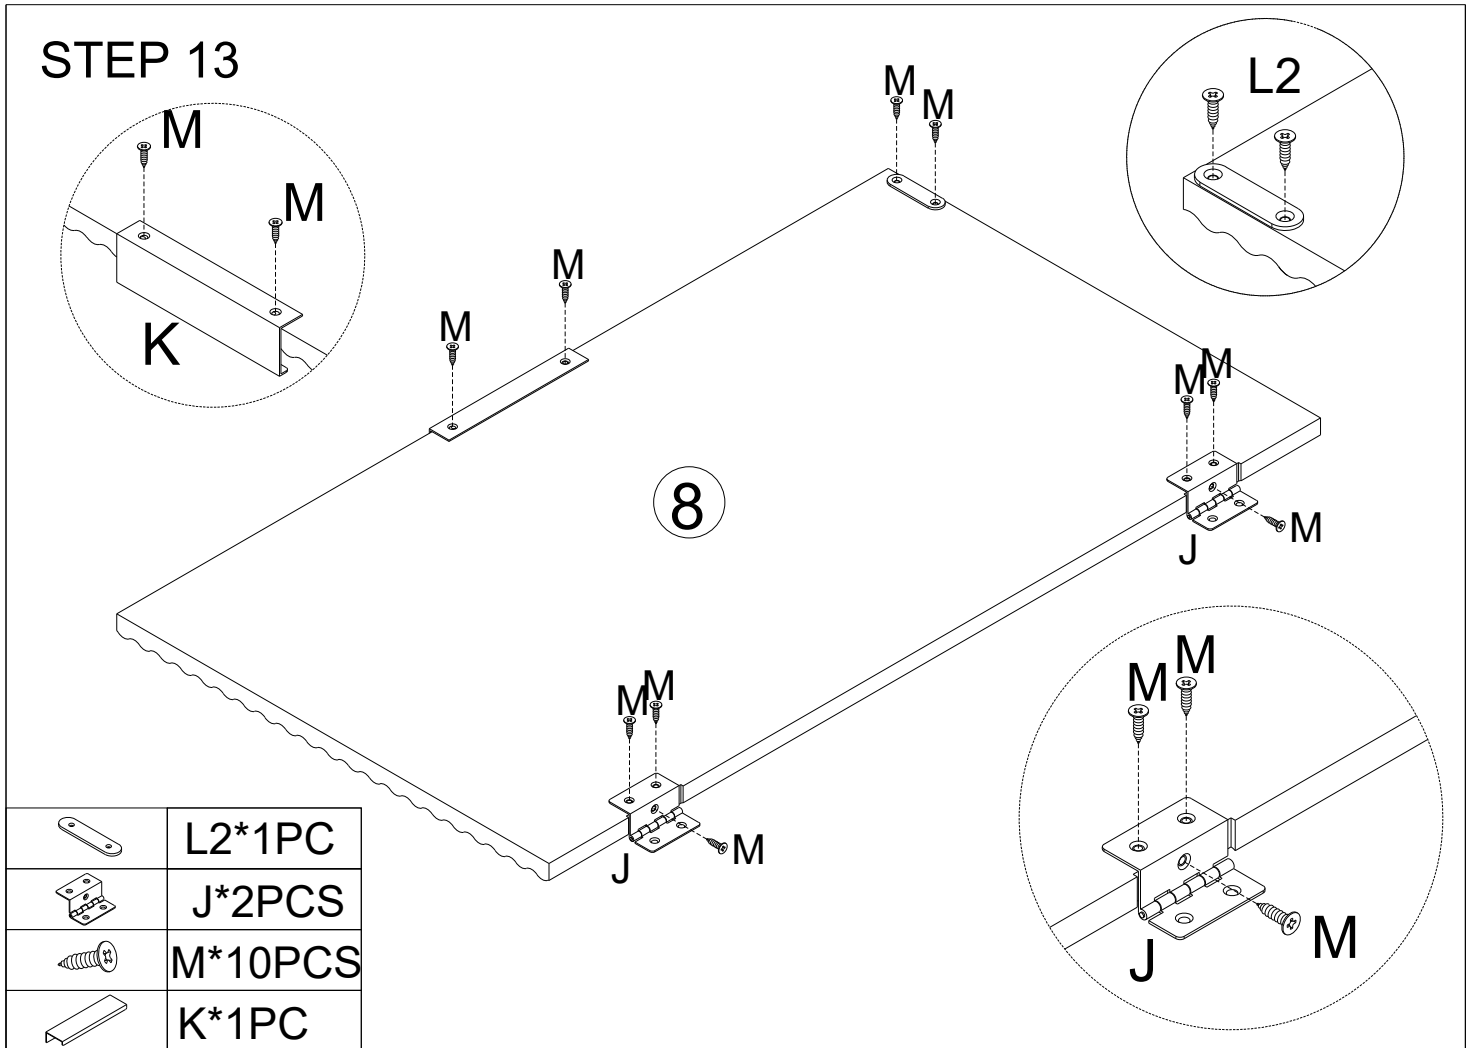


STEP 14

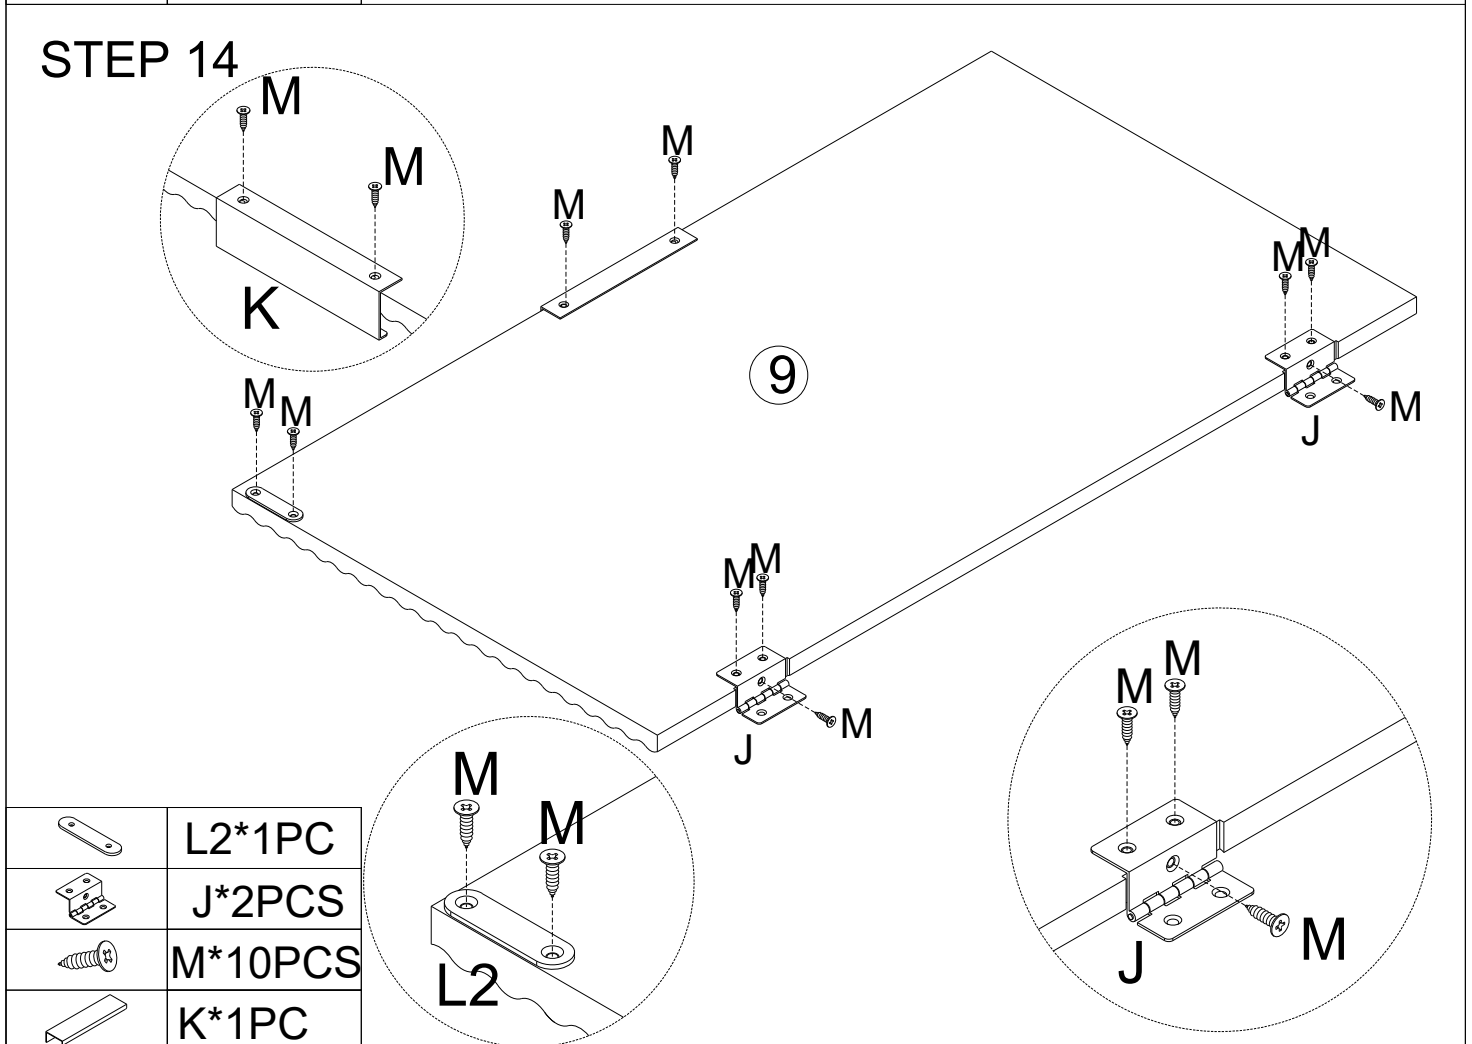


Assembly Steps

STEP 15

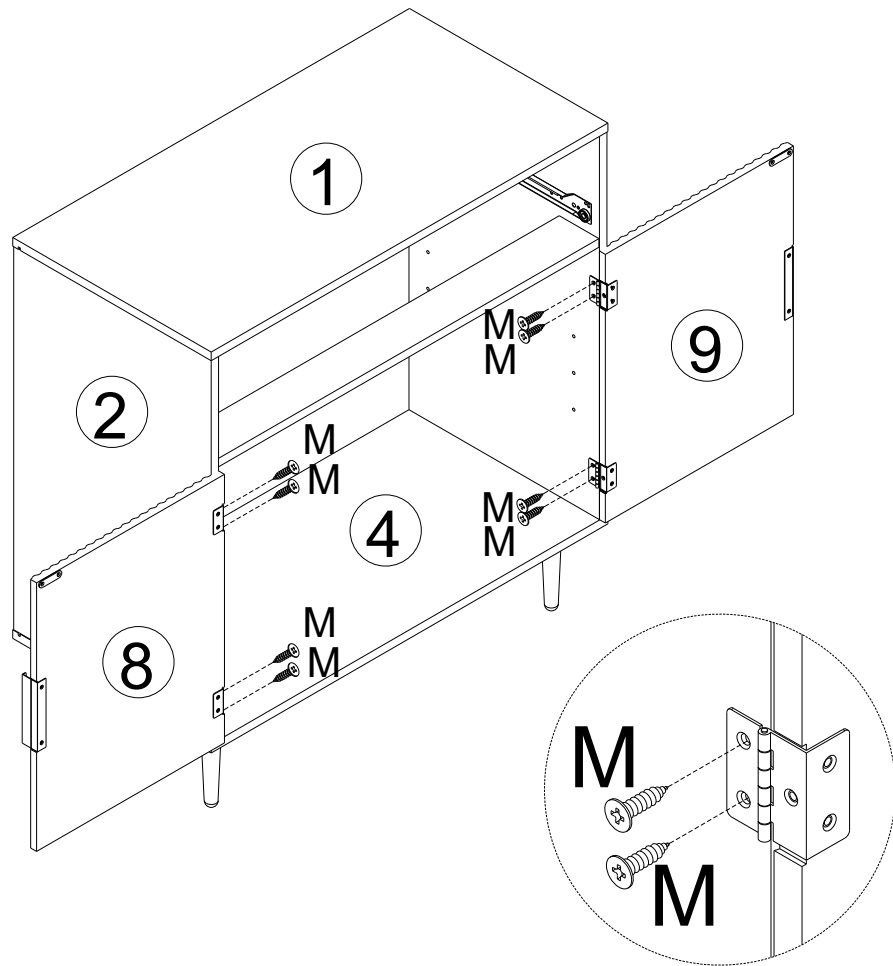


M*8PCS

STEP 16

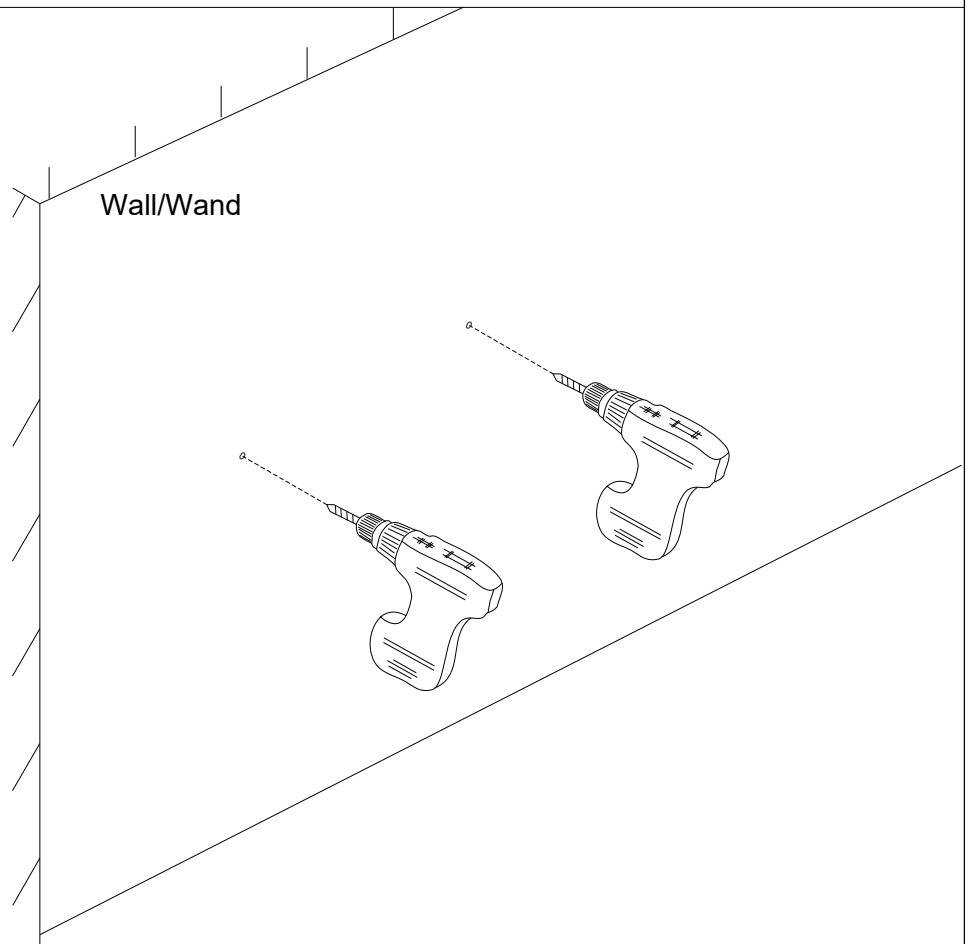



Assembly Steps

STEP 17

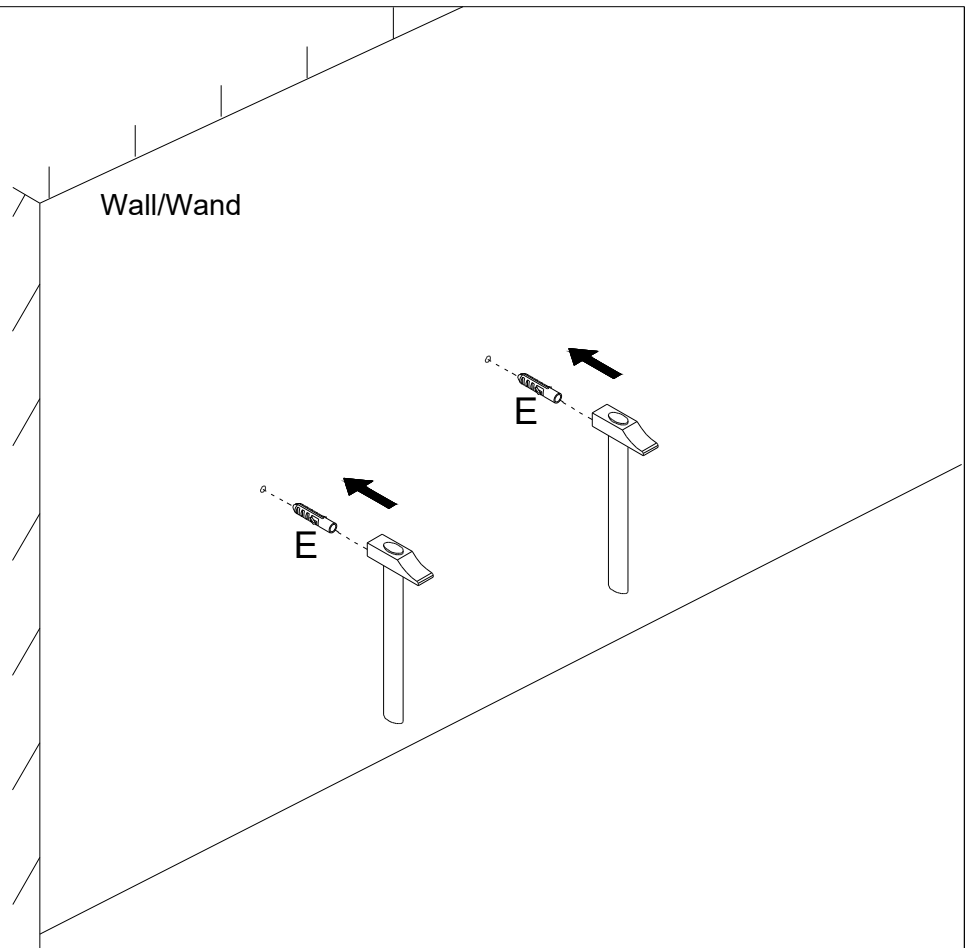


E*2PCS

STEP 18

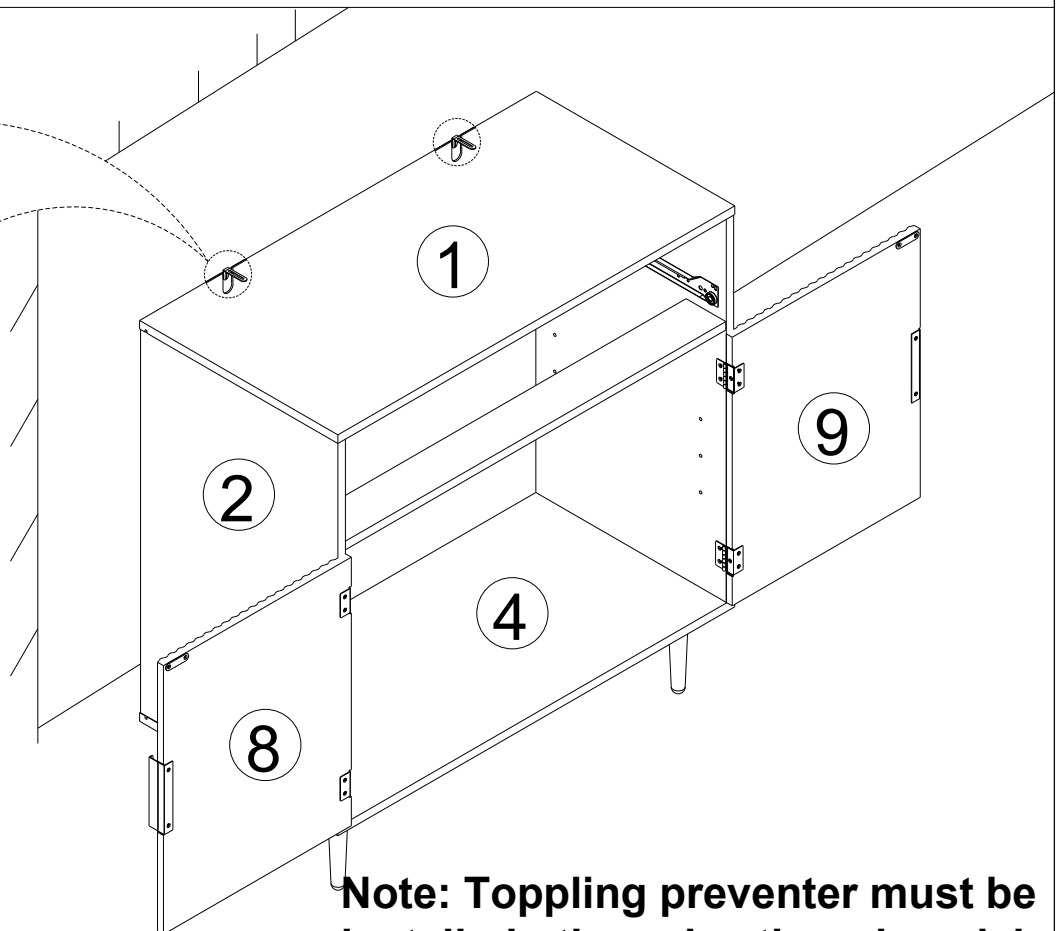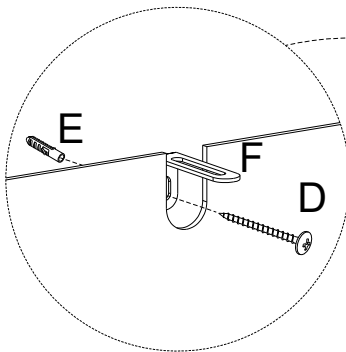


Note: Toppling preventer must be installed other wise there is a risk of tipping



D*2PCS


Assembly Steps

STEP 19

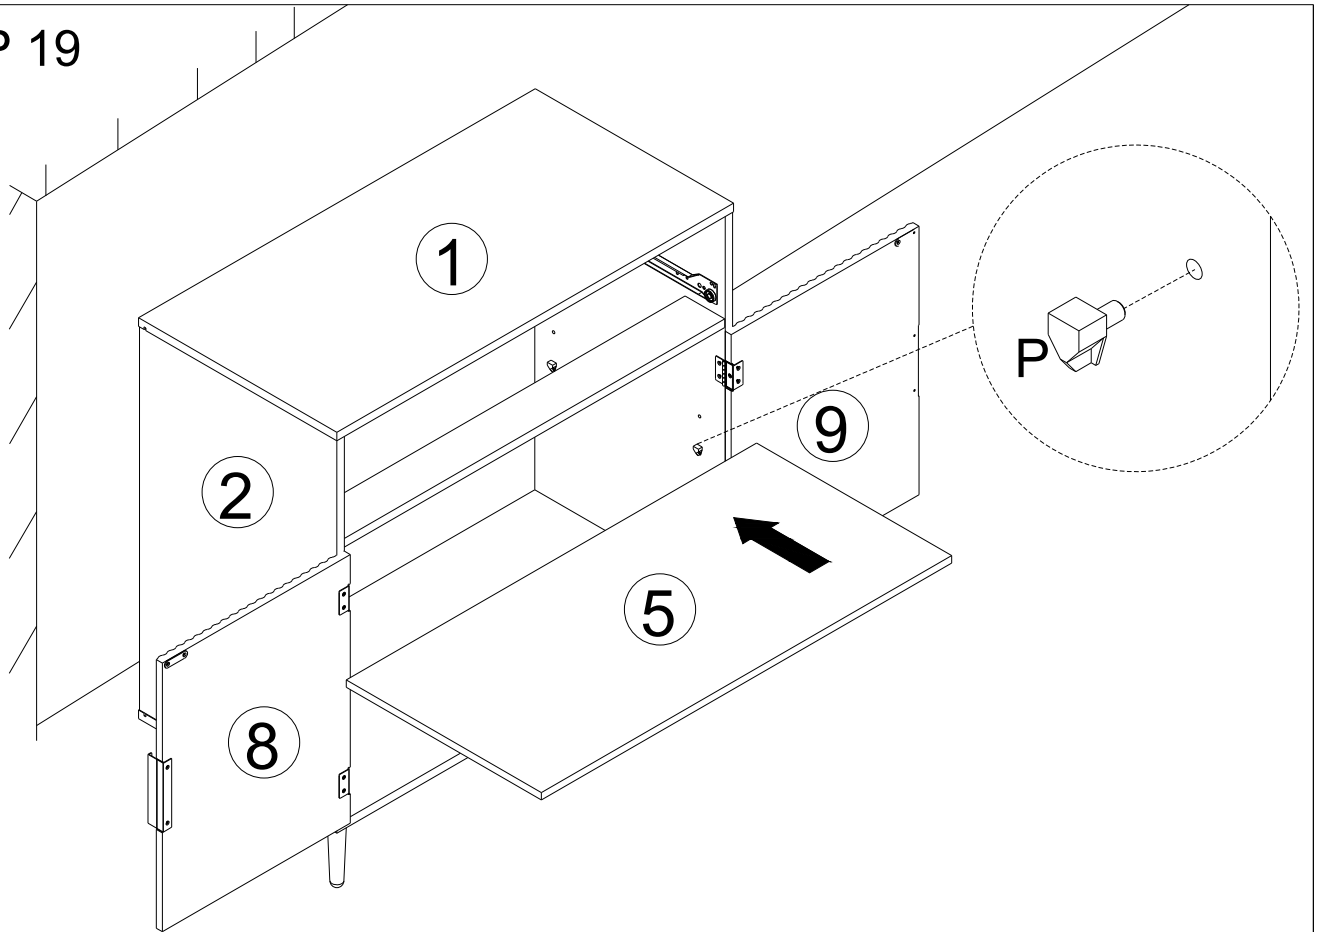

P*4PCS


STEP 20

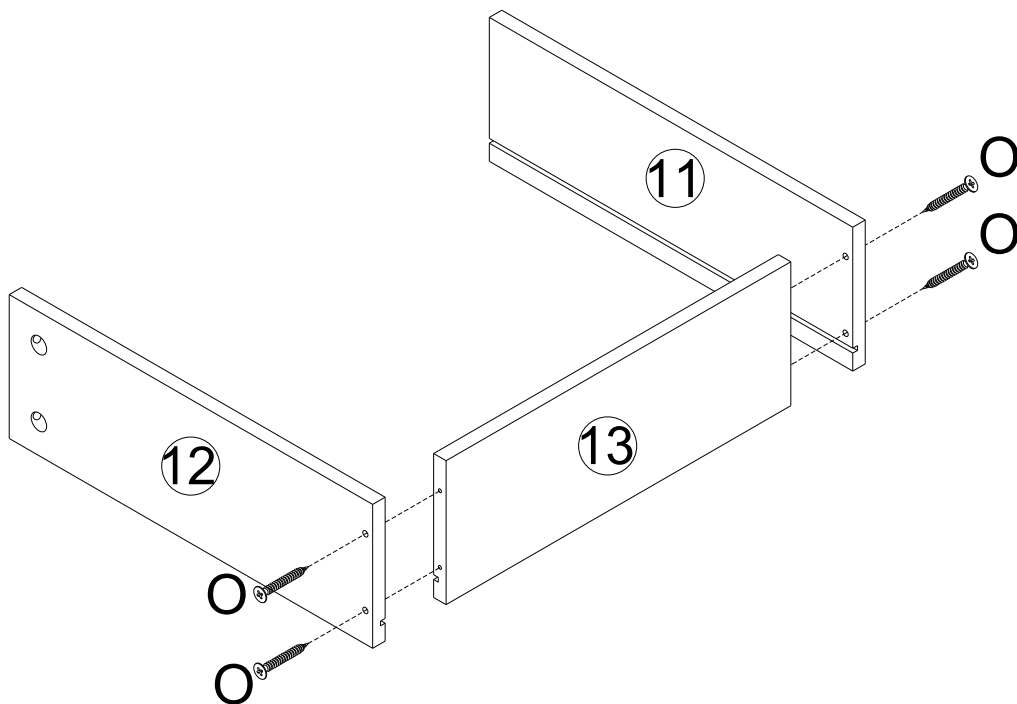

O*4PCS


Assembly Steps

STEP 21

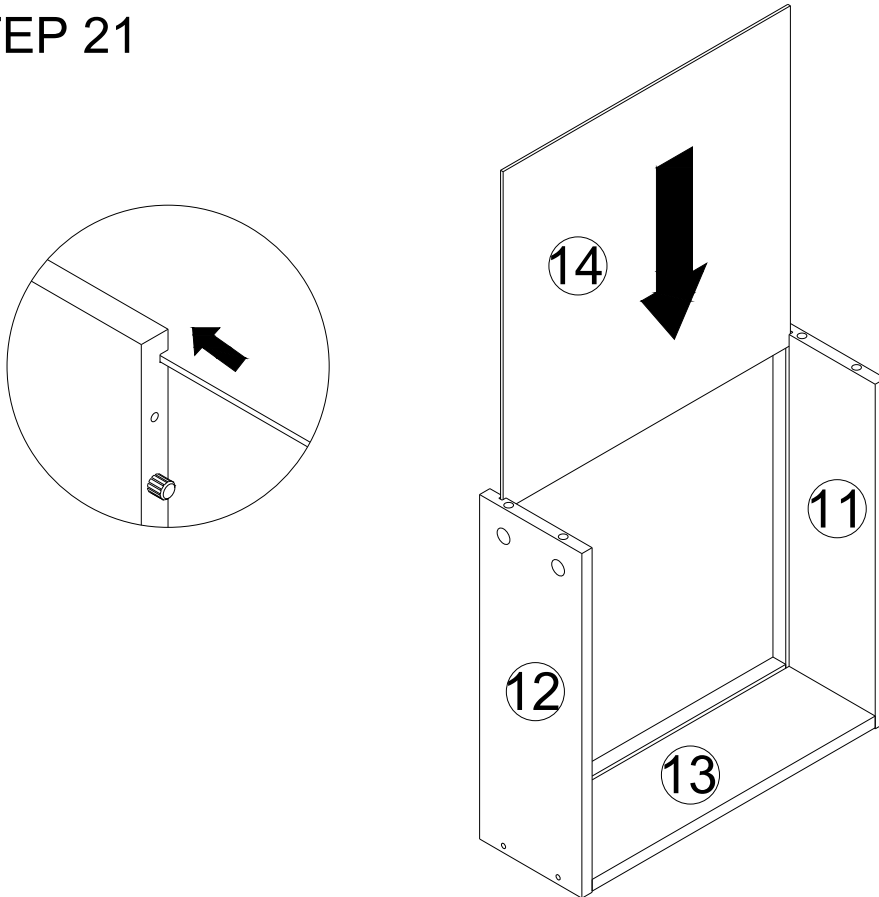

**Thin back board needs to be in side the slot,
other wise blocks the opposite plate montage.**





STEP 22

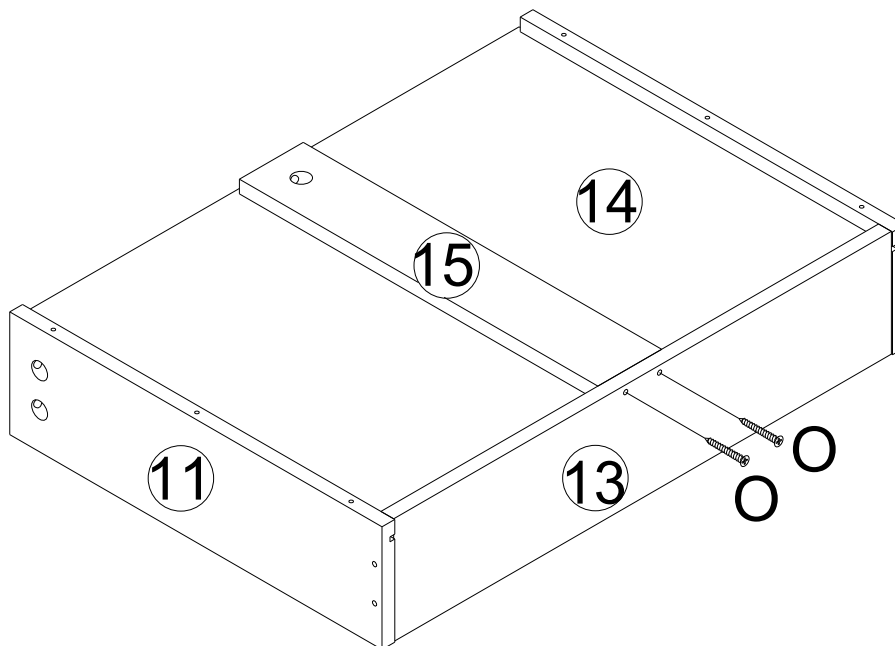

O*2PCS

Assembly Steps

STEP 23

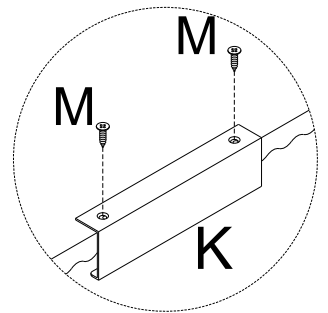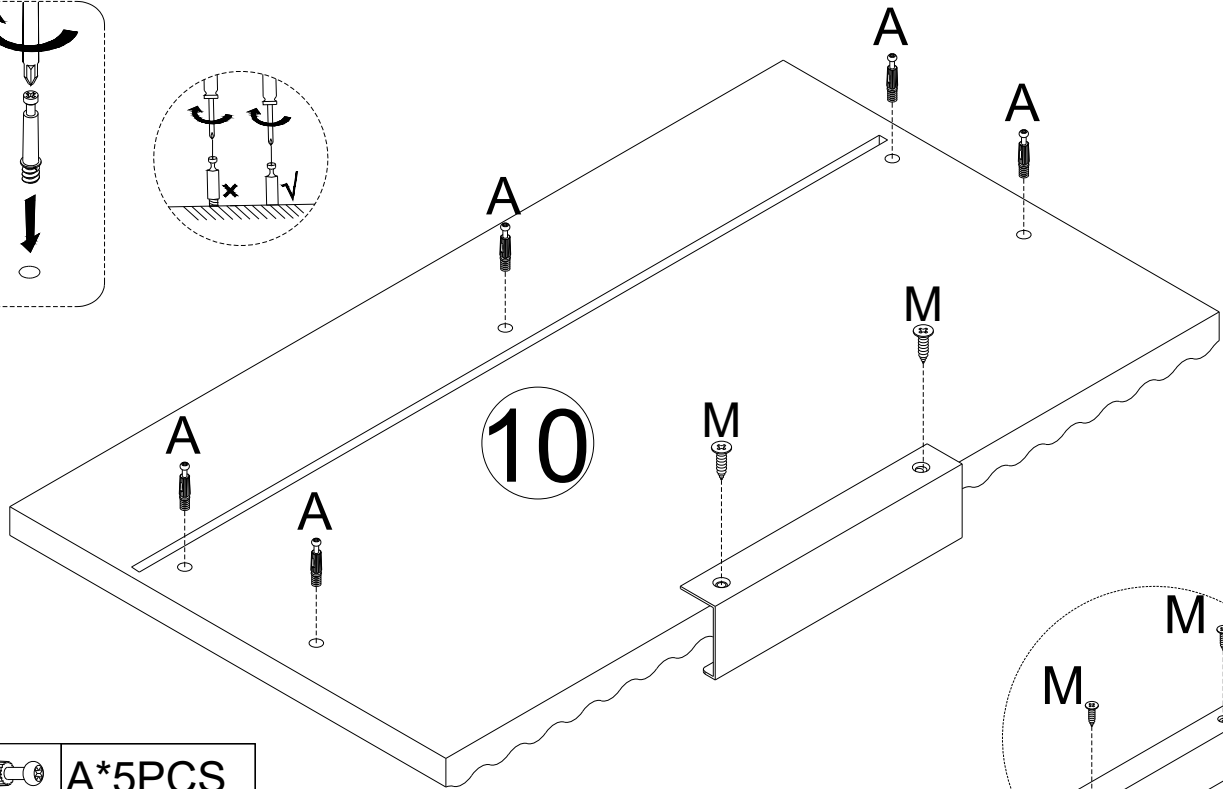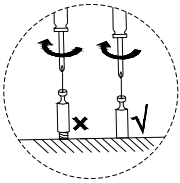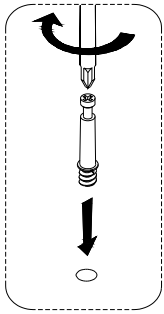

A*5PCS





M*2PCS



K*1PC


STEP 24

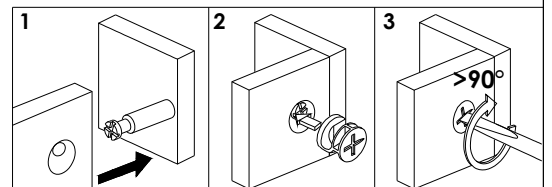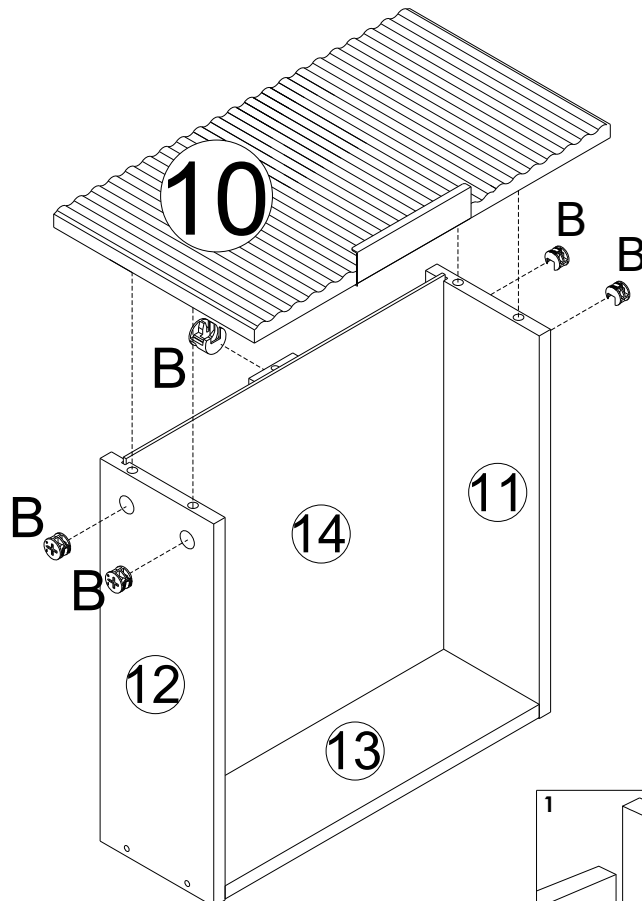

B*5PCS


Assembly Steps

STEP 25

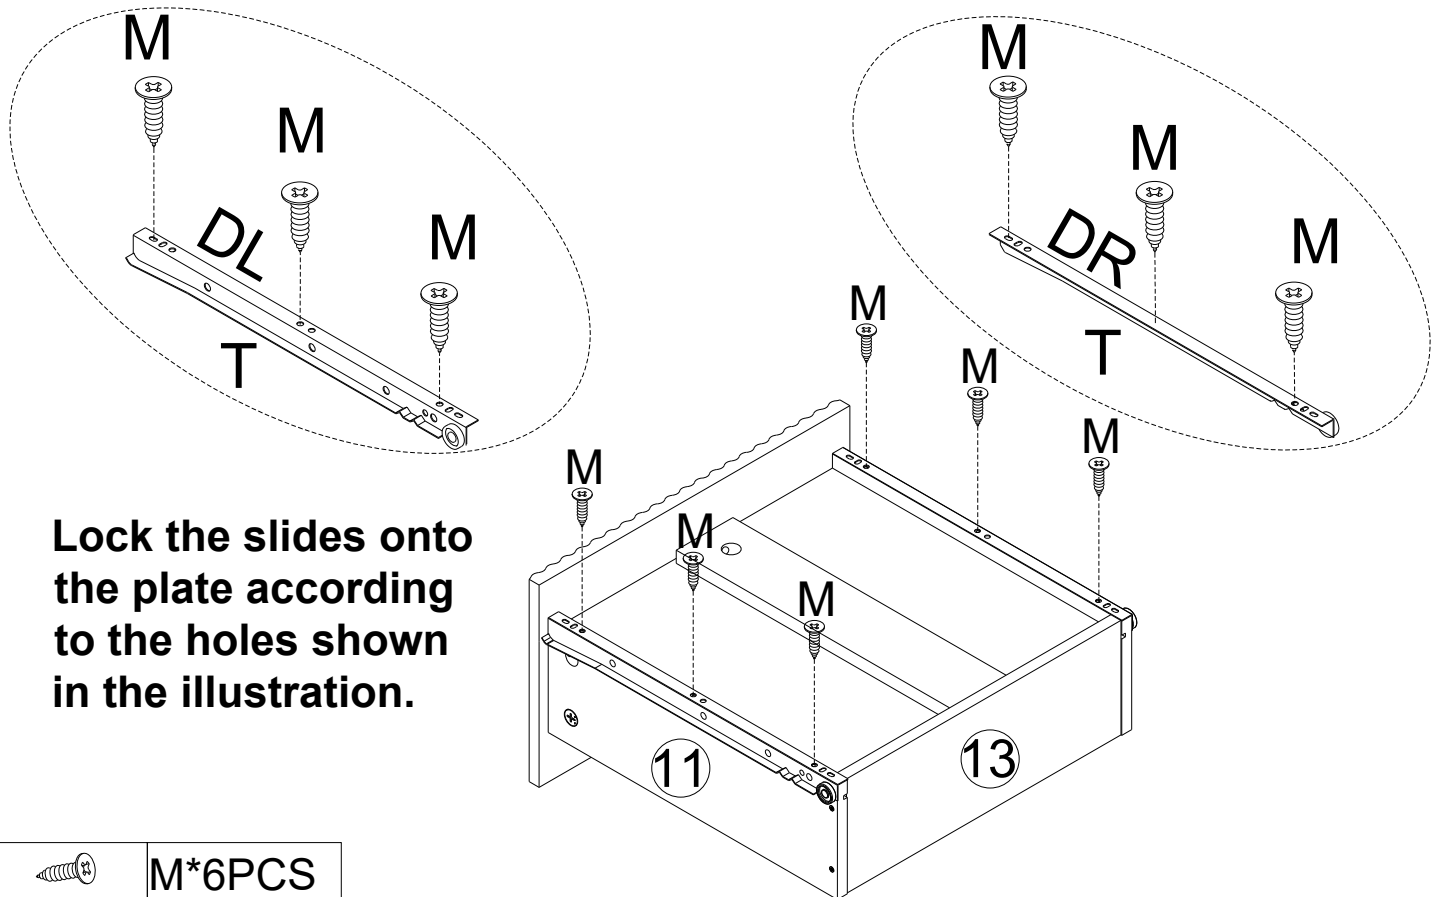


	M*6PCS
	T*2SET

STEP 26

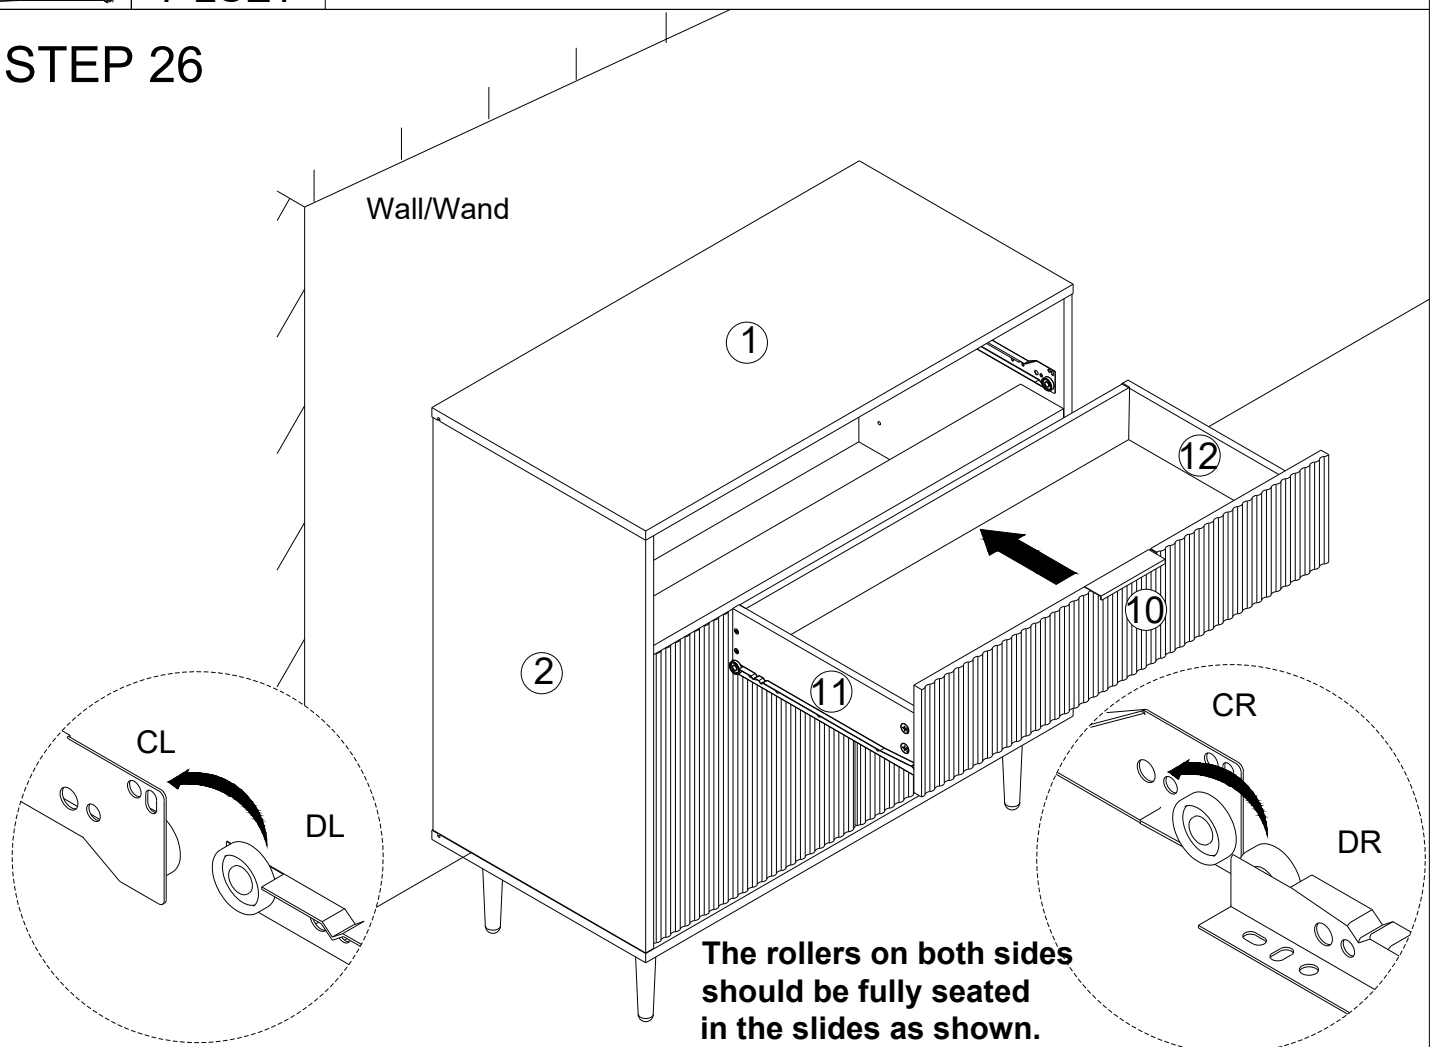

Assembly Steps

STEP 27

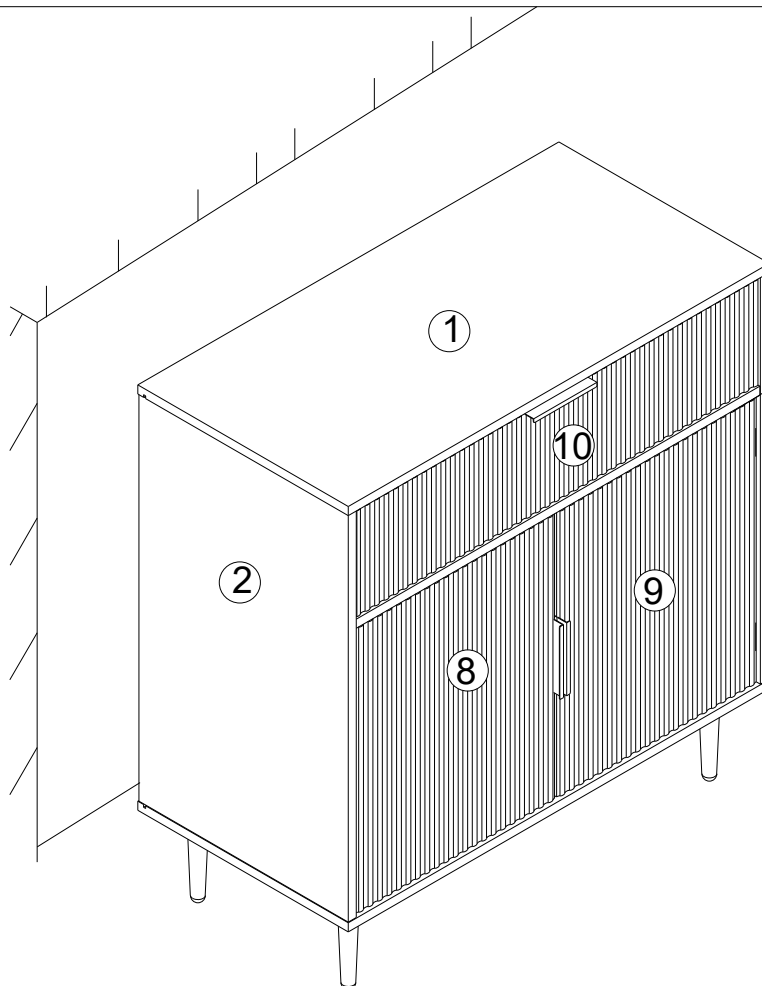

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

