# **Assembly Instructions**

Caution: You must read this before you proceed

## **RECLINING ADIRONDACK**



**CAUTION**: This Adirondack is NOT a TOY.


Keep your child / children at bay during the assembly process. For moving the Reclining Adirondack and to prevent damage to the Reclining Adirondack, two adults are needed to execute this action.

Parts List				
Label	Picture	Description	QTY	
A		Seat Panel with Footrest	1	
В		Backrest	1	
С		Left Front Leg	1	
D	6	Right Front Leg	1	
E		Support Bar of Front Leg	1	
F		Left Armrest	1	
G		Right Armrest	1	


Parts List				
Label	Picture	Description	QTY	
Н	0 0 0	Support Bar of Left Armrest	1	
I		Support Bar of Right Armrest	1	
К		Recliner	1	
Parts List				
Label	Picture	Description	QTY	
1		Bolt (M8x35)	13	
2		Sleeve Nut (M8x15)	13	
3		Long Screw (M7x70)	3	
4		Short Screw (M7x40)	3	
5		Screw (M4x30) (Use with Screwdriver)	5	
6		Allen Key	2	
7		Screwdriver	Not provided	

## **Assembly Preparation**


Before Beginning Assembly:

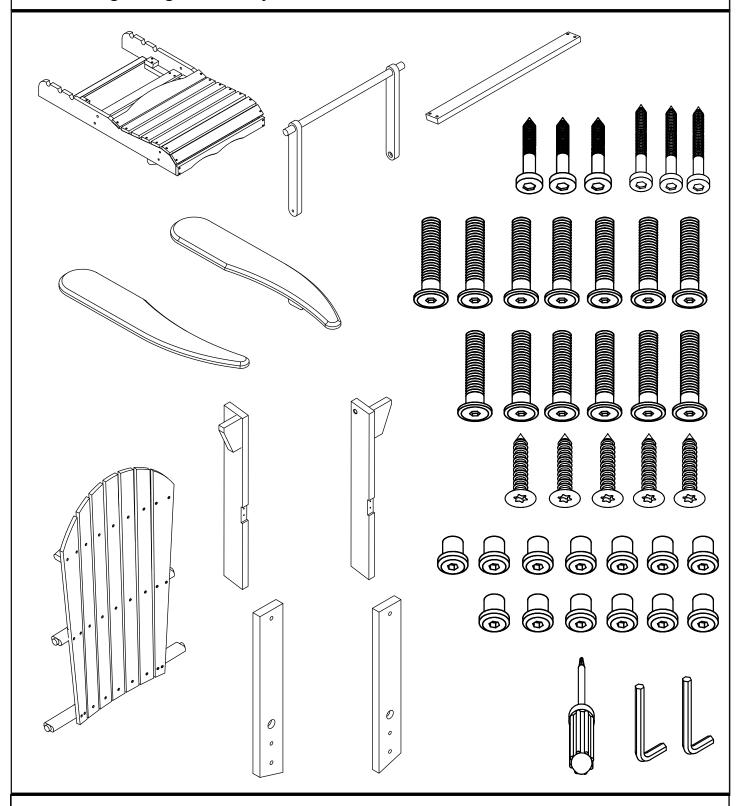











Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-


### Assembly Steps

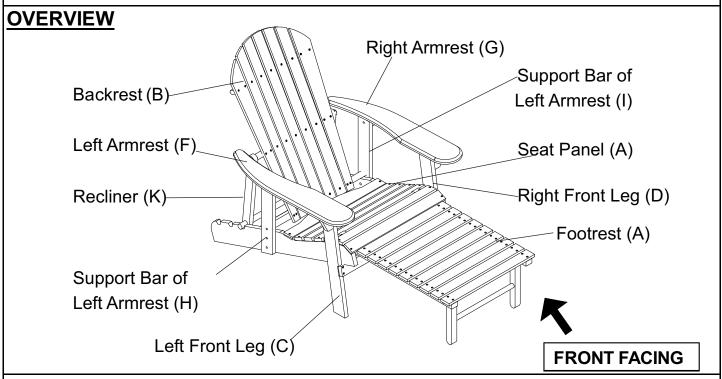

This Reclining Adirondack has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Reclining Adirondack parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

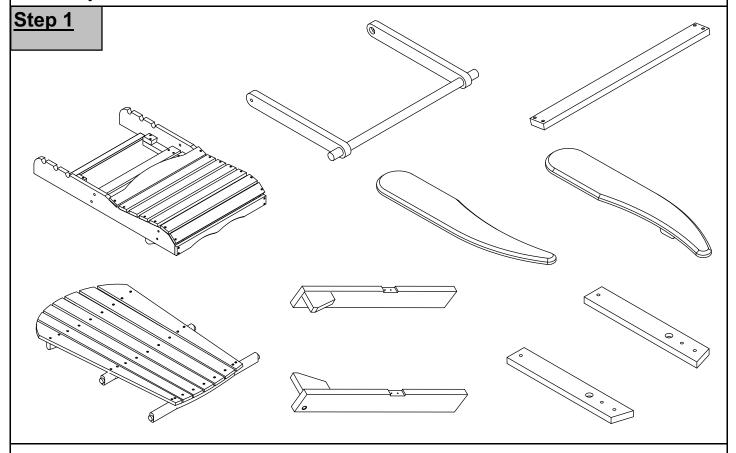


Unpack and place all parts on a clean, non-marring surface.

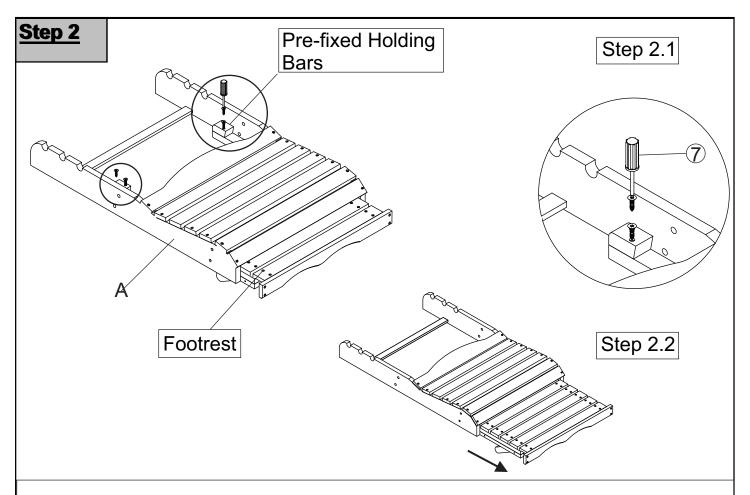


Place the Seat Panel with Footrest(A) onto a clean, non-marring surface.

- **2.1)** Remove pre-fixed holding bars of the Footrest that are inside Seat Panel by using Screwdriver(⑦)
- 2.2) Pull the Footress out of the Seat Panel as indicated by the arrow .Note: Please keep the screws and holding bars and put aside for Step 8




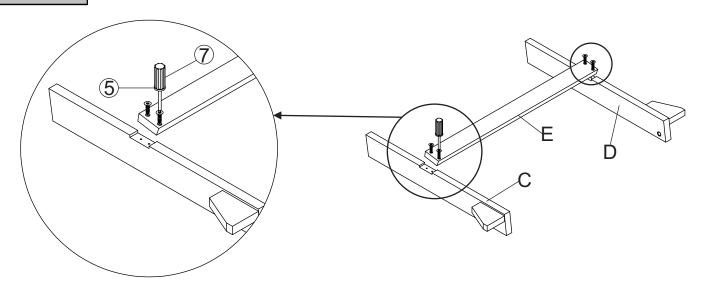

Attach Support Bar of Front Leg(E) to Left Front Leg(C) and Right Front Leg(D) using Screws(5) with Screwdriver(7).

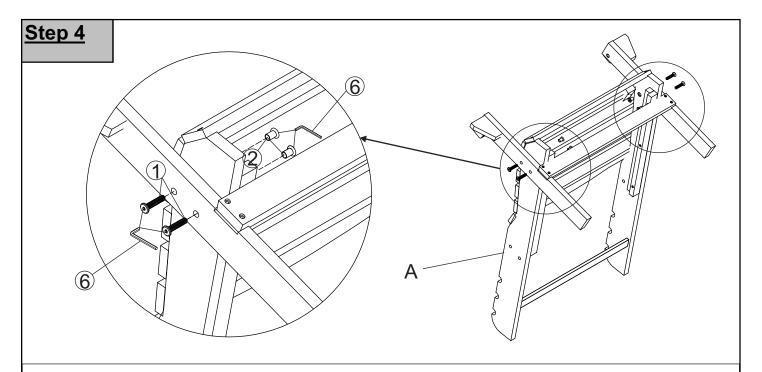

Stand the Seat Panel(A) vertically as shown in the picture. With the assistance of an adult helper, secure Front Leg Frame from Step 3 to Seat Panel(A) using Bolts(1), and Sleeve Nuts(2) with Allen Keys(6). **Do not fully tighten the Bolts.** 

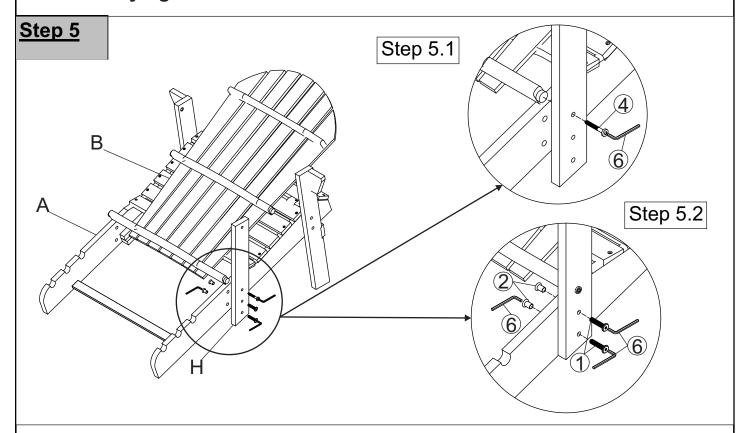


Place the Backrest(B) onto Seat Panel(A) as shown in the picture.

- **5.1)** Secure Support Bar of Left Armrest(H) to Backrest(B) using Short Screw(4) with Allen Key(7).
- **5.2)** Secure Support Bar of Left Armrest(H) to Seat Panel(A) using Bolts(1), and Sleeve Nuts(2) with Allen Keys(6).


#### Do not fully tighten Bolts and Screws.

Repeat the same process with the Support Bar of Right Armrest(I).

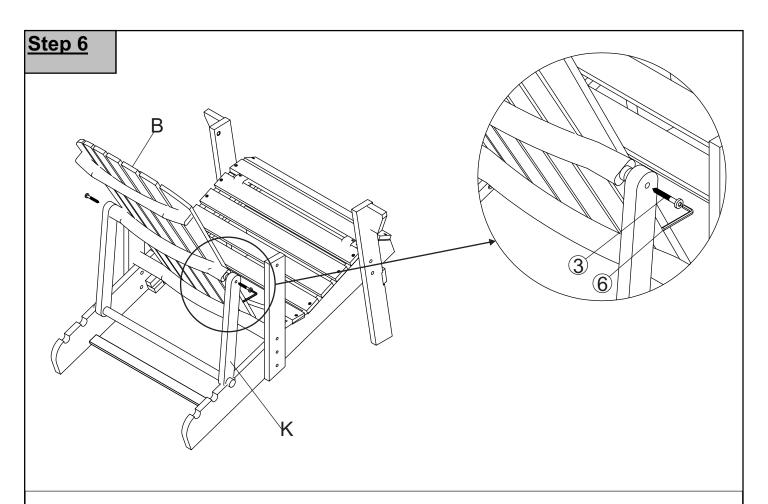

Position housing of Recliner(K) into oval mortise of Backrest(B). Secure Recliner(K) to Backrest(B) using Long Screws( $\Im$ ) with Allen Key( $\Im$ ) **Do not fully tighten the Screws**.


#### Step 7

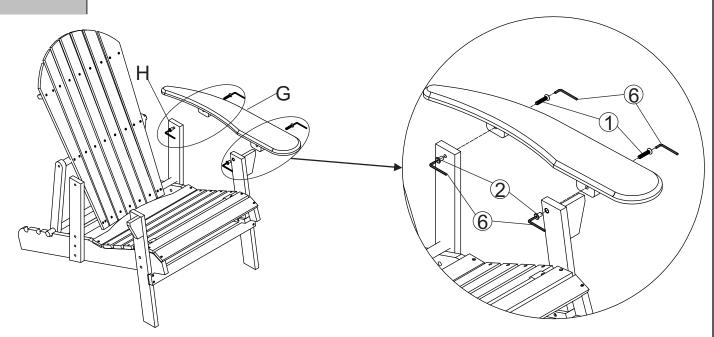


Attach Right Armrest(G) to Left Front Leg(C) and Support Bar of Left Armrest(H) using Bolts(1), and Sleeve Nuts(2) with Allen Keys(6).

Do not fully tighten the Bolts.

Repeat the same process with Left Armrest(F).

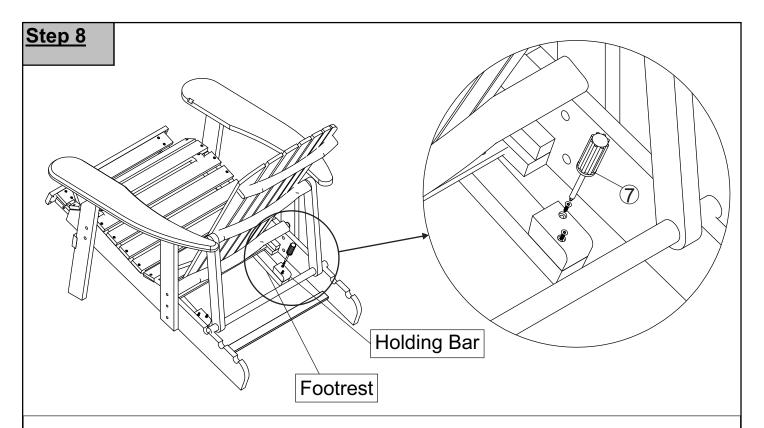

Reattach holding bars and screws from Step 2 to Footrest using Screwdriver(⑦). The holding bars are to prevent the Footrest from falling out of the Seat Panel. In a sequential manner, tighten all Bolts and Screws at all joints until fully locked into position.

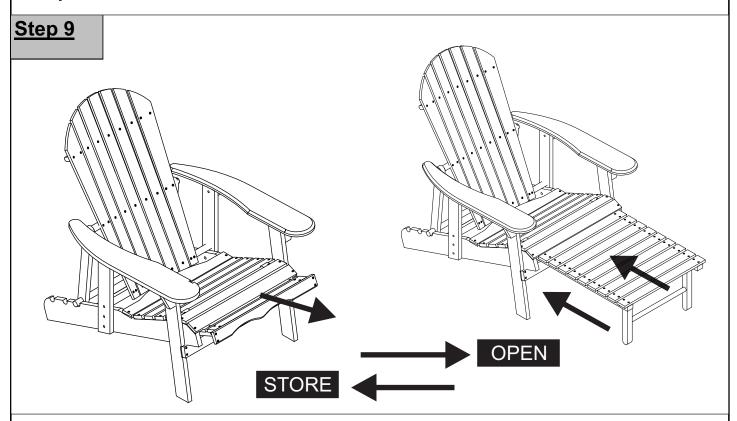

Your Reclining Adirondack is ready for use.

This Adirondack can only be used on a flat, level surface.

The Footrest can be stored under the Seat Panel when not in use.

To Open, by hand, pull the Footrest outward and unfold the Footrest's Leg

To Store, by hand, fold the Footrest's Leg and push Footrest into under the Seat Panel

