



ASSEMBLY INSTRUCTIONS









TWIN DAYBED + 2 DRAWERS

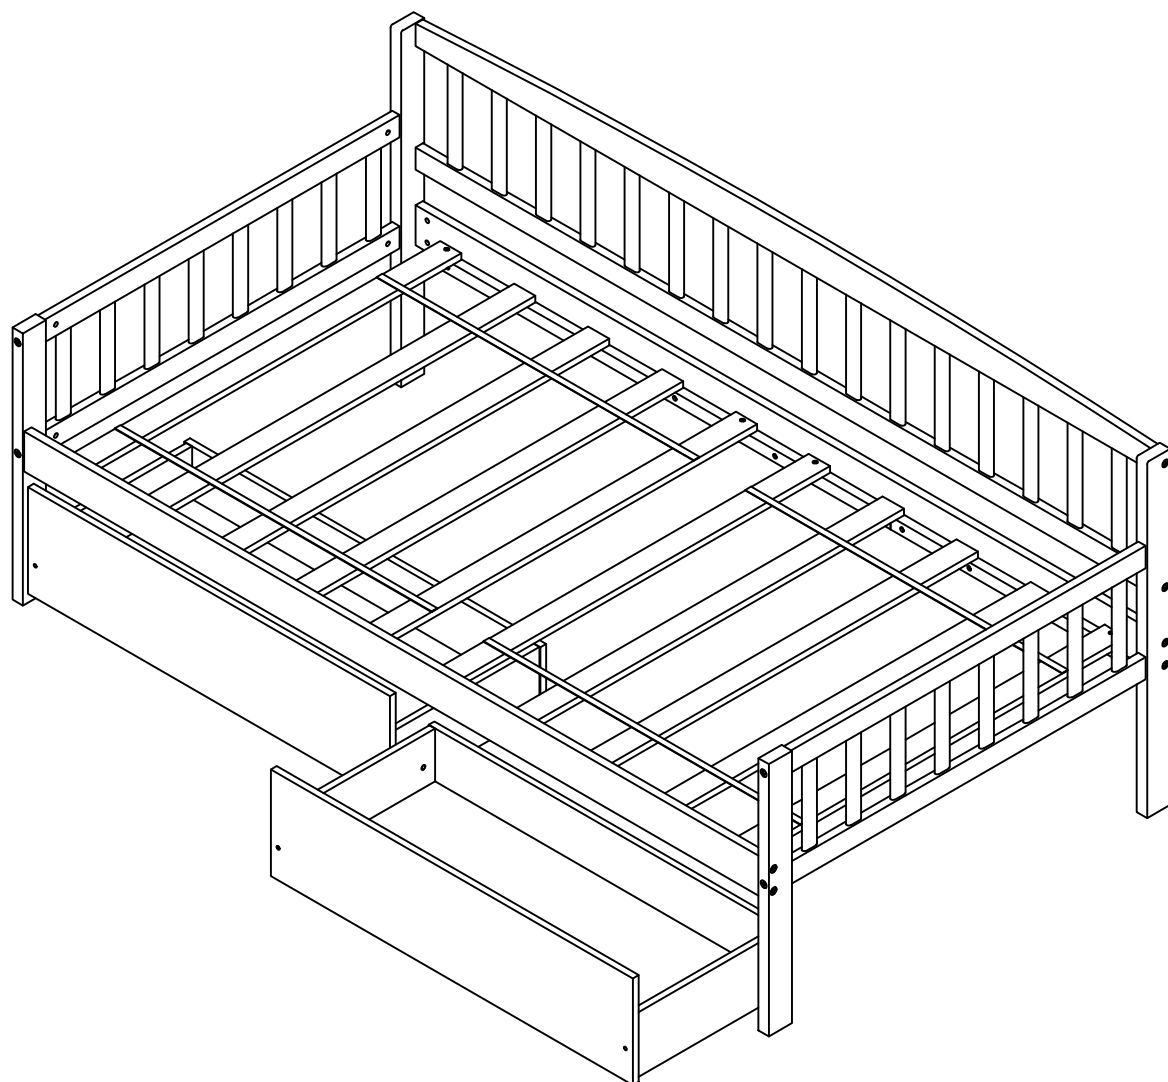





Detail View

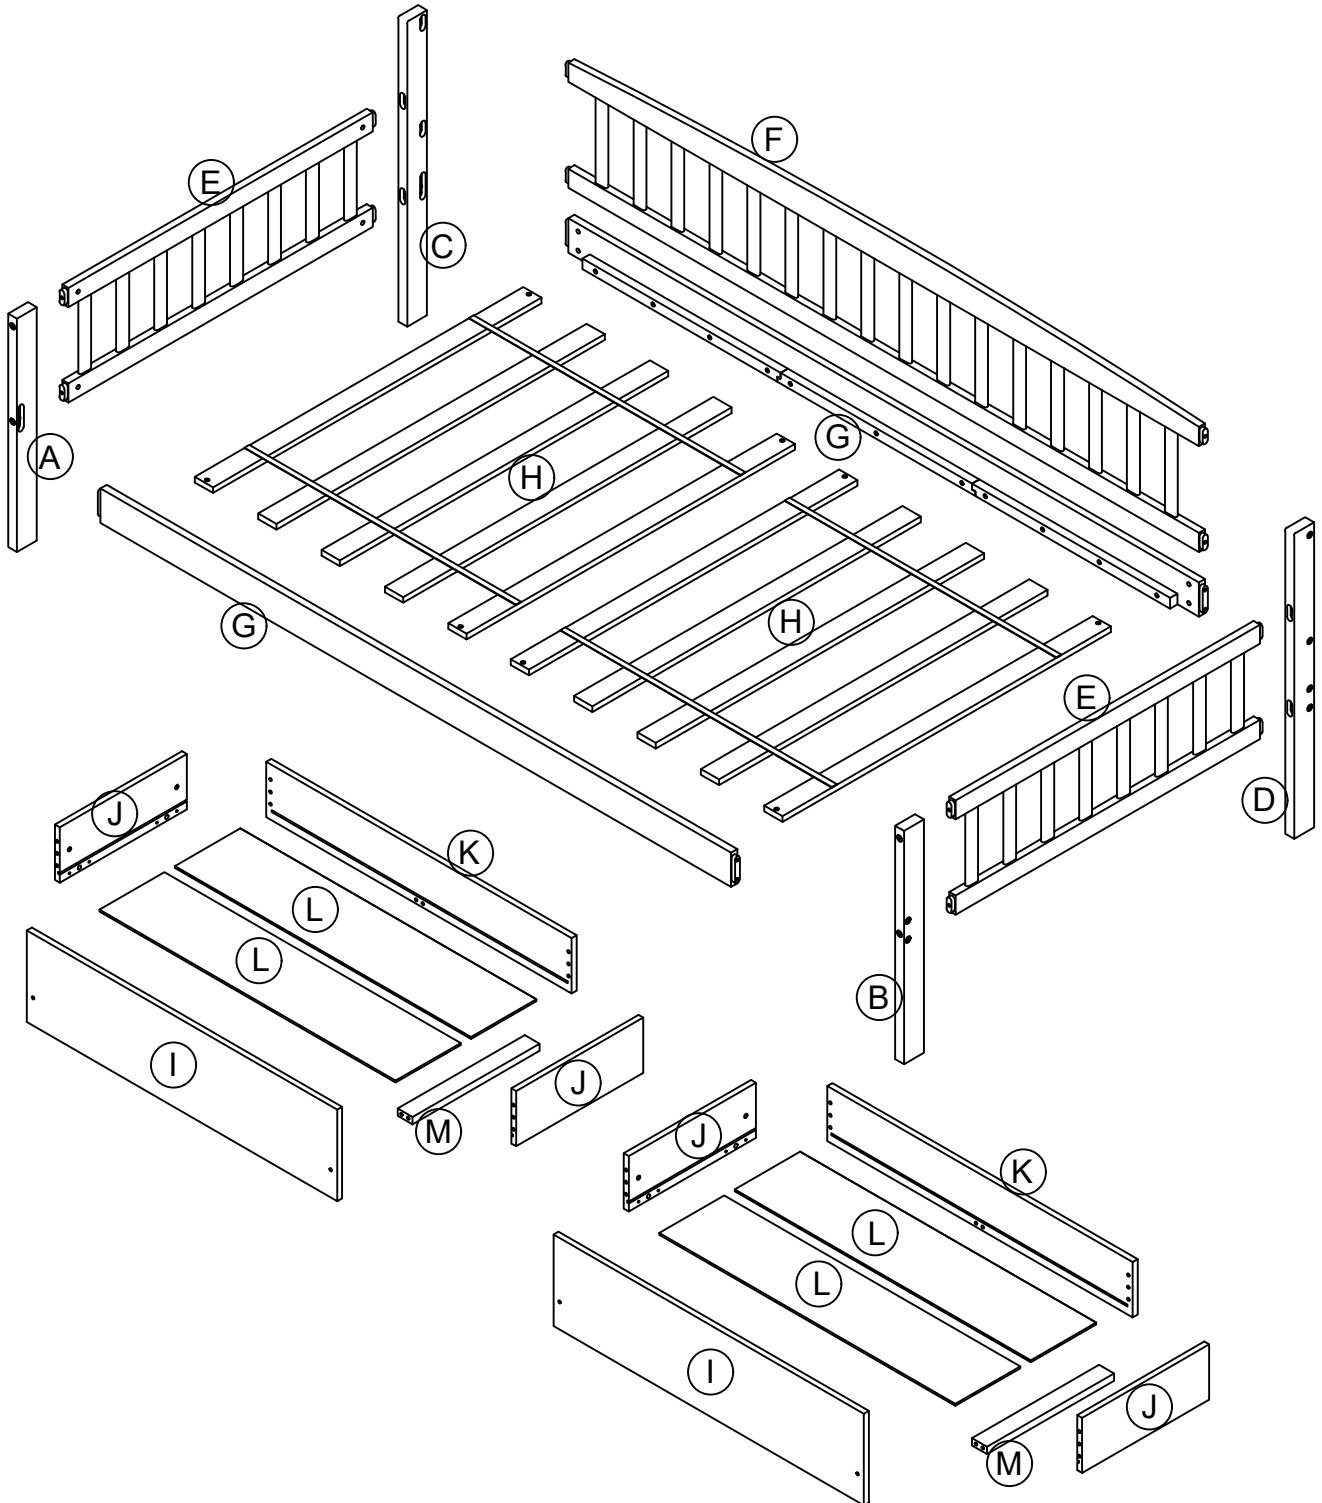


Part List

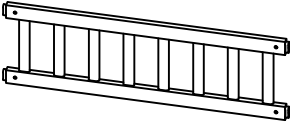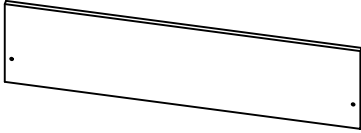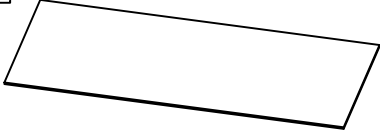A  Leg left front-1pc	B  Leg right front-1pc	C  Leg left back-1pc
D  Leg right back-1pc	E  Frame HB&FB-2pcs	F  Frame back-1pc
G  Side rail-2pcs	H  Slats-2 set (5pcs/set)	I  Drawer front-2pcs
J  Drawer (left/right)-4pcs	K  Drawer back-2pcs	L  Drawer bottom-4pcs
M  Drawer support-2pcs		

Hardware List



1  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	2  1/4"*15 (9.5mm) Horizontal-Hole bolts(28pcs)	3  (1/4") 4*58mm Allen key (1pc)
4  Ø4*30mm Wood screws (30pcs)	5  (Ø15)1/4"*70mm Hex-Head bolts (12pcs)	6  Ø8*30mm Wood dowel (24pcs)
7  (Ø15)1/4"*60mm Hex-Head bolts (8pcs)	8  Ø10*20mm Wood dowel (8pcs)	9  70*35*19mm Wood support drawer (3pcs)
10  Ø100*54*20mm Wheels (8pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDE)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

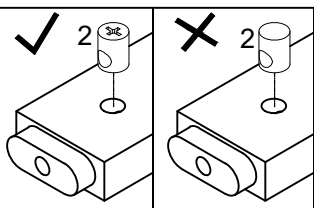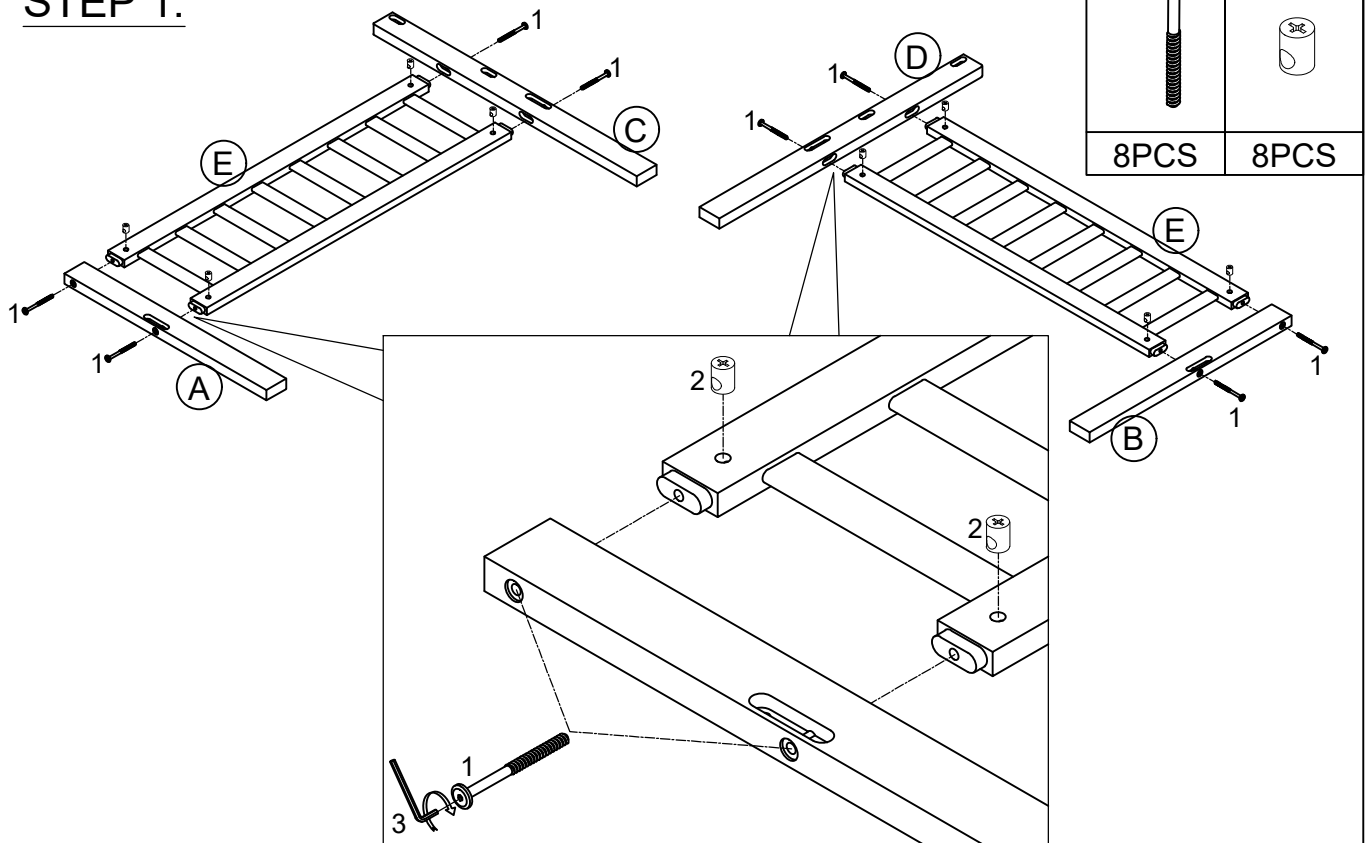


Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 2:

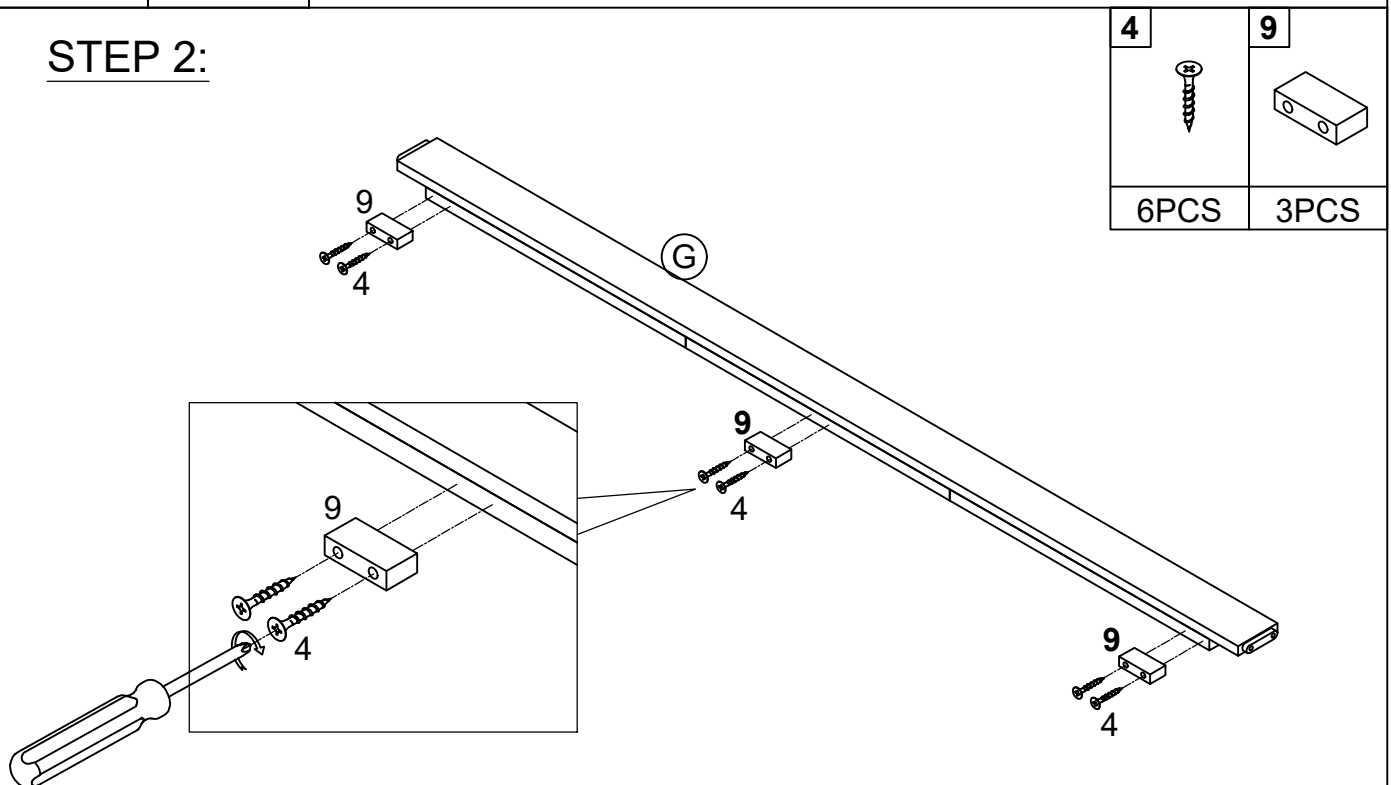

STEP 3:

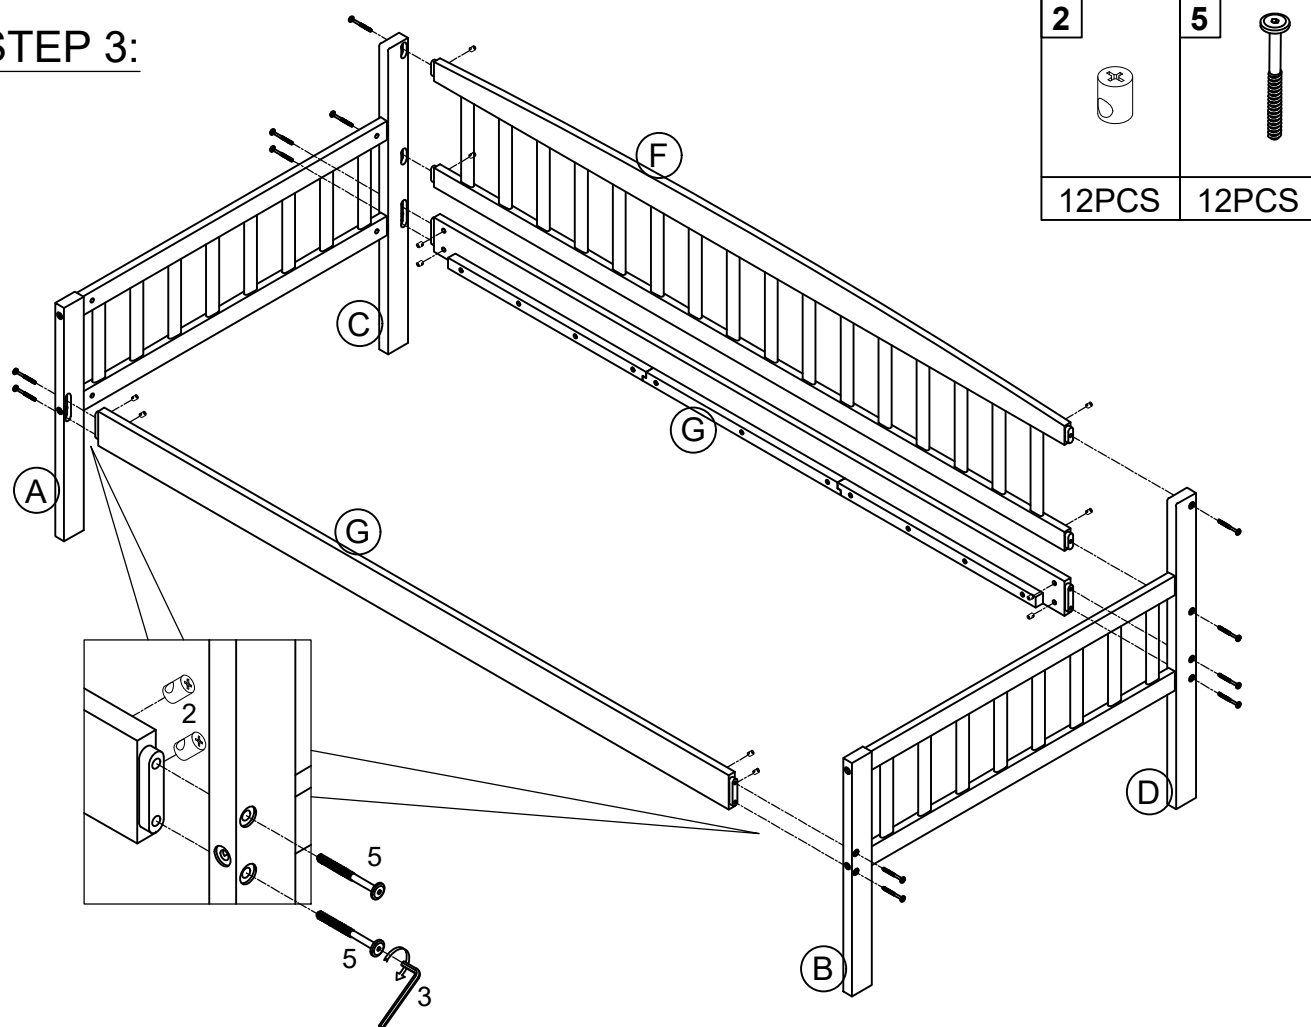


STEP 4:

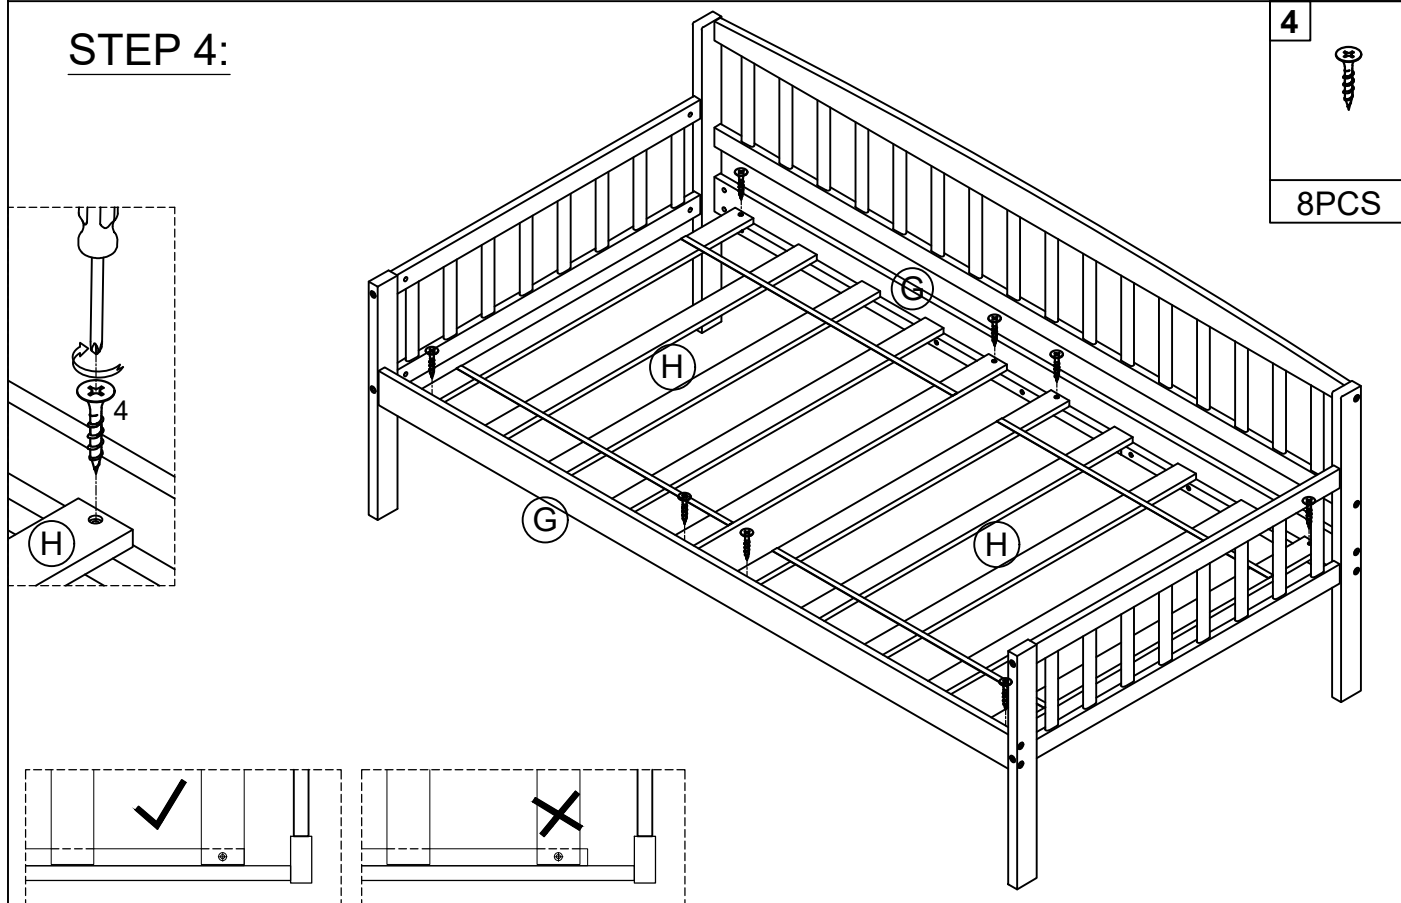


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.


STEP 5:

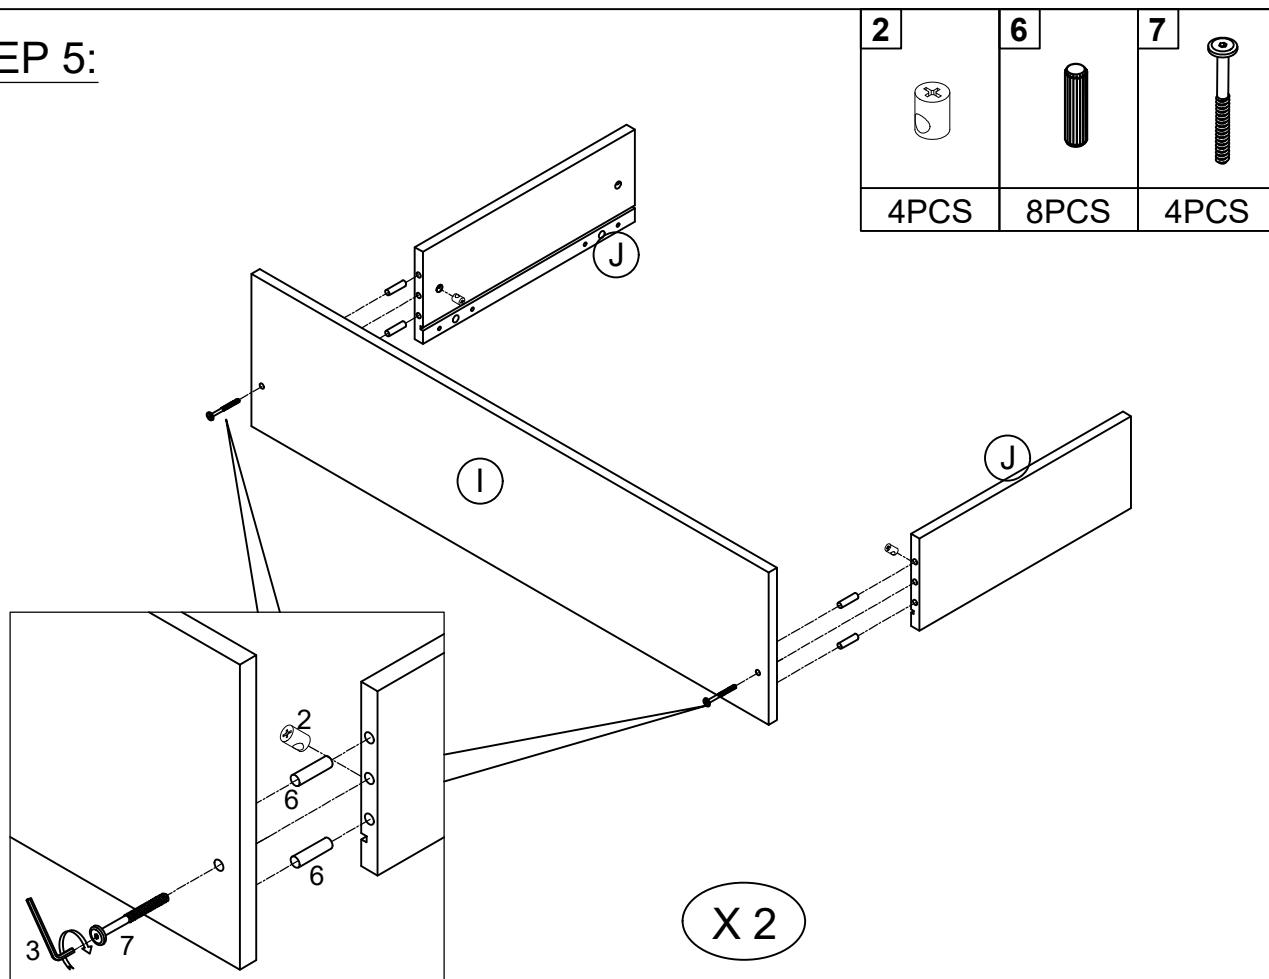



STEP 6:

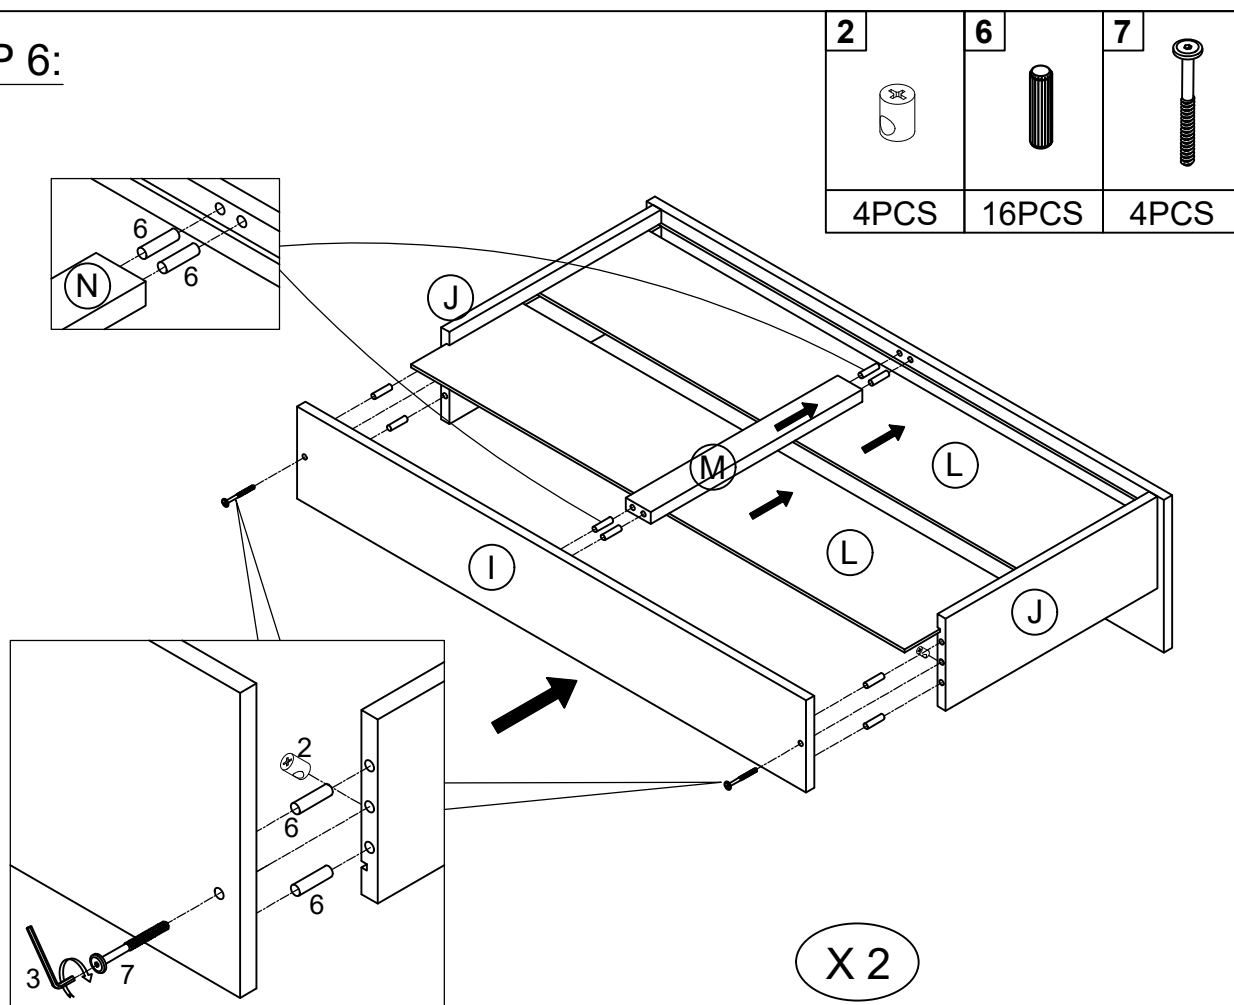

STEP 7:

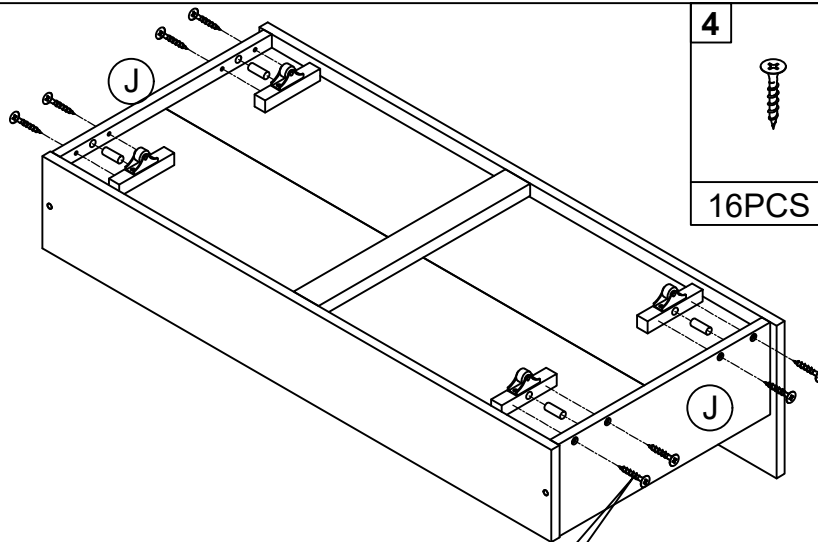


4	8	10
		
16PCS	8PCS	8PCS

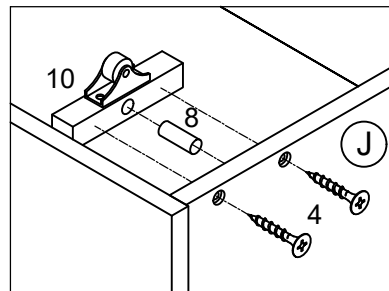

X 2

STEP 8:

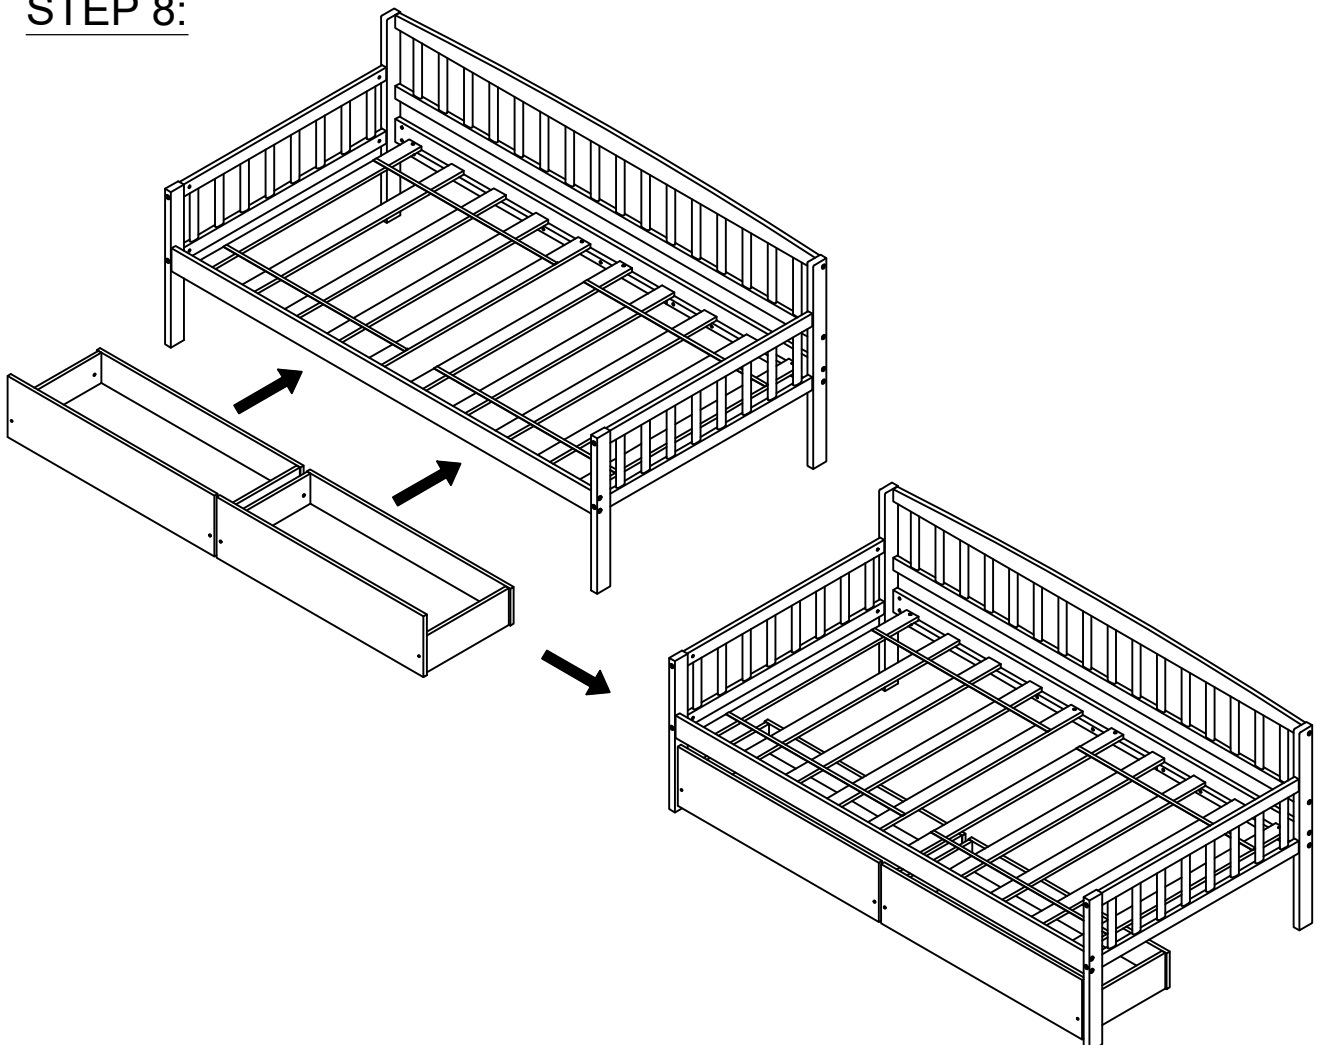

Push Drawers under the bottom of Twin daybed.