
SPU: LM125

Scan for Help!
Assembly Guide/Customer Support

Item # : LM125-31

Assembly Instructions

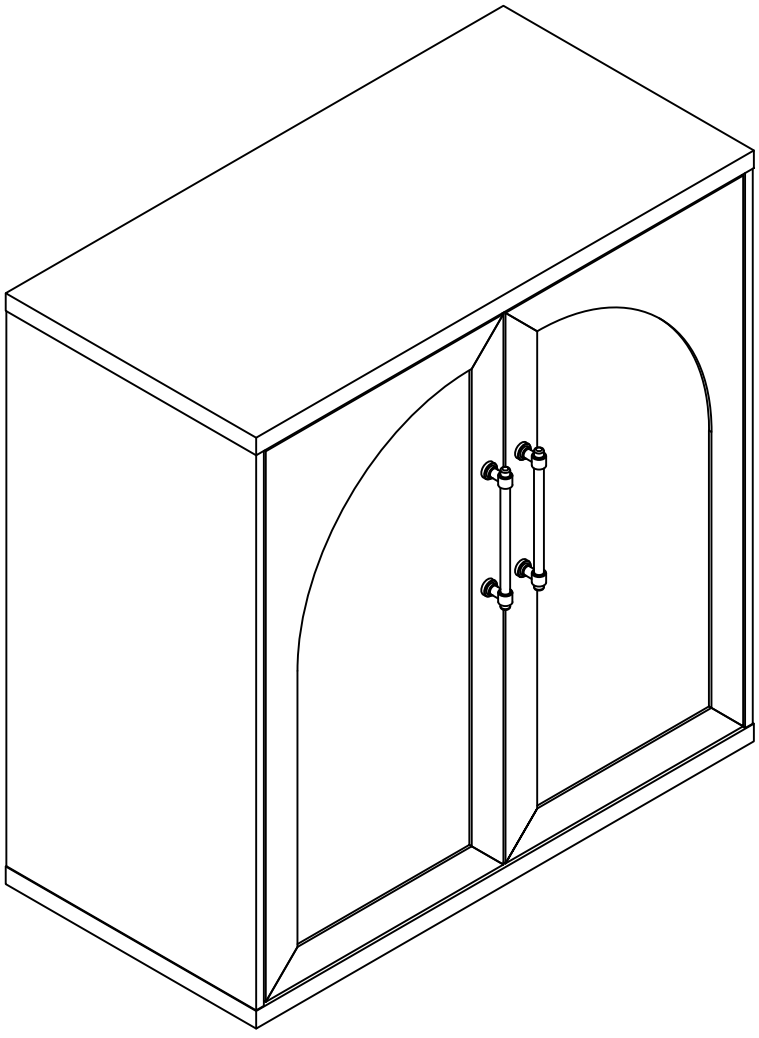

If you have any questions, please follow these steps(“Find Your Orders”- “Problem with the Order” - “Contact Seller”) to contact our customer service. Thanks!

Revised 29/9/2025

General Assembly Guidelines


Ⅰ. Ensure that all parts and hardware are available before beginning assembly.

Ⅱ. Follow each step carefully to ensure the proper assembly of this product.


Ⅲ. Two people are recommended for ease in the assembly of this product.

Ⅳ. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.


Ⅴ. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

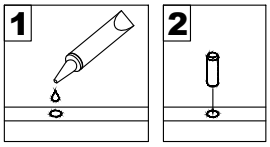


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

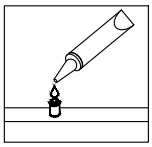


Ⅵ. A Phillips head screwdriver is required for the assembly of this product .

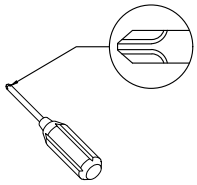


Ⅶ. Power tools should not be used to assemble this product .

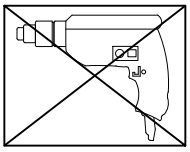


Ⅷ. Concealed hinges are three-way adjustable.

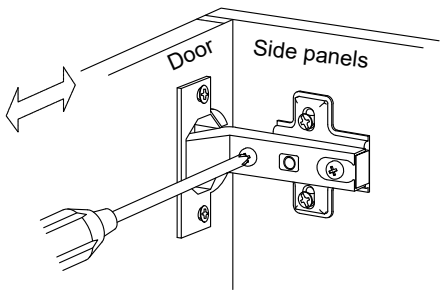

Horizontal
by screw adjustment

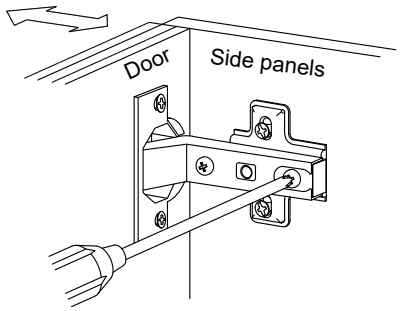


In-and-Out
by loosening the hinge-arm mounting screw or via cam adjustment






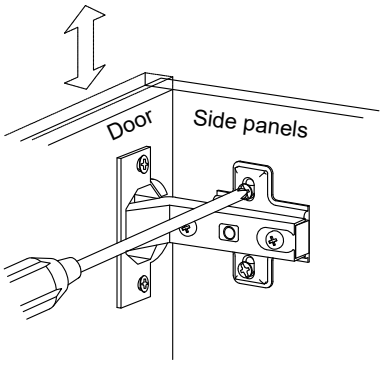



Vertical
Via slots in the mounting plate or via cam adjustment

Parts List

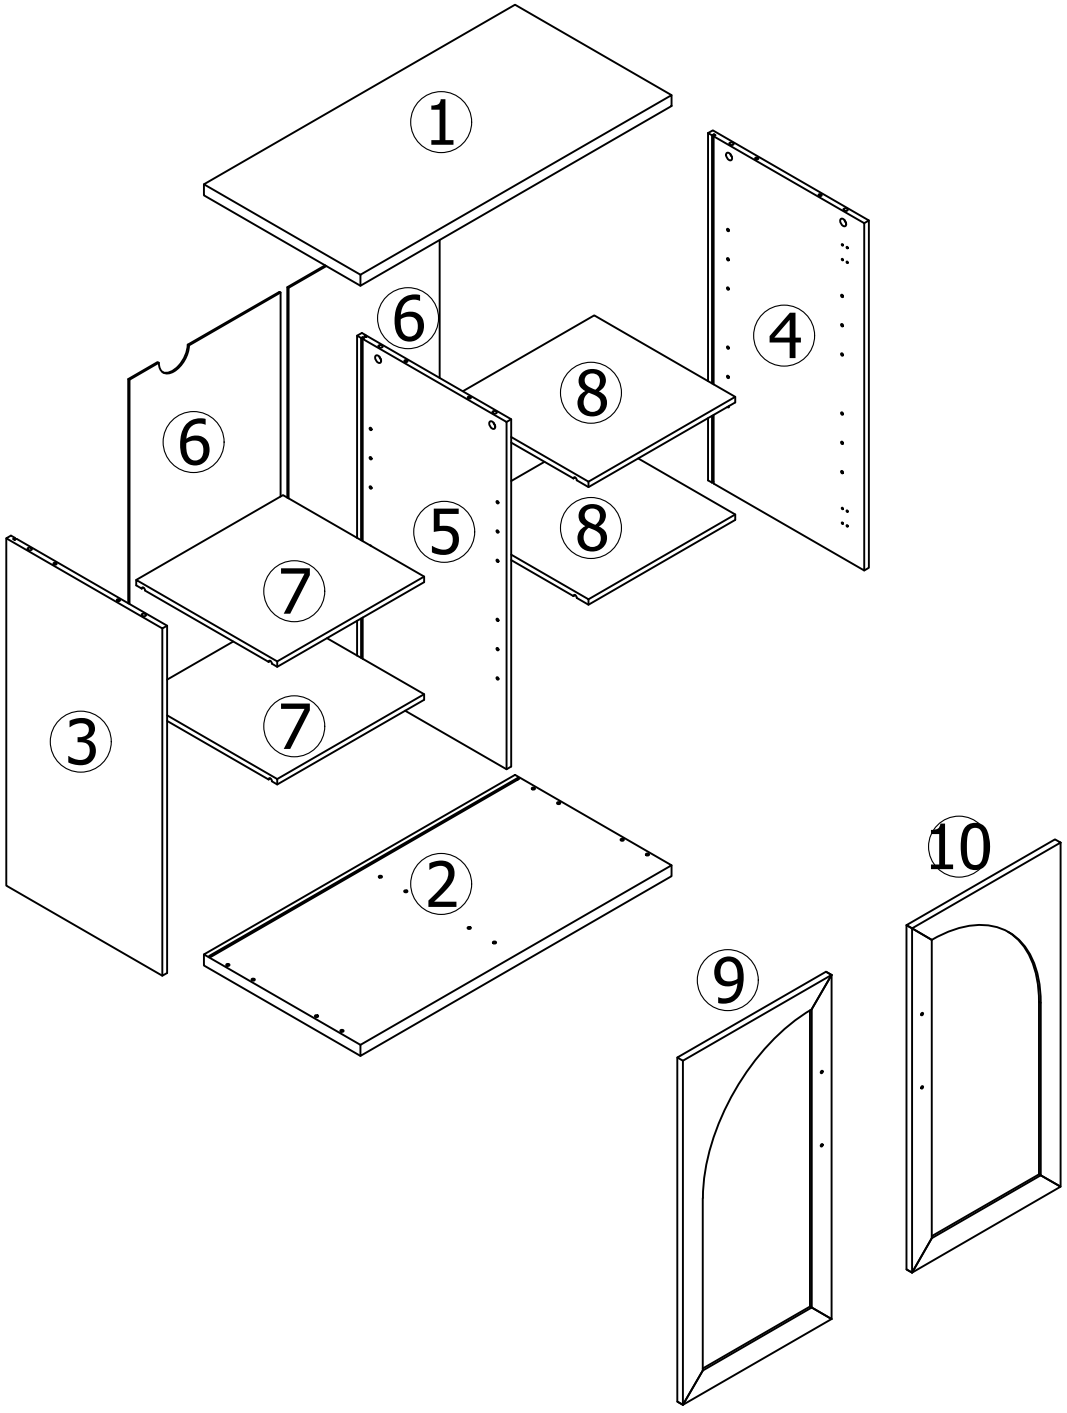

Hardware List

A		Ø6x30mm	Wooden dowel	12	pcs
B		Ø6x32mm	Cam bolt	6	pcs
C		Ø15x9mm	Cam lock	6	pcs
E		Ø30mm	Sticker	6	pcs
F		Ø6x50mm	Screw	6	pcs
G		M 4	Hex Key	1	pc
H		Ø6x15mm	End cap	4	pcs
I		Ø4x19mm	Bolt	4	pcs
J		160mm	Handle	2	pcs
K			Shelf holder	16	pcs
L			Plastic wedge	12	pcs
M		Ø3x17mm	Screw	12	pcs
N		Ø6X40mm	House lizard	2	pcs
O		Ø4X40mm	Screw	2	pcs
P		Ø4X14mm	Screw	2	pcs
Q			Anti-inversion piece	2	pcs
T		Ø26mm	Full crank Hinge	4	pcs
U		Ø3.5x12mm	Screw	24	pcs
V			Glue tube	1	pc

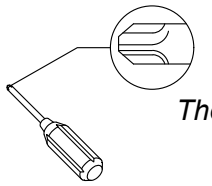


Philips head screwdriver required for assembly
(not included)

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.


Step1


A

X12

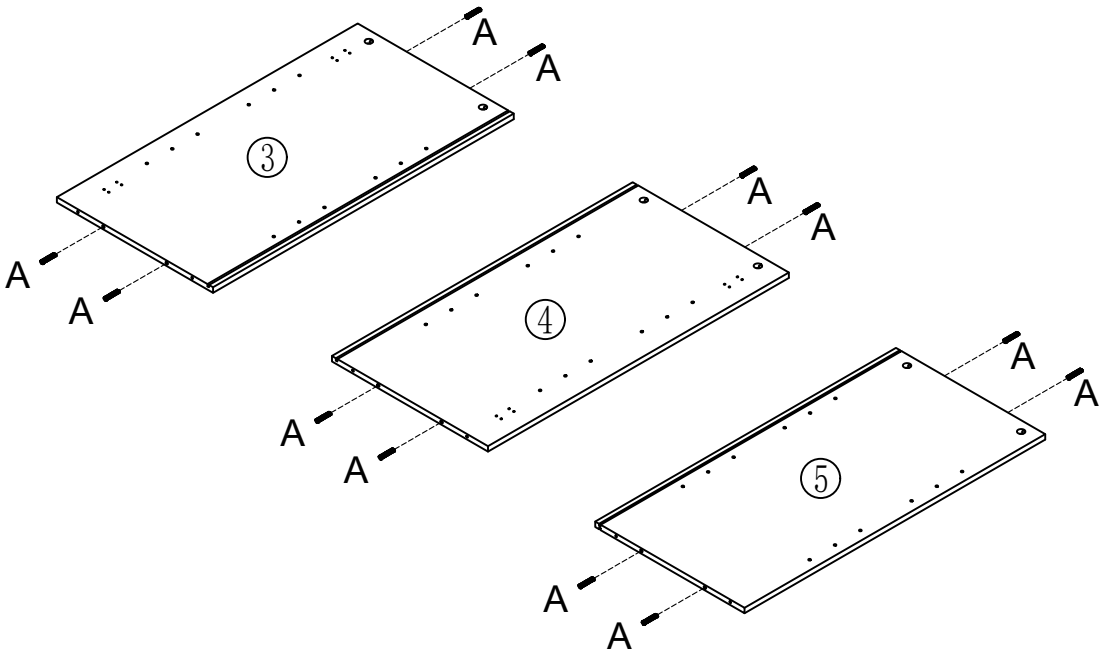


Step2

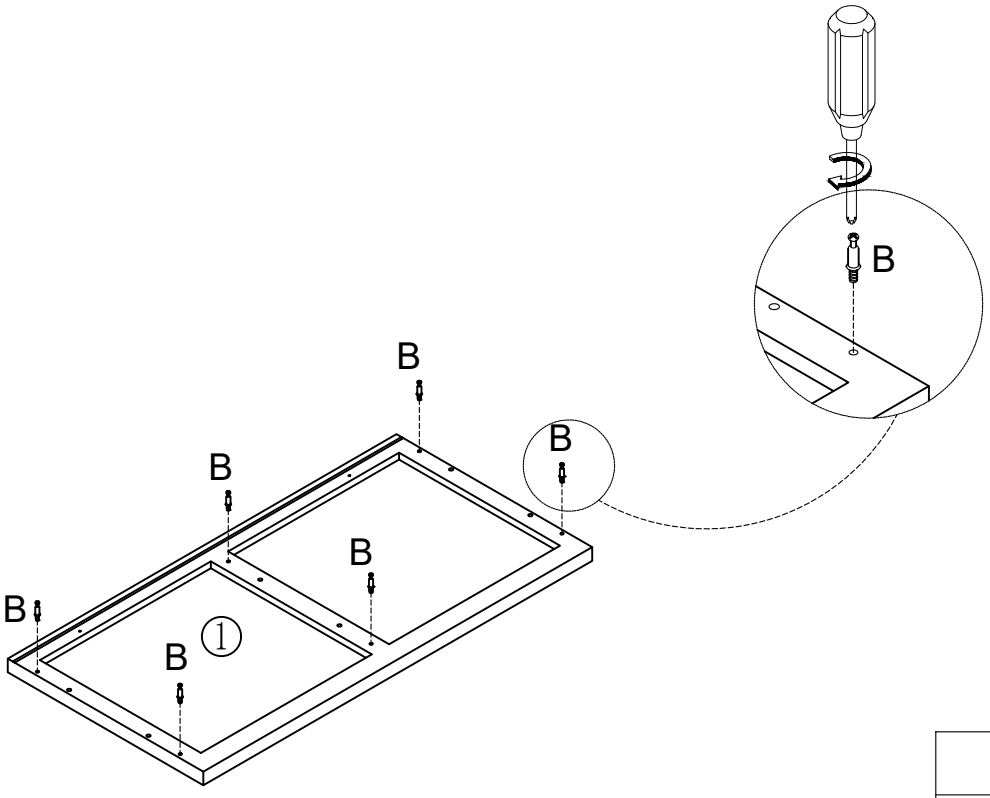

B

X6

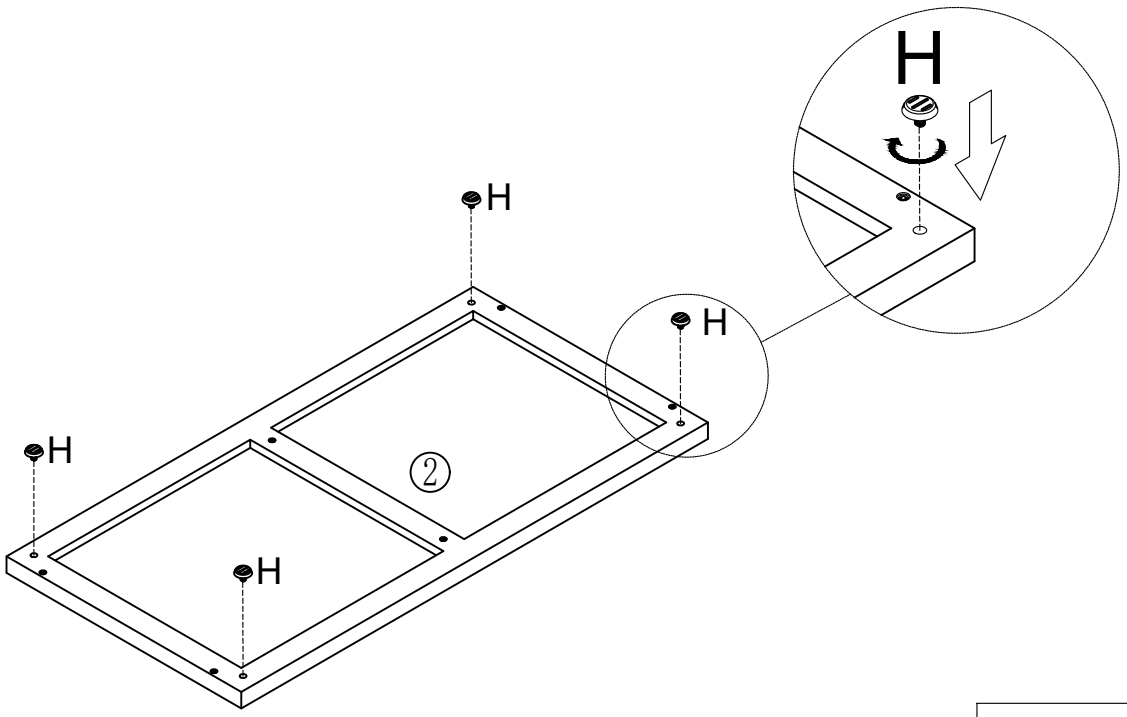
Step3



H


X4

Step4

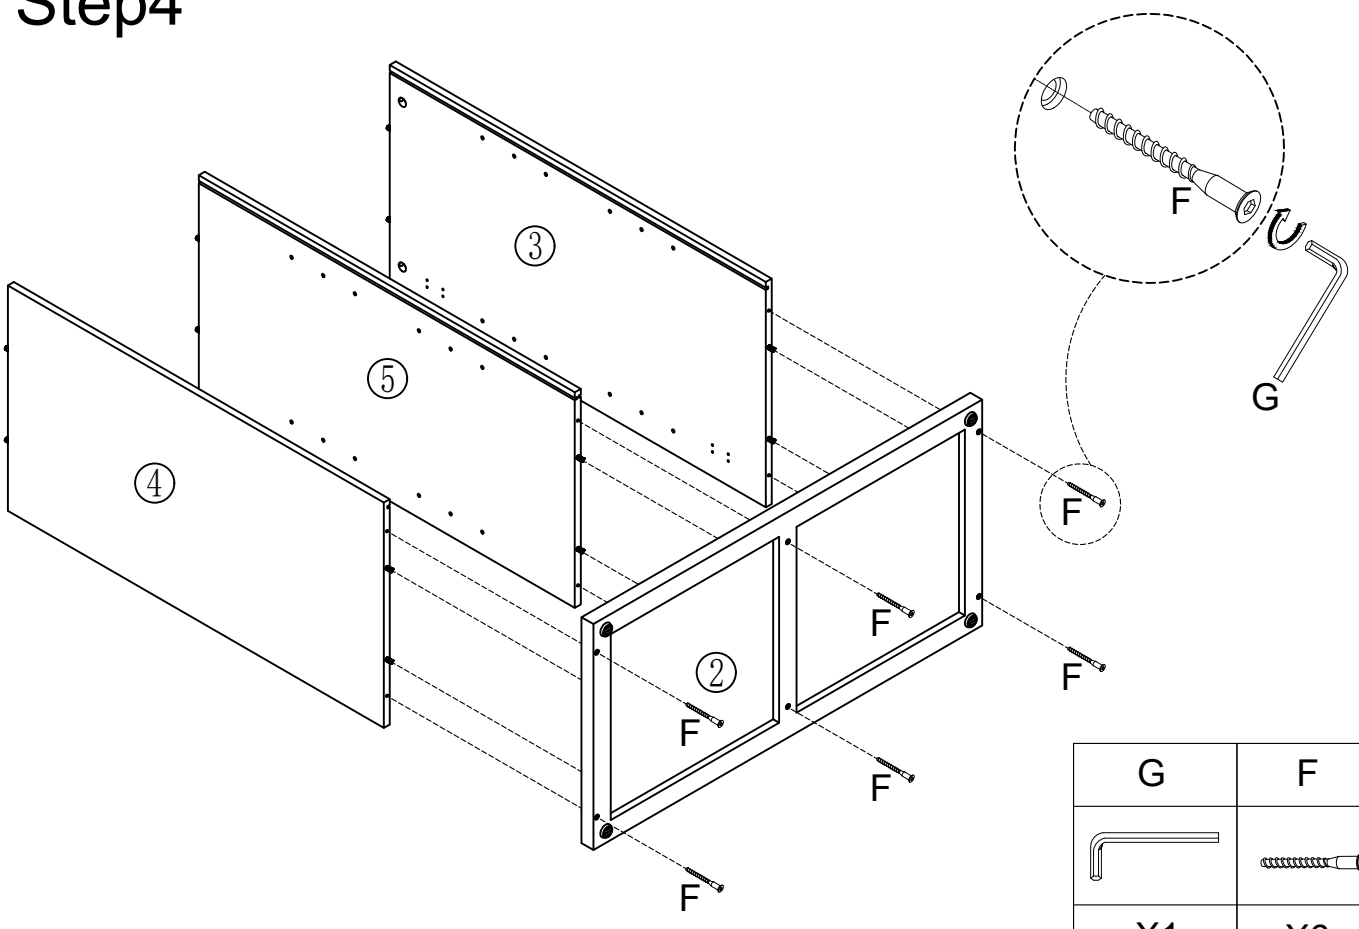


G	F
X1	X6

Step5

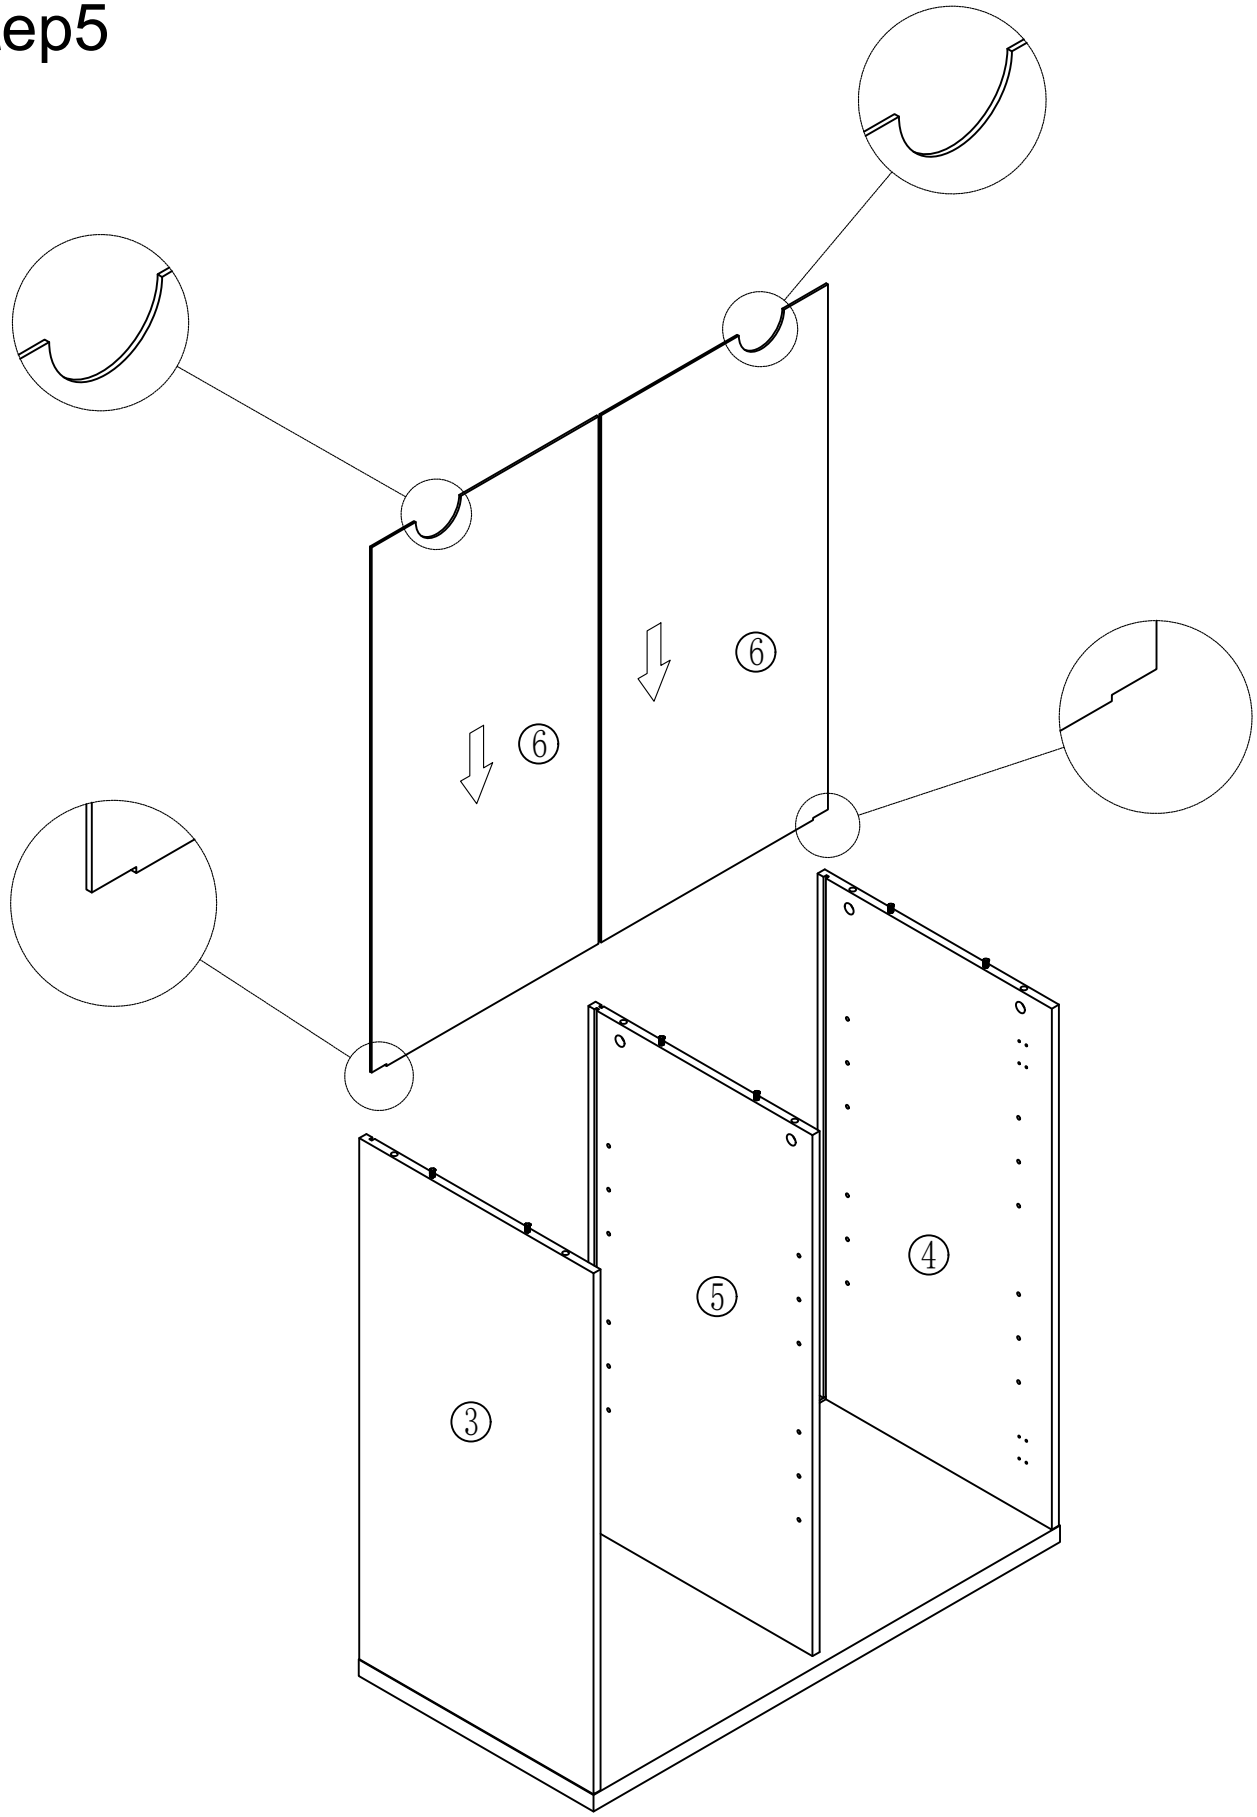



Step6

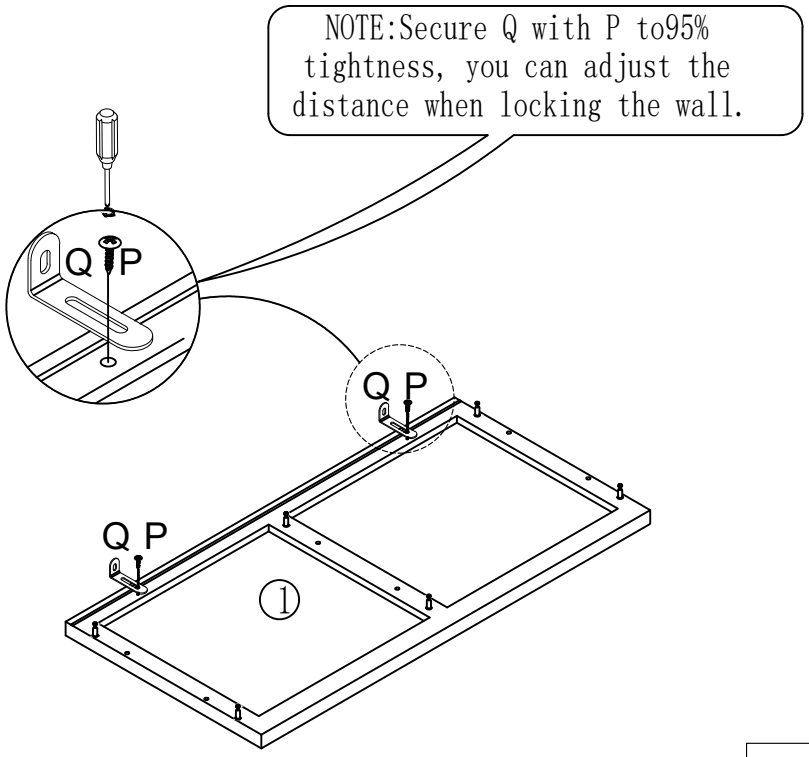

P	Q
	
X2	X2


Step7

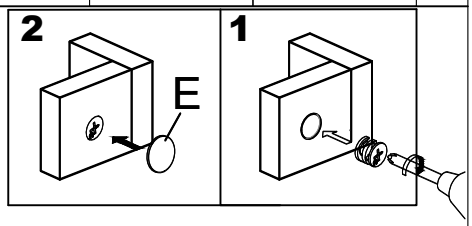


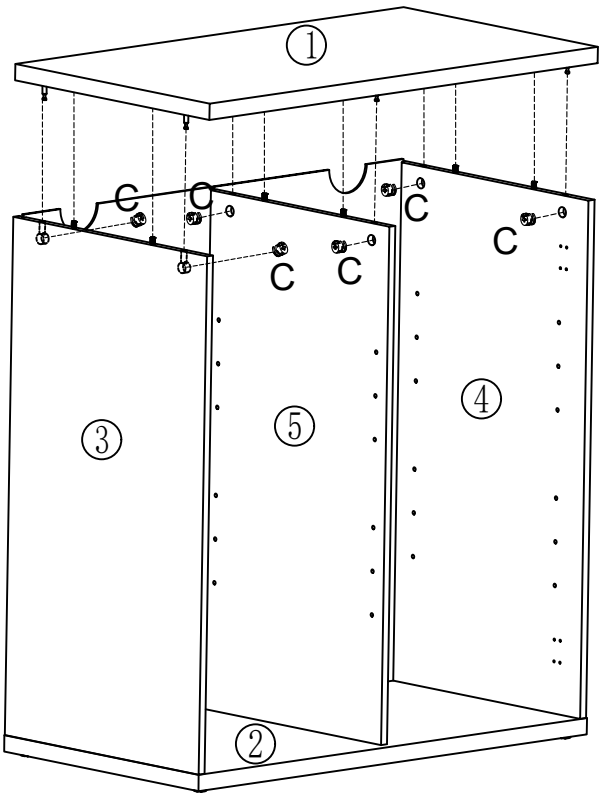


E	C
	
X6	X6

Step8

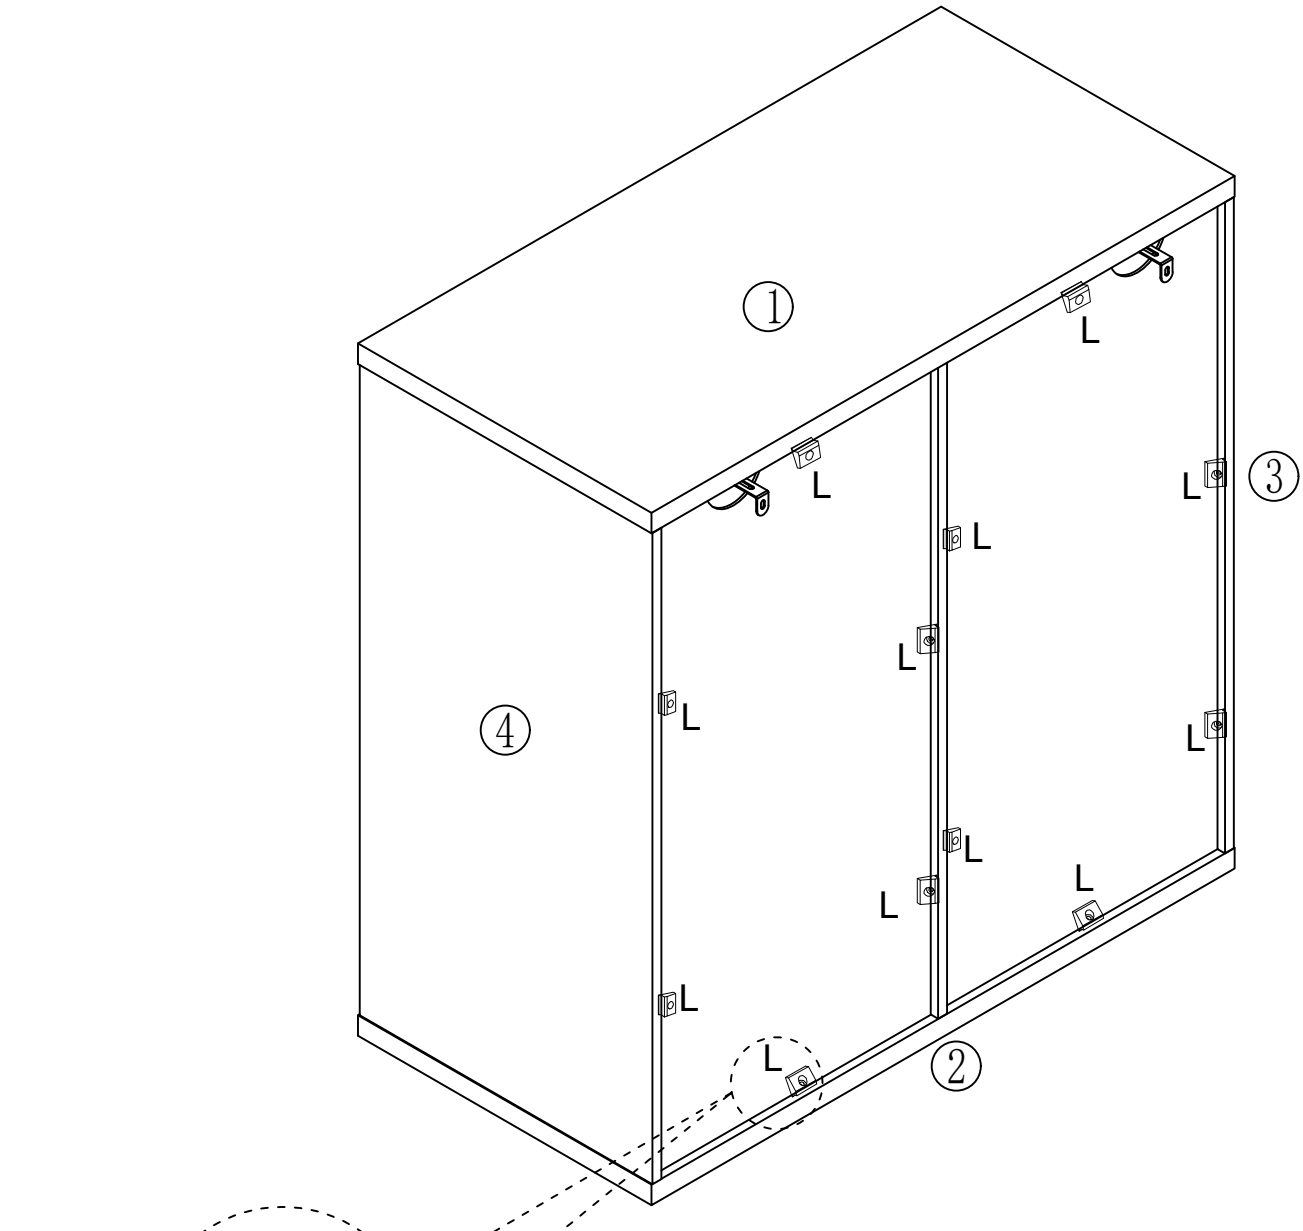


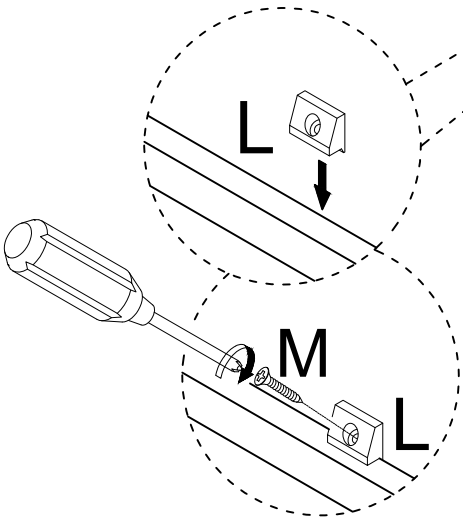

L	M
	
X12	X12


Step9

Make two holes 45MM deep

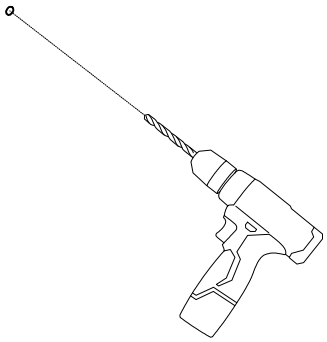

Wall


Step10

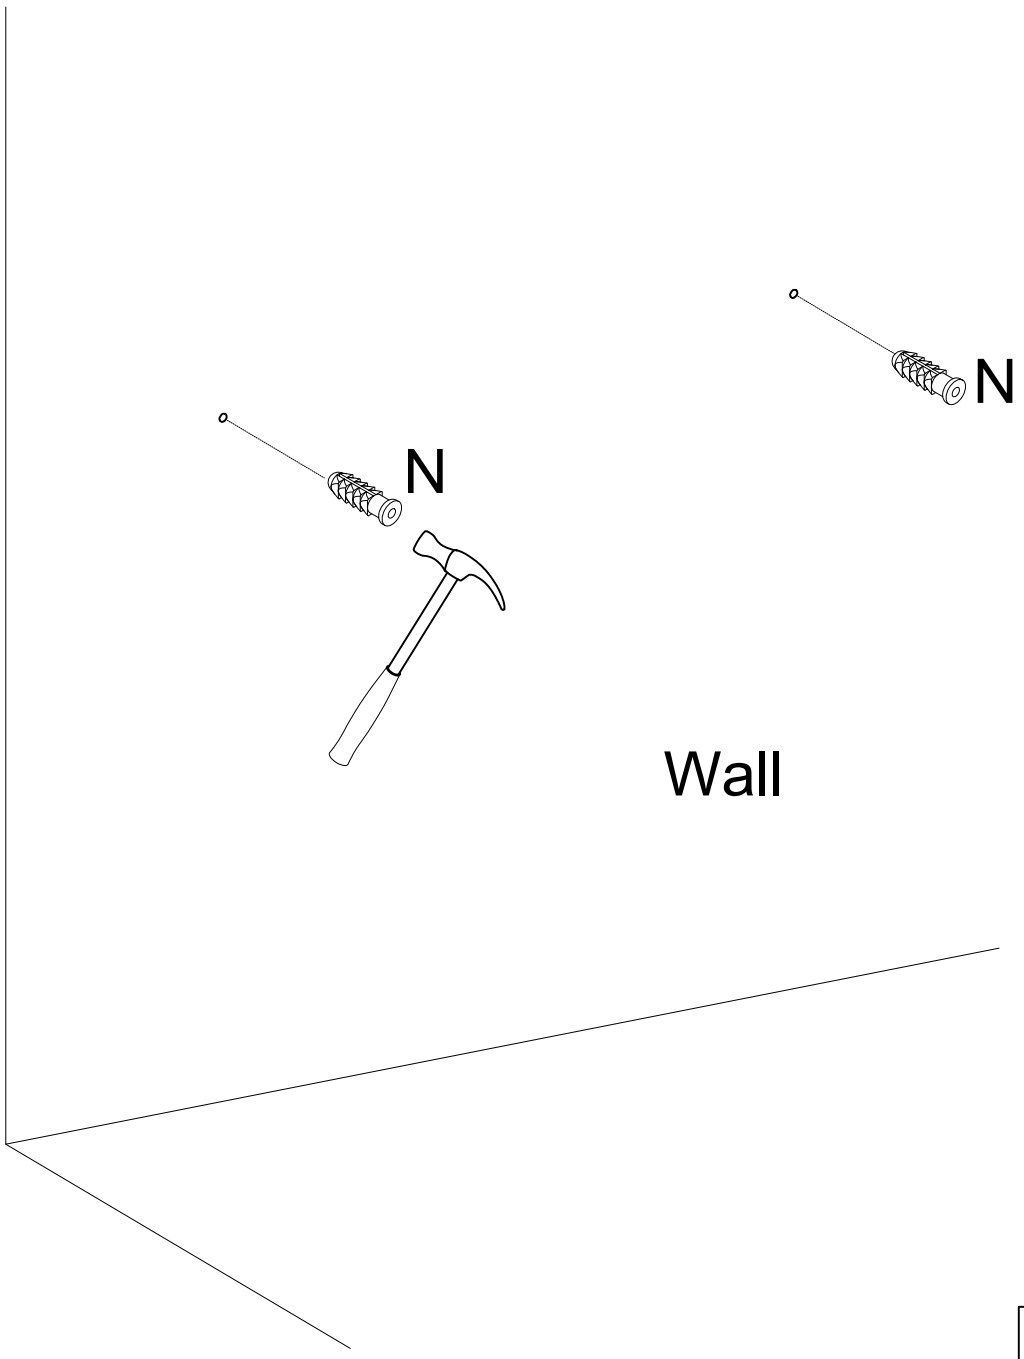

N


X2

Step11

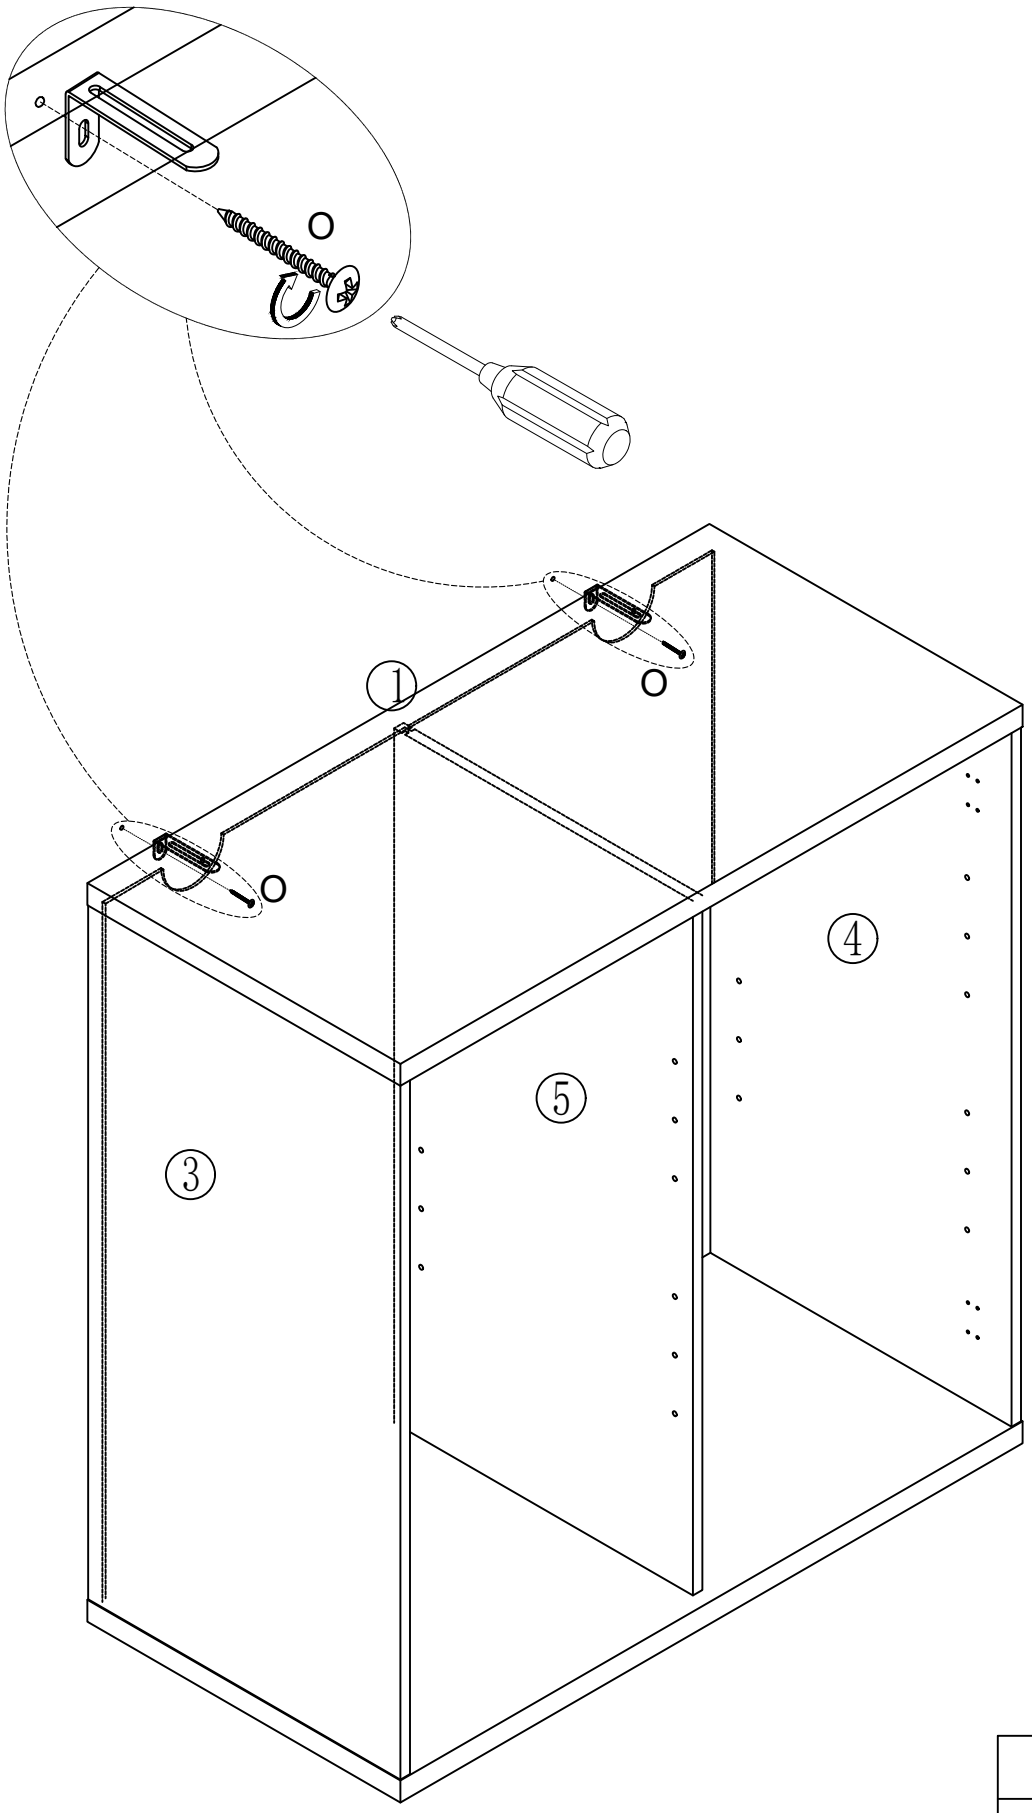

O
X2


Step12

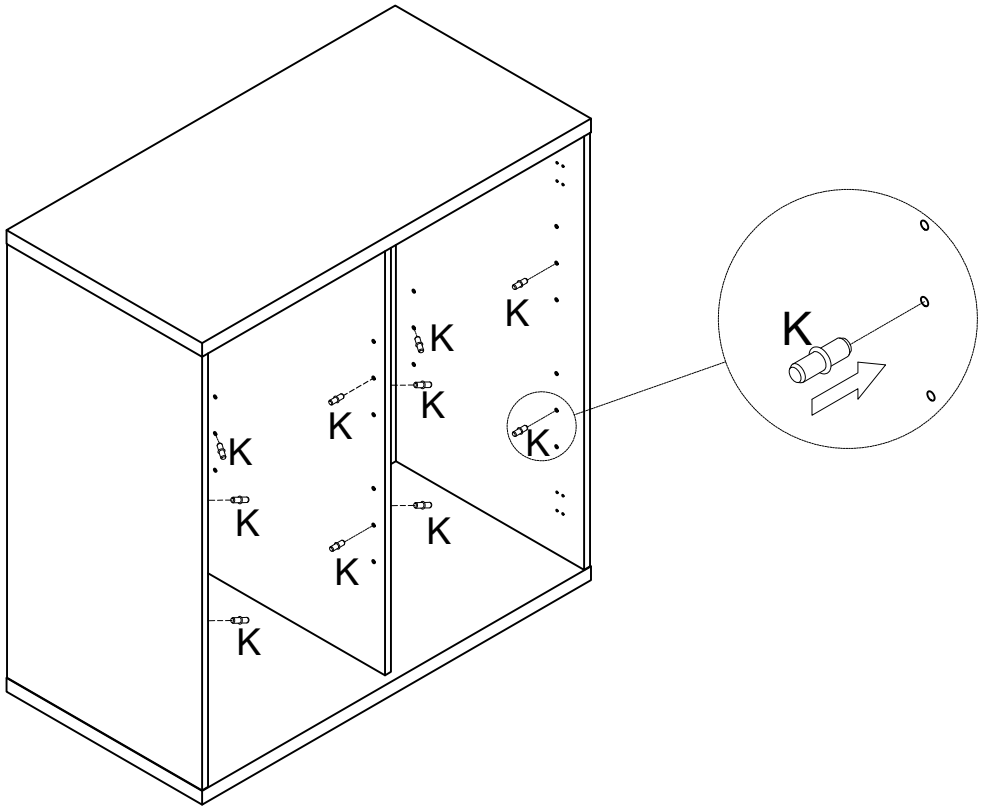

K


X16

Step13

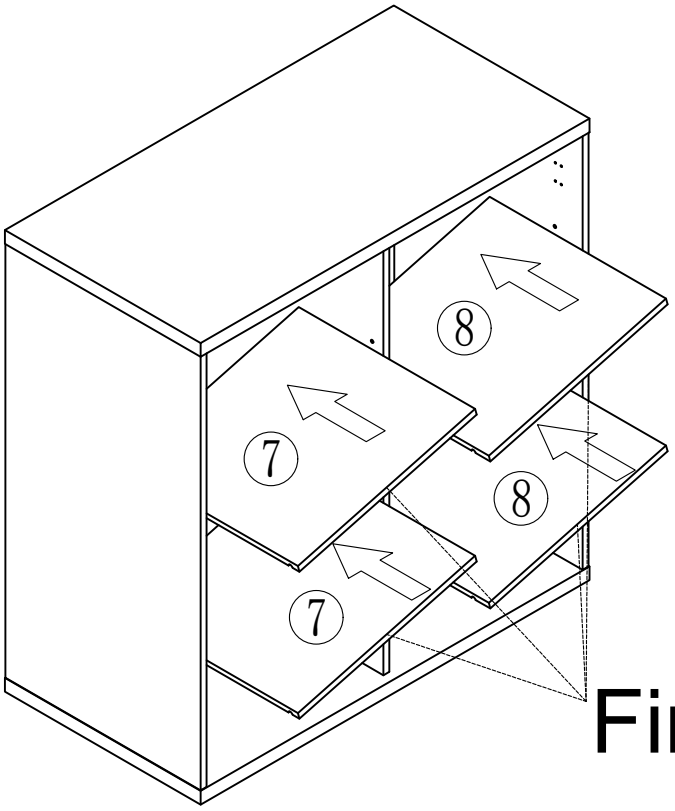


Finished edge


Step14

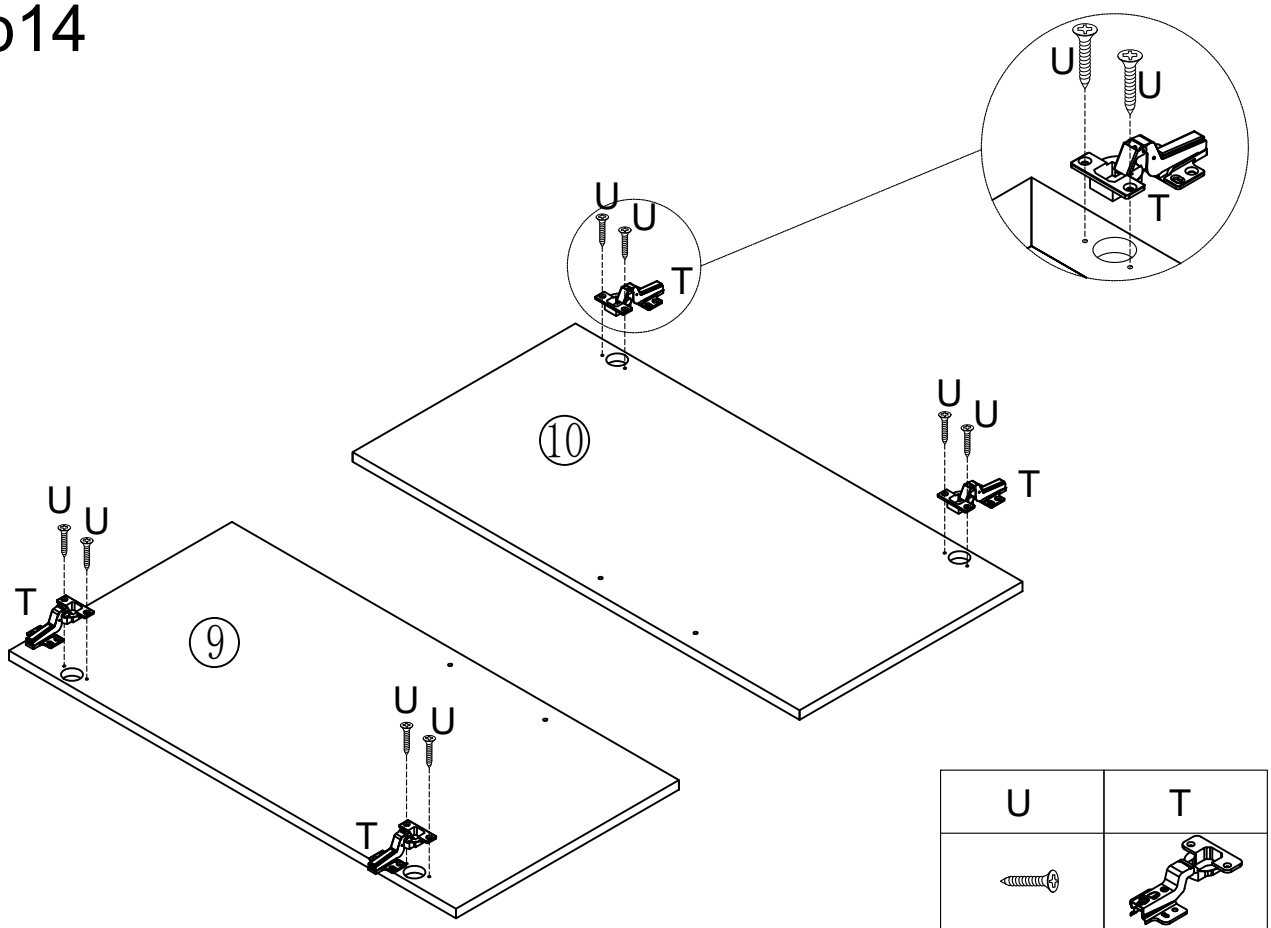


U	T
X8	X4

Step15

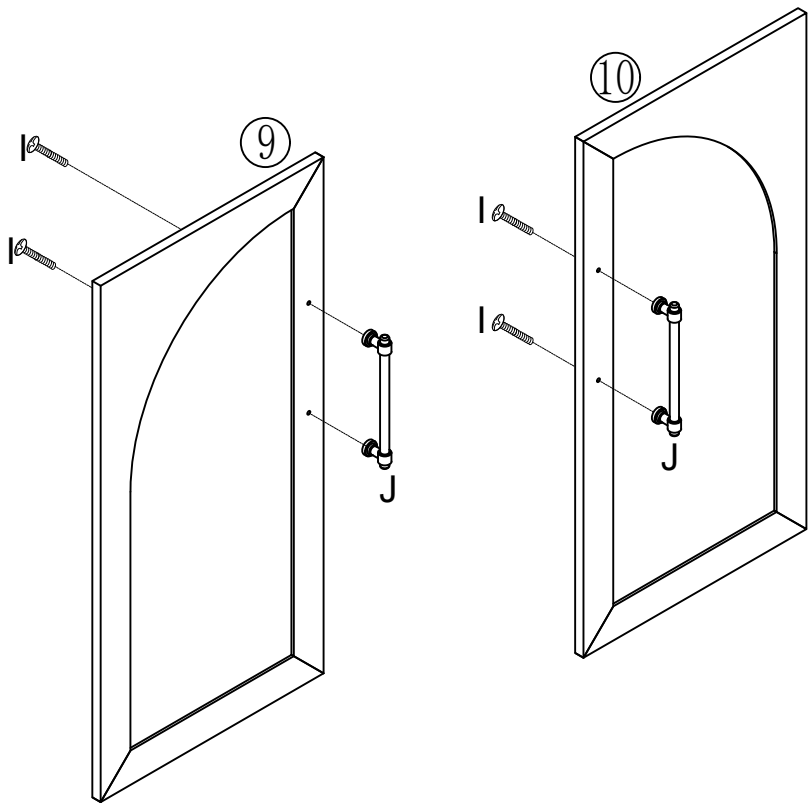


I	J
	
X4	X2

Step16

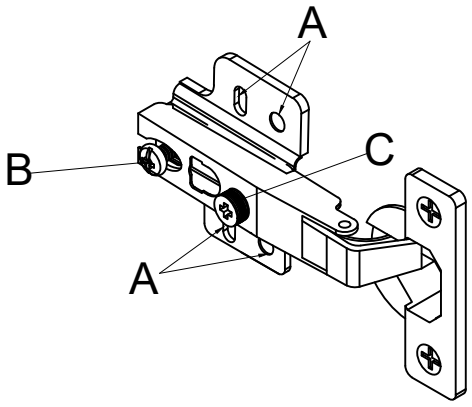


YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

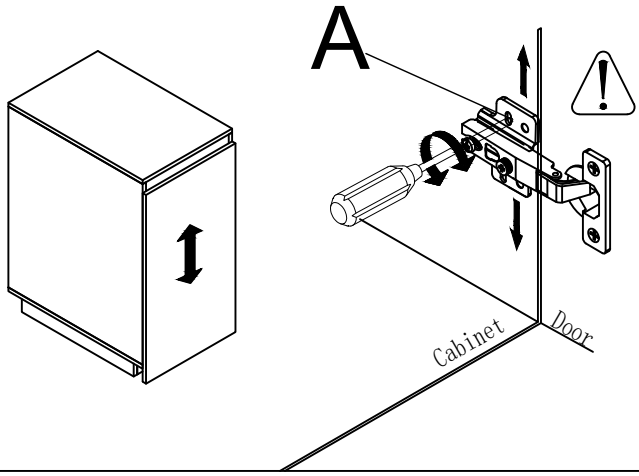


If you find a large gap above or bellow the door.

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

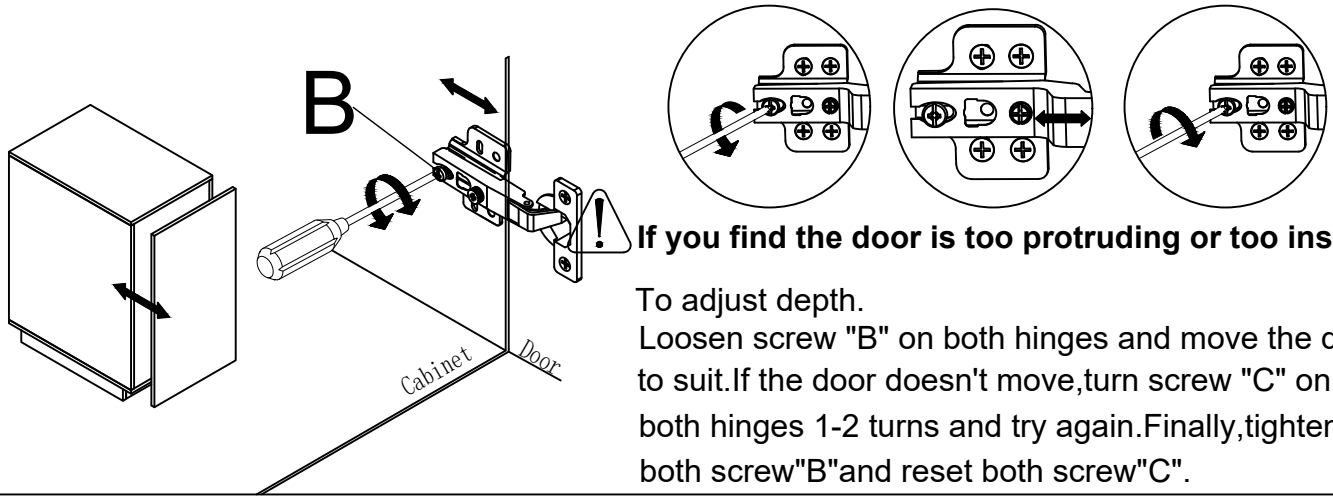

If you find the door is too protruding or too inside.


To adjust depth.
Loosen screw "B" on both hinges and move the door to suit.If the door doesn't move,turn screw "C" on both hinges 1-2 turns and try again.Finally,tighten both screw"B"and reset both screw"C".

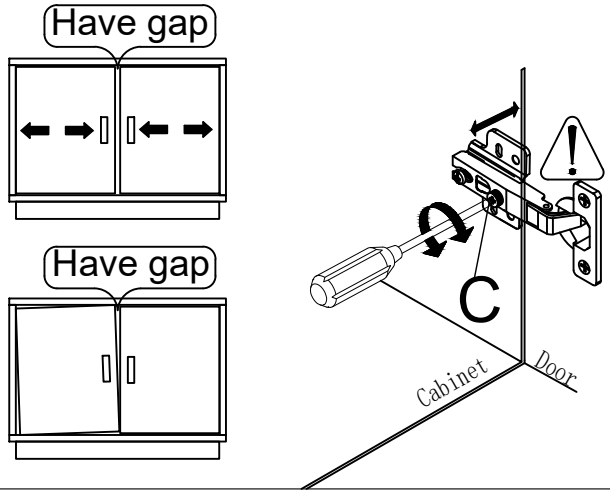


If you notice large gaps between or beside the doors, or if two doors in middle get stuck together, don't worry — this is not a product defect.

To adjust side ways.
Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.

Step17

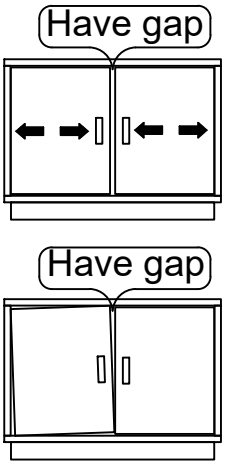


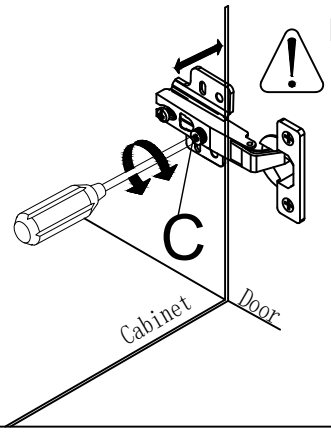

If you find a large gap between or beside the doors. Don't worry,It's not the problem with product.

To adjust side ways.
Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.


NOTE:Refer to the images to install #10 doors at the indicated position

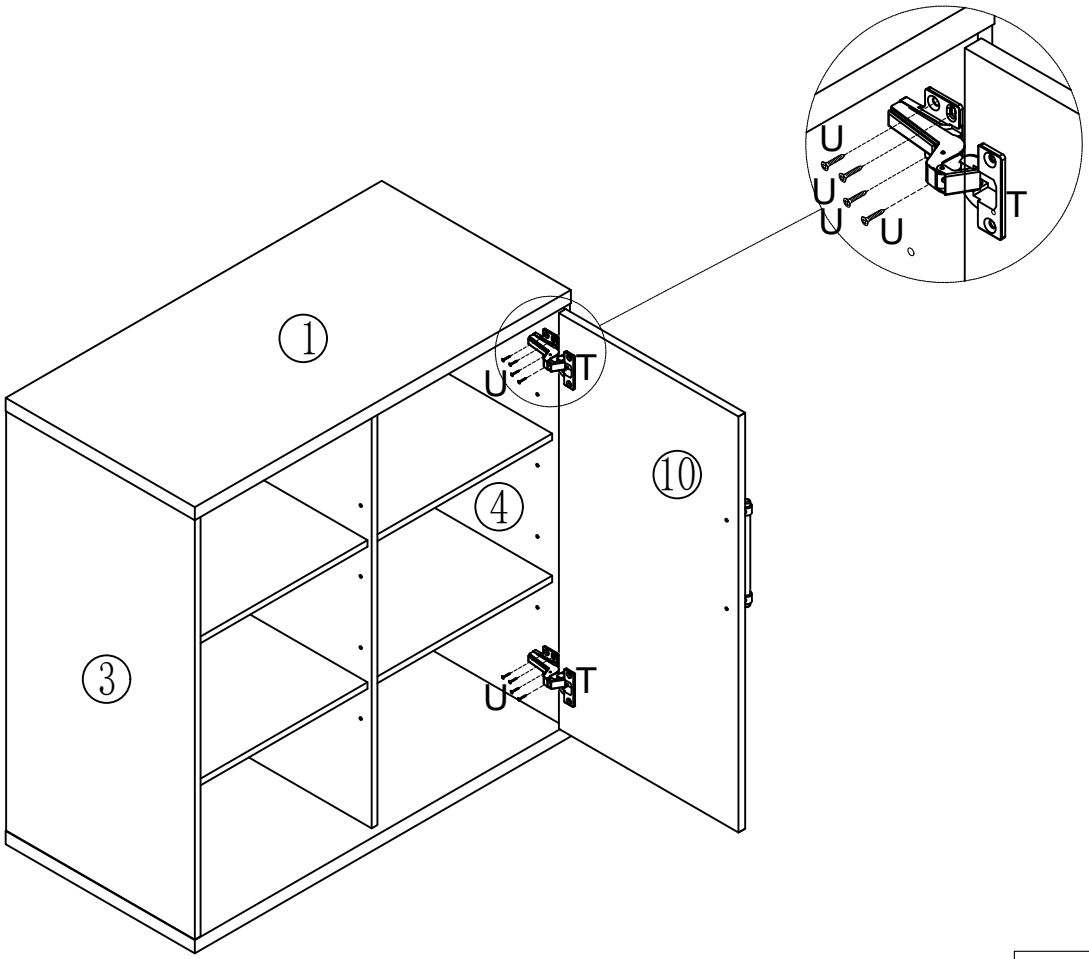



U

X8

Step18

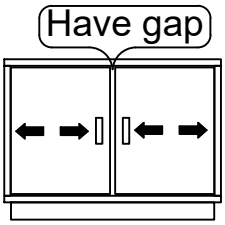

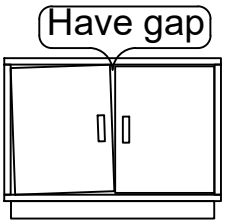


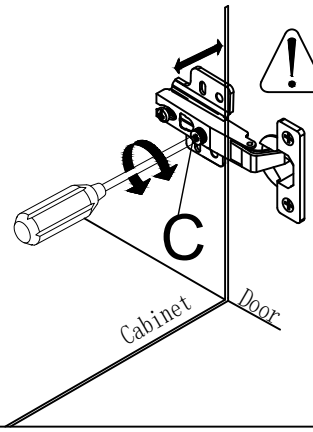

If you find a large gap between or beside the doors. Don't worry,It's not the problem with product.

To adjust side ways.
Turn screw"C"clockwise or counterclockwise on both hinges until the door is in the desired position.

NOTE:Refer to the images to install #9 doors at the indicated position

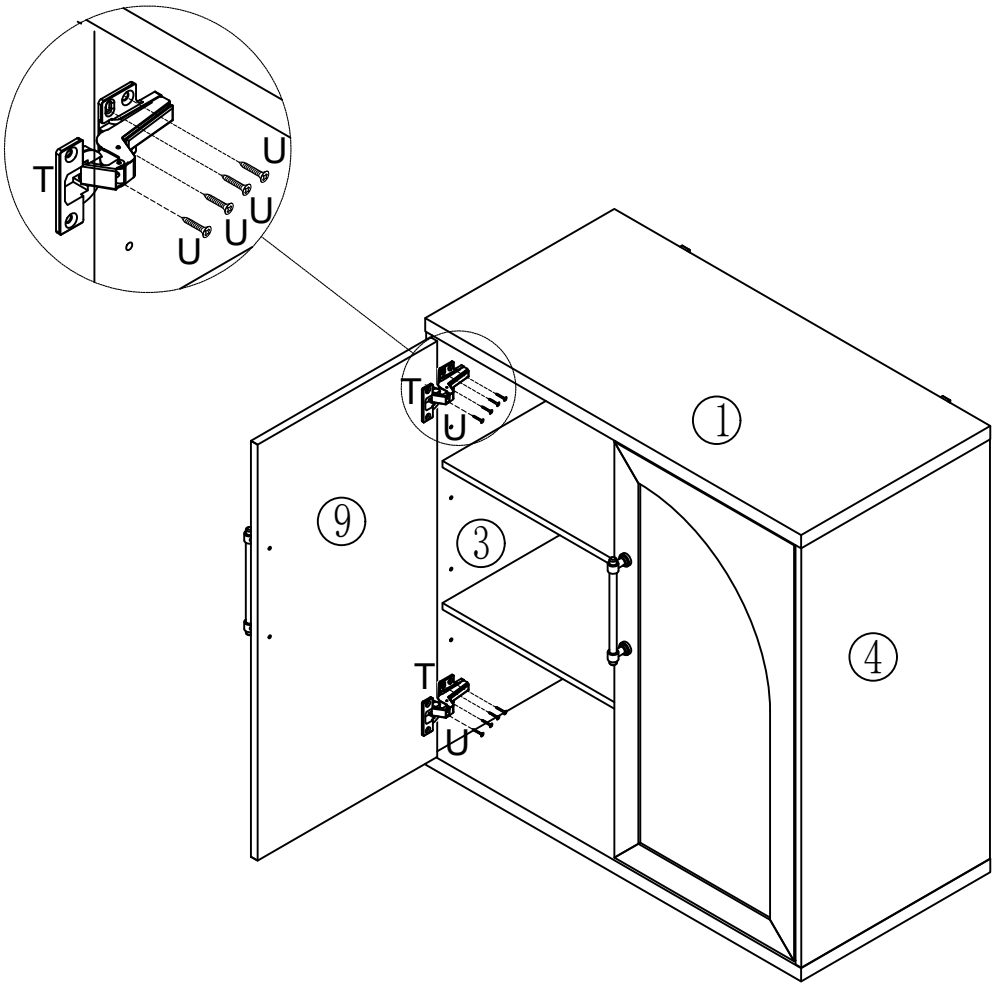

U

X8

Step19

Final Assembly

