



BOX SPRING Set-up Instruction


Size: Full/Queen/ King/ Cal King

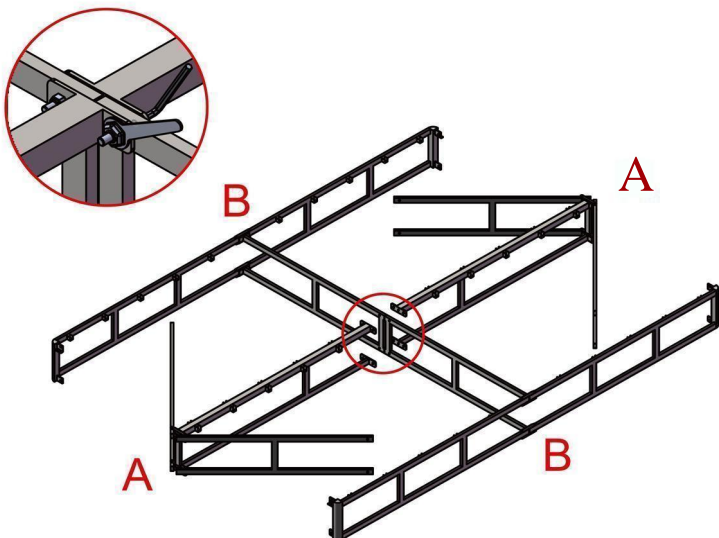

Step 1: Unfold and layout parts A & B; Joint the center parts with screws as shown

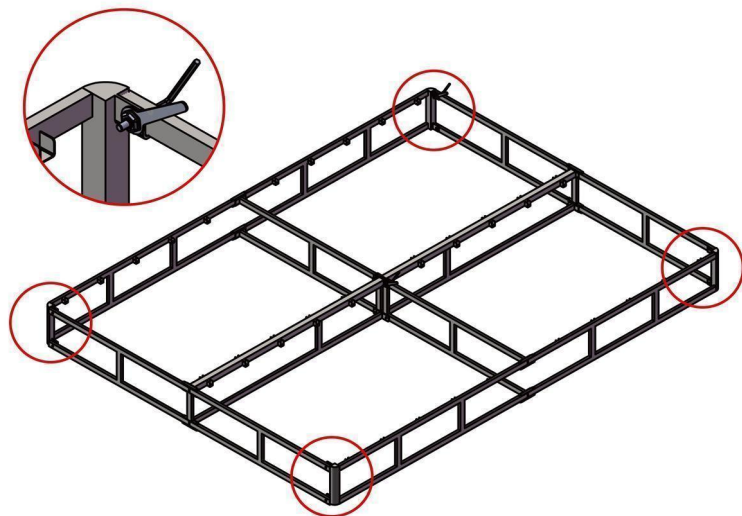


Step 2: Joint four corners with screws as shown

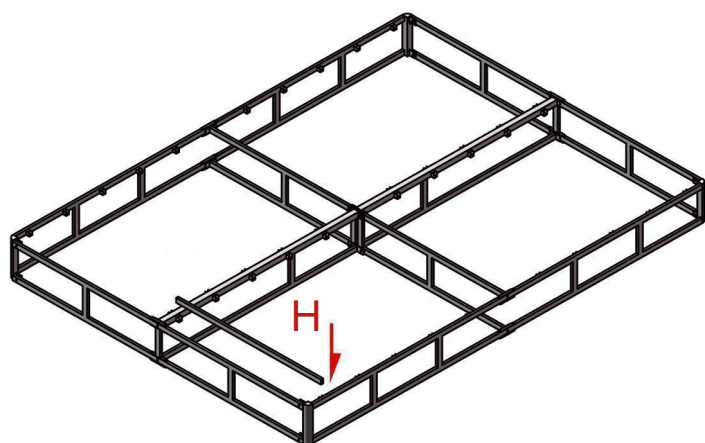


Step 3: Insert 20 H slats


Tips: For the KING size. The length and width of the cover look almost the same but actually they are different in size. Kindly reverse the direction if the cover doesn't work.

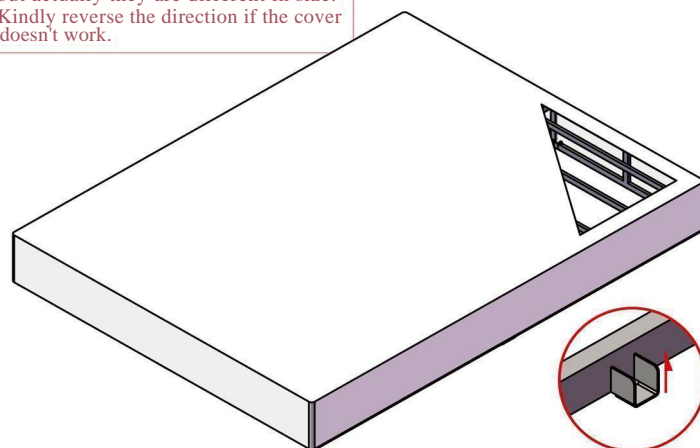

Step 4: Put on the fabric cover, completed

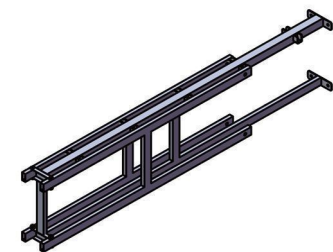

A×2PCS

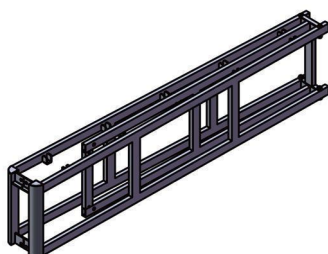

B×2PCS



H×20PCS



E×12PCS



F×12PCS



G×1PCS



I×1PCS