




Assembly Instruction

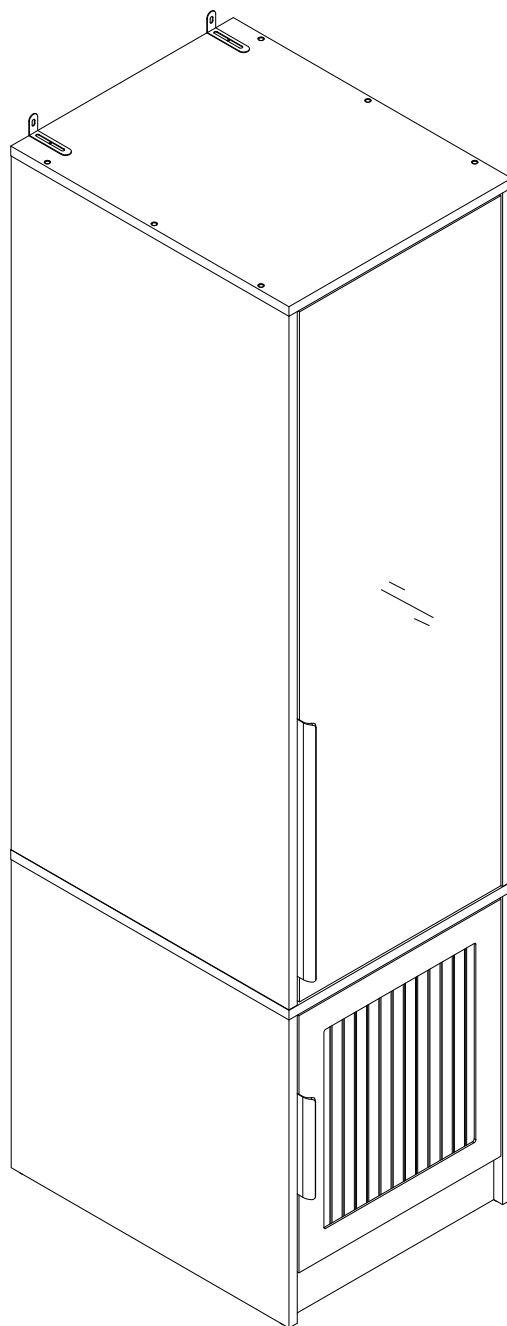


HINGE INSTRUCTIONS

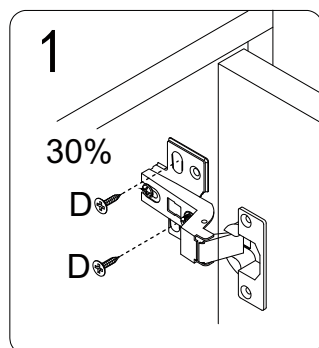


Tighten the screws only 30% as long as the door can be secured.

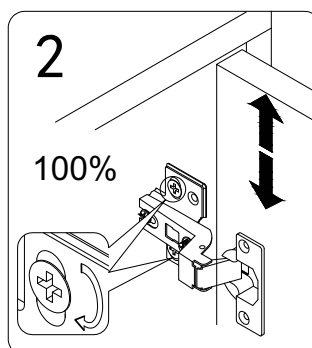


Move the door up and down until it is centred, then tighten the screw 100%.

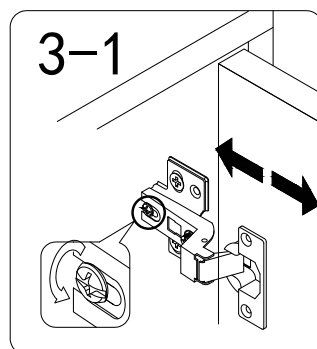


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's aligned to side board.

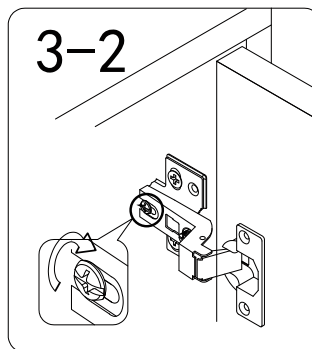


Tighten the screw **clockwise** once the door is **aligned**.

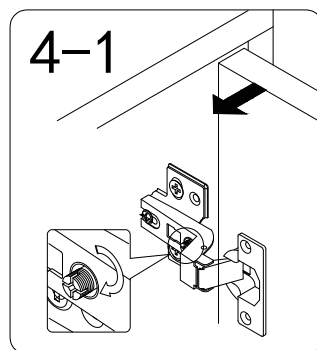

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

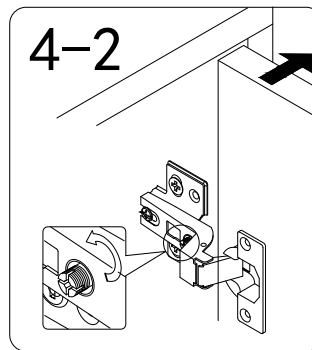

To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.


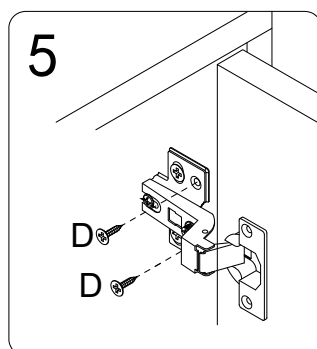














After adjusting the doors properly above, finally tighten these two screws and secured the door.

A	X19	B	X19	C	X2	D	X34	E	X1	F	X12	G	X14	H	X2
															
M6x35mm						M3.5x14mm		4mm		M5x40mm					
I	X1	J	X4	K	X2	M	X2	N	X2	O	X5	P	X2	Q	X2
															
				M4x35mm								M4x12mm			
S	X2	T	X16	U	X12	V	X4	W	X1	X	X4				
															
M3x12mm		M3x16mm				M3.5x12mm									


Cam Lock Fastening System

Insert the cam into the hole first, then insert the cam lock and lock it.

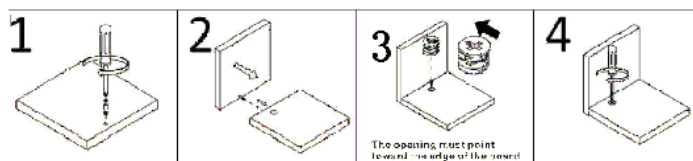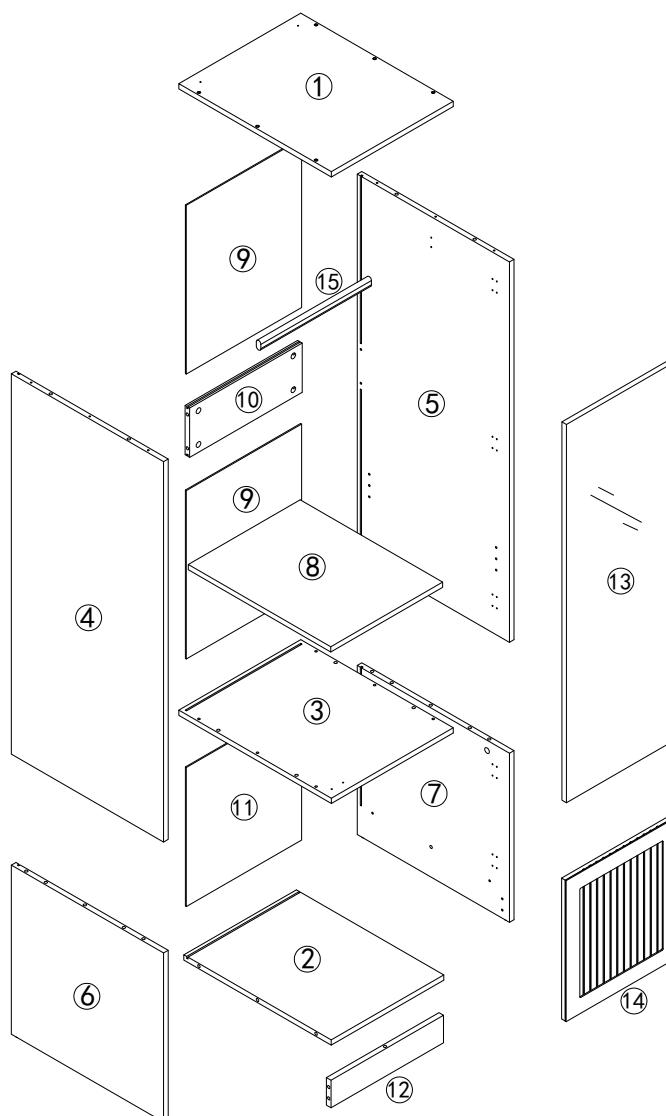

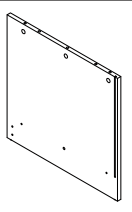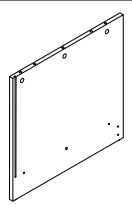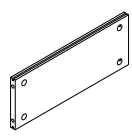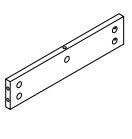①		②		③		④	
1PC		1PC		1PC		1PC	
⑤		⑥		⑦		⑧	
1PC		1PC		1PC		1PC	
⑨		⑩		⑪		⑫	
2PCS		1PC		1PC		1PC	
⑬		⑭					
1PC							
1PC		1PC					

1

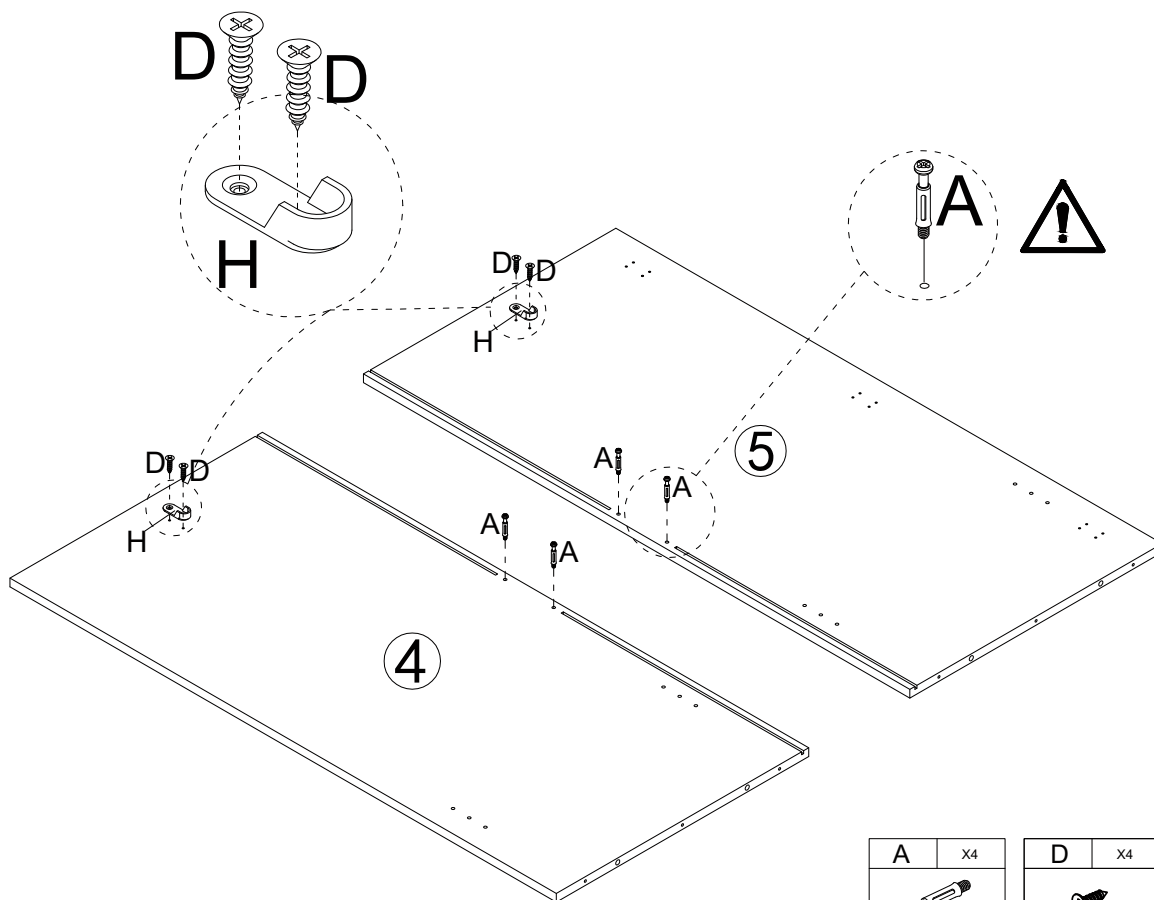


A	X4
	
M6x35mm	

D	X4
	
M3.5x14mm	


H	X2
	

2

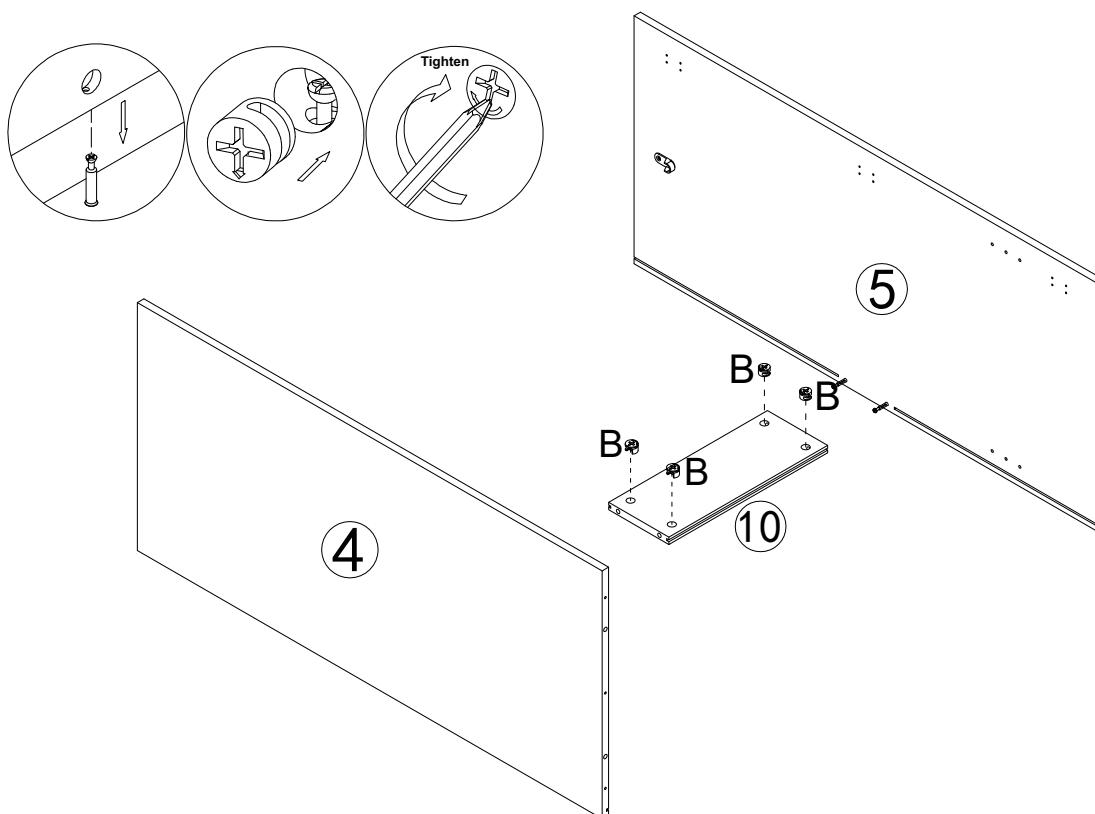


B	X4
	

3

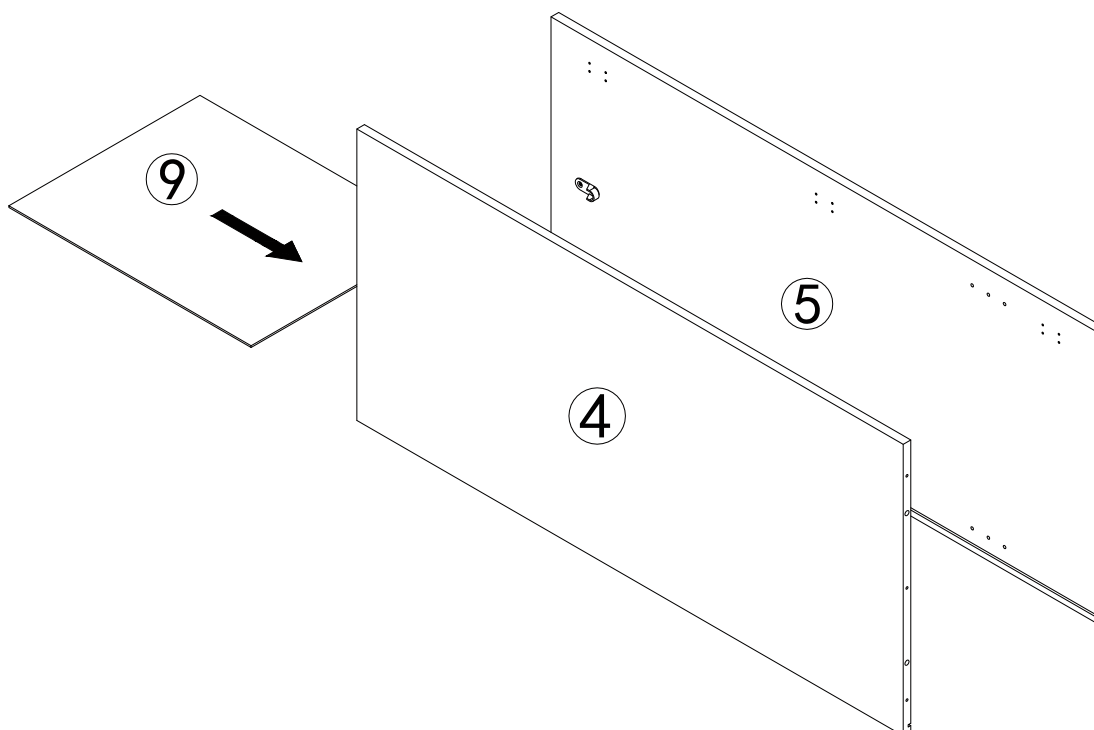

4

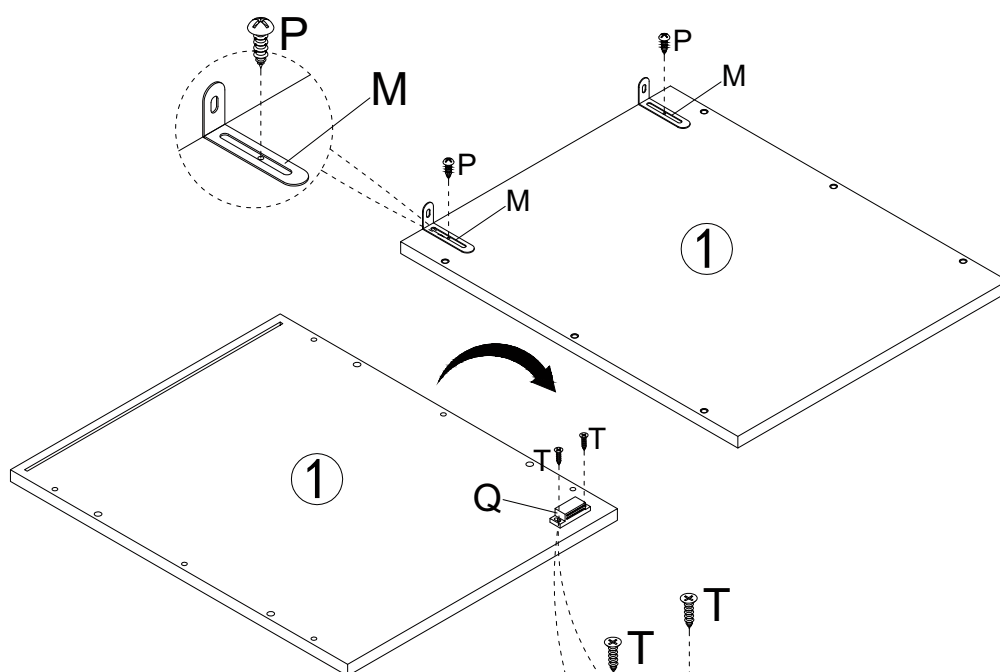

Flip the board over
to the other side to
screw P


M	x2
	

P	x2
	
M4x12mm	

T	x2
	
M3x16mm	

Q	x1
	


5

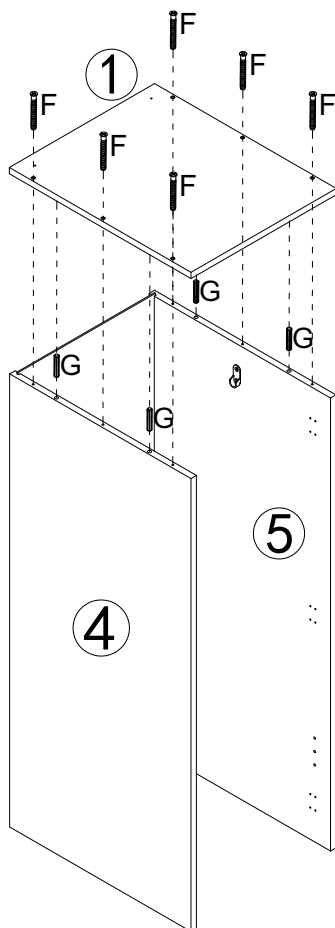


G	X4
	

F	X6
	
M5x40mm	


6

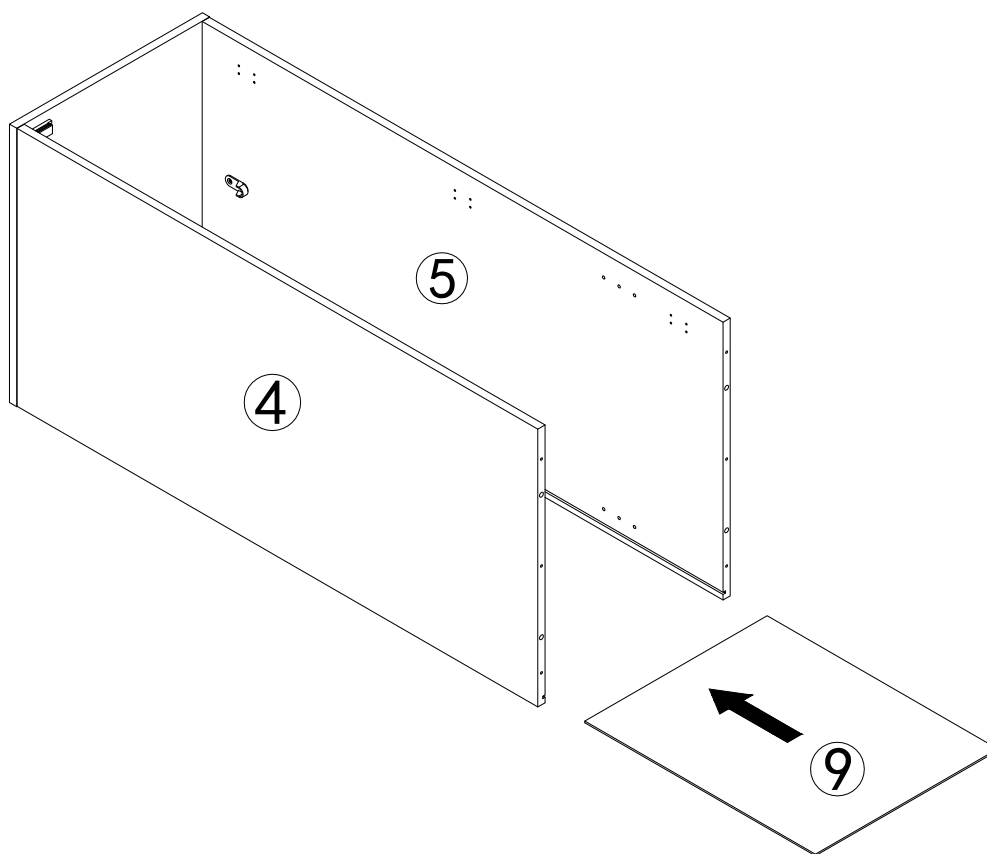


7

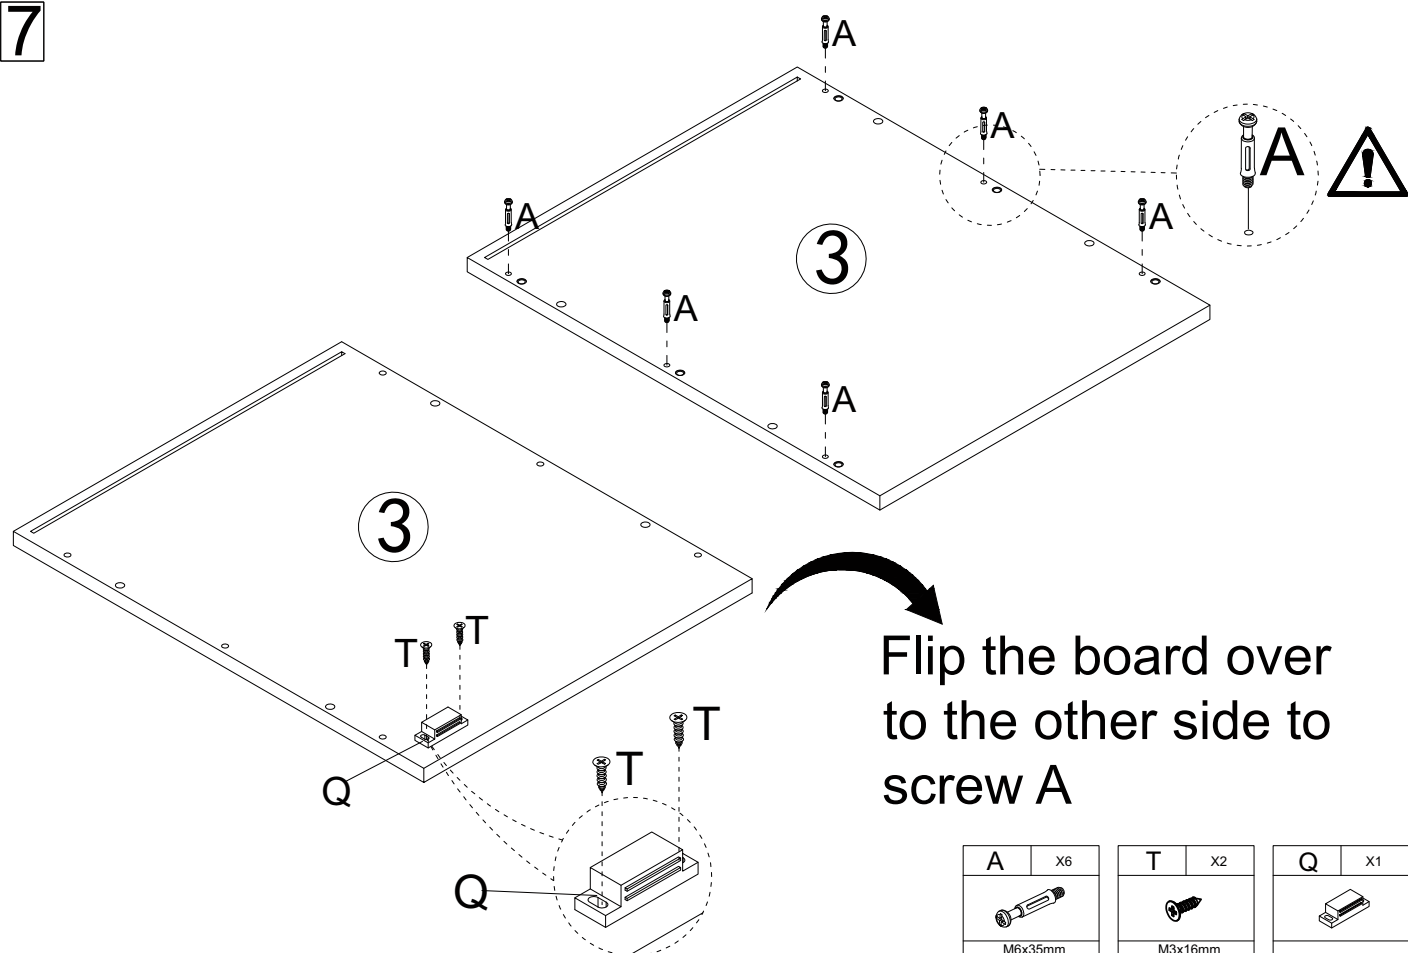

8

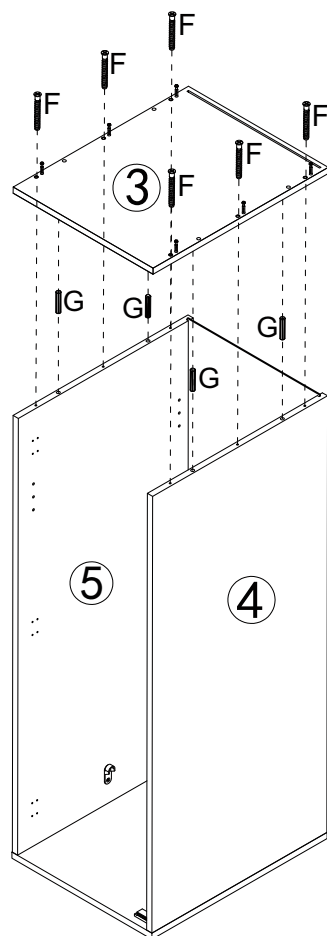


9

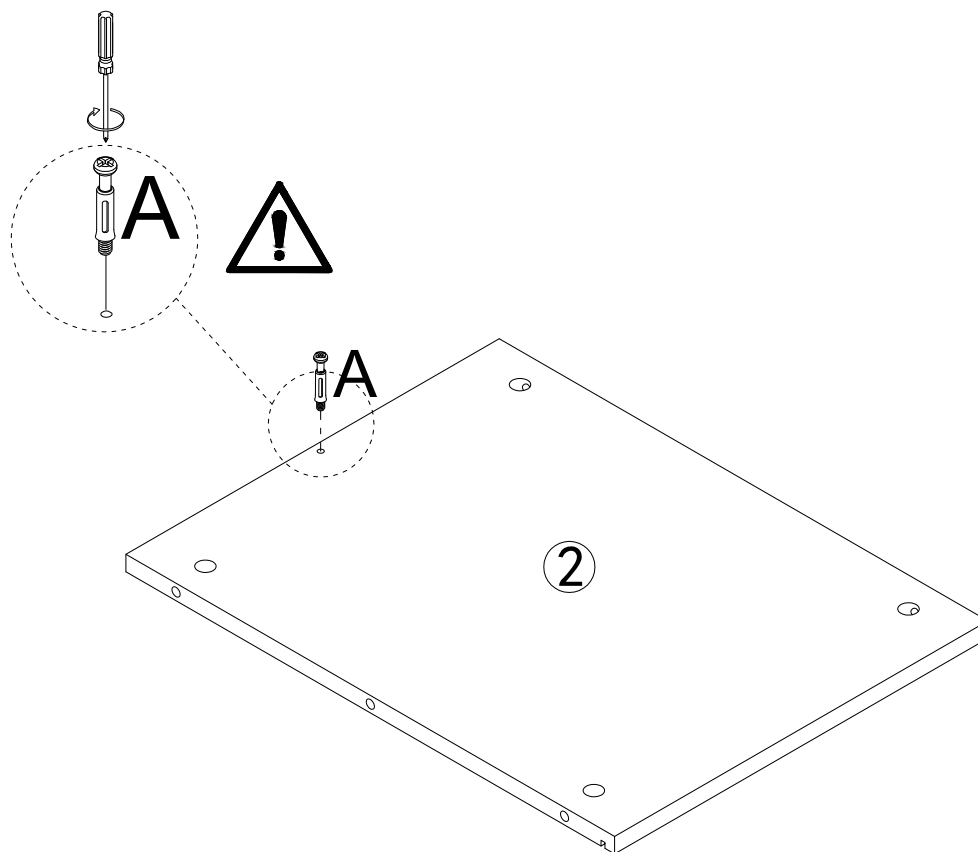


A	x1
	
M6x35mm	

10

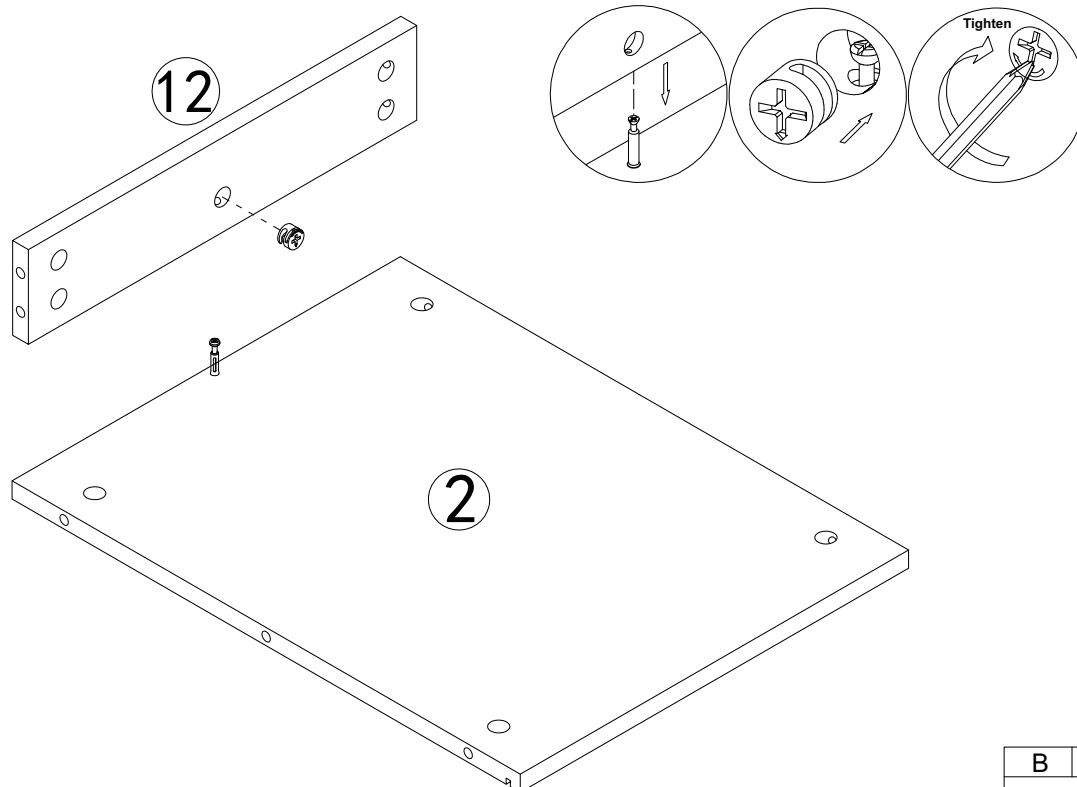


B	x1
	

11

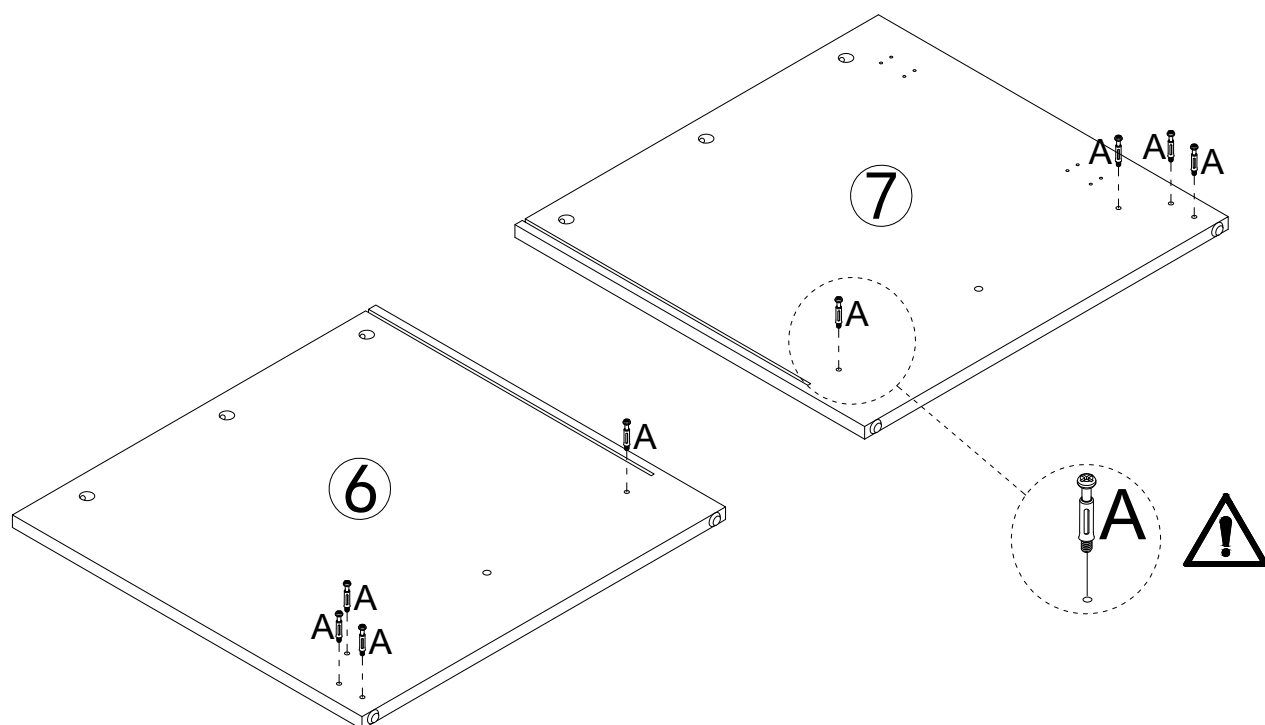

A	X8
	
M6x35mm	


12-1

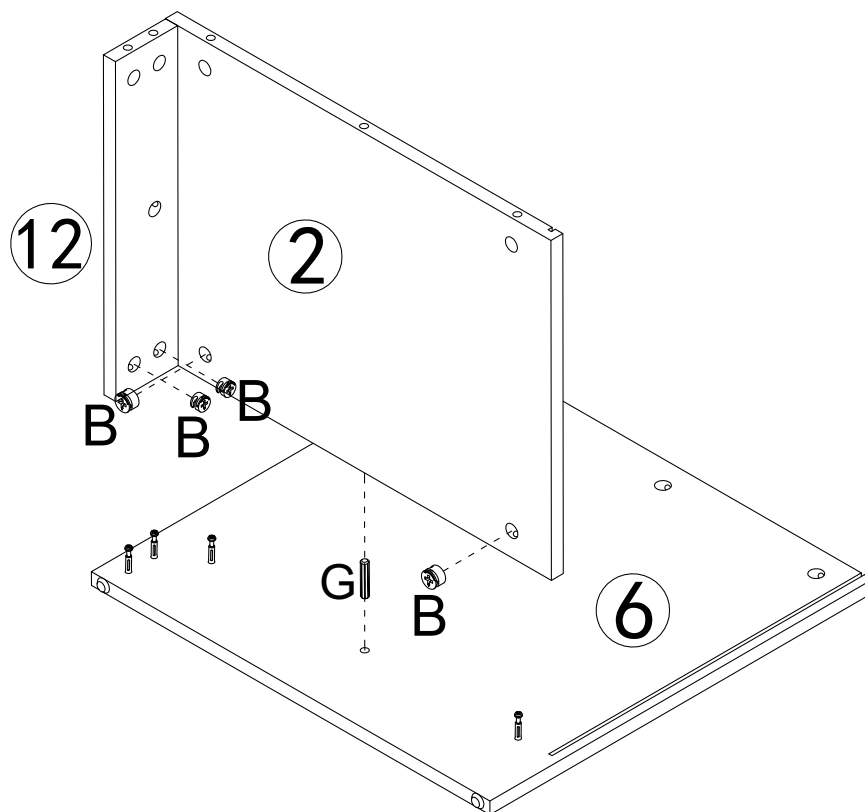

B	X4
	

G	X1
	


12-2

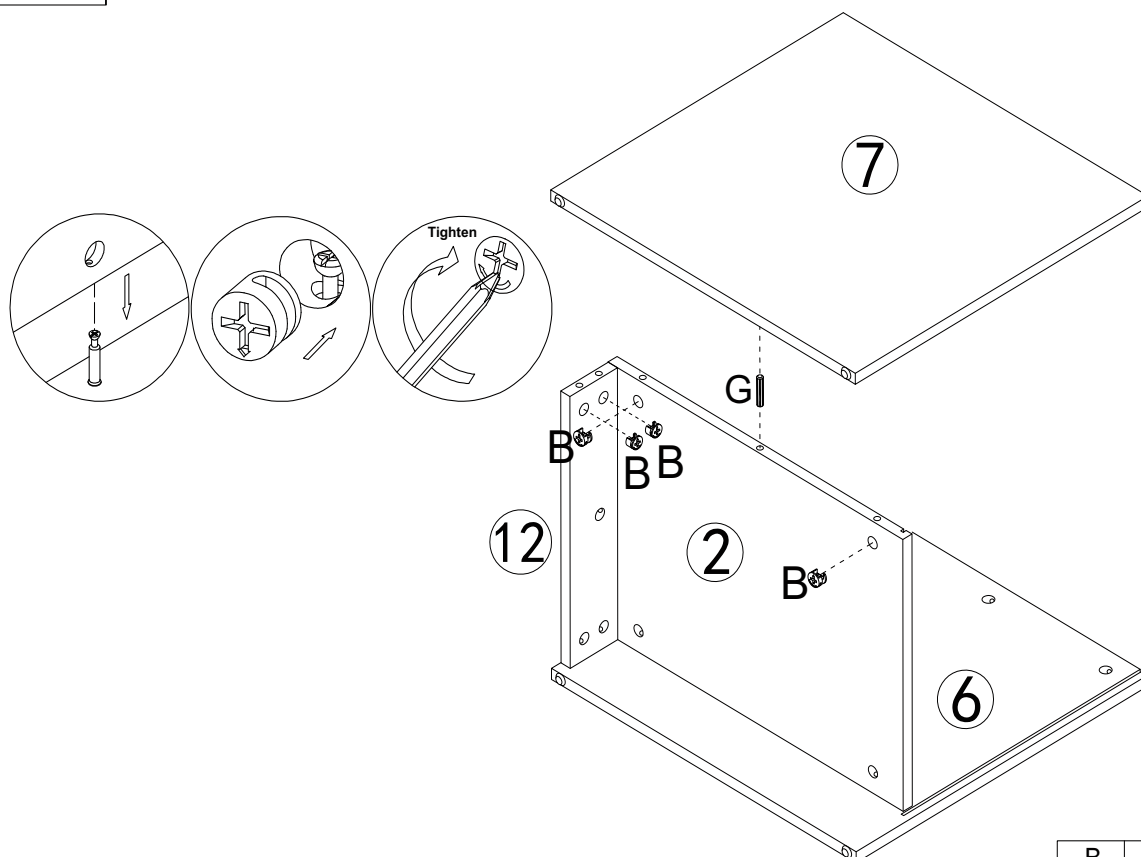


B	X4
	


G	X1
	

13

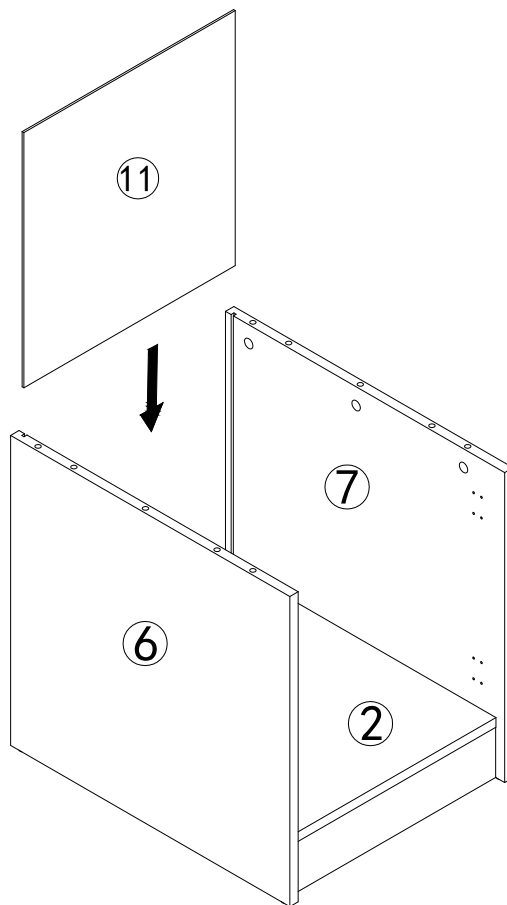


14

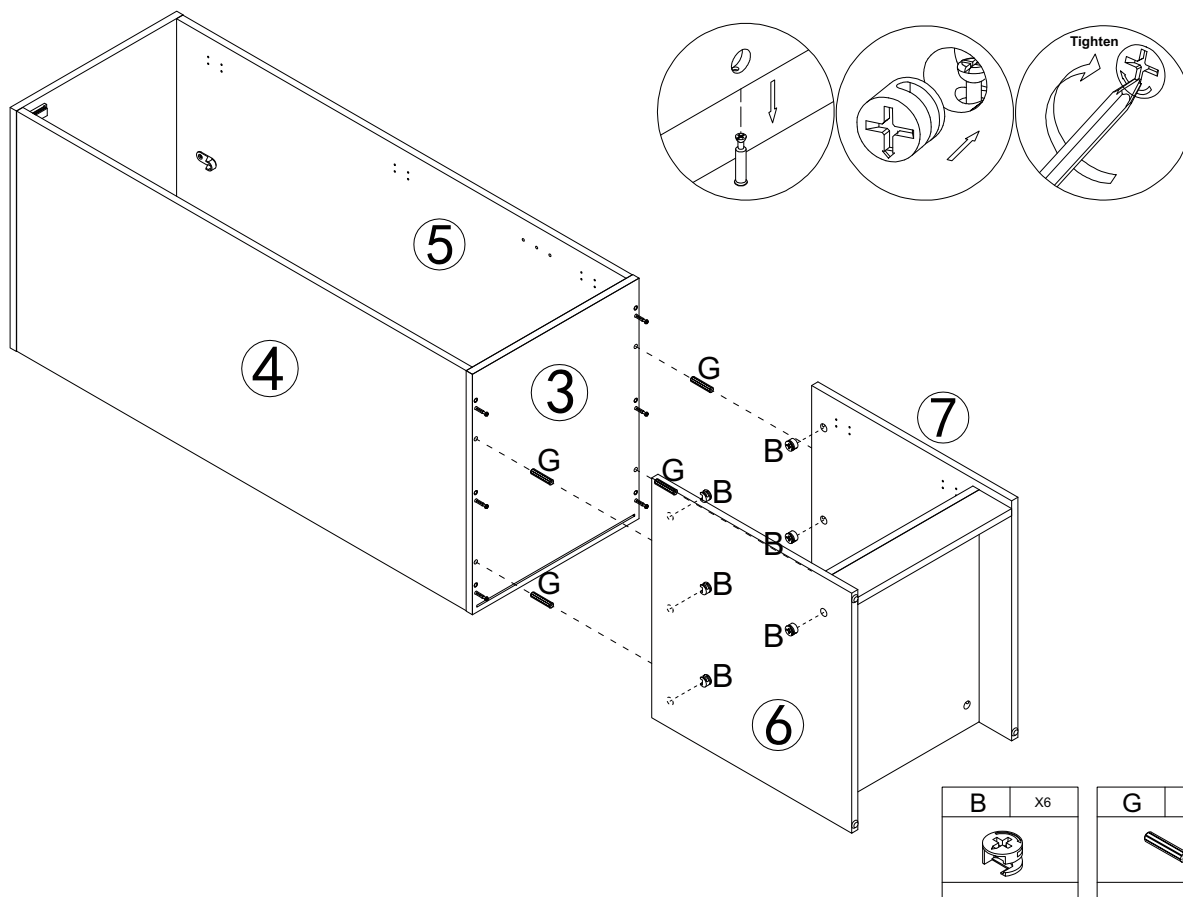


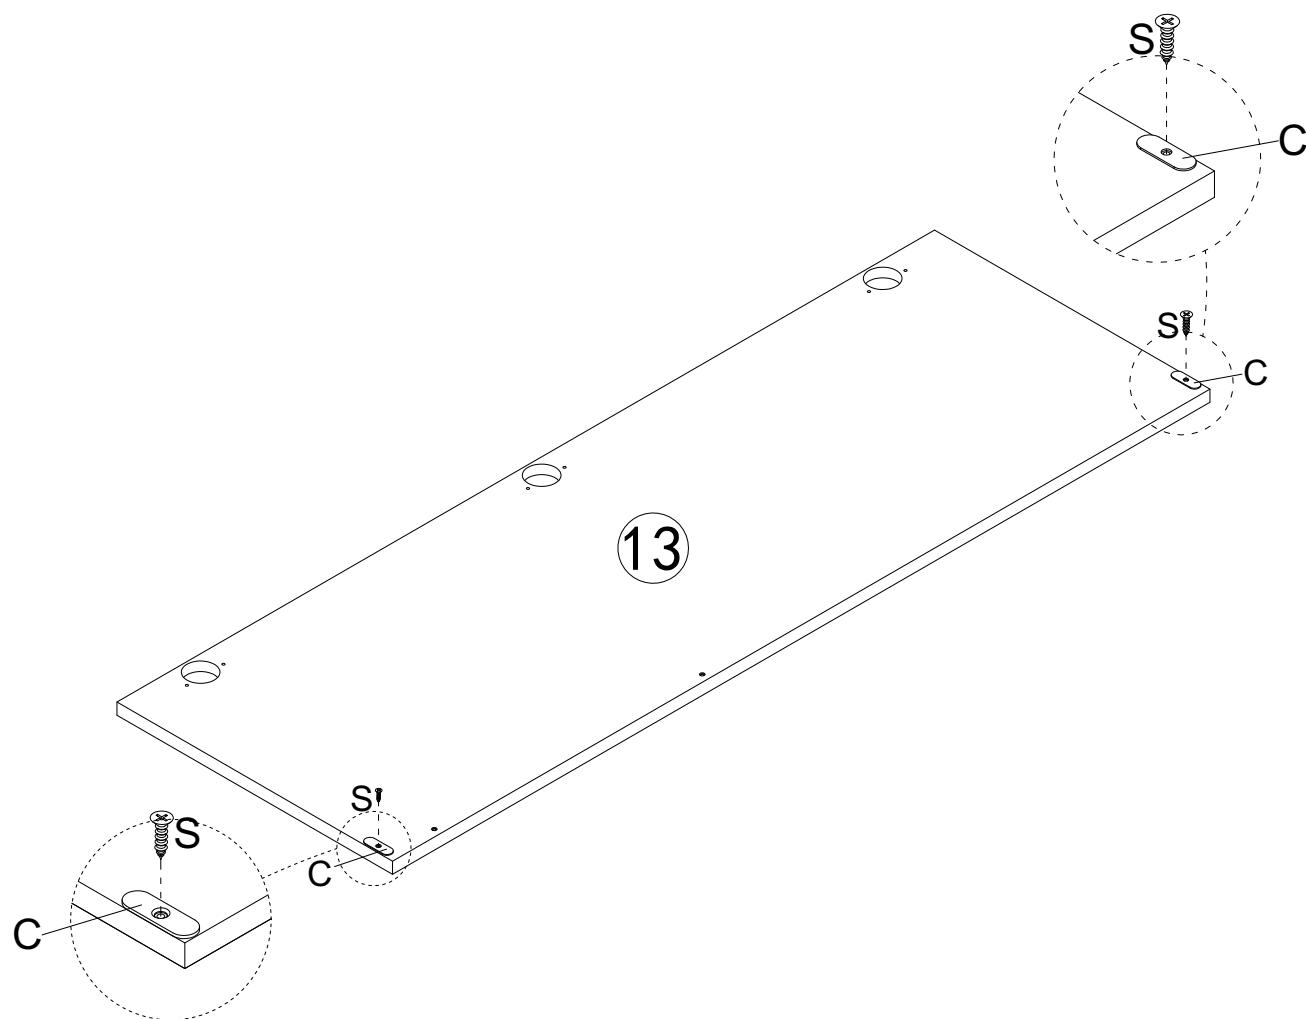


C	x2	S	x2
			
		M3x12mm	

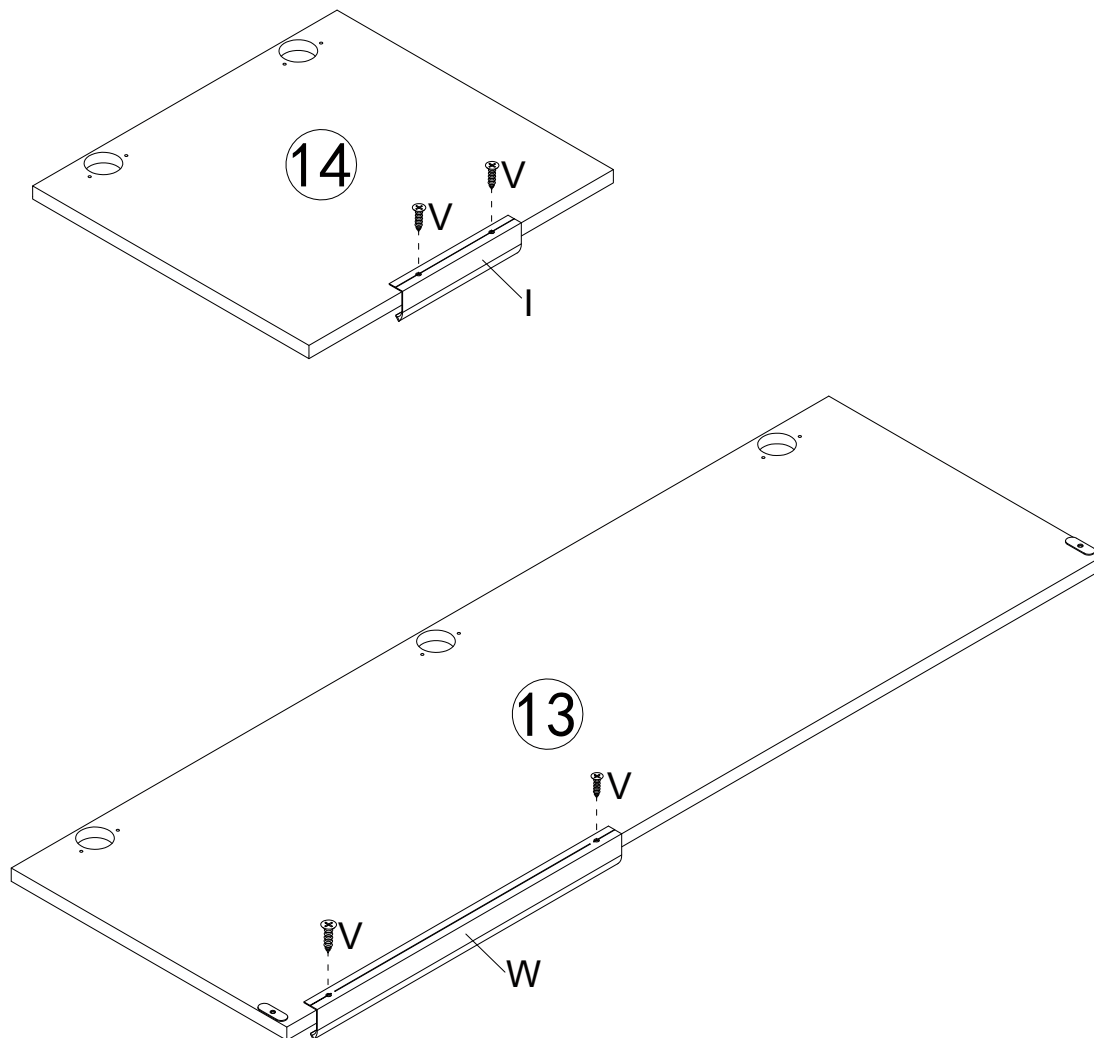



Important: The required fastener is a 12mm long Golden V screw. Never secure the mirror with Silver D screws, which may lead to breakage.

I	x1	W	x1	V	x4
					
				M3.5x12mm	

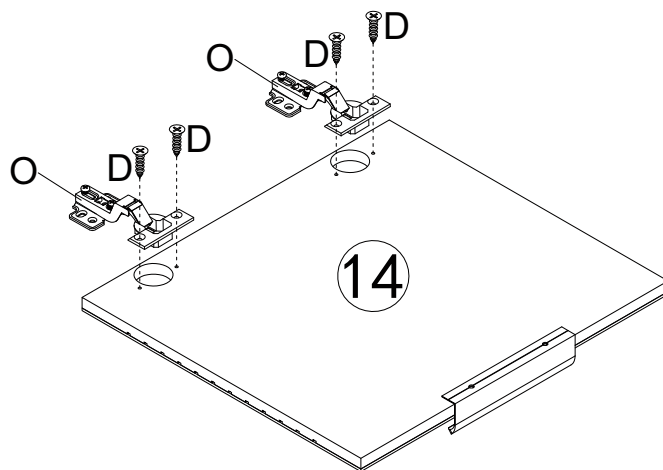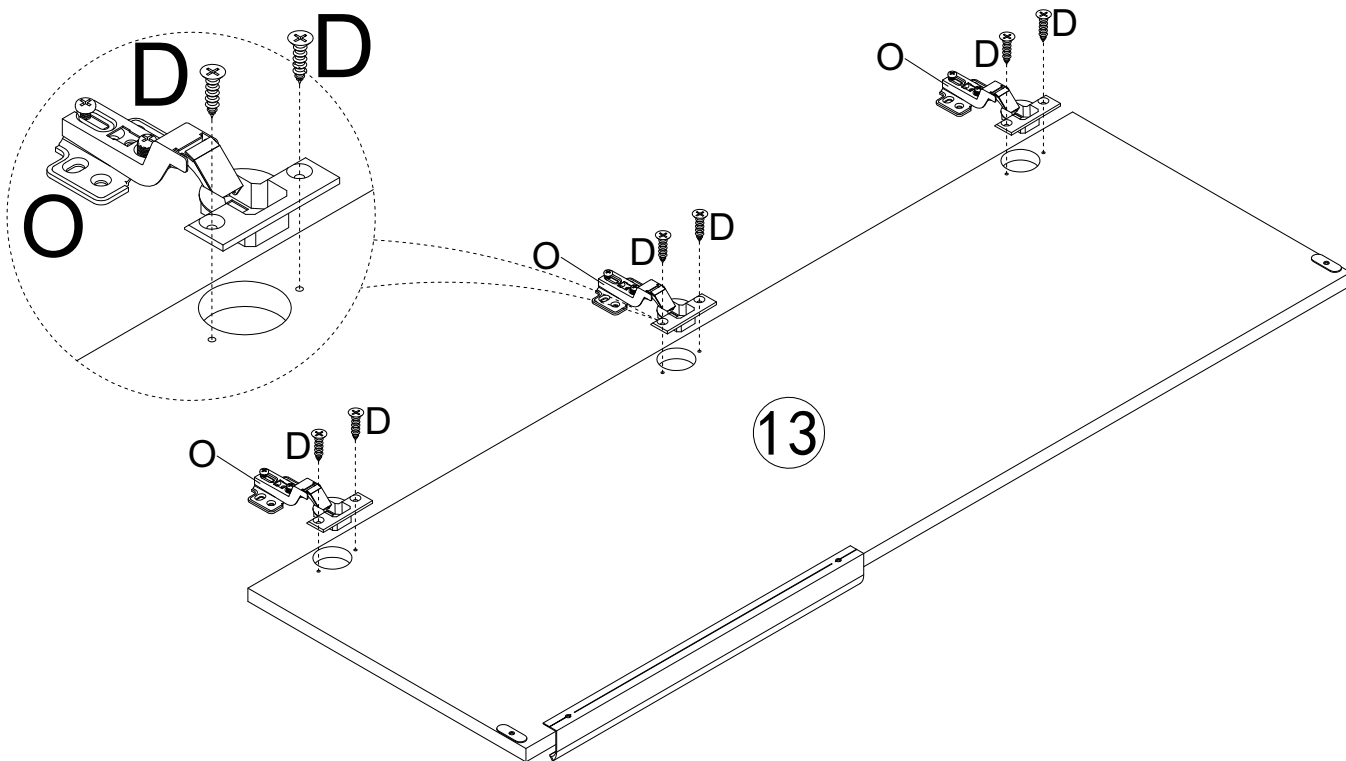


D	X10	O	X5
			
M3.5x14mm			


Please install and adjust the hinges strictly in accordance with the detailed steps 1, 2, 3, 4 and 5 to assemble the doors

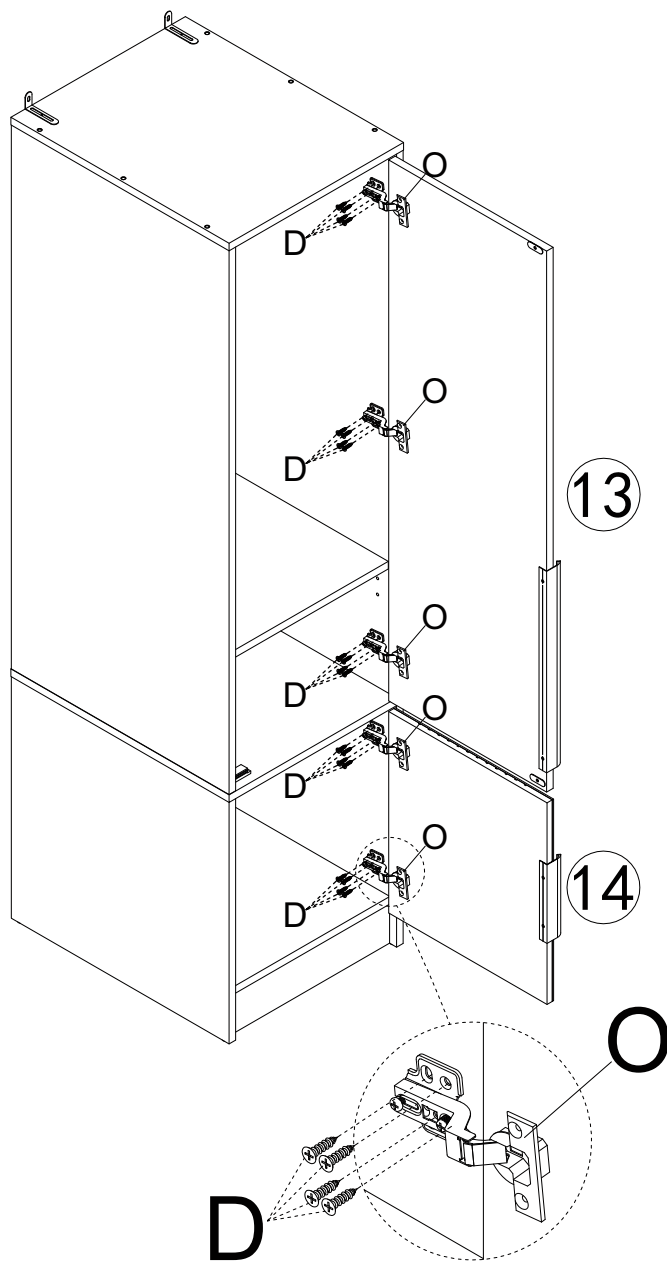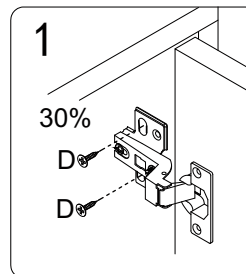


Tighten the screws only 30% as long as the door can be secured.

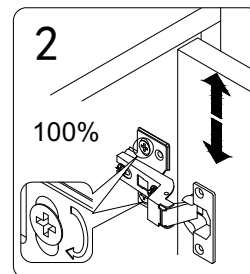


Move the door up and down until it is centred, then tighten the screw 100%.

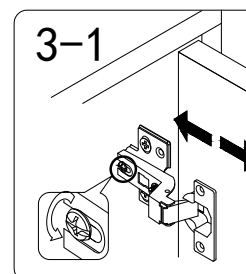


Loosen the screw **anti-clockwise**, and move the door **in or out** until it's **aligned** to side board.

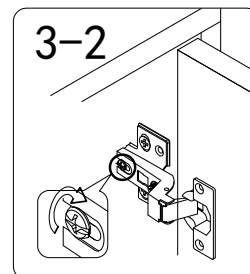


Tighten the screw **clockwise** once the door is aligned.

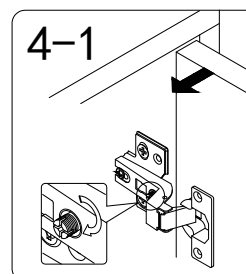

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise**.

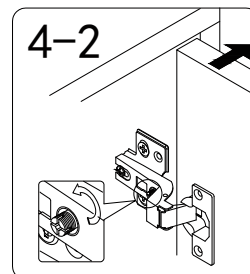


To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise**.

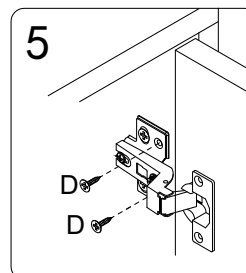

After adjusting the doors properly above, finally tighten these two screws and secured the door.

D	x20
M3.5x14mm	


21

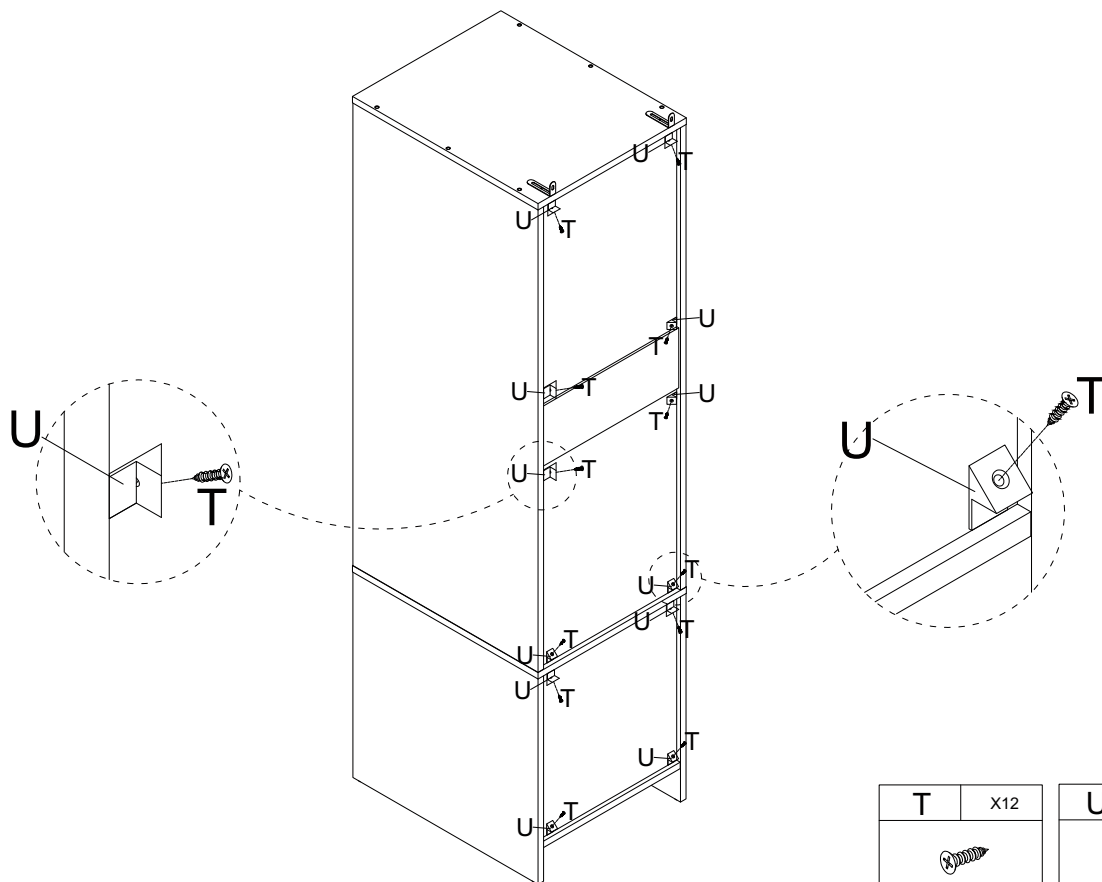

T	X12
	
M3x16mm	

U	X12
	

22

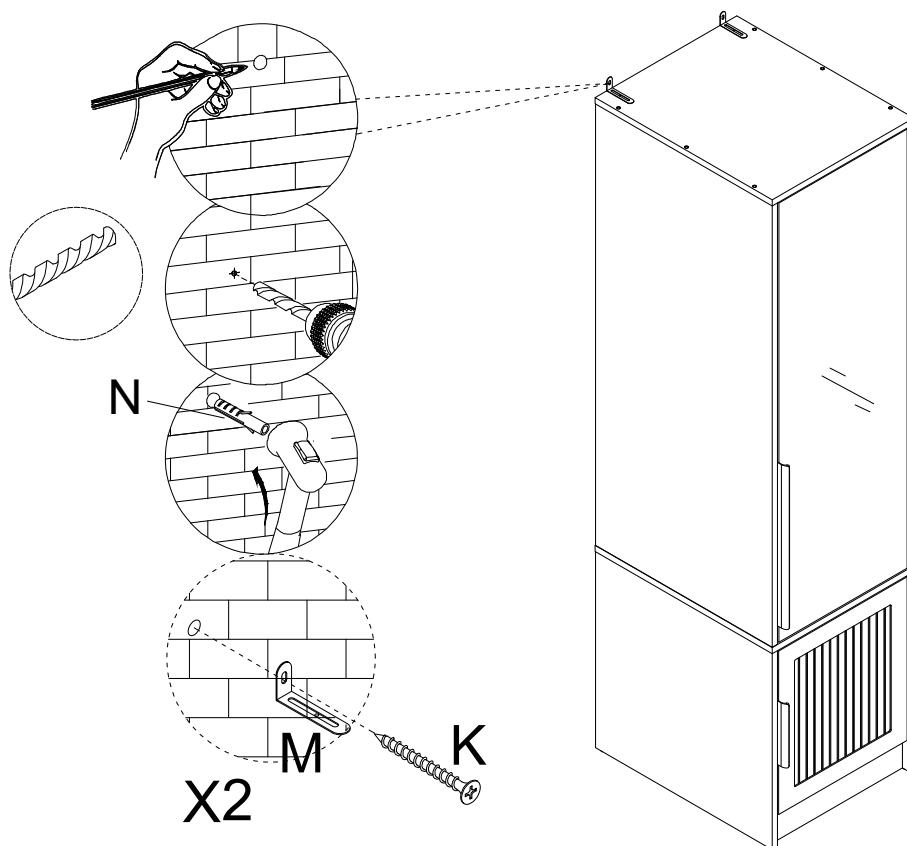

X2

N	X2
	

K	X2
	
M4x35mm	

