

QUEEN SIZE BED

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:











1. Remove Hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

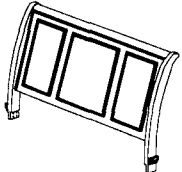





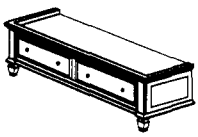







Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

A		HEADBOARD PANEL	1 PC
B1		LEFT HEADBOARD LEG	1 PC
B2		RIGHT HEADBOARD LEG	1 PC
C		FOOTBOARD	1 PC
D1		LEFT BED RAIL	1 PC
D2		RIGHT BED RAIL	1 PC
E		BED SLAT SUPPORT WITH LEVELER	2 PCS
F		CENTER RAIL	1 PC
G		ROLL SLAT (12 PCS)	1 SET
H		HEADBOARD BOTTOM RAIL	1 PC

HARDWARE IDENTIFICATION


1		ALLEN WRENCH	1 PC
2		SHORT BOLT	8 PCS
3		LOCK WASHER	22 PCS
4		FLAT WASHER	22 PCS
5		WOOD DOWEL	12 PCS
6		LONG SCREW	24 PCS
7		LONG BOLT	10 PCS
8		MEDIUM BOLT	6 PCS
9		SHORT SCREW	8 PCS
10		WRENCH	1 PC
11		HEXAGON NUT	2 PCS
12		U BRACKET	2 PCS

NOTE :ALL HARDWARE WAS PACKED IN A BAG AND PUT IN HEADBOARD BOX (BOX 1)

ASSEMBLY INSTRUCTIONS


STEP 1

- 1.1. Align and fasten left headboard leg to headboard panel using short bolt, lock washer and flat washer and loosely tighten with Allen wrench.
- 1.2. Insert wood dowel into headboard bottom rail, then align and fasten headboard bottom rail to left headboard leg using long bolt, lock washer and flat washer and loosely tighten with Allen wrench.

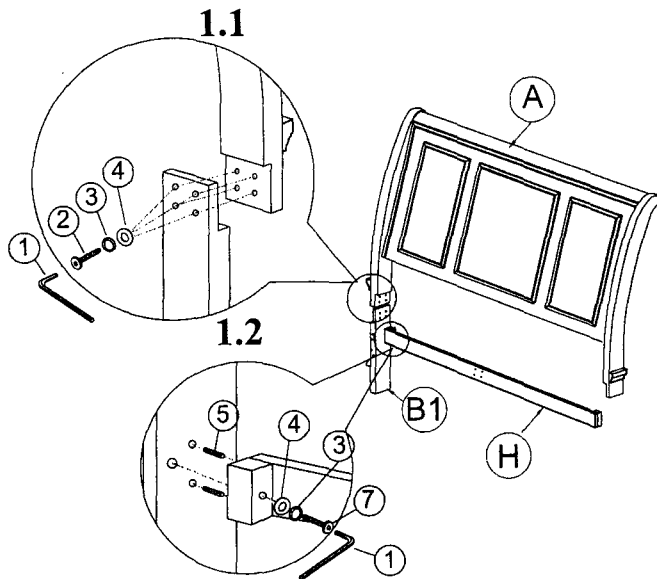


STEP 2

- 2.1. Align and fasten right headboard leg to headboard panel using short bolt, lock washer and flat washer and loosely tighten with Allen wrench.
- 2.2. Insert wood dowel into headboard bottom rail, then align and fasten headboard bottom rail to right headboard leg using long bolt, lock washer and flat washer and tighten with Allen wrench. (Tighten all the bolts from step 1.1, 1.2 and 2.1.)

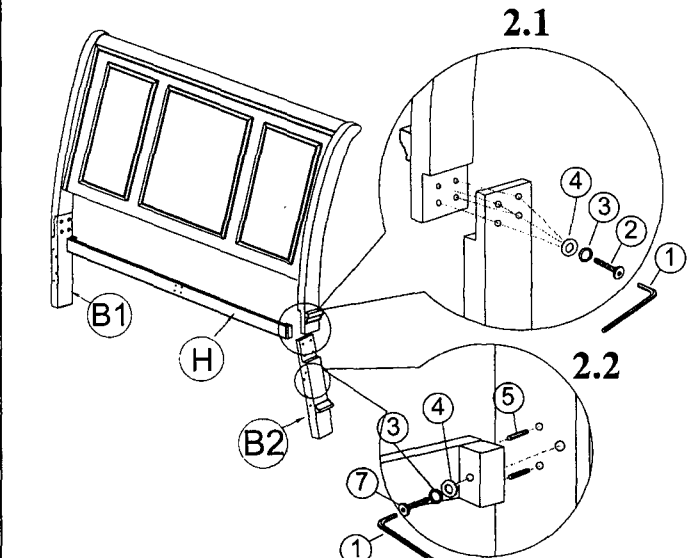

STEP 3


Insert wood dowel into headboard legs, then align and fasten bed rails to headboard leg using medium bolt, lock washer and flat washer and tighten with Allen wrench.

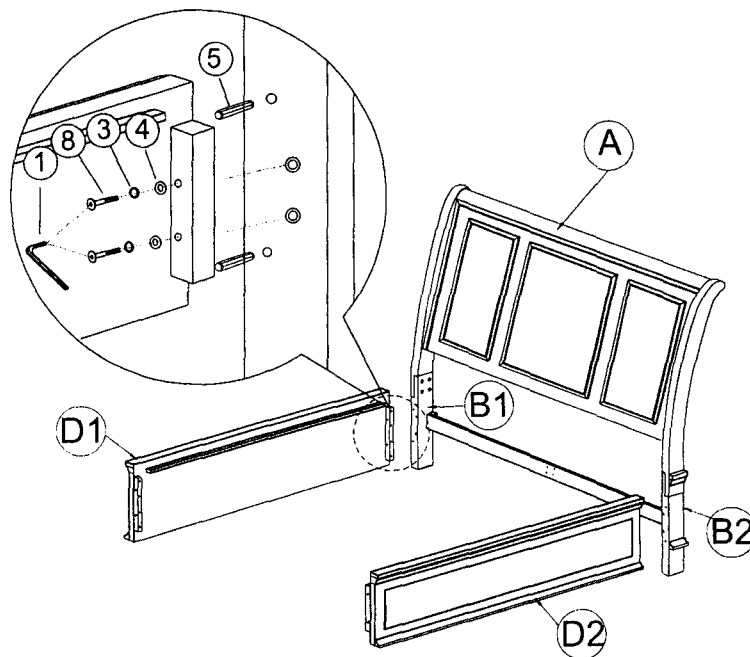

ASSEMBLY INSTRUCTIONS


STEP 4

STEP 4
Insert wood dowel into bed rail, then align and fasten bed rails to footboard using long bolt, lock washer and flat washer and tighten with Allen wrench.

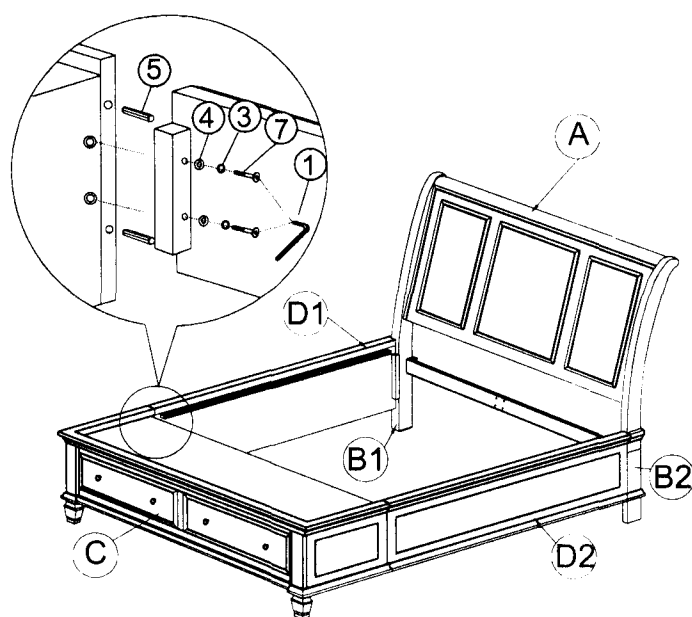

STEP 5


Align U bracket to the pre-drilled holes on the headboard bottom rail and footboard then fasten using short screw and tighten with screw driver(not included)

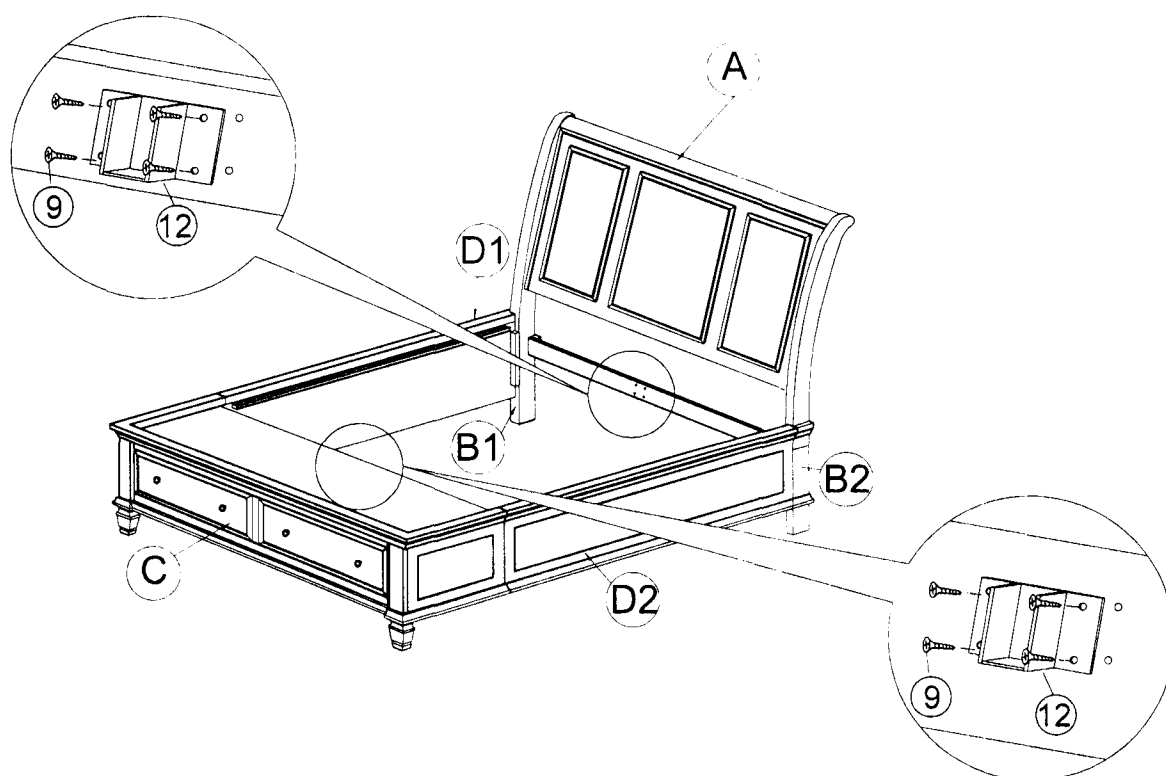

ASSEMBLY INSTRUCTIONS


STEP 6

Align and fasten bed slat support to center rail using long bolt, lock washer and flat washer and tighten with Allen wrench. Adjust leveler to touch the floor.

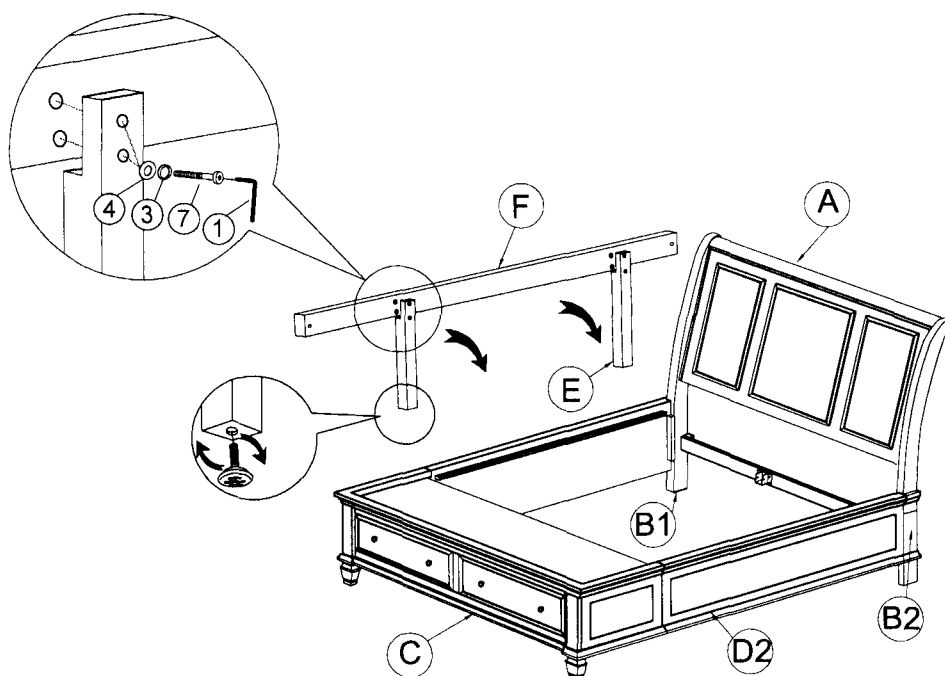

STEP 7

Insert center rail to the U bracket at the headboard bottom rail and footboard. Align and fasten using medium bolt and hexagon nut and tighten with wrench provided.

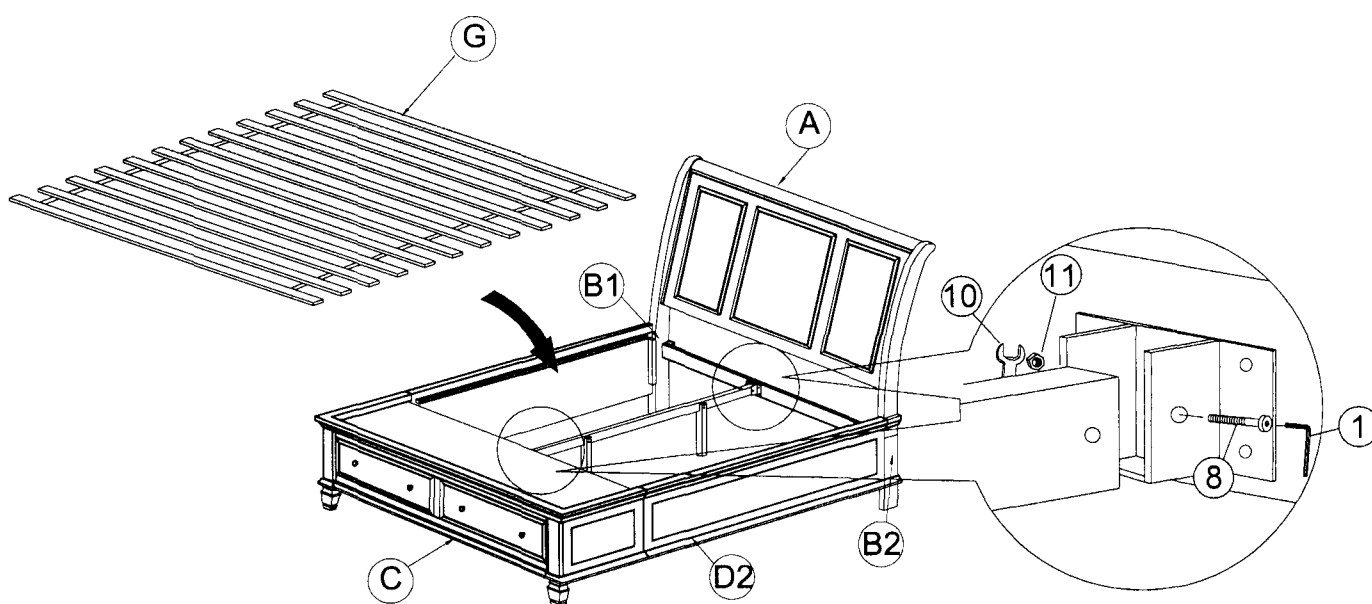

ASSEMBLY INSTRUCTIONS

STEP 8

Align and fasten roll slat to bed rails using long screws and tighten with screw driver (not included).

