
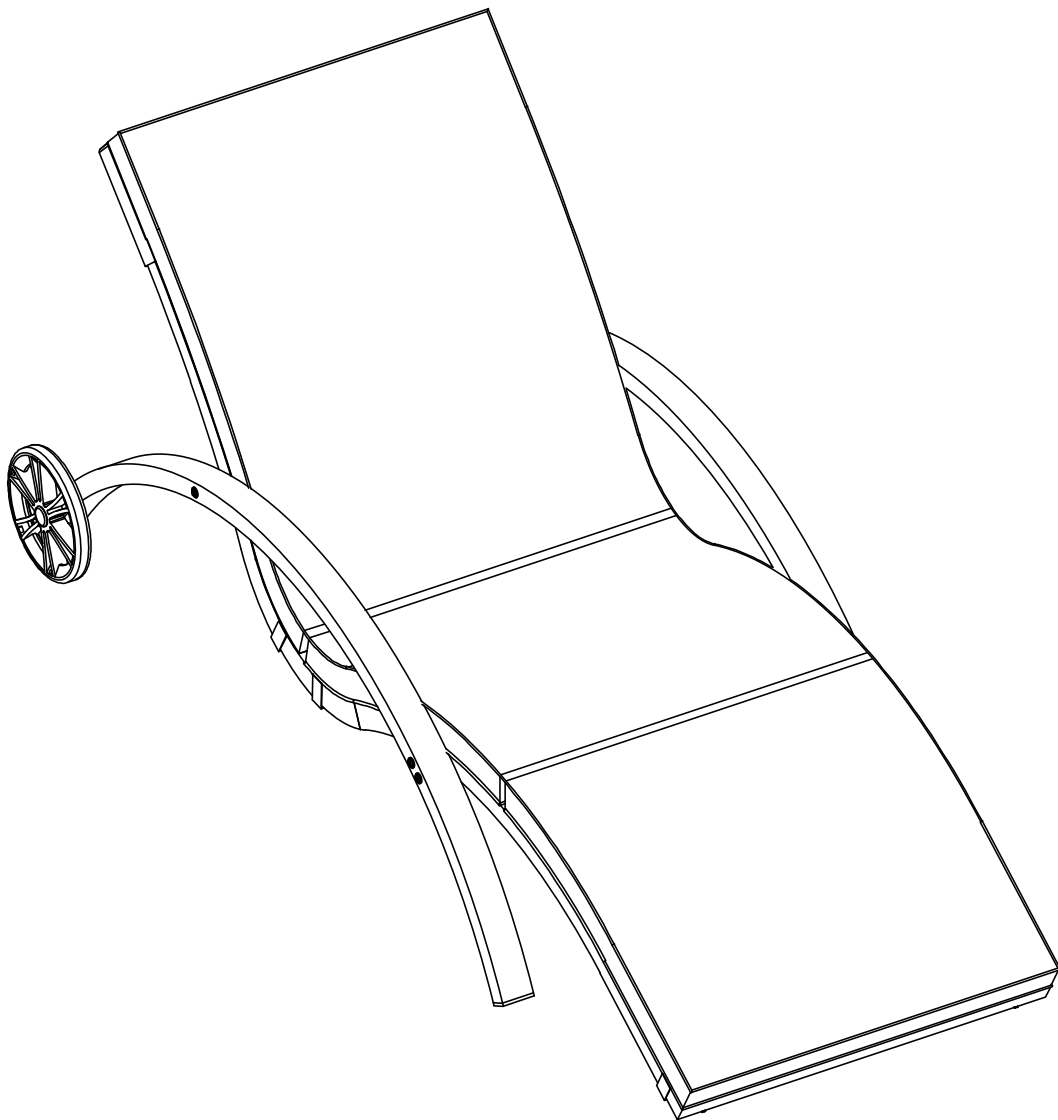
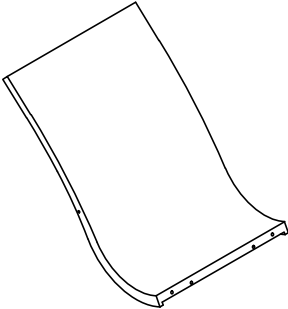
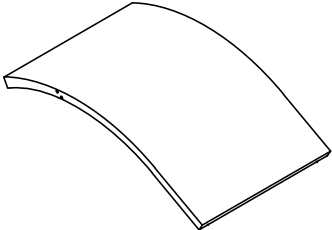
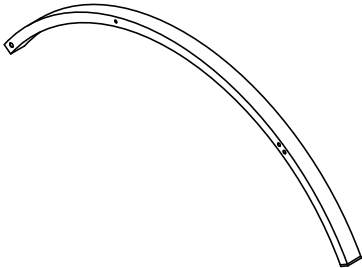
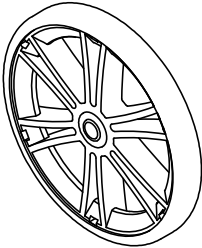


ASSEMBLY INSTRUCTION






Patio Lounge Chair

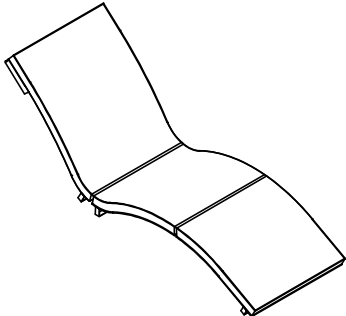






Component List

LABEL		DESCRIPTION	QTY
A		Back seat	2
B		Front seat	2
C		Arm	4
D		Wheels	4
E		Seat cushion	2

Hardware List

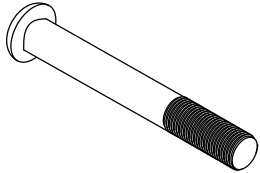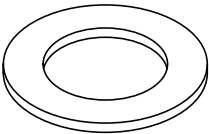LABEL		DESCRIPTION	QTY
#1		Bolts M10 x85 mm	4
#2		Bolts M8 x50 mm	8 +1 Spare
#3		Bolts M6 x85 mm	12 +1 Spare
#4		Flat washer M10	4 +1 Spare
#5		Flat washer M8	16 +1 Spare
#6		Flat washer M6	24 +1 Spare
#7		Anti-slip nuts M10	4 +1 Spare

Hardware List

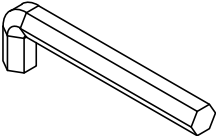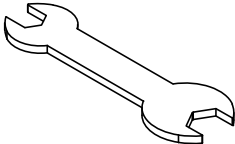LABEL		DESCRIPTION	QTY
#8		Anti-alip nuts M8	8 +1 Spare
#9		Anti-alip nuts M6	12 +1 Spare
#10		Allen key M10	1
#11		Allen key M8	1
#12		Allen key M6	1
#13		Wrench M10	1
#14		Wrench M6 M8	1

1

#2 ×4PCS



M8*50MM

#5 ×8PCS



M8

#8 ×4PCS




M8



#11



#14
(M8)

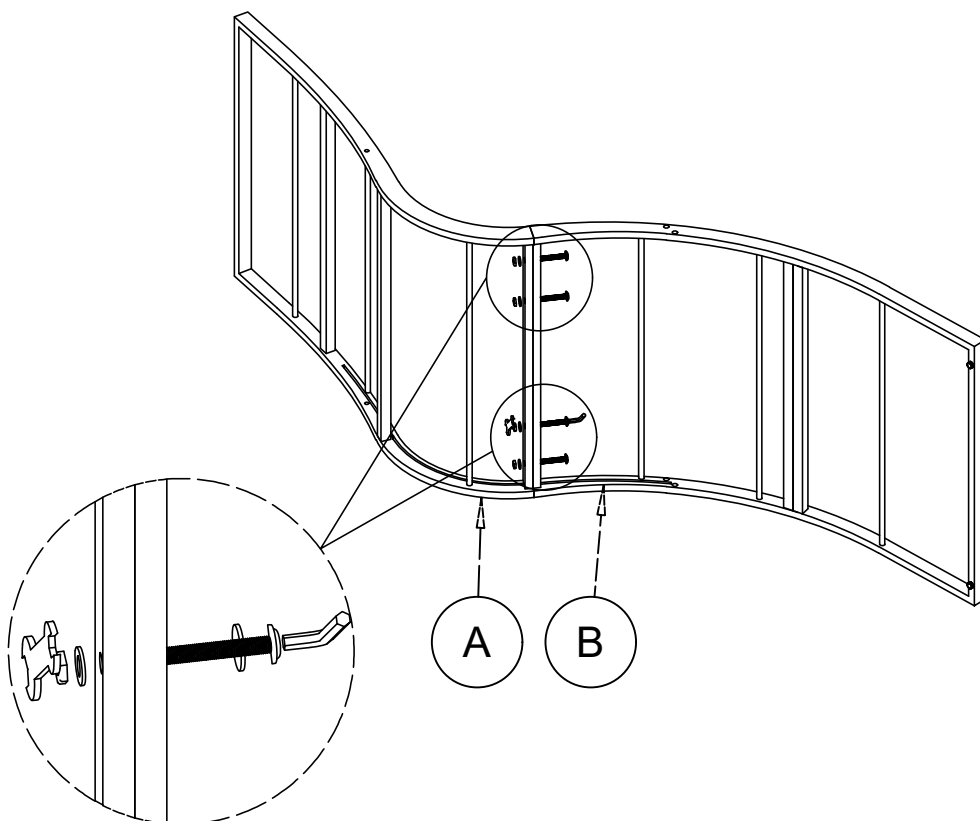

2

#3 ×3PCS



M6*85MM

#6 ×6PCS



M6

#9 ×3PCS




M6



#12



#14
(M6)

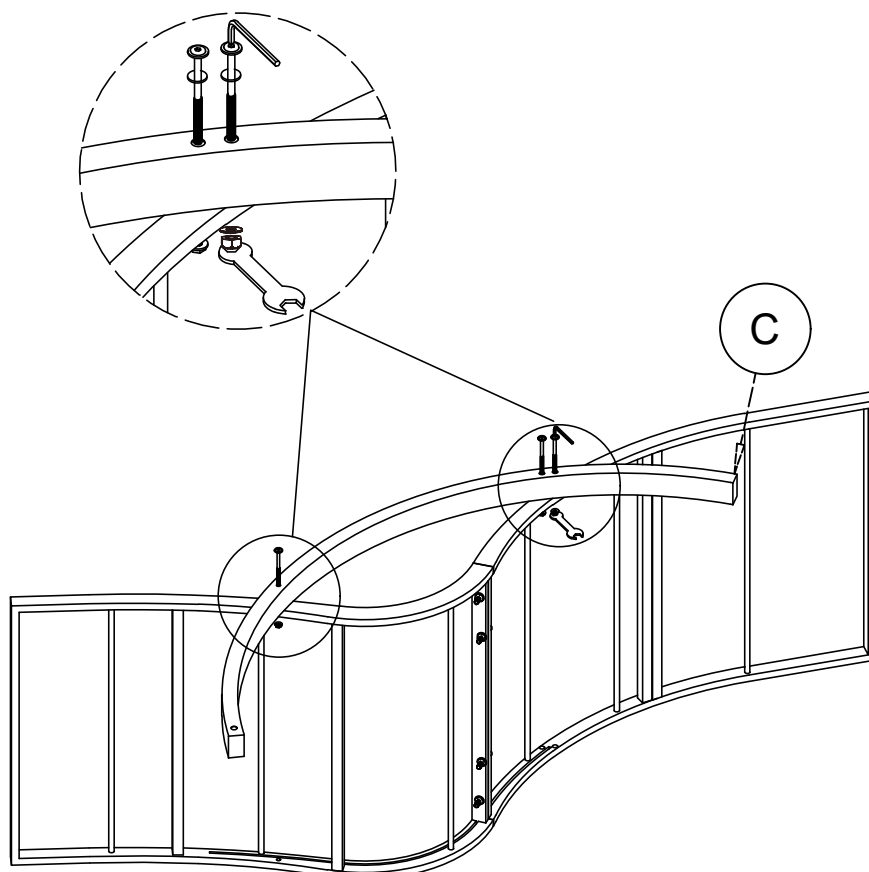

3

#3 ×3PCS



M6*85MM

#6 ×6PCS



M6

#9 ×3PCS



M6




#12



#14

(M6)

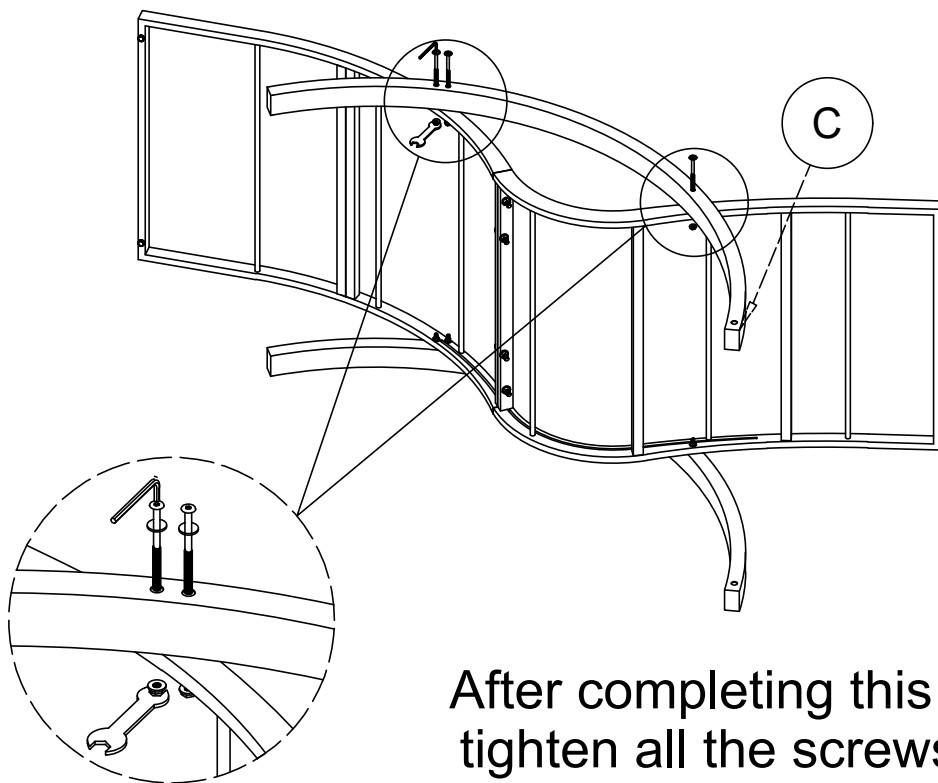

After completing this step,
tighten all the screws.

4

#1 ×2PCS



M10*85MM

#4 ×2PCS




M10

#7 ×2PCS



M10




#10



#13

(M10)

Installing wheels (D)

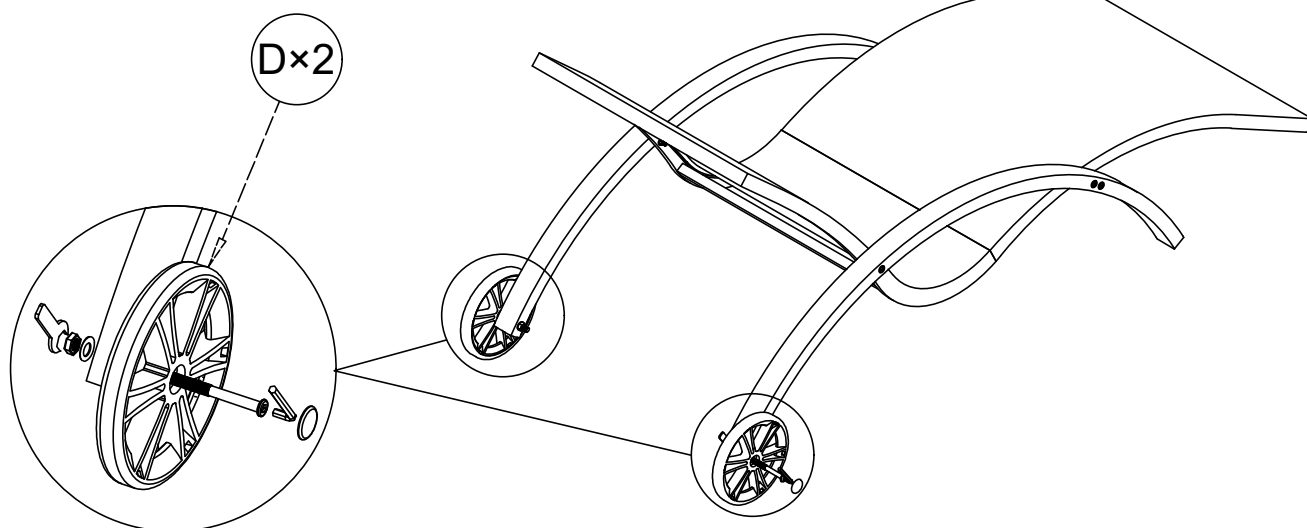

Put in the seat cushion (E) to complete the installation.

