



1. Place the hardware foot on the seat bottom, align the holes between the hardware foot and the seat bottom, put in the hexagonal wire and spacer, and tighten with a wrench.

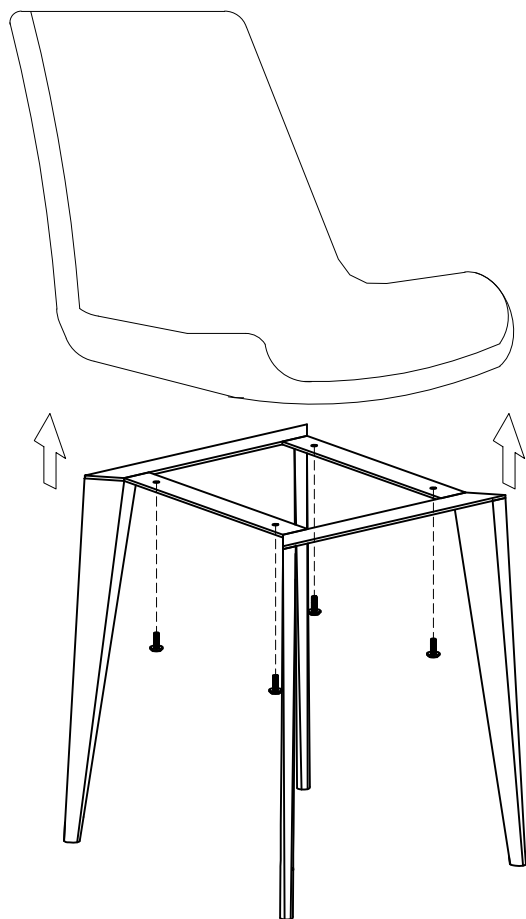

Hexagonal wire+Gasket
(M6*20mm)

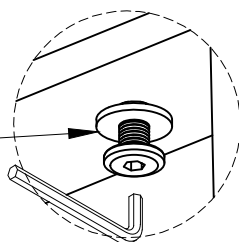

2. Installation complete.






Installation instruction



CRO41AH Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagonal wire (M6*20mm)	8	1
B		Gasket	8	0
C		wrench	1	0
D				
E				
F				
G				