



Assembly Instructions

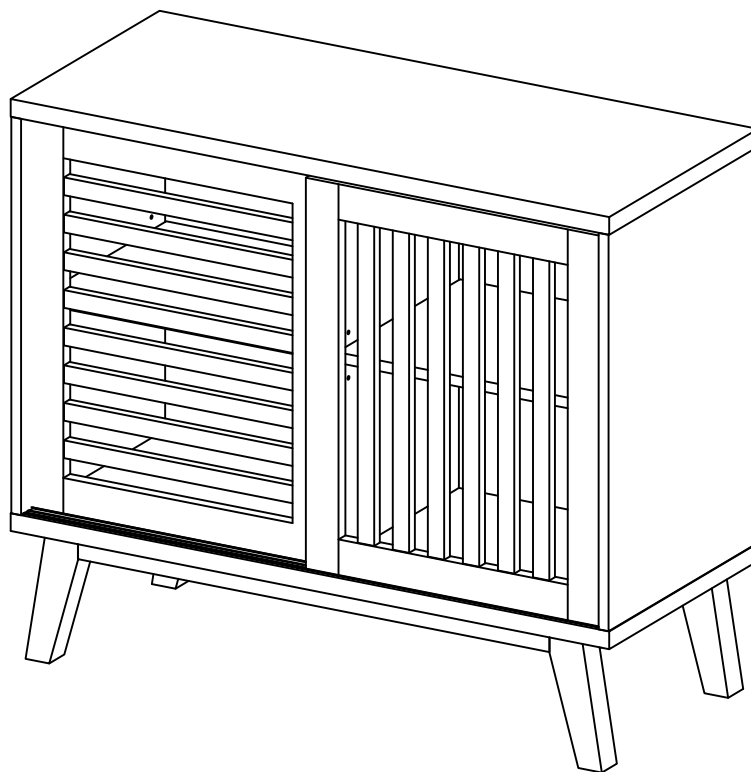


Please visit our website for the most current instructions, assembly tips, report damage, or request parts.

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

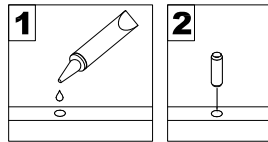


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

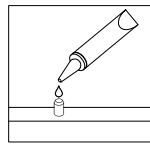

- VI. A Phillips head screwdriver is required for the assembly of this product .

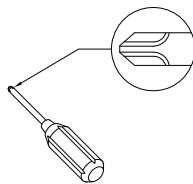


- VII. Power tools should not be used to assemble this product.

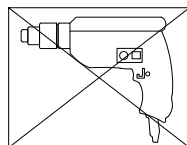









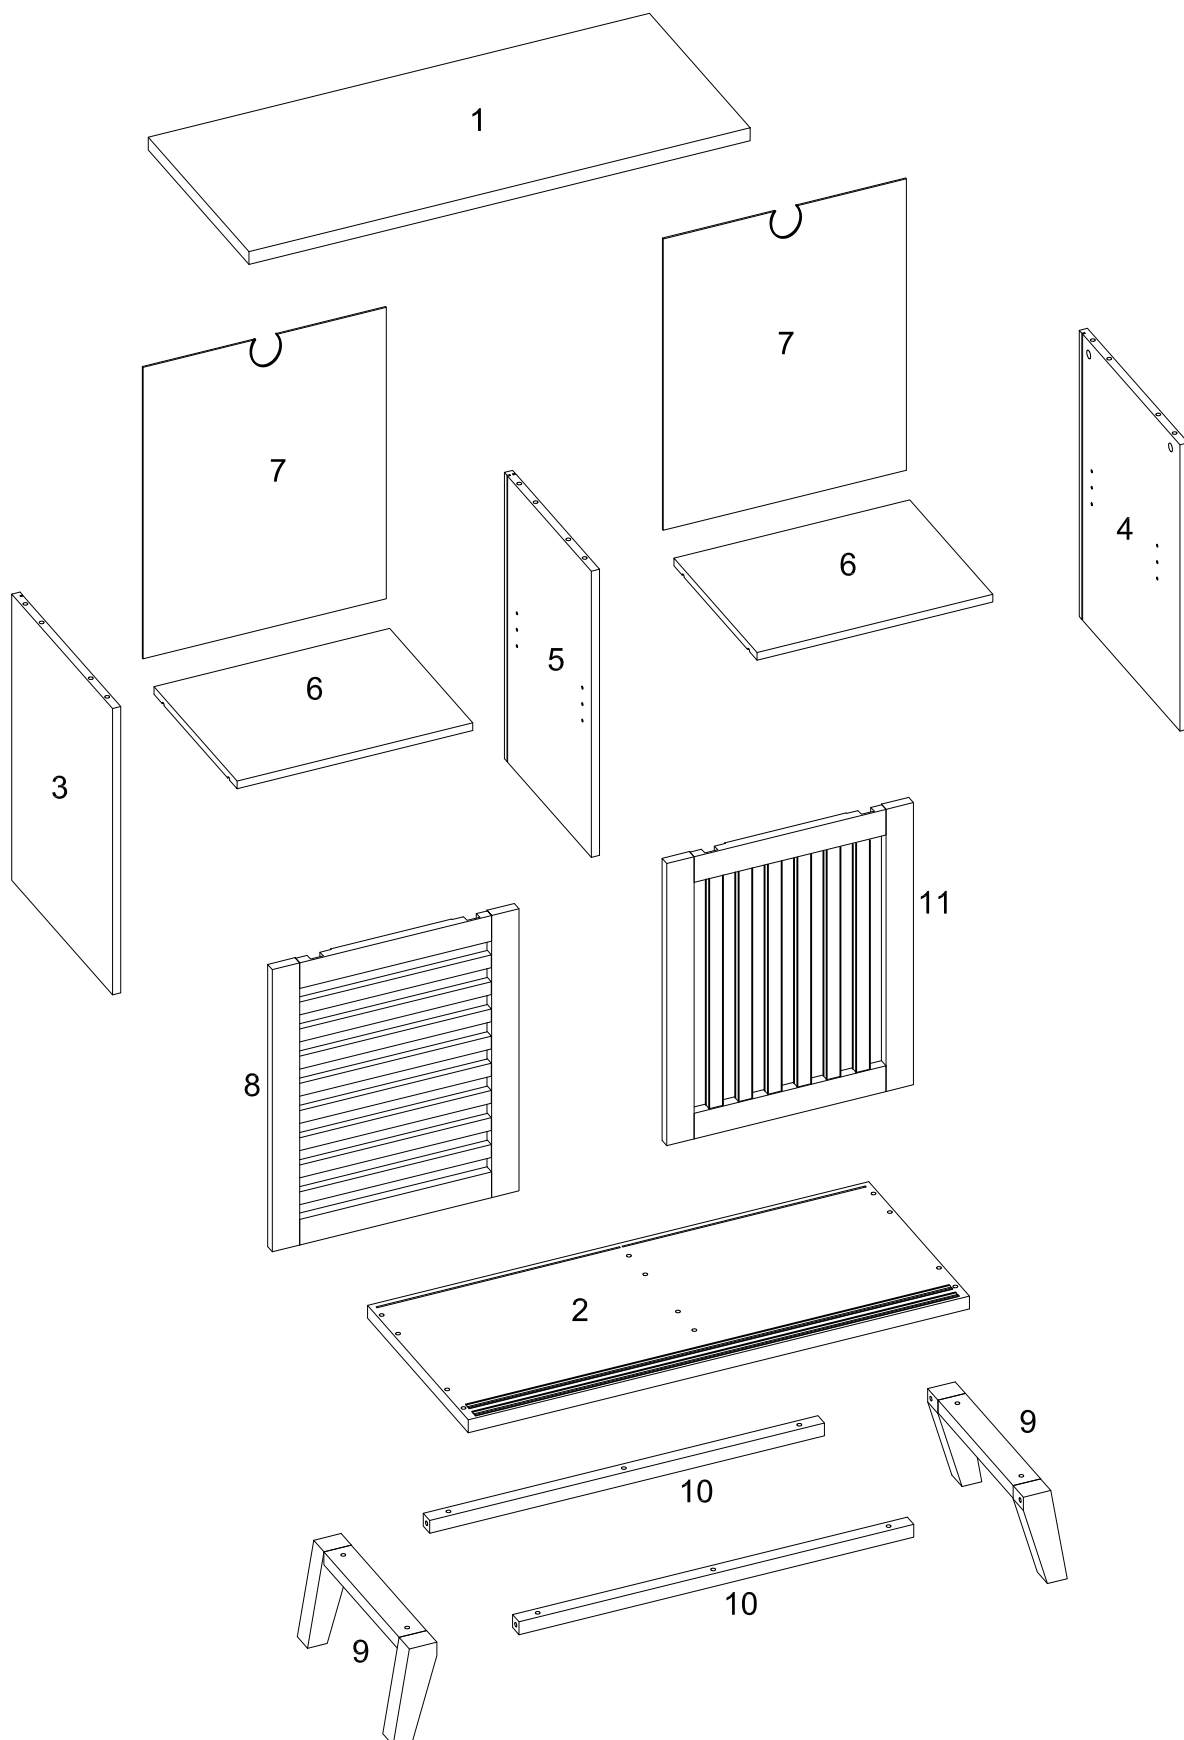







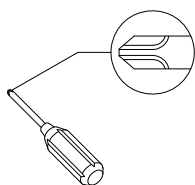
- VIII. Drill may be needed for securing product to wall.

Parts List



Hardware List





A		Ø8x30mm	Wooden dowel	12 pcs
B		Ø6x38mm	Bolt	10 pcs
C		Ø3x12	Screw	32 pcs
D			Washer	10 pcs
E			Plastic wedge	8 pcs
F		Ø3x17	Screw	8 pcs
G		Ø15x12mm	Cam lock	10 pcs
H		Ø6x32mm	Cam bolt	10 pcs
J		Ø6x50mm	Bolt	6 pcs
K		Ø5x16mm	Shelf support pin	8 pcs
L		M4	Hex Key	1 pc
M		Ø30mm	Sticker	6 pcs
N			Pulley	4 pcs
P			Pulley	4 pcs
Q			Bolt	2 pcs
R			Glue tube	1 pc



Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

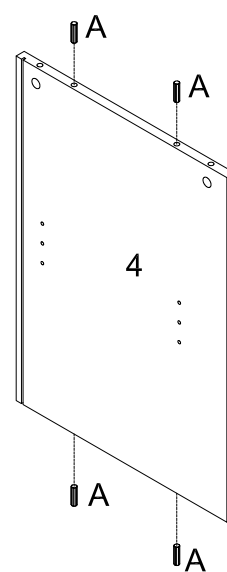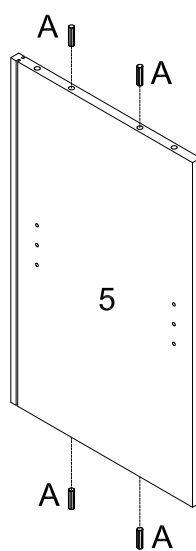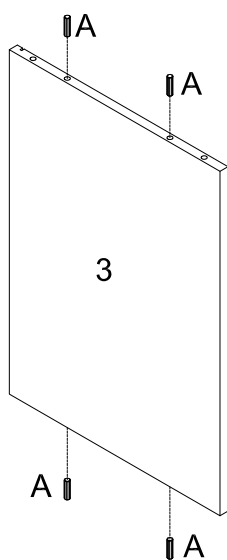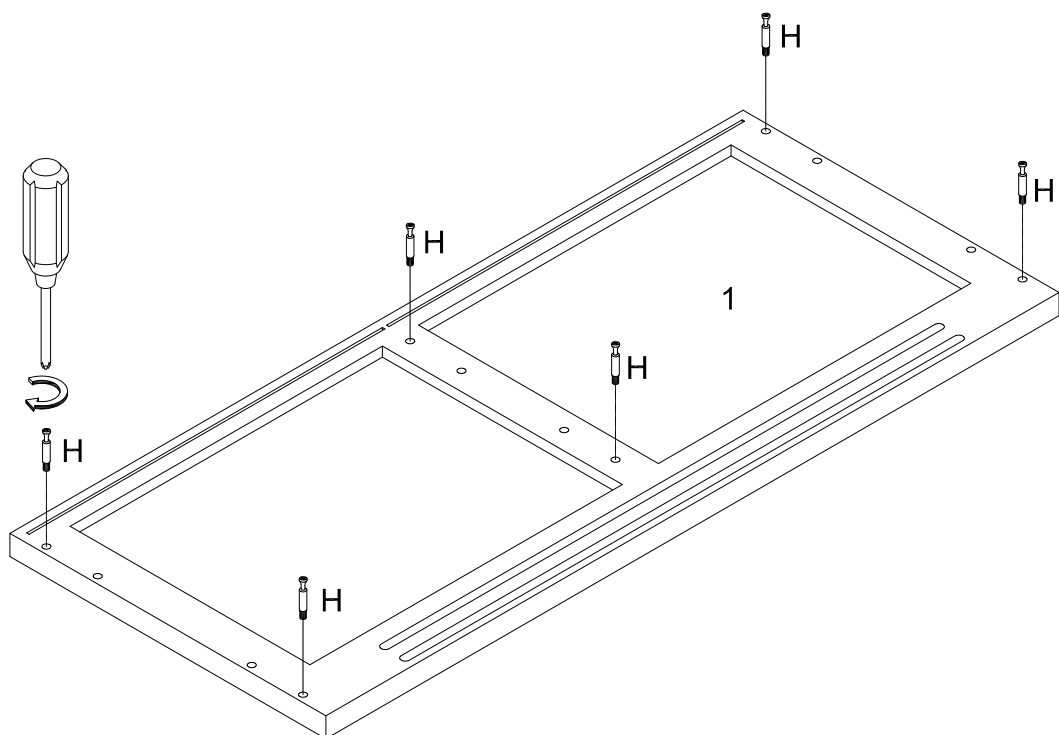


Attach cam bolt (H) to part (1) with screwdriver, Insert wooden dowel (A) into part (3,4,5).

Step 2

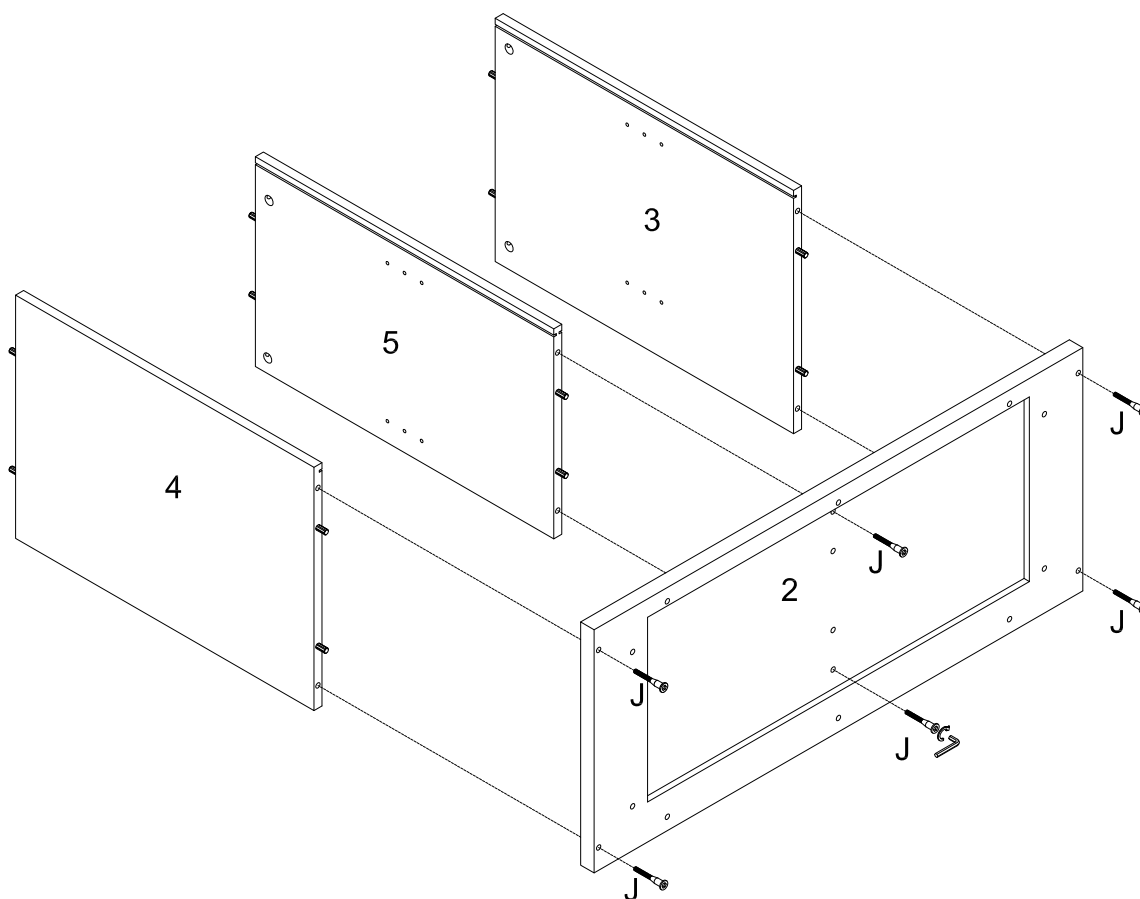


Attach part (2) to part (3,4,5) using bolt (J) with hex key (L)

Step 3

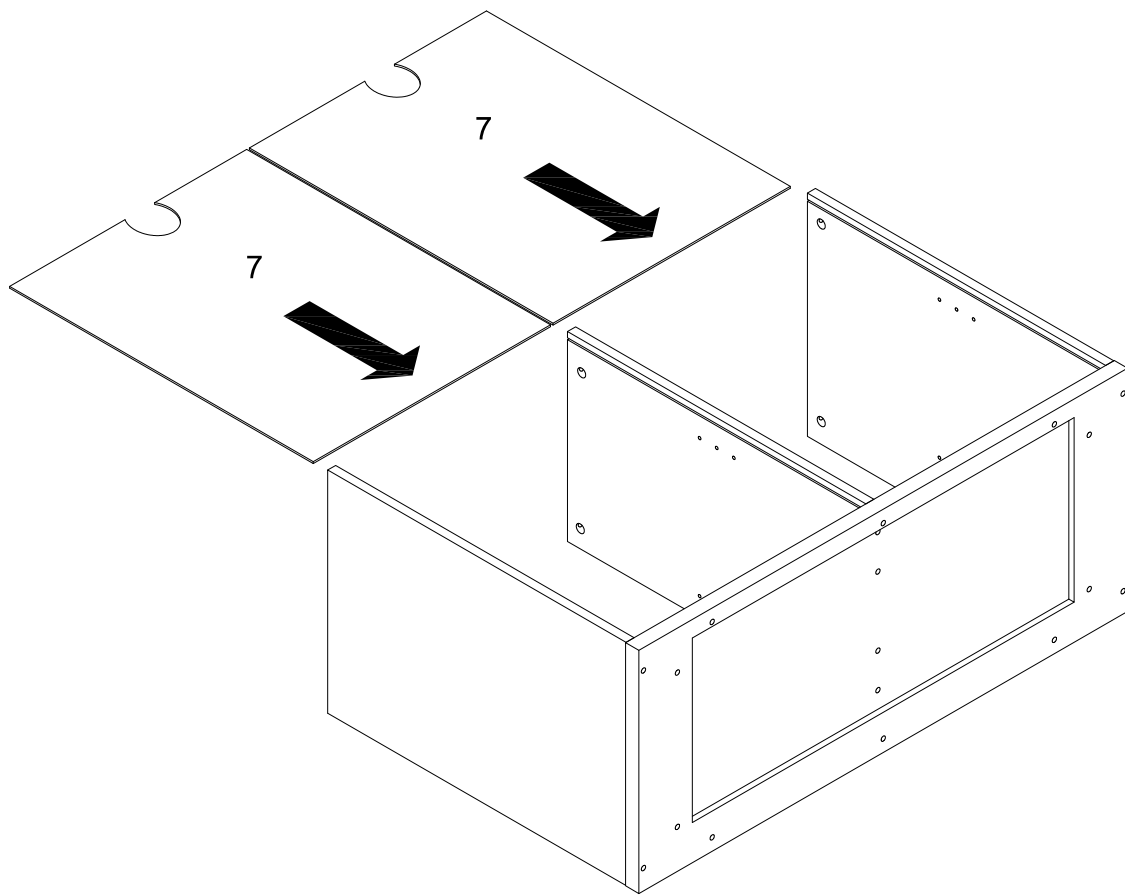



Slide part (7) into the grooves

Step 4

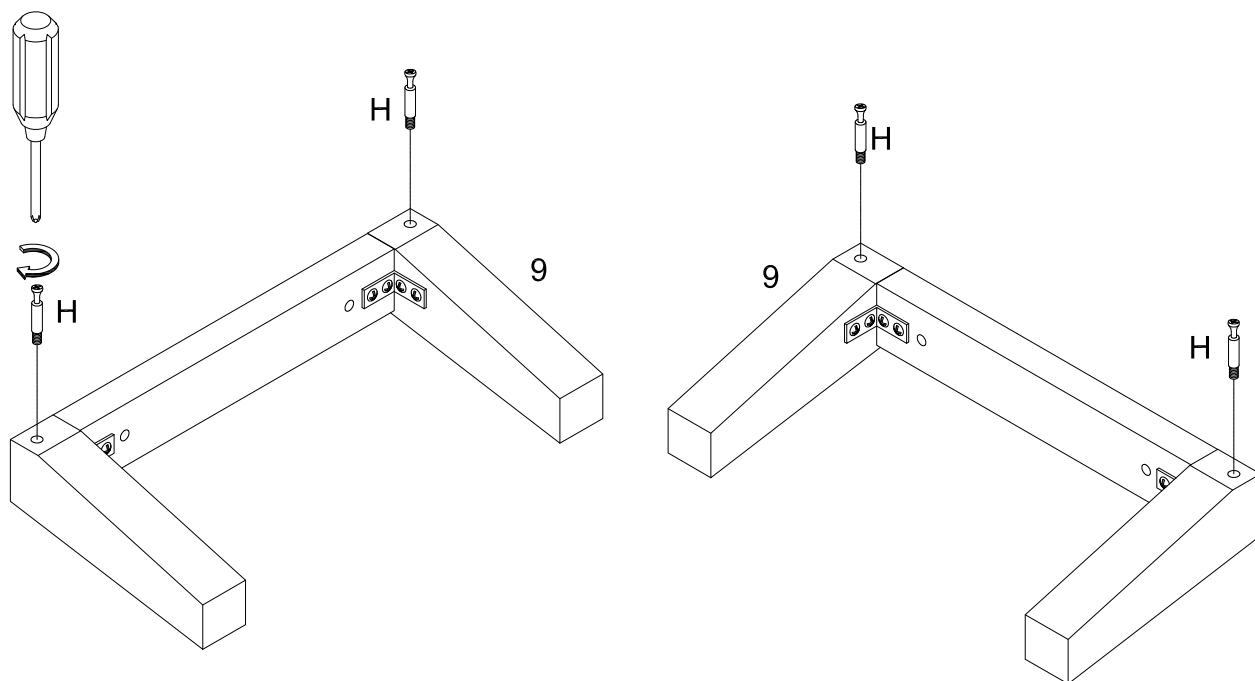


Attach cam bolt (H) to part (9) with screwdriver

Step 5

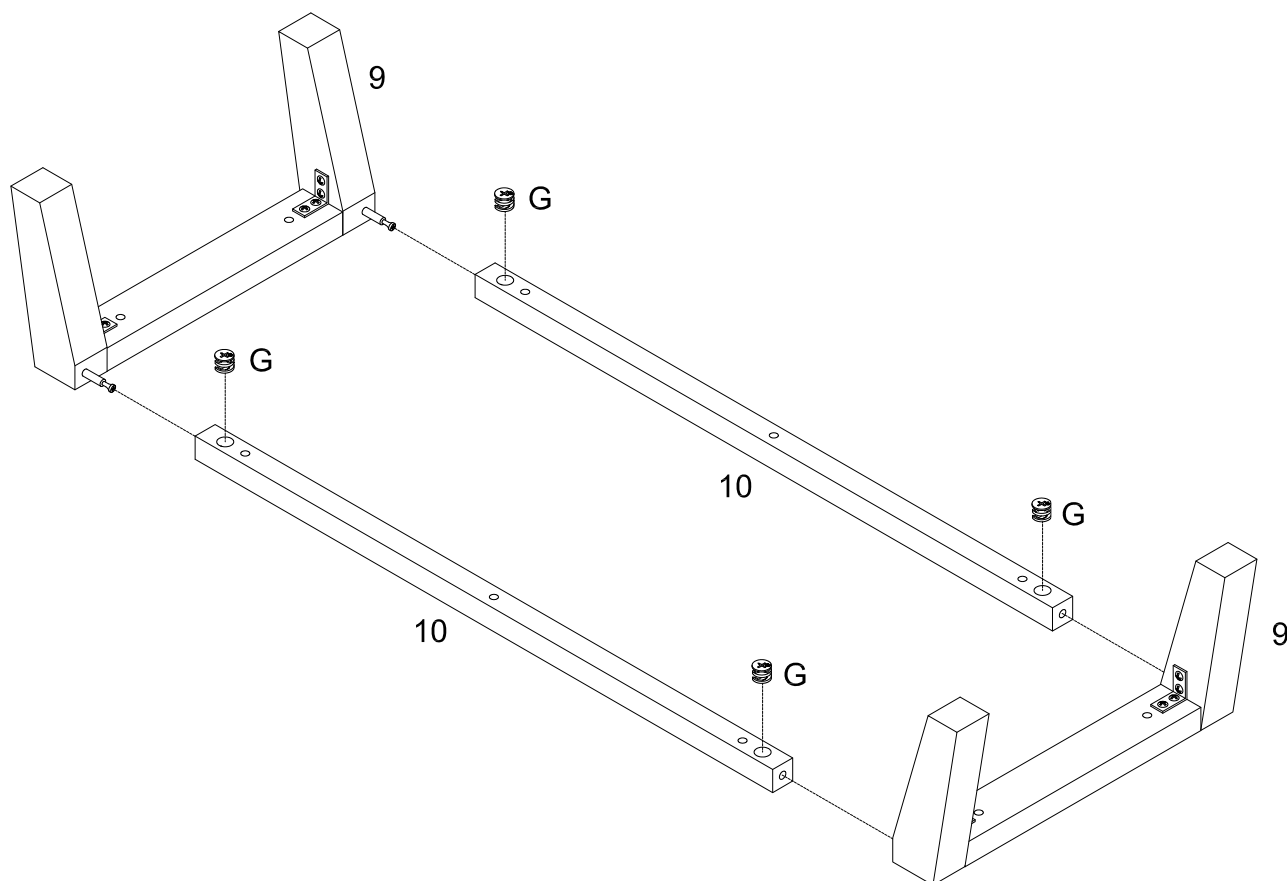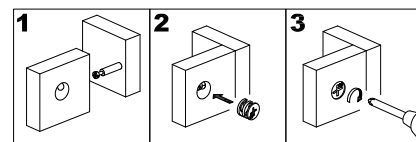



Attach part 10 to leg (9) using cam lock (G)

Step 6

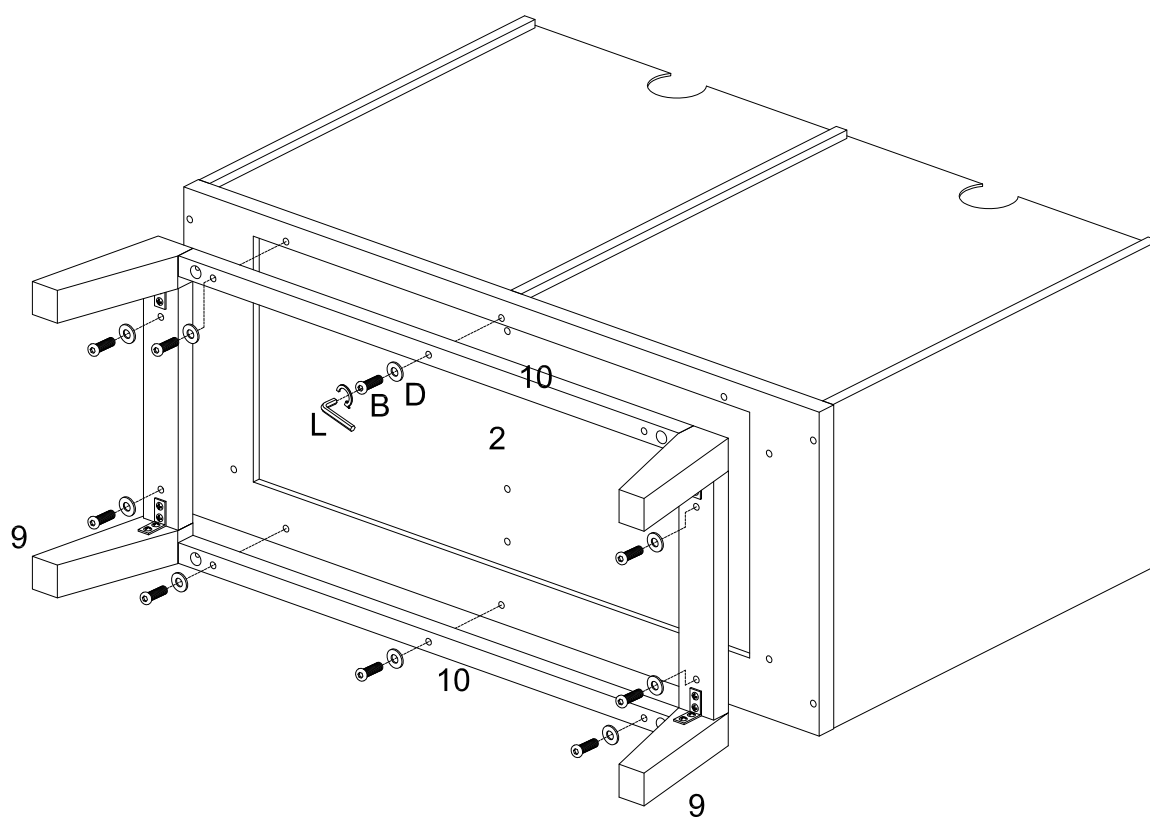


Attach bolt (B) and washer (D) to part (2) with hex key (L)

Step 7

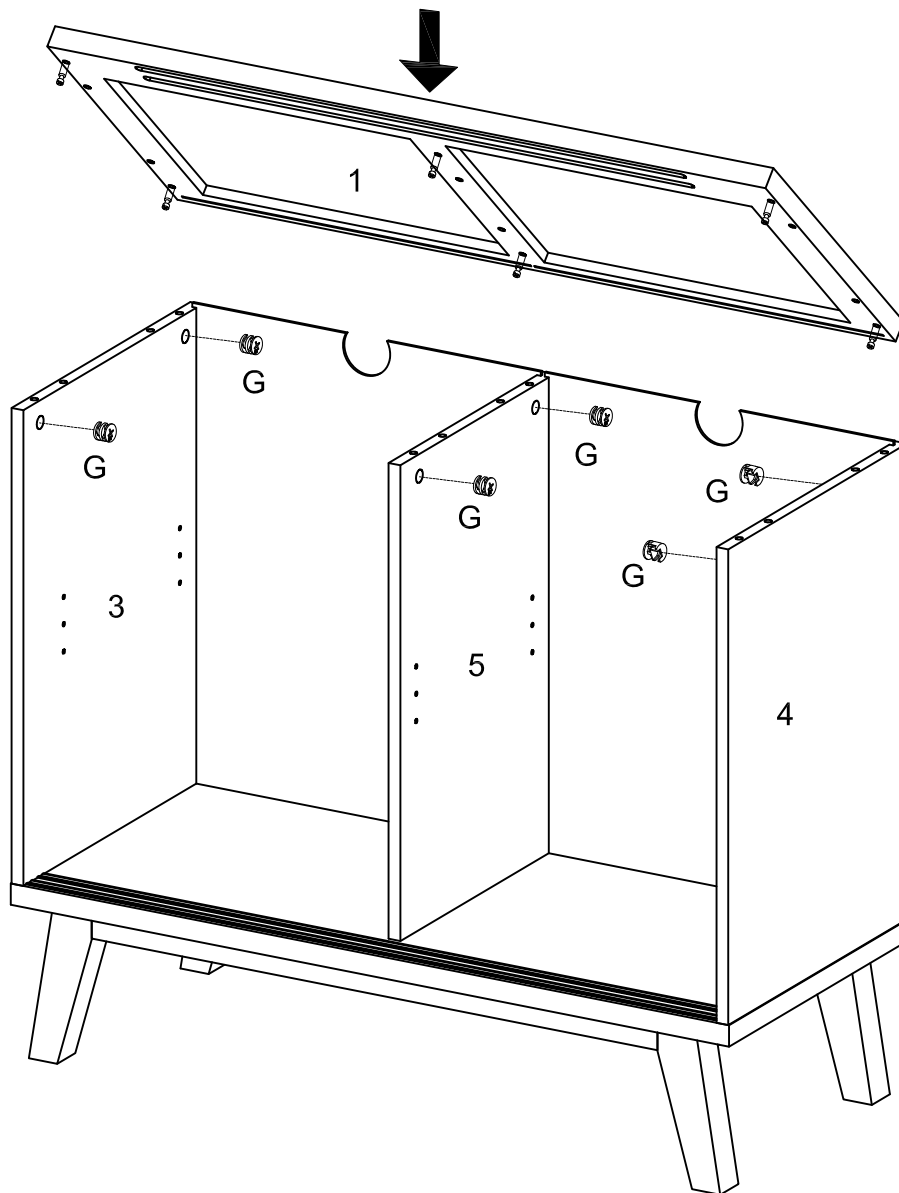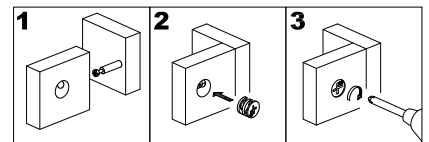


Attach part (1) to part (3,4,5), then insert and secure cam lock (G) to part (3,4,5) to lock it.

Step 8

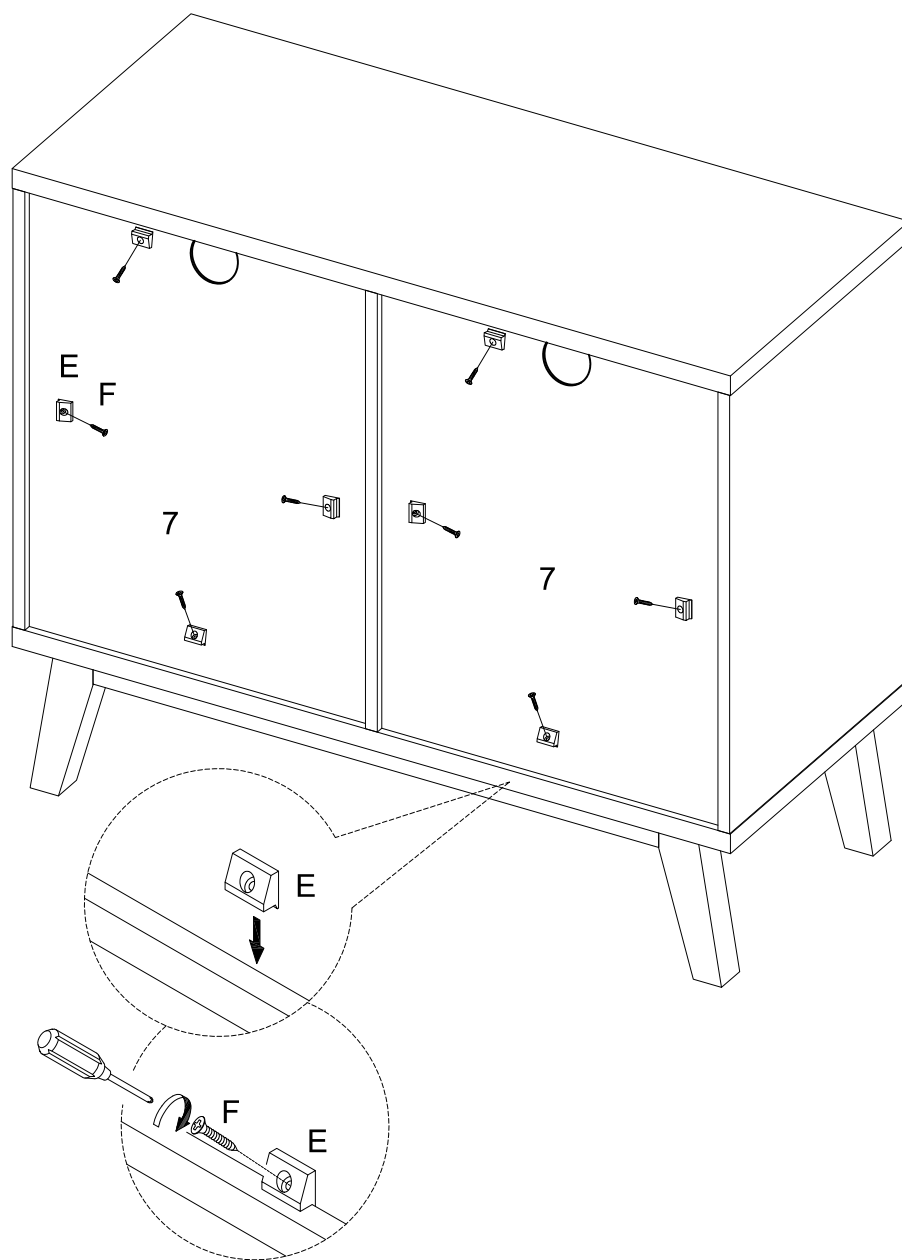


Attach plastic wedge (E) to part (7) using screw (F) with screwdriver.

Step 9

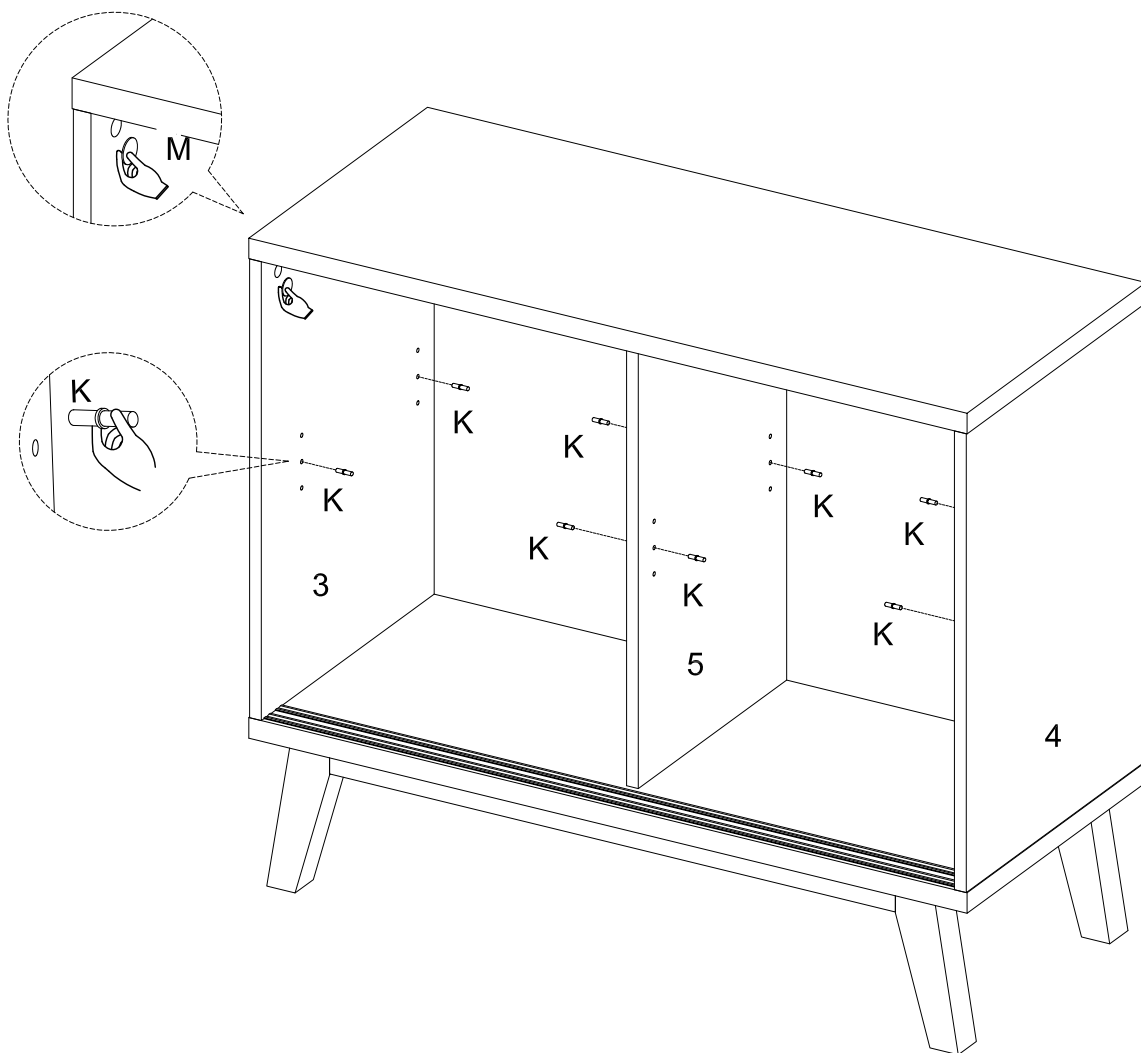


Insert support Pin (K) into Side panel (3,4,5)

Step 10

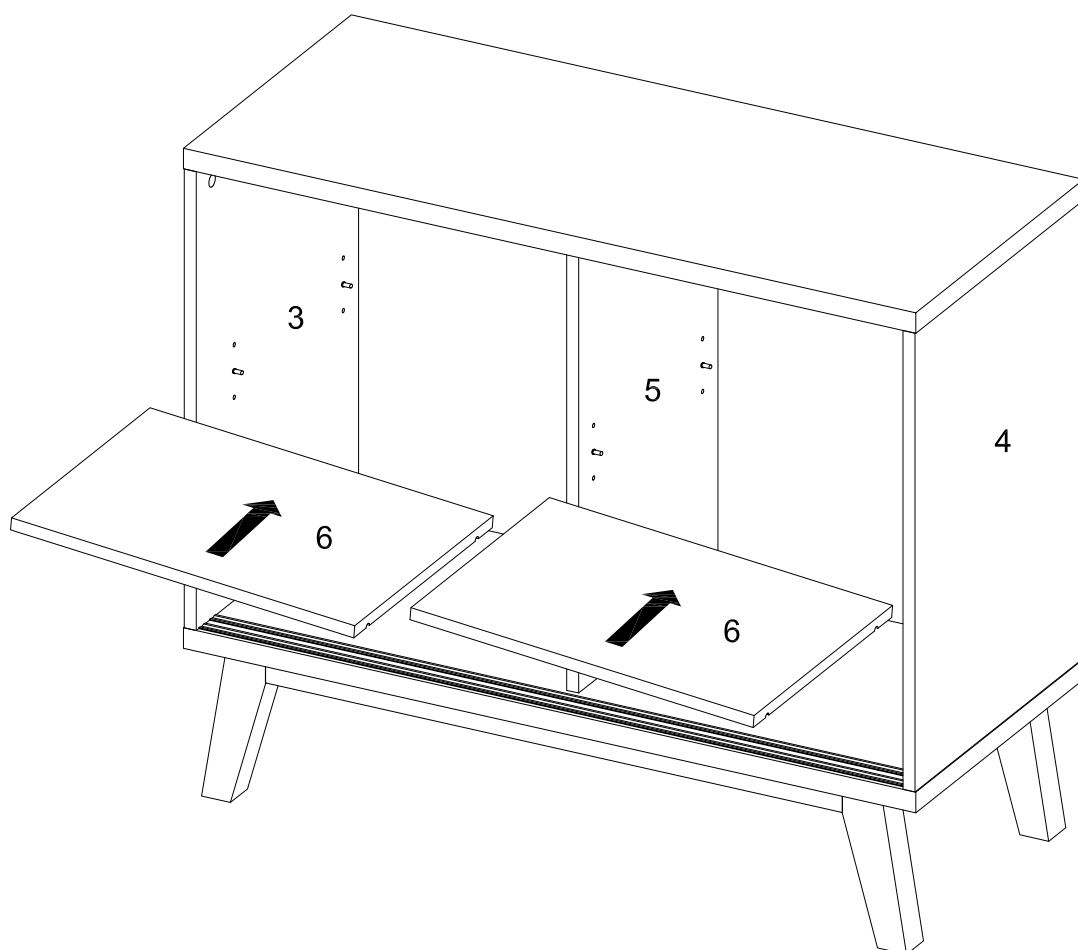


Insert shelf (6) into side panels (3,4,5).

Step 11

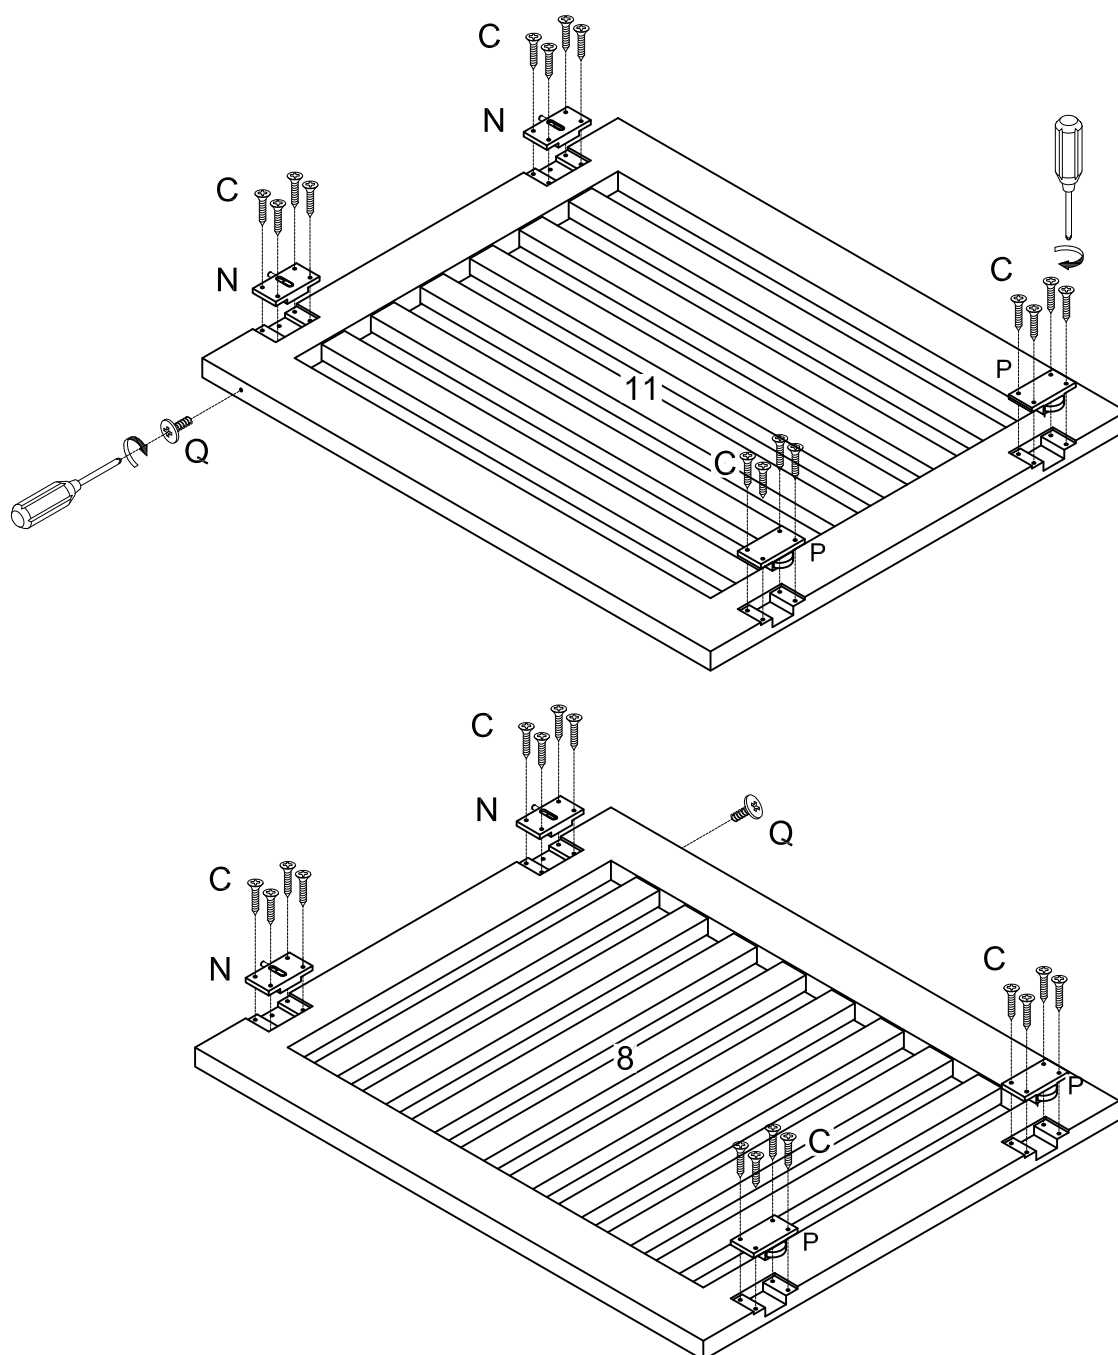


Using screw (C) lock Pulley (N,P) to part (8 , 11), Screw bolt (Q) into Part (8 , 11).

Step 12

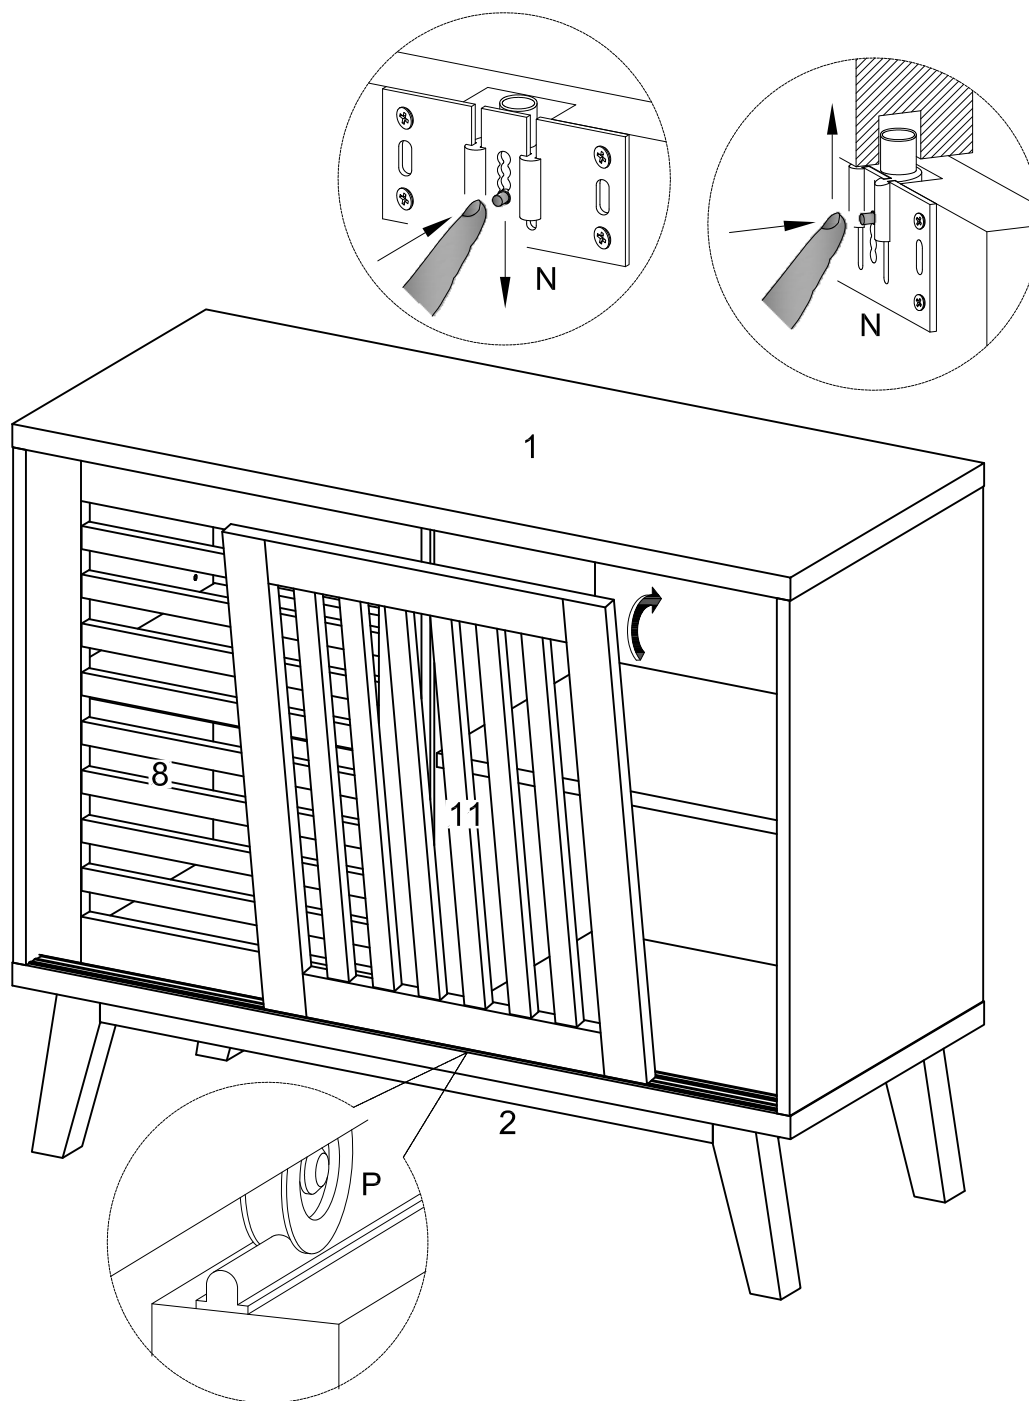

Place Part (11) into top panel till it click into Pulley(N) .

Step 13

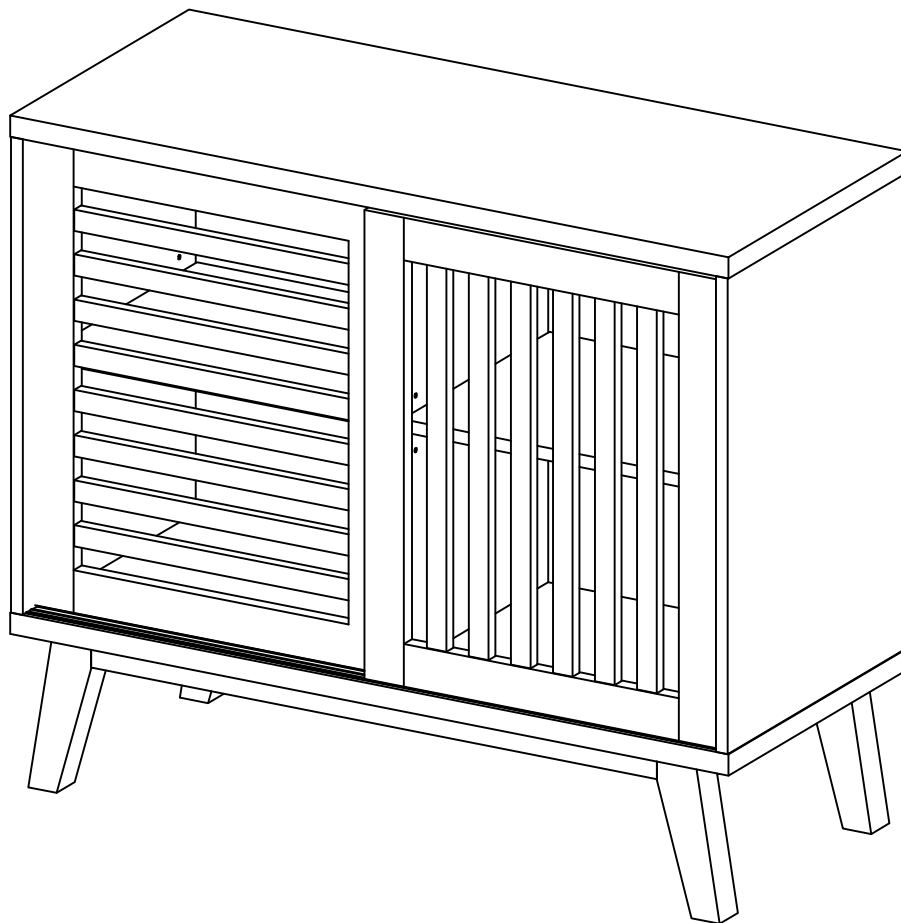

Final Assembly