




VD0630120

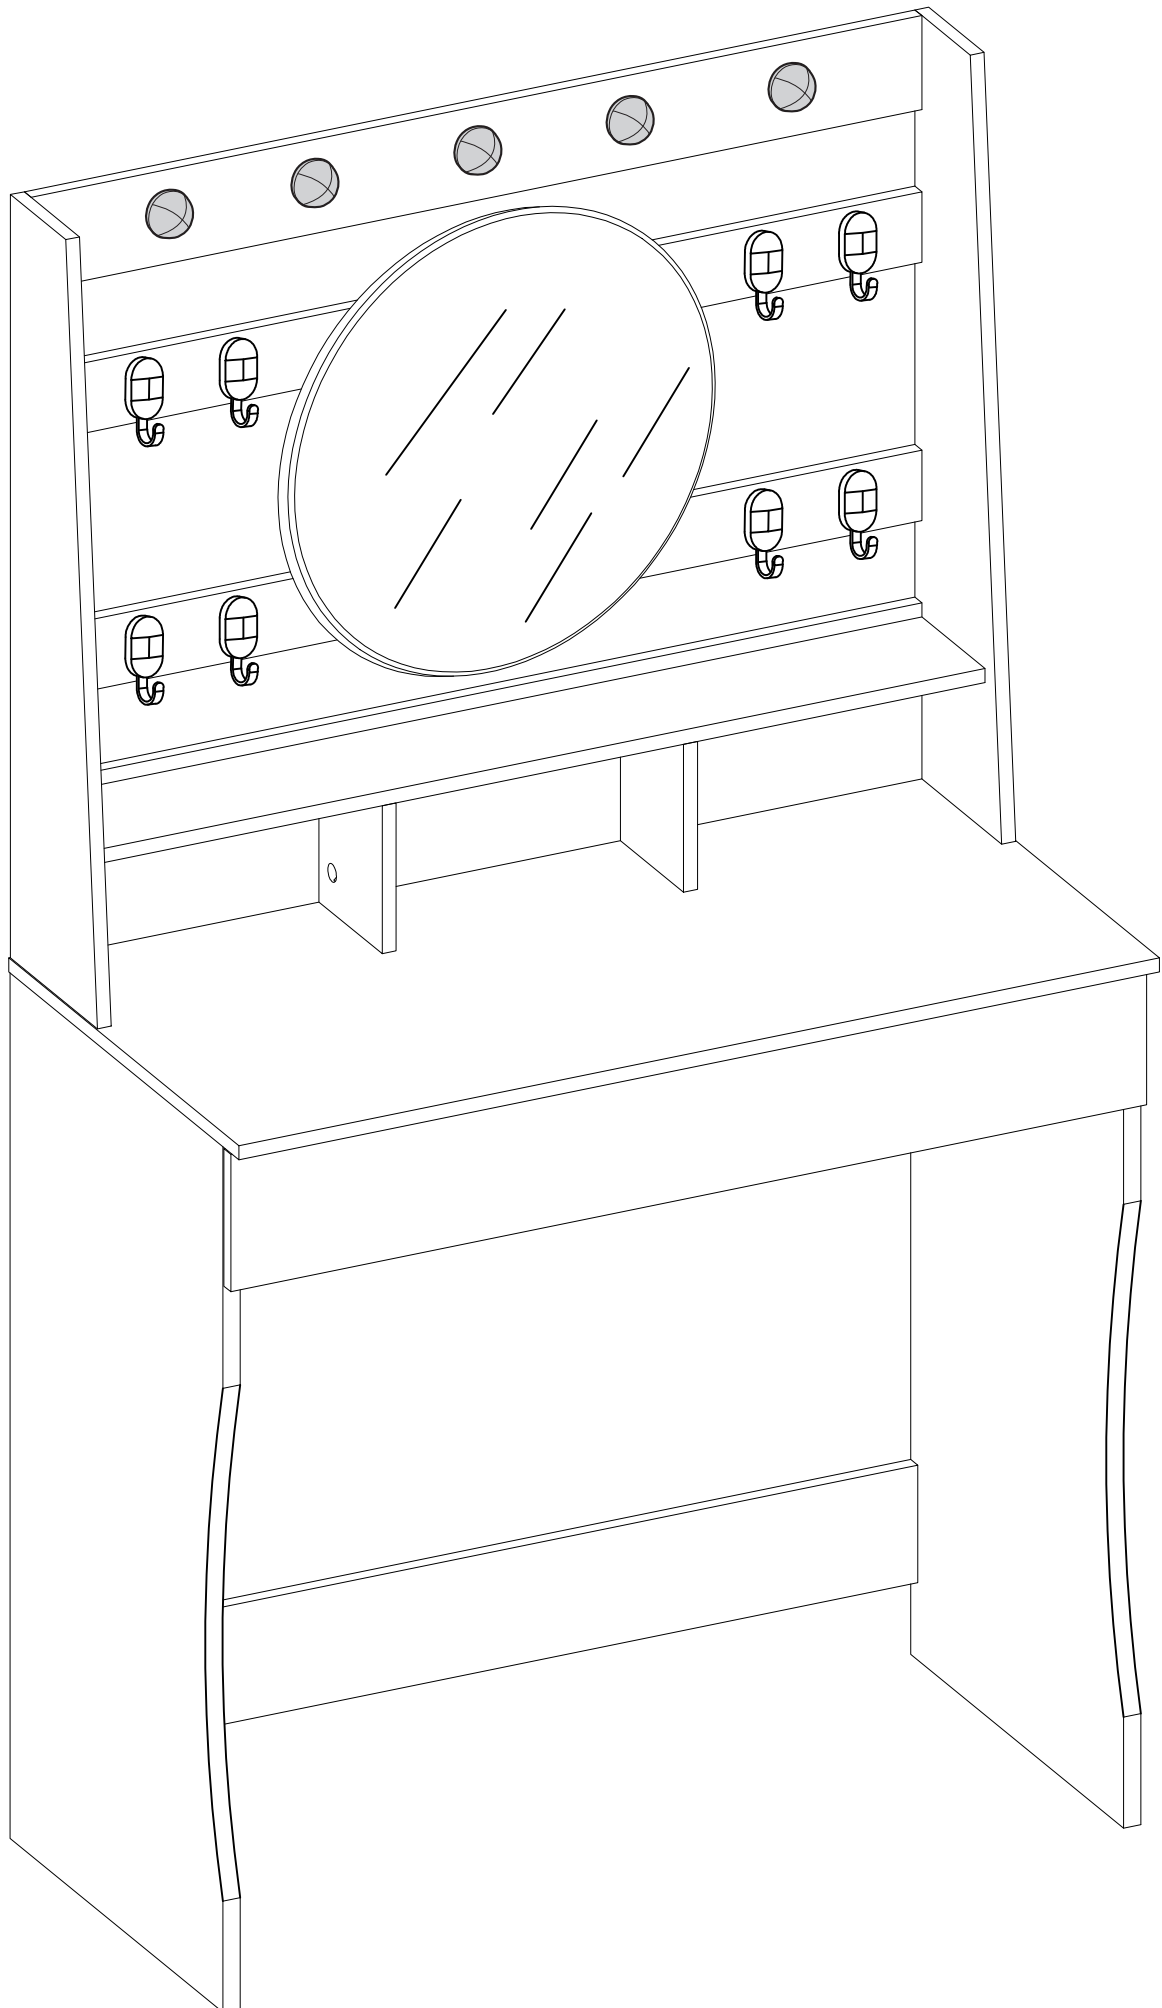

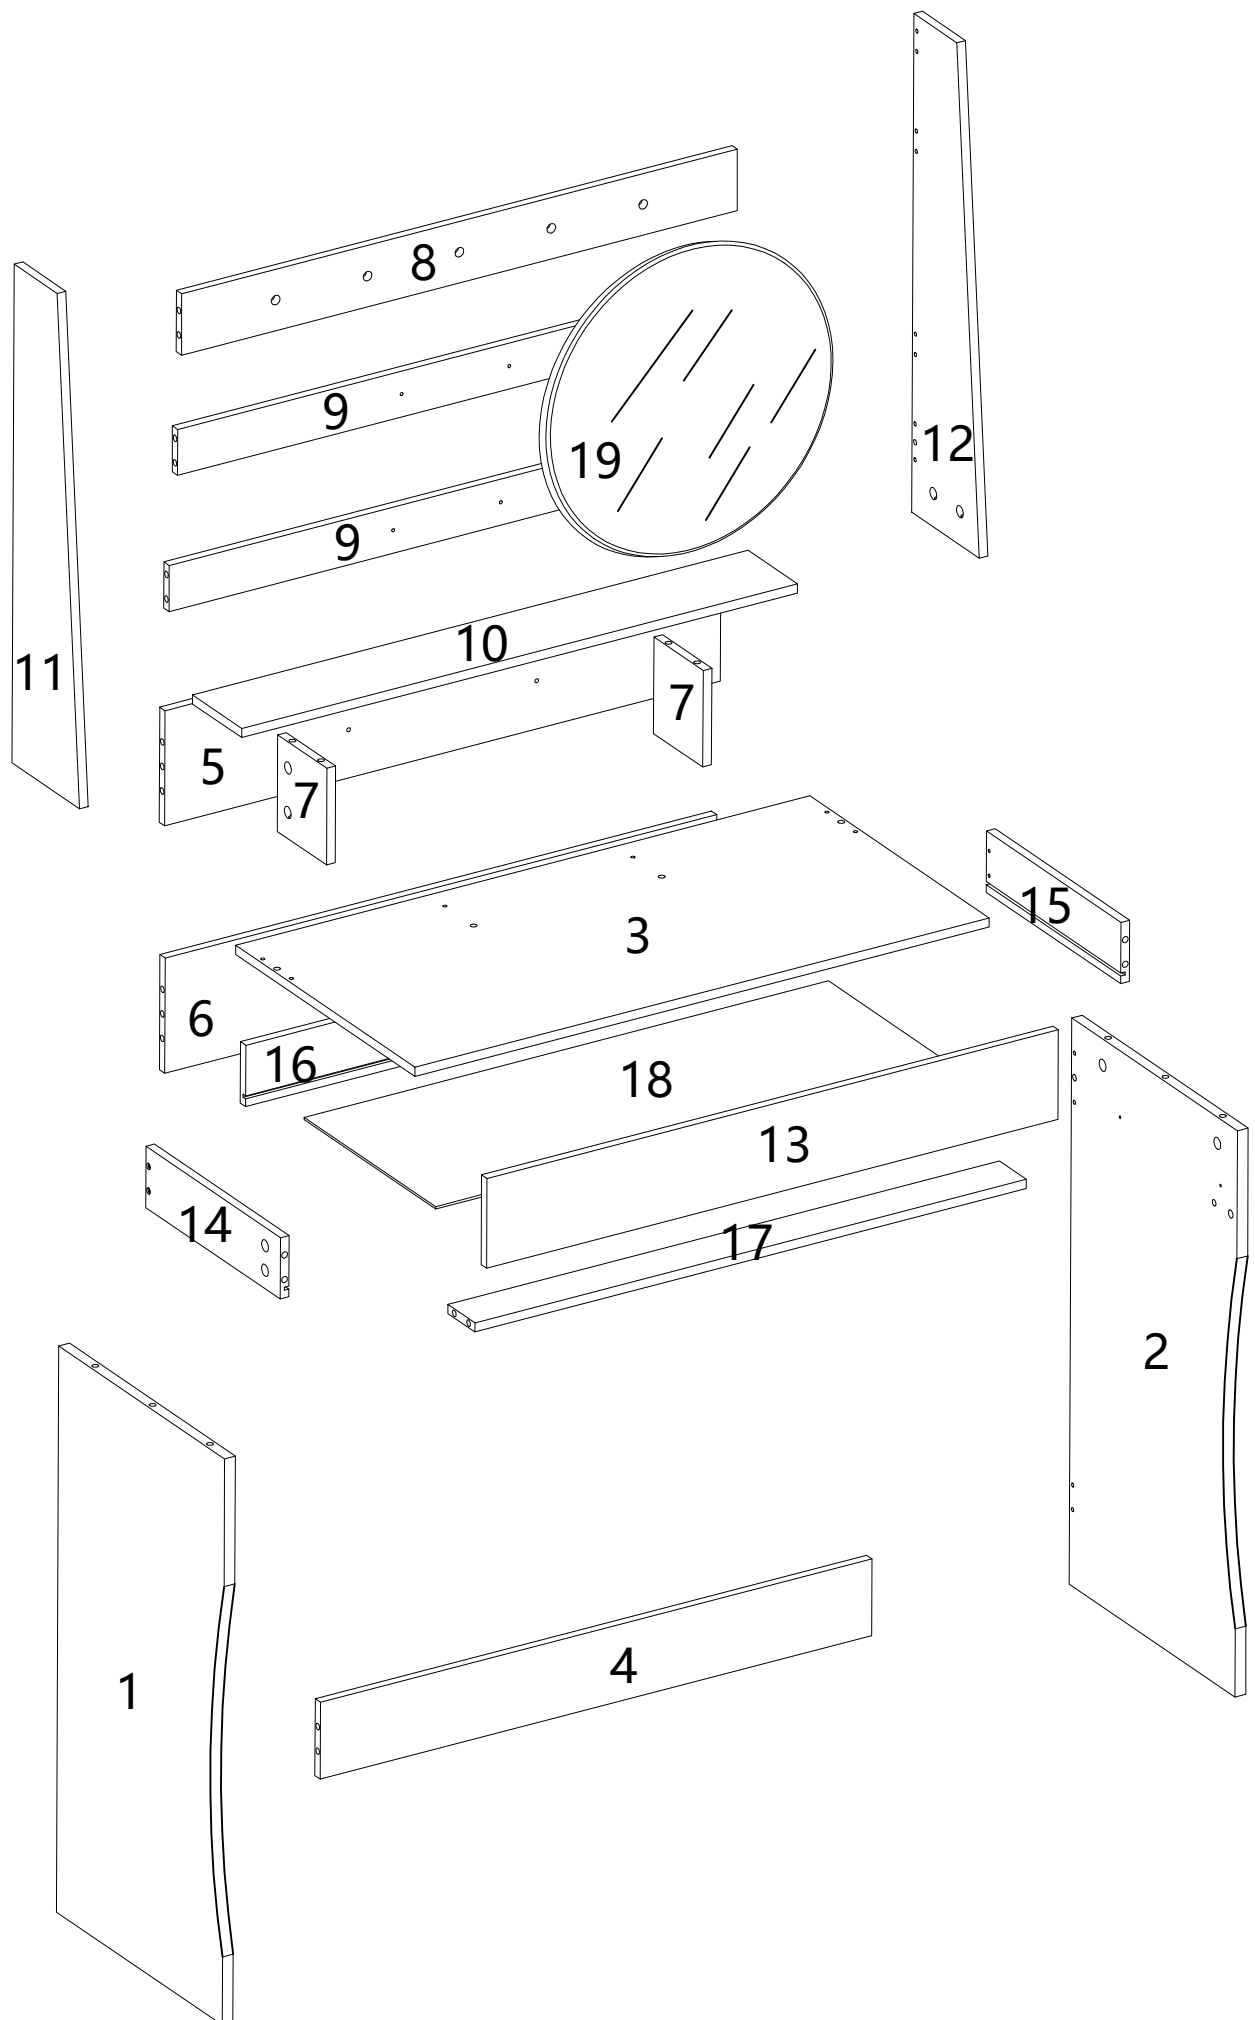


1

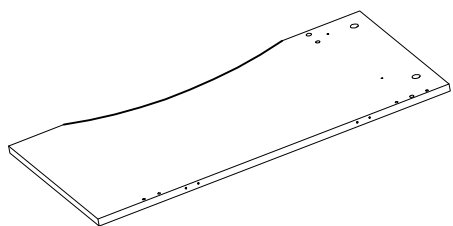


738*371mm

2

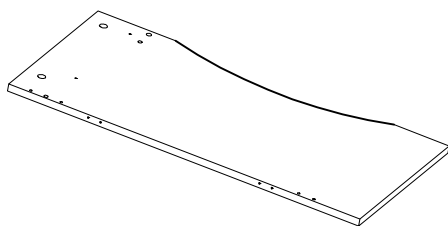

738*371mm

3

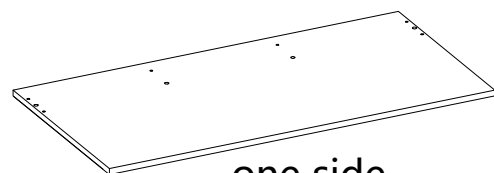


one side



the other side



800*395mm

4

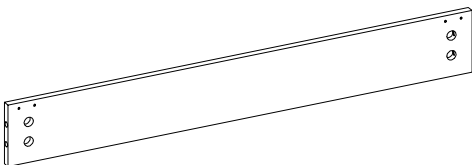


768*100mm

5

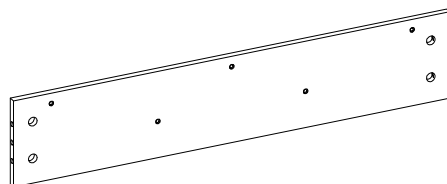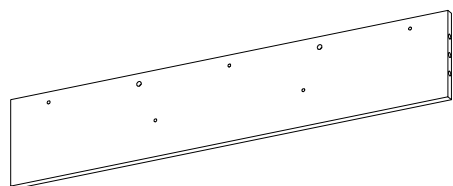


774*150mm

6

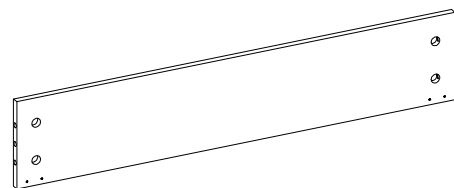

774*150mm



7

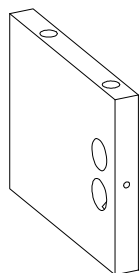

2pcs



126*110mm

8

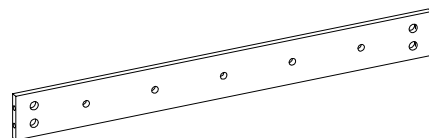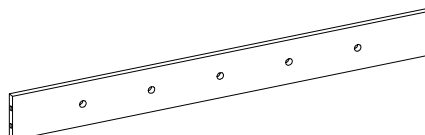

774*80mm


9

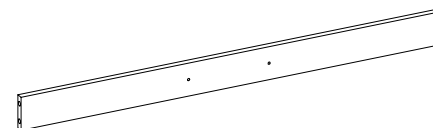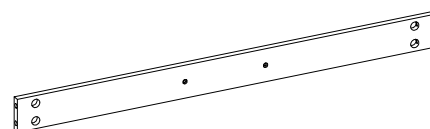

2pcs


774*60mm

10

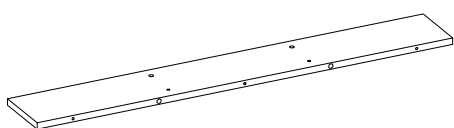


774*110mm

11

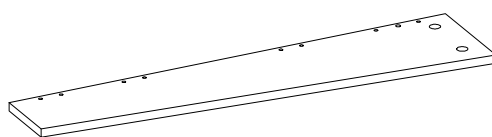














650*151mm

12

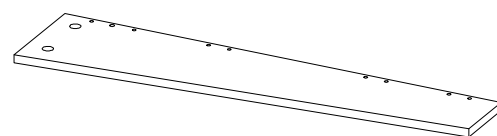

650*151mm


13 796*118mm	14 one side the other side 300*80mm	15 one side the other side 300*80mm
16 718*80mm	17 768*60mm	18 726*296mm
19 404*404mm		

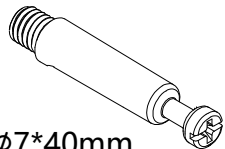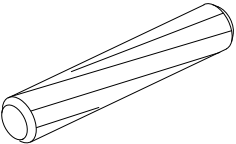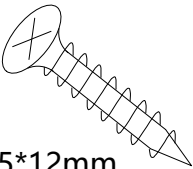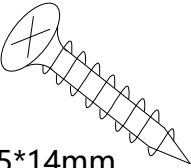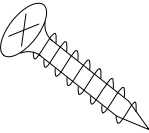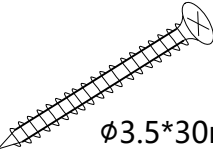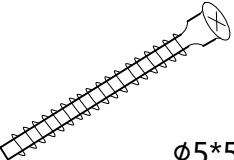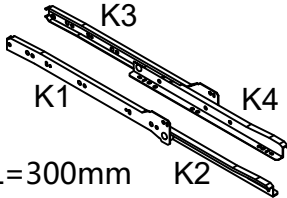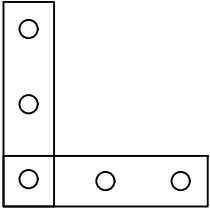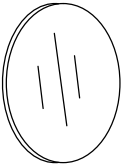A	 ø7*40mm	×42	B	 ø15*9.5mm	×40
C	 ø8*30mm	×16	D	 ø3.5*12mm	×20
E	 ø3.5*14mm	×8	F	 ø3.5*20mm	×4
G	 ø3.5*30mm	×4	H	 H1:5pcs  H2:1pcs	×1
J	 ø5*50mm	×5	K	 K1 K2 K3 K4 L=300mm	×1
L	 L1  L2 8pcs	×1	O		×4
M		×4	N		×2


Hardware installation demonstration

NOTE: Please make sure
"A" hardware tightened
and can't be pulled out!


I

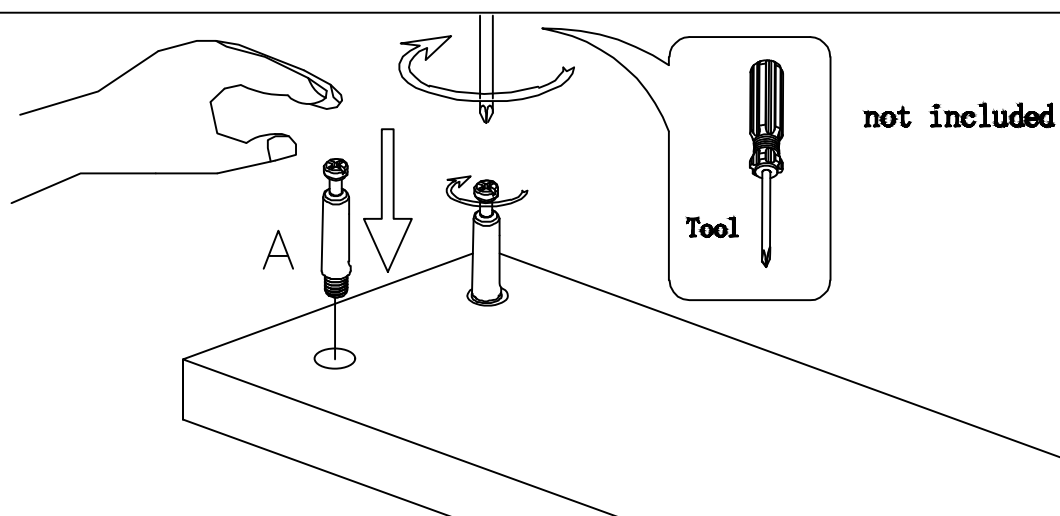


II

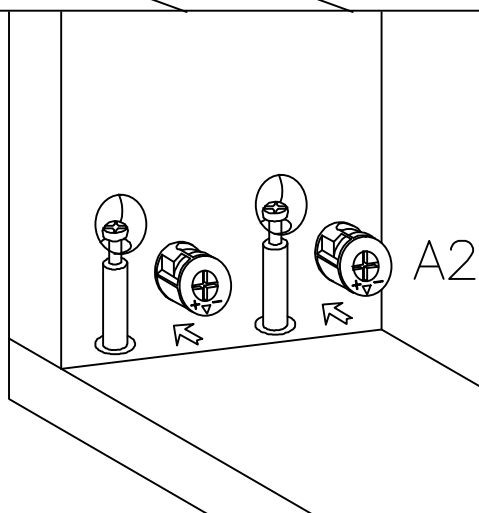



III

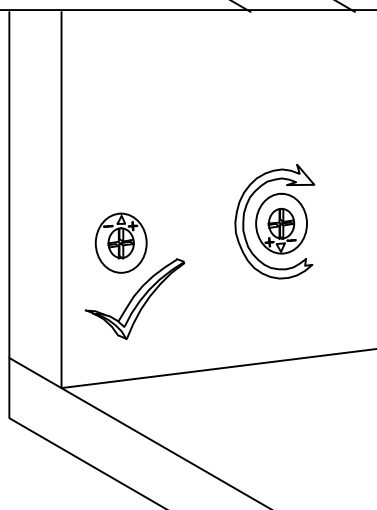


STEP 1

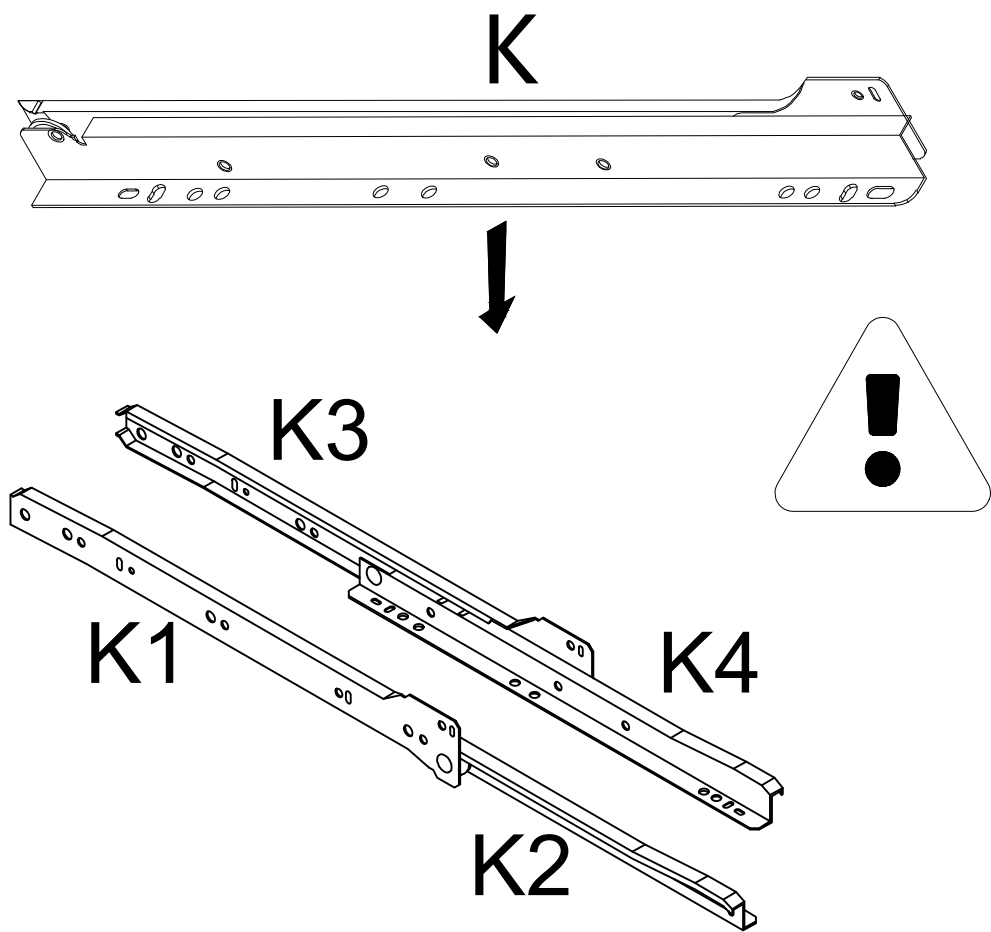


STEP 2

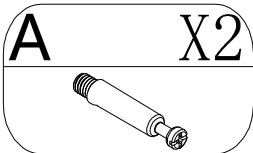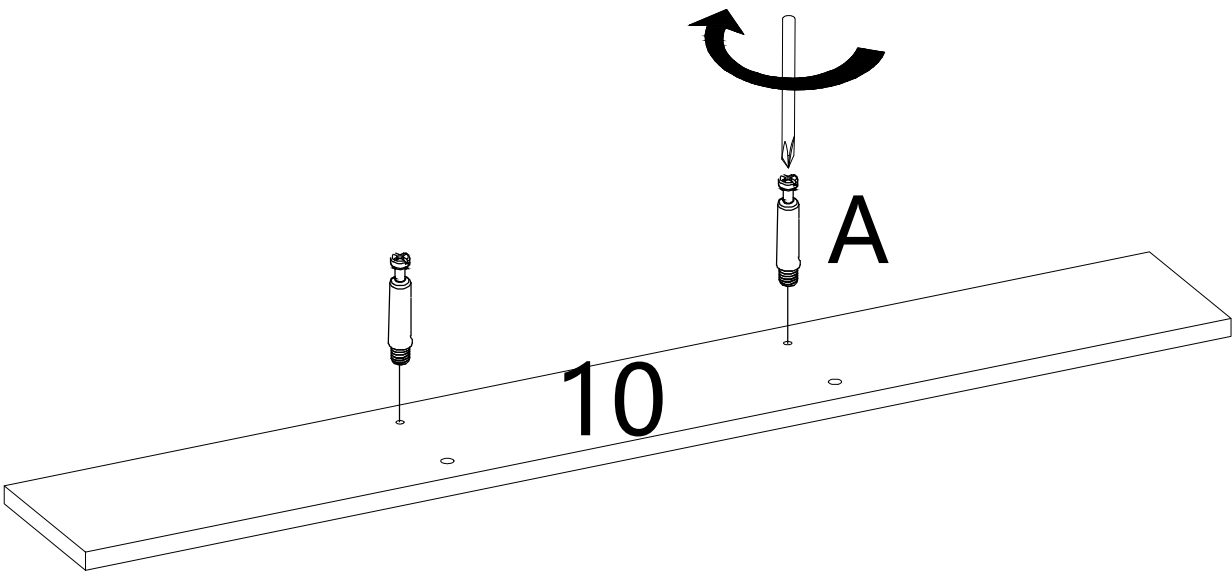




STEP 3

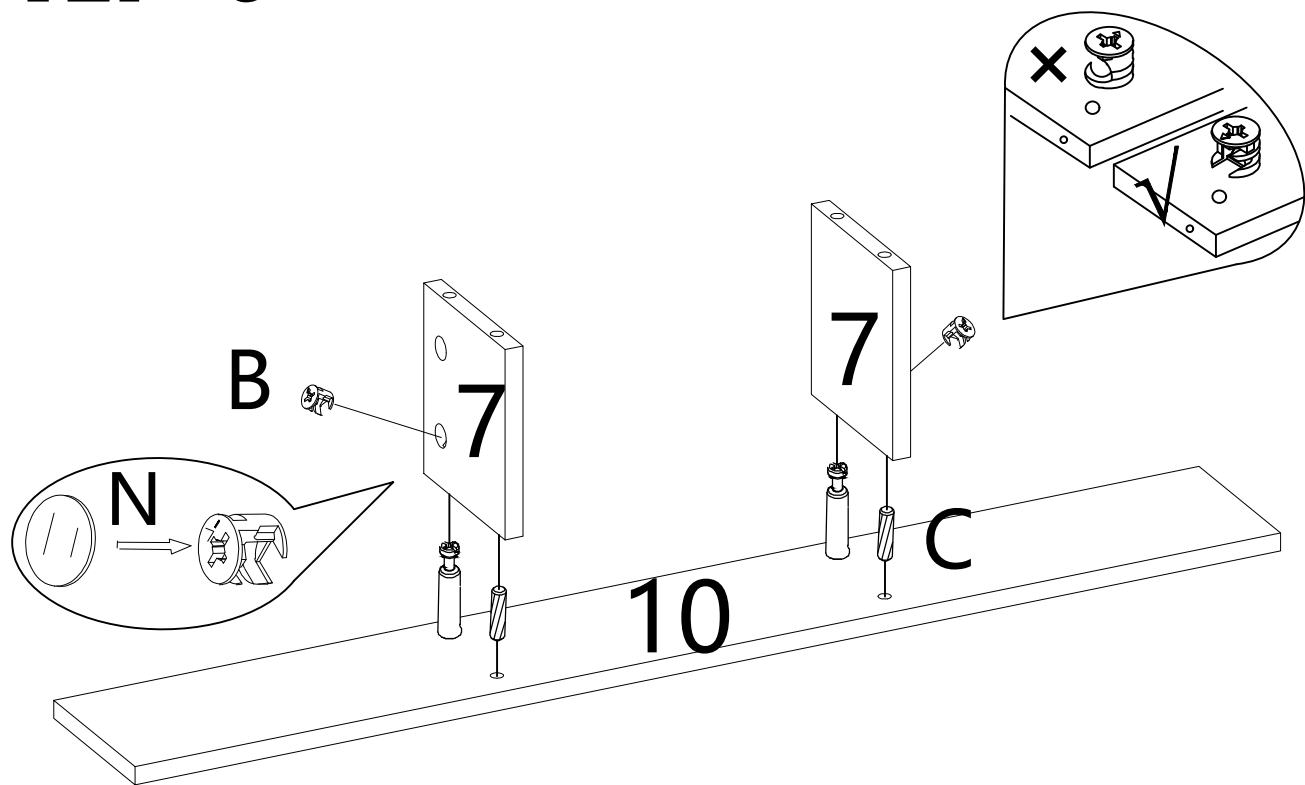



N	X2	B	X2	C	X2
					

STEP 4


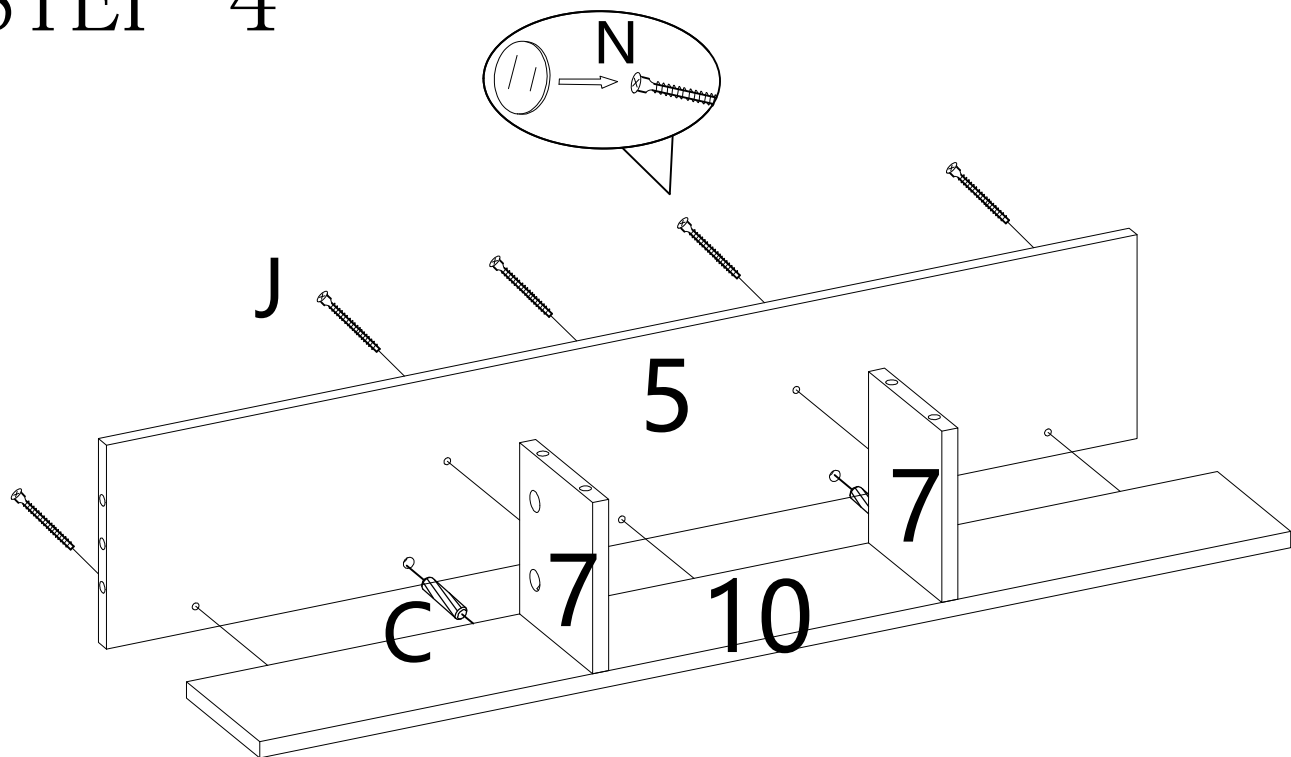


N	X5	J	X5	C	X2
					



STEP 5

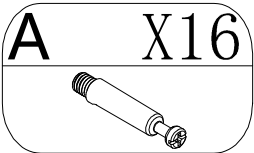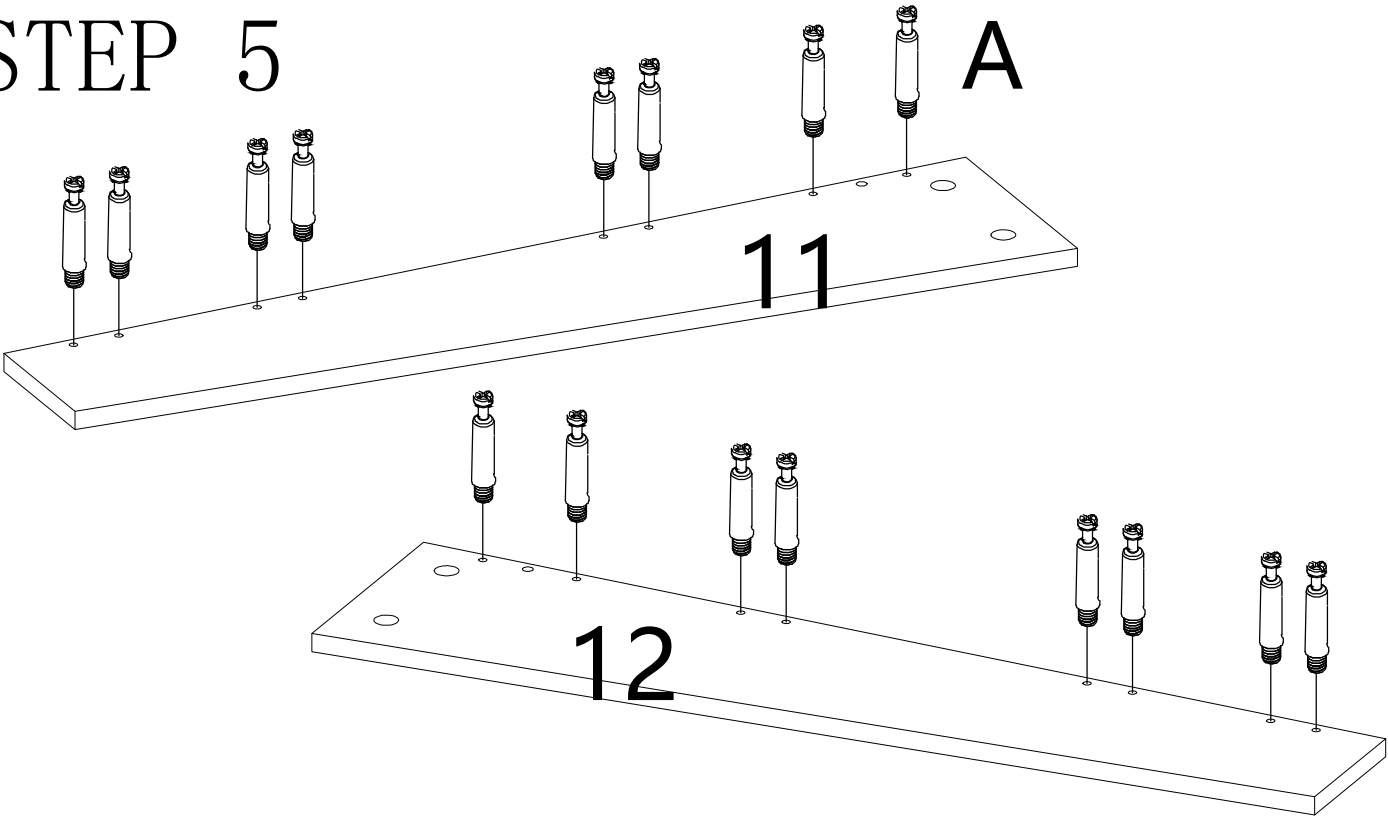


STEP 6

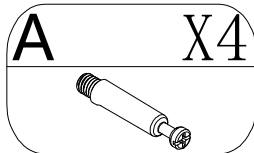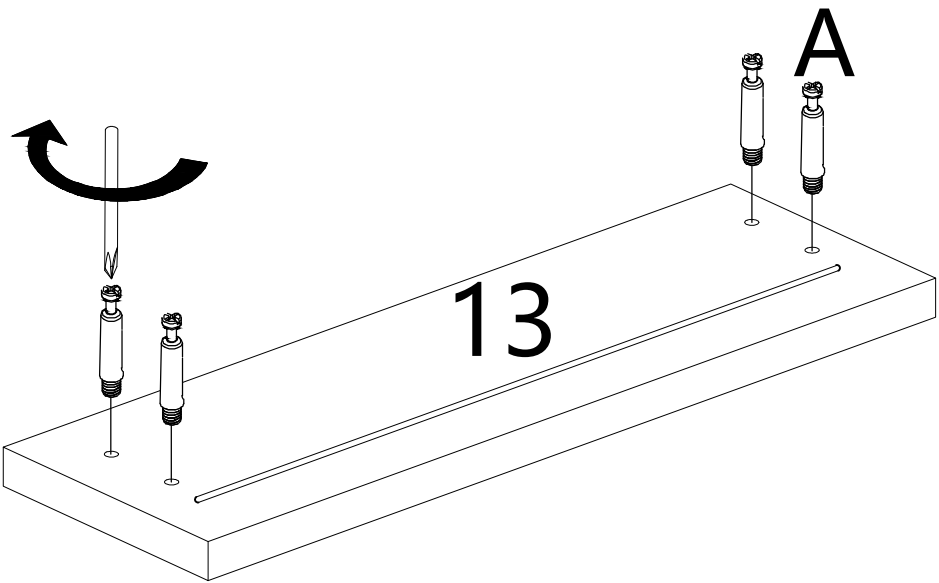


STEP 7

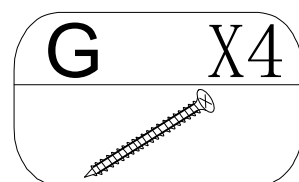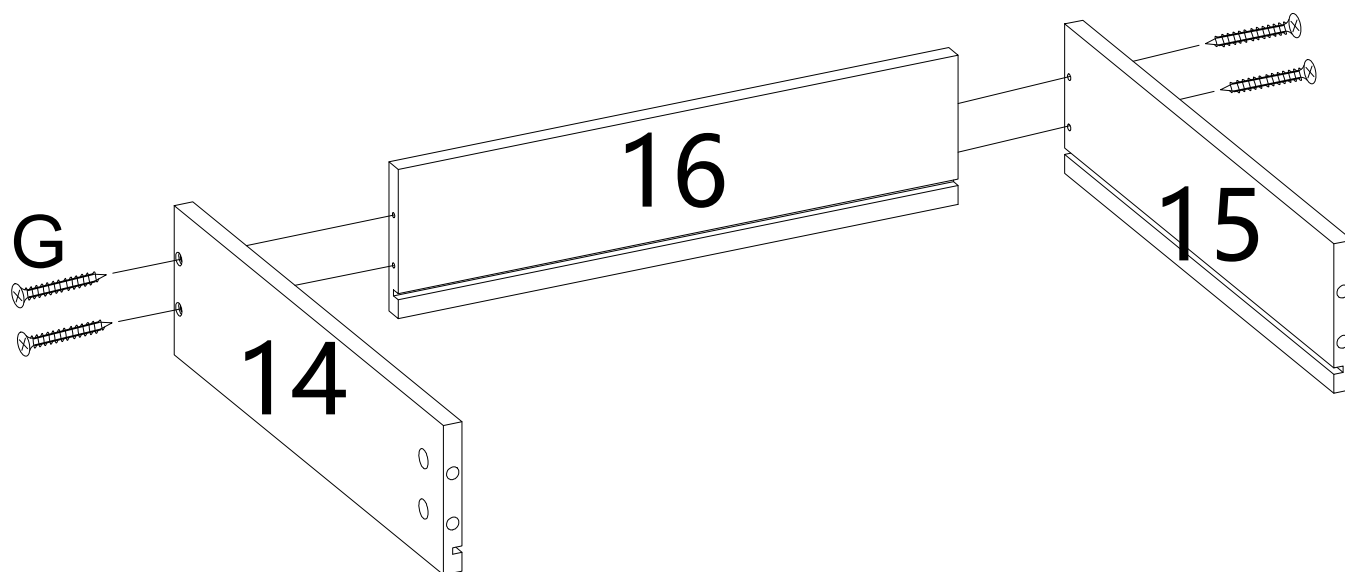

STEP 8

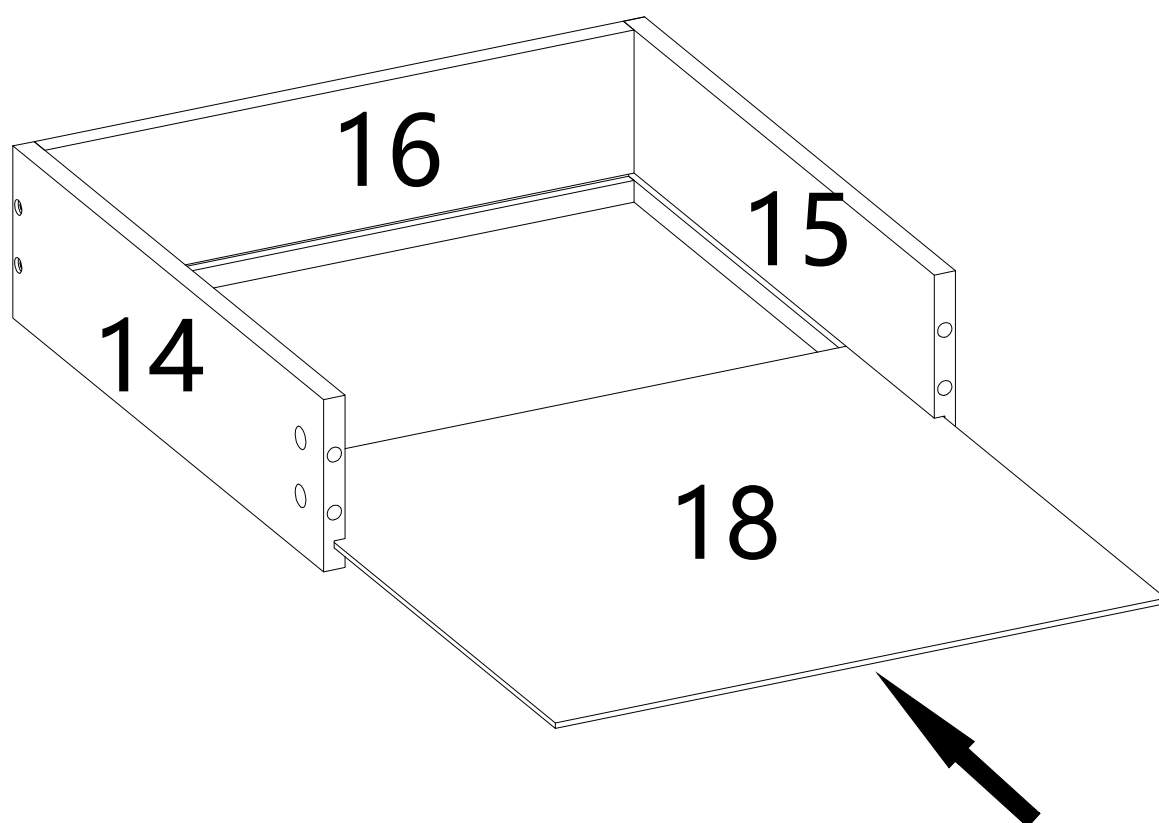


STEP 9

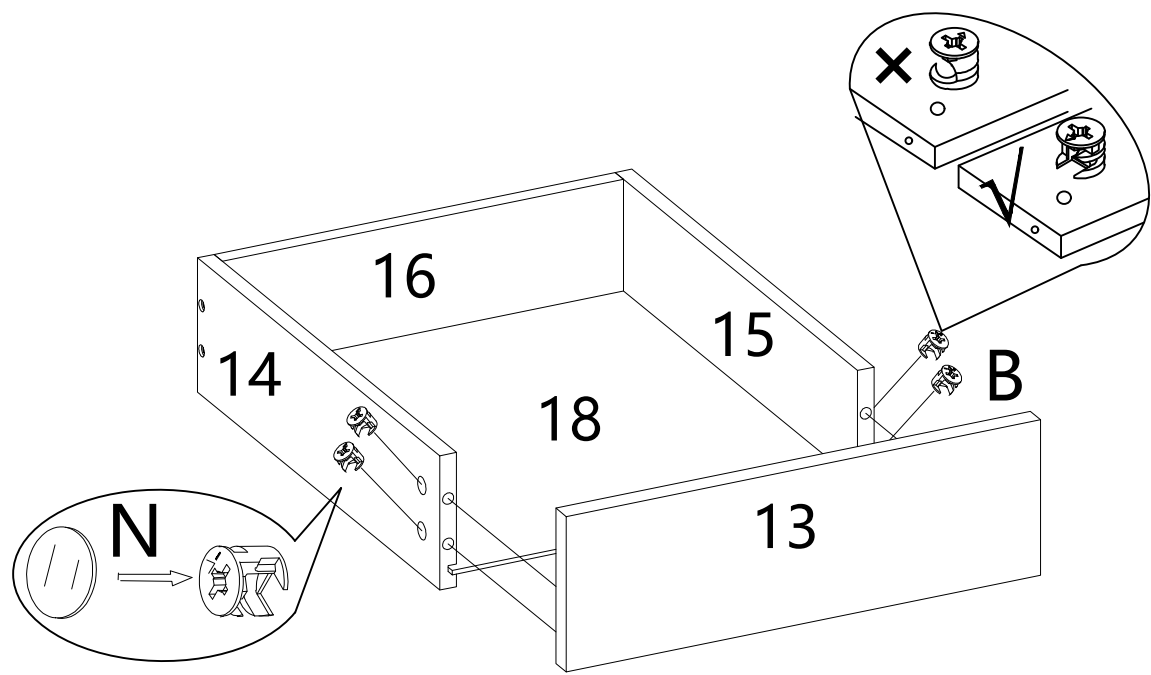

B	X4

N	X4

STEP 10

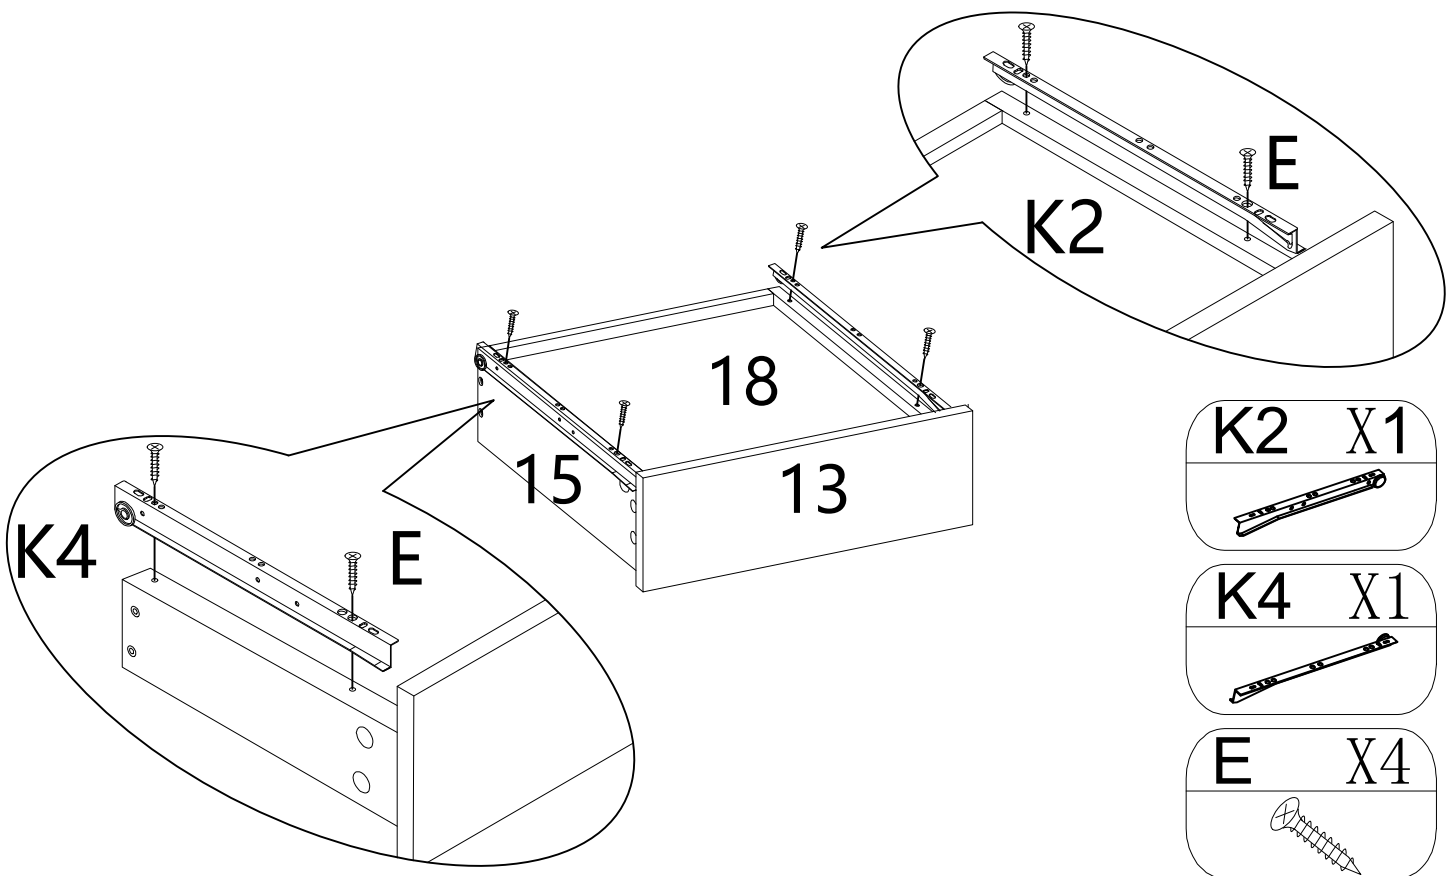



K2	X1

K4	X1



E	X4

STEP 11

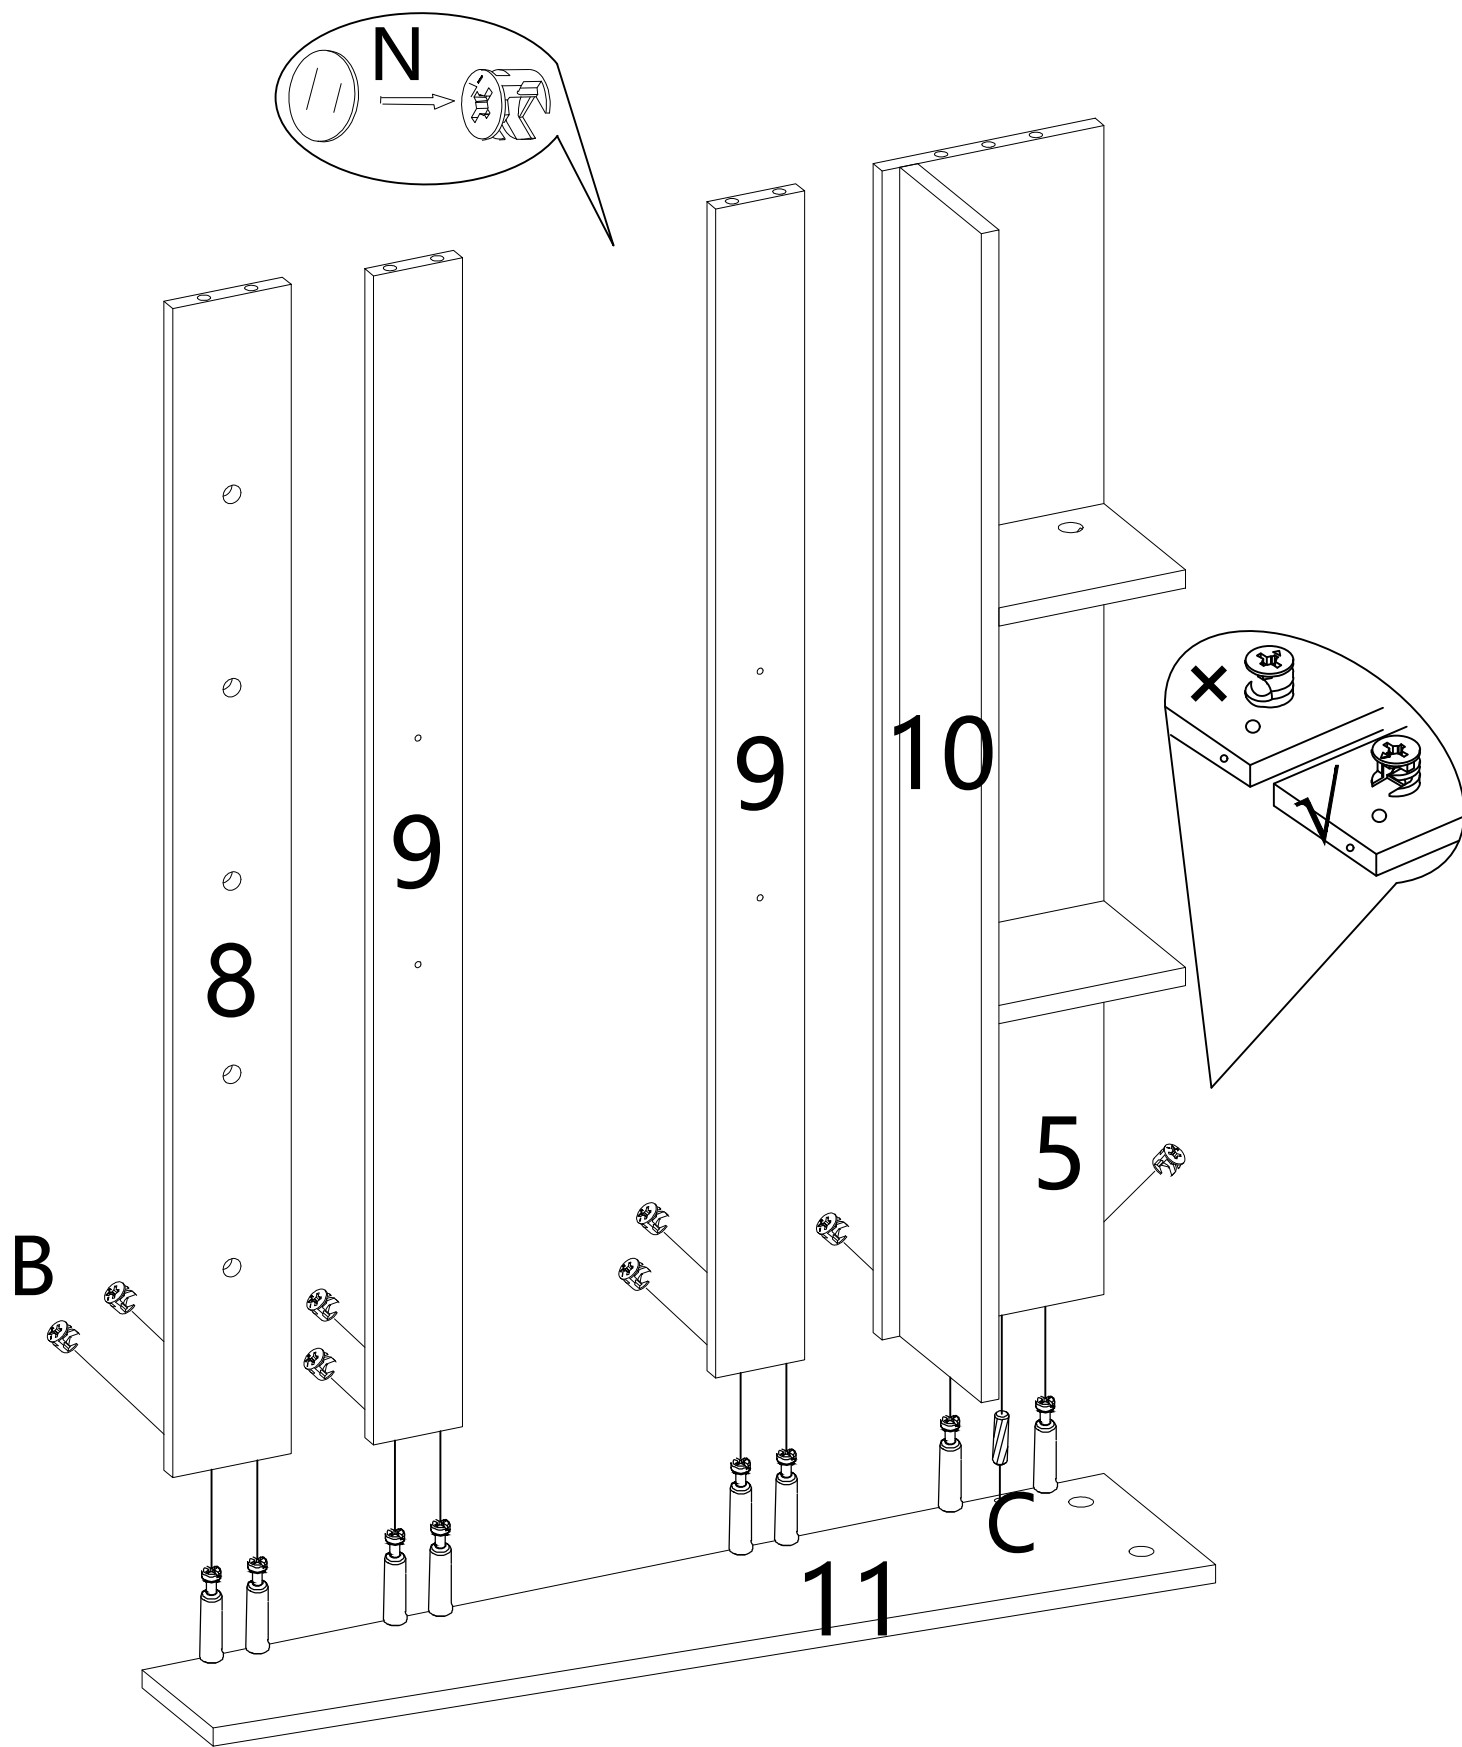

N	X8	B	X8	C	X1
					

STEP 12

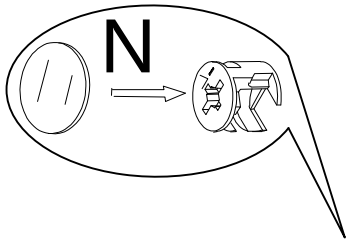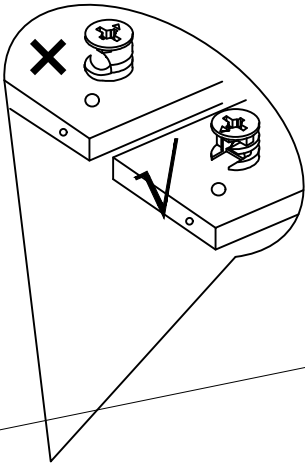

B

12

C

9


10

5


11

8


9

N	X8	B	X8	C	X1
					


STEP 13

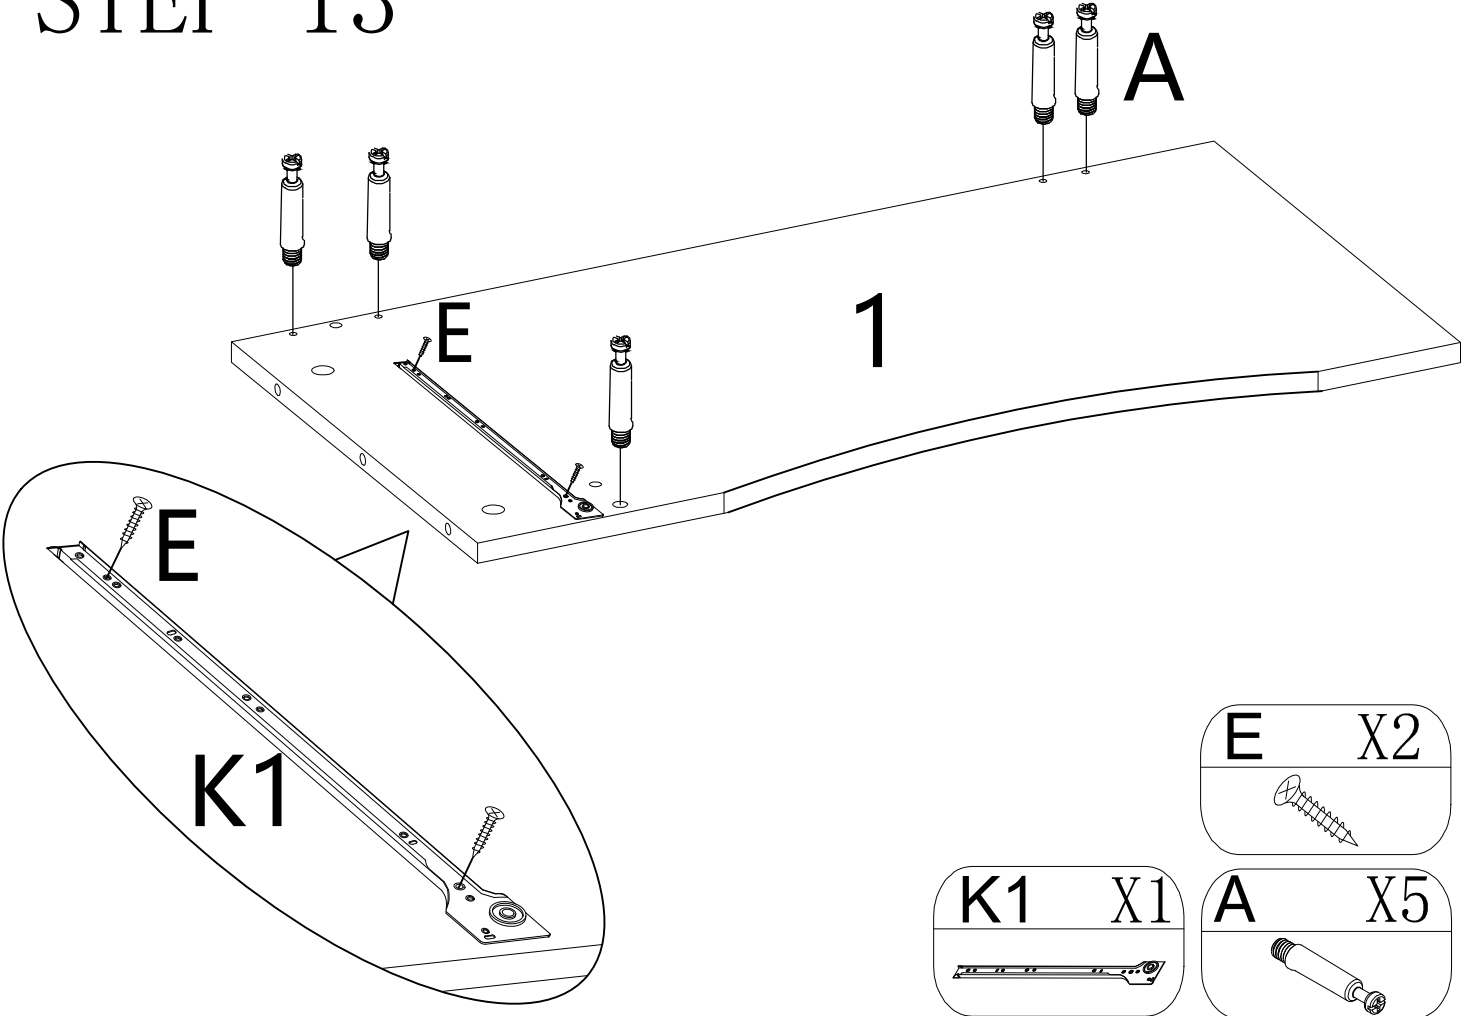


STEP 14

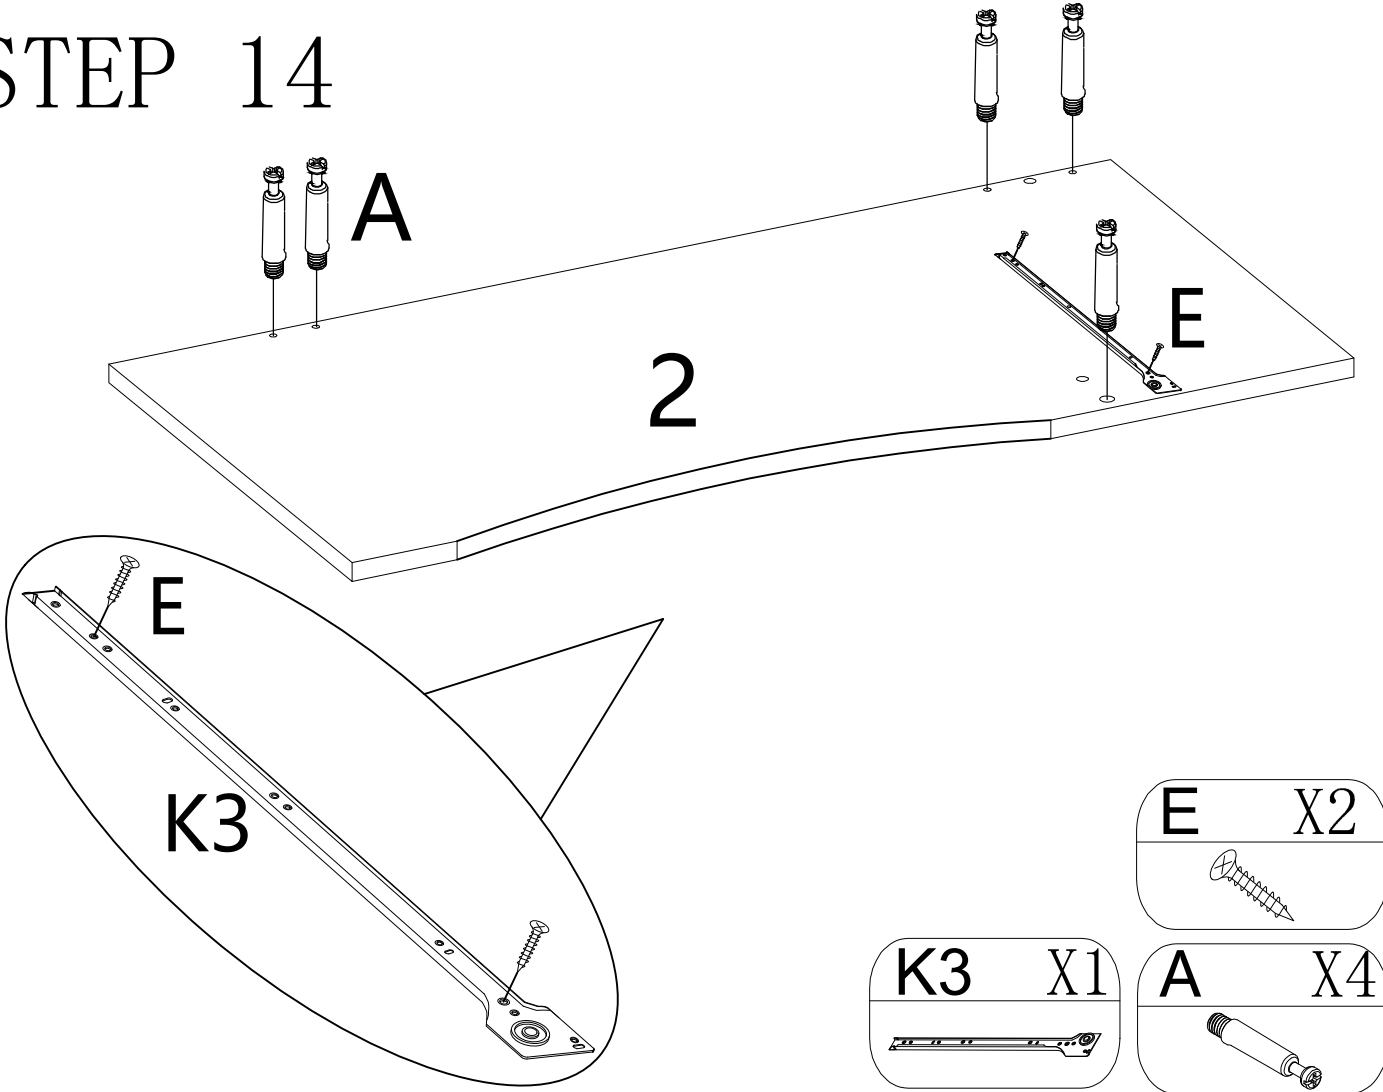



STEP 15

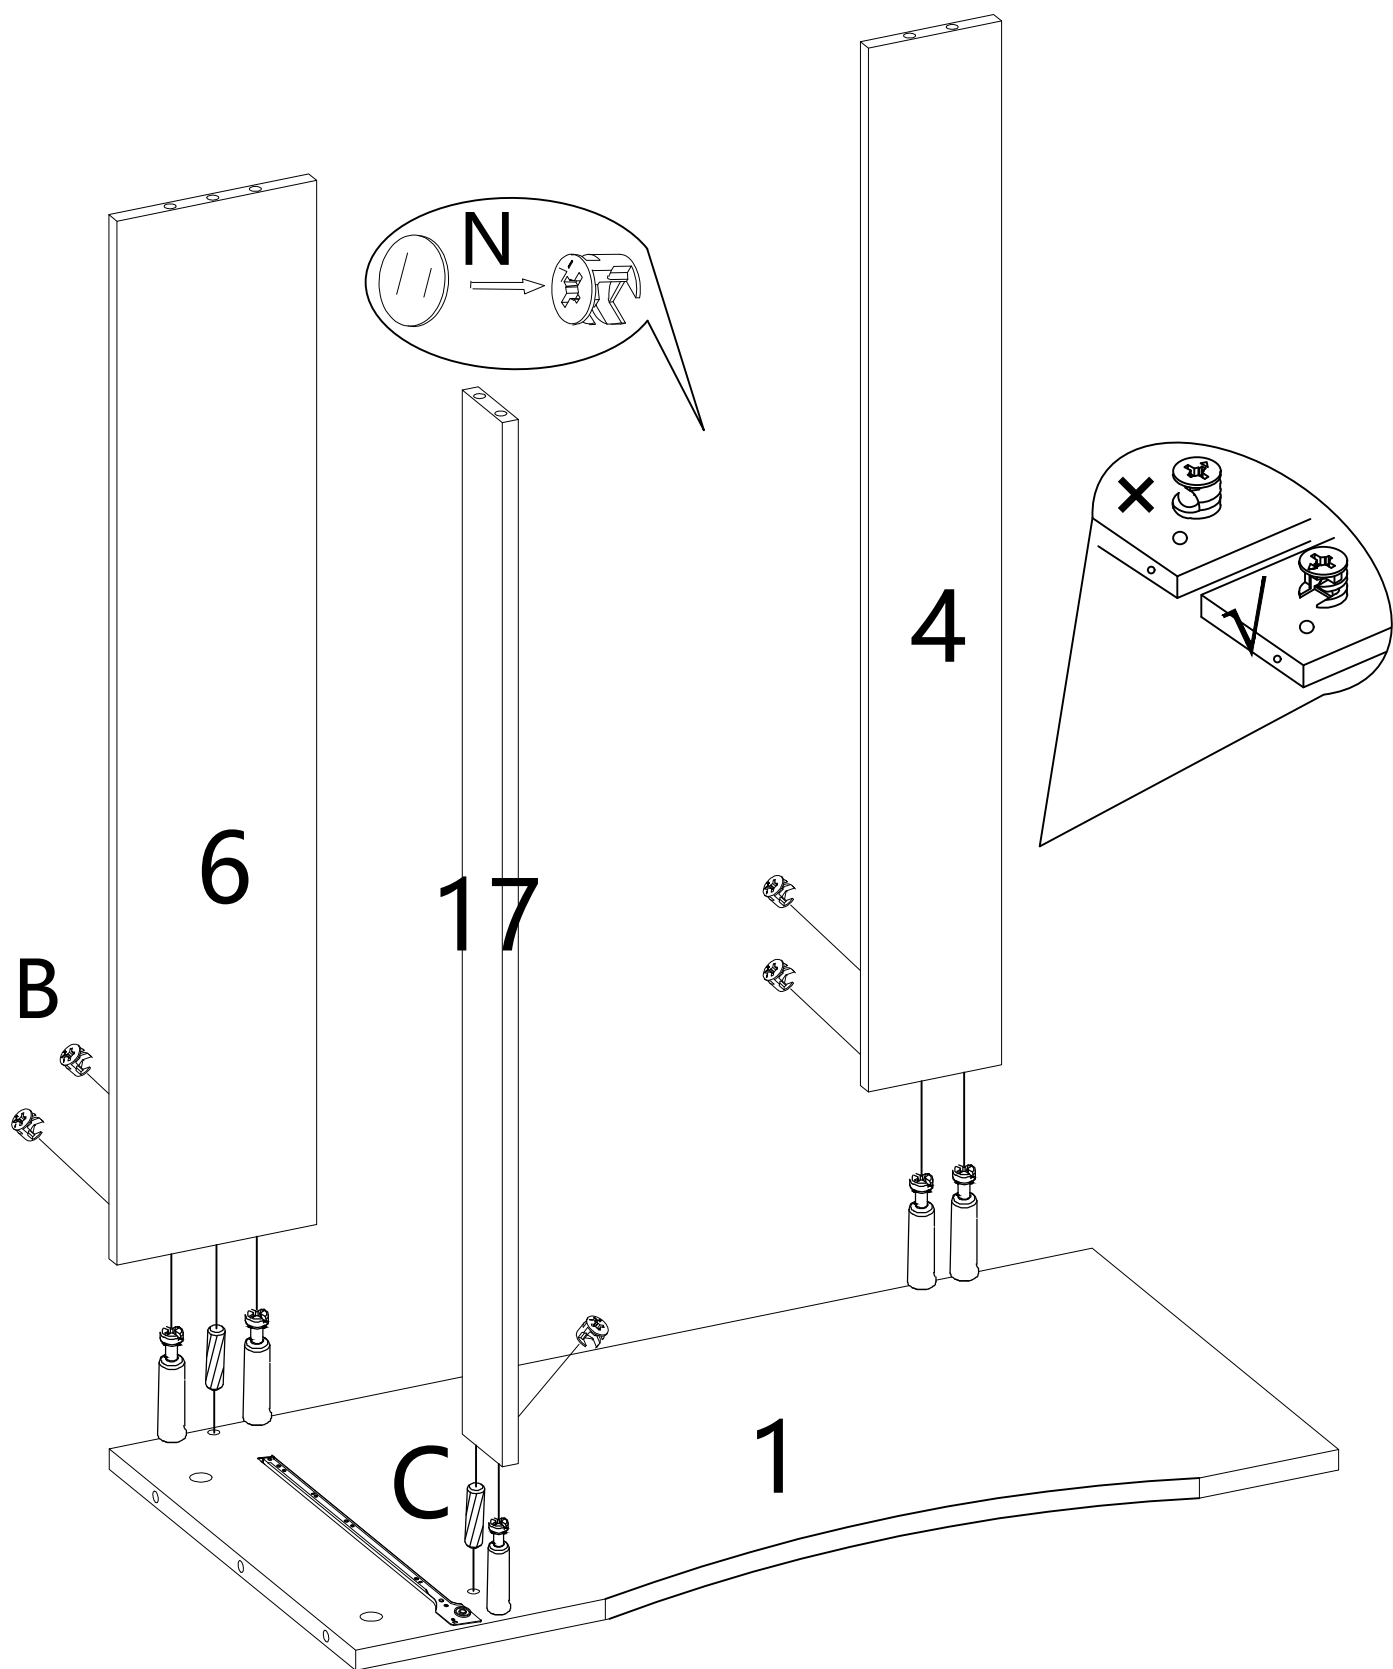


C	X2	N	X5	B	X5
					

STEP 16

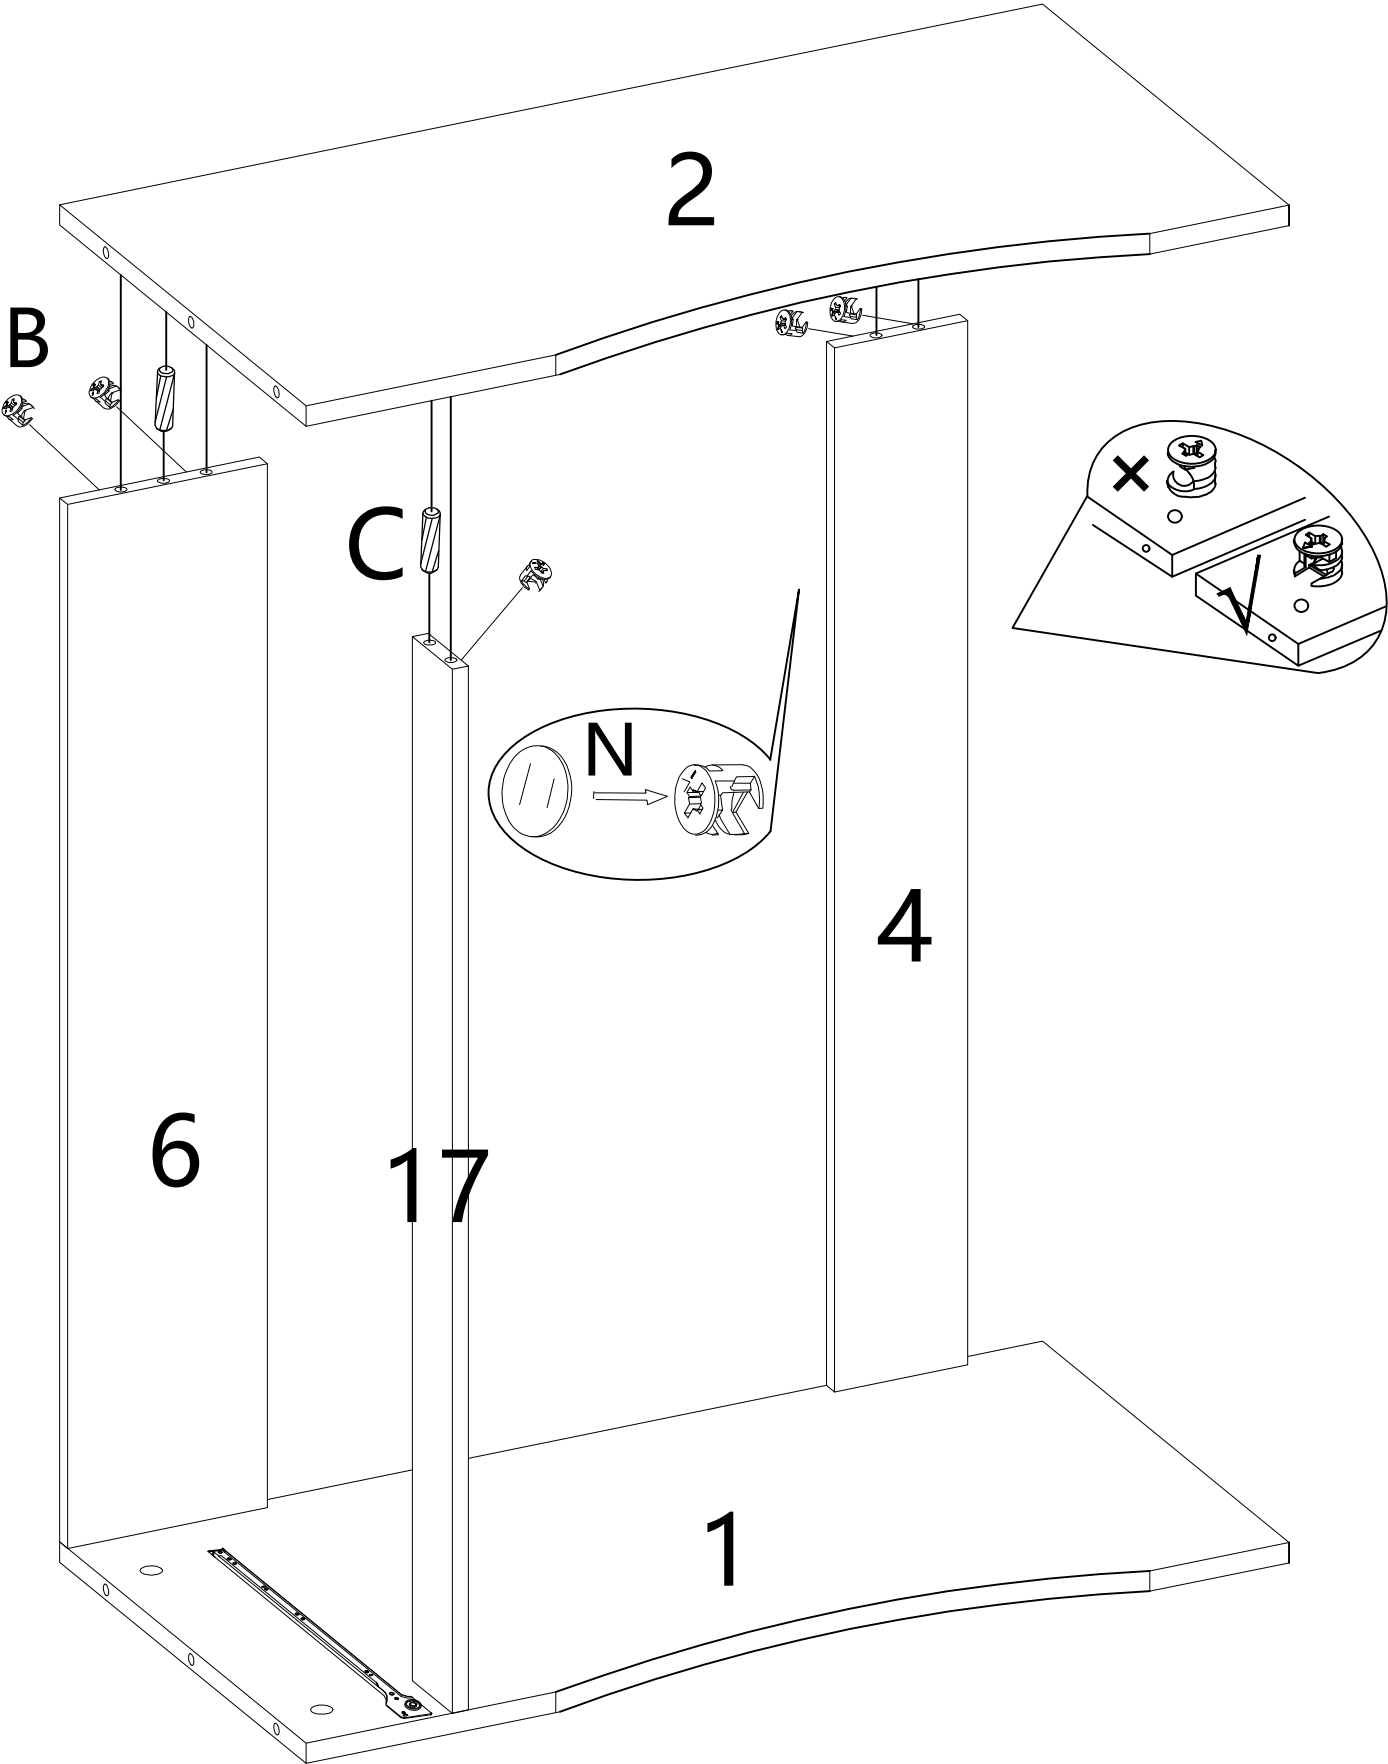


C	X2	N	X5	B	X5
					


STEP 17

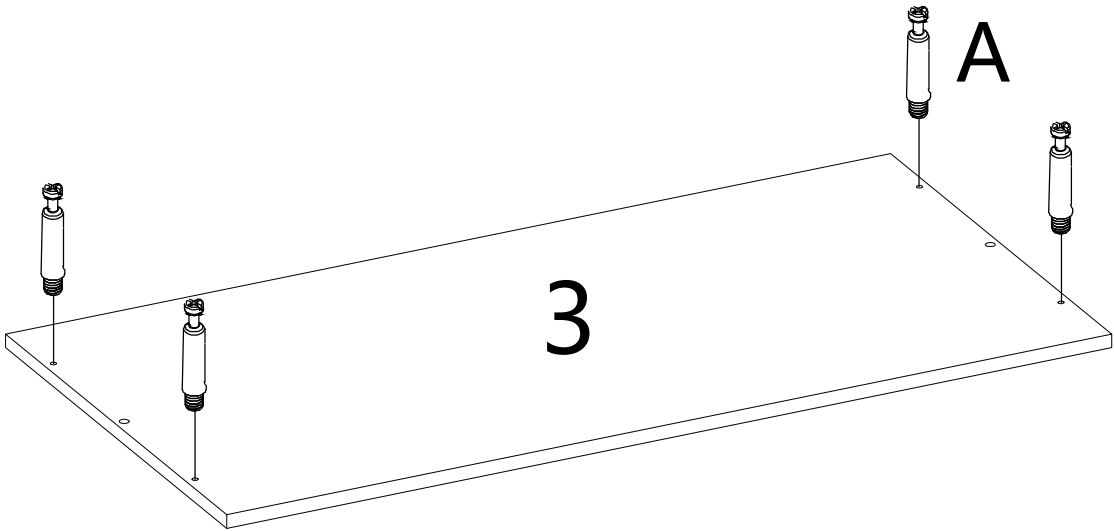







one side

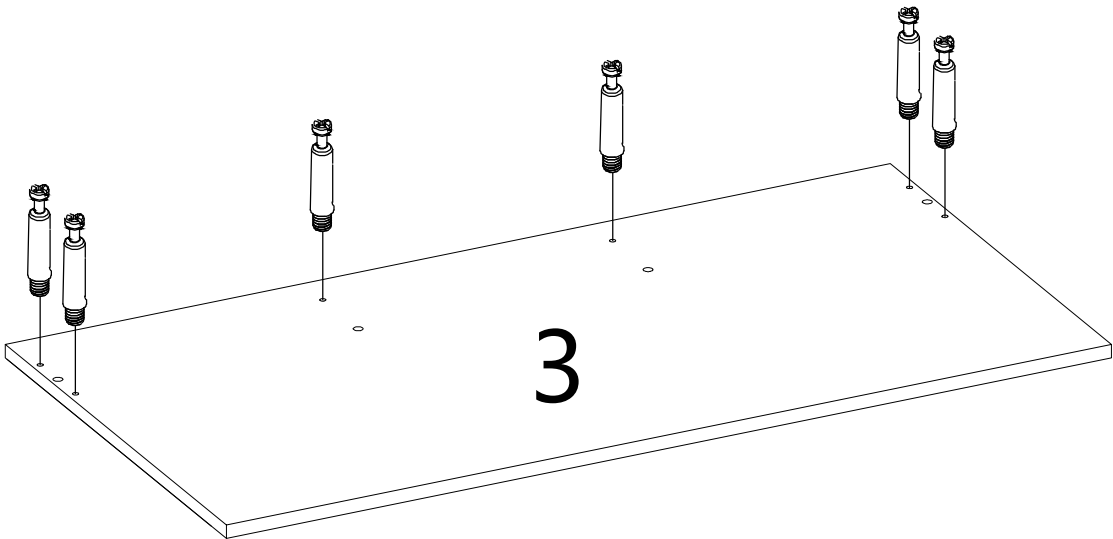


the other side

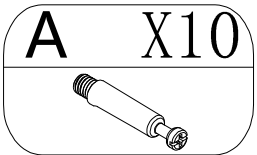

STEP 18

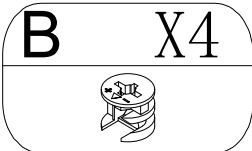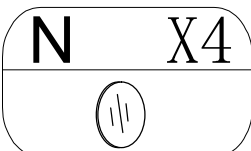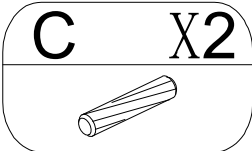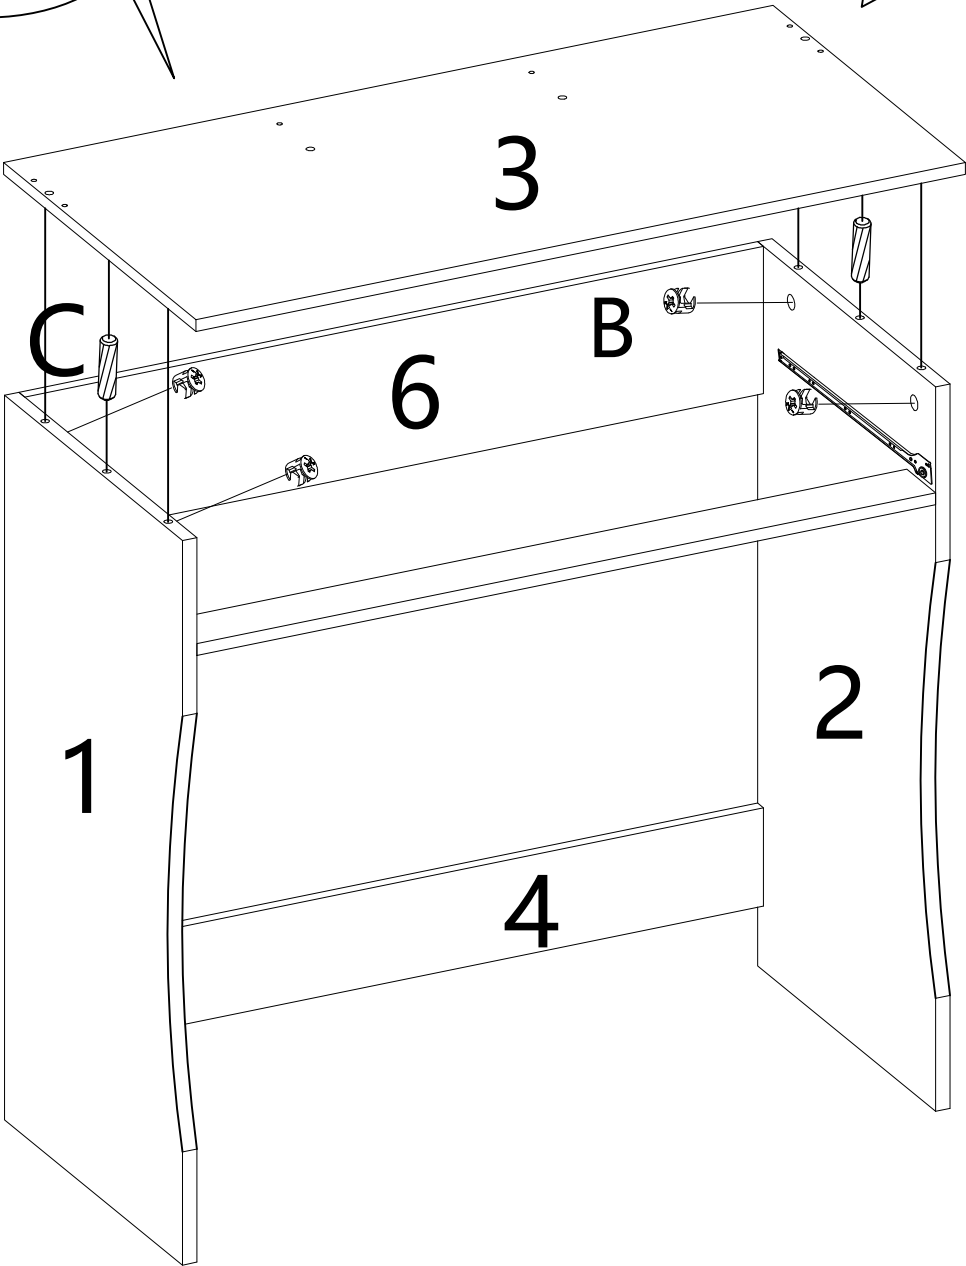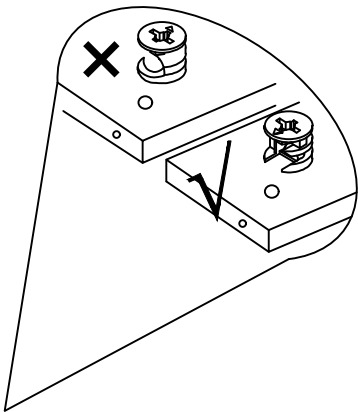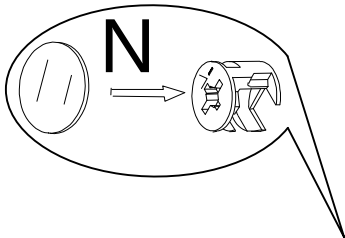


STEP 19

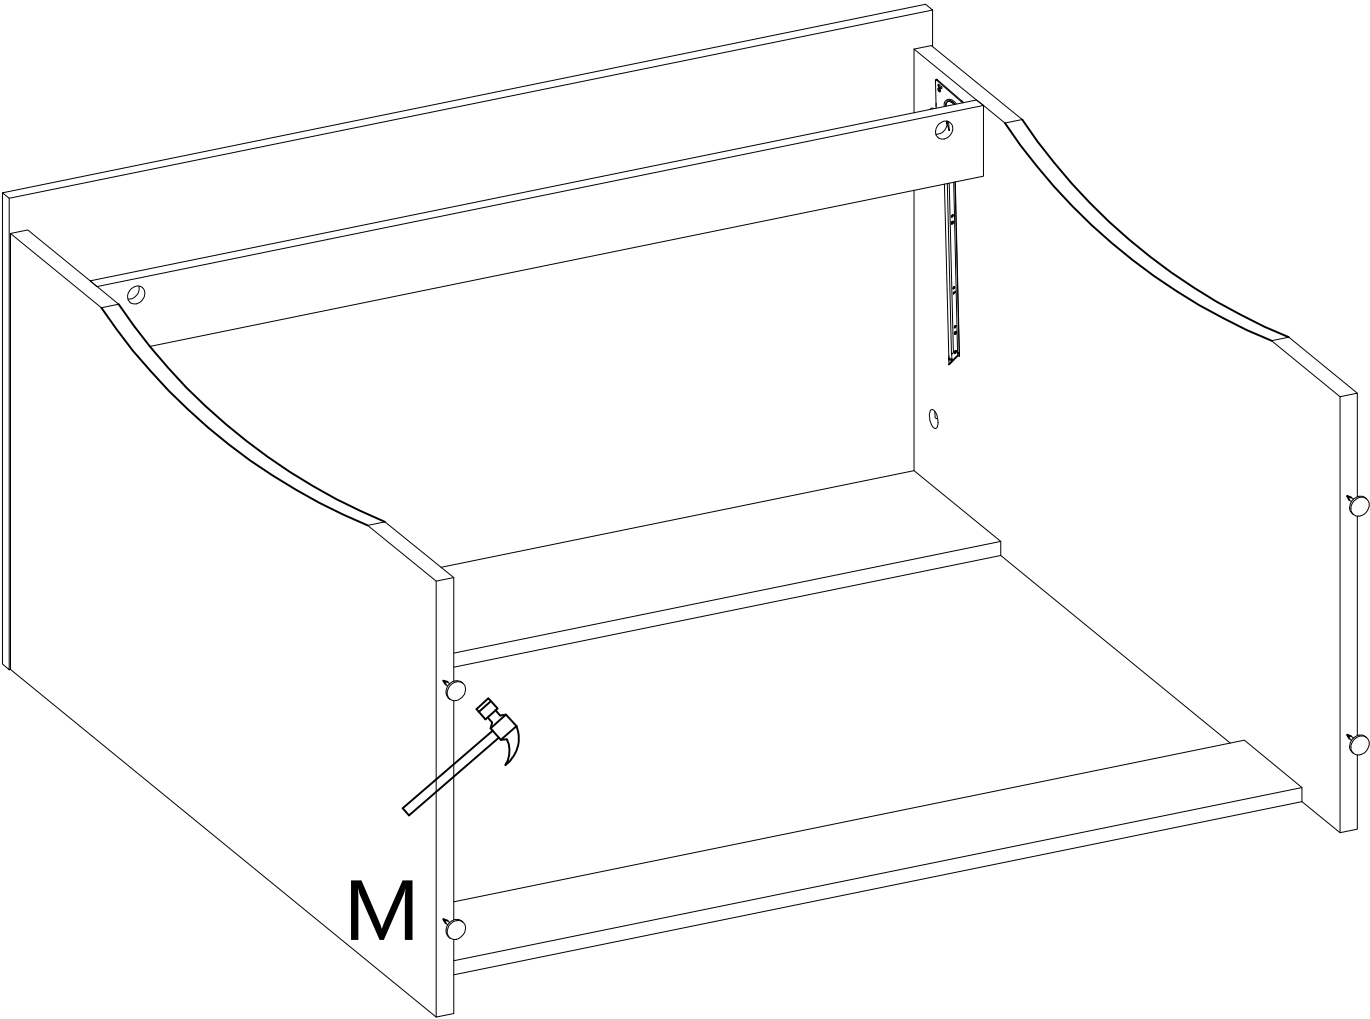


M	X4
	

STEP 20

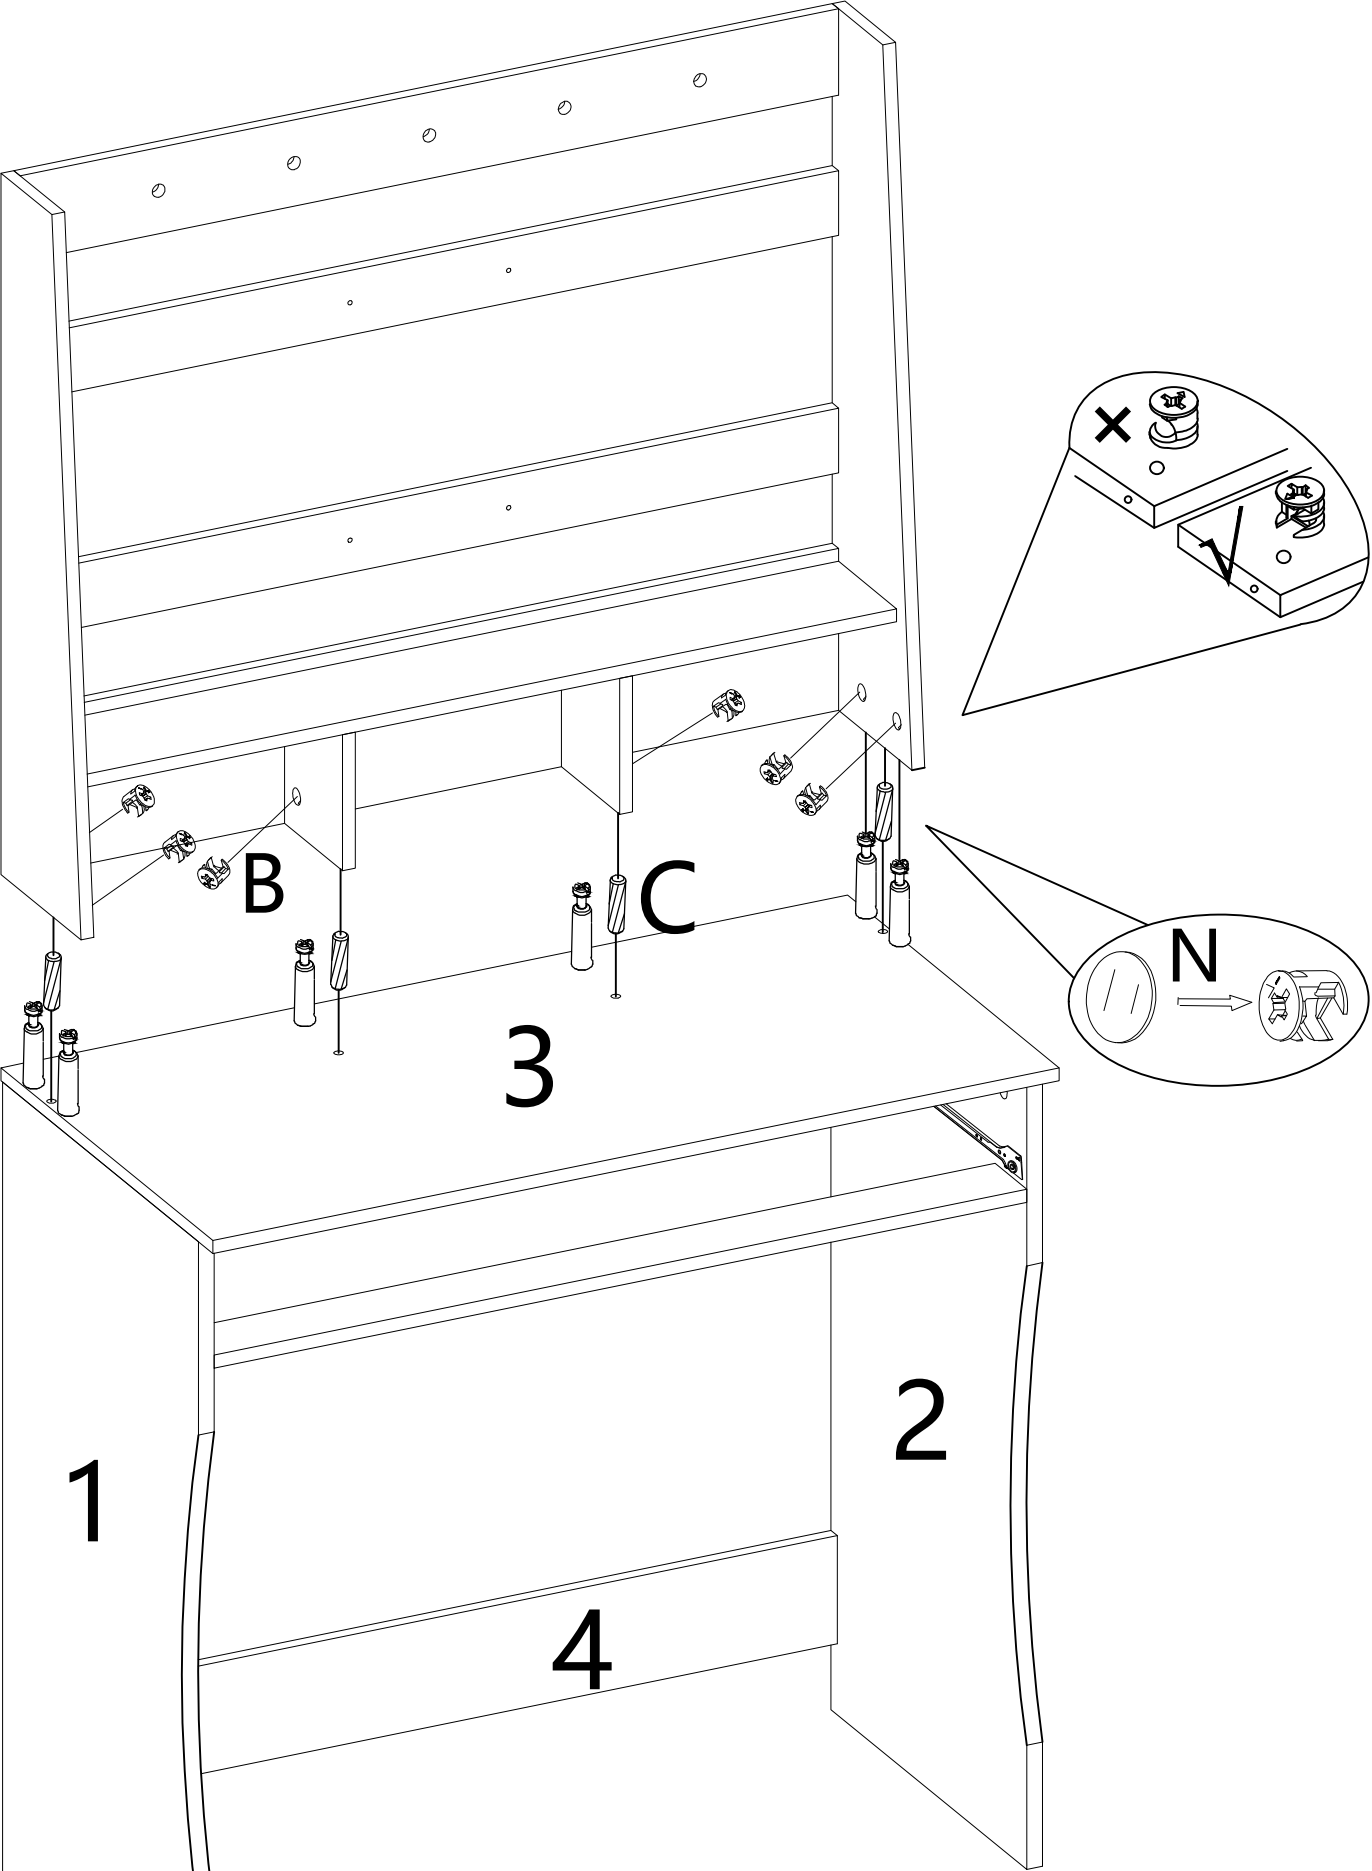





C	X4	N	X6	B	X6

STEP 21



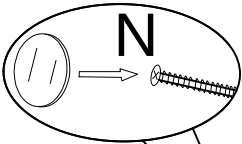


F

19

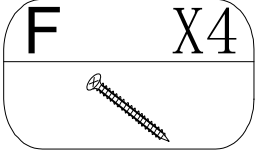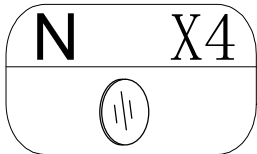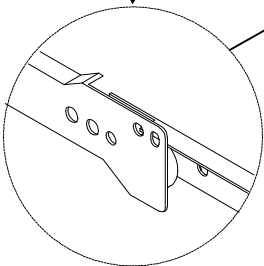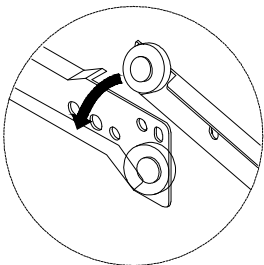







STEP 22

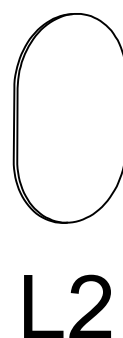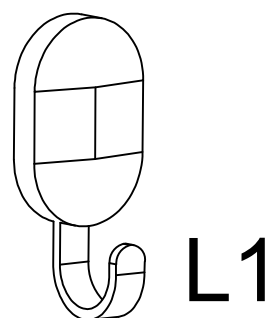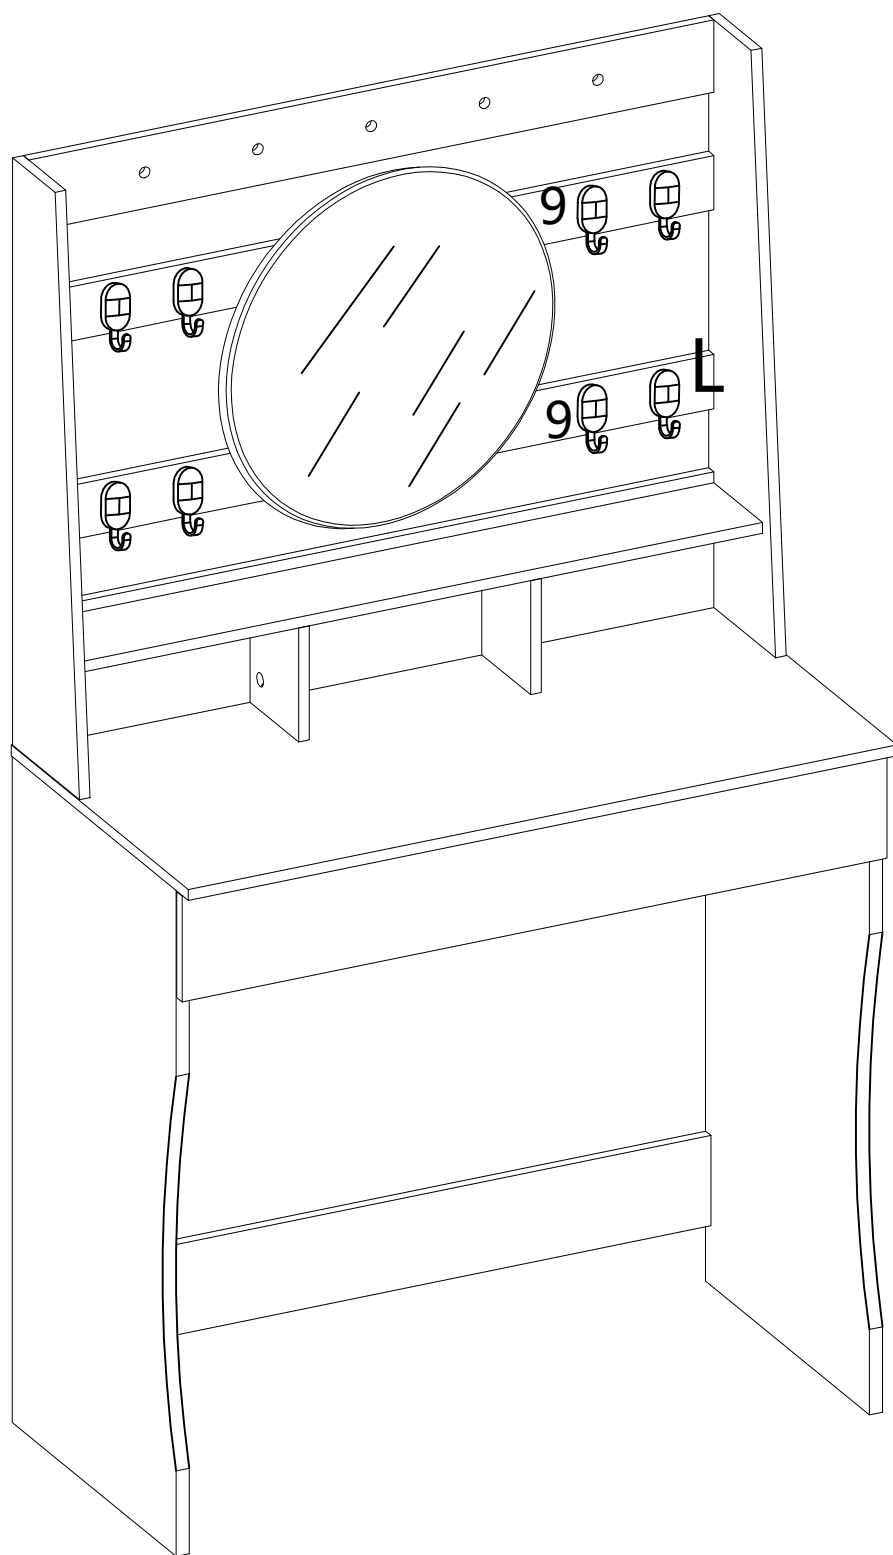


Please choose whether to attach the hook.

If you need to attach, first tear the film on both sides of L2, attach one side to L1, and then attach L1 and L2 together to 9

STEP 23

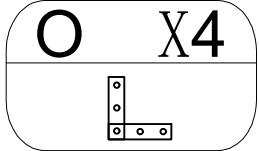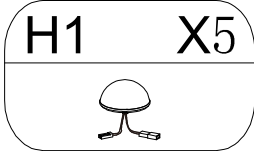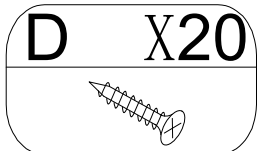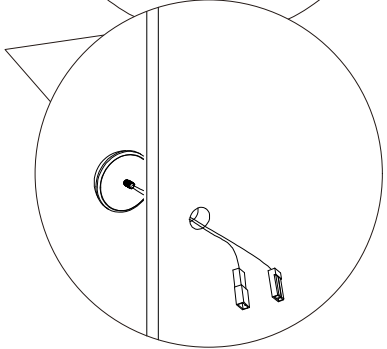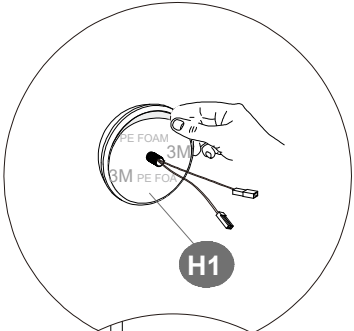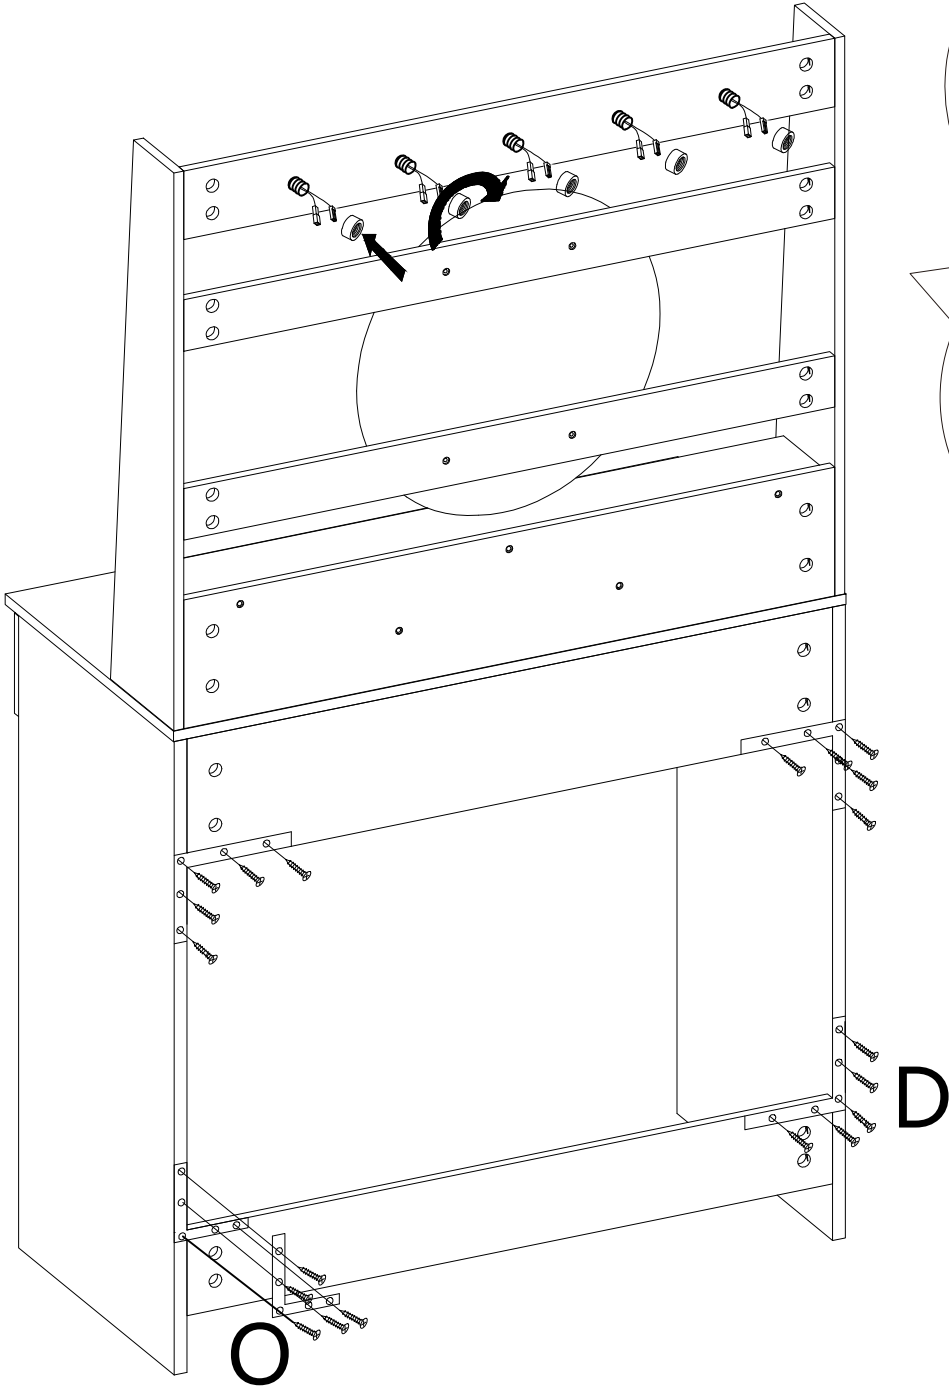

STEP 24

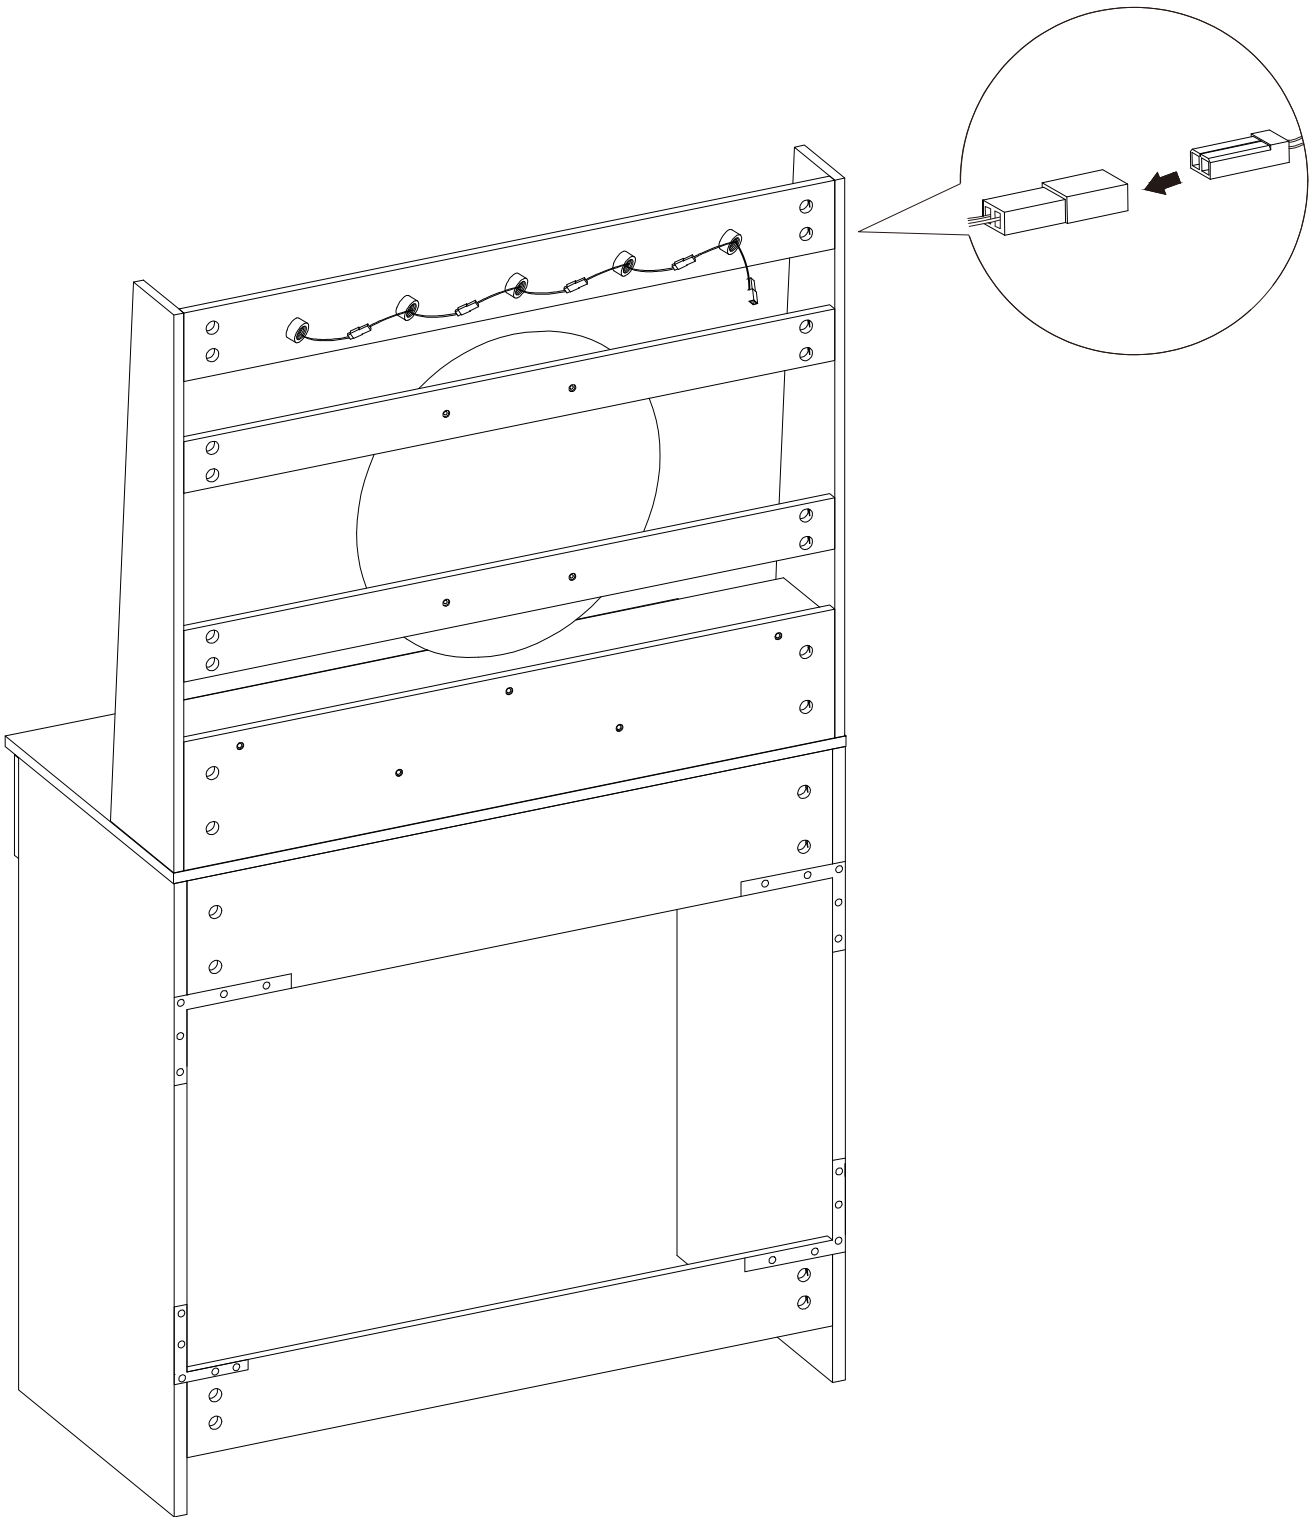

STEP 25

