

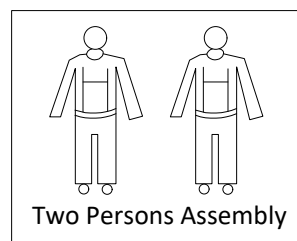
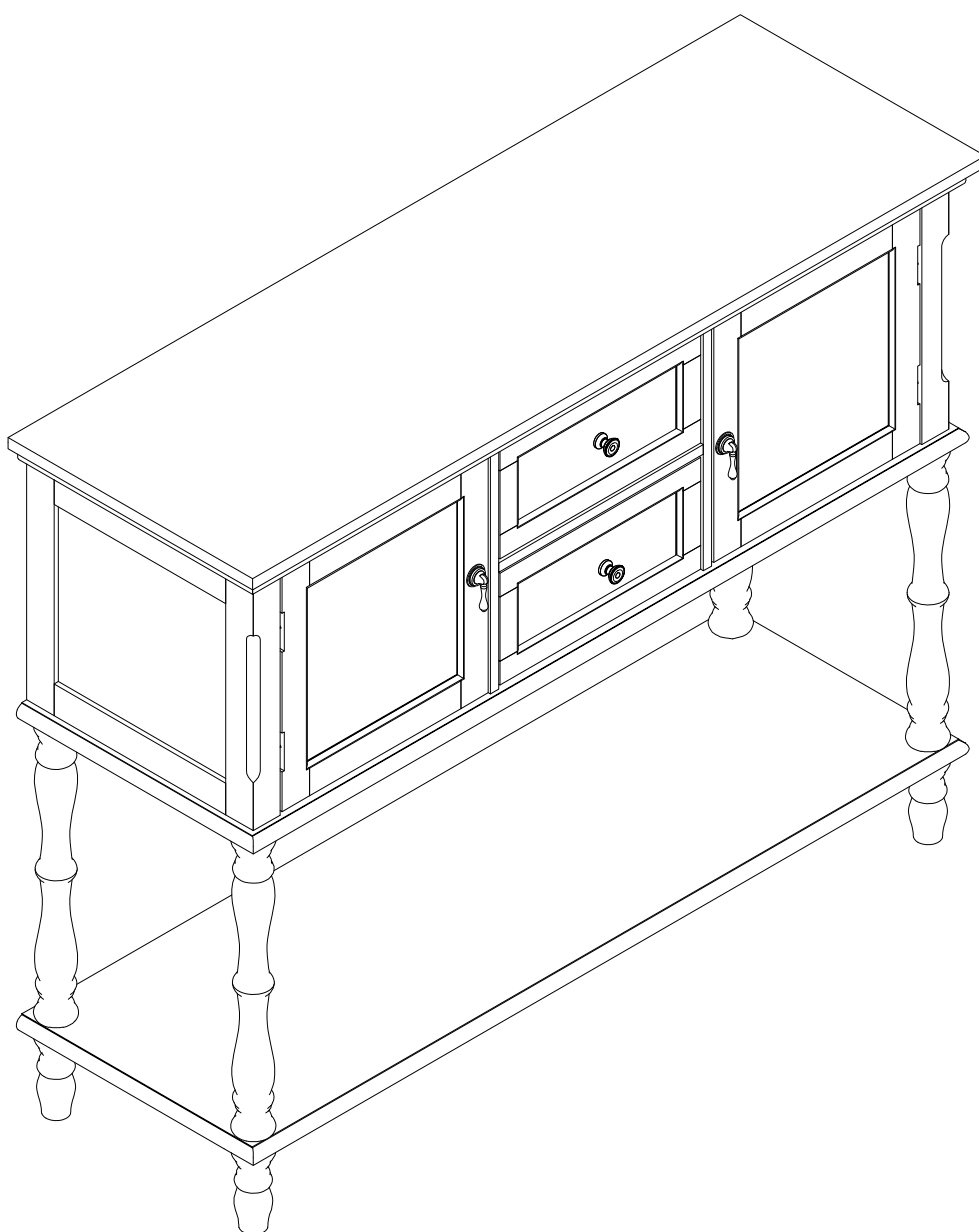
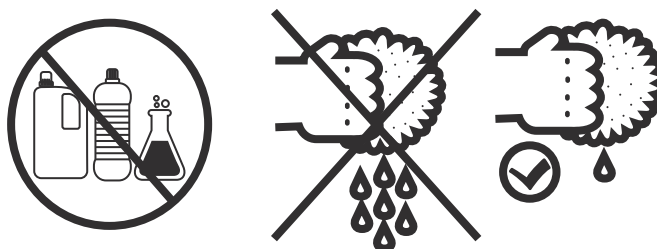
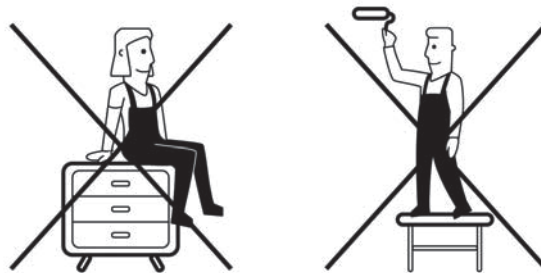



ASSEMBLY INSTRUCTIONS

Item NO.: YJJ250044

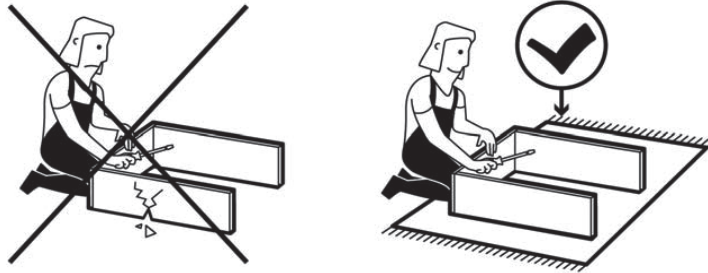

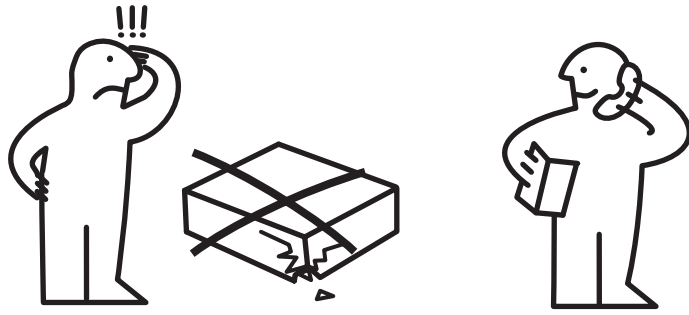


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

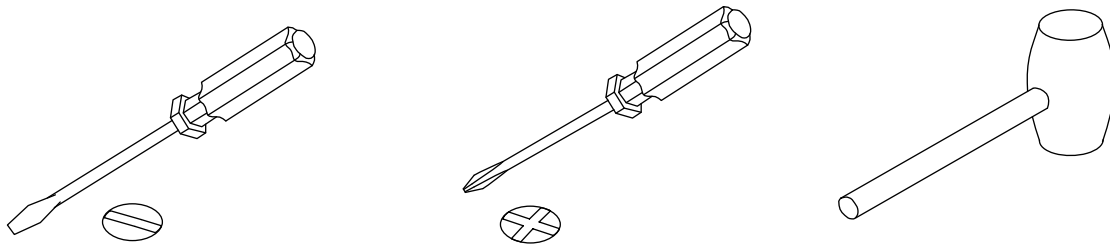

- * Before discarding packing materials, please check all parts and hardware are presented.
- * Please follow the instructions closely.
- * After few days of initial assembly, the product may have acclimated to new environment, please tighten all hardware again.




Dowel Installation

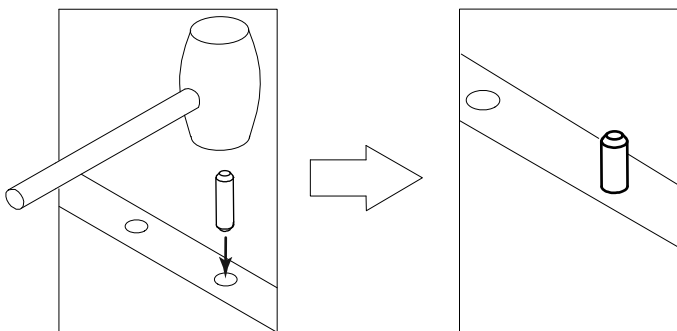

Gently tap dowel into hole with rubber mallet.





CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten

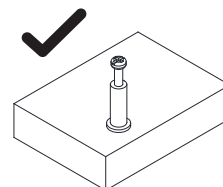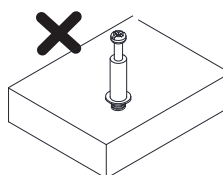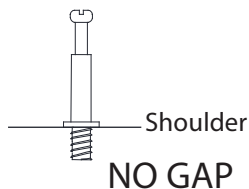


WHEN FITTING CAMS












ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-PILLAR
TURN CLOCKWISE UNTIL SECURE

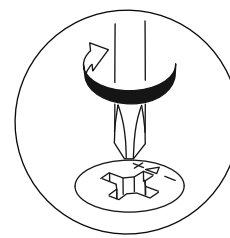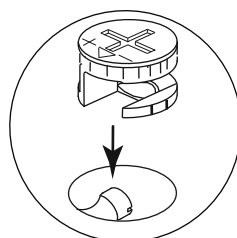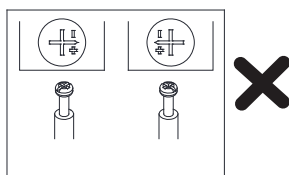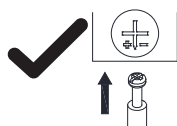





Laying out all the parts and hardware and identifying each part as shown below. It may help you when you assemble the item.

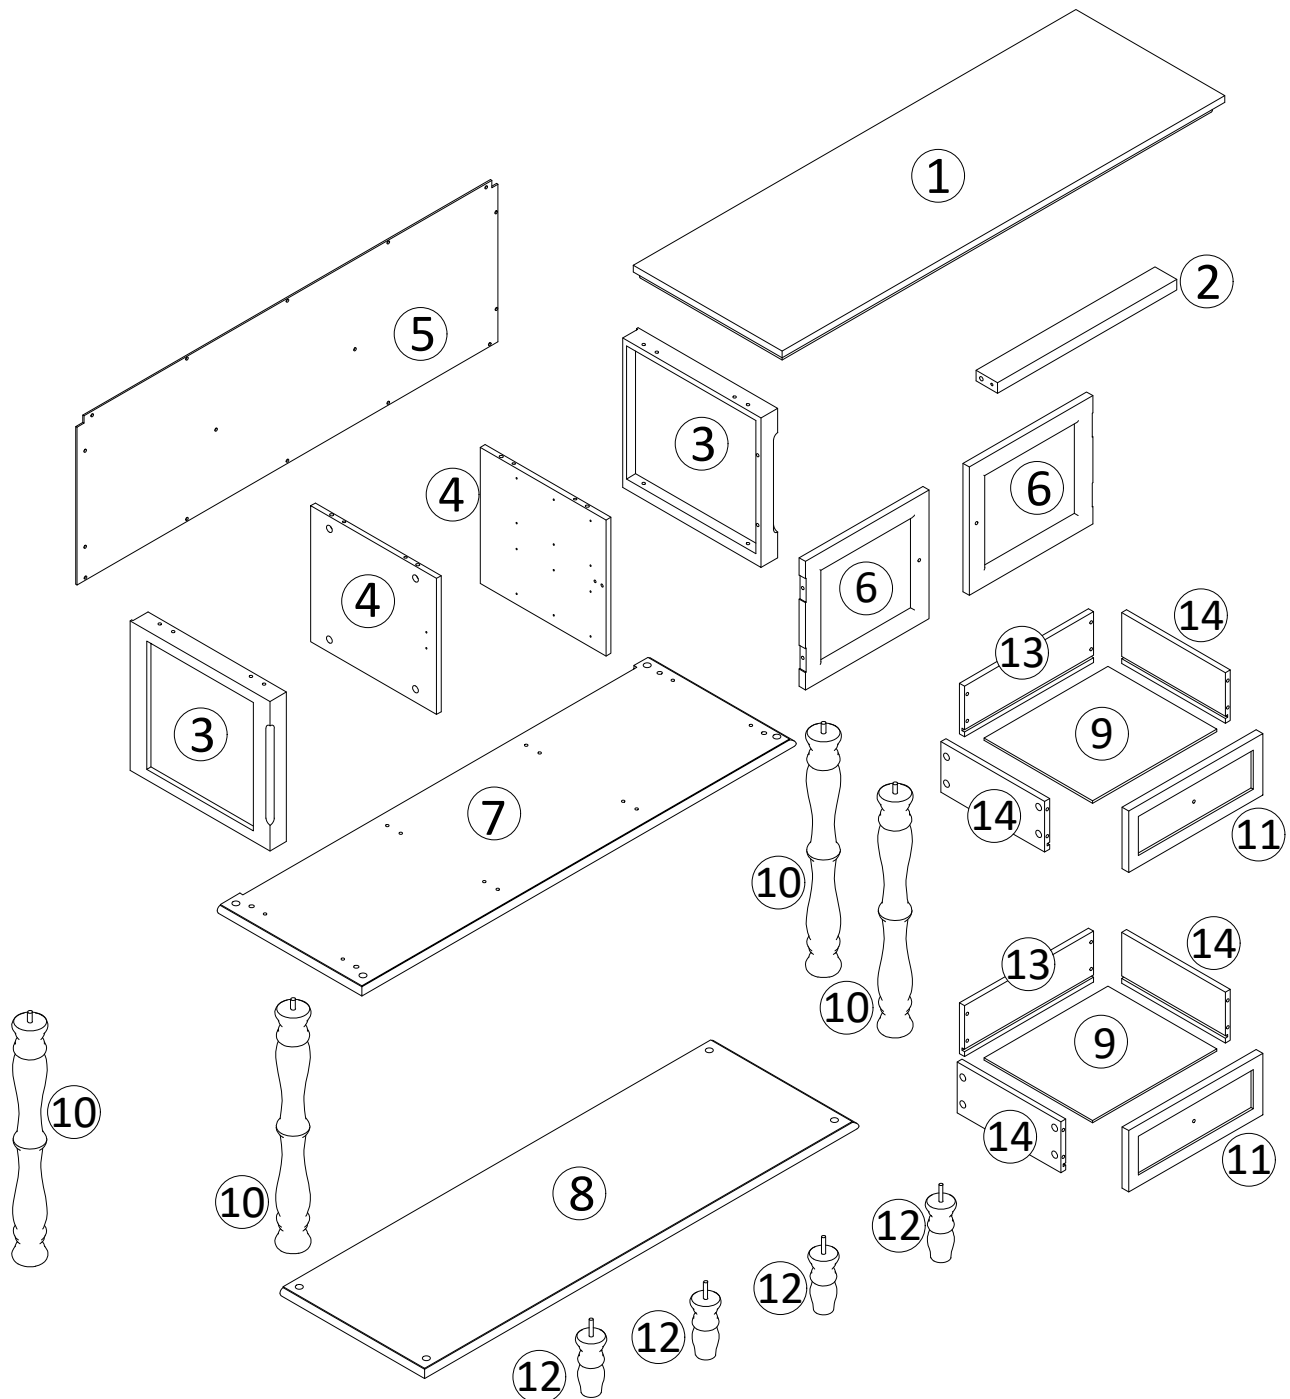

① ×1	② ×1	③ ×2	④ ×2	⑤ ×1	⑥ ×2
⑦ ×1	⑧ ×1	⑨ ×2	⑩ ×4	⑪ ×2	⑫ ×4
⑬ ×2	⑭ ×4				





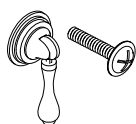



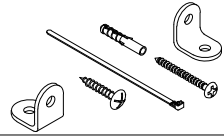
A ×26+2(Spare)  ø6×27mm	B ×26+2(Spare)  ø15×9.5mm	C ×18+2(Spare)  ø6×20mm	D ×16  ø21 Sticker	E ×2  FA3×16mm
CL ×2  250mm	DL ×2  250mm	DR ×2  250mm	CR ×2  250mm	J ×20+2(Spare)  FA3×12mm
K ×2  M4×8mm	L ×2  M4×18mm	M ×4  M6×15L-ø21×6T	N ×8  M6×28mm	O ×8  ø13mm
P ×2  FA3×12mm	Q ×24+2(Spare)  FA3×14mm	R ×16+1(Spare)  FA3×12mm	S ×4  50mmH	T ×2  4×40mm/4×12mm
U ×1  M4				

1




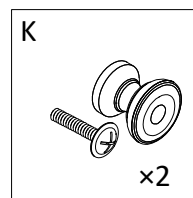
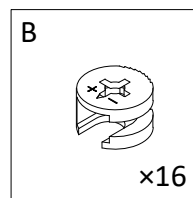
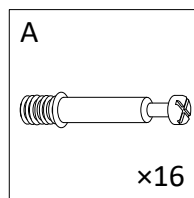
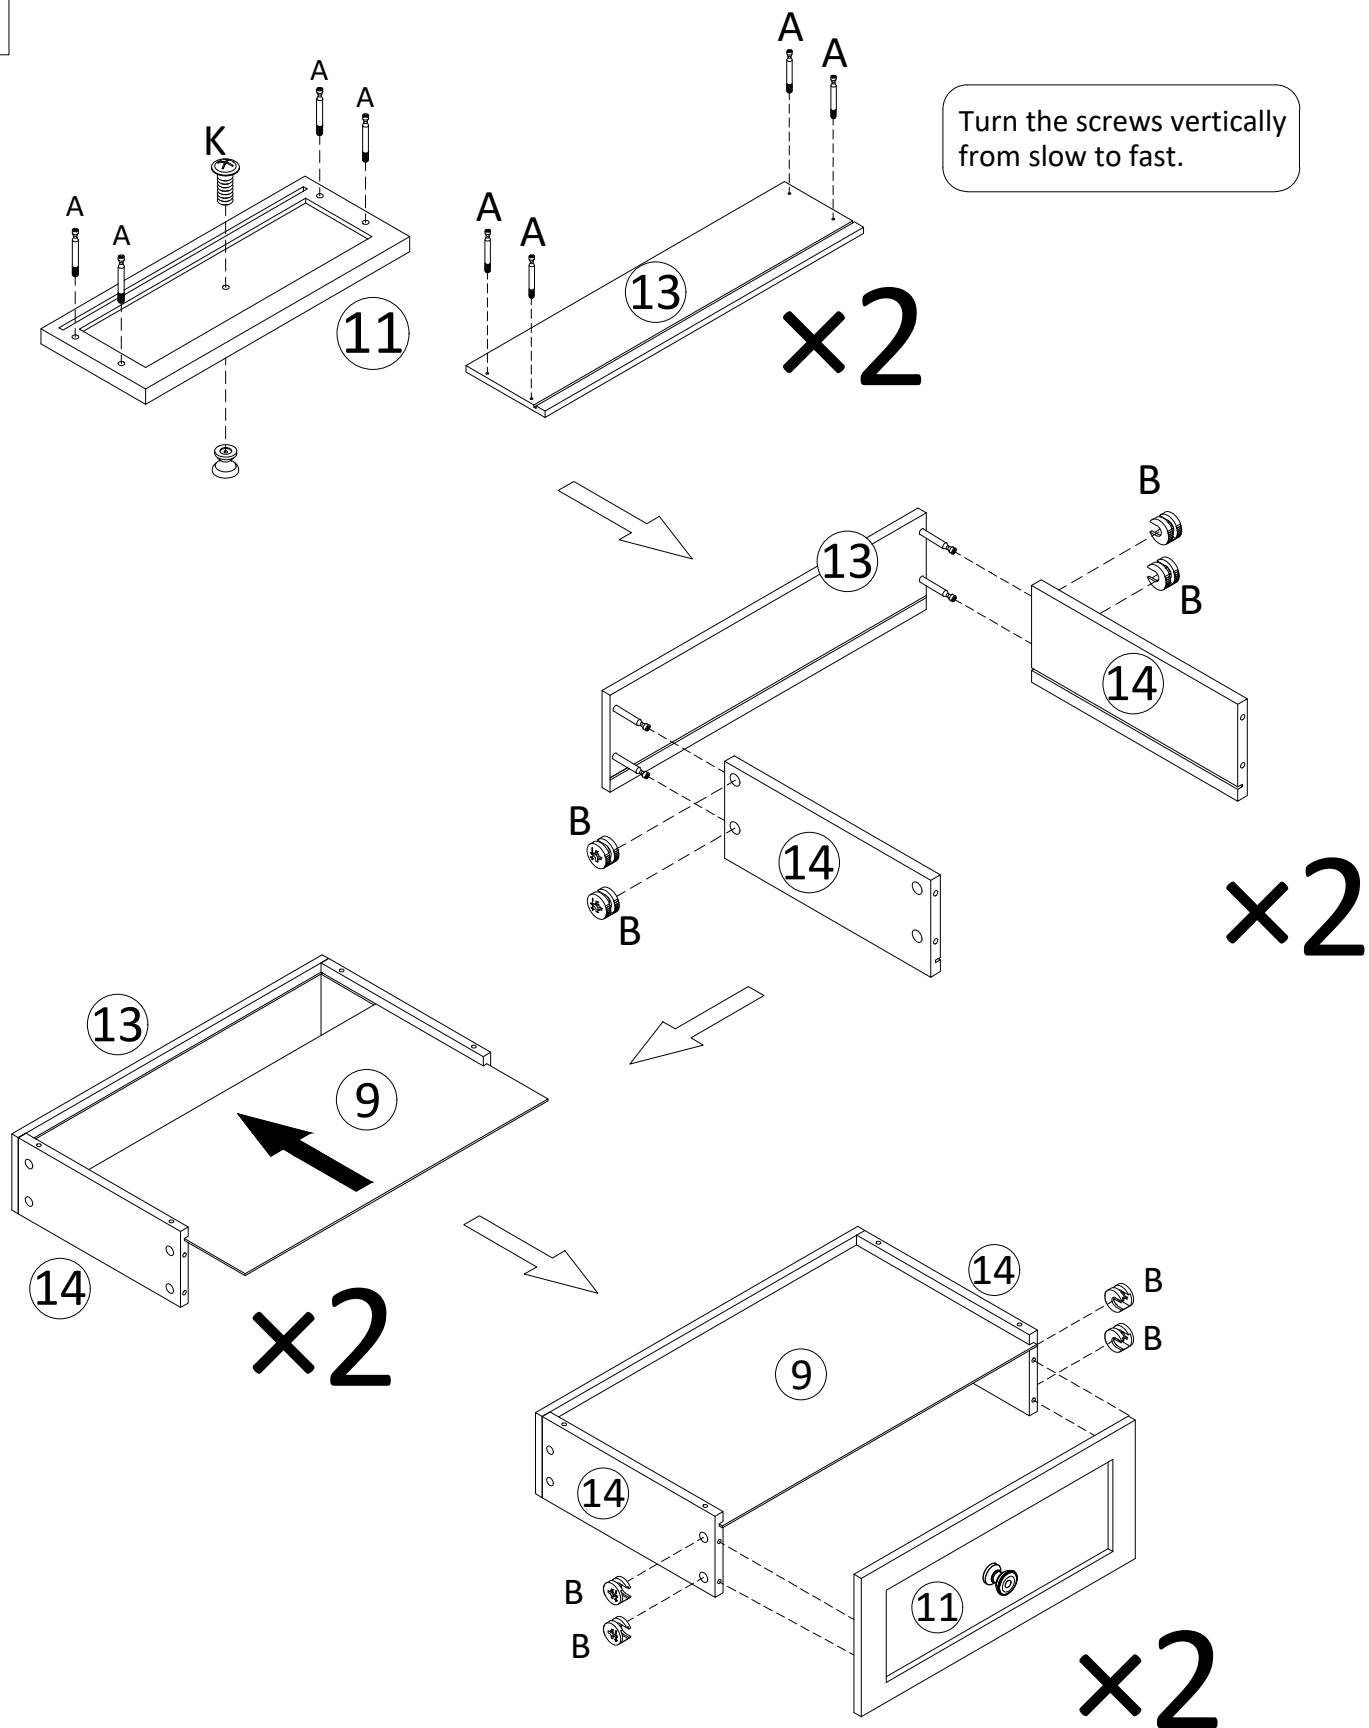


2


Turn the screws vertically from slow to fast.

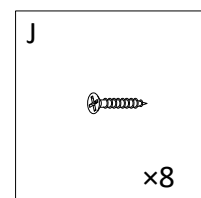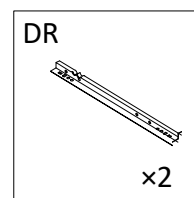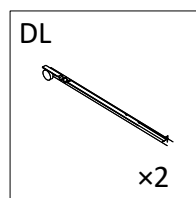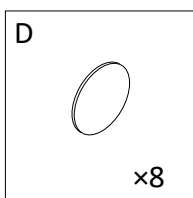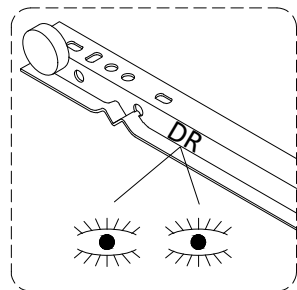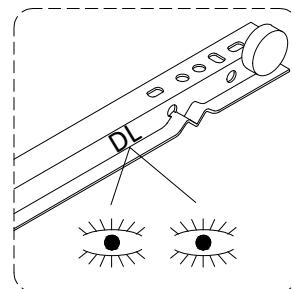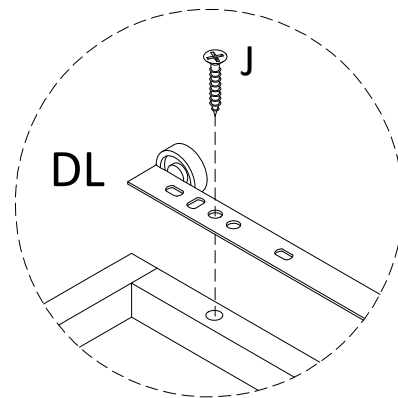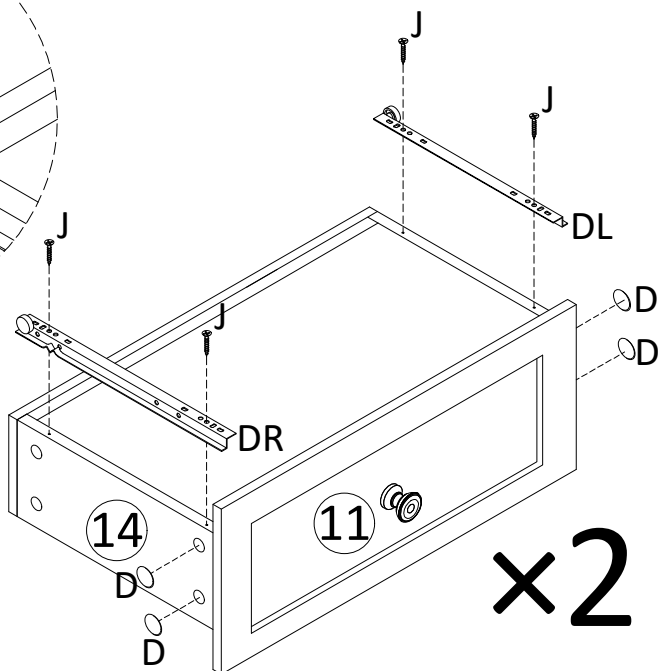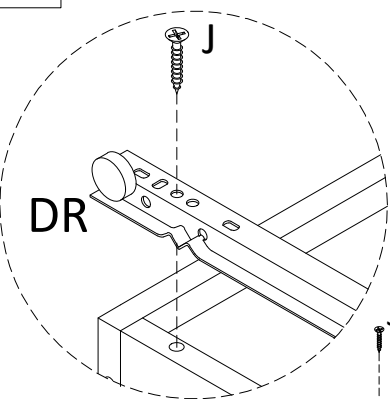

3

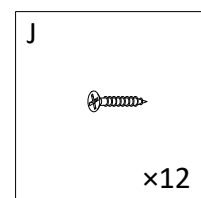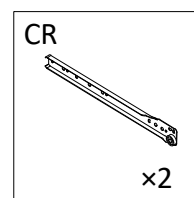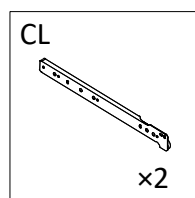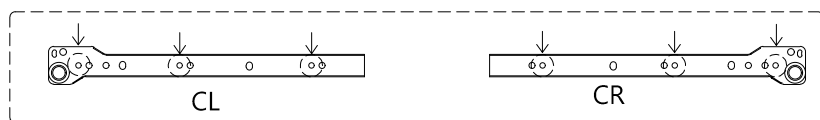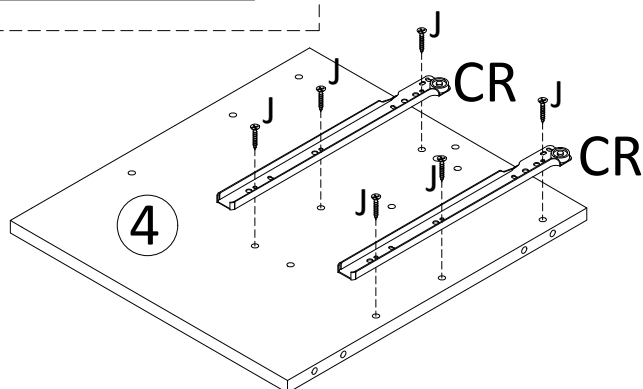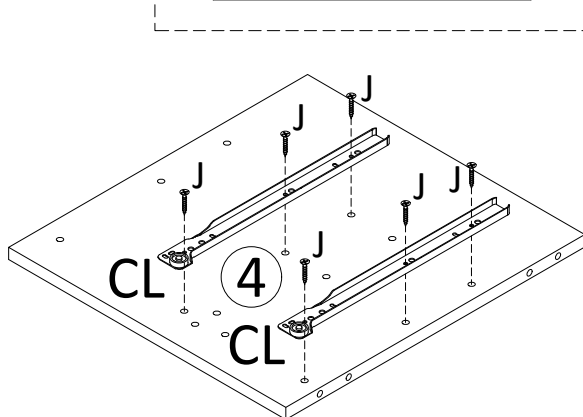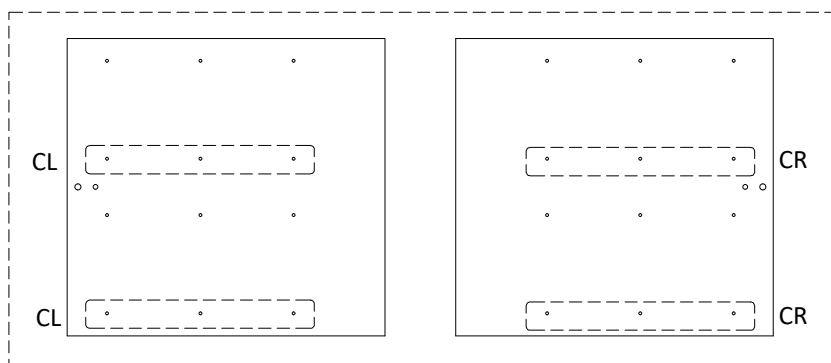


4

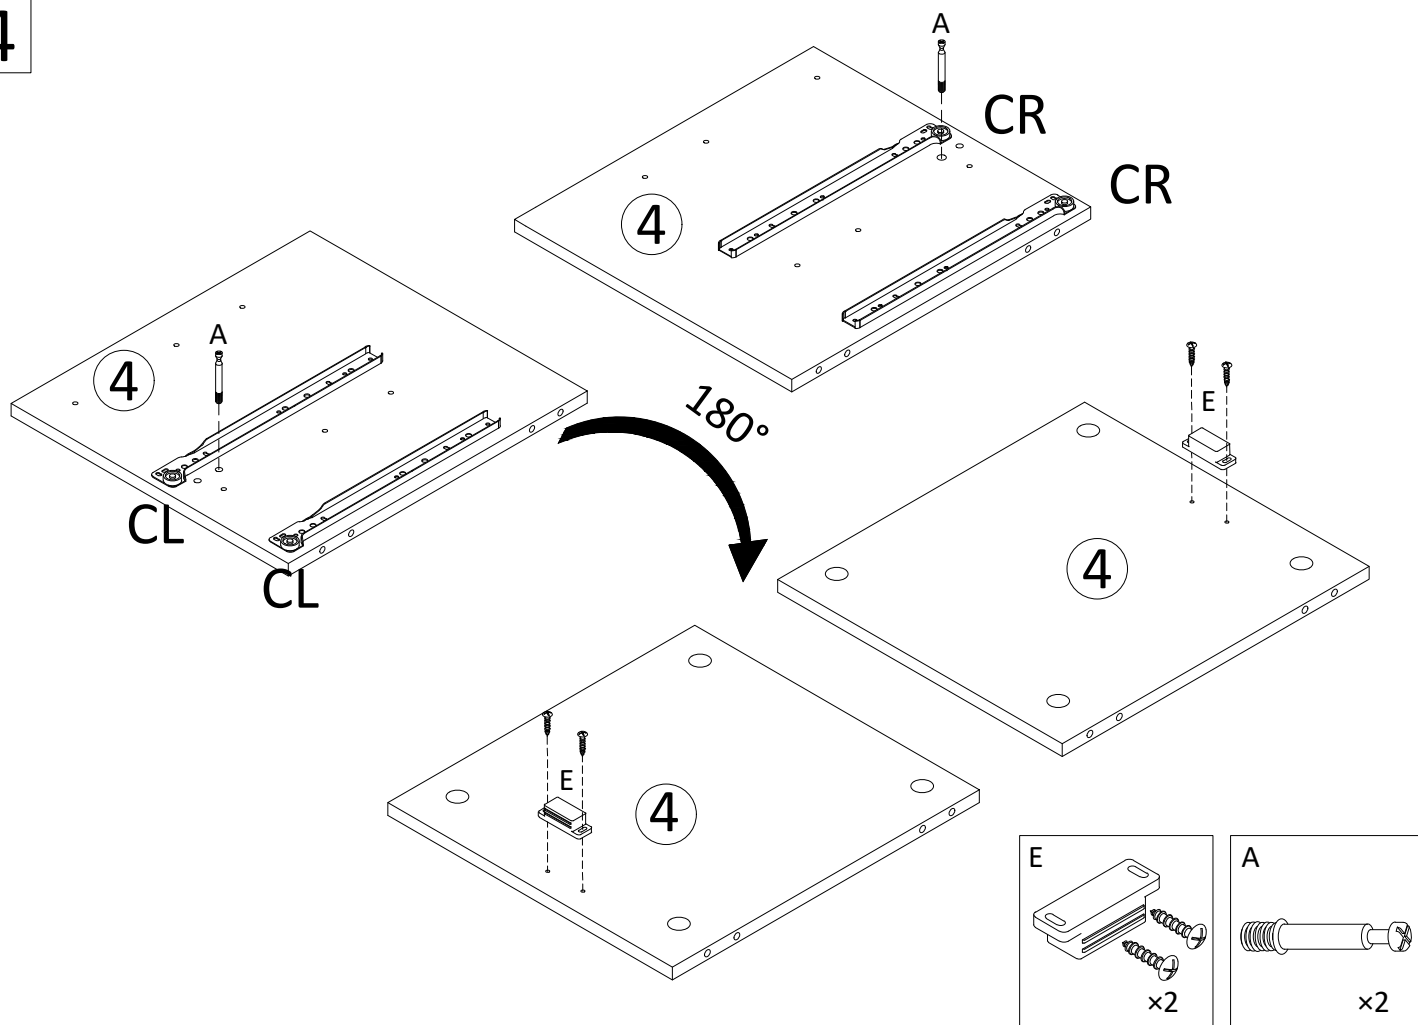


5


Turn the screws vertically from slow to fast.

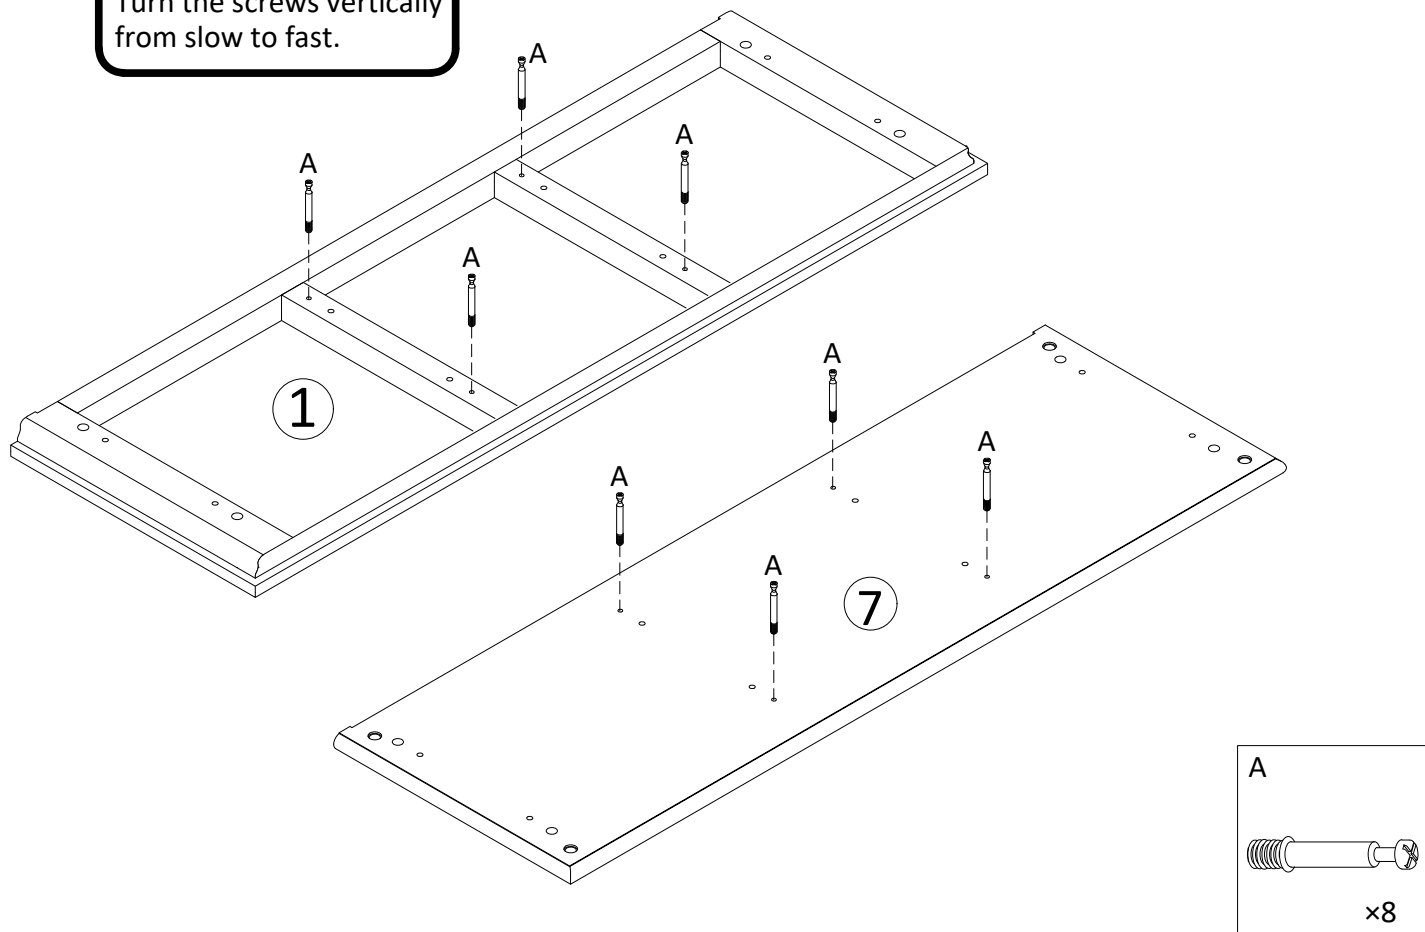


6

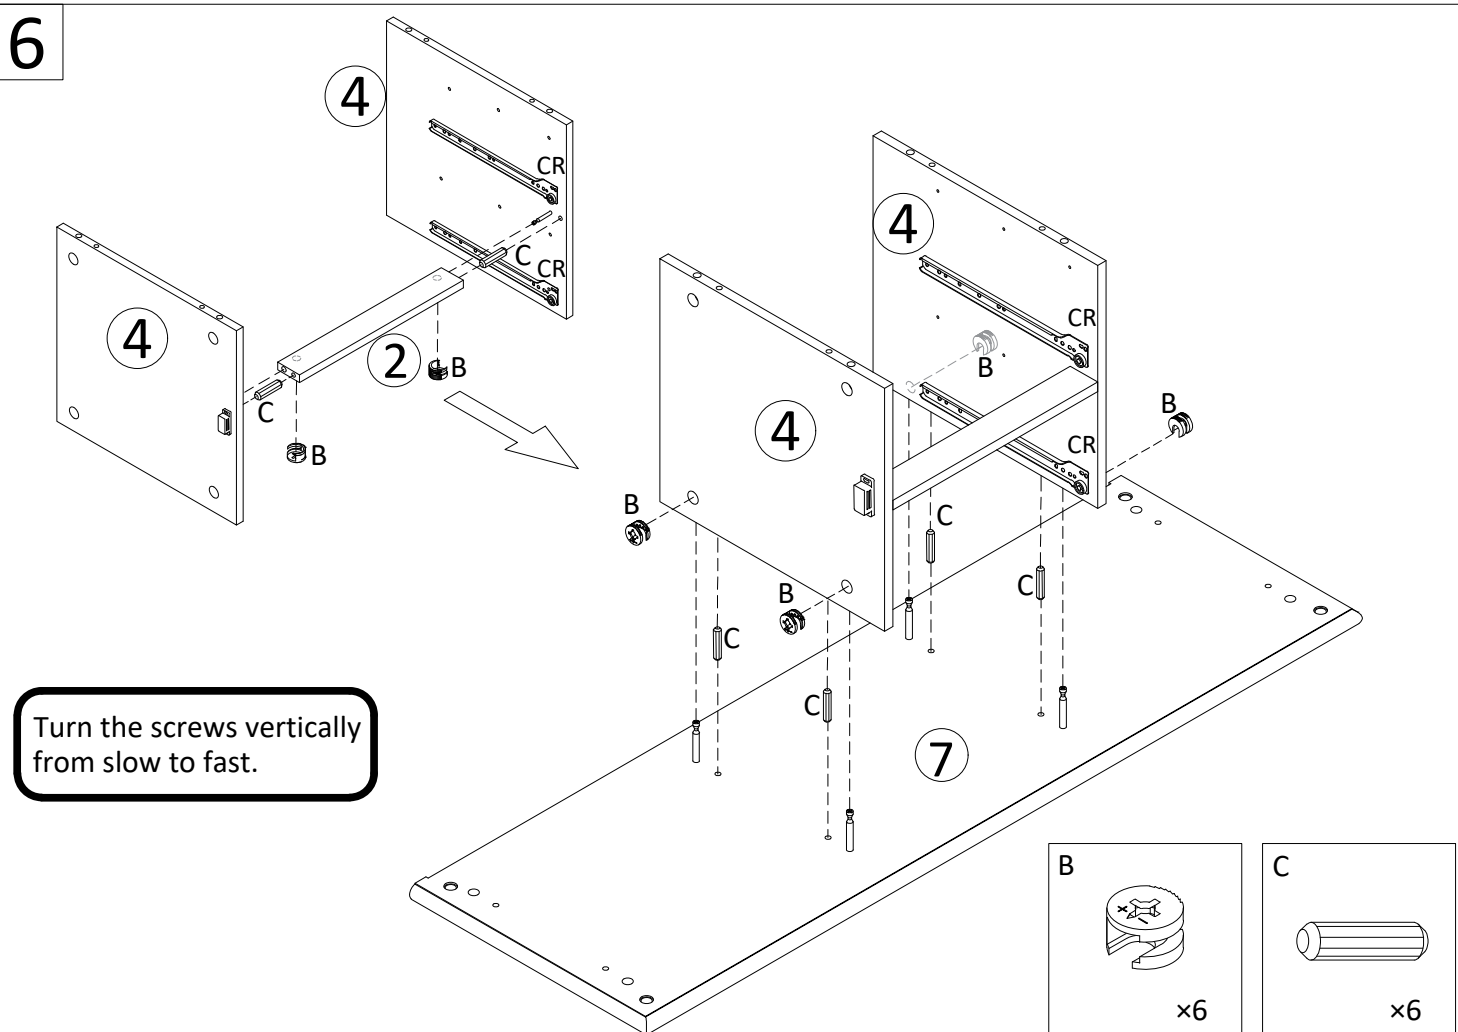






7

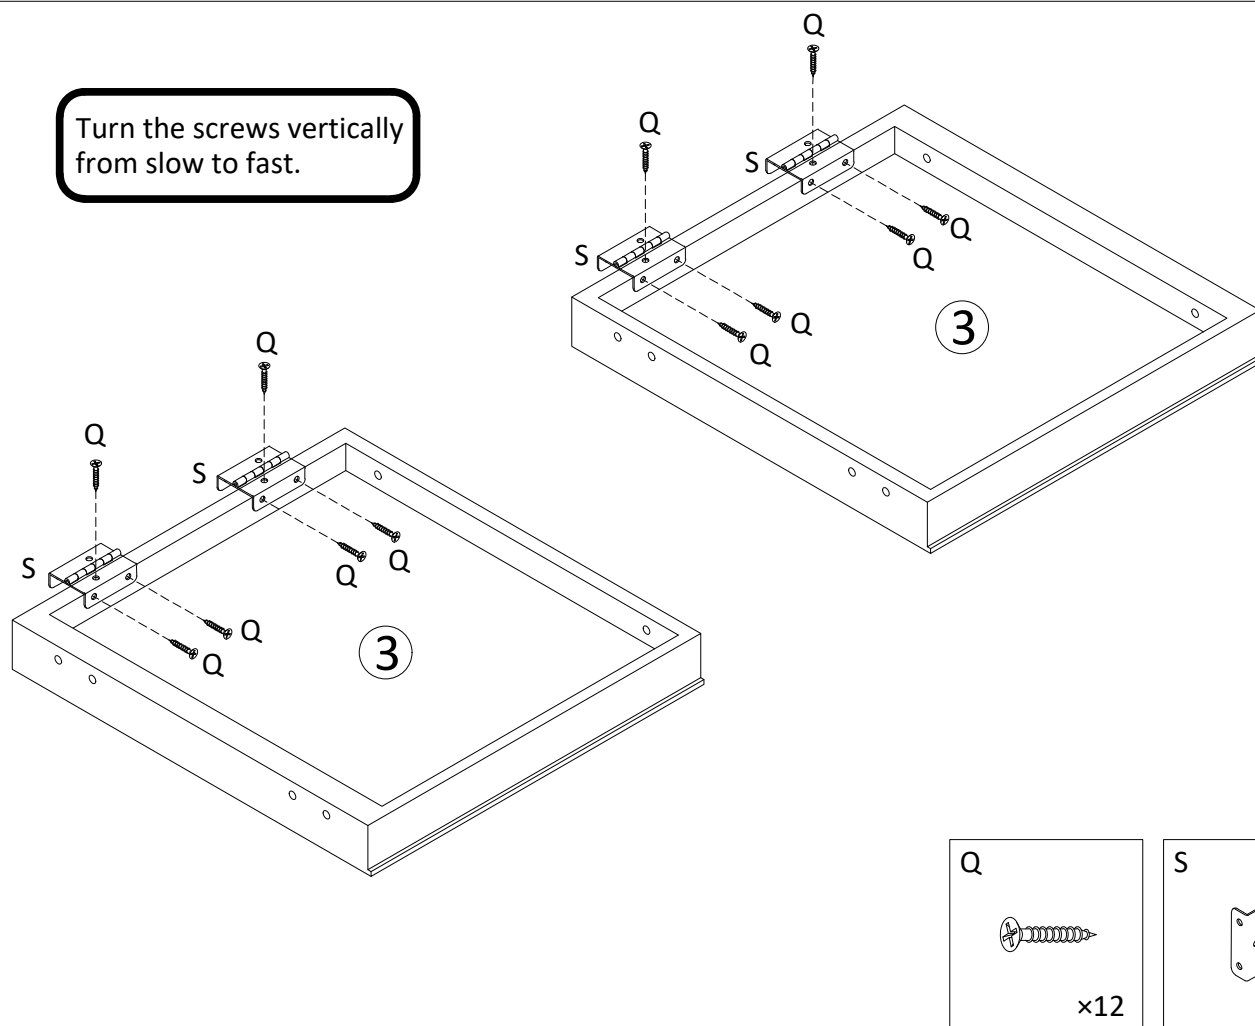


8

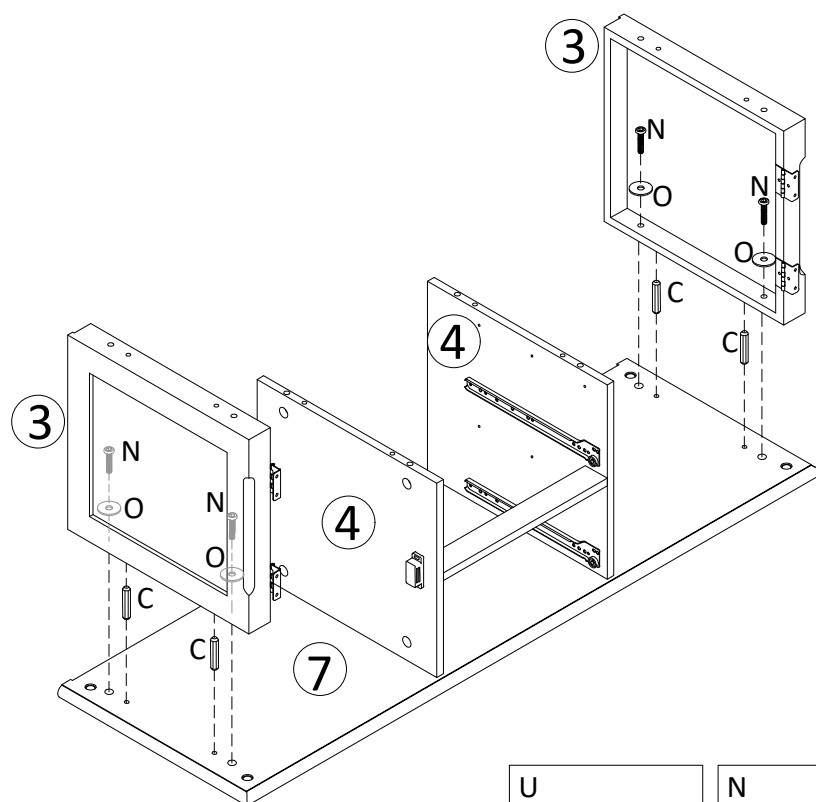







Turn the screws vertically
from slow to fast.

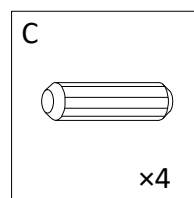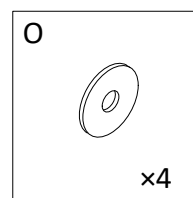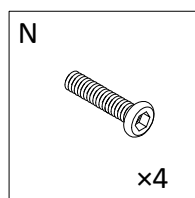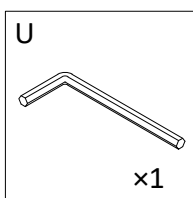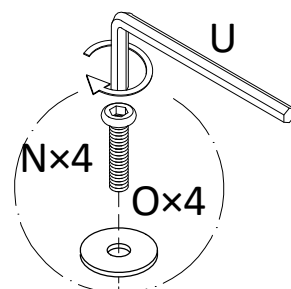


9

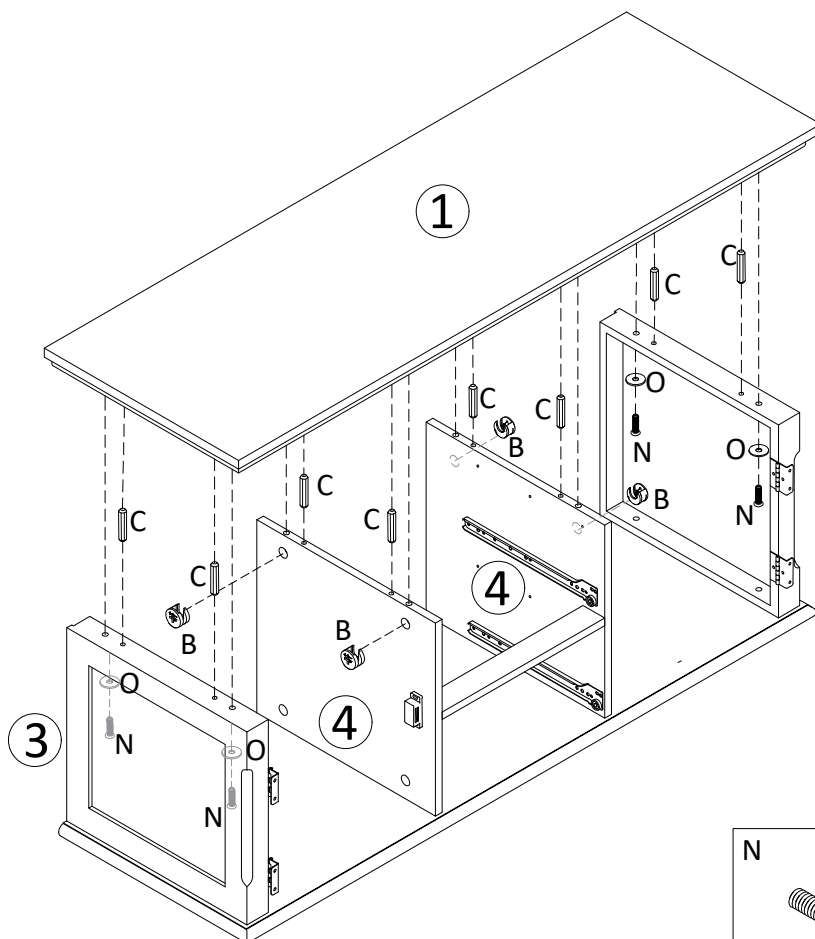


Turn the screws vertically
from slow to fast.

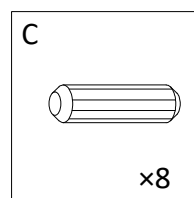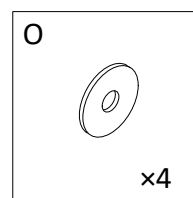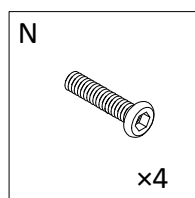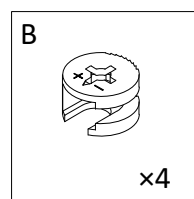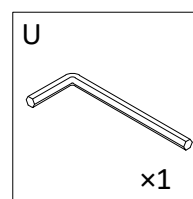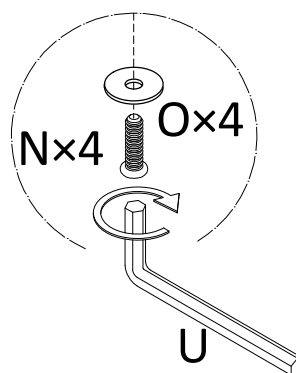


10

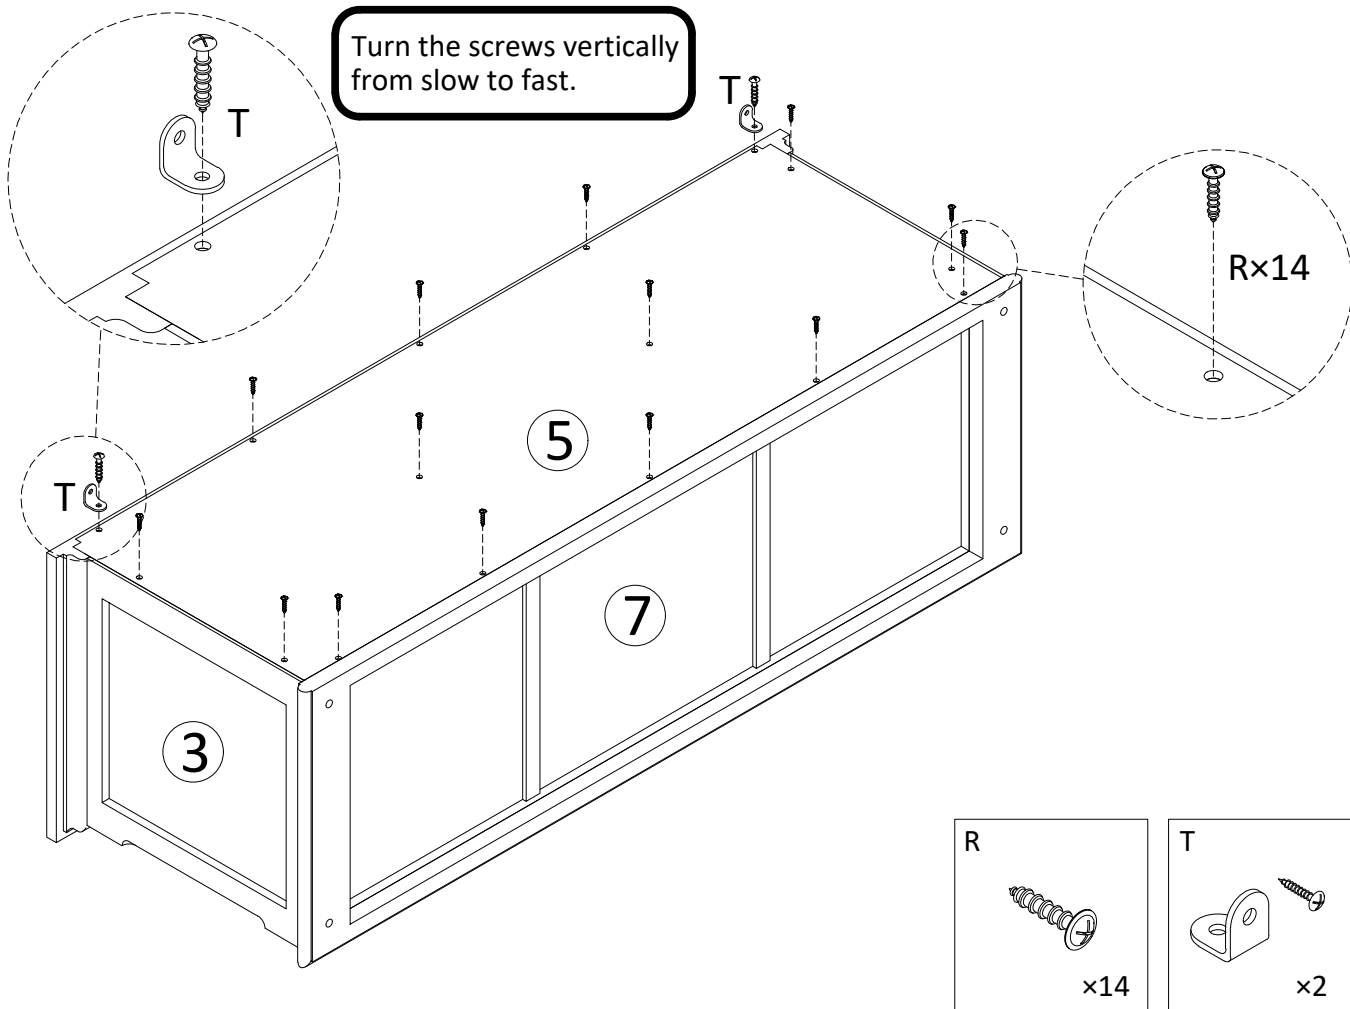


11

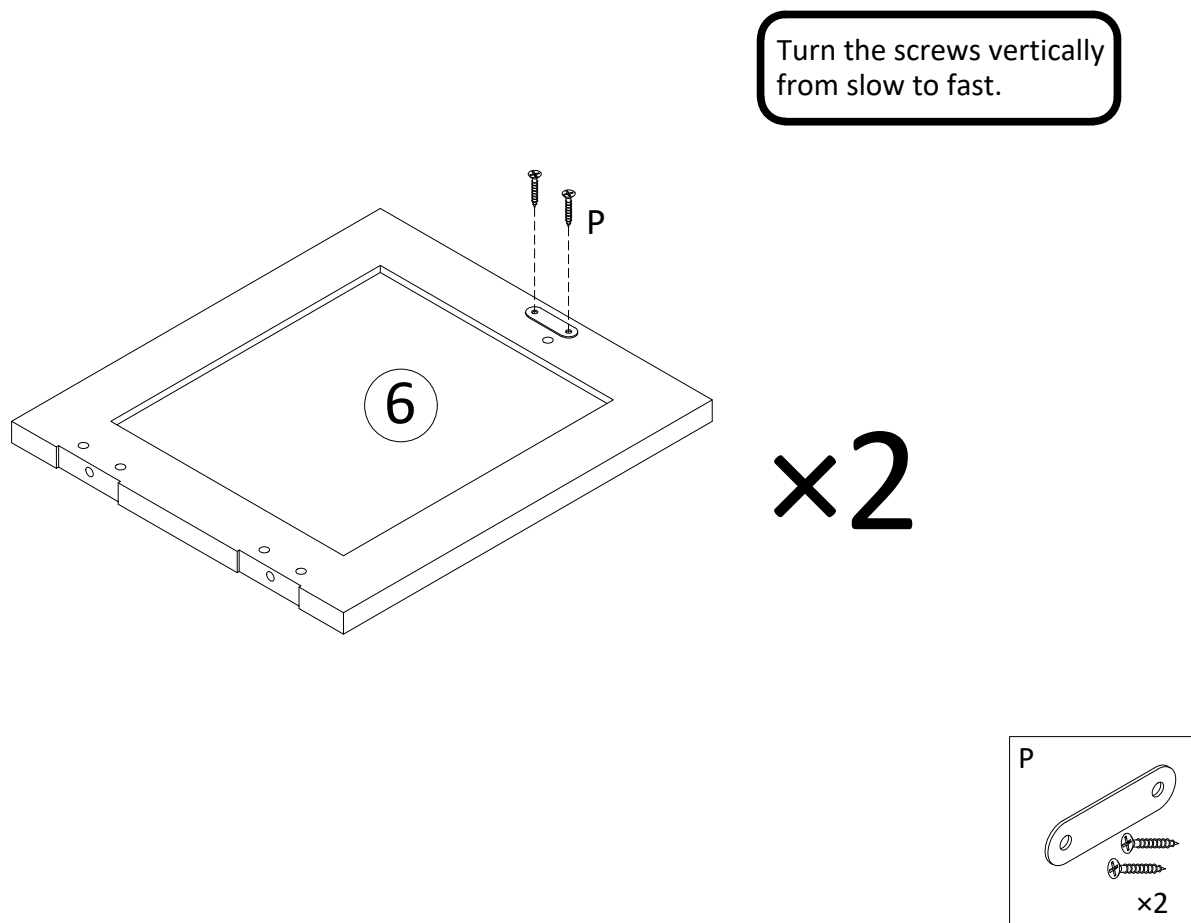

12

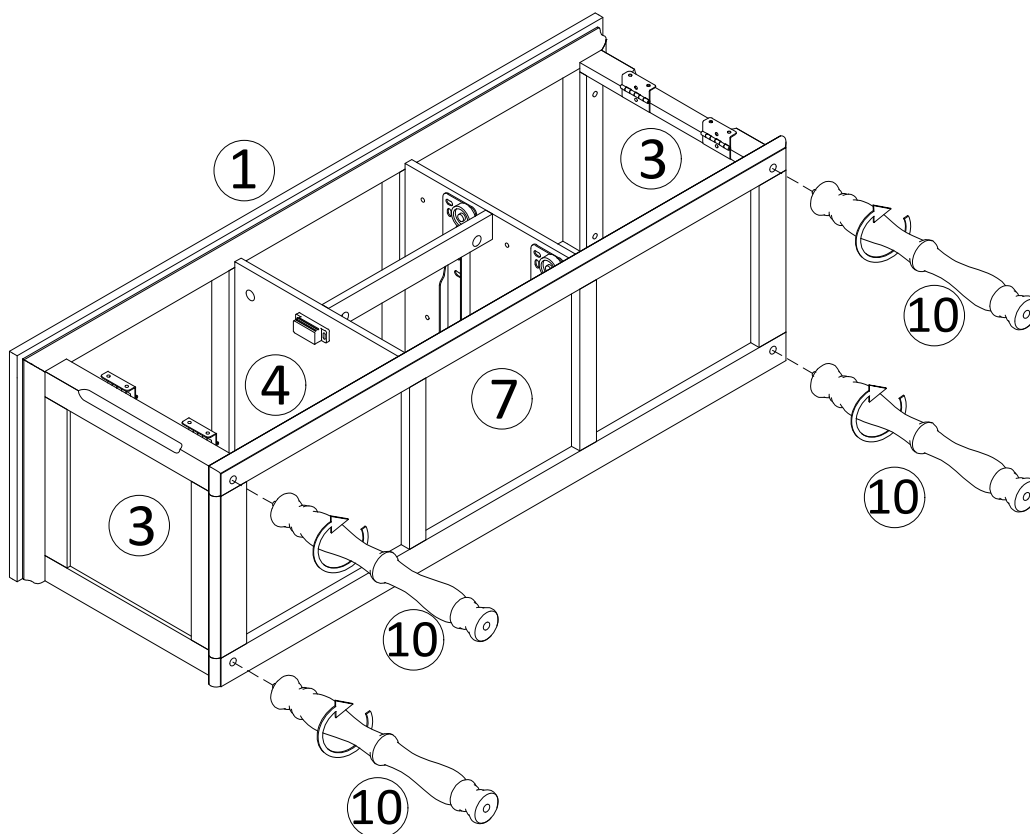


13

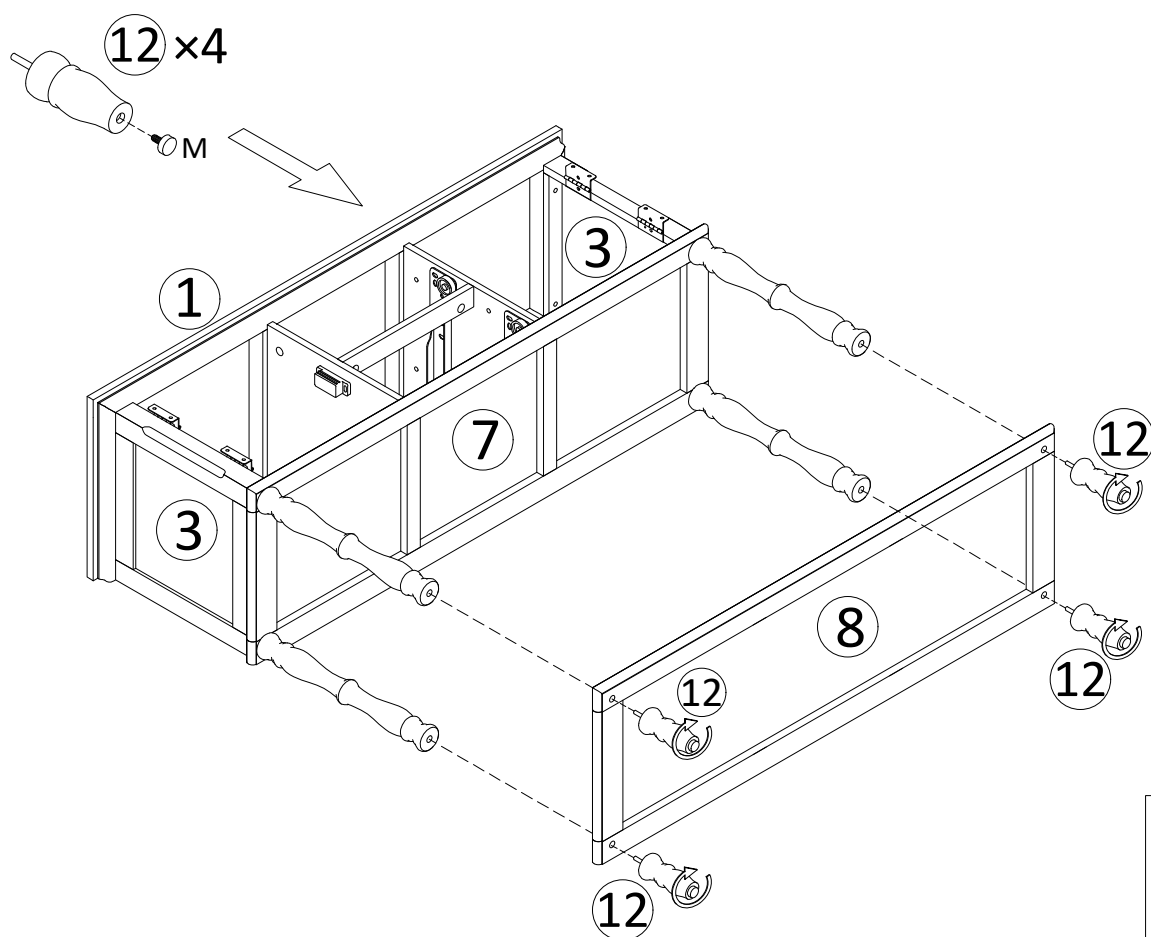




12

14

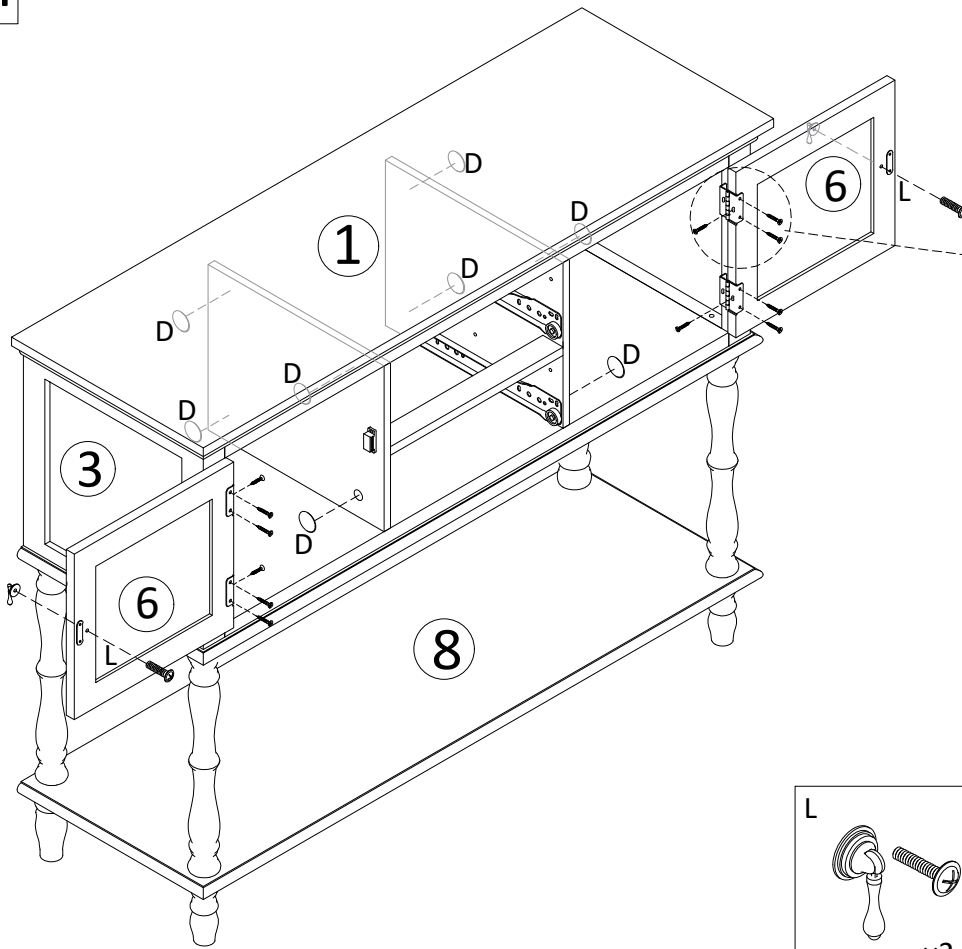

Turn the screws vertically from slow to fast.

Tips: Moving the hinges up or down appropriately to adjust the gap between the door with the cabinet top and bottom.

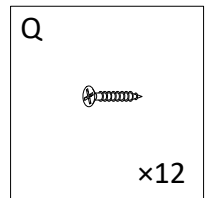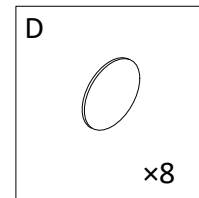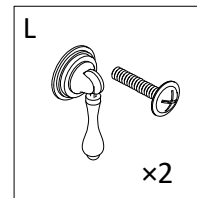

15

