

BED SET

Queen
King










Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.

HARDWARE LIST

- A (4) 1/4" x 2-3/4" Allen Bolts
- B (4) 1/4" x 1" Allen Bolts
- C (4) 1/4" x 3/4" Allen Bolts
- D (8) 1/4" Spring Washers
- E (12) 1/4" Flat Washers
- F (4) 1/4" Hex Nuts
- G (1) Allen Wrench 4MM
- H (1) Hex Wrench
- I (4) Finials

PARTS LIST

- J (1) Headboard
- K (2) Leg Extensions
- L (1) Footboard

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	4		B	4	
C	4		D	8	
E	12		F	4	
G	1		H	1	
			I	4	

STEP 1

Carefully insert Leg Extensions (K) into bottom of Headboard (J) posts. Secure legs to headboard posts with Allen Bolts (C) and Flat Washers (E). See **Figure 1**.

STEP 2


Insert Allen Bolts (A) from the back of the Headboard Leg Extensions (K) and through the frame. Install Flat Washer (E), Spring Washer (D) and Nut (F) on each Allen Bolt (A). Insert through bracket and into Headboard Leg Extensions (K). Hand tighten, DO NOT TIGHTEN bolts all the way. See **Figure 2**. Repeat on other side of Headboard (J). Tighten all bolts and nuts securely using the Allen Wrench (G) and Hex Wrench (H) provided.

STEP 3

Position Footboard Panel (L) and align holes in the post with holes in the frame bracket. See Figure 3. Place Flat Washer (E) and Spring Washer (D) on each Allen Bolt (B). Insert through bracket and into Footboard (L) post. Hand tighten, DO NOT TIGHTEN bolts all the way. Repeat on other side of Footboard Panel. (L) Tighten all bolts securely using the Allen Wrench (G) provided.

STEP 4

Screw in Finials (I) to the top of the Headboard (J) and Footboard (L) Panels.

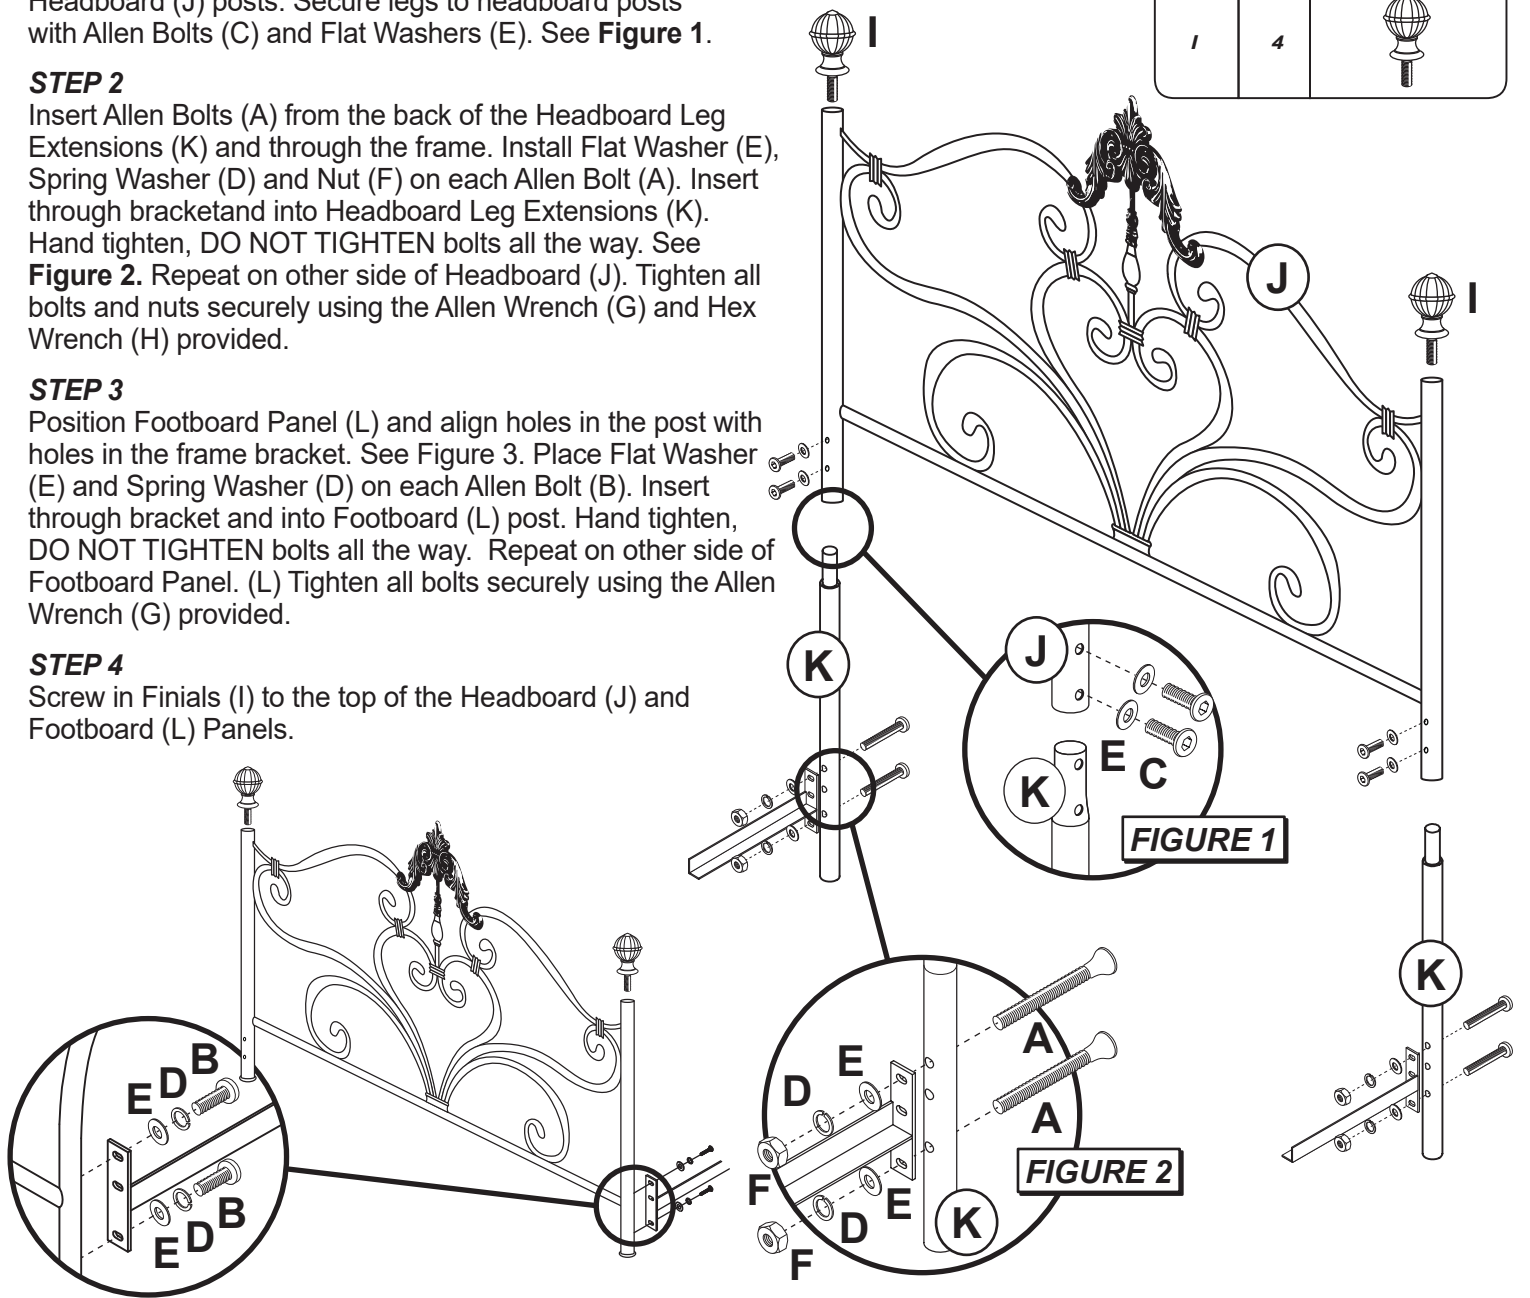

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.

HEADBOARD

Queen
King









Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.


HARDWARE LIST

- A (4) 1/4" x 2-3/4" Allen Bolts
- B (4) 1/4" x 3/4" Allen Bolts
- C (4) 1/4" Spring Washers
- D (8) 1/4" Flat Washers
- E (4) 1/4" Hex Nuts
- F (1) Allen Wrench 4MM
- G (1) Hex Wrench
- H (2) Finials

PARTS LIST

- I (1) Headboard
- J (2) Leg Extensions

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	4		B	4	
C	4		D	8	
E	4		F	1	
G	1		H	2	

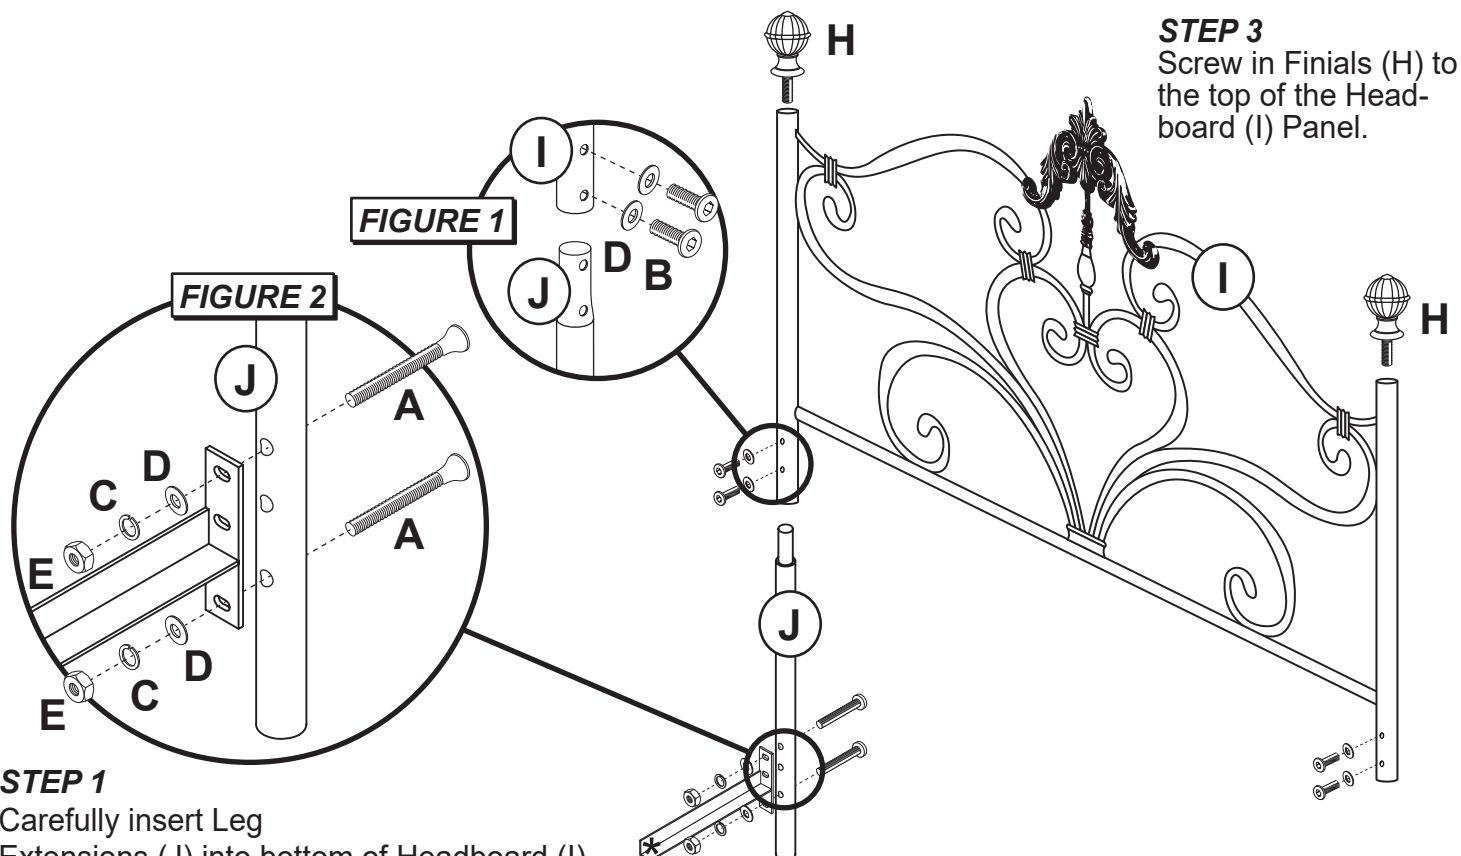

STEP 1

Carefully insert Leg Extensions (J) into bottom of Headboard (I) posts. Secure legs to headboard posts with Allen Bolts (B) and Flat Washers (D). See **Figure 1**.

STEP 2

Insert Allen Bolts (A) from the back of the Headboard Leg Extensions (J) and through the frame. Install Flat Washer (D), Spring Washer (C) and Nut (E) on each Allen Bolt (A). Insert through bracket and into Headboard Leg Extensions (J). Hand tighten, DO NOT TIGHTEN bolts all the way. See **Figure 2**. Repeat on other side of Headboard (I). Tighten all bolts and nuts securely using the Allen Wrench (F) and Hex Wrench (G) provided.

STEP 3
Screw in Finials (H) to the top of the Headboard (I) Panel.

* Bed Frame Not Included As Shown here.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.