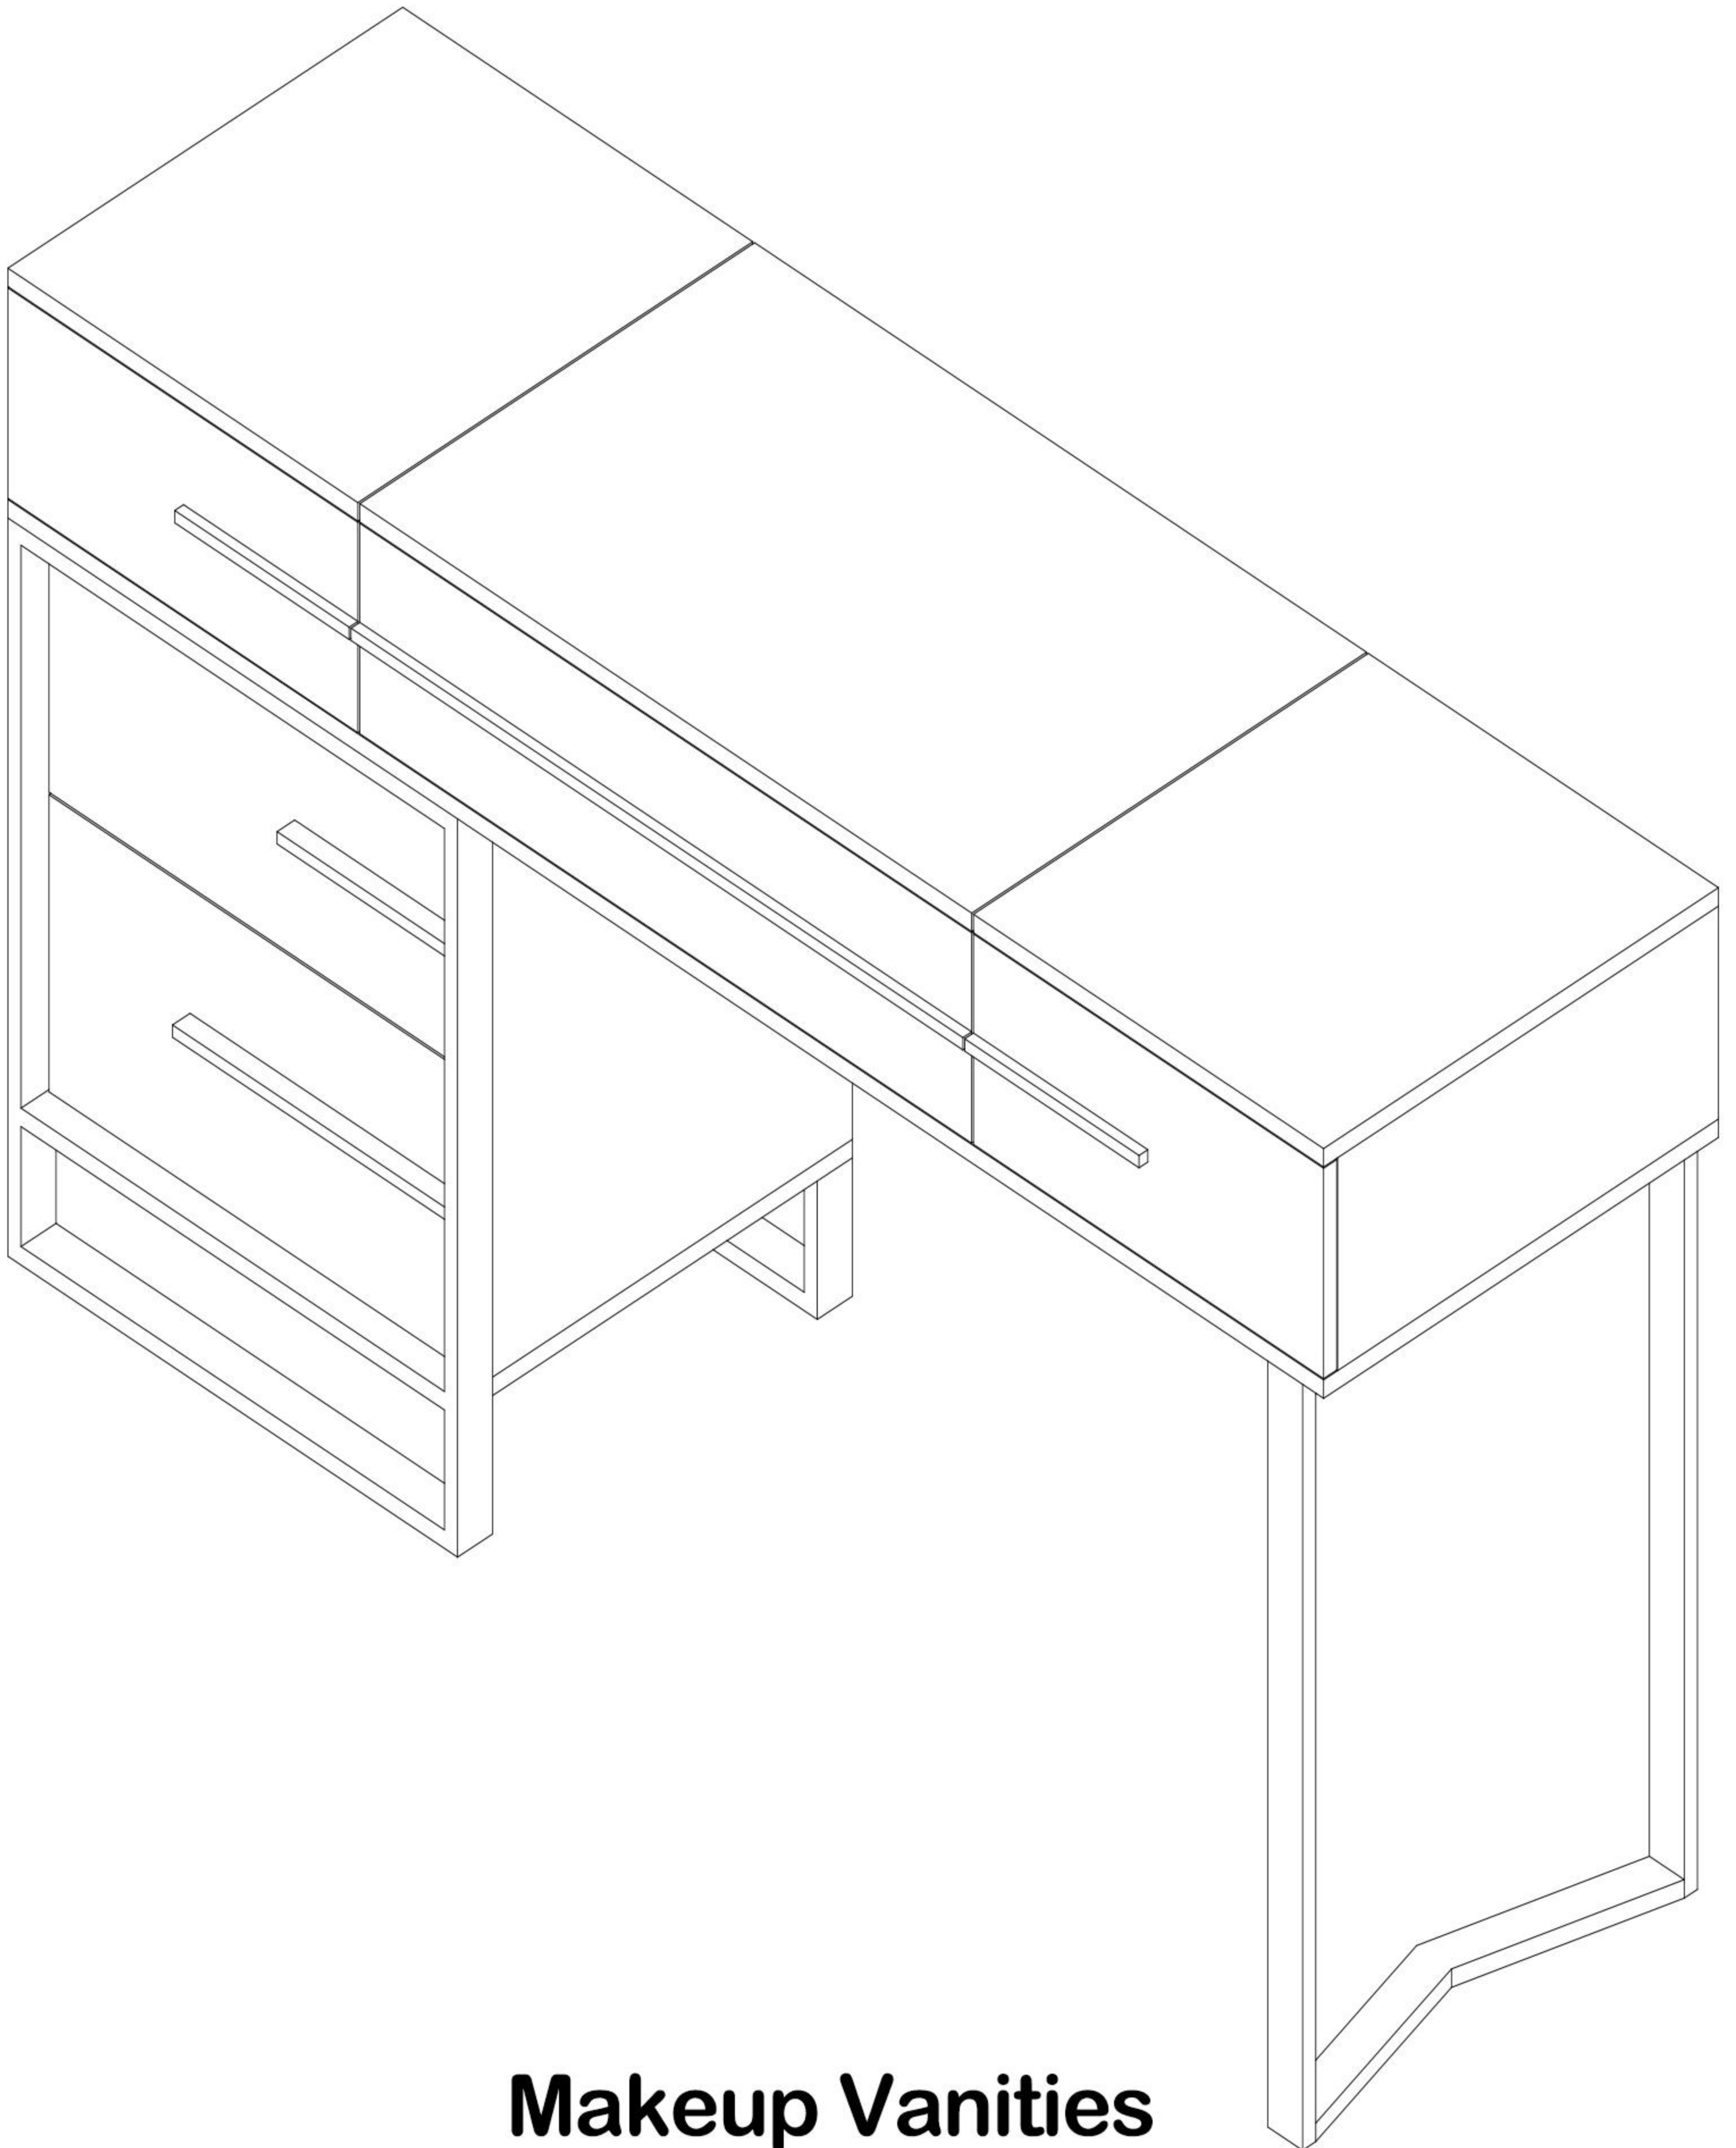


# ASSEMBLY INSTRUCTIONS


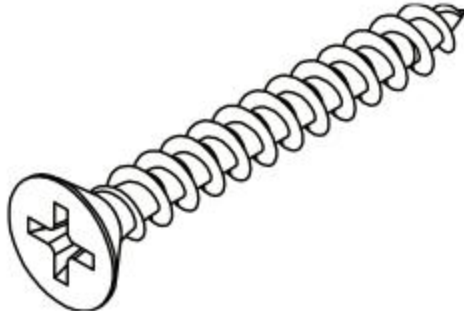
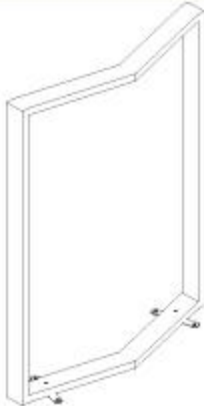

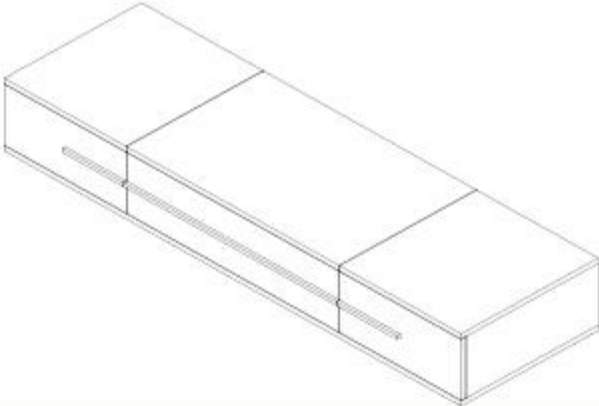
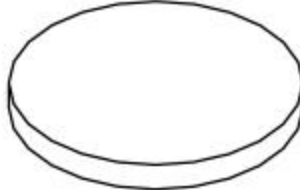


**Makeup Vanities**

# ASSEMBLY INSTRUCTIONS

**Notice:**


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

| Item no. | Reference Image   | Qty       | Item no. | Reference Image   | Qty       |
|----------|---|-----------|----------|---|-----------|
| <b>A</b> |   | <b>x1</b> | <b>1</b> |   | <b>x2</b> |
| <b>B</b> |  | <b>x1</b> | <b>2</b> |  | <b>x4</b> |
| <b>C</b> |  | <b>x1</b> | <b>3</b> |  | <b>x4</b> |

|   |  |   |
|---|--|---|
|  <p>Recommended installers : 2</p> |  <p>Put a carpet on the floor before unpacking</p> |  <p>Estimate installation time: 20 minutes</p> |
|---|--|---|

**Notice:**

Compatible Tools: Screwdriver or Electric Drill Screwdriver (Not Include)

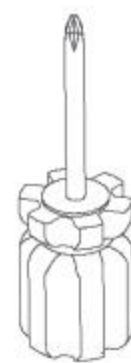


# ASSEMBLY INSTRUCTIONS


**1**




ⓑ1pc

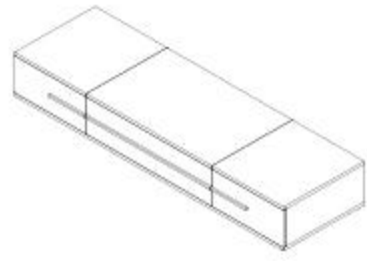


ⓒ1pc

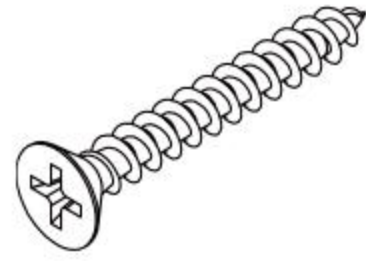


①2pcs

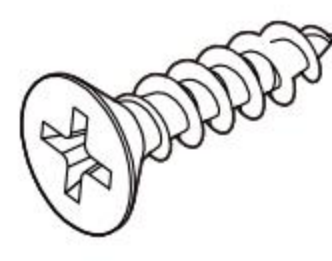

②4pcs

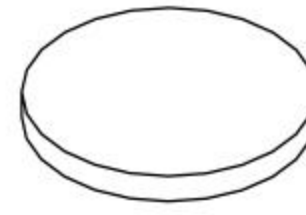


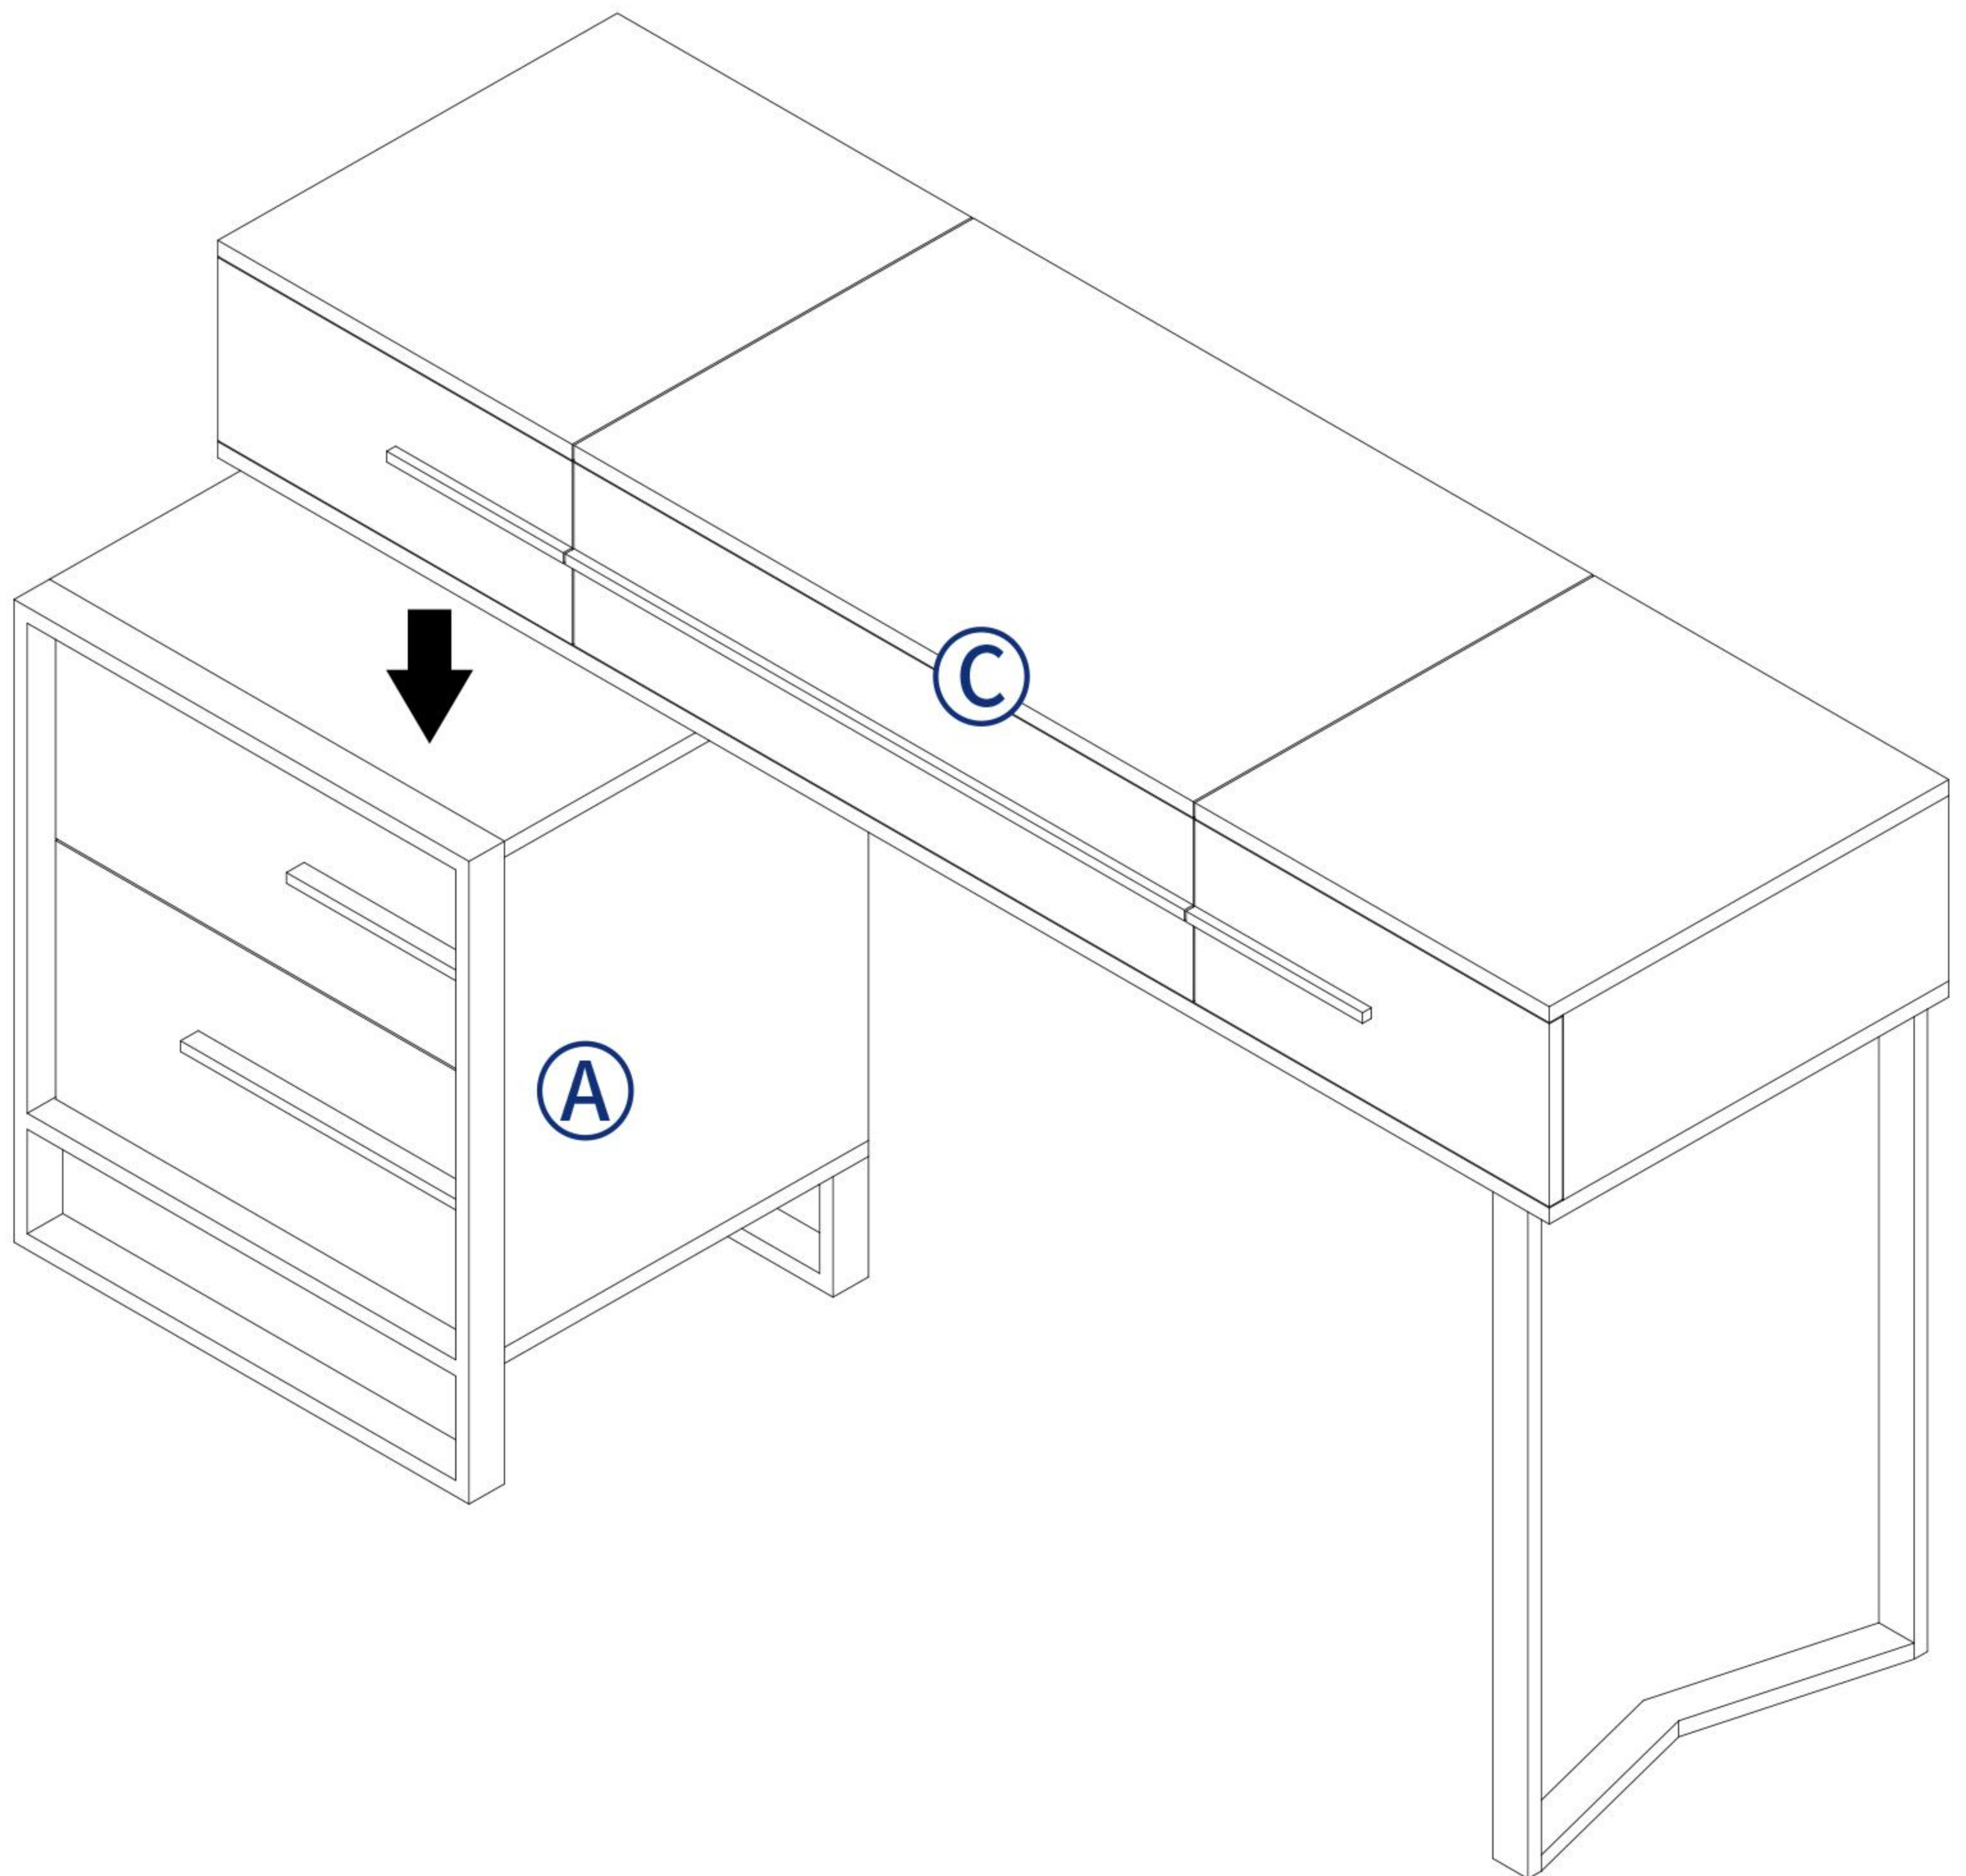
③4pcs

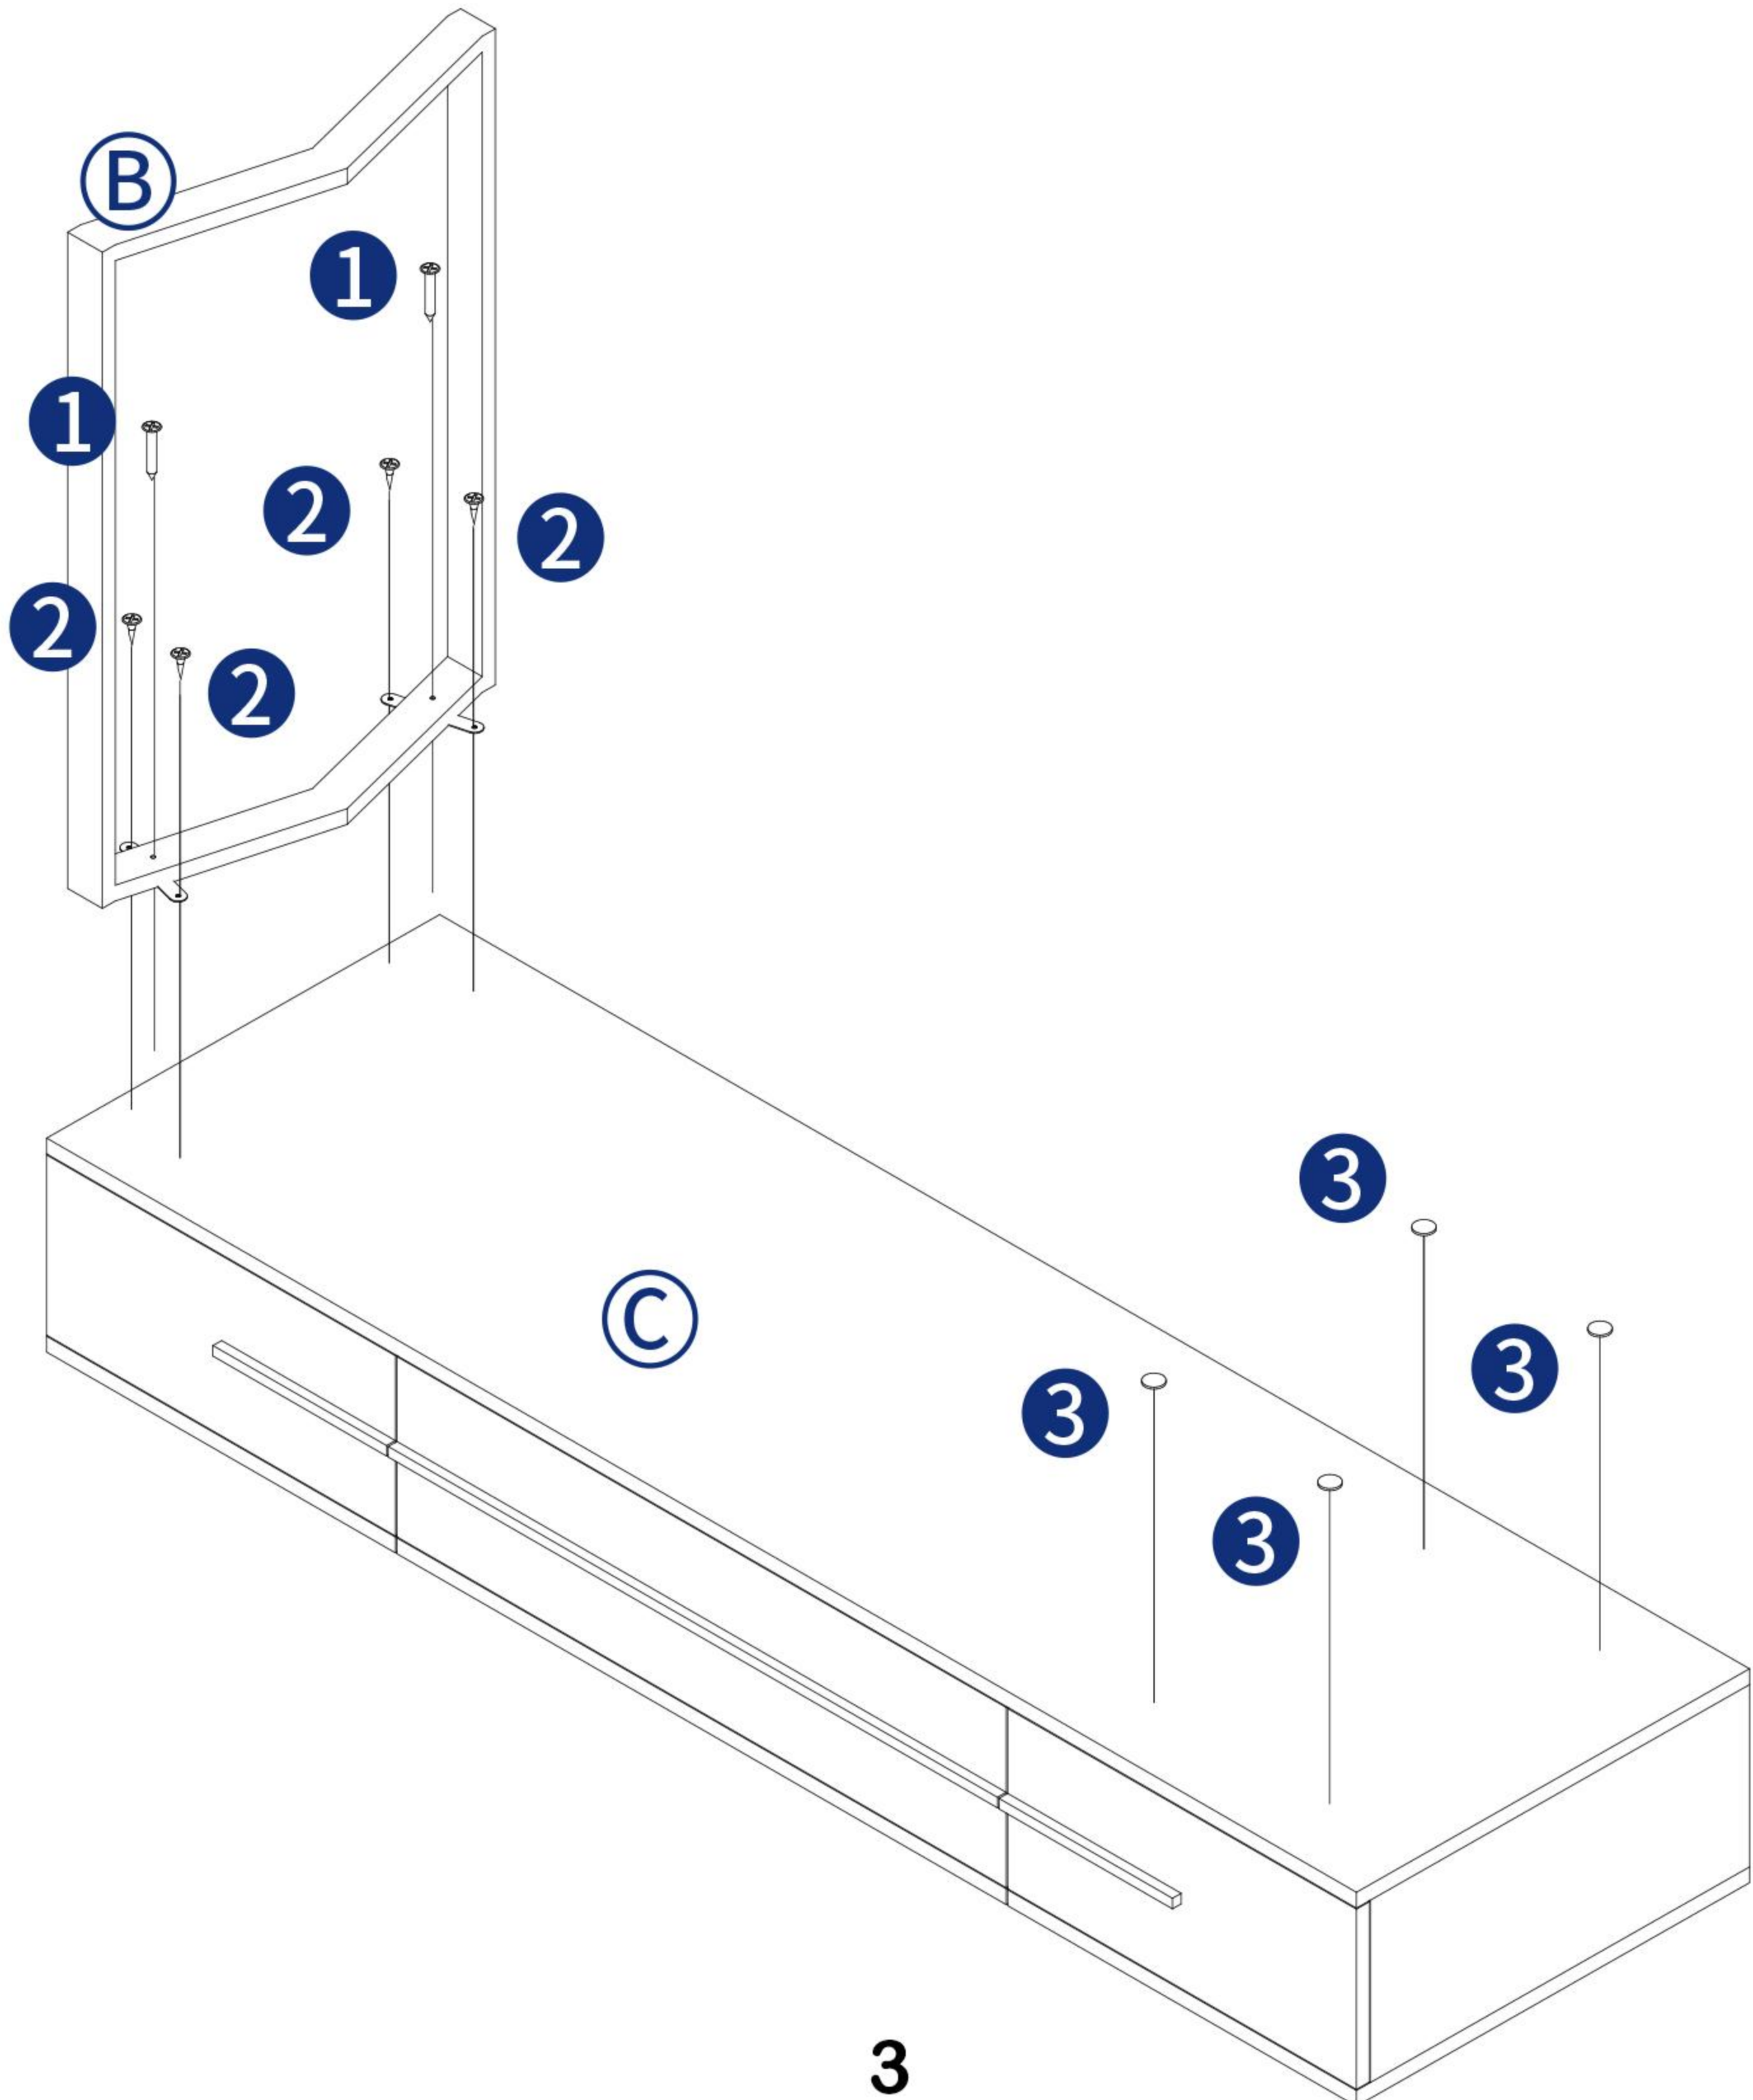


**3**

# ASSEMBLY INSTRUCTIONS

**2**   
©1pc



3

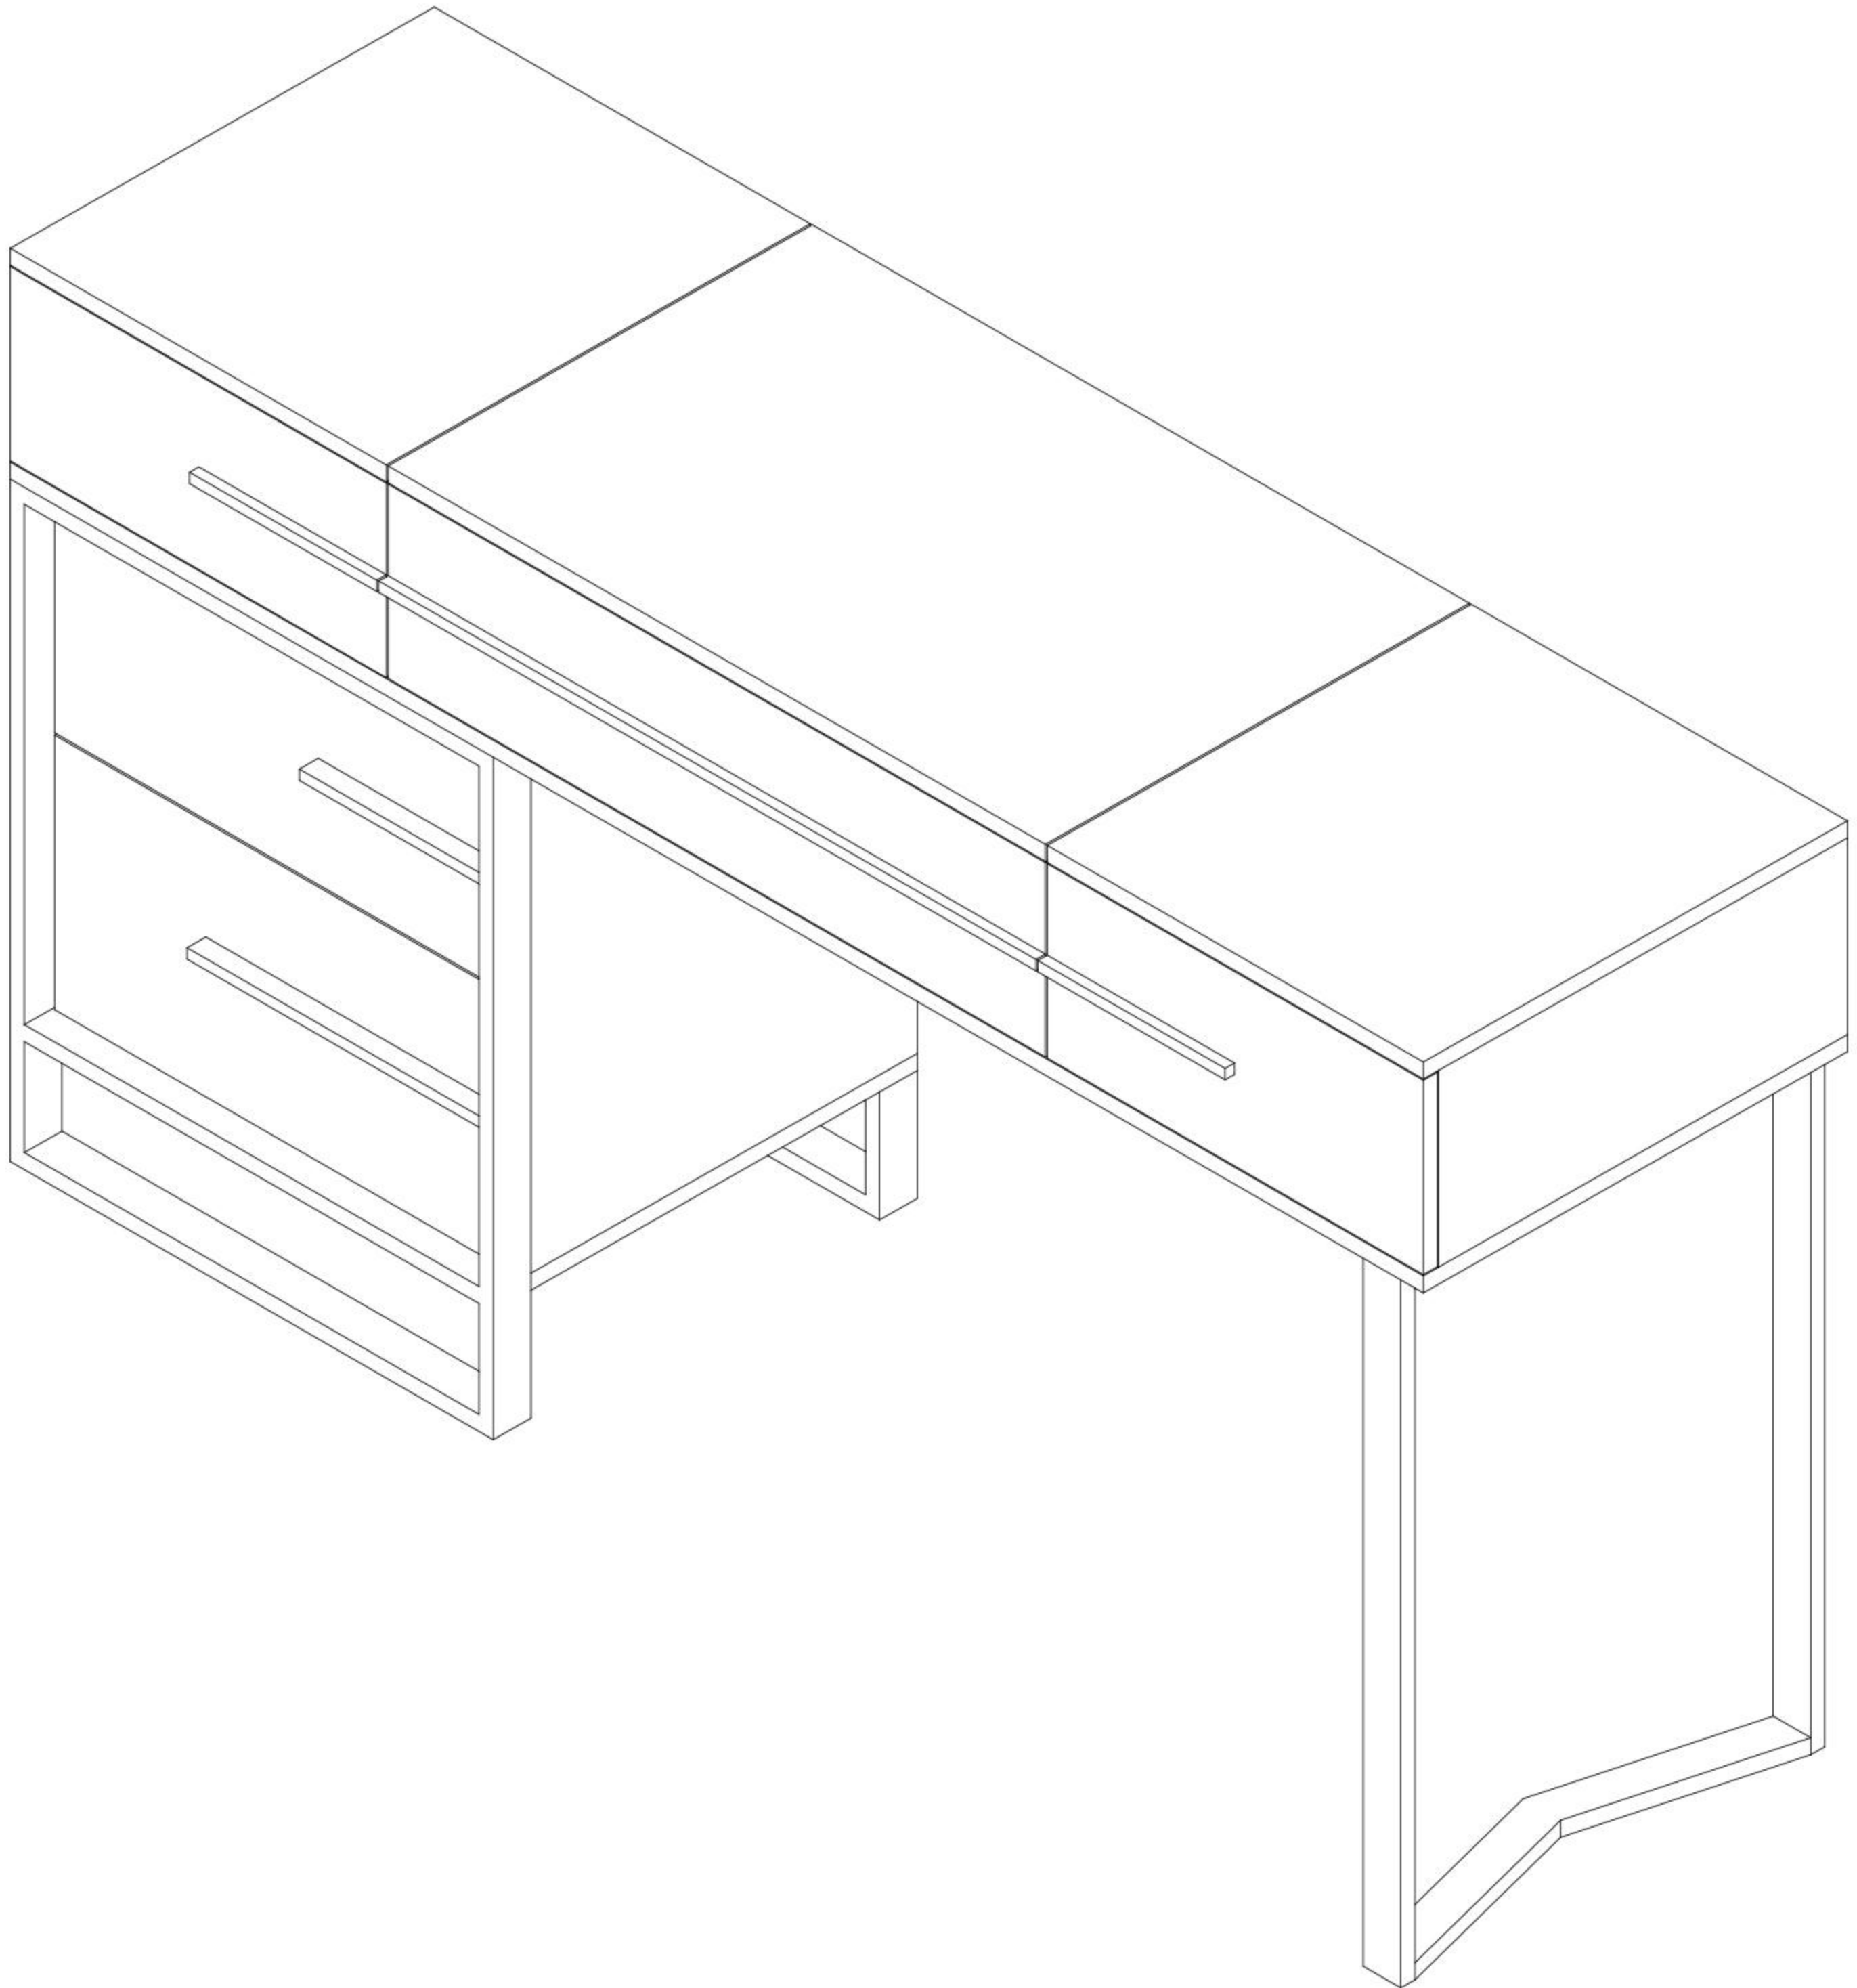

5

Installation Completed